


ASSEMBLY INSTRUCTION

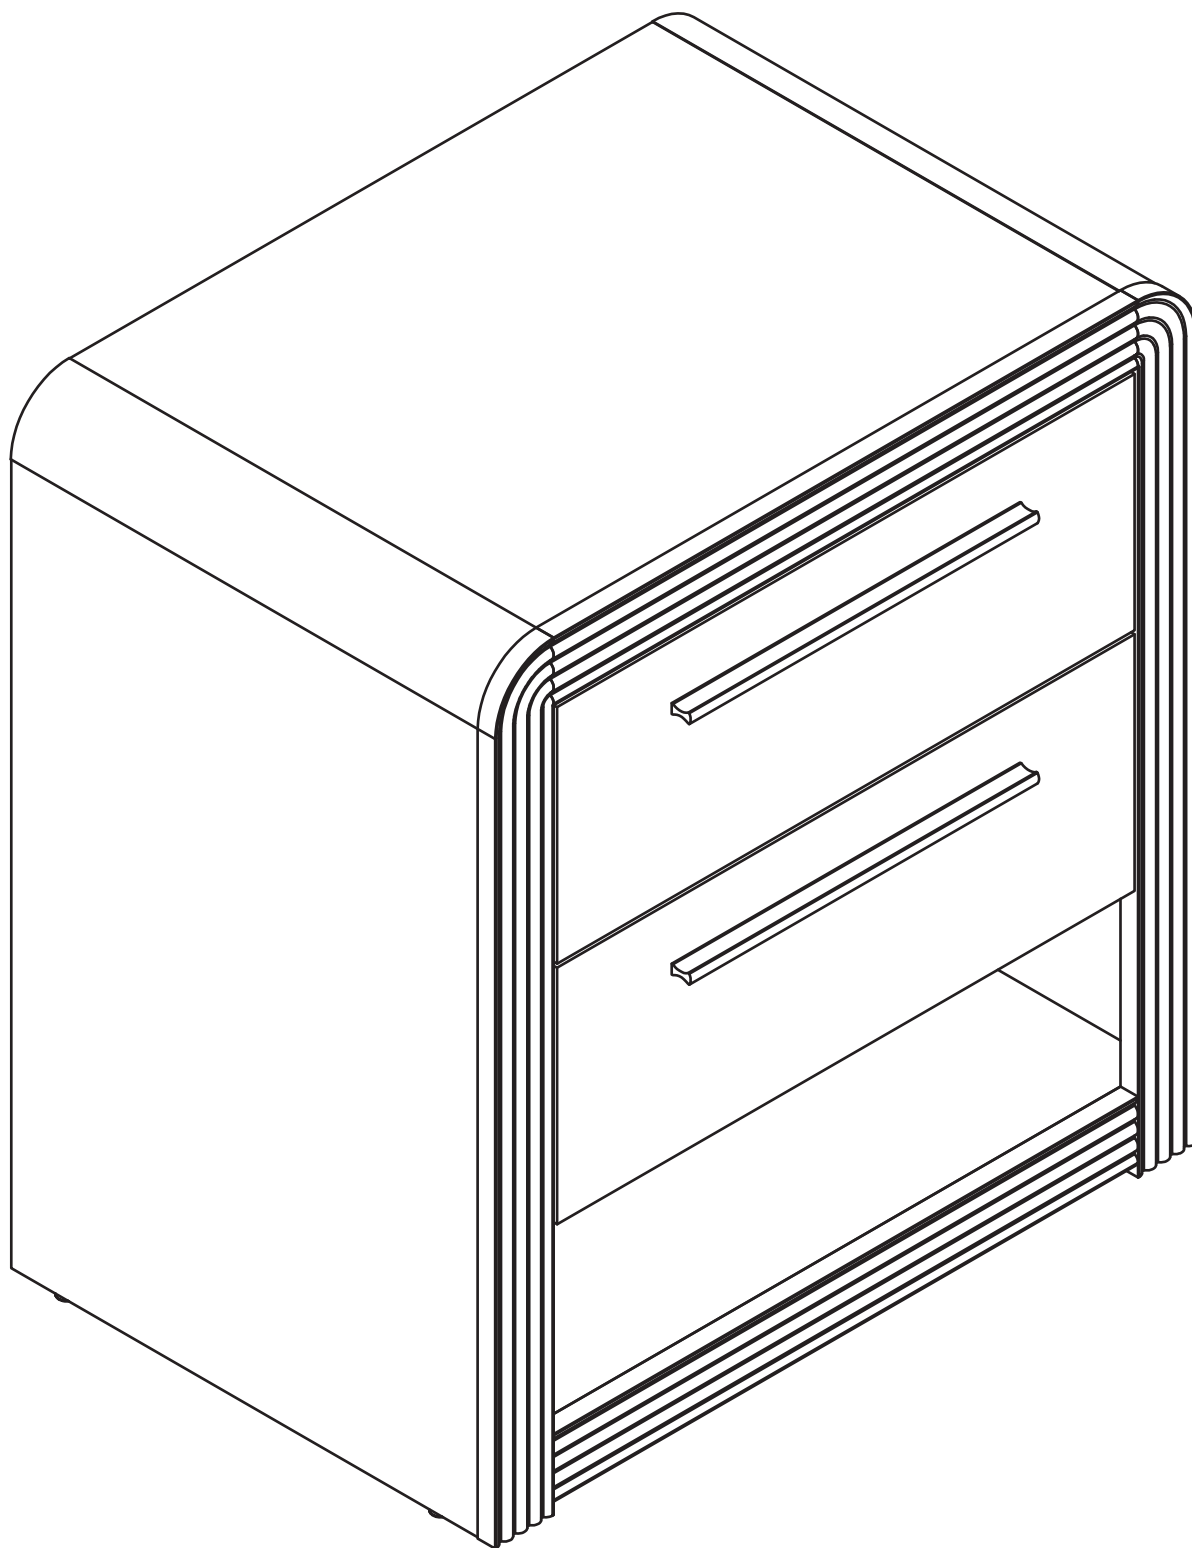

INTRODUCTION

Thank you for choosing our product. To ensure a smooth and successful installation, please read this manual carefully before you begin. Keep it in a safe place for future reference.

Should you have any questions or require assistance during setup, our customer support team is here to help. Please reach out to us at **cs@wellzone.life**. For faster and more accurate support, we encourage you to include a short video and a brief description of the issue you're encountering—this will allow us to assist you more effectively.

PRECAUTIONS

1. Contents of the Package

The package includes multiple components and accessories, each clearly labeled with a letter or number. Please verify all parts are present before use and keep them out of reach of children to prevent accidents.

2. Installation Surface

To avoid scratching or damaging the product, please assemble it on a clean, soft surface, such as a carpet or piece of cardboard.

3. Stability During Assembly

To avoid instability or damage, it is recommended to assemble the product in its final location, and do not move it until assembly is fully completed.

4. Tool Usage


We recommend using the tools provided in the package. If you choose to use a power tool, please set it to a low power and torque setting to avoid damage.

IMPORTANT:

Please follow the installation steps in the order shown in this manual. Improper installation may result in difficulties during assembly or damage to the product and its components.

Need more help?

Our online customer service team is always ready to assist. Feel free to contact us anytime — we're here to help.

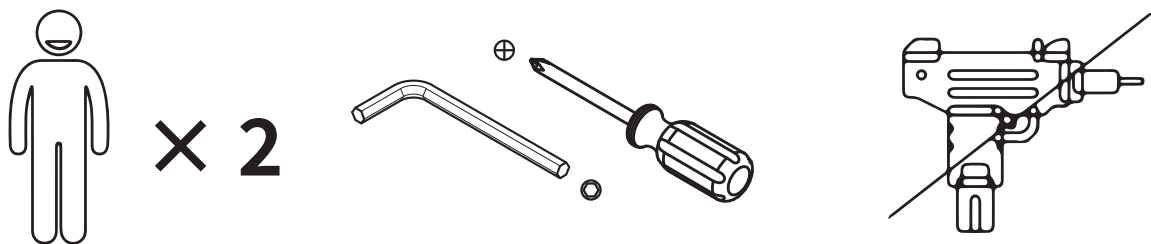

Before You Begin

Two people are recommended for the assembly.
Use the included tools.
If using a power tool, use low power and torque.




Installation of Eccentric Unit




Bolt





Connecting piece

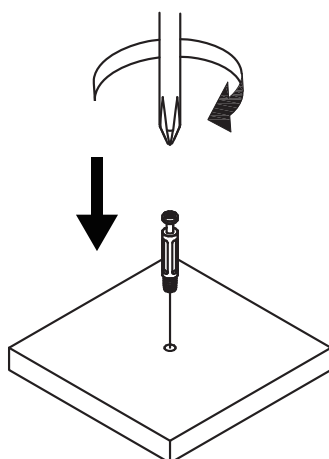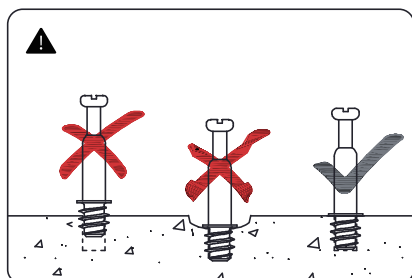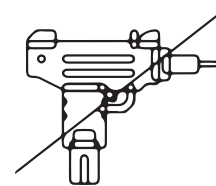


1

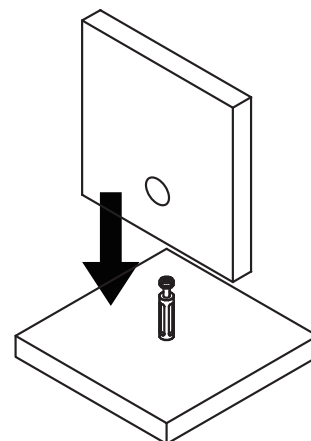

2

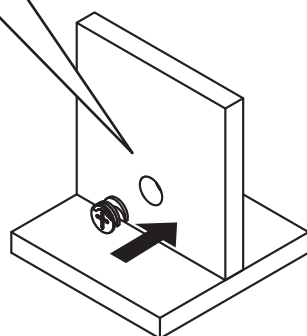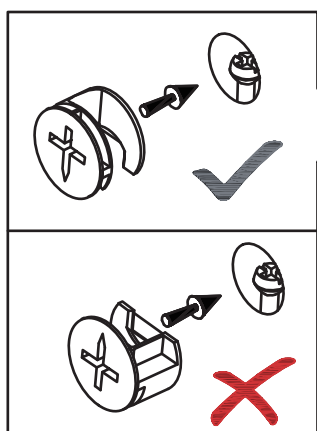


3

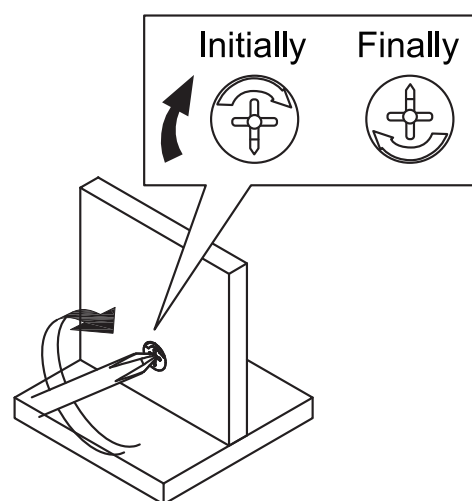


4



NOTE: When inserting the cam lock, ensure the open slot of the cam lock faces the cam screw entry.

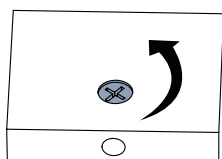


×

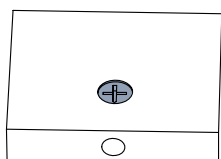


✓

•To tighten, turn the cam lock clockwise until the arrow points away from the connected panel.




•To loosen, turn the cam lock counterclockwise.

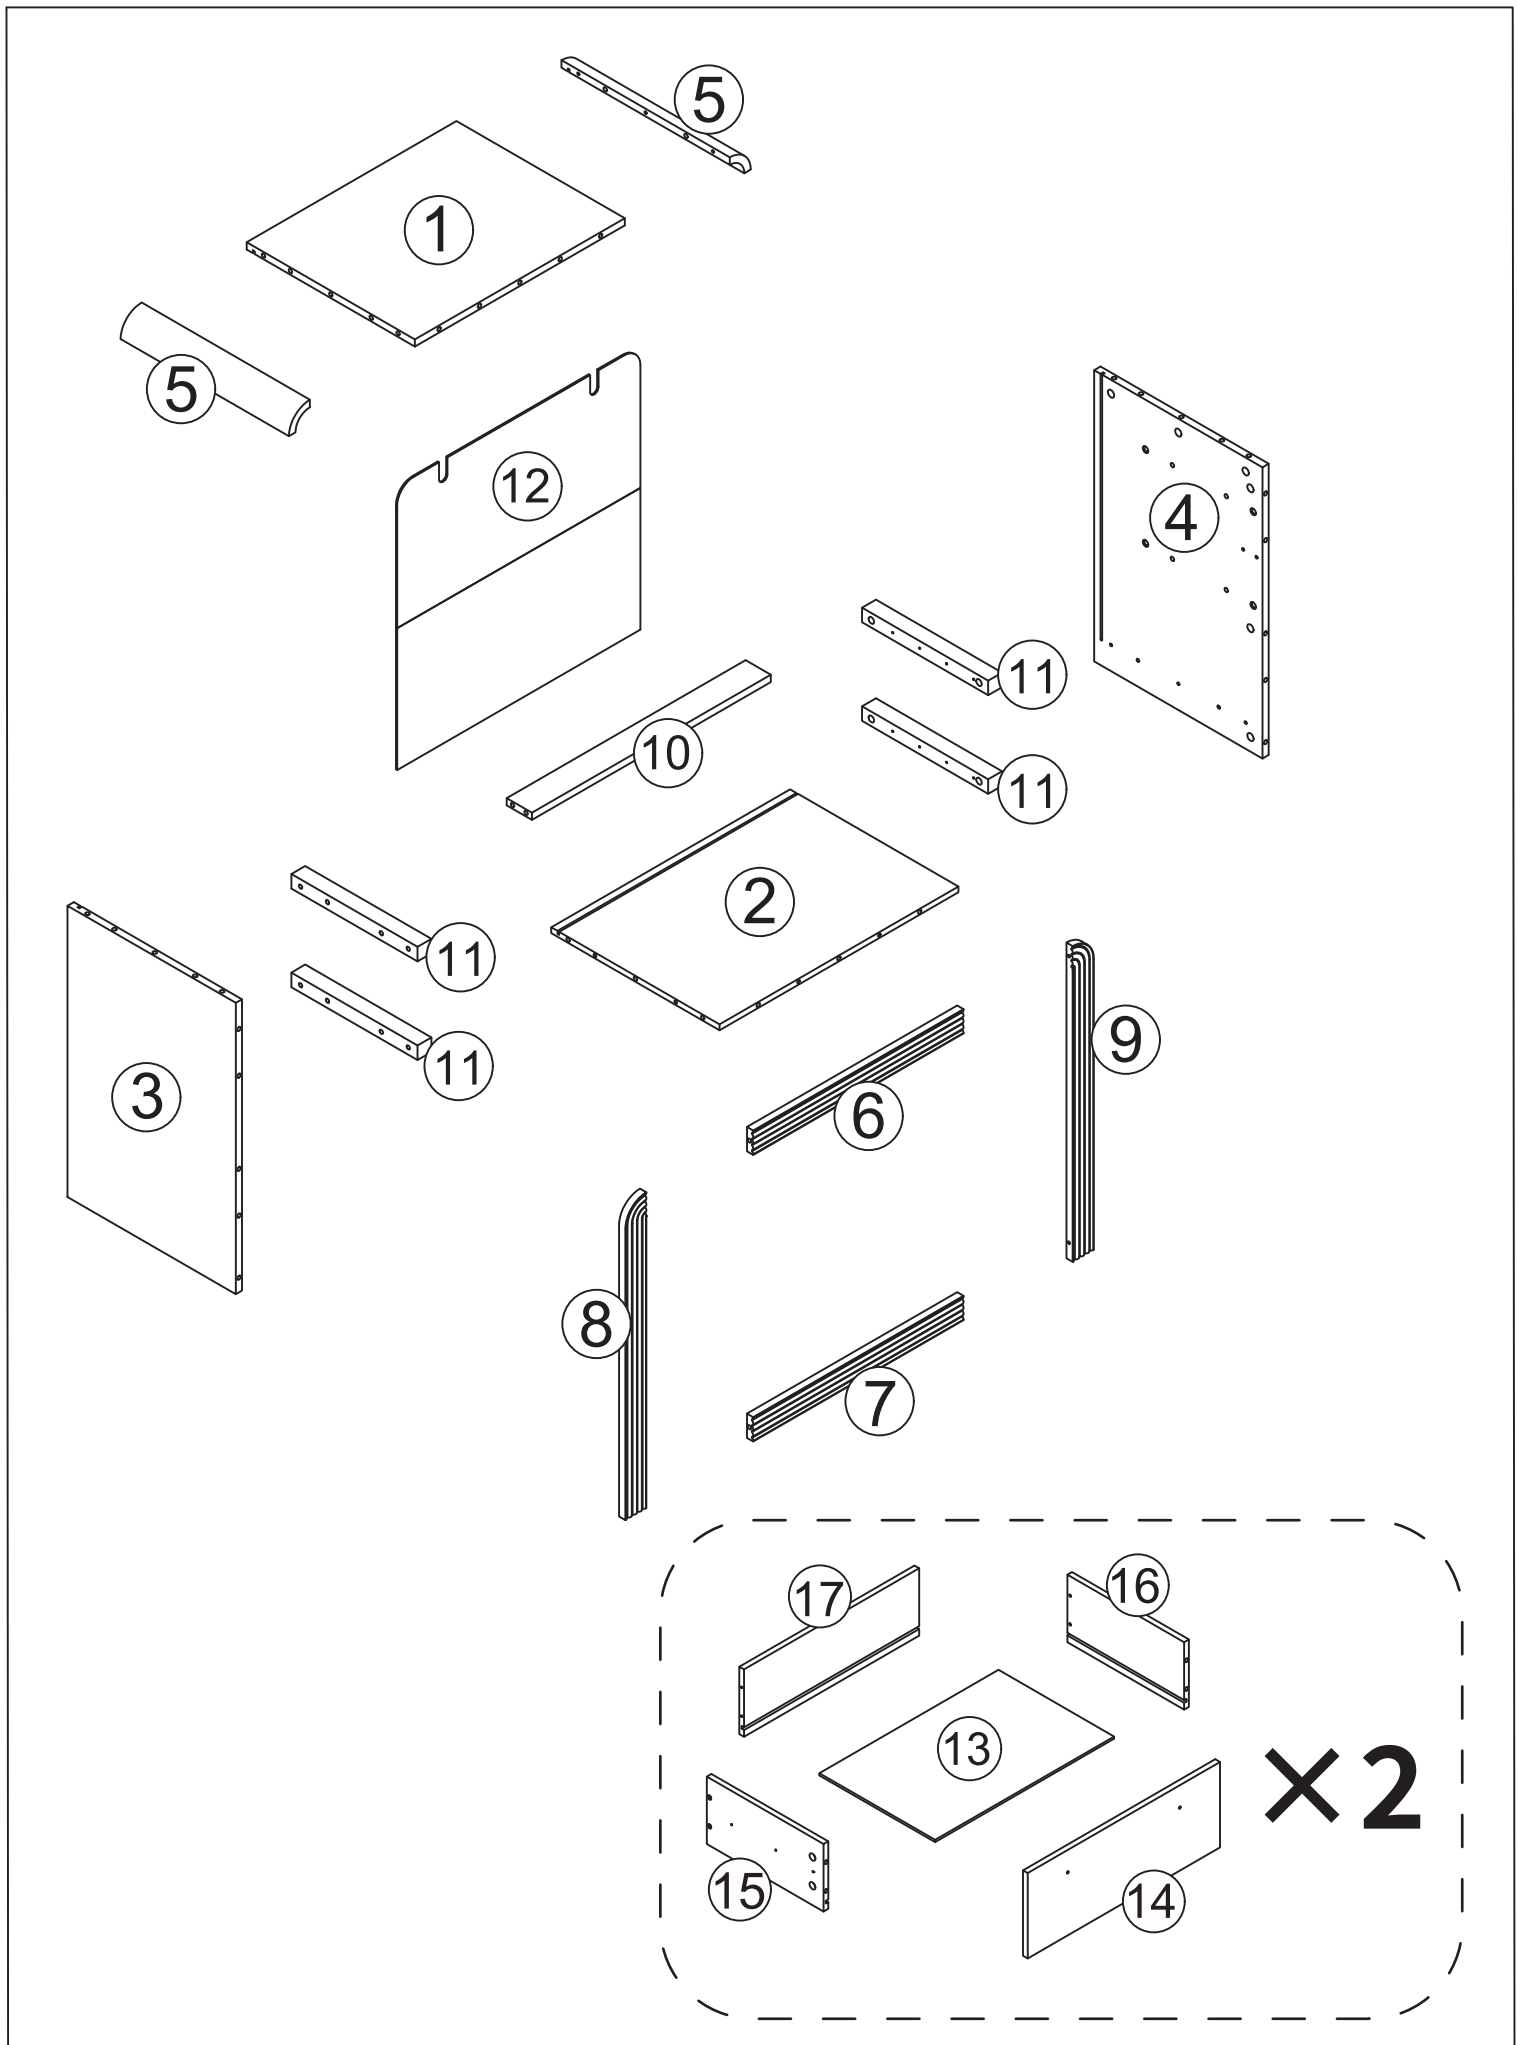

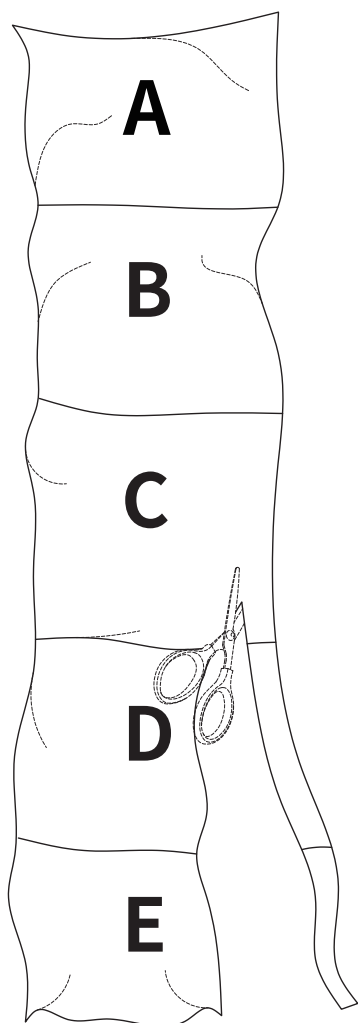


This will keep your hardware organized and make assembly smoother.


Please count and verify all parts before assembly.

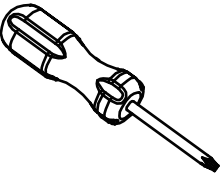AX46+3	BX46+3	CX6 +1	DX22+2	EX28+2	FX8 +1	GX8 +1
 Ø15X9.5mm	 Ø6.5X35mm	 Ø6X30mm	 Ø8X30mm	 M3.5 x12mm	 M4X35mm	 M6X30mm
HX4 +1	IX 2	JX 2	KX 14 +2		L X2	
 M4X16mm	 298X8.5X16mm		K1  M3 x14mm	K2 	L1 	L2  L3  L4 
MX27+3						
 Ø21mm						

1

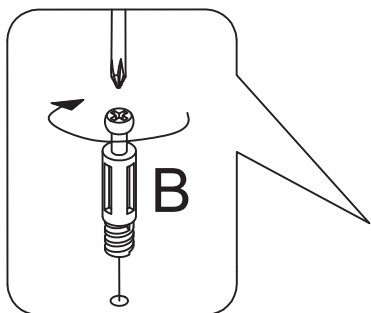

Make sure to screw the bolt in vertically.

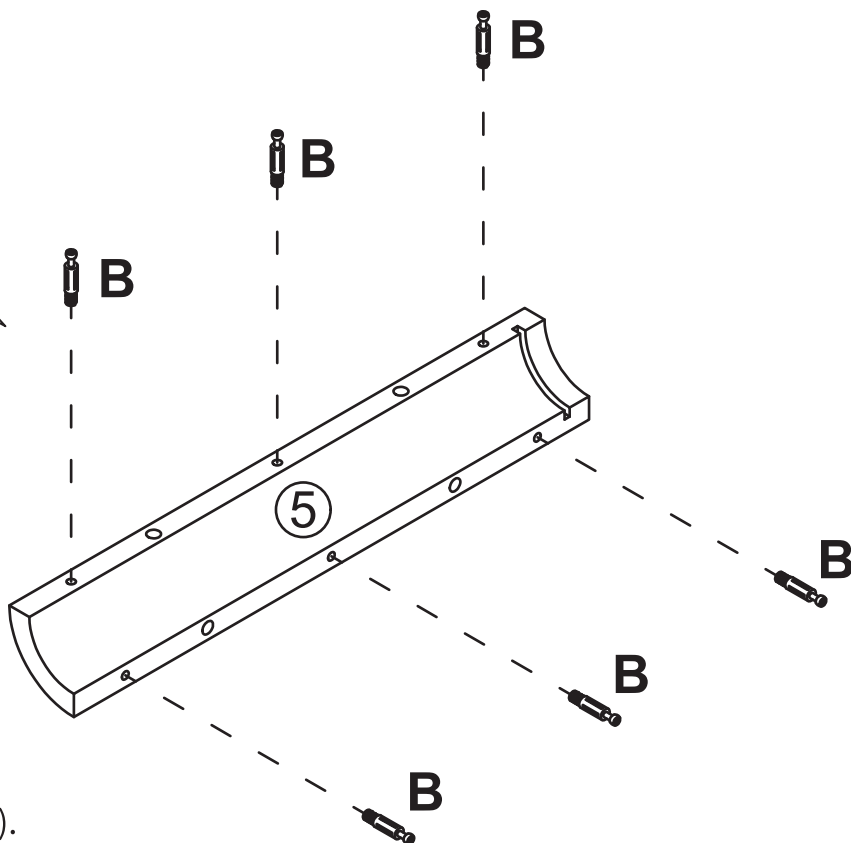


B × 12



Twist (B) into (5).

2

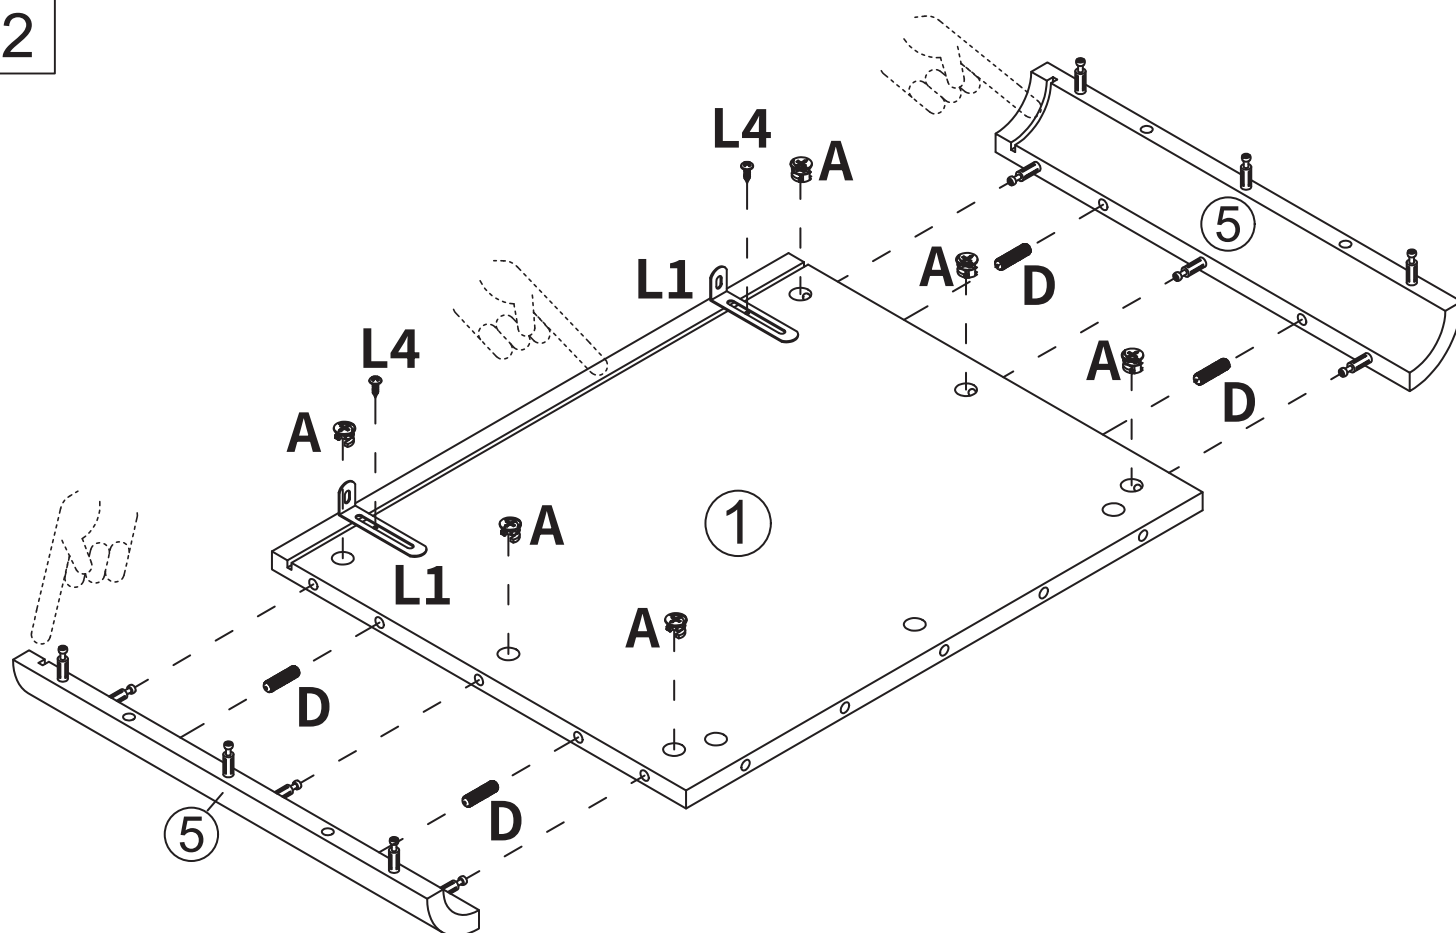


A × 6 D × 4 L × 2



Insert (D) into (1).
Twist (L4) through (L1) into (1).
Connect (5) to (1), then secure with (A).

3

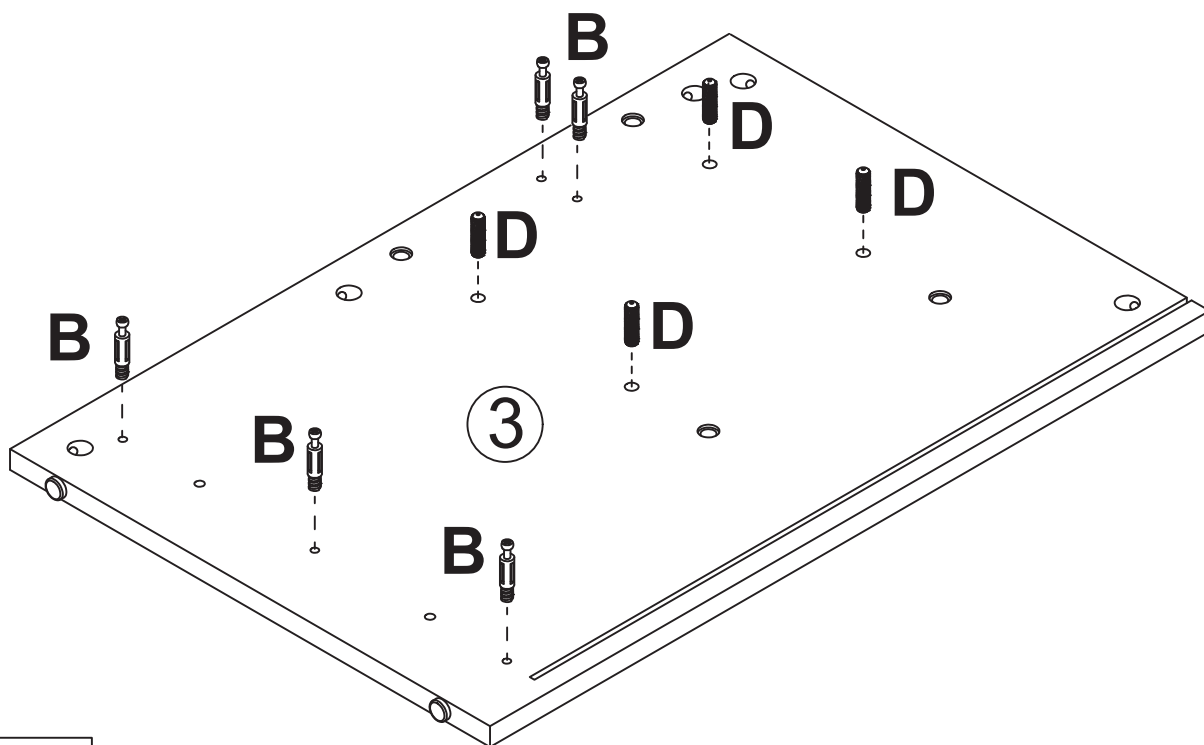


B × 5 D × 4



Ø8X30mm

Twist (B) into (3).
Insert (D) into (3).

4

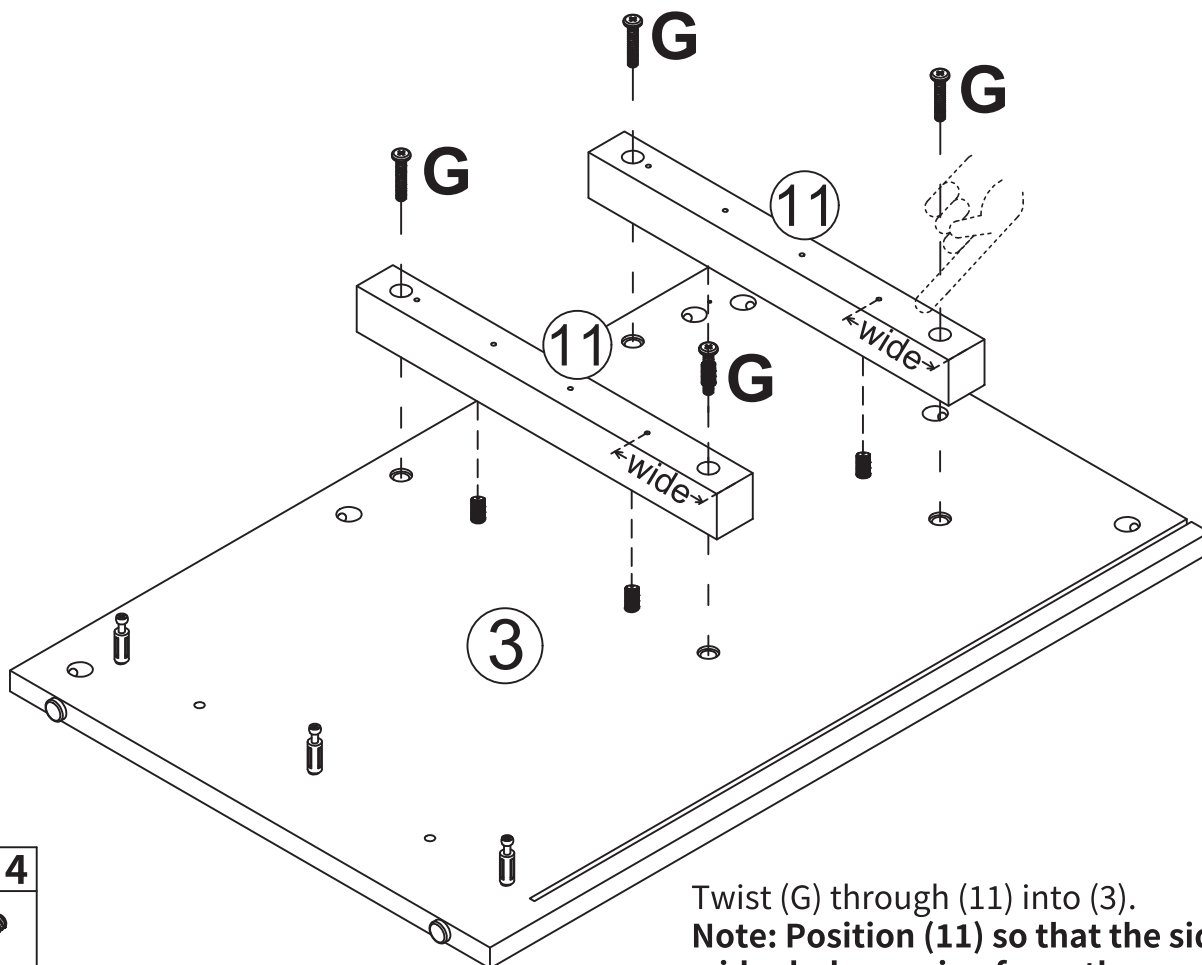


G × 4



M6X30mm

Twist (G) through (11) into (3).
Note: Position (11) so that the side with wider hole spacing faces the groove of (3).

5

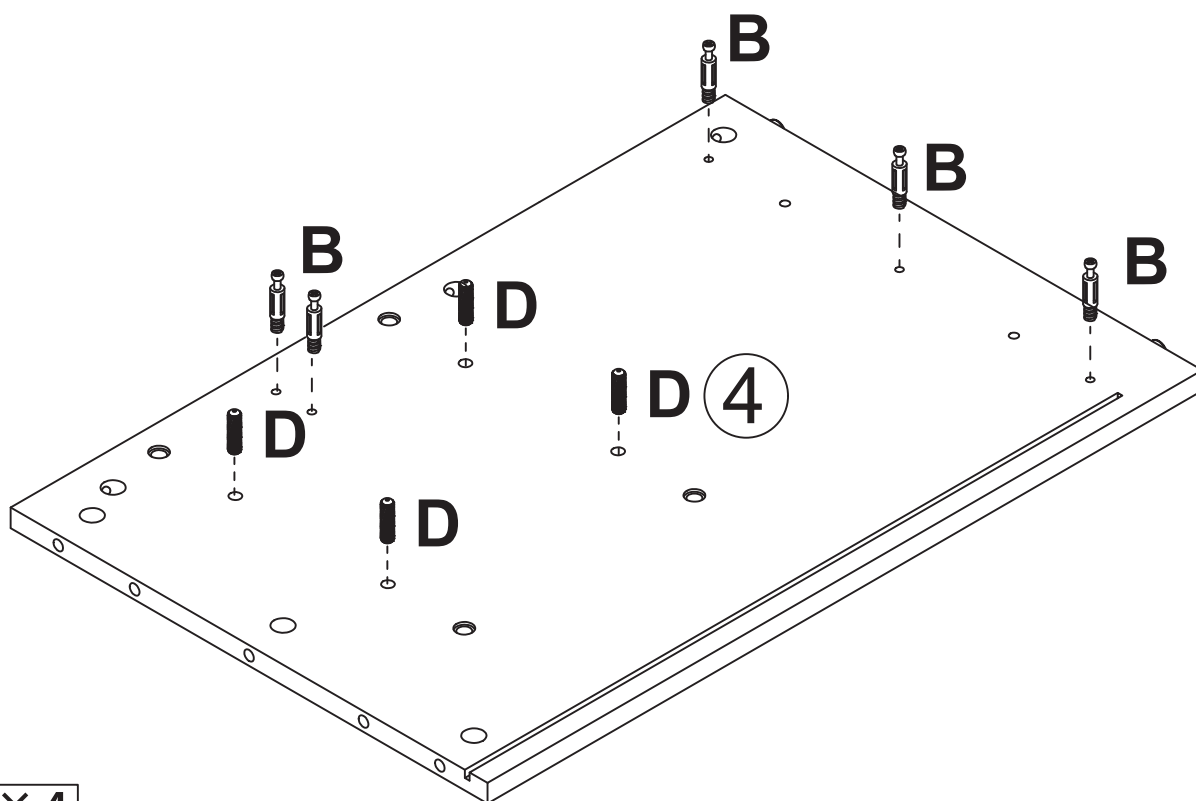


B × 5	D × 4
--------------	--------------



Ø8X30mm

Twist (B) into (4).
Insert (D) into (4).

6

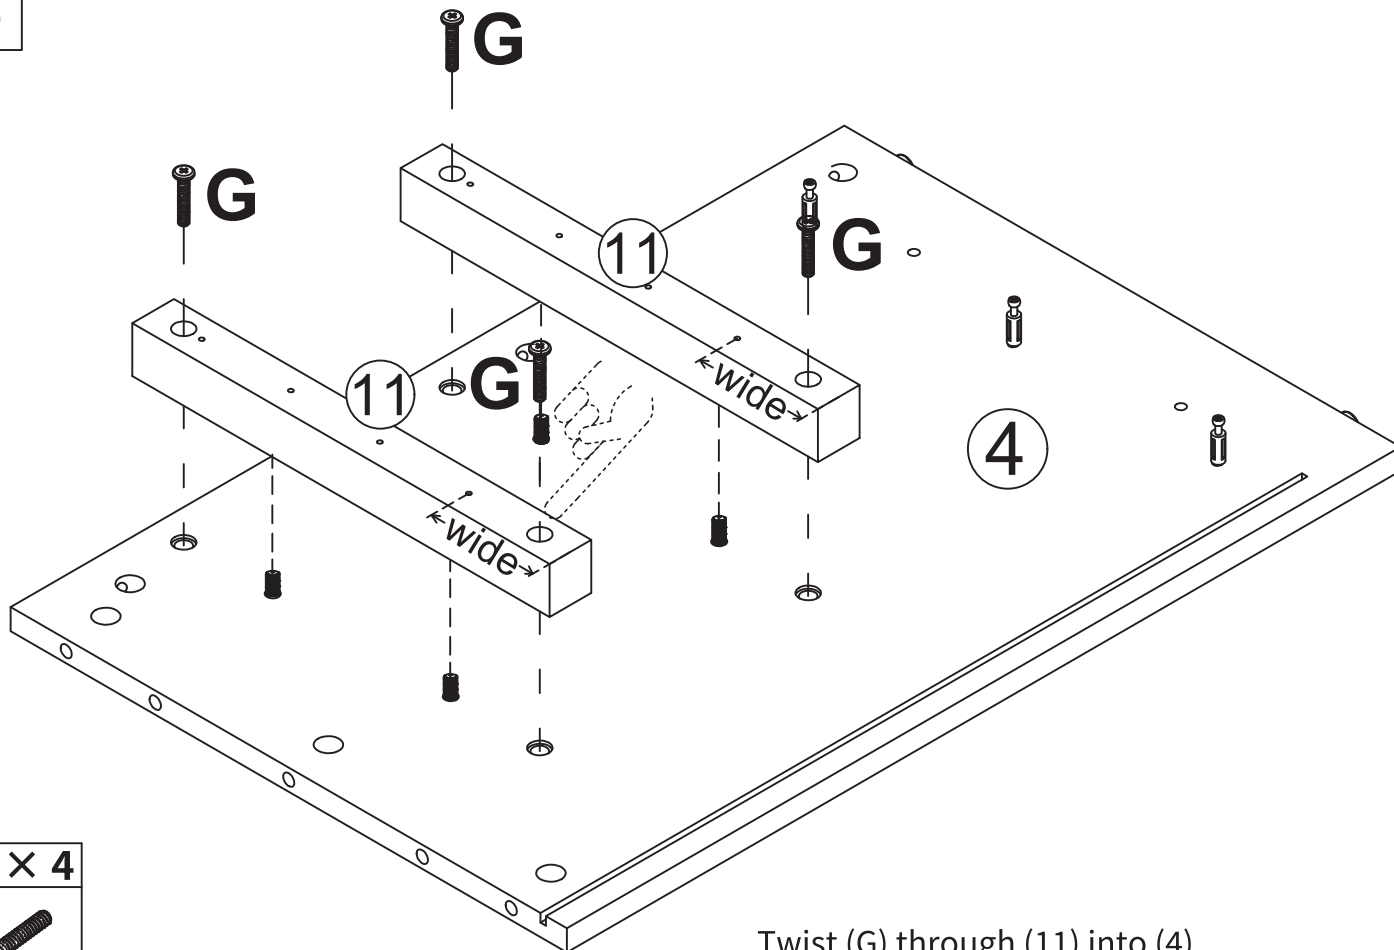


G × 4




M6X30mm

Twist (G) through (11) into (4).

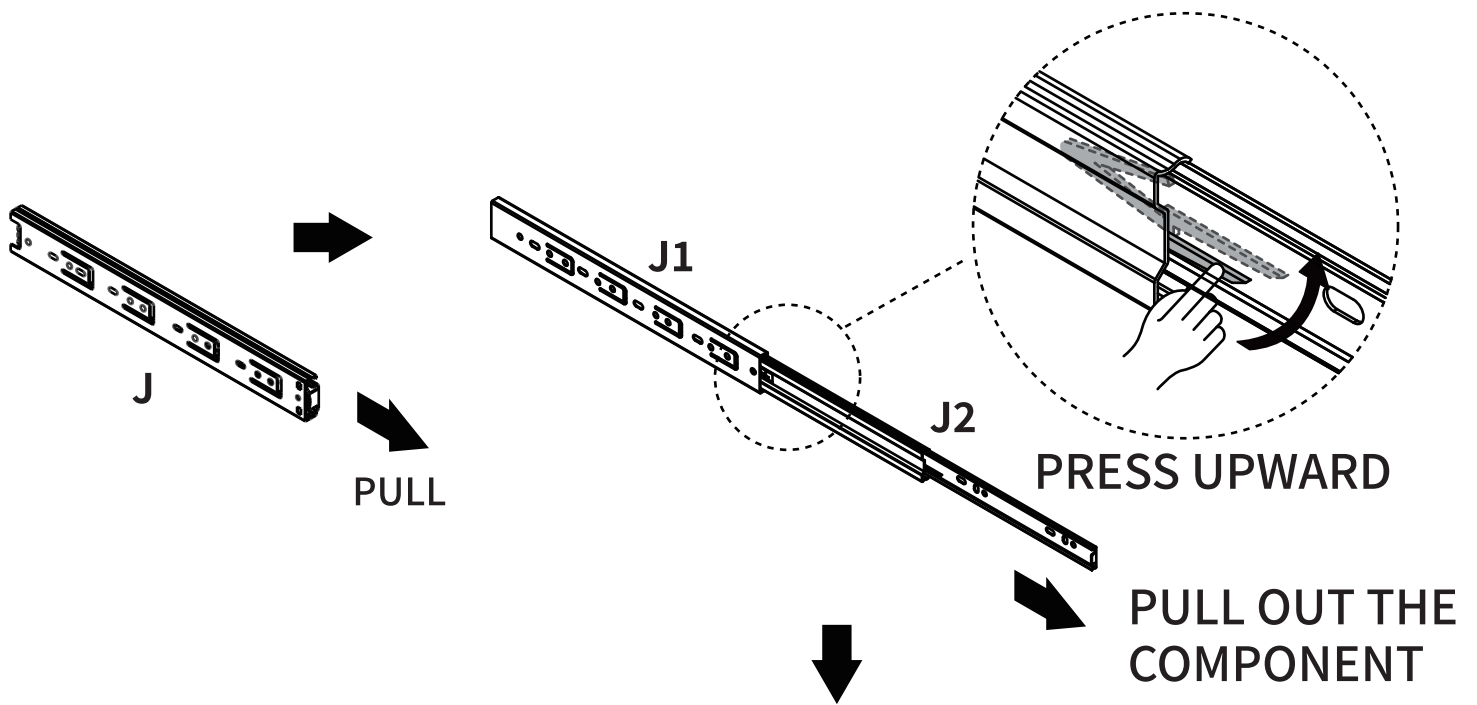


J1 X4	
J2 X4	

J x 2

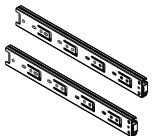


Separate (J) into (J1) and (J2).


8

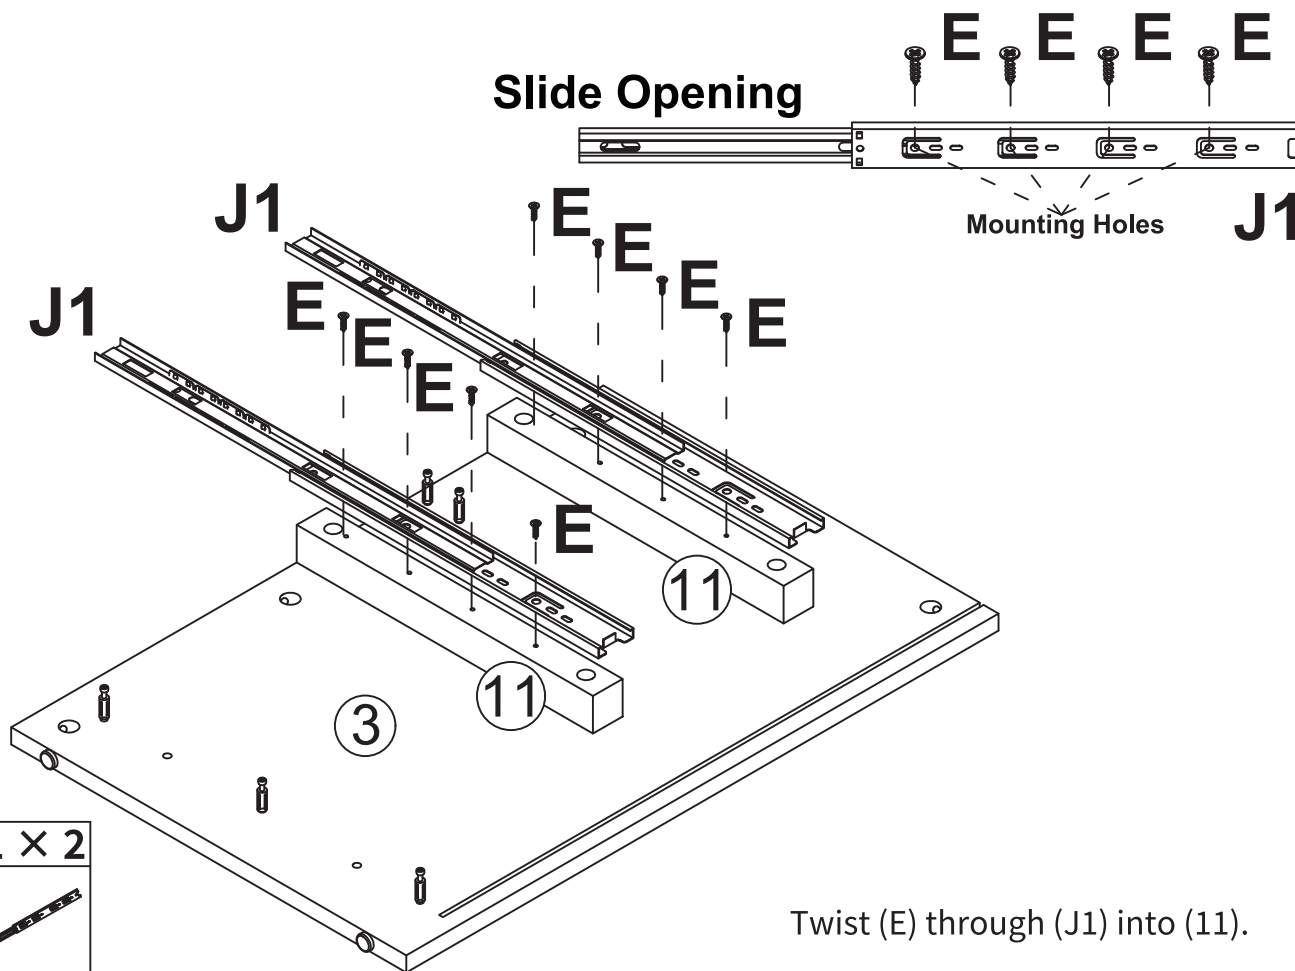

9

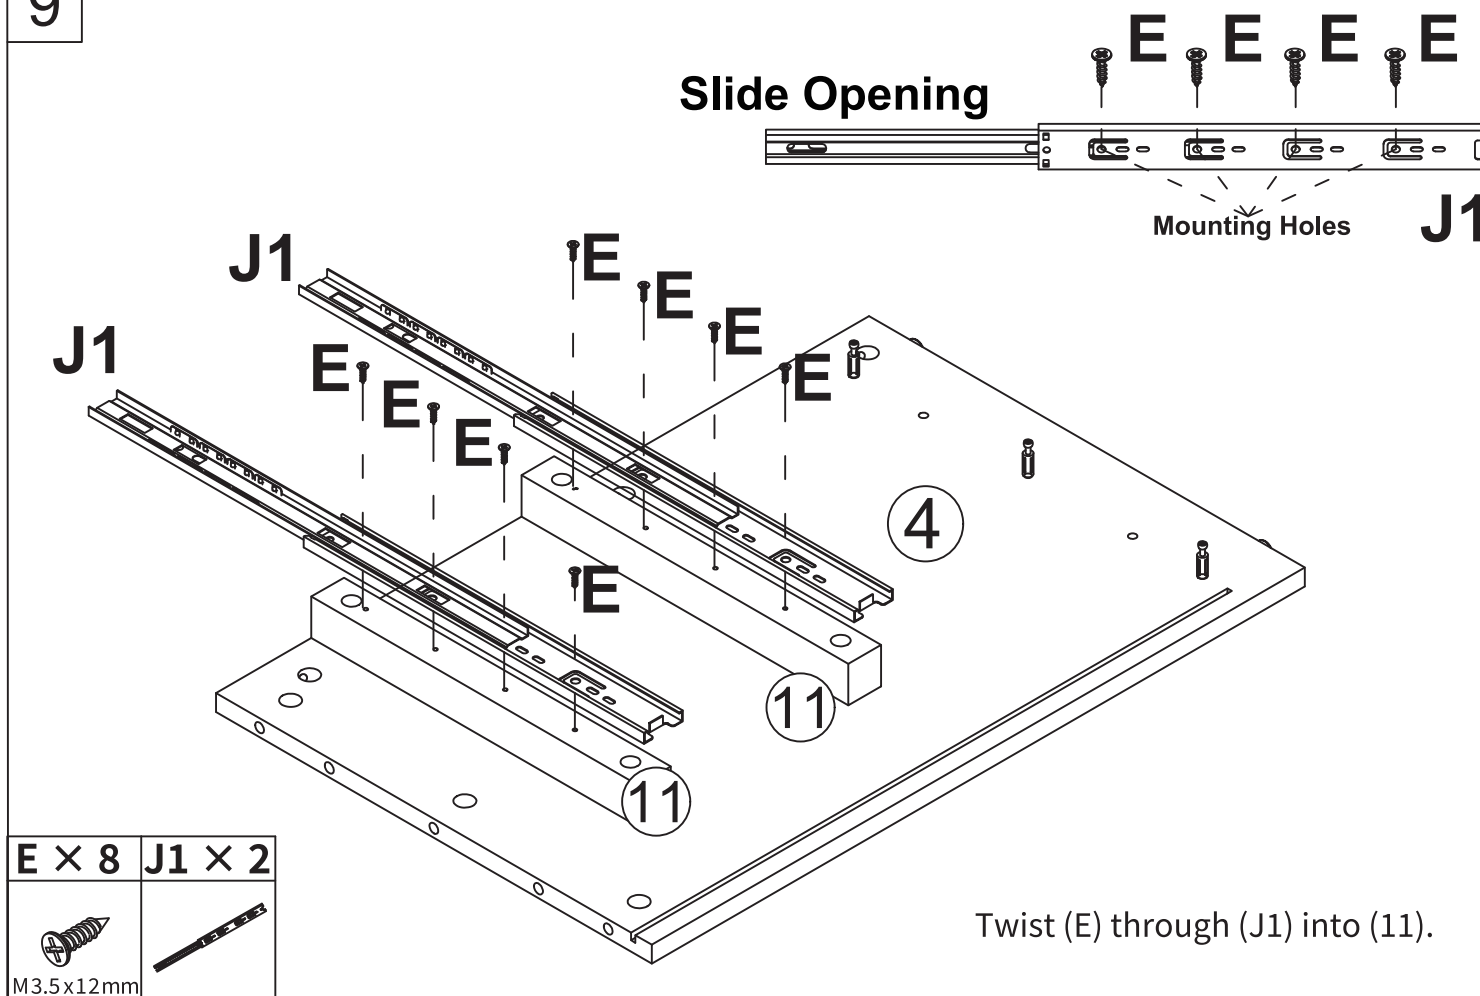

10

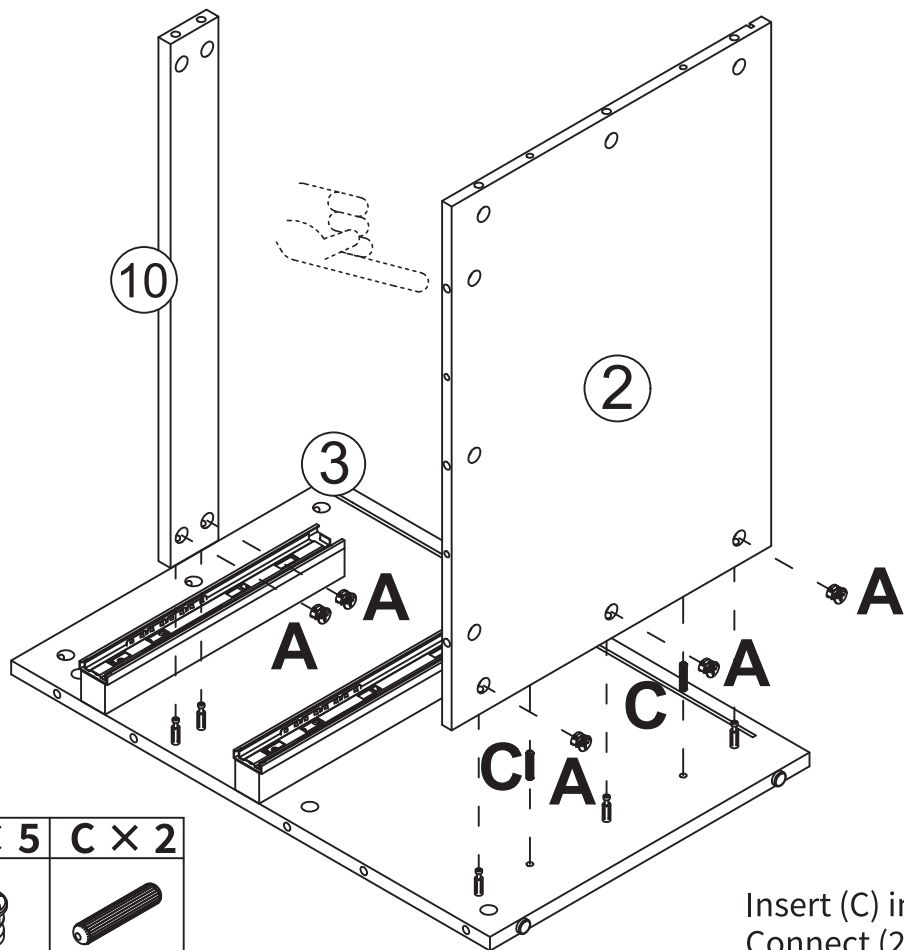


A × 5 C × 2



Ø6X30mm

Insert (C) into (3).
Connect (2) (10) to (3), then secure with (A).

11

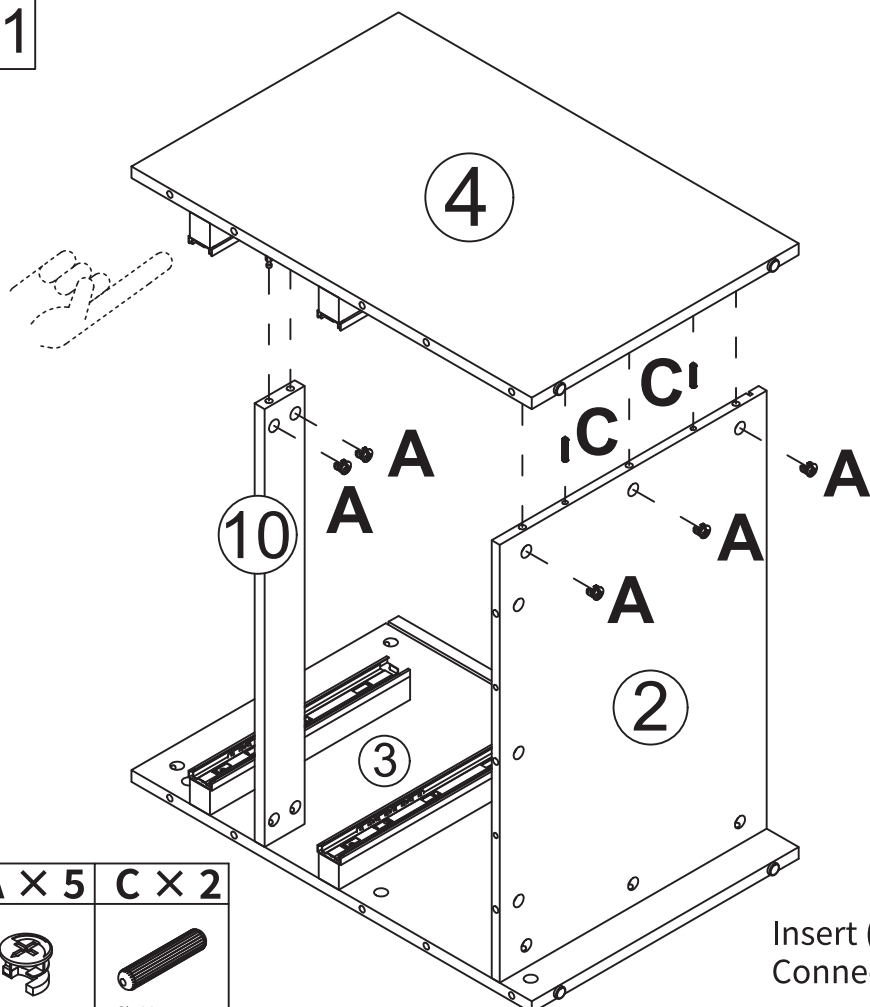

A × 5 C × 2




Ø6X30mm

Insert (C) into (2).
Connect (4) to (2) (10), then secure with (A).

This diagram shows the upper section of the cabinet assembly in an exploded perspective view. It includes the top panel (12), which is being lowered into place as indicated by a downward arrow. The side panel (3) is shown on the left, and the back panel (2) is at the bottom. The top rail assembly (4) is shown on the right, with three drawers being inserted into it. The drawers are shown in an exploded view, indicating they are to be placed into the rail system.

Insert (12) into the grooves of (2) (3) (4).






There is a groove
on the back

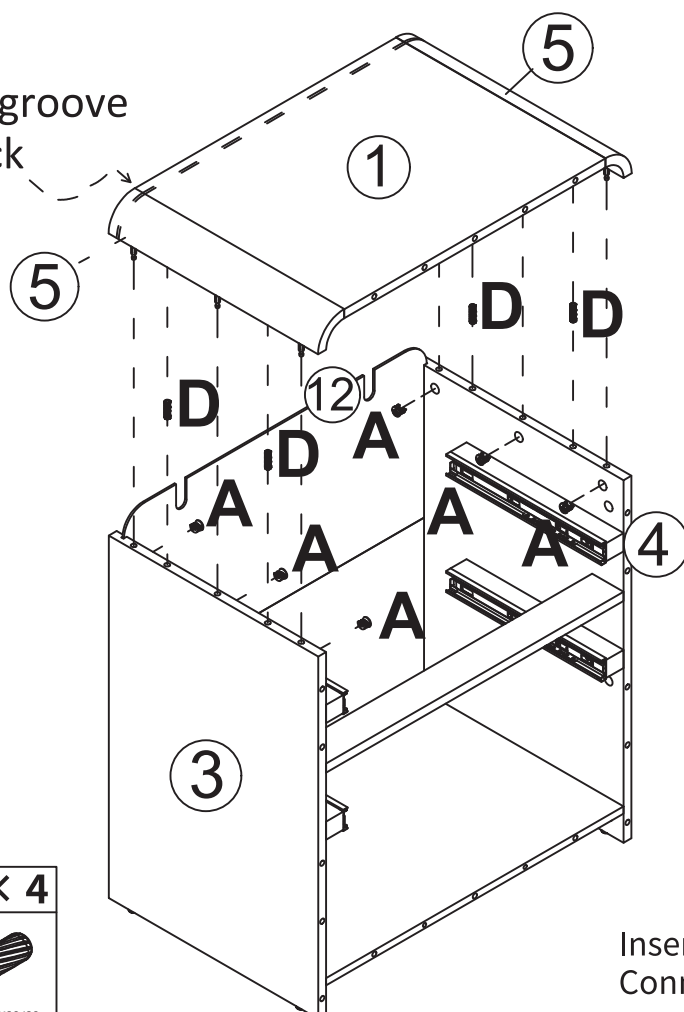

Insert (D) into (3) (4).
Connect (5) to (3) (4), then secure with (A).


A × 6	D × 4
--------------	--------------



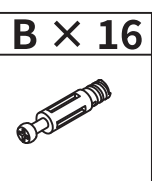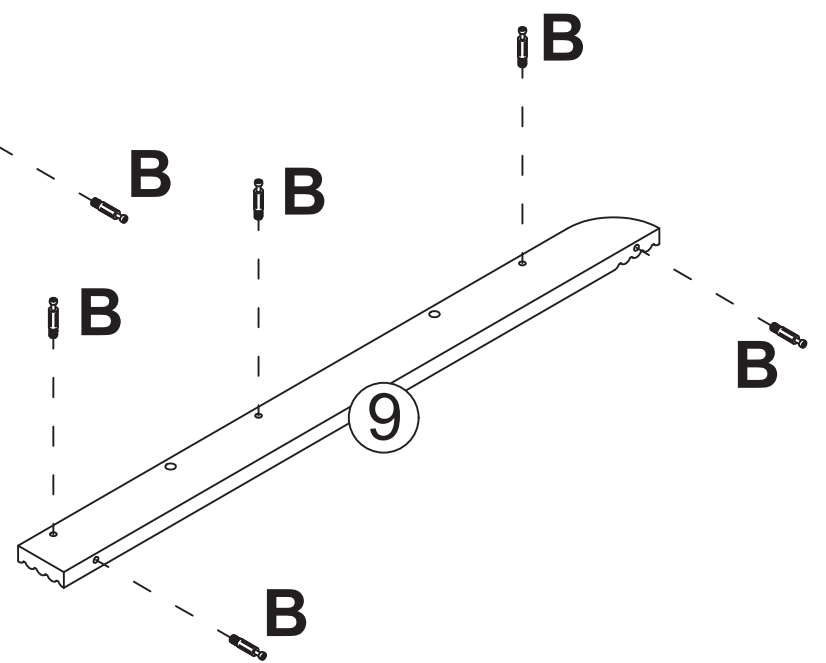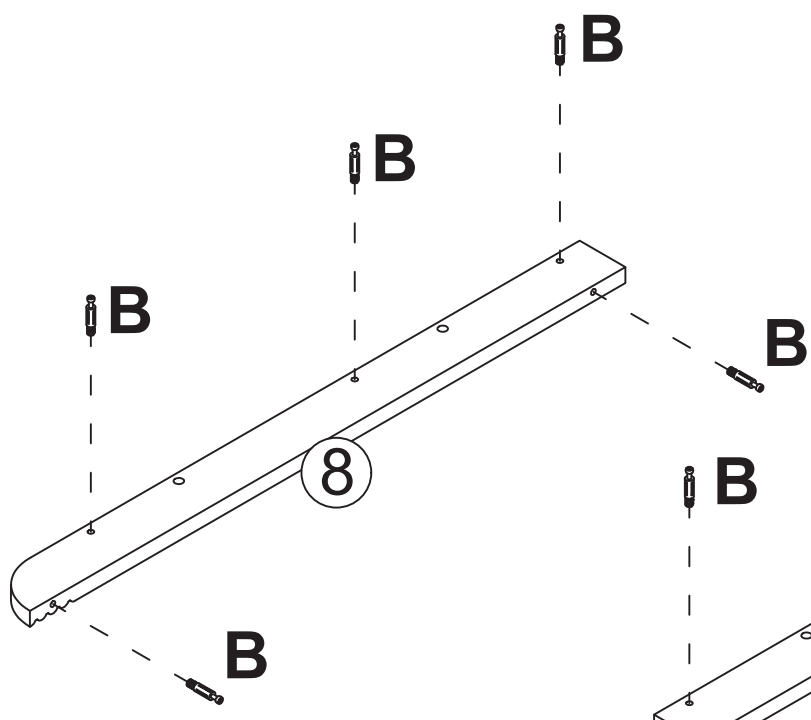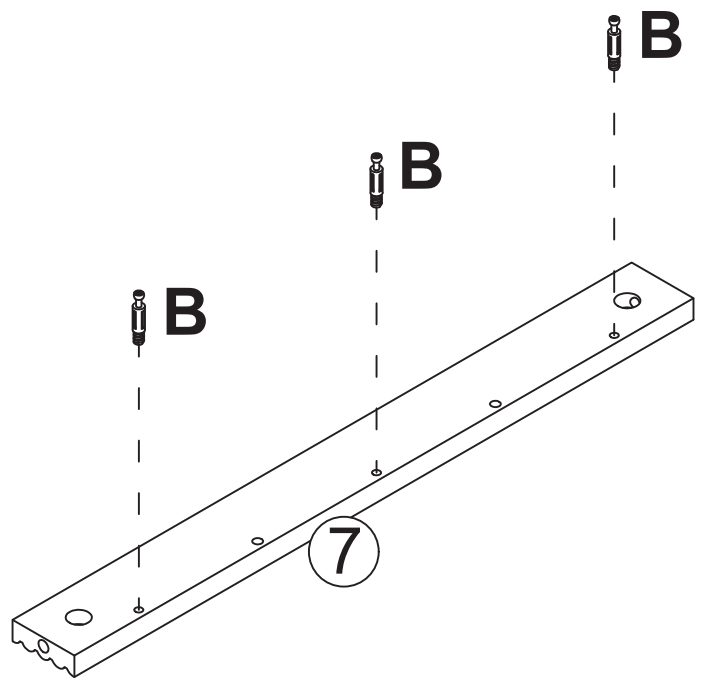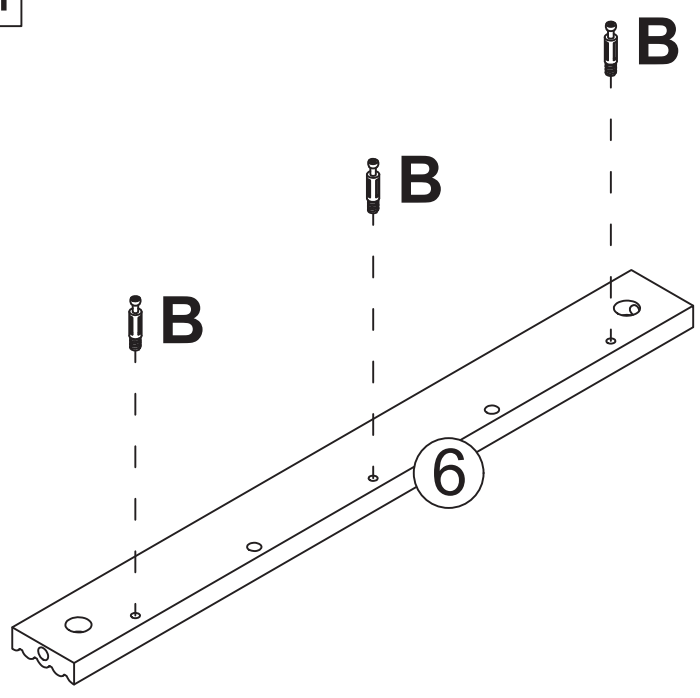

Twist (B) into (6) (7) (8) (9).

15

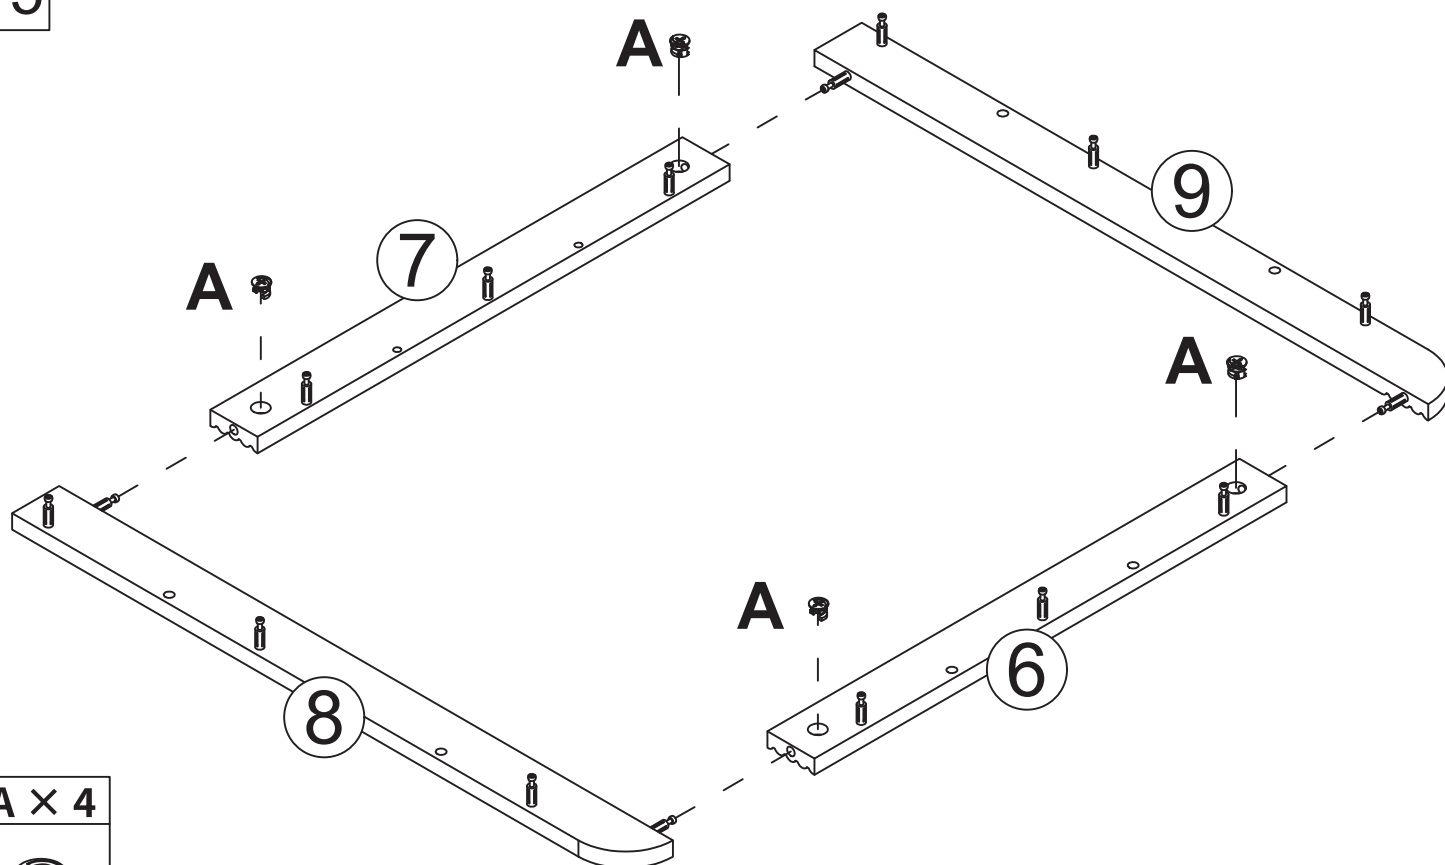


A × 4



Connect (6) (7) to (8) (9), then secure with (A).

16

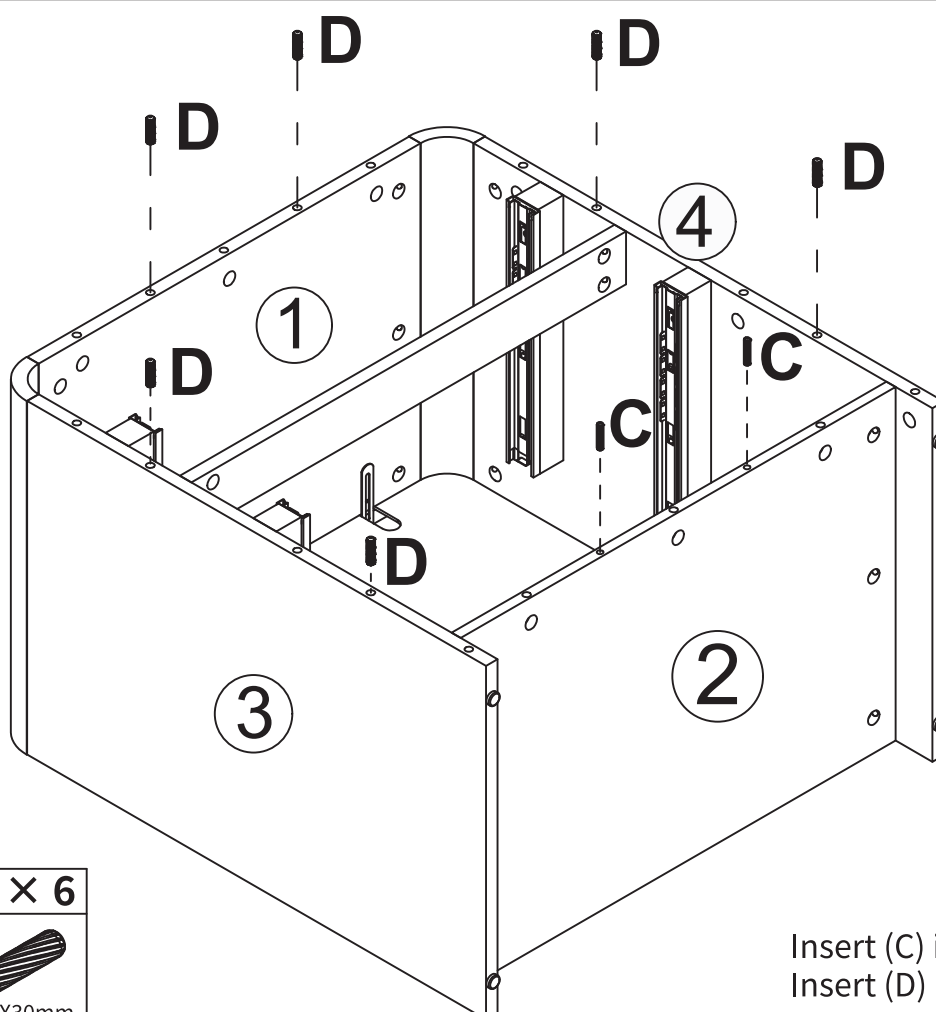

C × 2

D × 6




Ø6X30mm



Ø8X30mm

Insert (C) into (2).
Insert (D) into (1) (3) (4).

17

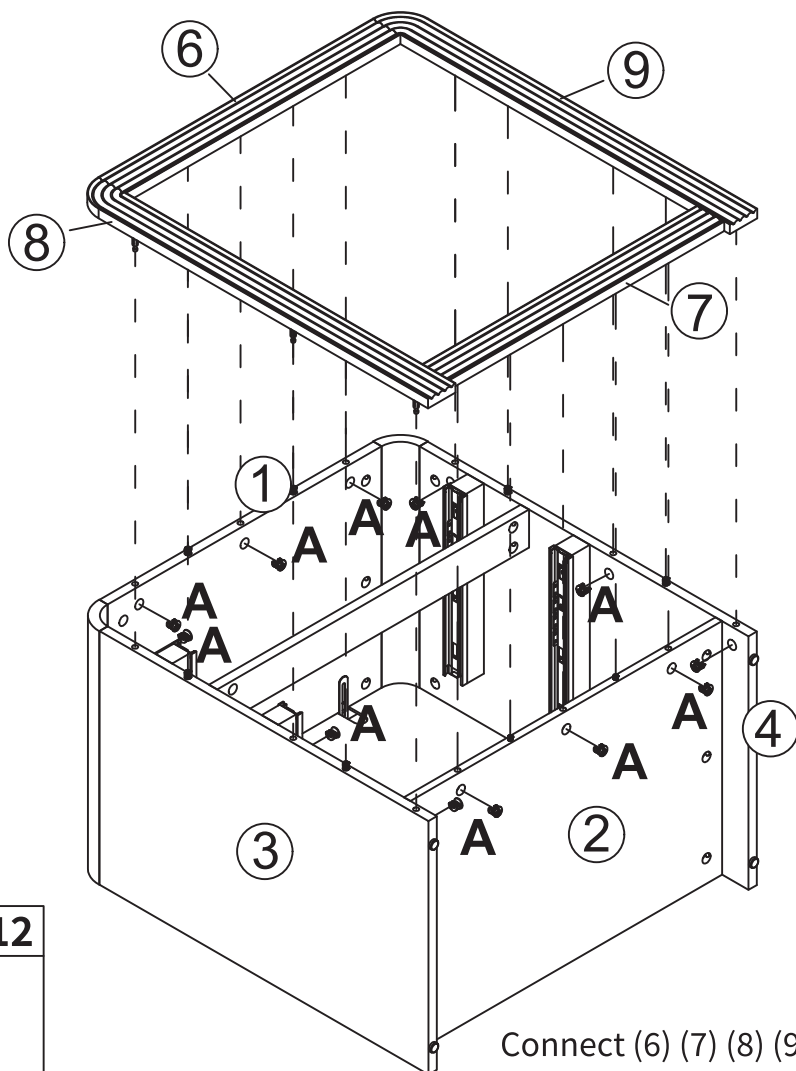


A × 12





Connect (6) (7) (8) (9) to (1) (2) (3) (4), then secure with (A).

18

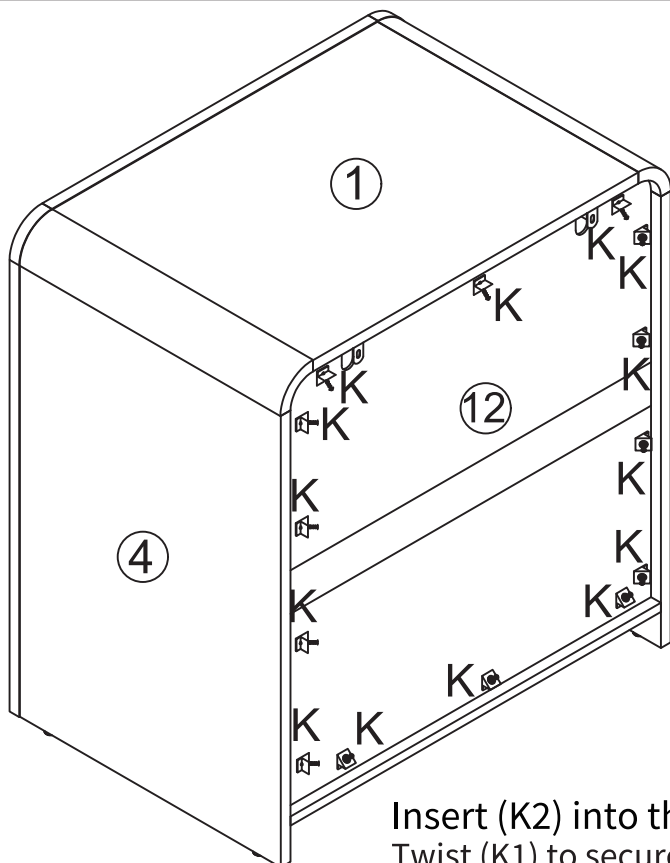

Turn

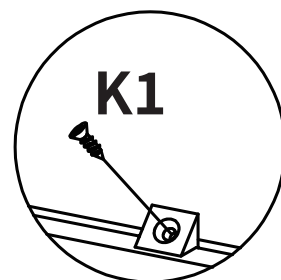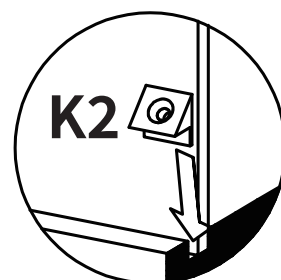

K × 14




Insert (K2) into the gaps between the boards as shown.
Twist (K1) to secure (K2).

19

F X 8




M4X35mm

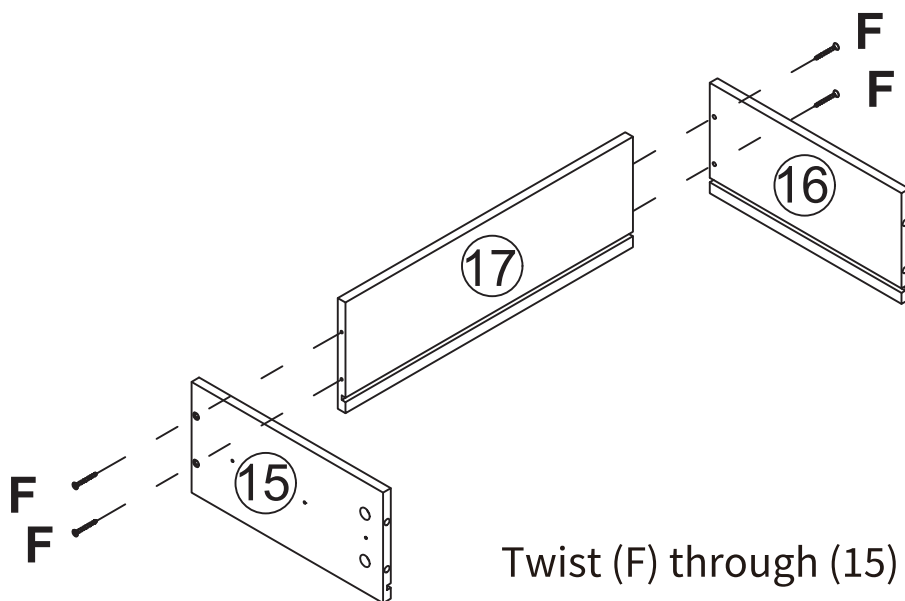

x2

Twist (F) through (15) (16) into (17).


20

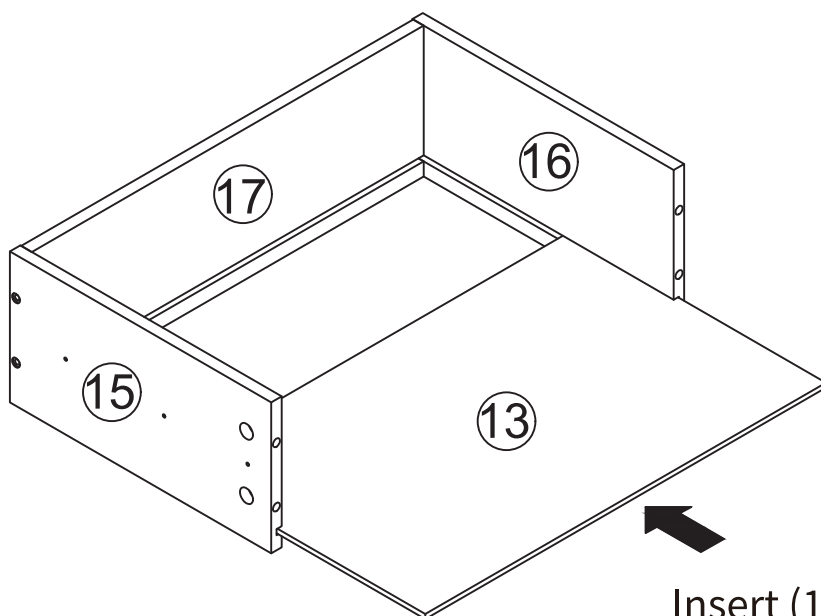

x2

Insert (13) into the grooves as shown.

21

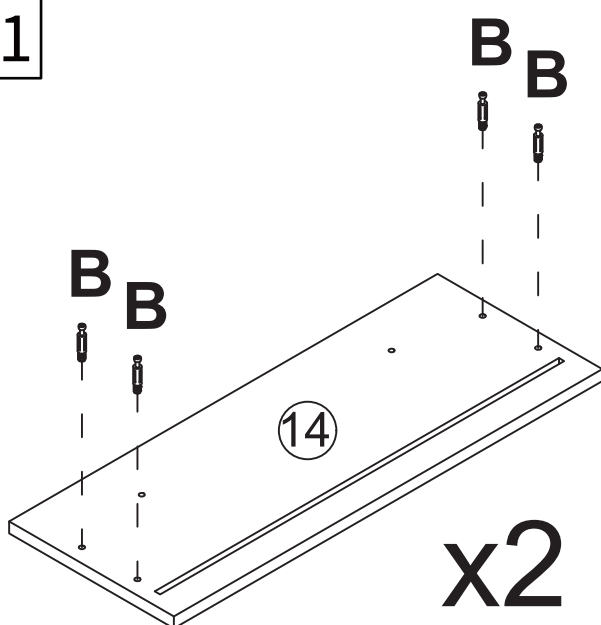


x2

B X 8



Twist (B) into (14).

22

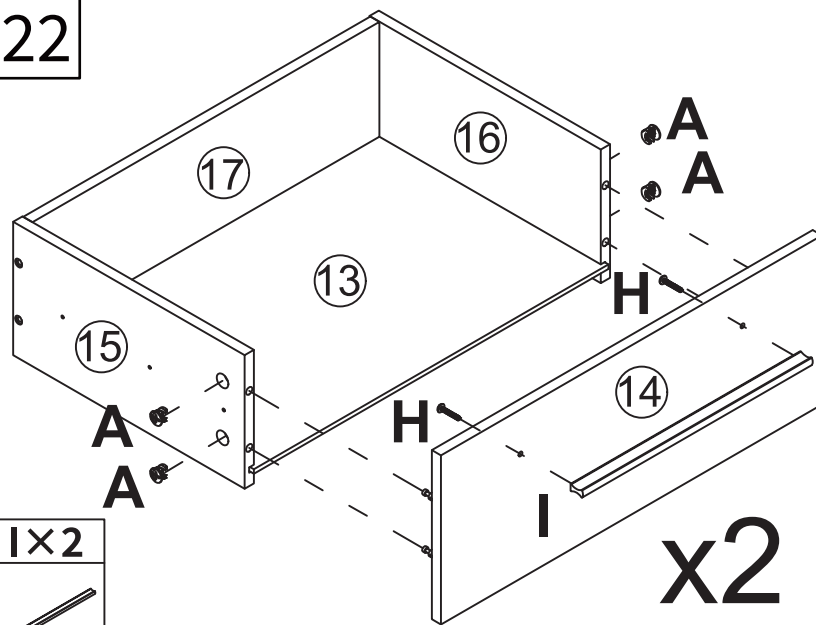

x2

I X 2




A X 8 H X 4



Connect (14) to (15) (16),
then secure with (A).
Twist (H) through (14) into (I).


Open end

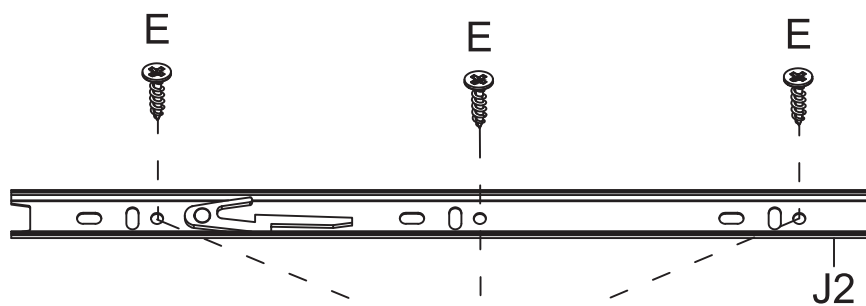


Mounting Holes

180°

Open end

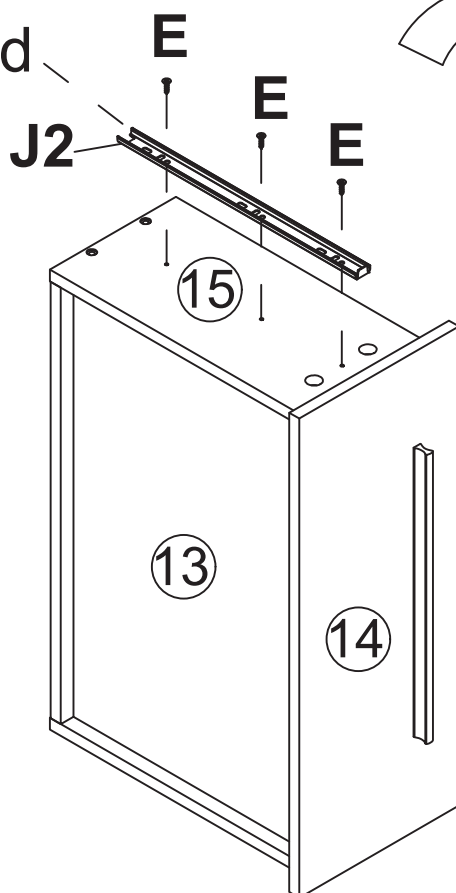

Open end


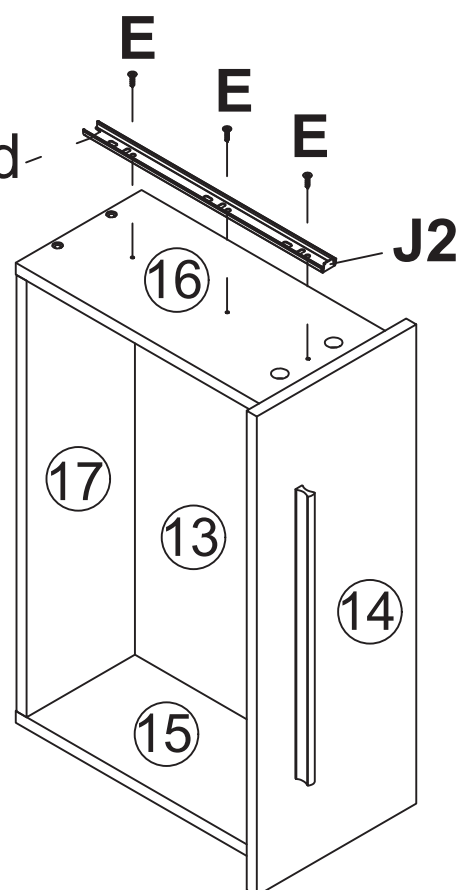


x2

E × 12 J2 × 4




Twist (E) through (J2) into (15) (16).

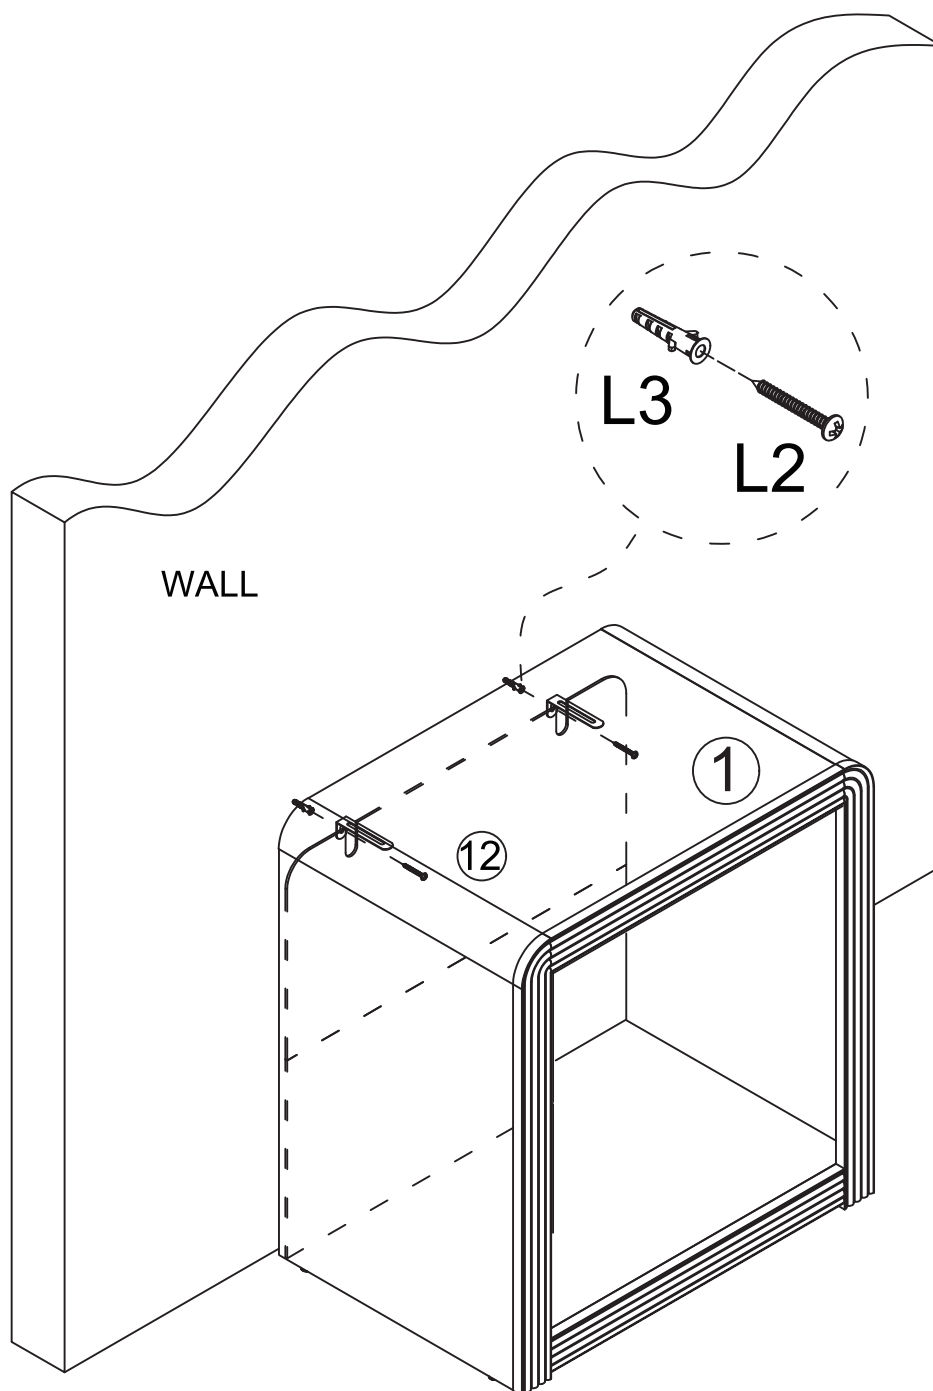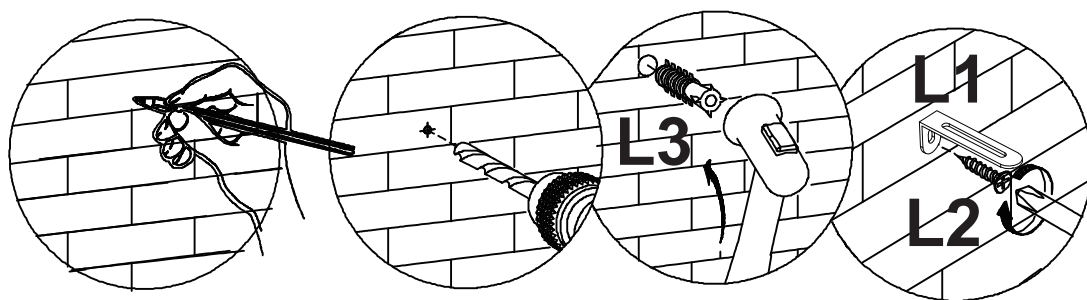

L × 2



Measure the distance between the two (L1) on (1) and mark the corresponding positions on the wall. Pre-drill holes at the marked positions. Insert (L3) into the drilled holes. Twist (L2) through (L1) into (L3) to secure.

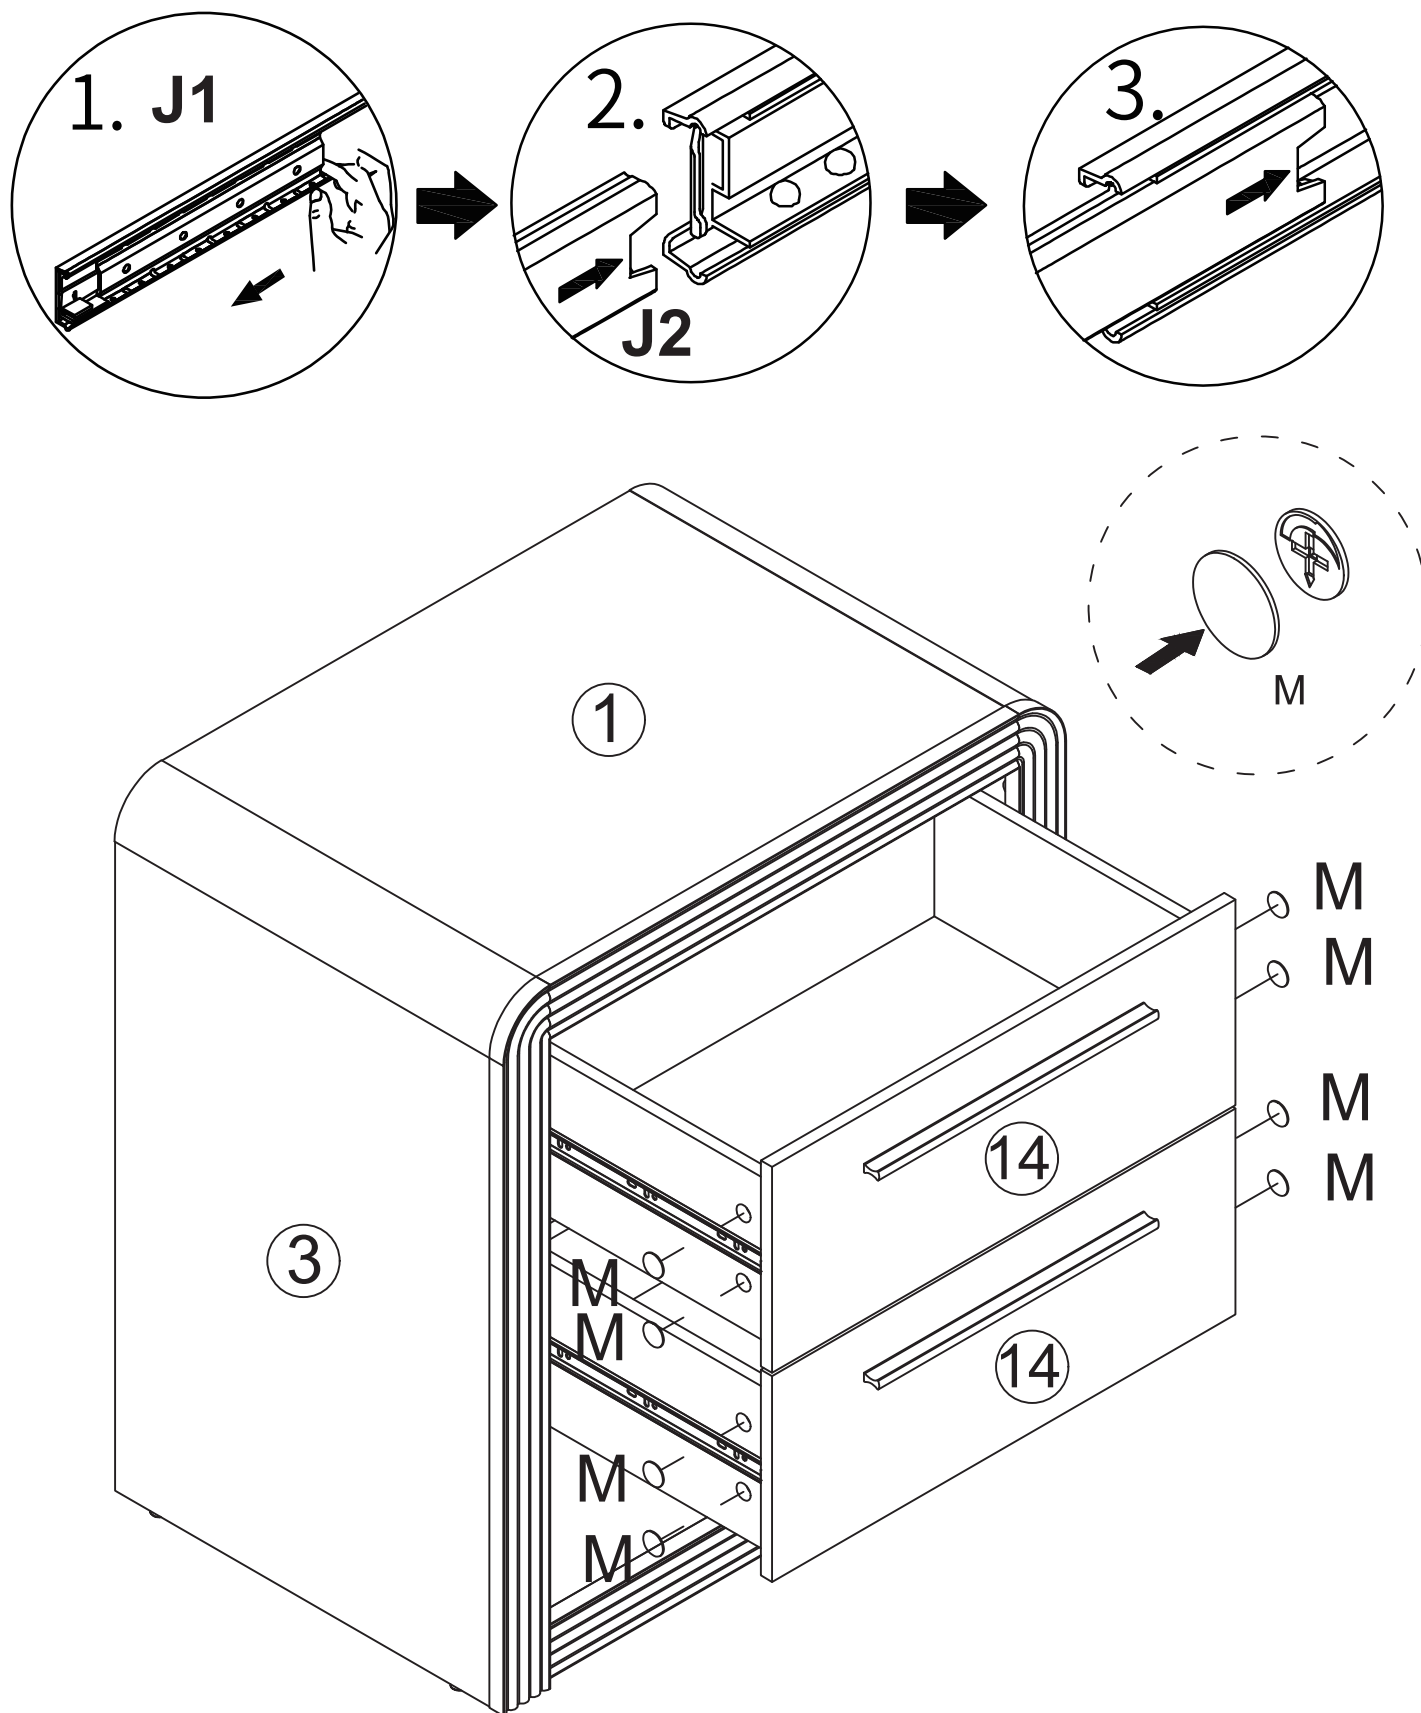

M × 27




Extend the open end of (J1).
Align (J1) with (J2), and snap them together.
Push and pull the drawer several times to ensure
that (J1) and (J2) are fully engaged as one unit.
Cover all exposed holes with (M) for a clean look.



NOTE: The included tipping restraint is designed for wooden stud walls only and requires attachment to a stud. If the provided hardware doesn't fit your wall, please purchase suitable expansion anchors from your local hardware store.



WARNING: Furniture tipping can cause serious injury or death, especially to children. Install restraint to reduce risk. It is a deterrent only, not a substitute for supervision, and not for earthquake protection (buy seismic restraints separately). Inspect periodically for security.

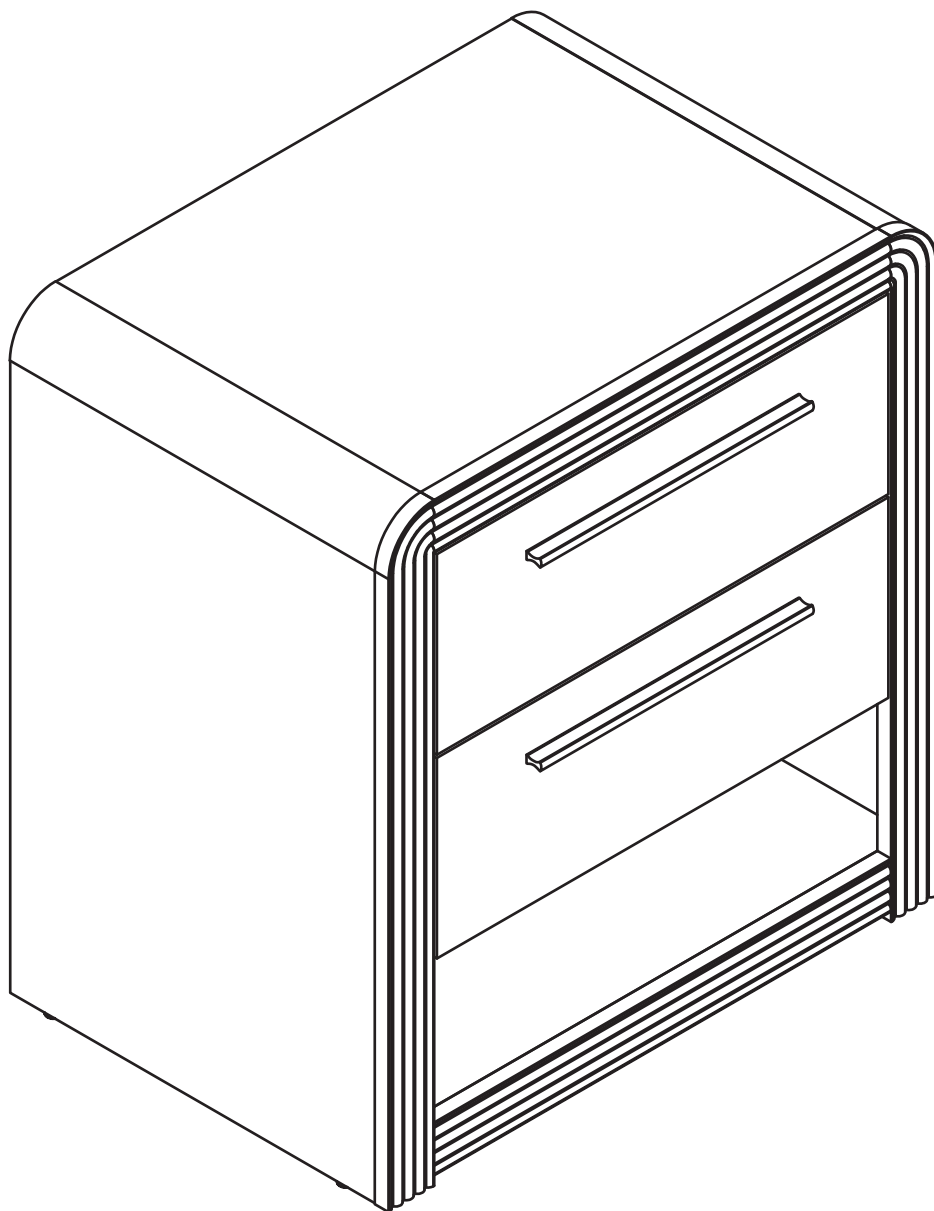

DONE!