

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

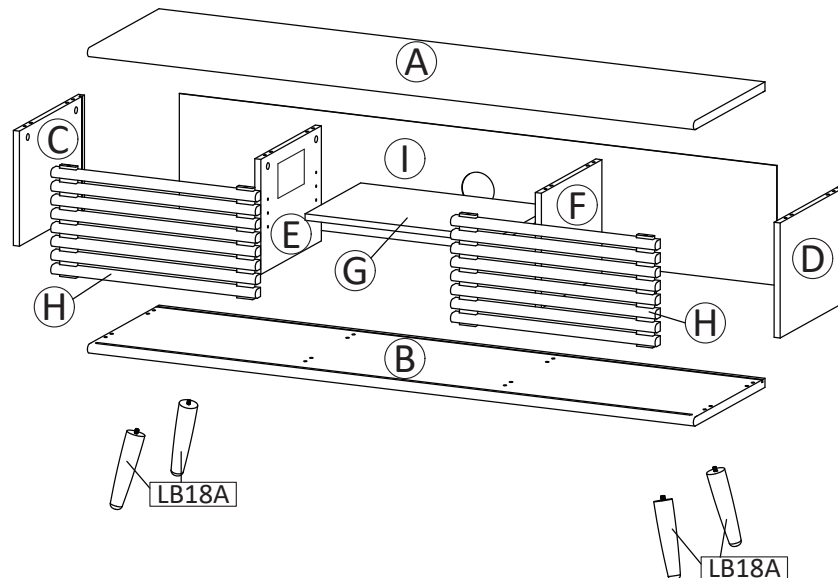

 **SAFAVIEH**
FURNITURE

Model# MED9637

Product Dimensions: 59"Wx15"Dx19"H

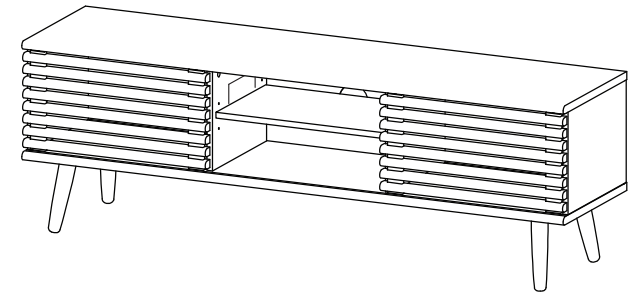


















WARNING :

WEIGHT CAPACITY: 82 LBS.

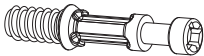Warning : Do not stand on media stand.

Warning : Do not over torque bolts.

Hardware List

<div>HW1x8</div> <div></div> <div>Ø 6 x 35 mm</div>	<div>HW2x8</div> <div></div> <div>Ø 15 mm</div>	<div>HW3x16</div> <div></div> <div>Ø 8 x 30 mm</div>	<div>HW4x8</div> <div></div> <div>M 7 x 50 mm</div>	<div>HW5x2</div> <div></div>
<div>HW6x4</div> <div></div>	<div>HW7x4</div> <div></div>	<div>HW8x20</div> <div></div> <div>M 4.5 x 12.5 mm</div>	<div>HW9x4</div> <div></div>	<div>HW10x10</div> <div></div> <div>M 3.5 x 15.5 mm</div>
<div>HW11x14</div> <div></div> <div>M 6 x 12.5 mm</div>	<div>HW12x8</div> <div></div> <div>Ø 15 mm</div>	<div>HW13x2</div> <div></div>	<div>HW14x1</div> <div></div>	<div>HW15x10</div> <div></div>
<div>HW PM1x4</div> <div></div>	<div>HW US12x1</div> <div></div>			

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Center Board Left	1
F	Center Board Right	1
G	Adjustable Shelf	1
H	Door	2
I	Back Board	1
LB18A	Leg	4

Piece	Description	Qty
HW1	Cambolt	8
HW2	CamLock	8
HW3	Dowel	16
HW4	Screw M 7 x 50 mm	8
HW5	Allen Key	2
HW6	Top Pin Sliding	4
HW7	Bottom Pin Sliding	4
HW8	Screw M 4.5 x 12.5 mm	20
HW9	Shelf Pin	4
HW10	Screw M 3.5 x 15.5 mm	10
HW11	Screw M 6 x 12.5 mm	14
HW12	Screw Cap	8
HW13	Stopper	2
HW14	Bumper	1
HW15	Wedge	10
HW PM1	Mounting Plate	4
HW US12	Anti-Deflection Bar	1

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

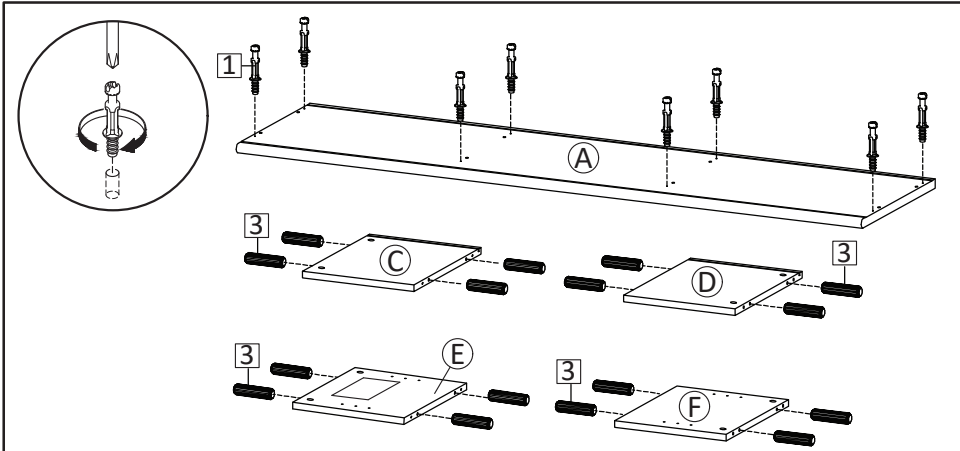


STEP1: Insert Cambolt (HW1) into Top Board (A). Insert Dowel (HW3) into Center Boards (E&F), Side Board Left (C) and Side Board Right (D).

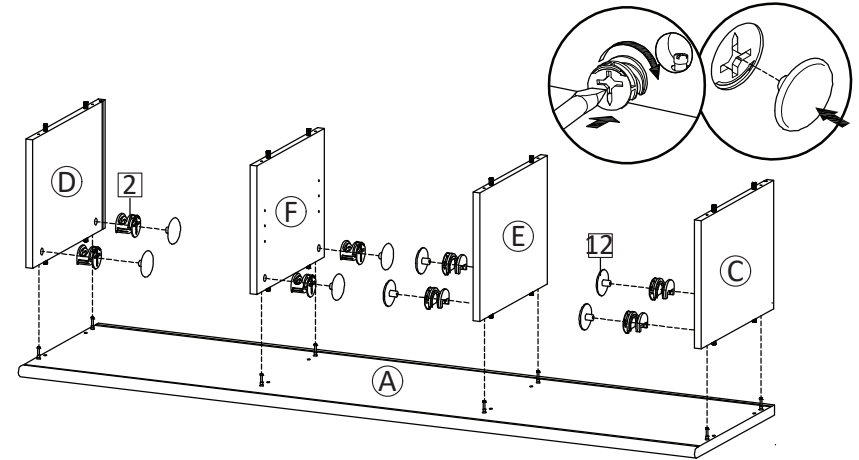

STEP2: Attach Side Board Left (C), Side Board Right (D), Center Boards (E&F) to Top Board (A). Insert Camlock (HW2) then tighten using screwdriver. Put Screw Cap (HW12) over the camlock.

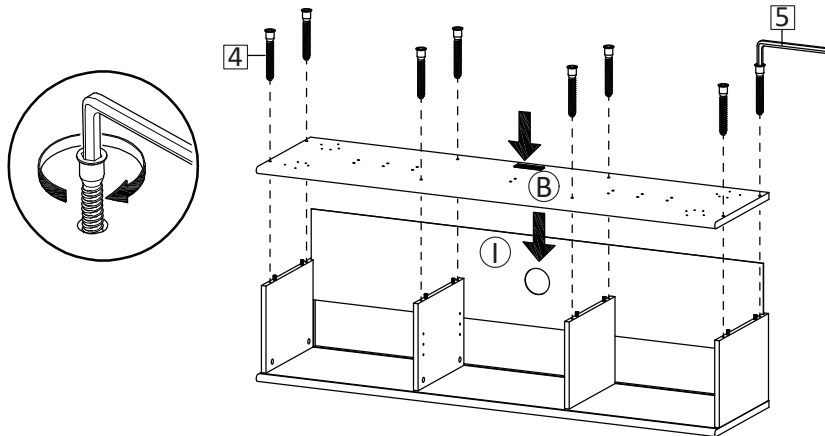

Step3: Insert Backboard (I) as shown in the figure above. Place bottom board on top and secure with Screw M7x50 mm (HW4), tighten screws using Allen Key (HW5).

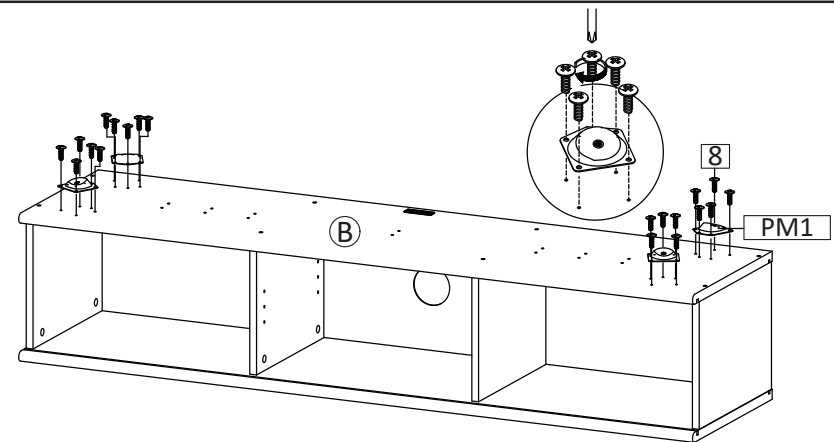

Step4: Install Mounting Plate (HW PM1) and secure with Screw M4.5x12.5 mm (HW8) into Bottom Board (B).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

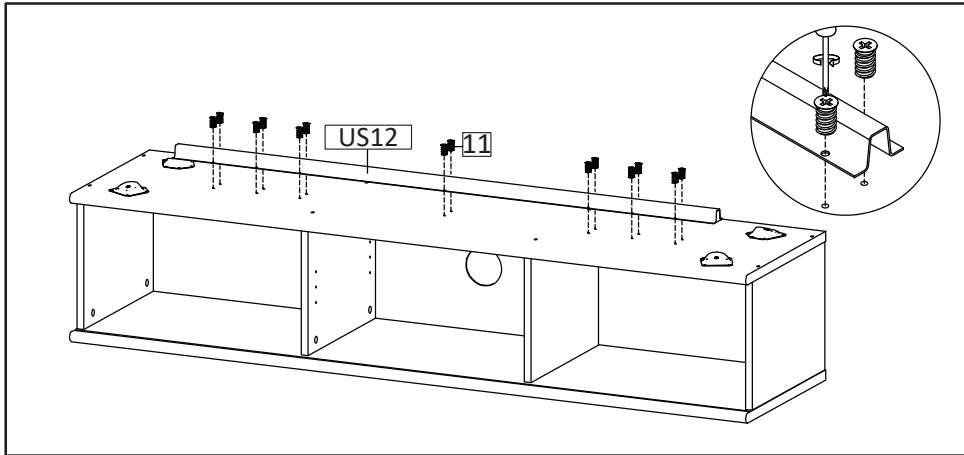


STEP5: Place Anti Deflection Metal Bar (HW US12),secure with screw M6x12.5 mm (HW11) using screwdriver.

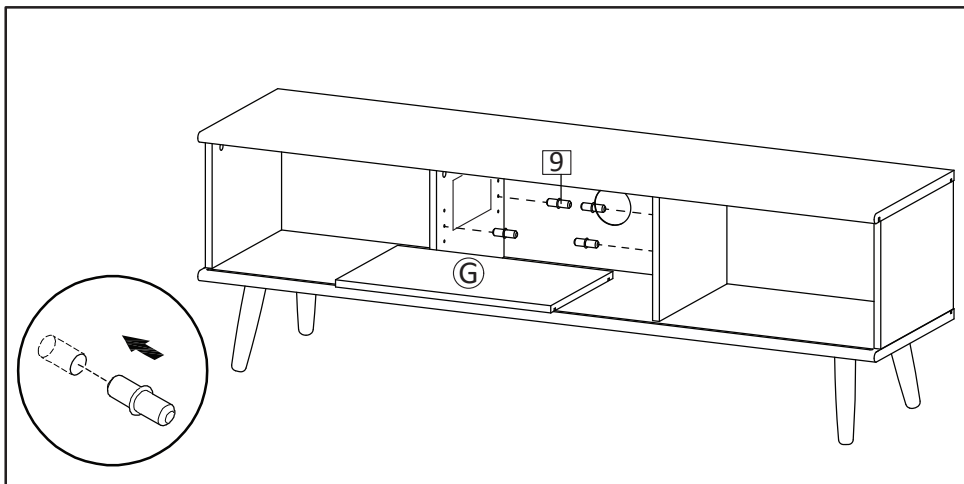

STEP7: Insert Shelf Pin (HW9) into the provided holes on both Center Boards at the desired level. Then place the Adjustable Shelf (G) onto the Shelf Pin.

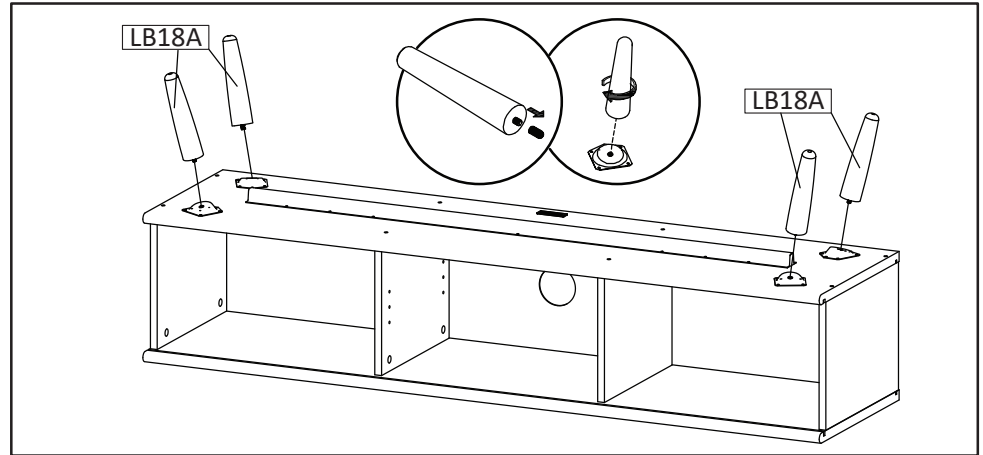

STEP6: Insert Leg (LB18A) into Mounting Plate, tighten by rotating . the leg clockwise.

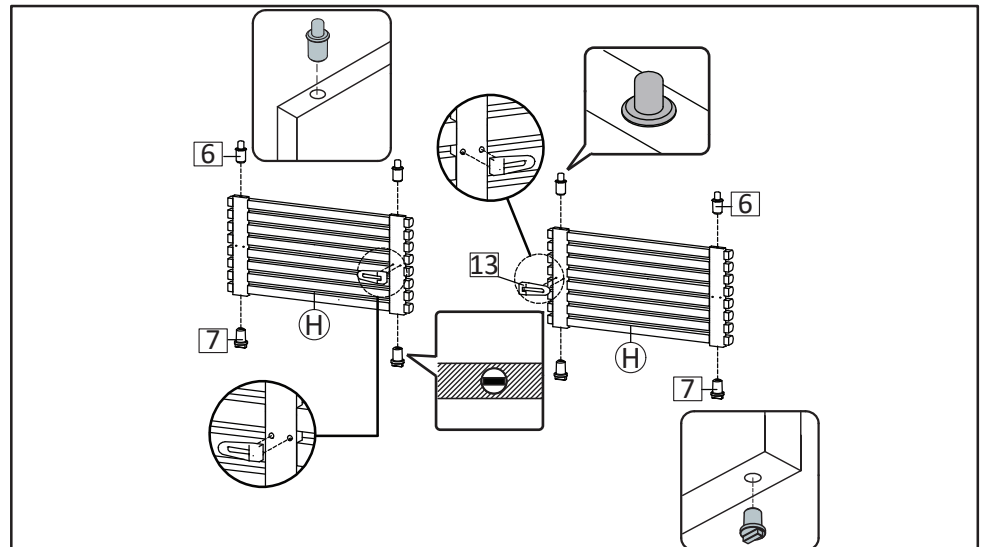

STEP8: Insert Stopper (HW13),position as shown in the figure. Insert Top Pin Sliding (HW6) and Bottom Pin Sliding (HW7) on both end of frame door as specified position in the figure.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

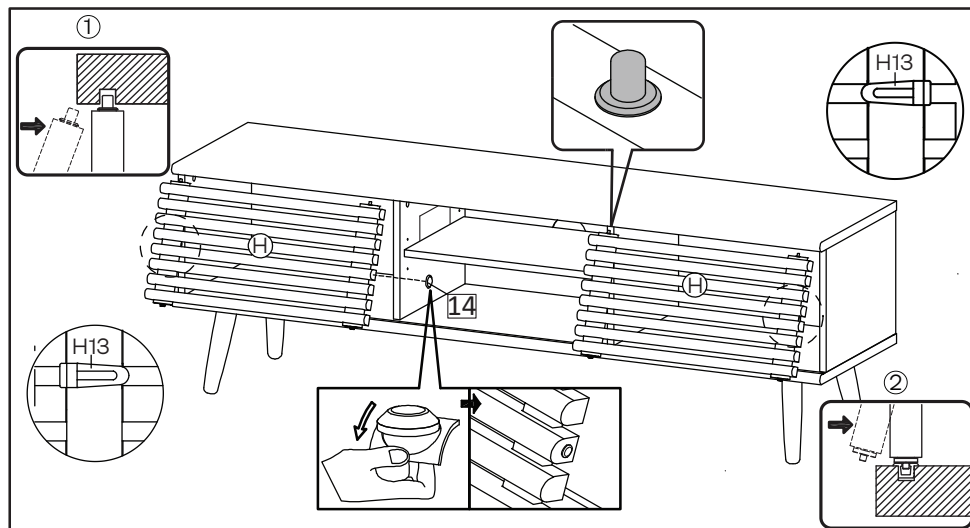

STEP9: Hold the frame door with position of the upper pin shown facing upward. Put the frame door by inserting it to the upper groove on Top Board (A), then place the lower part aligned into the groove on bottom board (B). Repeat this step for the other door. Slide the item's doors left and right to ensure the doors have been placed properly on the track.

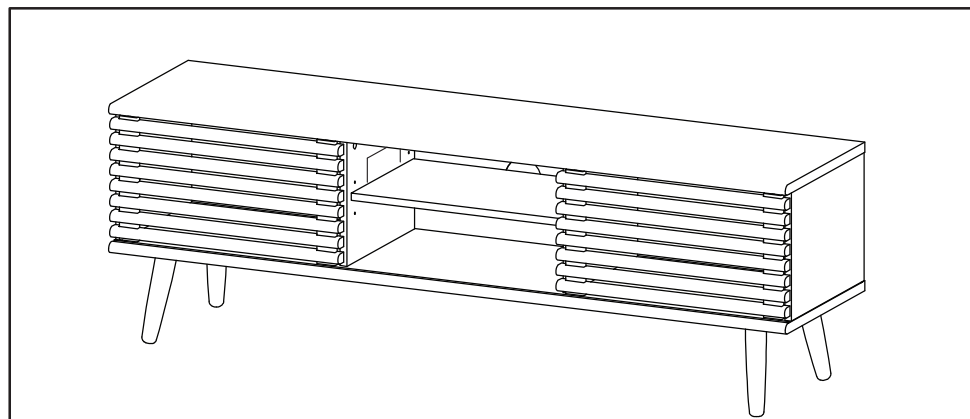

STEP11: Assembly is completed.

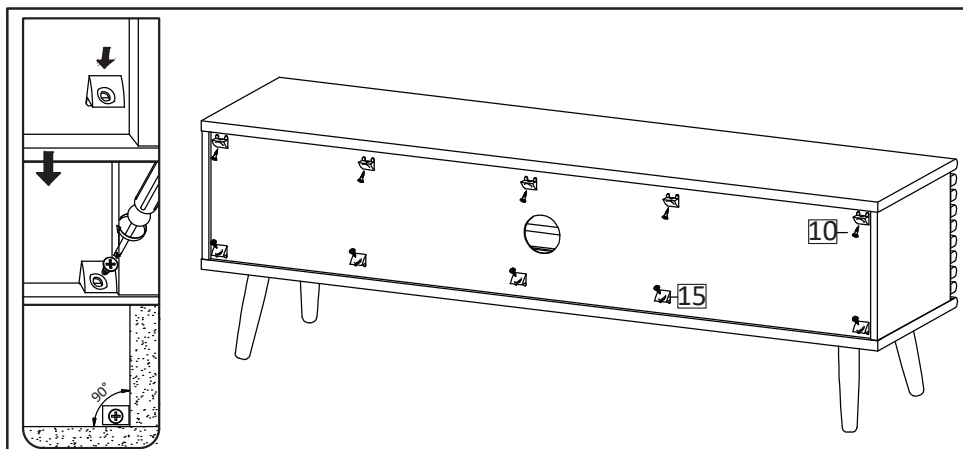

STEP10: Using Wedge (HW15) and Screw M3.5x15.5 mm (HW10) tighten the back of media stand with screwdriver.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

