
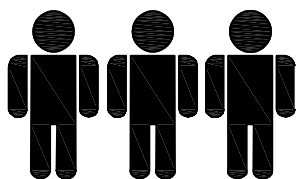


ASSEMBLY INSTRUCTION

SKU CODE: (N708P464784-N708P464785-N708P464786)


INSTRUCTION DE MONTAGE

CODE SKU: (N708P464784-N708P464785-N708P464786)

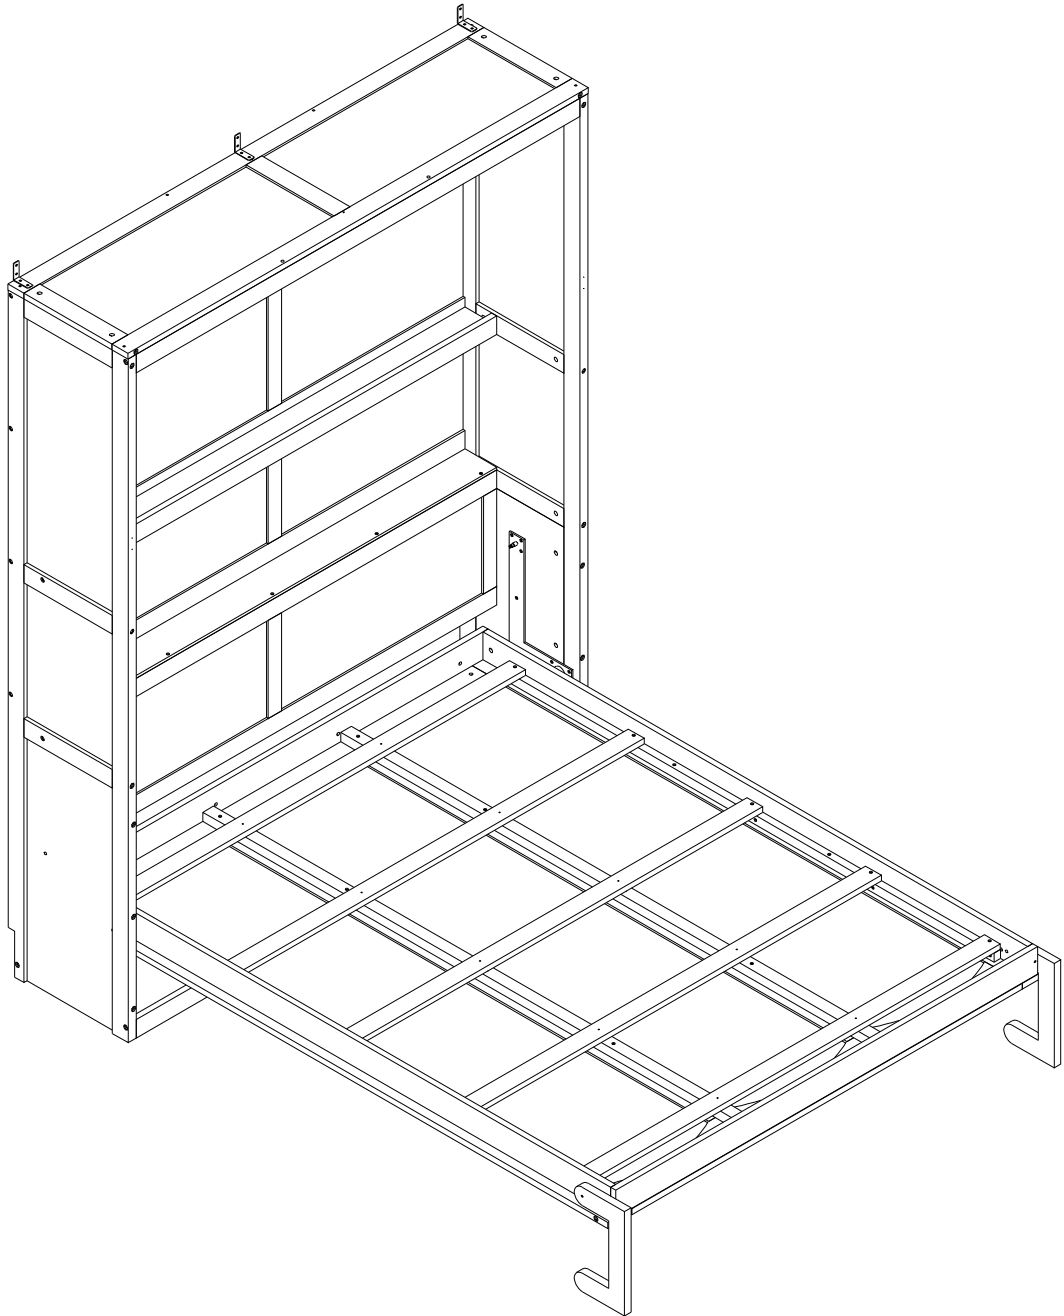


Three people are required to
assemble and move this model.

OPTION 1:

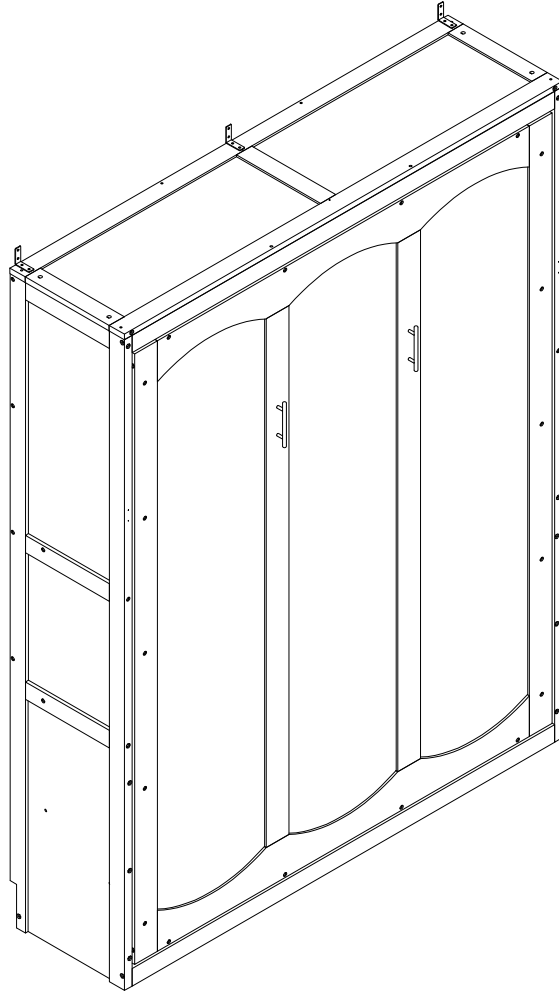

OPTION 2:

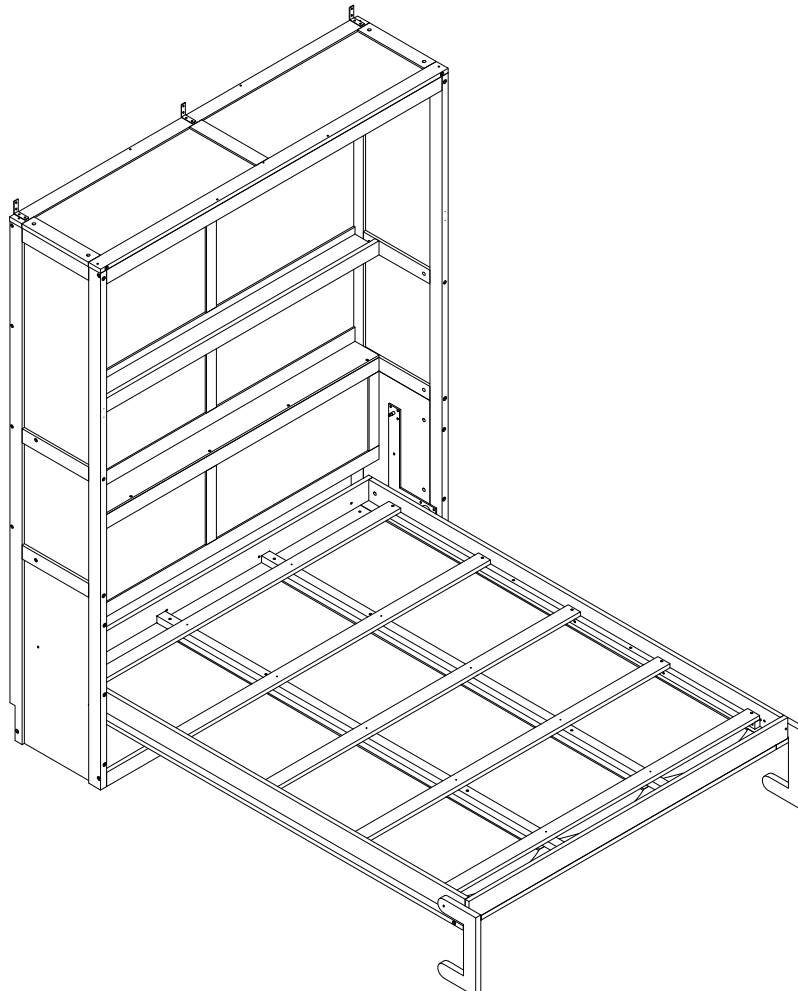

SAFETY FIRST: WALL ANCHORING IS NON-NEGOTIABLE

MURPHY BEDS MUST BE SECURELY ANCHORED TO STRUCTURAL MEMBERS. NEVER MOUNT SOLELY TO DRYWALL. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY OR DEATH.

ABSOLUTELY FORBIDDEN HARDWARE



PLASTIC ANCHORS - WILL FAIL

A. WOOD STUD WALL


HOW TO IDENTIFY



KNOCK ON A
HOLLOW WALL



STUD FINDER
TOOL (MITS)

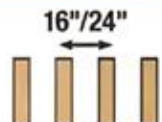


STUDS SPACED
IS 16" STUD

REQUIRED HARDWARE



HEAVY-DUTY SCREWS (MIN. 5/32" DIA., 2.5" LONG)

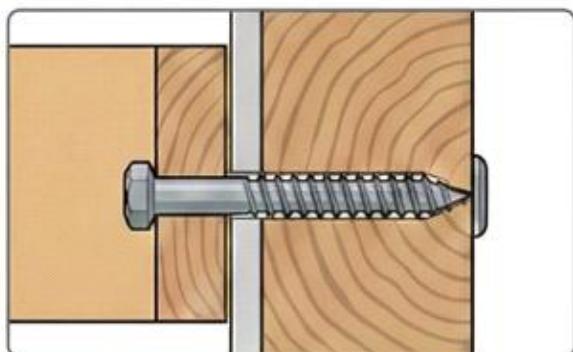

MUST PENETRATE WOOD STUD CENTER AT LEAST 2.5"

B. MASONRY/CONCRETE WALL

HOW TO IDENTIFY



KNOCK ON A
SOLID WALL




DRILL BIT CREATES
GREY/RED DUST

REQUIRED HARDWARE




ALL-METAL EXPANSION BOLTS
(MIN. 5/32" DIA., 2.5" LONG)

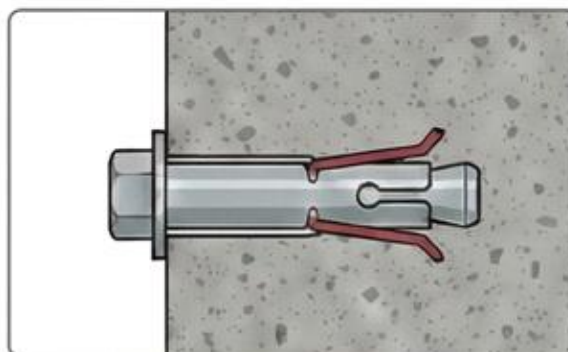

CLEAN HOLE OF DUST. **DO NOT** USE PLASTIC.

FINAL SAFETY CHECKLIST



VERIFY STUD CENTER BEFORE DRILLING



ENSURE FLUSH WALL FIT (ADJUST BASEBOARD)



PERFORM PULL TEST BEFORE MATTRESS LOAD



AVOID HIDDEN WIRES/PIPES BEFORE DRILLING



REGULARLY INSPECT AND MAINTAIN WALL ANCHORS



CONSULT A PROFESSIONAL FOR WALL ASSESSMENT
AND OPTIMAL HARDWARE; CUSTOMER ASSUMES
ALL INSTALLATION LIABILITY

IMPORTANT INFORMATION PACKAGE.



THIS INFORMATION PACKAGE CONTAINS WARNING AND PRODUCT SAFETY INFORMATION. DO NOT PROCEED WITHOUT REVIEWING THOROUGHLY.

A. WARNING LABELS.

Your purchased Murphy Bed is delivered to you with WARNING LABELS to constantly remind you to take and adopt Safety Measure throughout the entire assembly and mounting points of the Bed to the walls.

DO NOT REMOVE these labels.


These Warning Labels serve as a Reminder Tool for visiting friends and relatives when using the Murphy Bed to ensure Safety Precautions are taken.

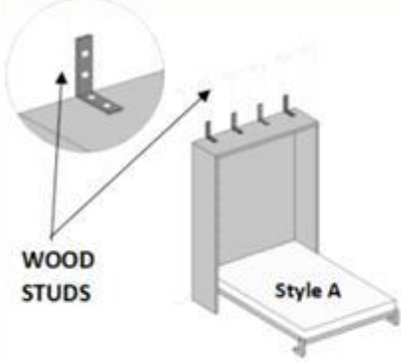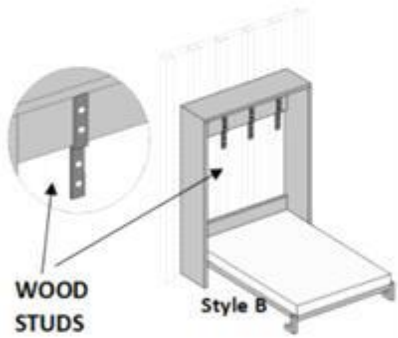 WARNING.	
<u>IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall.</u> <u>For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.</u> Seek Certified Professional Consultant / Contractors for their Services to: 1.) DETERMINE the WALL Type in Your Home; 2.) PRECISE HARDWARE that suits to the Wall Type in Your Home; 3.) INSTALL / ATTACH of the Murphy Bed to the Wall in Your Home; 4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached. The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls and hardware fittings suitable for fixing on CONCRETE SOLID walls. Please select the correct wall-fixing hardware. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS or CONCRETE SOLID WALLS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material. Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attachment of the Murphy Bed to the Wall. <u>FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.</u> <u>SAFETY PRECAUTION :</u> 1.) MAXIMUM Mattress Weight suited to your Murphy Bed : <u>77 lbs (35 kg)</u>; MAXIMUM mattress thickness: <u>8 inches (20 cm)</u>; 2.) ENSURE ADULTS ONLY throughout the entire assembly and attachment. 3.) KEEP ALL Children, Non-Ambulatory persons and Pets at bay during the entire assembly and attachment.	 WOOD STUDS  WOOD STUDS WOOD STUDS walls - Locking wall illustration LINE ART for Reference only and NOT DRAWN TO SCALE.

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.

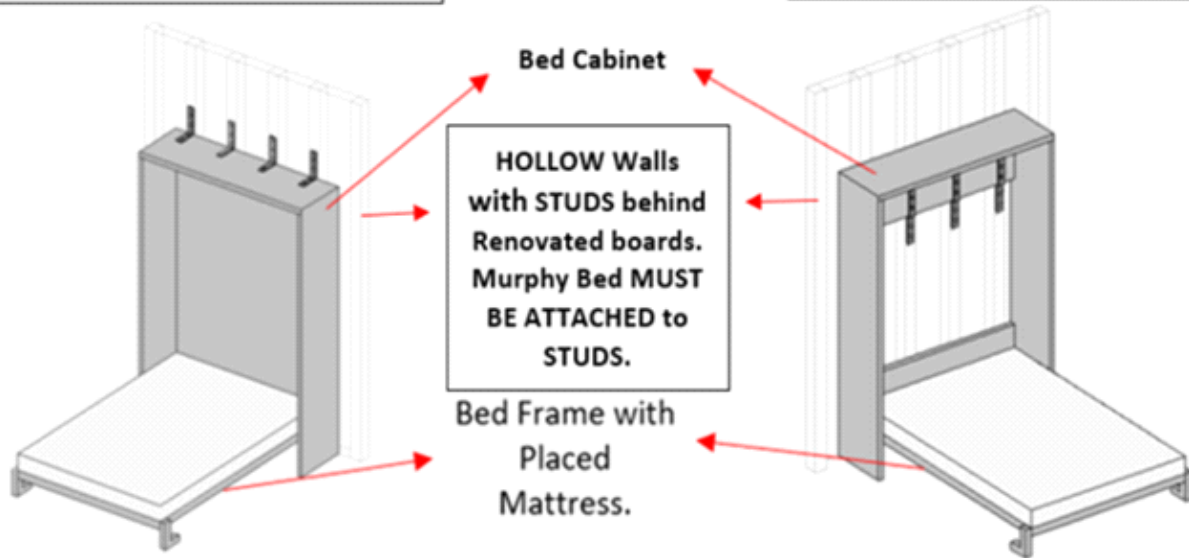

B. SAFETY REMINDERS. **MARKINGS in WALL - WHERE TO ATTACH the MURPHY BED.**

Irrespective of the wall type, whether Solid Concrete Walls OR Decorative Walls with WOODEN Studs OR Decorative Walls with Metal Studs, ensure that

- a.) you choose a professional installer who has a good understanding of the wall structure where the Murphy Bed is anchored, including the position of the wall studs and structural components in the case of a wood or metal structure.
- b.) precise markings of the positions of the anchor points are to be made on the wall for easy identification during the Murphy Bed attachment to the wall.
- c.) the relevant and appropriate Hardware with Metal Brackets are READY for this attachment and are within easy access for prompt and efficient attachment.

This product requires Professional Consultation and Installation*.

* When you choose the professional installer, make sure to comply with all applicable laws, regulations and rules in the city, state or country where the Murphy Bed is installed.

To have your Murphy Bed fully assembled and to achieve its intended functionality - you MUST READ through this entire Assembly Instructions Manual before you start the assembly of the bed

1.) There are numerous Safety Issues and Safety Precautionary Actions that you MUST KNOW before you start the Assembly.

2.) CAUTION - Failure to FOLLOW / ADHERE to the GUIDE, WARNING AND REMINDERS here, may result in serious / severe injuries or death.

3.) PRECAUTION : For the assembly, Adult Partners only, to assist in the entire assembly. Ensure at least 3 (three) ABLE BODIED PERSONS ONLY in the entire assembly and attachment of this Murphy Bed to the walls of your home.

4.) CAUTION : During the entire assembly process and attachment of the Murphy Bed to the walls of your home, Keep ALL Children, Non-Ambulatory Persons and Pets completely at bay.

5.) SAFETY REMINDER on / to : Personal, Family Members and Pets. The Murphy Bed may be shipped to you in 3 to 5 packages and are HEAVY. Each carton holds many parts and components. Some of these components eg., bolts and screws are relatively small* in size.

*. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and /or Pets do not play or ingest these.

6.) This Murphy Bed is intended for ADULT USE ONLY.

7.) This Murphy Bed is delivered with pre-installed hardware for the wood studs and the concrete solid wall - please choose the appropriate hardware according to the type of the wall.

8.) Your Home's Wall Type - Every home is renovated differently with different wall(s) type / finishes. Before you proceed to assemble your Murphy Bed :

- a.) SEEK and CONSULT Professional Services to ascertain the wall type in the designated location where you intend to attach the Murphy Bed;
- b.) ENSURE the Consultant-Contractor specifically INFORMS you of the WALL TYPE in the designated spot where you intend to attach the Murphy Bed.
- c.) ENSURE the Consultant INFORMS you specifically on the matching and relevant Hardware / Brackets to secure and attach the Murphy Bed to the wall.


9.) WARNING - YOU MUST HEED THE INSTRUCTIONS given by your appointed Consultant-Contractor on the :

- a.) Mounting Hardware Type that suits the wall(s) type - where / when it is NOT WOOD STUDS or NOT CONCRETE SOLID WALL, the pre-packed hardware not match/ not fit.
- b.) Number of Mounting Points for the Murphy Bed to the Wall.

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.

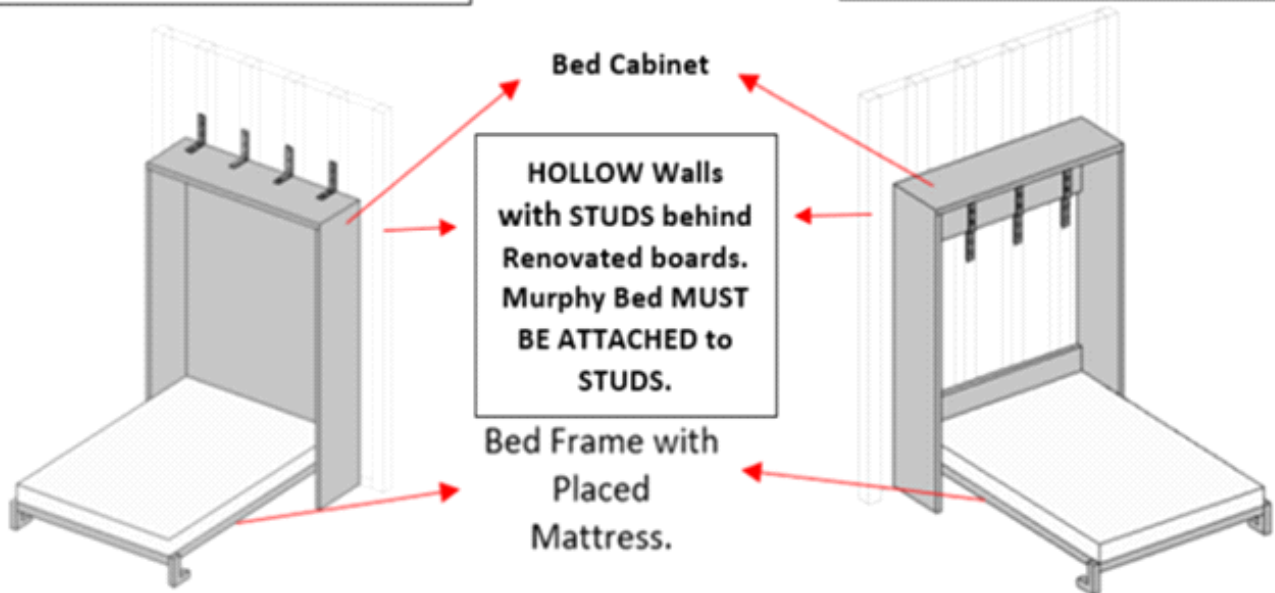

11.) This Murphy Bed is designed for home use and not intended for commercial use.

12.) This Murphy Bed is not intended to be moved, modified, uninstalled or disassembled once professionally installed.

C.) MOUNTING INFO & HARDWARE.


1.) REMINDERS :

- a.) In the event, that this pre-packed Screws Set does not match to the walls in your home - DO NOT USE / DISCARD these hardware.
- b.) ADHERE to the Professional Consultant-Contractor instructions and information on the RELEVANT mounting hardware that suits your wall.
- c.) Procurement of these RELEVANT hardware is an arrangement made between your Consultant-Contractor and you.


2.) A step ladder (not provided) is needed to attach the L-Brackets to the wall, at the Top of the Murphy Bed. DO NOT lean against the Top of the Murphy Bed, it may cause sagging.

Murphy Bed Style A

L-Bracket Fixture to Wood Studs

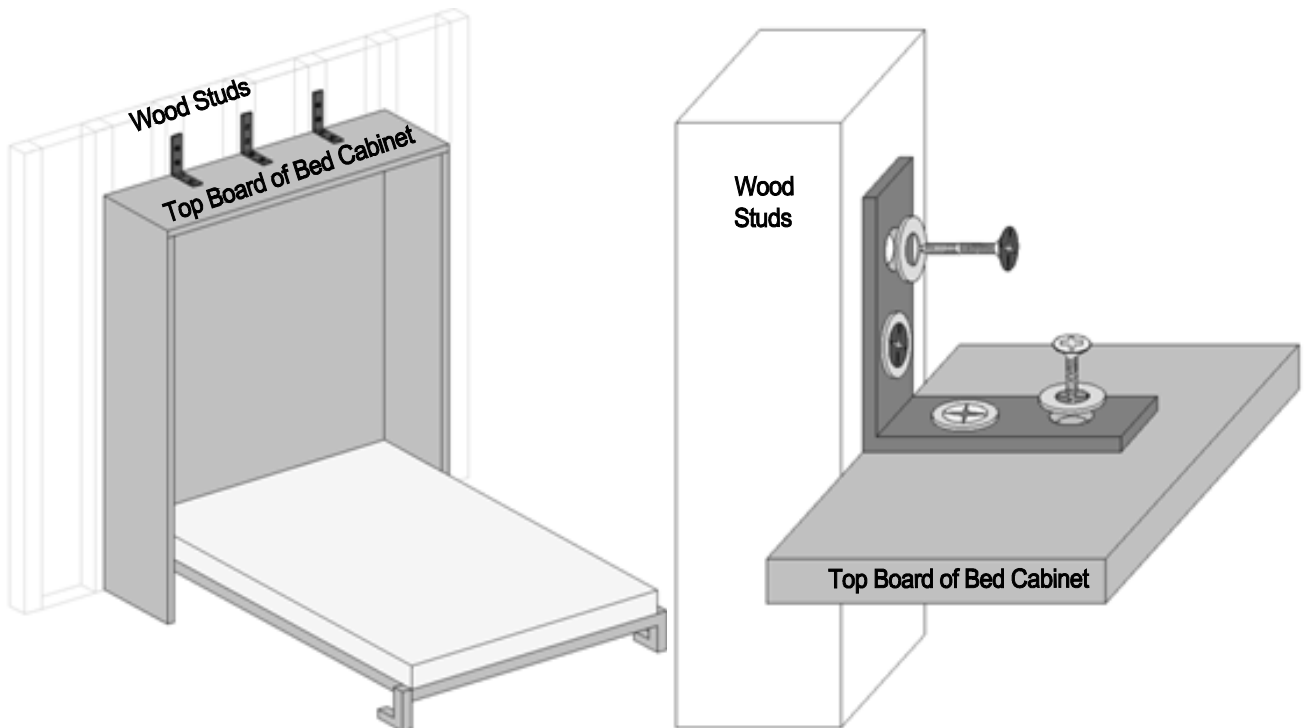

Z-Bracket Fixture to Wood Studs

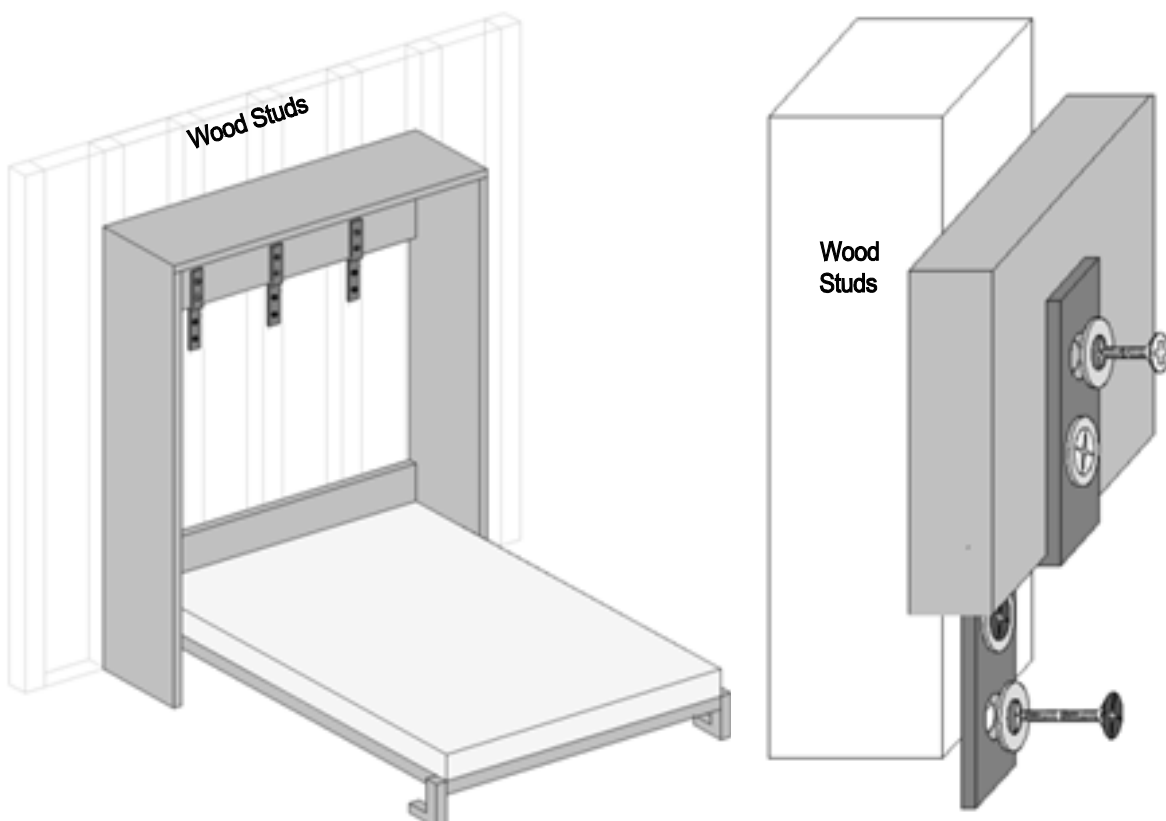

D.) IDENTIFICATION of TOOLS and ATTACHMENT SKILL.

The parts and components to assemble the Bed Frame are stated in the Assembly Instructions. Follow the instructions with attention.

For an efficient assembly, after opening the cartons shipped to you :

- a.) open and layout all parts and components in sequence;
- b.) account for every part, hardware and component;
- c.) then lay out the parts close to each other;

Assemble and tighten each bolt / nut / screw up to 80% to allow for the Bed Frame and Bed Cabinet to be HELD together.

Upon FINAL assembly where all the parts and components are FITTED precisely, in a sequential manner - proceed to tighten each bolt & nut & screw gradually.

CAUTION :

- 1.) The METAL PLATES to the sides of the Side Rails - MUST BE FULLY and SECURELY TIED to the SIDE RAILS.
- 2.) The Piston L-Brackets that are attached to the INNER WALL of the Bed Cabinet - MUST BE FULLY and SECURELY TIED to these Inner Walls.
- 3.) These Metal Plates and the L-Brackets - are the components that are holding the Pistons that allow your Bed to “travel” to an OPEN or CLOSED position.
- 4.) Frequent Inspections of these Metal Plates / Brackets and Pistons Bolts, up to Once a Month - to ascertain these DO NOT BECOME LOOSE. For if these bolts to the Bed Frame and or Bed Cabinet or Pistons are loose, may cause the BED FRAME to become DISLODGED and cause injuries.

REMINDER : NEVER FULLY TIGHTEN any screw / nut or bolt in one session. If you DO TIGHTEN the hardware all the way into the core of the wood, this cause the parts to become skewed that would impact other parts of the item not being able to be aligned to its mounting points for assembly.

E. ALL ASSEMBLY WORKS REQUIRES A TEAM OF NO LESS THAN 3 ADULTS.

Reminder : Per above info, the cartons and products are heavy - therefore exercise CAUTION at all times and ENSURE YOUR TEAM OF 3 for the entire ASSEMBLY.

F.) ASSEMBLY OF BED CABINET.

Identify all parts and components for the Bed Cabinet.

Assemble the Bed Cabinet according to the Assembly Instructions.

Upon the completion assembly of the Bed Cabinet, make a final inspection that all joints and parts are fully and securely attached.

CLEAR all debris in the area where your Murphy Bed is going to be attached to the wall.

Move this FULLY ASSEMBLED BED CABINET and position this BED CABINET some 2feet to 3 feet away from the designated Wall, where you have previously made markings.

SAFETY REMINDER - The Cabinet is NOT ATTACHED TO THE WALL, YET. From here on - YOU MUST HAVE 2 ADULT to HOLD and STABILISE this BED CABINET, to prevent the Bed Cabinet from TIPPING OVER.

G.)THE FIXATION OF THE BED CABINET

Fix the bed cabinet to the wall using wall-mounted hardware, and check to ensure that the bed cabinet is securely fastened to the Wood Studs or Concrete Solid Wall.

REMINDER : FOLLOW the INSTRUCTIONS from your Professional Consultant / Contractor.

SEQ	Bed Description	Bed Size	Details.
1	Single/Twin(XL)	~38*75/80~ inches	Attach at least 2 pieces of L or Z Hardware onto the Wall or Studs;
2	Full	54*75inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
3	Queen	60*80inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
4	King	76*80inches	Install at least 4 pieces of L or Z Hardware onto the Wall or Studs;
5	Other Bed Size		Other Bed Sizes - seek advice from your Contractor

H.) ASSEMBLY of BED FRAME.

Identify all parts and components for the Bed Frame.

Assemble the Bed Frame according to the Assembly Instructions.

Upon completion of assembly of the Bed Frame, make a final inspection that all joints and parts are fully and securely attached.

I. ATTACHMENT OF BED FRAME TO BED CABINET.

Using the lifting hardware (compressed pneumatic/hydraulic rods and other hardware fitting), follow the installation instructions to securely connect the bed frame and the bed cabinet together. This process requires at least 3 (three) adults.

You may need to - LIGHTLY slide forward-backward to adjust and create gap space so as to enable the Pistons to be hooked to both ends of the hanging bolts in the Inner Wall of the L-BRACKET

Fully Secure and Tighten these Bolts at each end of the Pistons.

J.) Attachment of Safety Latches.

Upon completion of Step I above, ensure the entire structure of Bed Frame to Cabinet is fully and securely attached as ONE UNIT - affix the Safety Latches.

These Latches are to be reachable by Adults Only. Thus, the minimum height shall be no less than 5feet (1.5m) from ground.

K.) Warning for Selecting a Mattress

Recommended Mattress weight (55)lb or (25)kg / Recommended Mattress thickness (6)in or (15)cm - Your Murphy Bed is made having taken into consideration the Bed Frame Weight and Mattress weight to pair with the Pistons Newton Force.

Therefore, load your bed with the RECOMMENDED MATTRESS Weights, Size and Thickness as stated here in the assembly instructions.

DO NOT LOAD any heavier and or LARGER and or LIGHTER Mattress than what is recommended here.

L.) MATTRESS PLACEMENT.

Have 1 to 2 persons - place equal strengths to the handles and gently and securely, PULL DOWN the Bed Frame until the Bed Frame is horizontally and level to the ground.

Have the other 2 persons - carry and place the Mattress (within the recommended weight and thickness) and gently place the Mattress on to the Bed Frame.

M.) PISTON NEWTON-LOAD STRENGTH.

You are hereby reminded that when the BED FRAME is EMPTY OF MATTRESS, the Bed Frame may NEED a STRONGER force to be pulled down before you can place the Mattress.

This RESISTANCE to be PULLED DOWN is a normal characteristics of the Pistons Newton-Load force is "in action".

N.) BED STRAP - GUIDE STRAP

Your Murphy Bed may or may not come equipped with a Bed Strap.

This Bed Strap serves as a GUIDE STRAP to help you lift the Bed Frame some 6 inches or so off its resting position. Then use both hands to FULLY LIFT HOIST the Bed Frame to its closing position.

SAFETY REMINDER :

1.) DO NOT USE THE BED STRAP to PULL DOWN TO OPEN the BED FRAME from its CLOSED POSITION.
2.) DO NOT USE THE BED STRAP to PULL-LIFT-HOIST the BED FRAME from the OPENED-HORIZONTAL position, to the CLOSED POSITION.

Both the above may cause injury and or unnecessary strain to your arm(s).

O.) USING YOUR MURPHY BED.

For EVERY USE - exercising Safety Precautionary Measures to ensure the safety of your family members and pets are IMPORTANT.

Therefore, PRIOR TO OPENING / PRIOR TO CLOSING OF YOUR MURPHY BED - Make sure all Children / Non Ambulatory Persons and Pets are at bay.

KEEP CHILDREN and NON-AMBULATORY persons from Unlatching the Safety Latches.

P.) CAUTION : DO NOT BE DISTRACTED During EVERY OPENING and CLOSING of your Murphy Bed.

Every time you Pull to OPEN the Murphy Bed from its closed position OR Lift-Pull to CLOSE the Murphy Bed to stow it into the Bed Cabinet -


- . give these actions your focused and dedicated attention.
- . DURING EVERY OPENING and CLOSING of your Murphy Bed - always ensure you have an Adult Partner close by for added assistance, where necessary.
- . DO NOT OVER EXERT ADDED FORCE to OPEN the Bed or to CLOSE the Bedframe. For if you do, the resistance of the Piston will only make it harder for you to complete the task.
- . TO CLOSE the Murphy Bed : depending on your height - stand some 6inches to 10inches away from the FootBoard edge. Use both your hands and place both hands at about equal distance from the middle of the Bed Frame, spaced at 2 to 3 feet between your hands - GENTLY LIFT-PULL to Close your Murphy Bed.
- . TO OPEN the Murphy Bed : using equal force - place your hands to the installed grab handle and GENTLY PULL towards you to Open. As you pull Open the Murphy Bed - proceed to move backwards, slowly and steadily, so as to give way to the Murphy Bed's OPEN Position.
- . During EVERY OPENING or CLOSING of the Murphy Bed - at about your hip level - you may find that you need to rotate your hand / wrist - take caution here to prevent injury.

. During EVERY OPENING and CLOSING, keep Children and Pets and Non Ambulatory Persons at bay.

. NEVER allow your children to treat this Murphy Bed as a Hide and Seek place of fun or jump on the bed.

. Care & Maintenance - Depending on the frequency of use of your Murphy Bed, it is recommended that you take precautionary Care and Maintenance. It is advisable to conduct NO LESS THAN 2 to 3 checks annually on these mounting points & pistons to ensure that these are securely bolted. Where necessary, use a vacuum cleaner to clear all dust and then wipe down with a damp cloth, then proceed with your maintenance work.

Safety Latches - Your Murphy Bed comes with the Safety Latch. These are to be attached at, both the TOP LEFT and TOP RIGHT hand upper portion, minimum of 5 feet (1.5m) from ground, of the Bed Frame / Bed Cabinet. Monitor and Inspect these frequently.

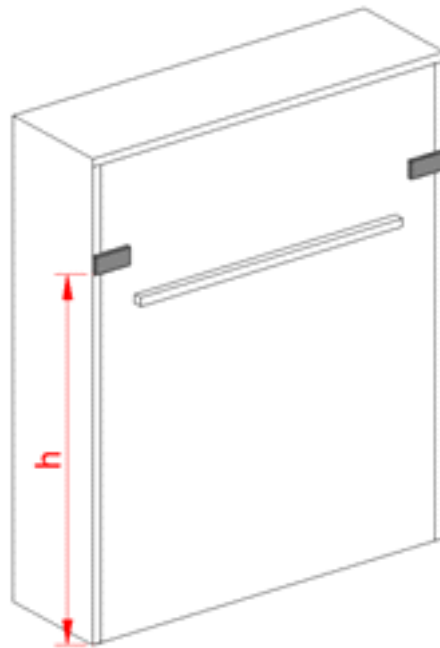

- Whenever NOT in use and after the Murphy Bed has been LIFTED and stowed in its CLOSED POSITION - ALWAYS LATCH UP.

Frequently Asked Questions. Malfunctioned Pistons.

How do you know when the Murphy Bed's Piston has malfunctioned?

It would be quite evident in that :

- a.) the Bed Frame may become LOPSIDED and
- b.) the Lift-PULL force to CLOSE may be "heavier" than before.

IMMEDIATELY - STOP USING YOUR MURPHY BED.


SEEK and CONSULT professional maintenance service to ascertain the problem and repair and or have the pistons changed.

ASSEMBLY INSTRUCTION

SKU CODE: (N708P464784-N708P464785-N708P464786)










INSTRUCTION DE MONTAGE

CODE SKU: (N708P464784-N708P464785-N708P464786)

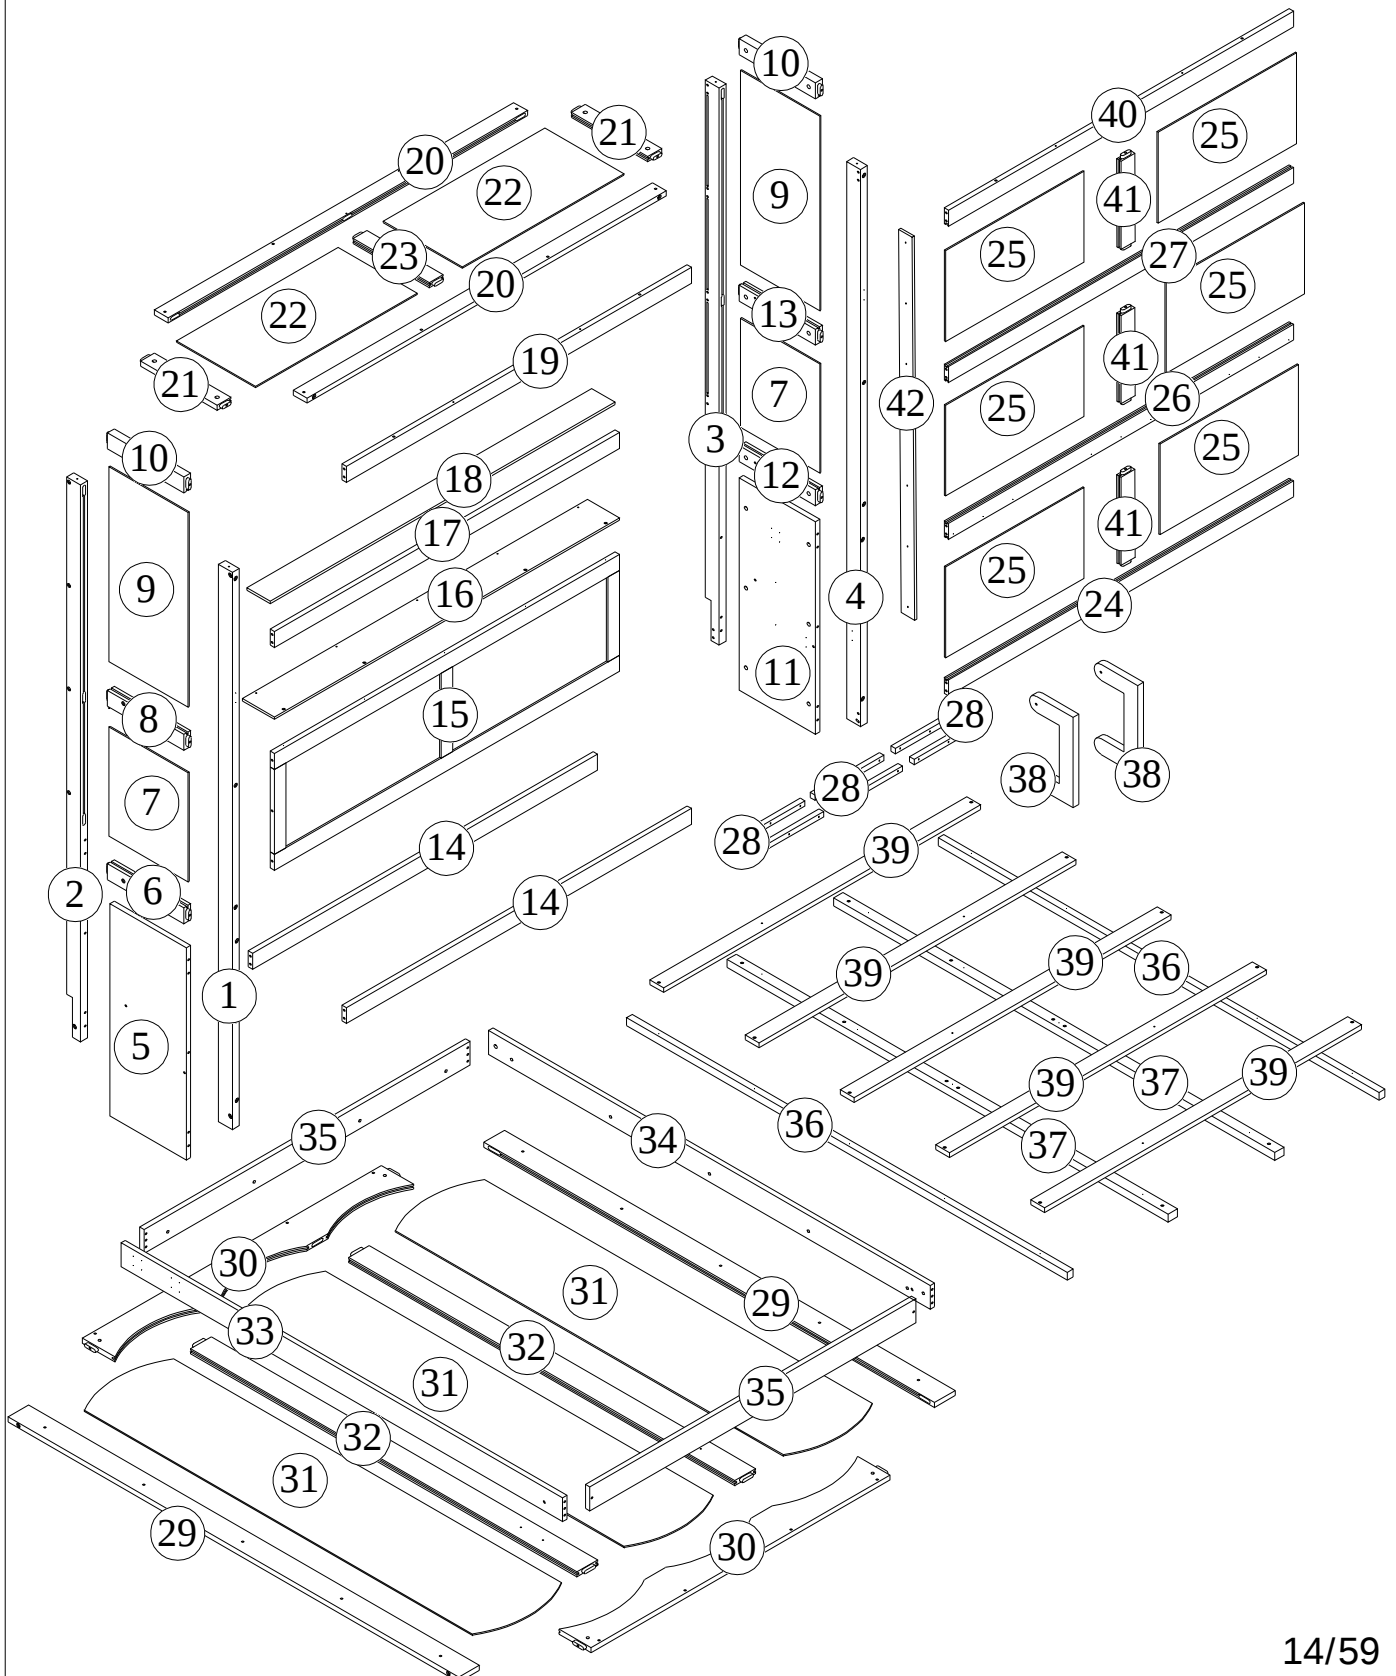






Part List (Box 1-N708P464784)

Liste des pcs

1		2		3	
Front-left leg- 1 pc Pied avant gauche- 1 pc		Back-left leg- 1 pc Pied arrière gauche- 1 pc		Back-left leg- 1 pc Pied arrière droit- 1 pc	
4		6		8	
Front-right leg- 1 pc Pied avant droit- 1 pc		Lower left side brace- 1 pc Renfort latéral gauche inférieur- 1 pc		Middle left side brace- 1 pc Renfort latéral gauche central- 1 pc	
12		13		28	
Lower right side brace- 1 pc		Middle right side brace- 1 pc Renfort latéral droit central- 1 pc		Shelf support- 6 pcs Support d'étagère- 6 pcs	
29		32		37	
Upper Bed Side Rail - 2 pcs Longeron latéral supérieur du lit - 2pcs		Middle mattress crossbar - 2 pcs Traverse centrale du matelas - 2 pcs		Slat support bracket- 2 pcs Support de latte- 2 pcs	
36		10		30	
Slat support bracket- 2 pcs Support de latte- 2 pcs		Upper left side brace- 2 pcs Renfort latéral gauche supérieur- 2 pcs		Lower Bed Side Rail - 2 pcs Longeron latéral inférieur du lit - 2pcs	









Part List (Box 2-N708P464785)

Liste des pcs


















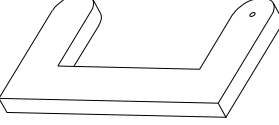
14  Lower cross rail- 2 pcs Traverse inférieure- 2 pcs	17  Middle cross rail- 1 pc Traverse centrale- 1 pc	18  Shelf panel 2- 1 pc Panneau d'étagère 2- 1 pc
19  Upper cross rail- 1 pc Traverse supérieure- 1 pc	20  Top cross rail- 2 pcs Traverse de toit- 2 pcs	21  Top brace- 2 pcs Renfort de toit- 2 pcs
22  Top panel- 2 pcs Panneau de toit- 2 pcs	23  Top brace- 1 pc Renfort de toit- 1 pc	24  Lower rear cross rail- 1 pc Traverse arrière inférieure- 1 pc
25  Rear back panel- 6 pcs Panneau latéral gauche central- 6 pcs	31  Mattress base panel - 3 pcs Panneau support matelas - 3 pcs	33  Upper Bed Side Rail - 1 pc Longeron latéral supérieur du lit - 1 pc
34  Upper Bed Side Rail - 1 pc Longeron latéral supérieur du lit - 1 pc	38  U-leg - 2 pcs Pied en U - 2 pcs	41  Top brace- 3 pcs Renfort de toit- 3 pcs


Part List (Box 3-N708P464786)

Liste des pcs

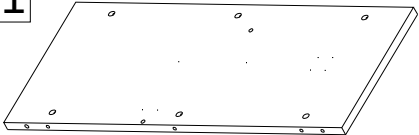5  Lower left side panel- 1 pc Panneau latéral gauche inférieur- 1 pc	7  Middle left side panel- 2 pcs Panneau latéral gauche central- 2 pcs	39  Slat- 5 pcs Latte- 5 pcs
40  Upper cross rail- 1 pc Traverse supérieure- 1 pc	9  Upper left side panel- 2 pcs Panneau latéral gauche supérieur- 2 pcs	42  Top brace- 1 pc Renfort de toit- 1 pc
11  Lower right side panel- 1 pc Panneau latéral droit inférieur- 1 pc	15  Headboard frame- 1 pc Cadre de tête de lit- 1 pc	16  Shelf panel 1- 1 pc Panneau d'étagère 1- 1 pc
26  Middle rear cross rail- 1 pc Traverse arrière centrale- 1 pc	27  Upper rear cross rail- 1 pc Traverse arrière supérieure- 1 pc	35  Upper Bed Side Rail - 2 pcs Longeron latéral supérieur du lit - 2 pcs














Hardware List (Box 1 - N708P464784)

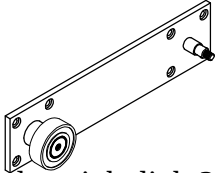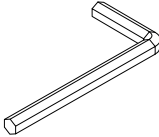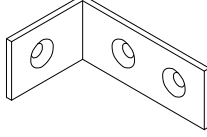
A  Ø1/4" x 100 mm Hex-Head bolts 26 pcs Boulons à tête hexagonale 26 pcs	B  Ø1/4" x 12 mm Horizontal-Hole bolts 74 pcs Boulons à trous horizontaux 74 pcs	C  Ø1/4" x 80 mm Hex-Head bolts 2 pcs Boulons à tête hexagonale 2 pcs
D  M4 x 30 mm Wood Screws 12 pcs Vis à bois 12 pcs	E  Ø8 x 30 mm Wood dowel 38 pcs Cheville en bois 38 pcs	F  M4 x 15 mm Wood Screws 48 pcs Vis à bois 48 pcs
G  Ø1/4" x 70 mm Hex-Head bolts 20 pcs Boulons à tête hexagonale 20 pcs	H  1/4" x40 Screws 8 pcs Vis 8 pcs	I  M4 x 20 mm Wood Screws 23 pcs Vis à bois 23 pcs
J  M4 x 15 mm Wood Screws 36 pcs Vis à bois 36 pcs	K  Ø1/4" x 120 mm Hex-Head bolts 4 pcs Boulons à tête hexagonale 4 pcs	L  Ø1/4" x 60 mm Hex-Head bolts 22 pcs Boulons à tête hexagonale 22 pcs
M  M4 x 35 mm Wood Screws 32 pcs Vis à bois 32 pcs	N  Metal straight link-2pcs Maillon droit en métal - 2 pièces	O  Piston -2pcs Piston - 2 pièces
P  Metal corner link-1pc Lien d'angle en métal - 1 pièce	Q  Metal corner link-1pc Lien d'angle en métal - 1 pièce	R  Nut-4pcs Écrou - 4 pièces
S  M4 x 40 mm Wood Screws 20 pcs Vis à bois 20 pcs	AO  Allen Key 4pcs Clé Allen 4 pièces	AB  Angle Metal - 4pcs Angle en métal - 4 pièces



Assembly Tools Required (Not Included)
Outils d'assemblage requis (non inclus)

Hardware List (Box 1 - N708P464784)

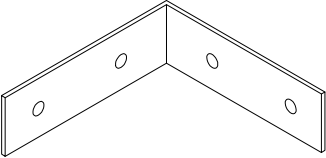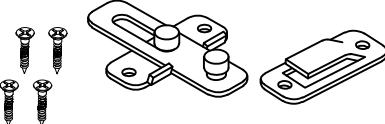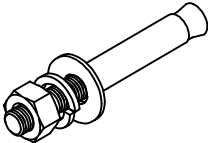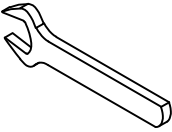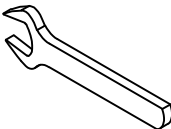
T  Angle Metal-2 pcs Angle en métal-2 pcs	U  Handle - 2pcs Poignée	V  Ø1/3" x 40 mm Hex-Head bolts 2pcs Boulons à tête hexagonale 2 pièces
W  Ø1/4" x 40 mm Hex-Head bolts 2pcs Boulons à tête hexagonale 2 pièces	AL  M5 x 50 mm Wood Screws 6 pcs Vis à bois 6 pièces	Y  Ø20 / Ø6 x 2 mm Washer 2 pcs Rondelle 2 pièces
AK  Angle Metal - 3pcs Angle en métal - 3 pièces	AJ  Metal link-2pcs Lien métallique - 2 pièces	AA  Angle Metal-6 pcs Angle en métal-6 pcs
DD  Ø6 x 75mm Iron wall socket -6pcs	EE  K10 Wrench - 1pc	BB  Ø18 / Ø6 x 1.5 mm Iron Washer 6 pcs
CC  K13 Wrench - 1pc	FF  Angle Metal-2 pcs Angle en métal-2 pcs	




Assembly Tools Required (Not Included)
Outils d'assemblage requis (non inclus)

STEP-ÉTAPE 1 :


E	C	B	A
			
2pcs	1pc	6pcs	5pcs

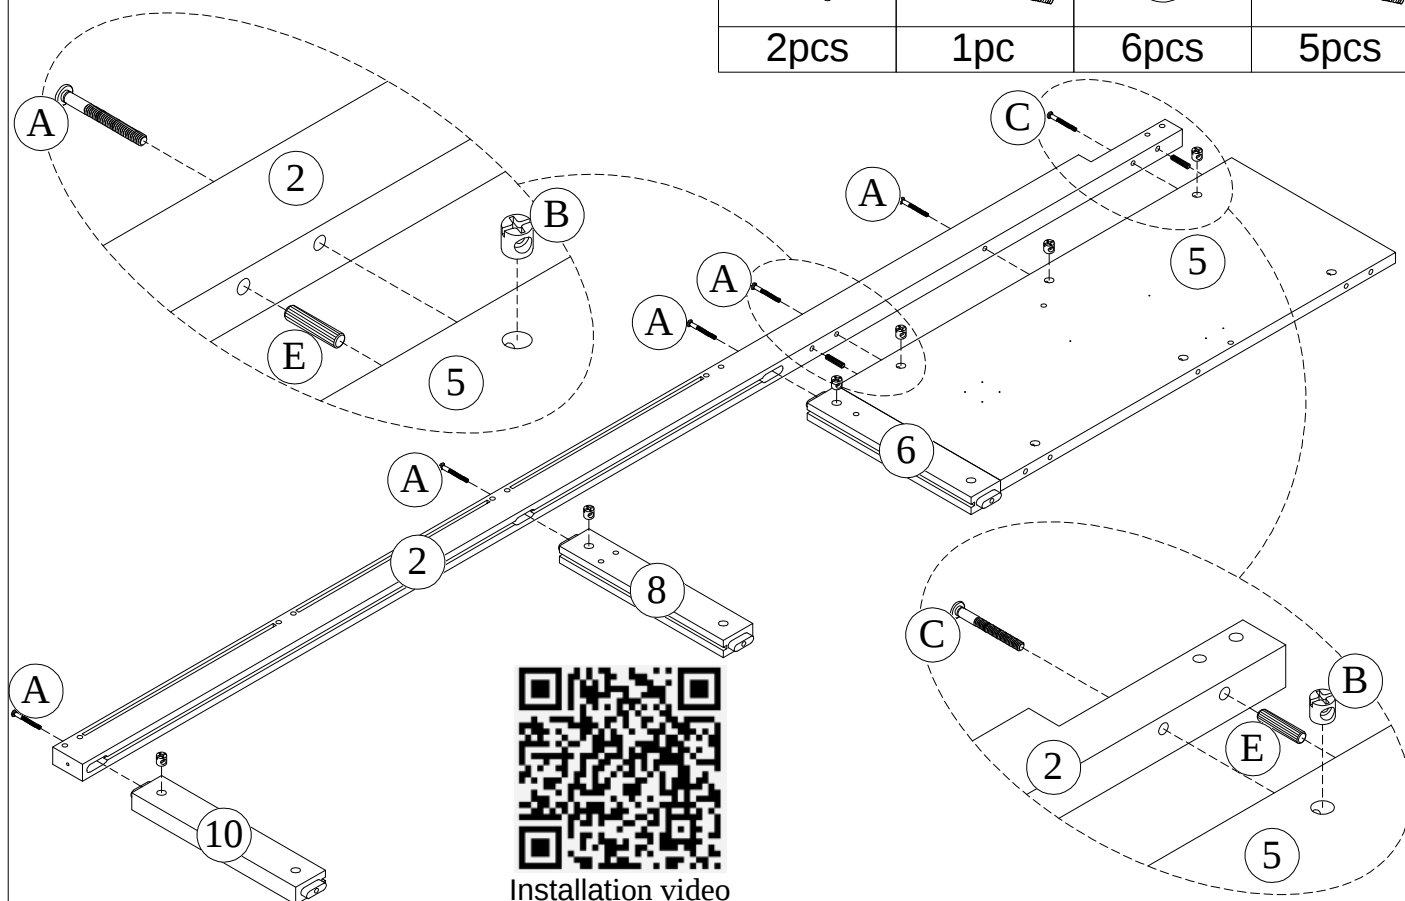


STEP-ÉTAPE 2 :

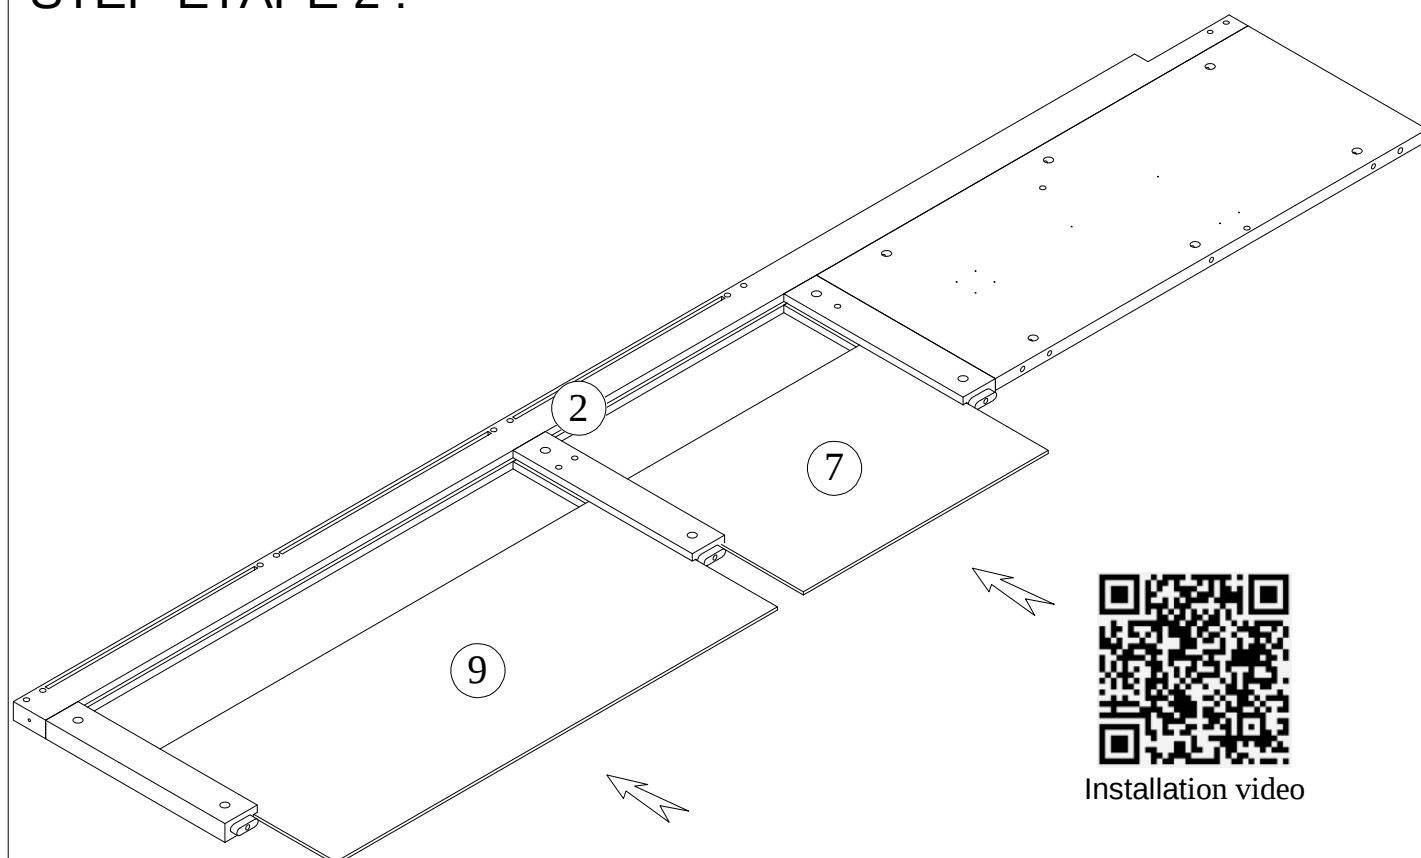


STEP-ÉTAPE 3 :

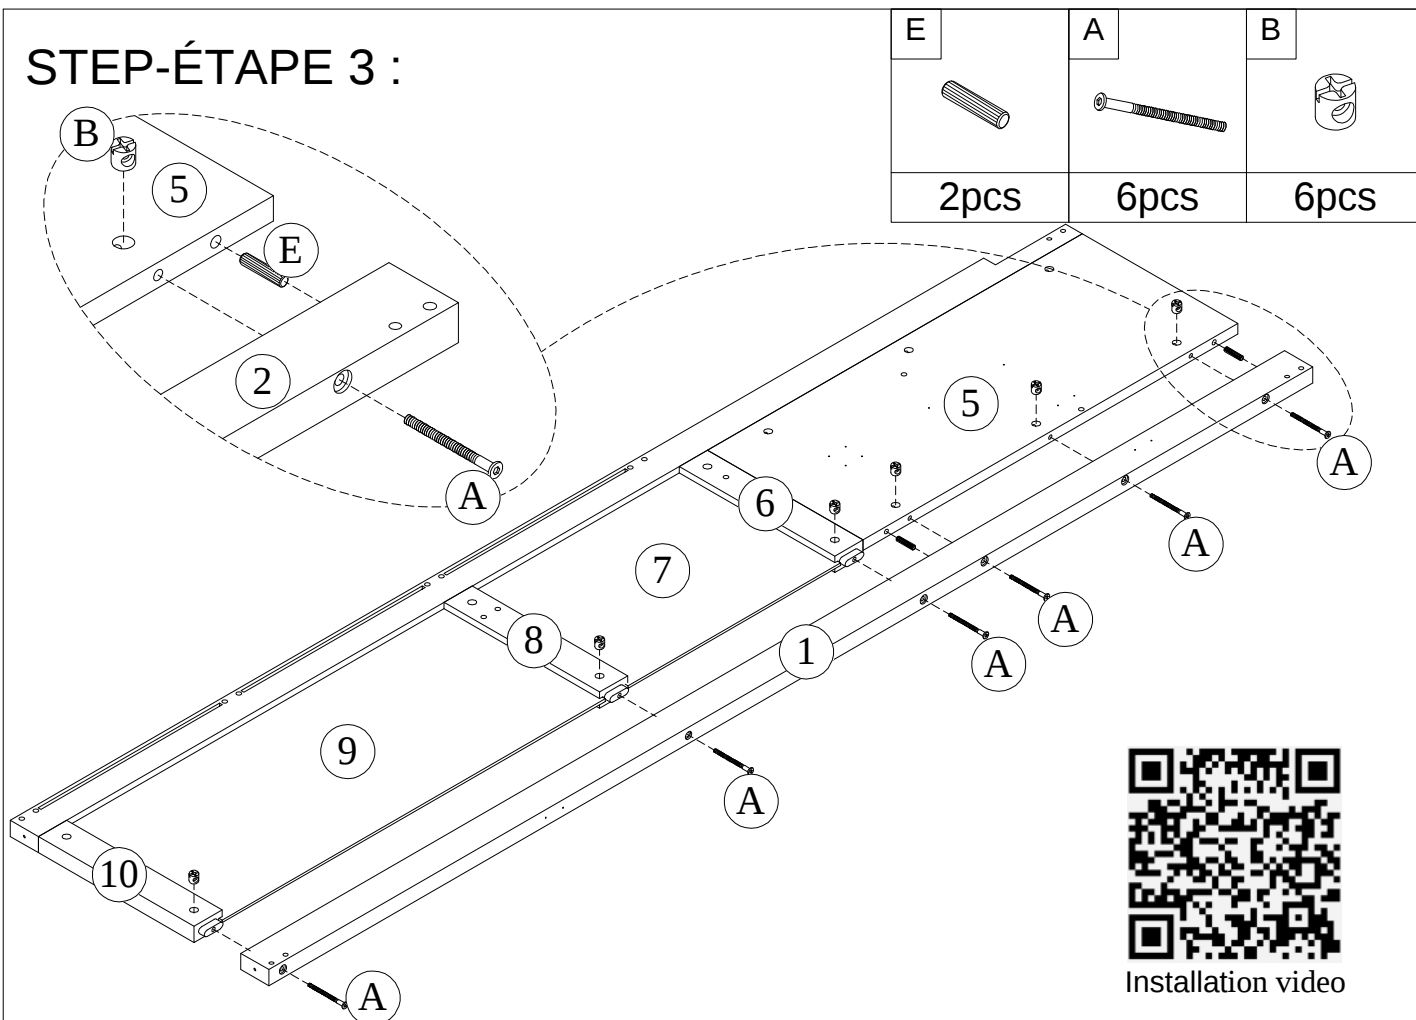

STEP-ÉTAPE 4 :

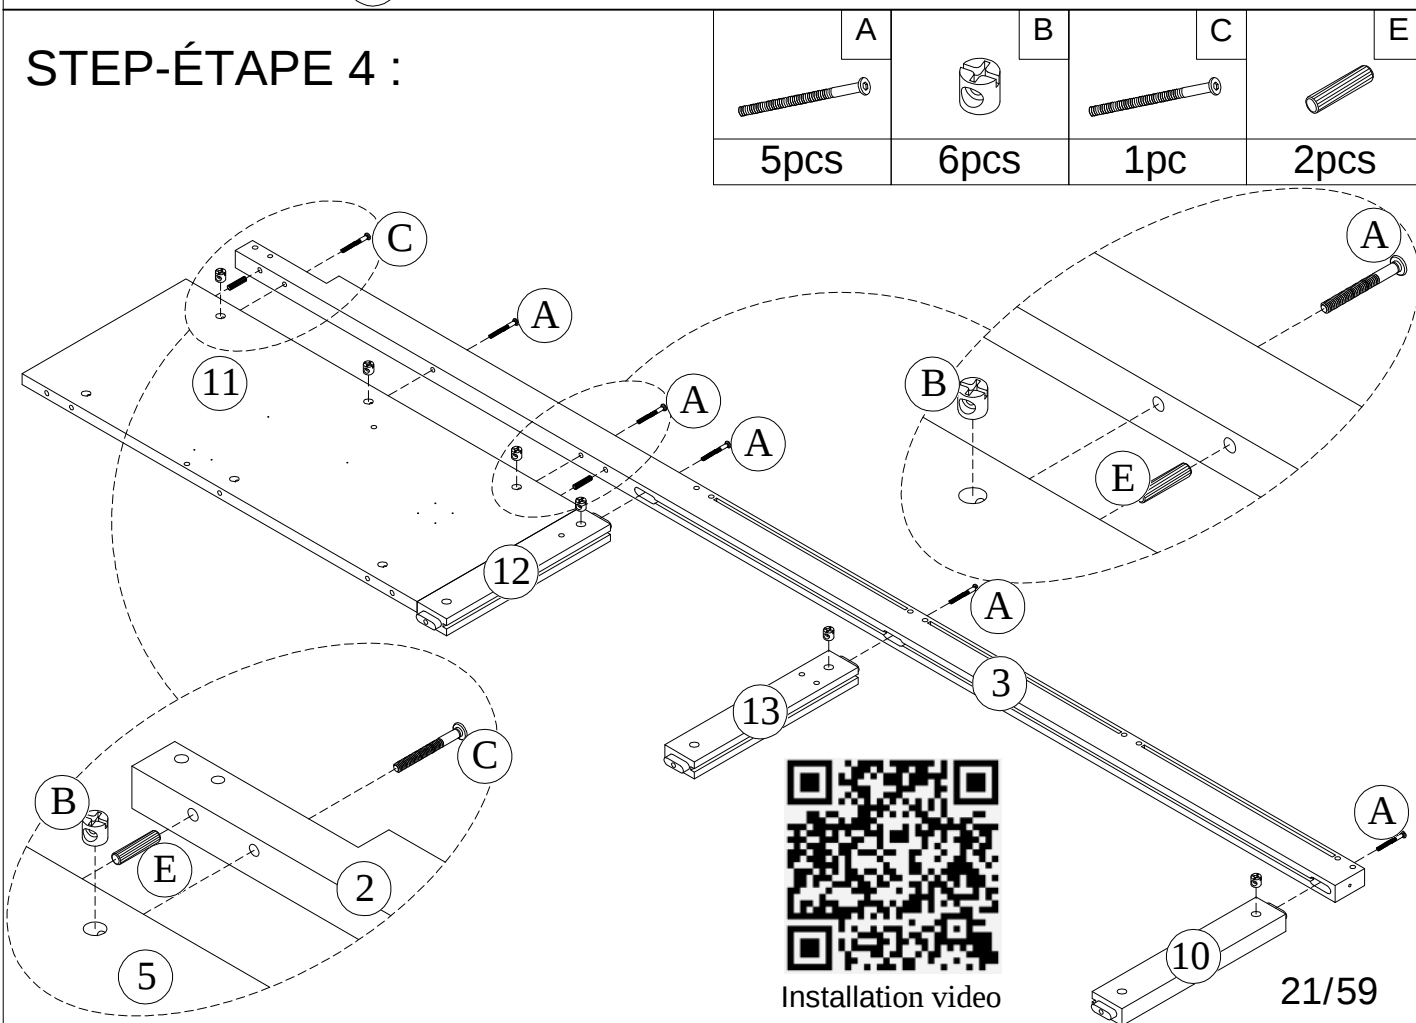


STEP-ÉTAPE 5 :

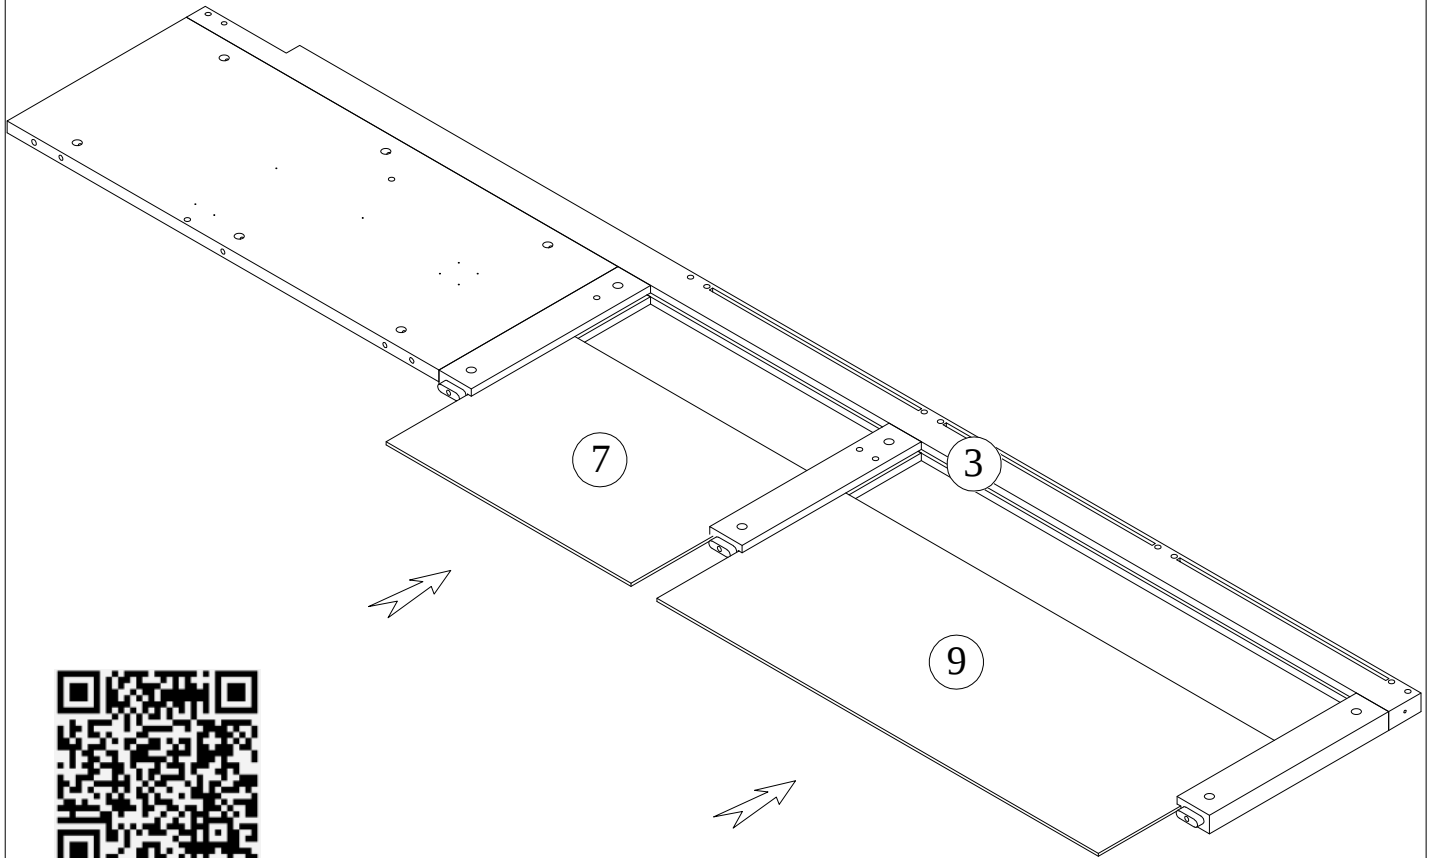

Installation video

STEP-ÉTAPE 6 :

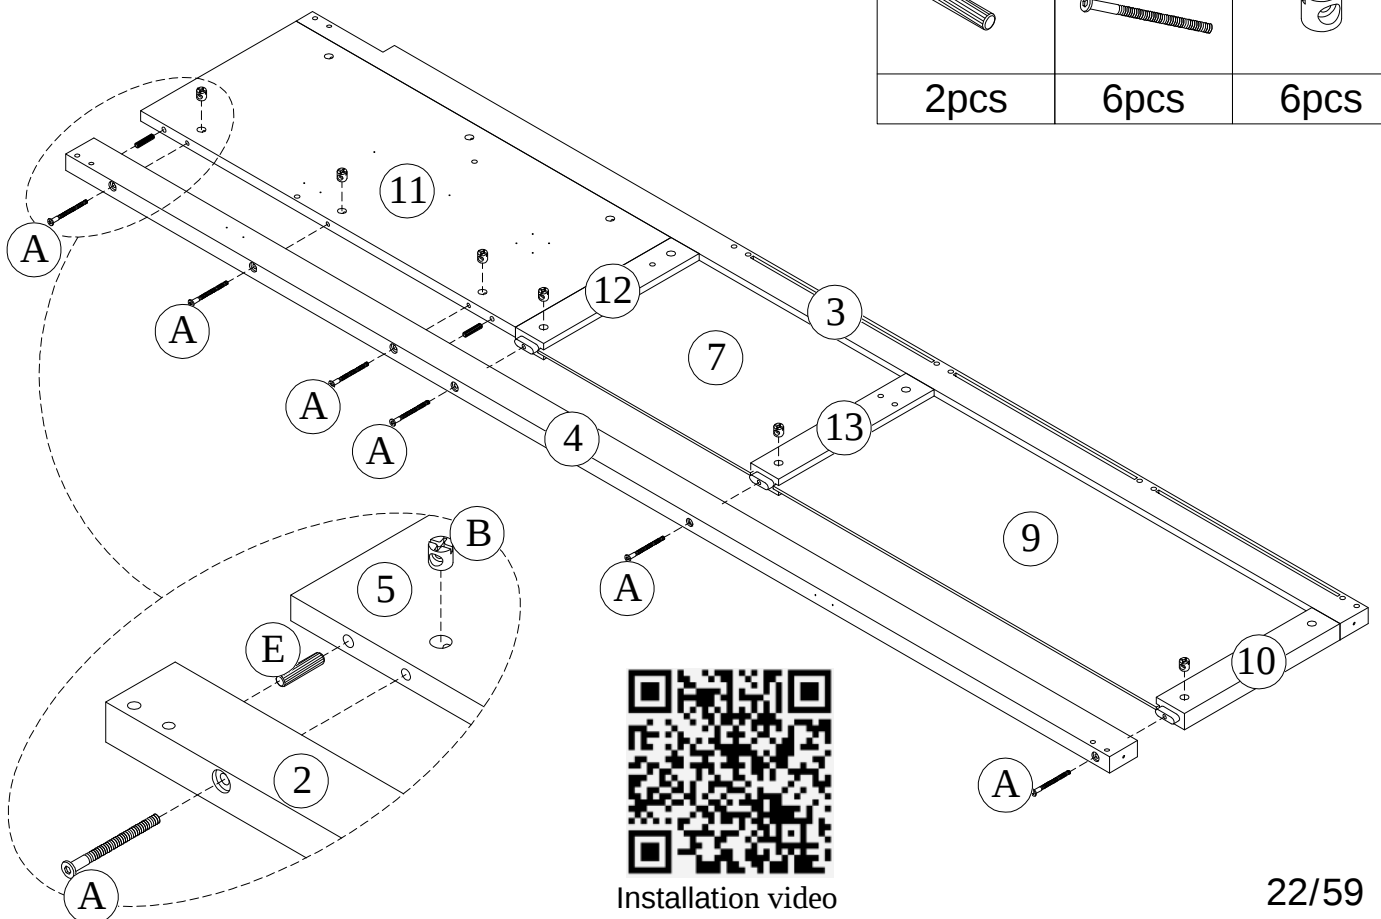

E	A	B
2pcs	6pcs	6pcs




Installation video


STEP-ÉTAPE 7 :



Installation video

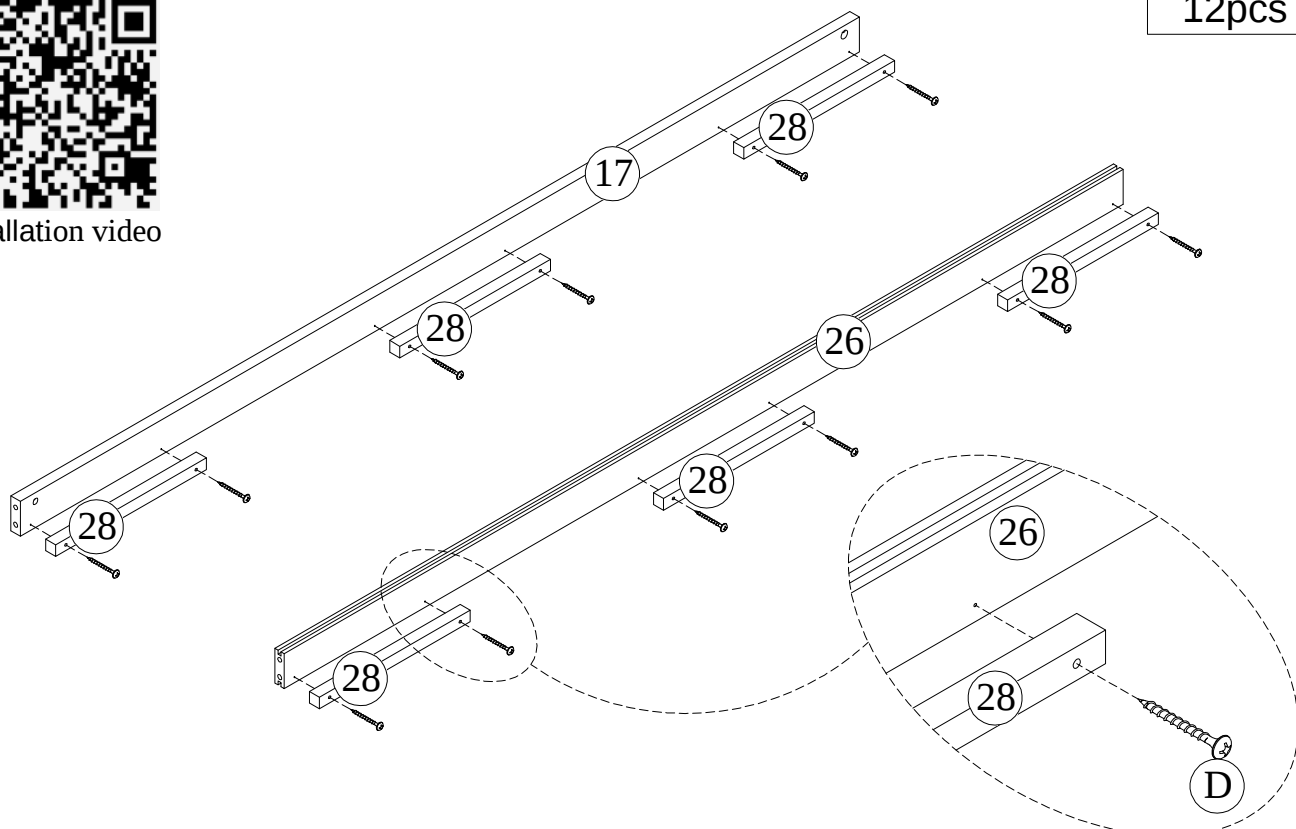

D




12pcs

STEP-ÉTAPE 8 :




Installation video

A	B	F
2pcs	2pcs	1pc

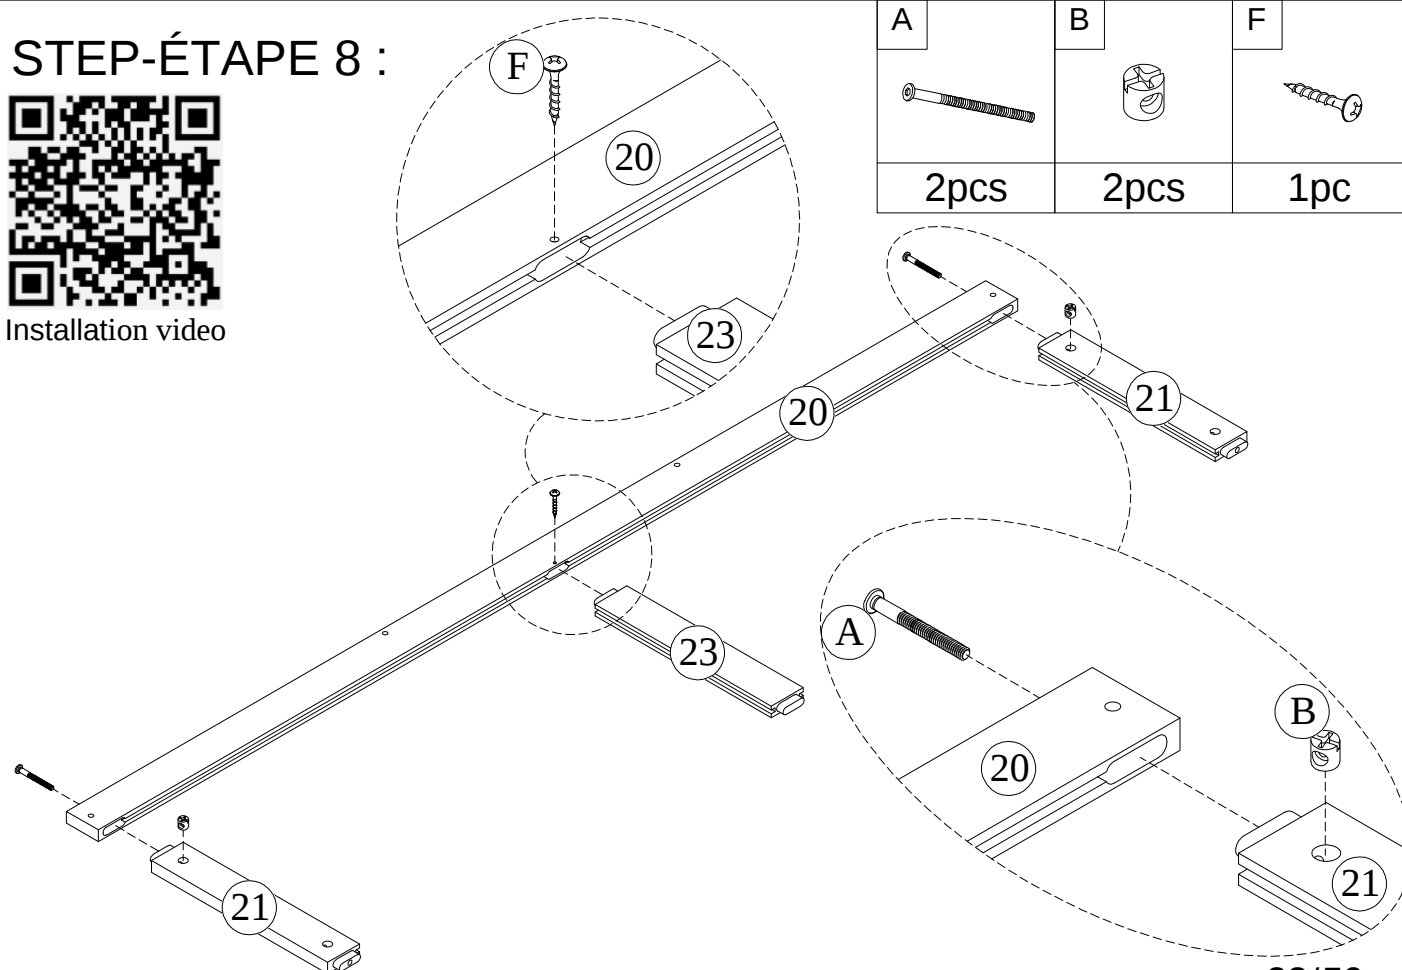

23/59

STEP-ÉTAPE 9 :

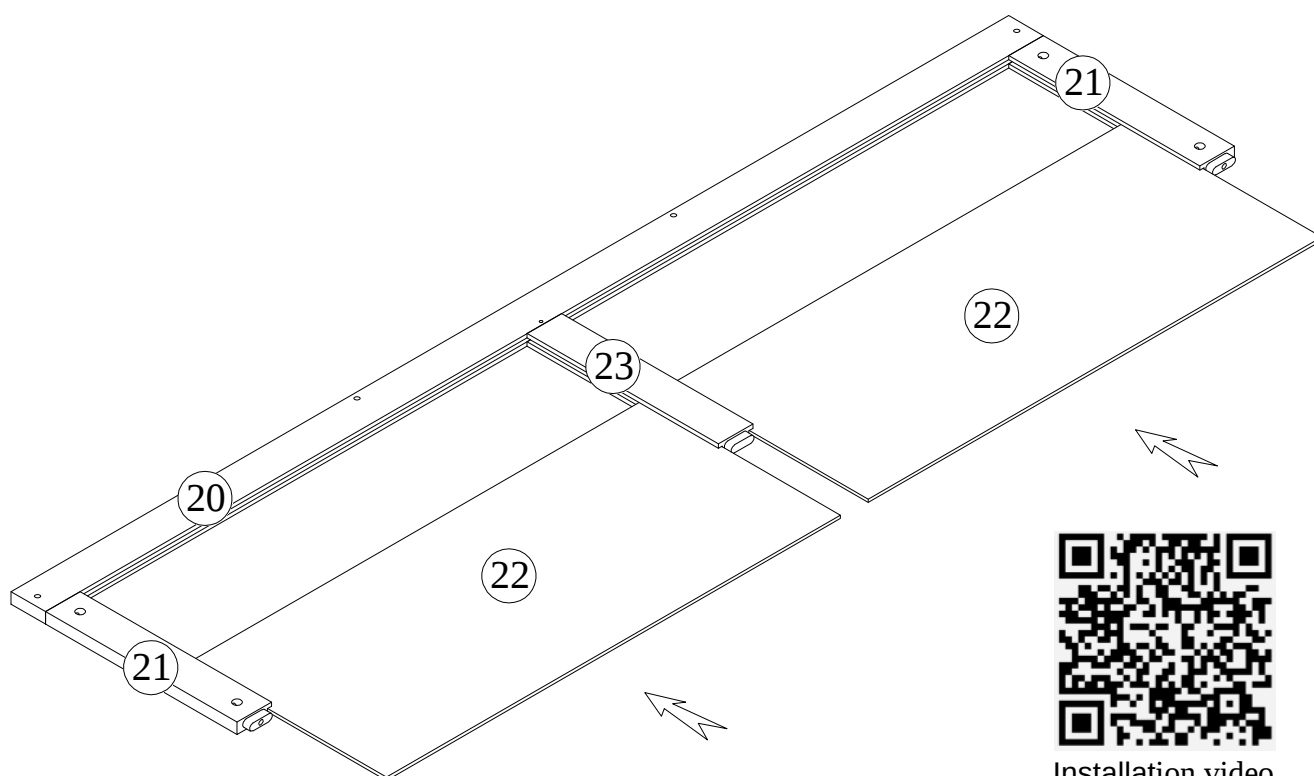


Installation video


STEP-ÉTAPE 10 :



Installation video

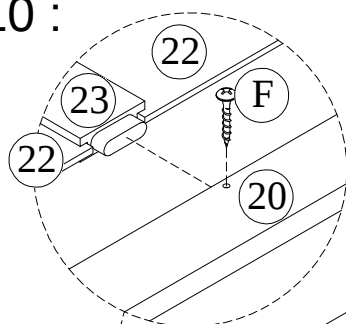


A	B	F
		
2pcs	2pcs	1pc

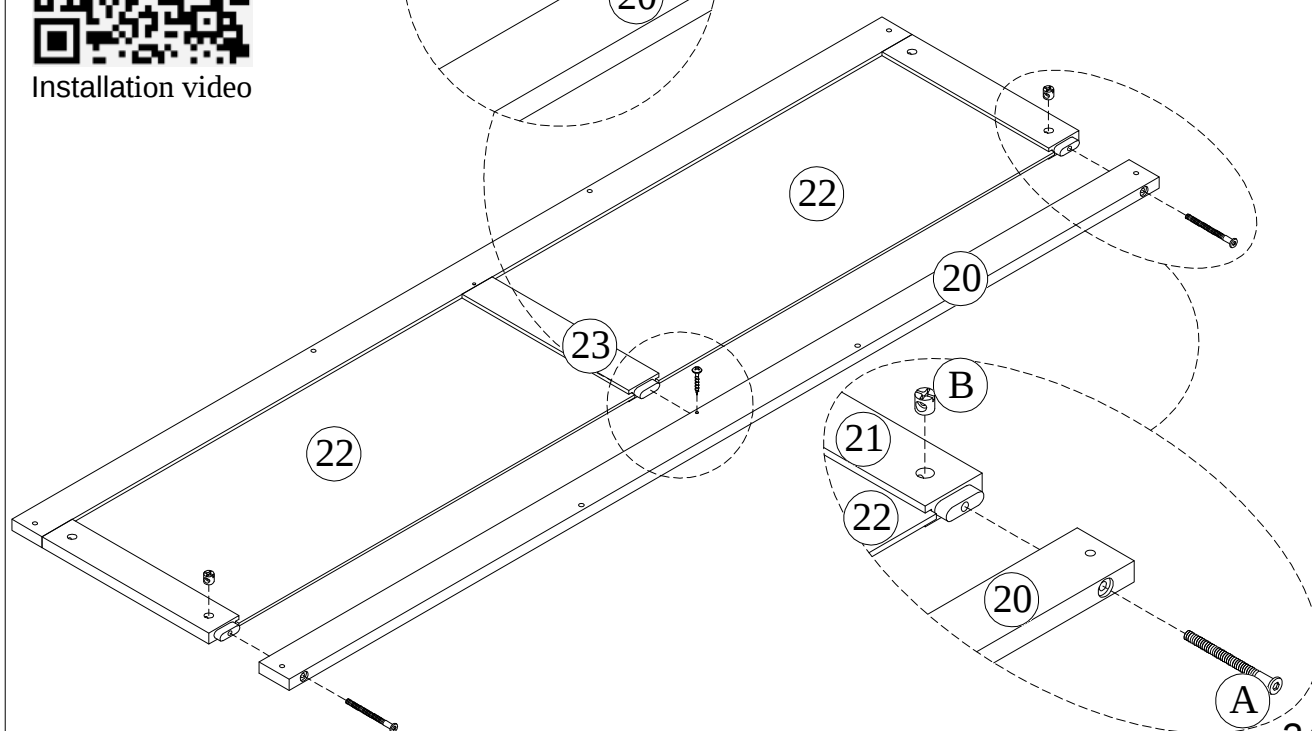

STEP-ÉTAPE 11 :

E	G	B
		
8pcs	10pcs	10pcs

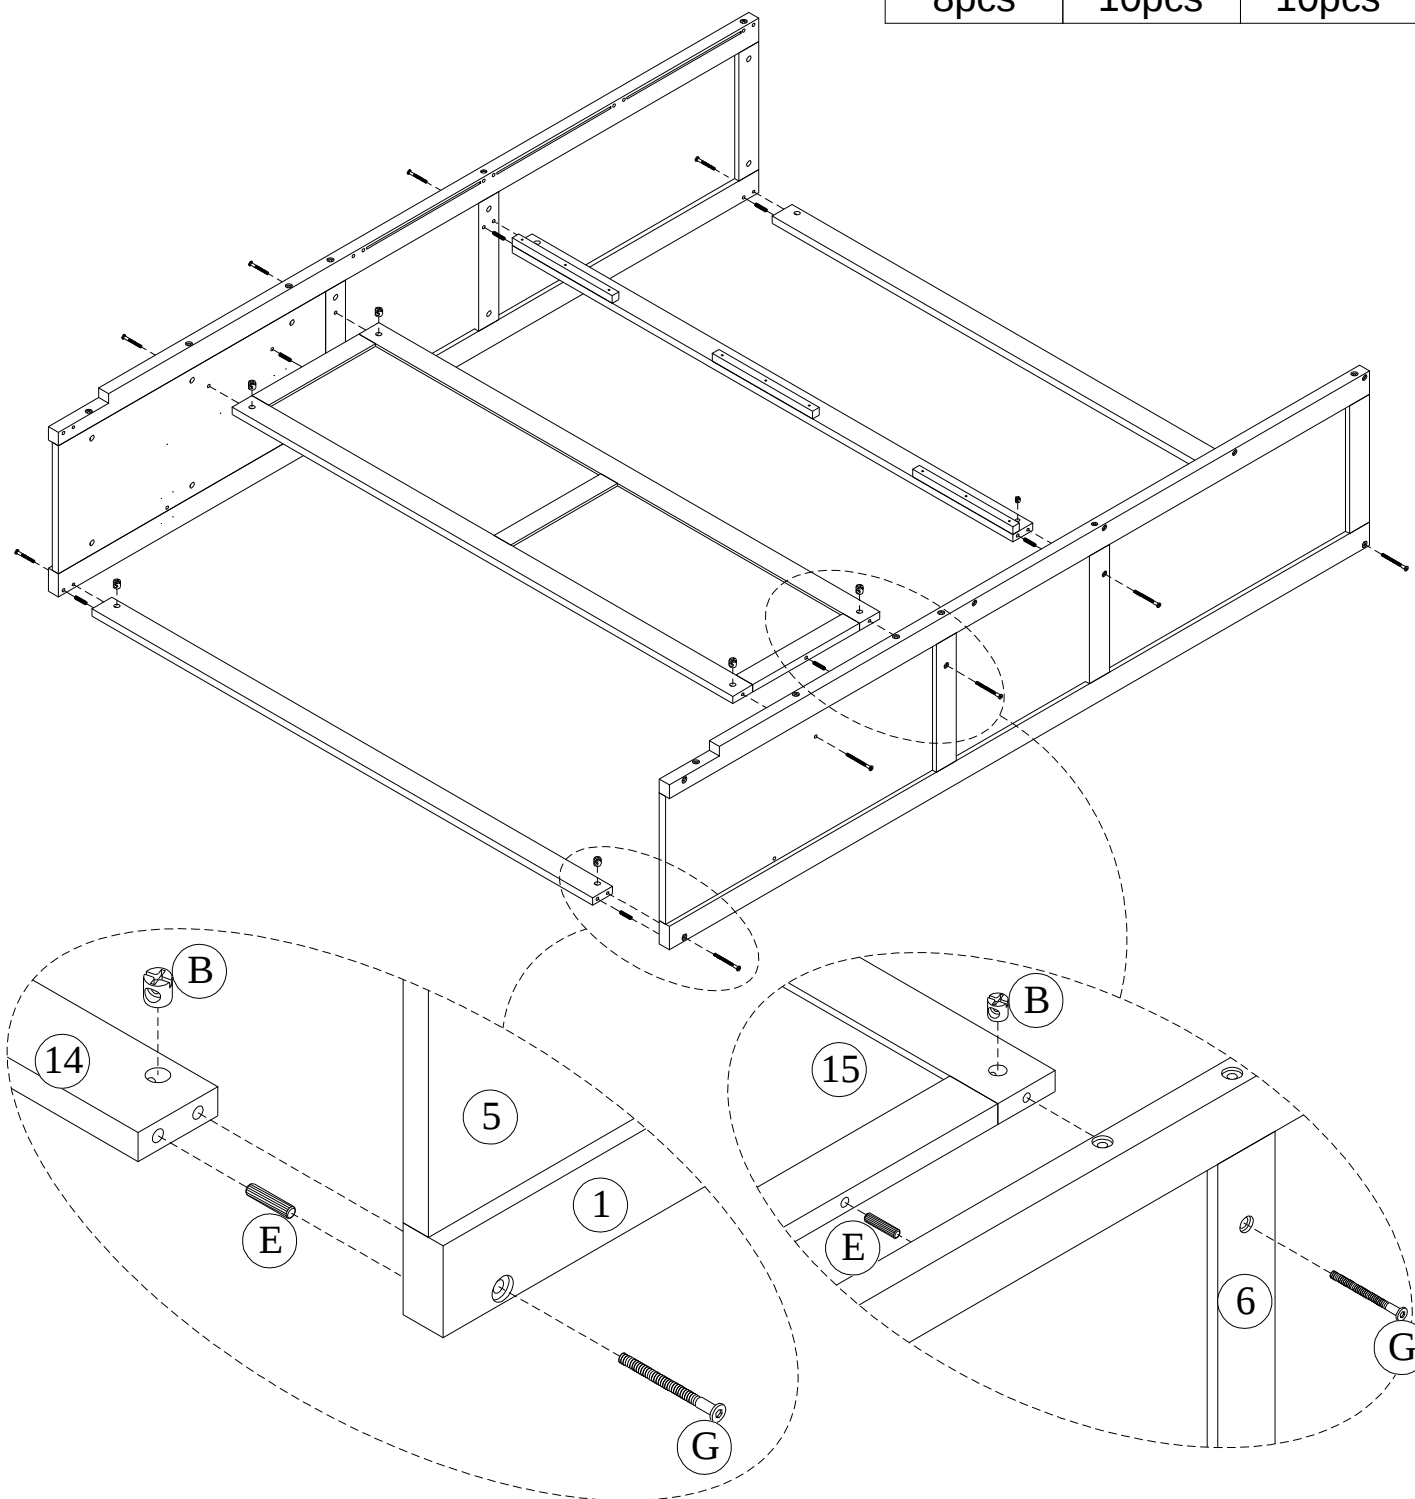


Installation video

STEP-ÉTAPE 12 :


E	G	B
		
4pcs	4pcs	4pcs



Installation video

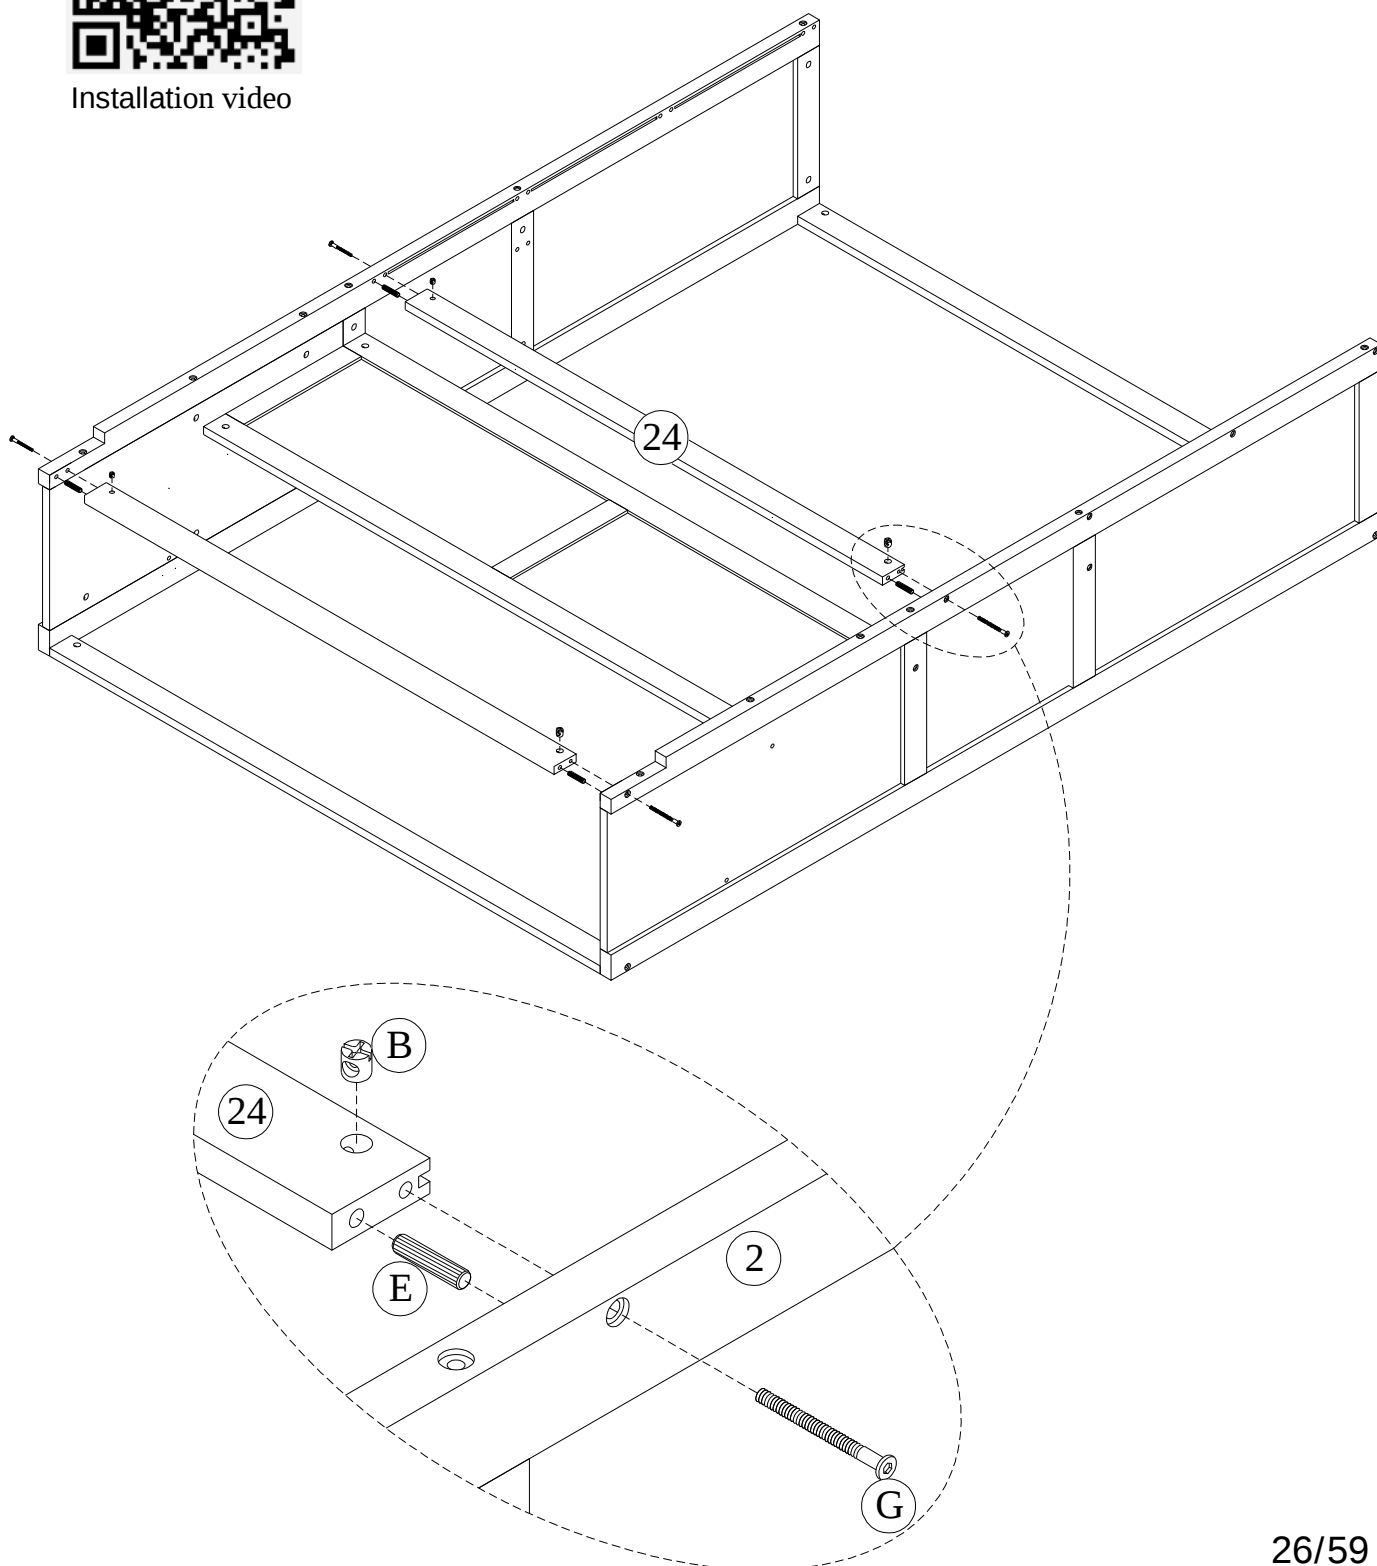



STEP-ÉTAPE 13 :

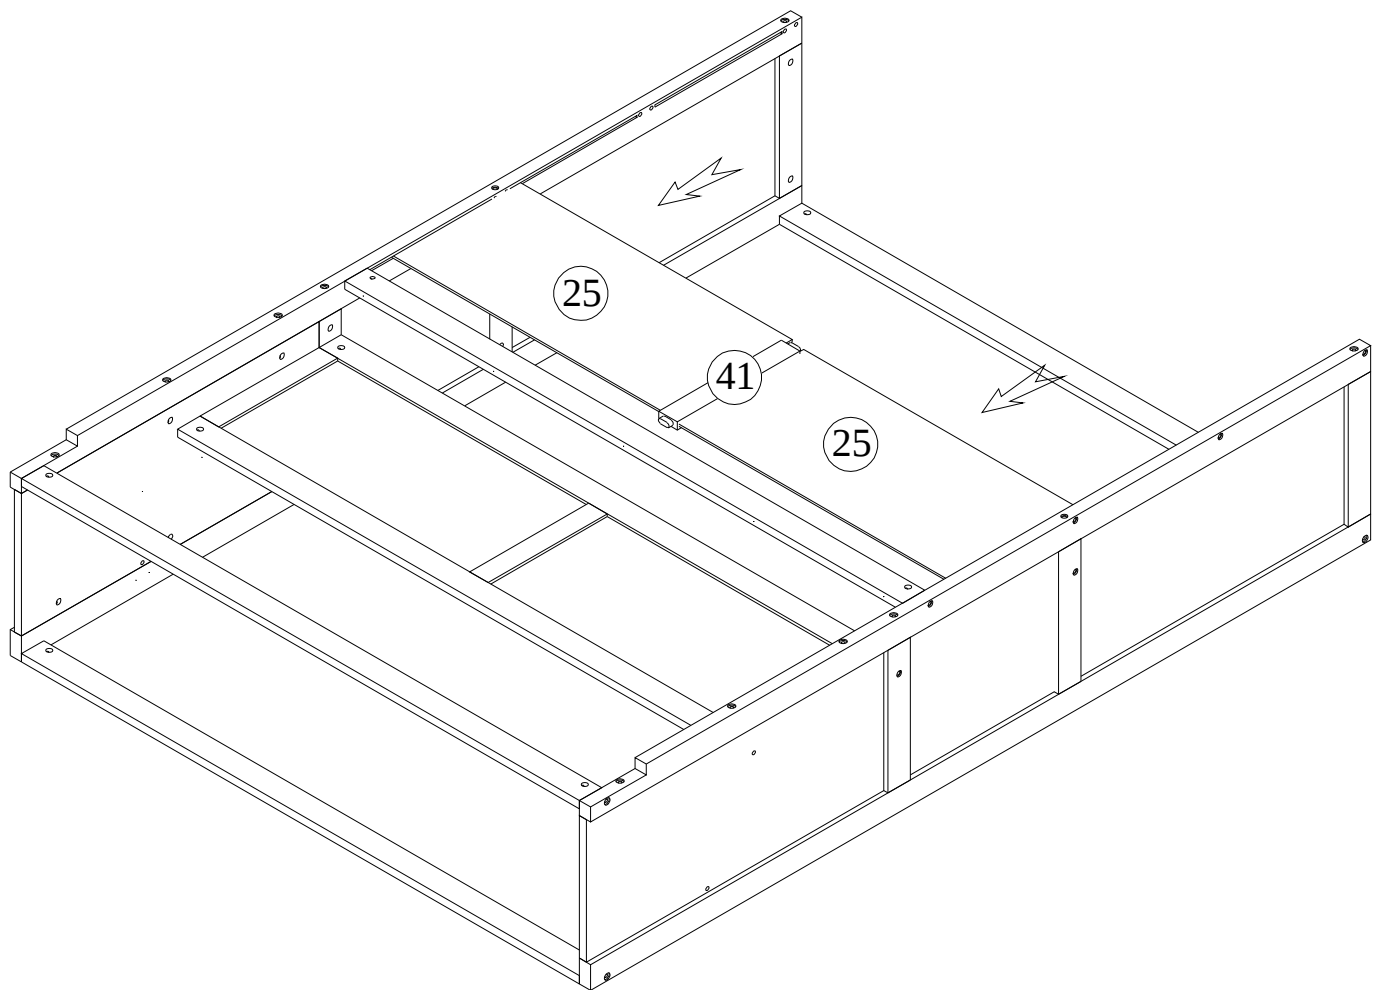

Installation video

STEP-ÉTAPE 14 :


E	G	B
		
6pcs	6pcs	6pcs

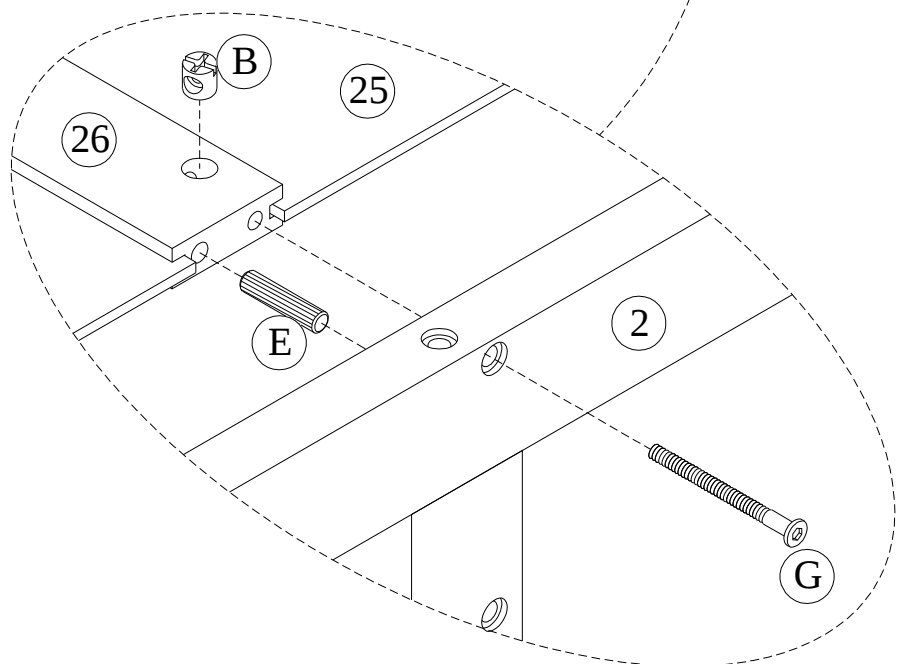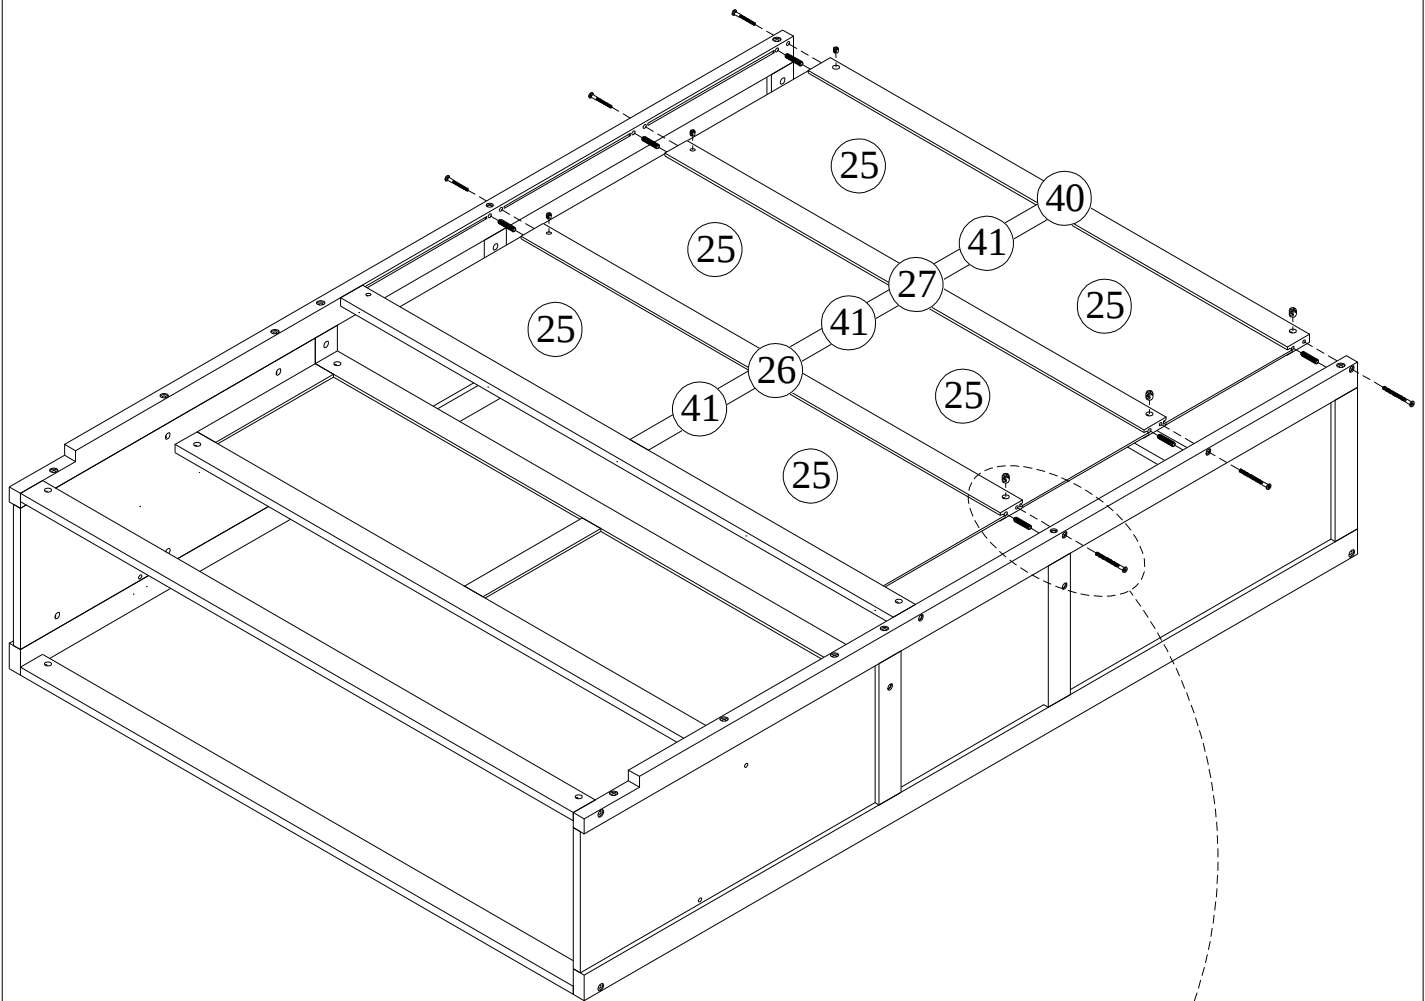


Installation video

STEP-ÉTAPE 15 :

I



7pcs

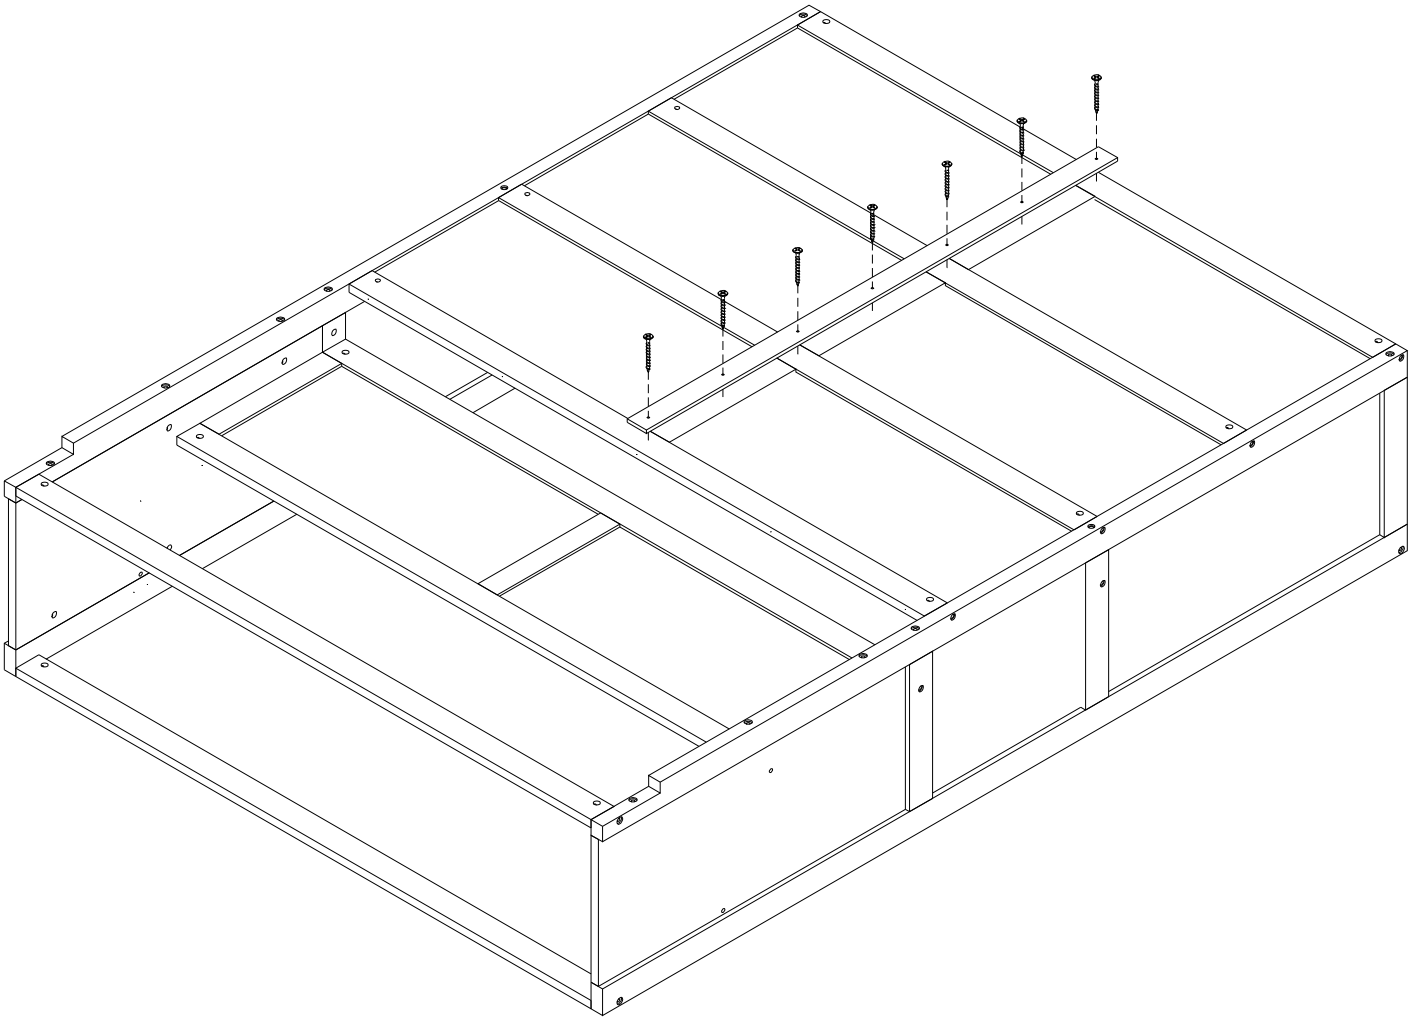


Installation video

STEP-ÉTAPE 16 :



Installation video

H	E
	
8pcs	4pcs

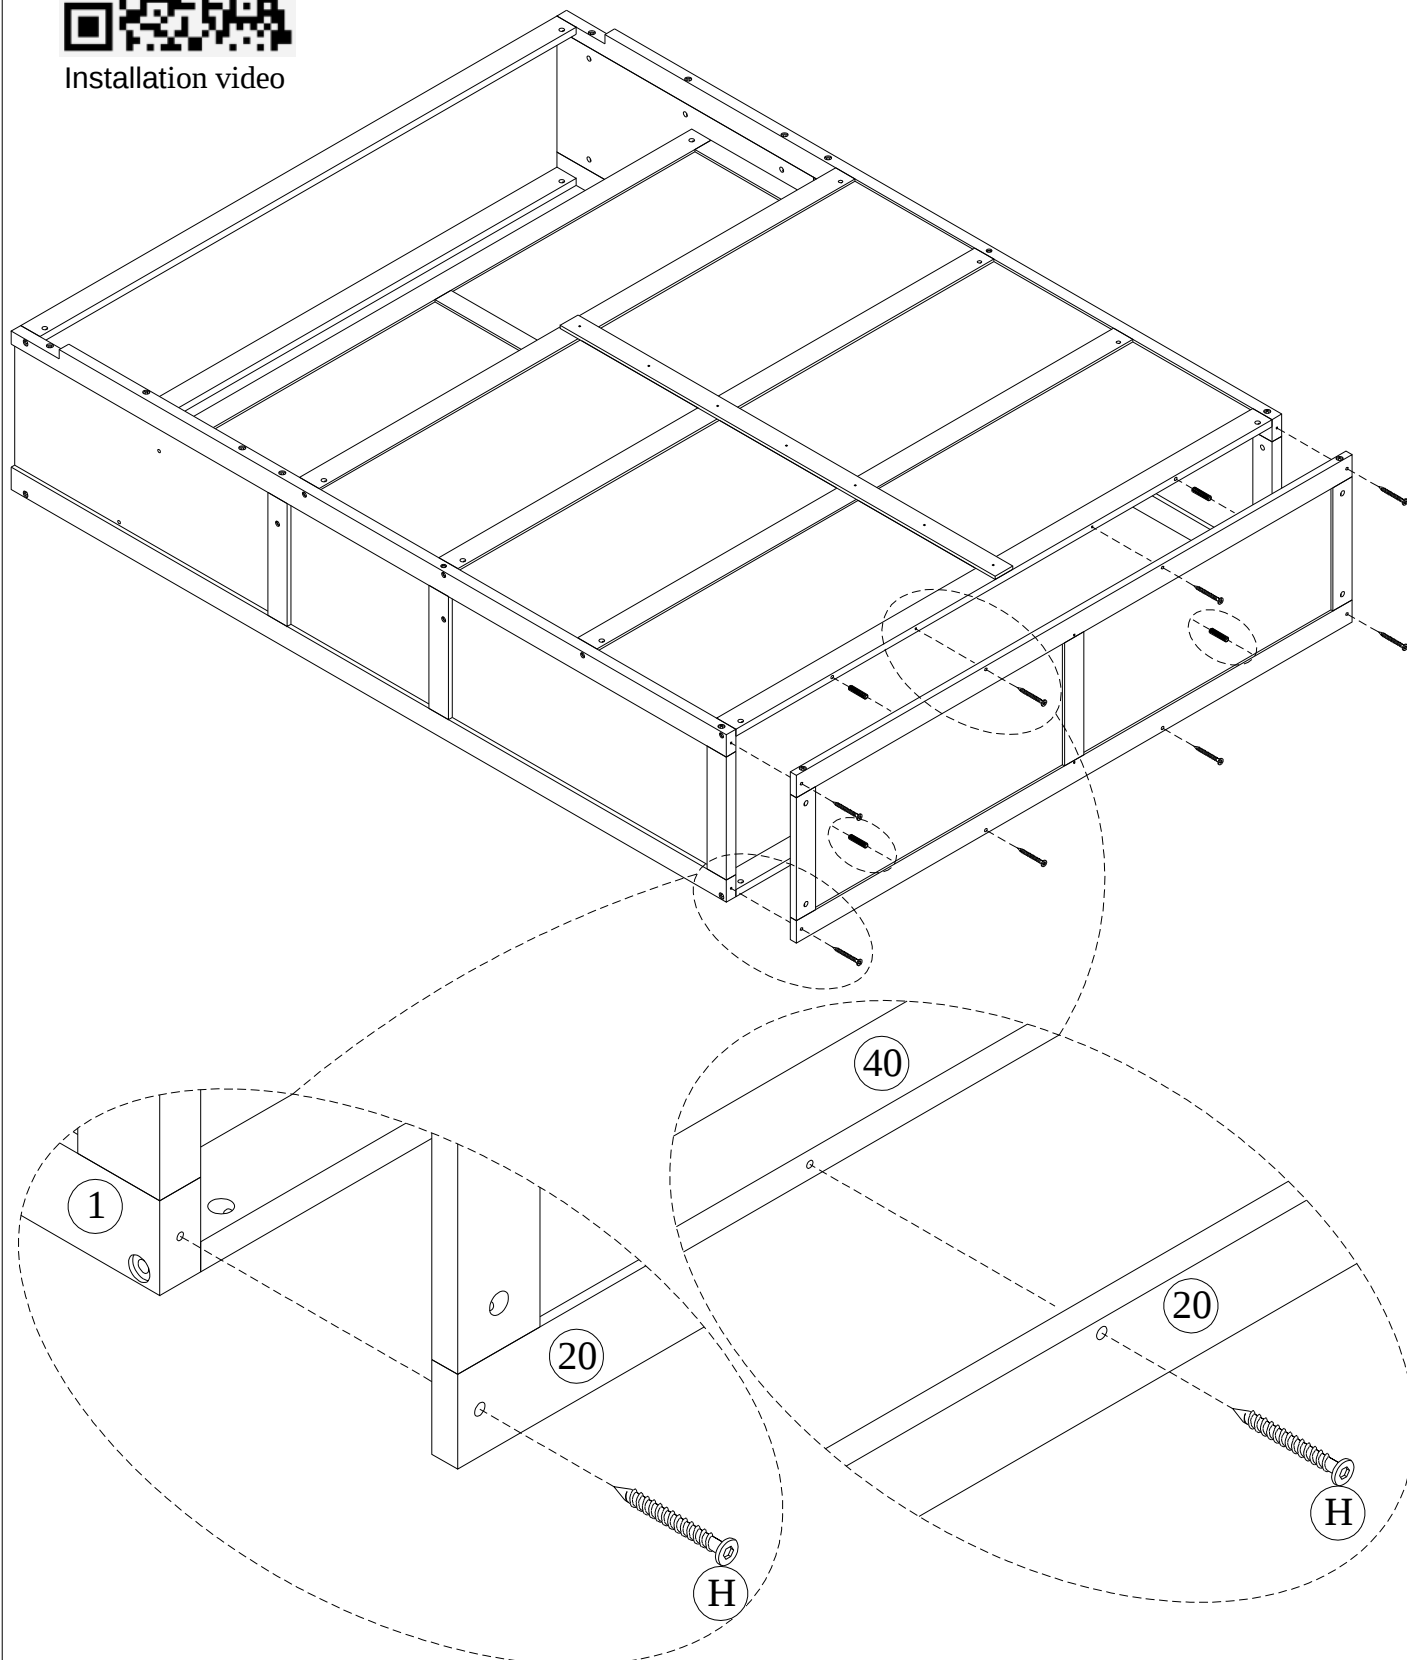

STEP-ÉTAPE 17 :




Installation video

I





5pcs

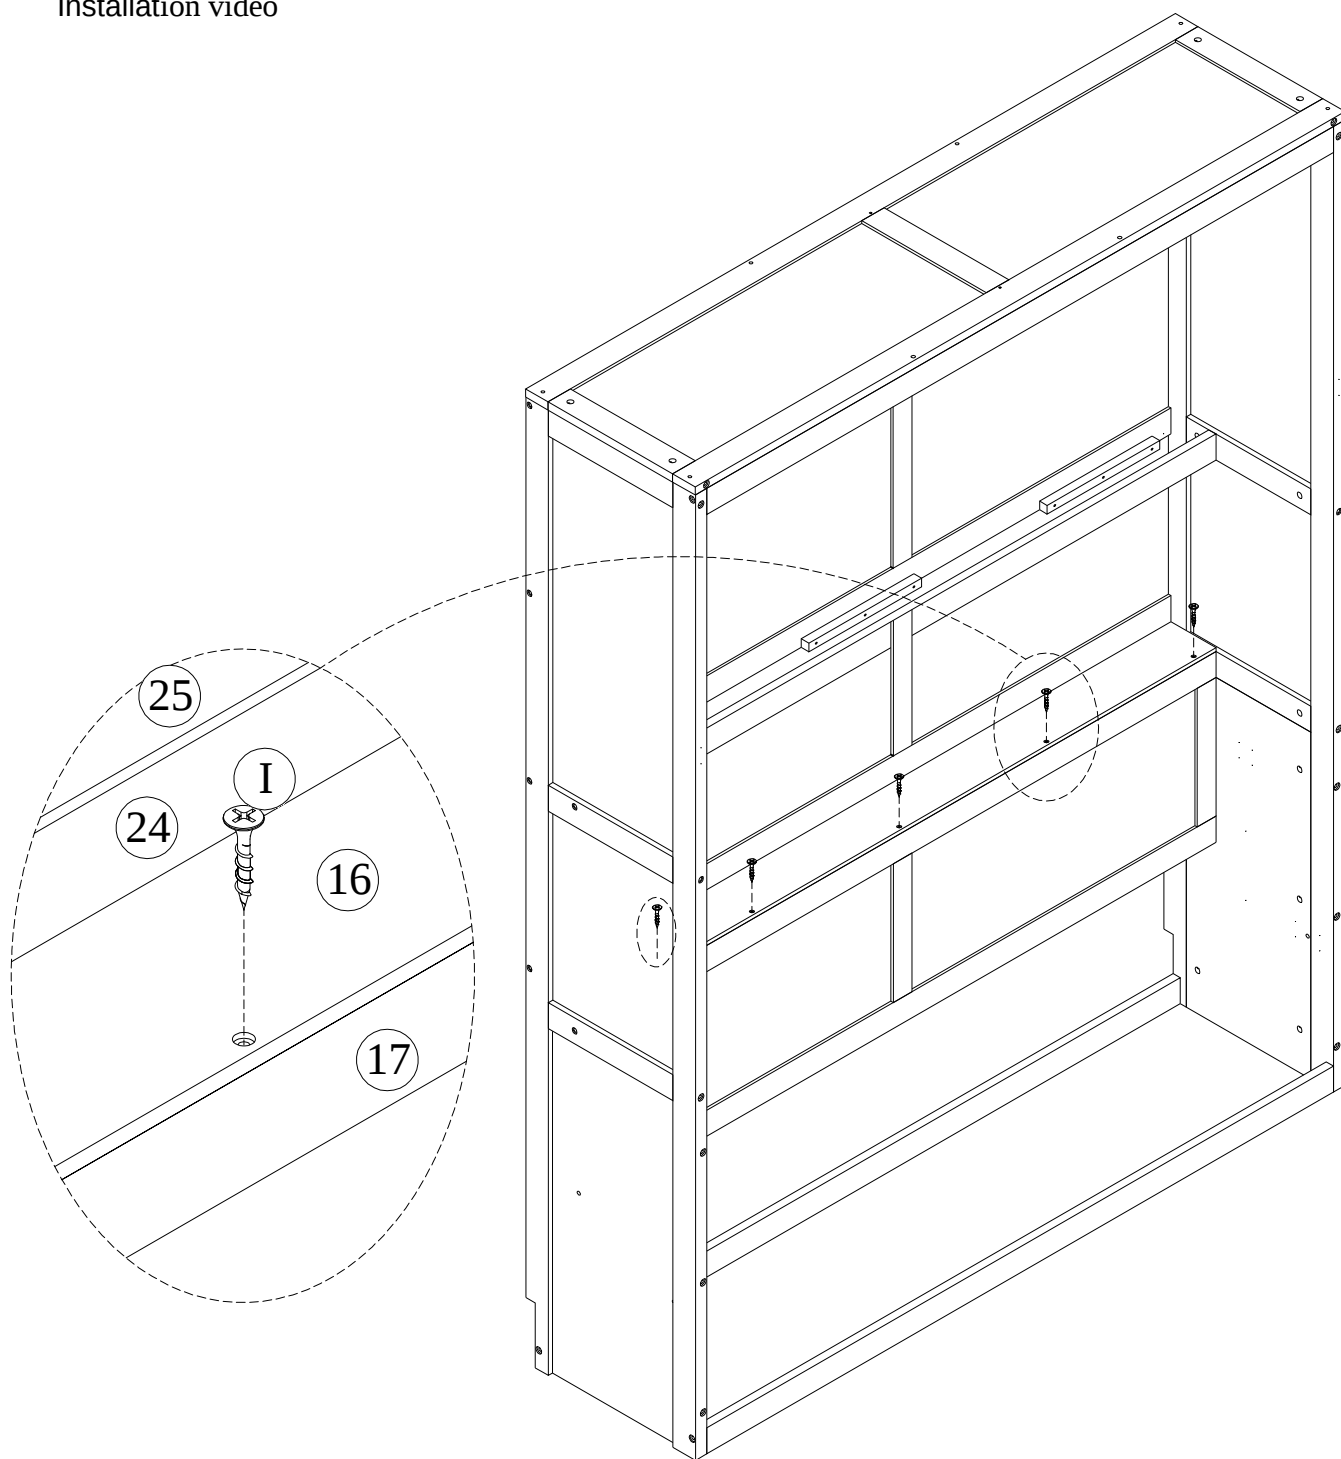


STEP-ÉTAPE 18 :



Installation video

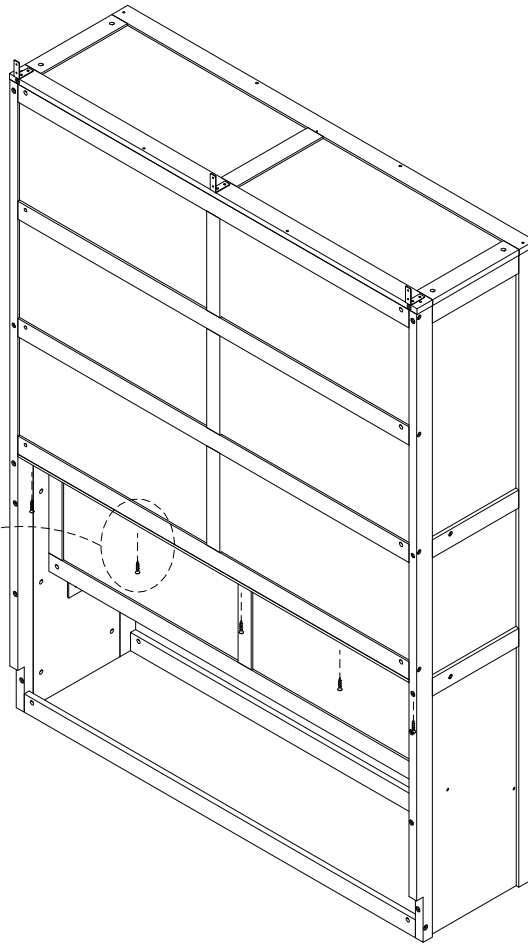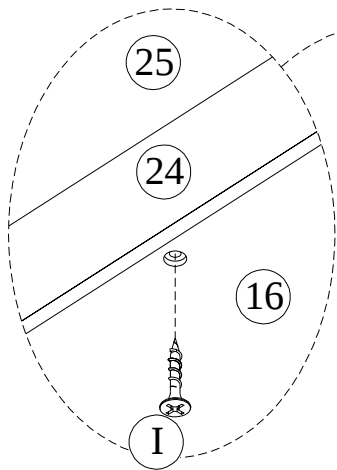

I




5pcs

STEP-ÉTAPE 19 :



Installation video


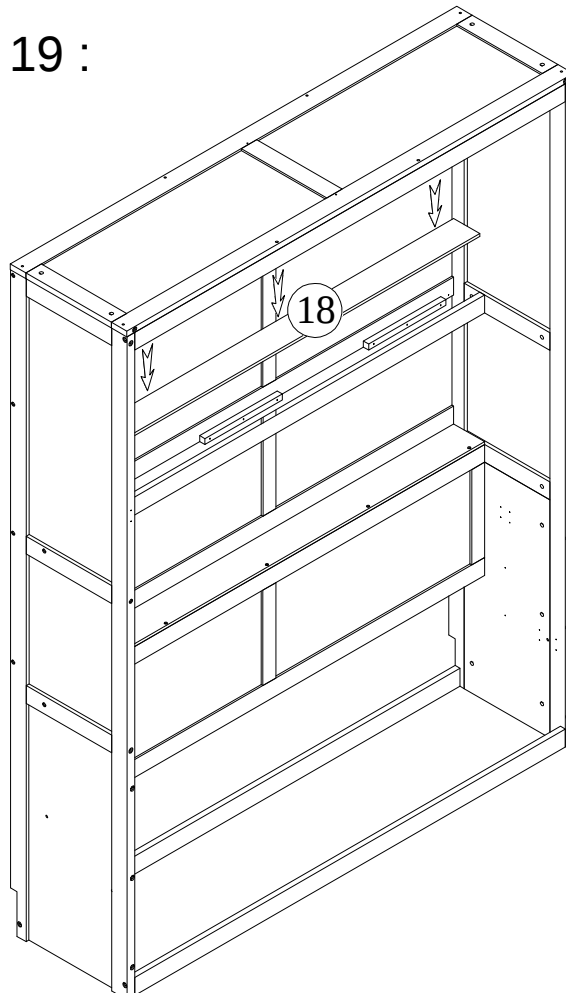


STEP-ÉTAPE 20 :

I



6pcs

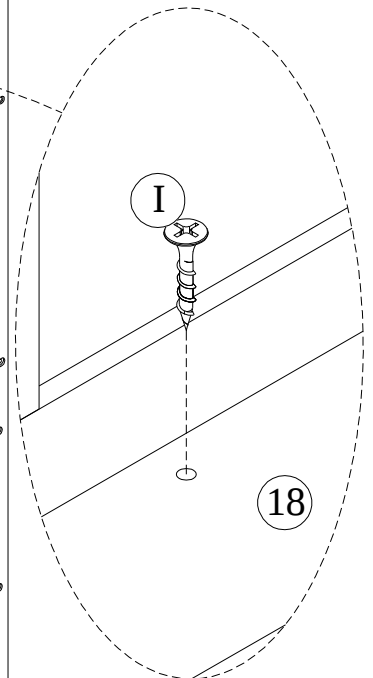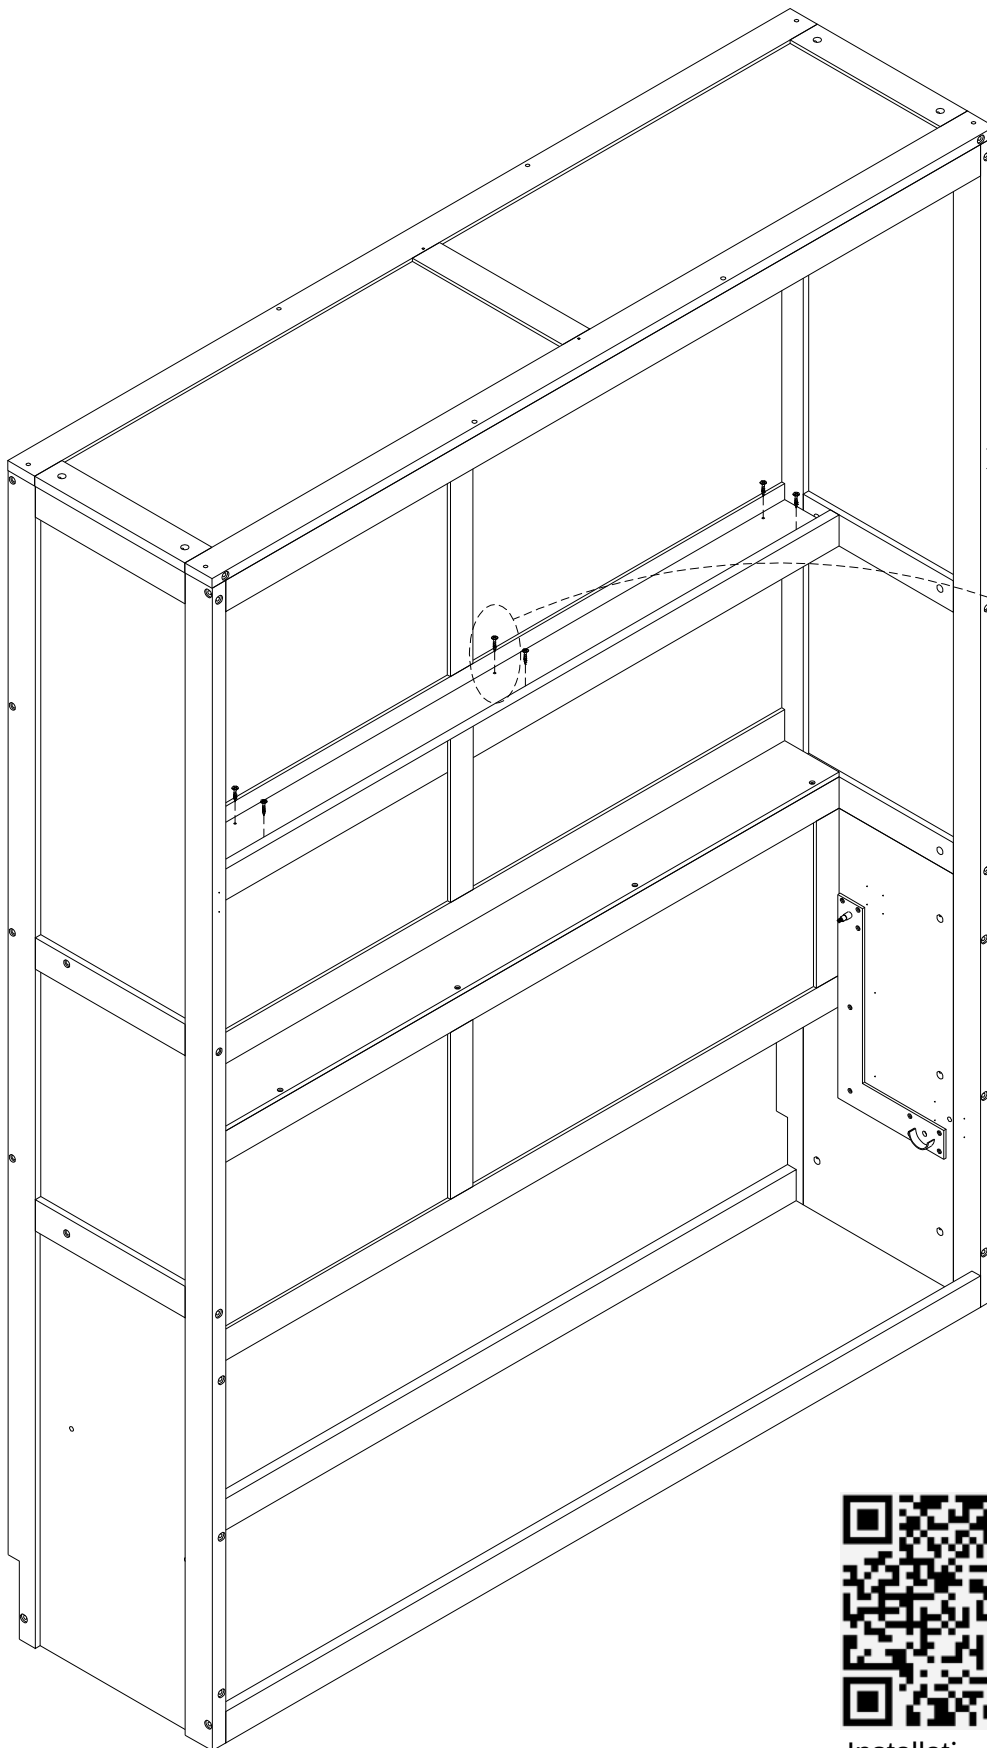



Installation video

STEP-ÉTAPE 21 :



Installation video

Q		J	
	1pc		10pcs

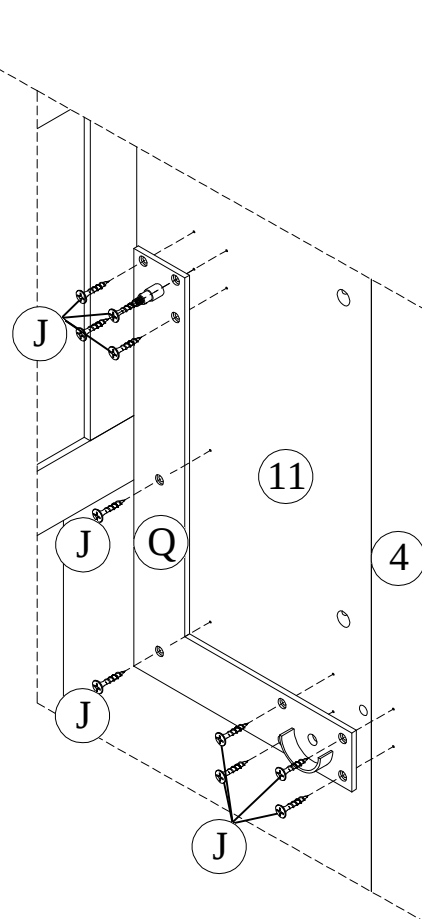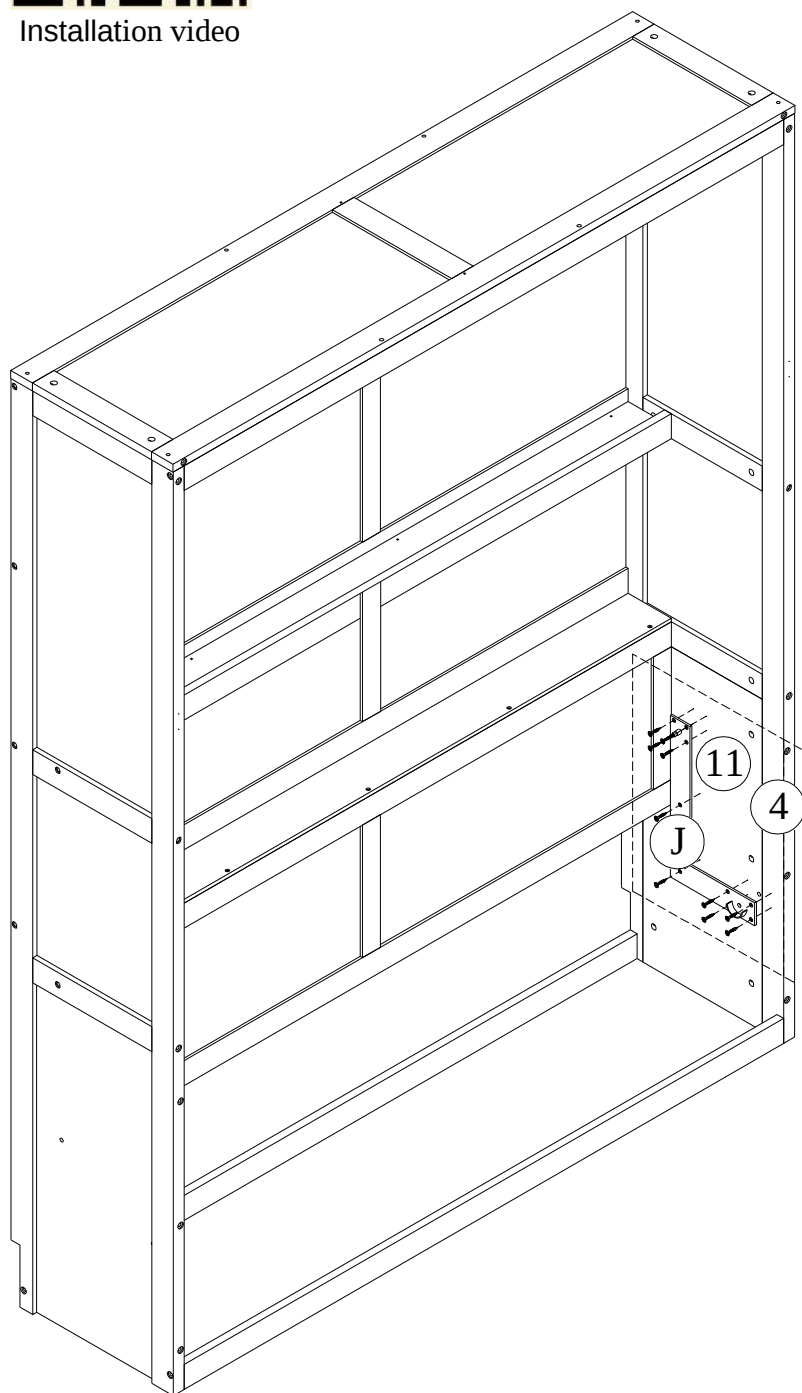


STEP-ÉTAPE 22 :



Installation video

P		J	
	1pc		10pcs

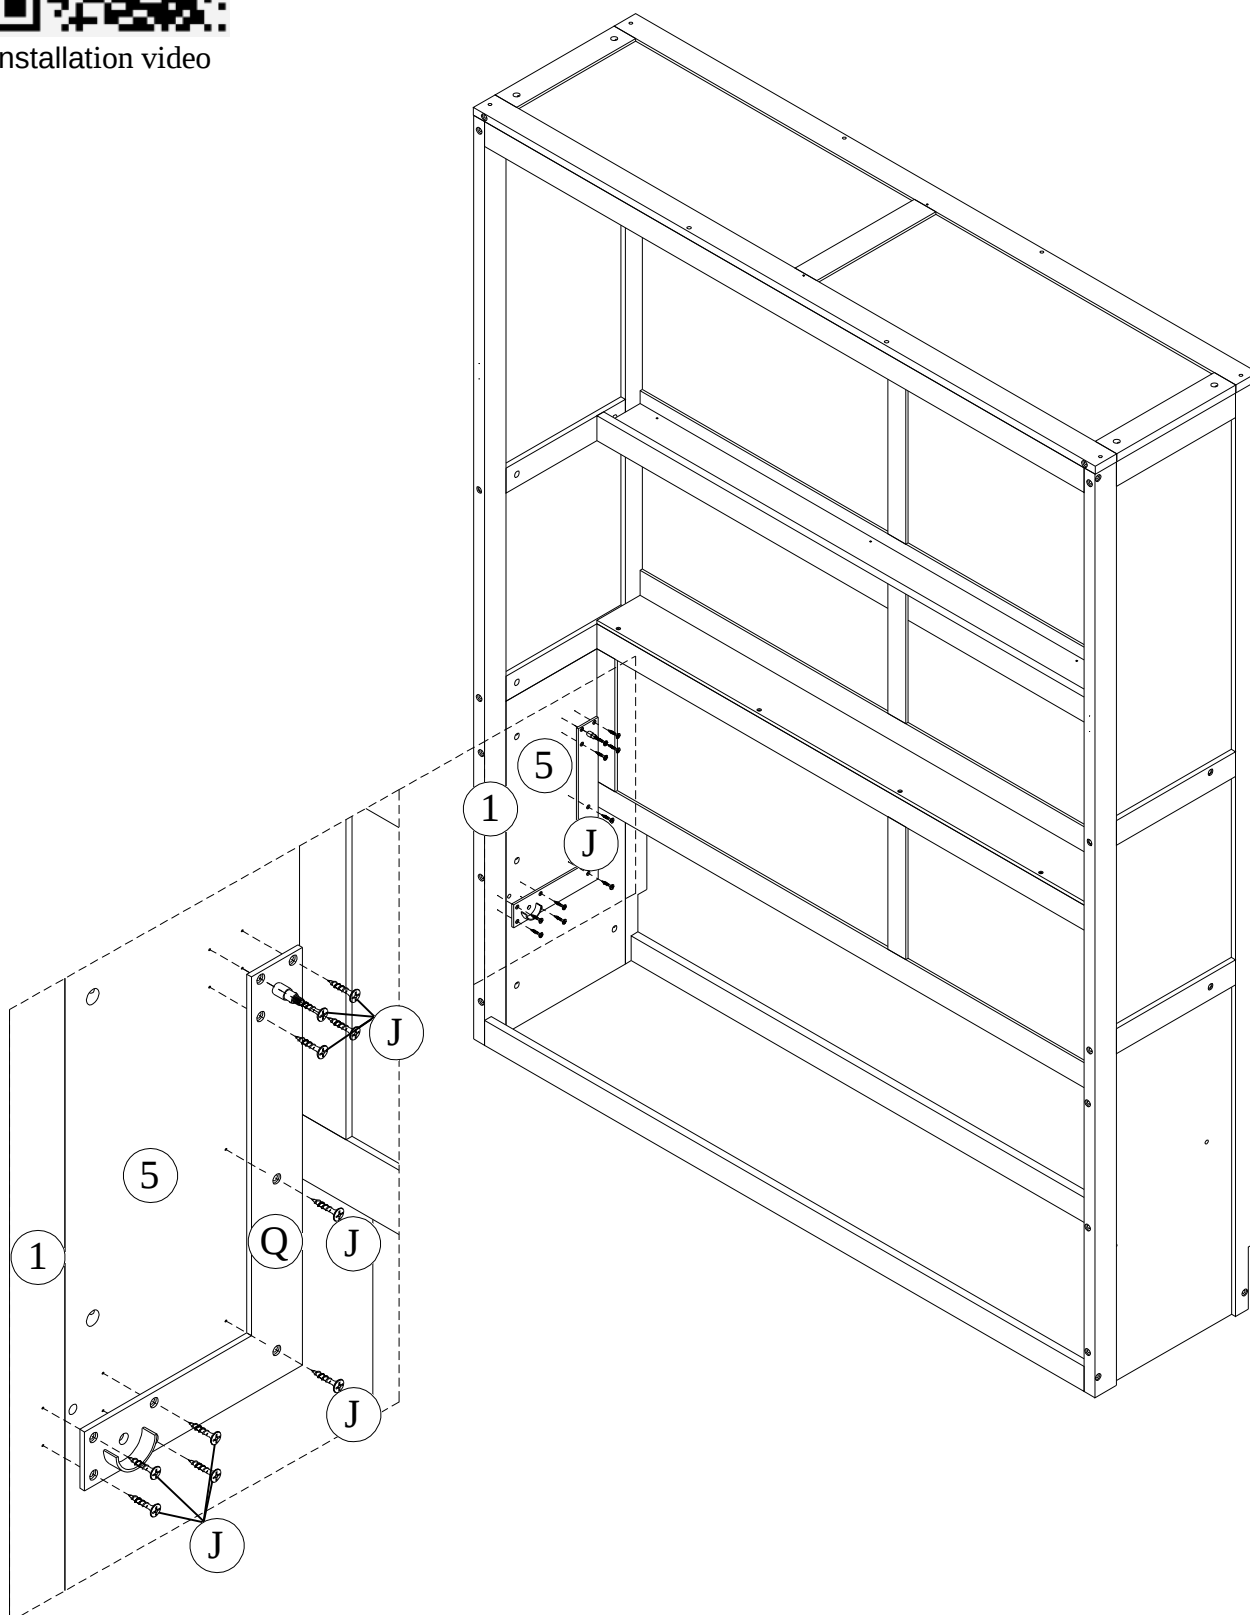

STEP-ÉTAPE 23 :


F



2pcs




Installation video

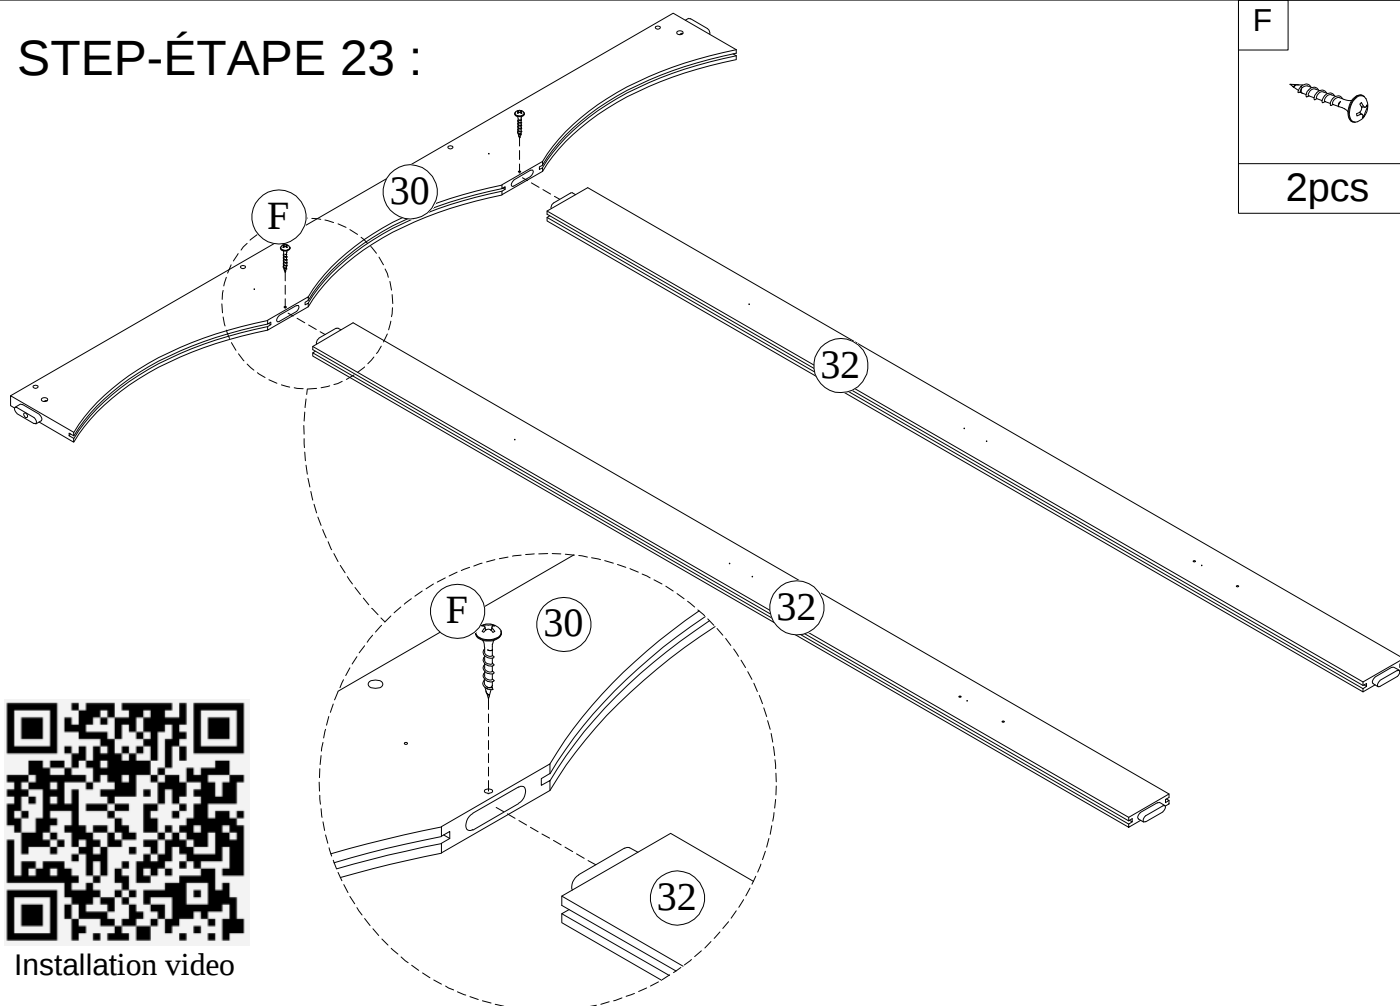

STEP-ÉTAPE 24:



Installation video

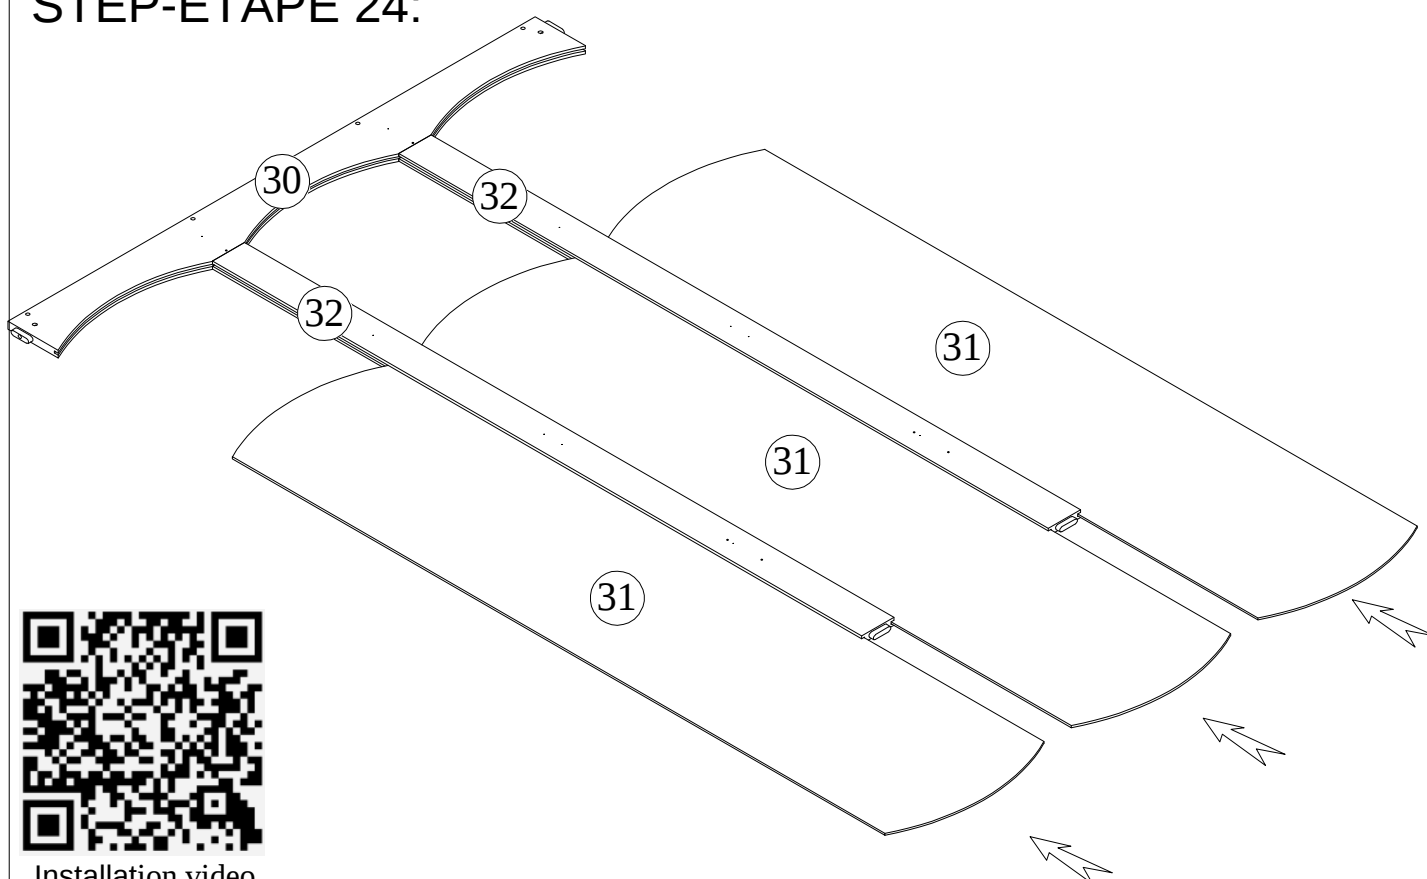


STEP-ÉTAPE 25 :

F



2pcs

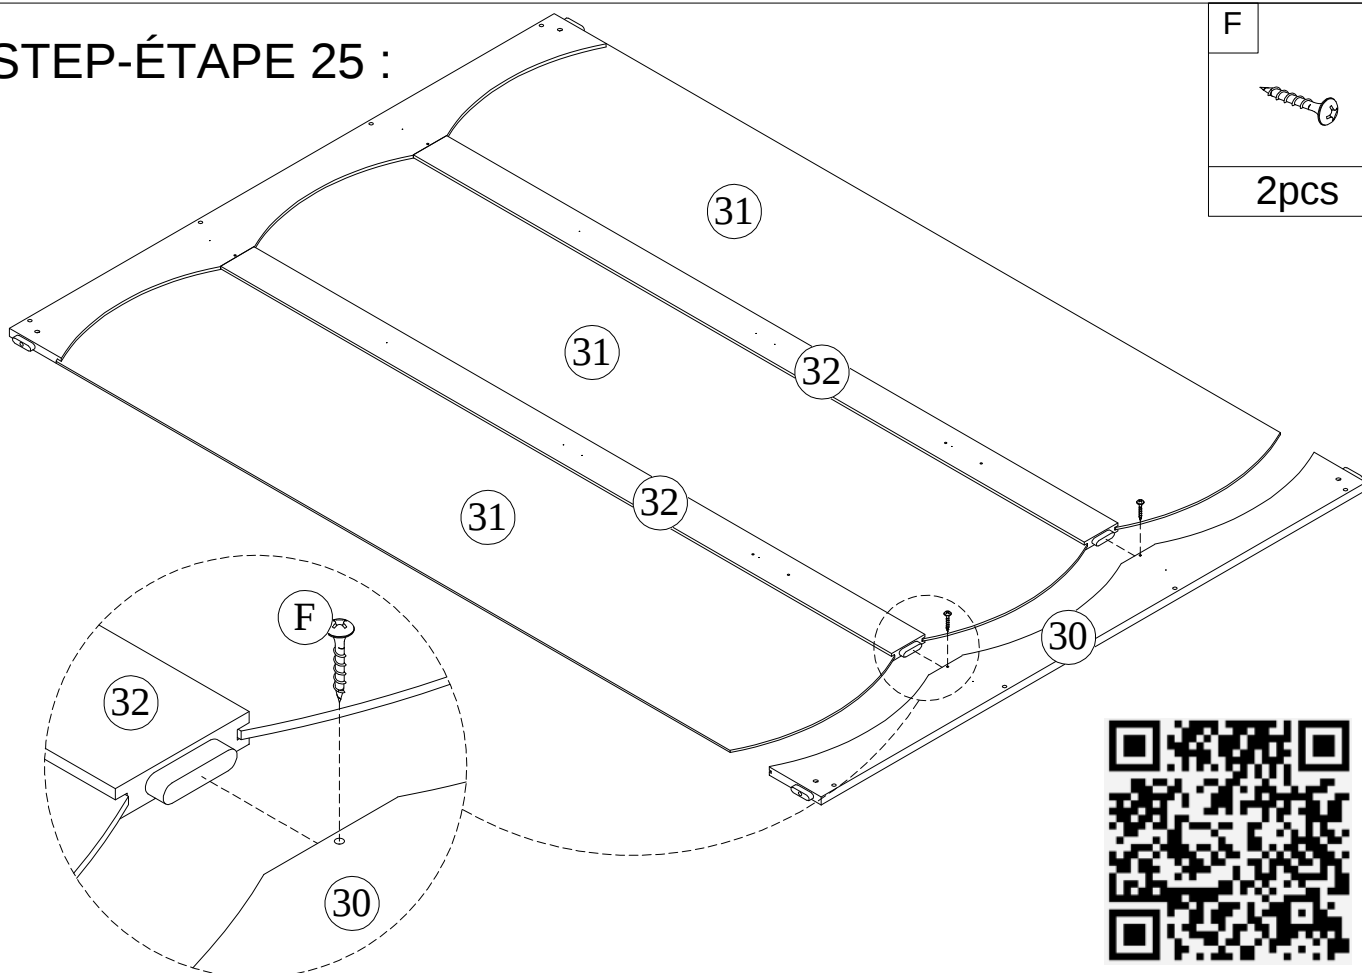

Installation video

STEP-ÉTAPE 26 :

K




4pcs

B



4pcs

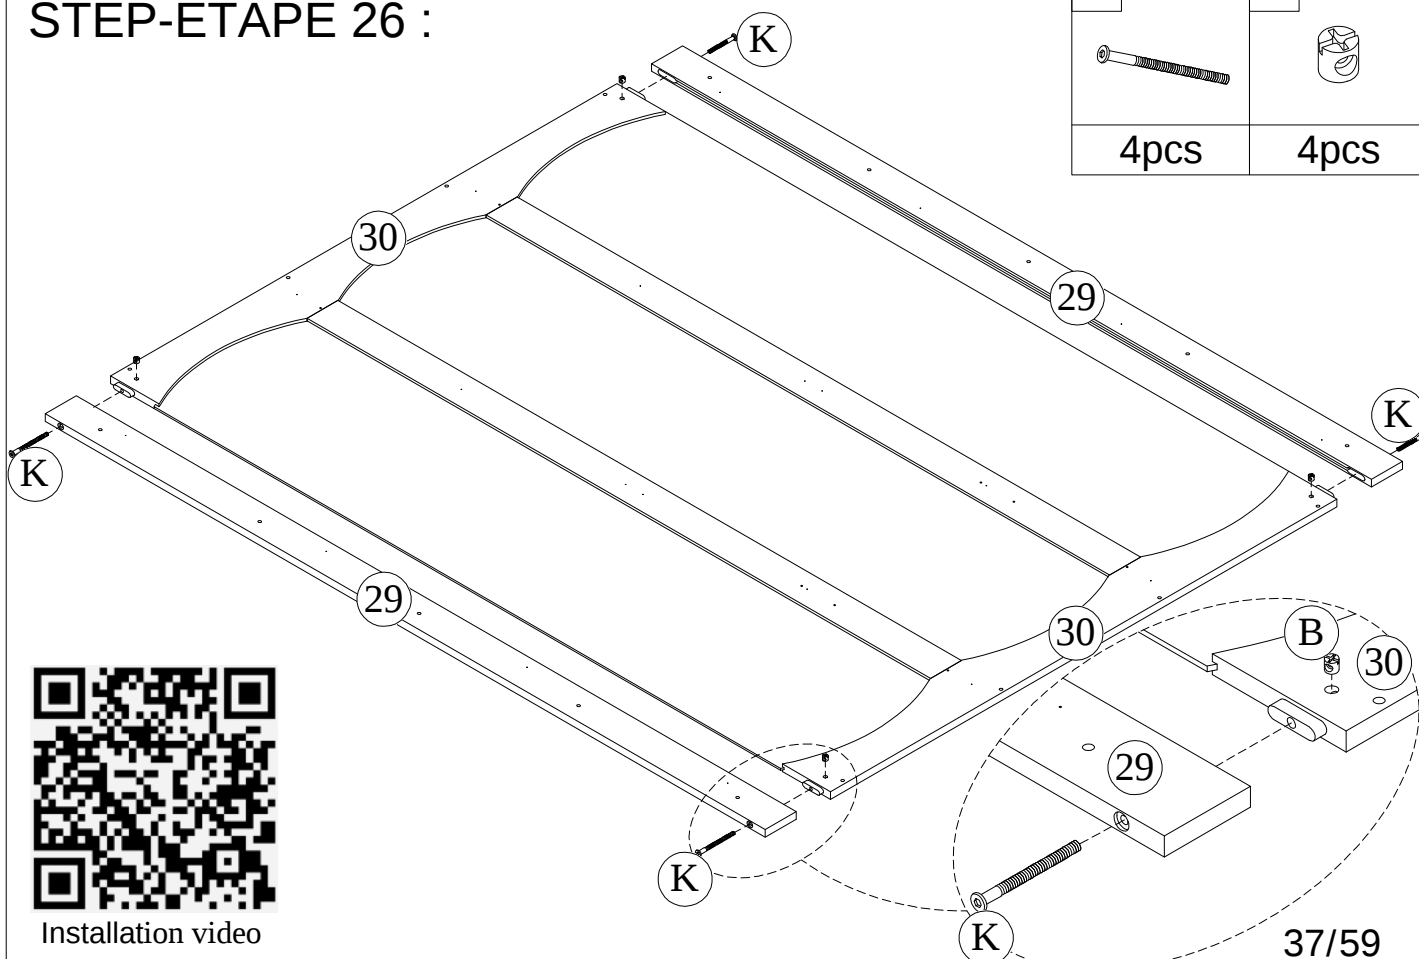


Installation video

37/59

STEP-ÉTAPE 27 :

E	L	B
		
8pcs	4pcs	4pcs

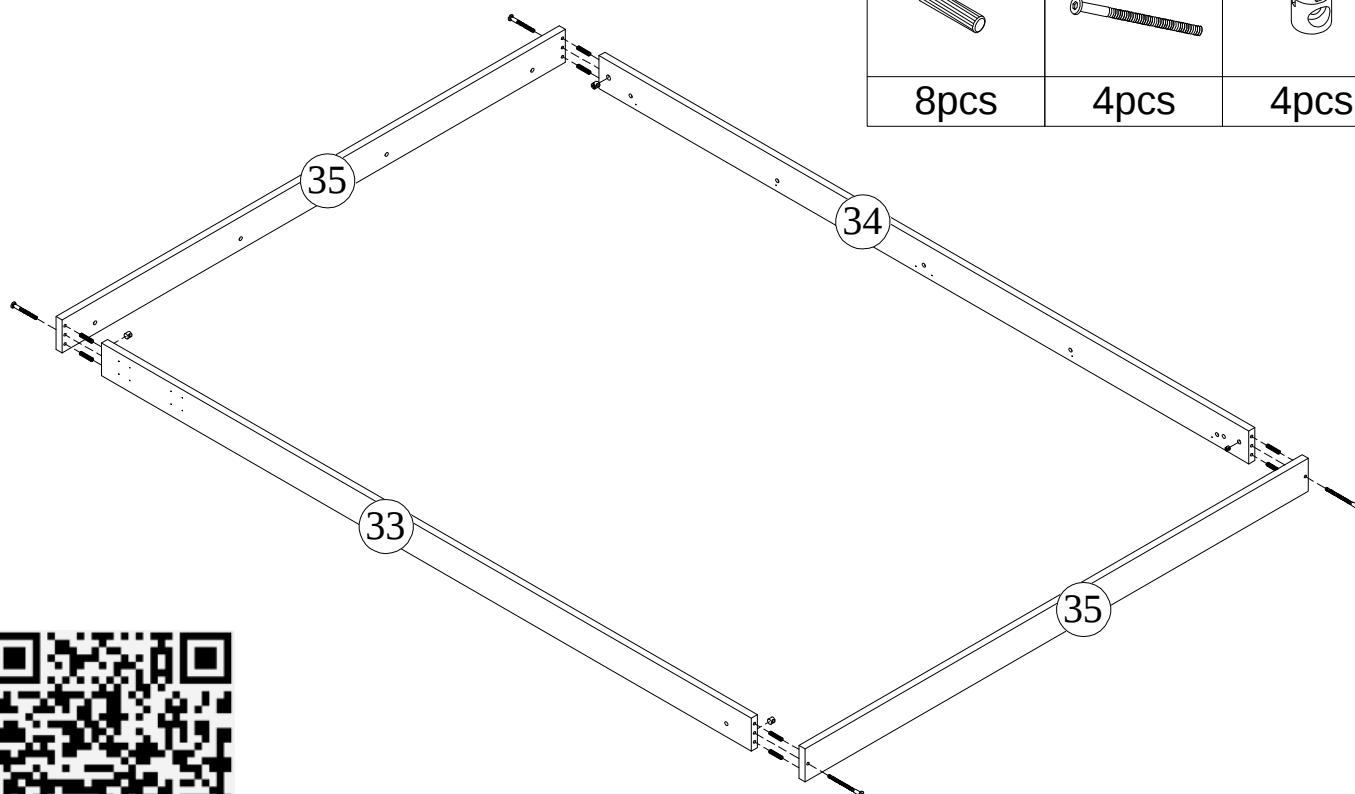


Installation video

STEP-ÉTAPE 28 :




Installation video


L	B
	
18pcs	18pcs

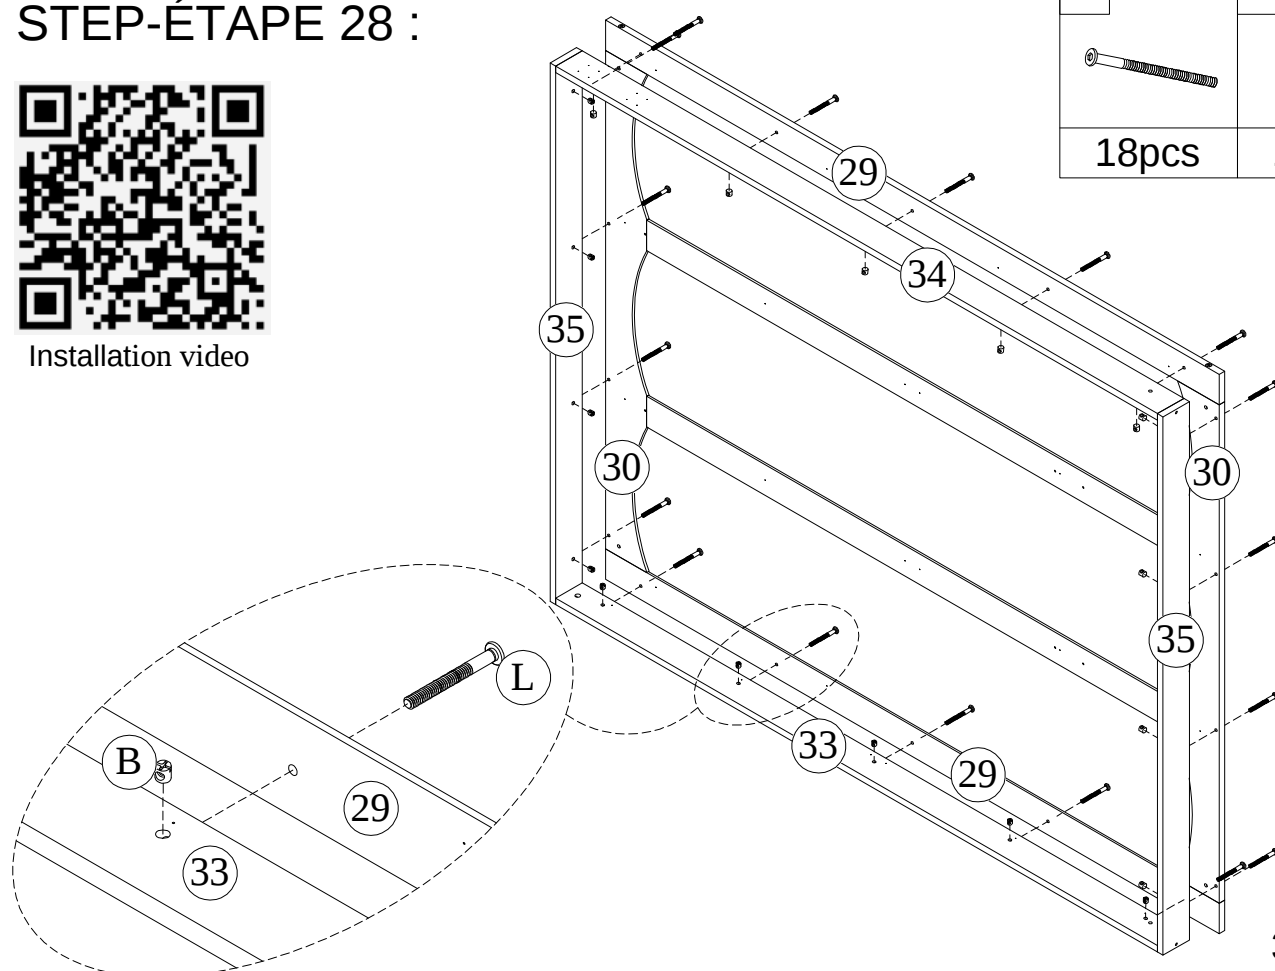


STEP-ÉTAPE 29 :

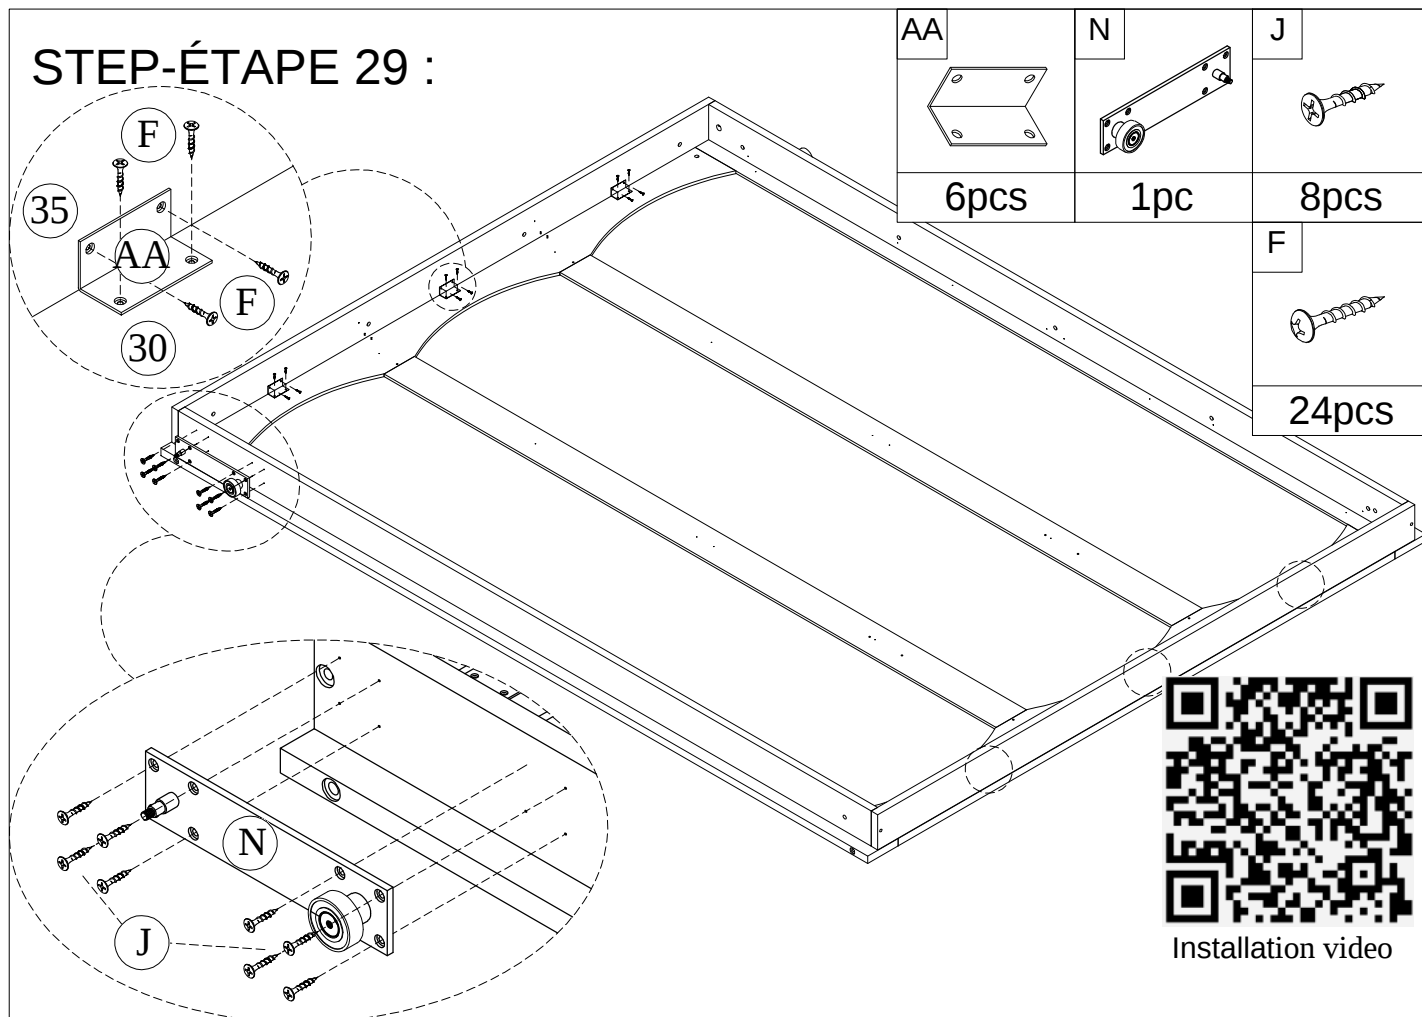


STEP-ÉTAPE 30 :

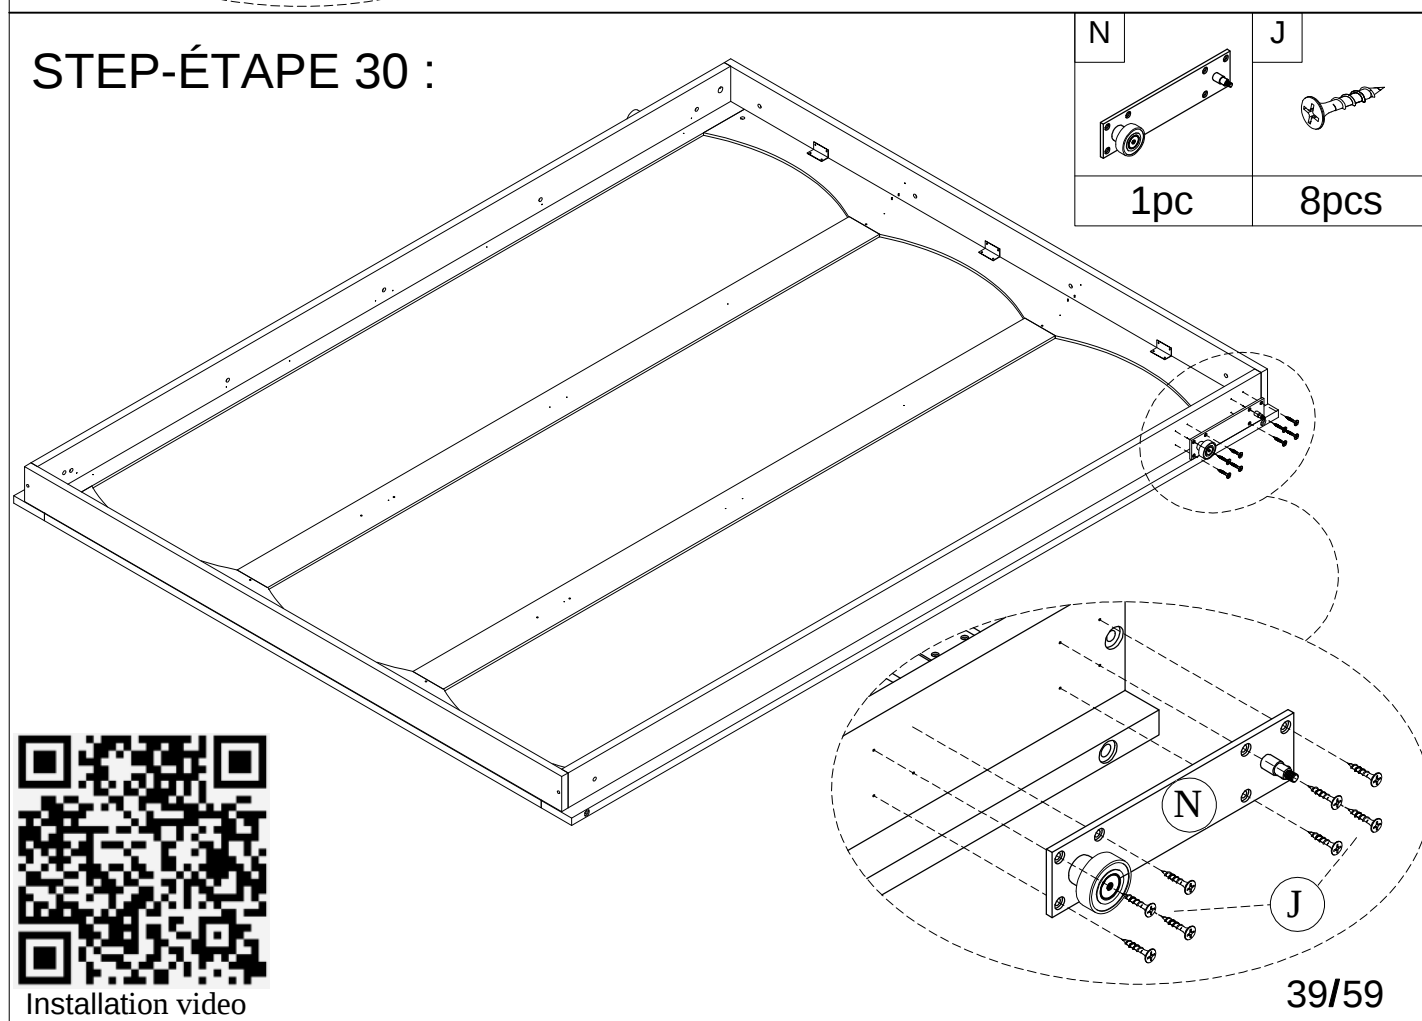

STEP-ÉTAPE 31 :

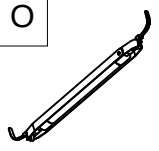O		R	
2pcs		2pcs	
		CC	
		1pc	

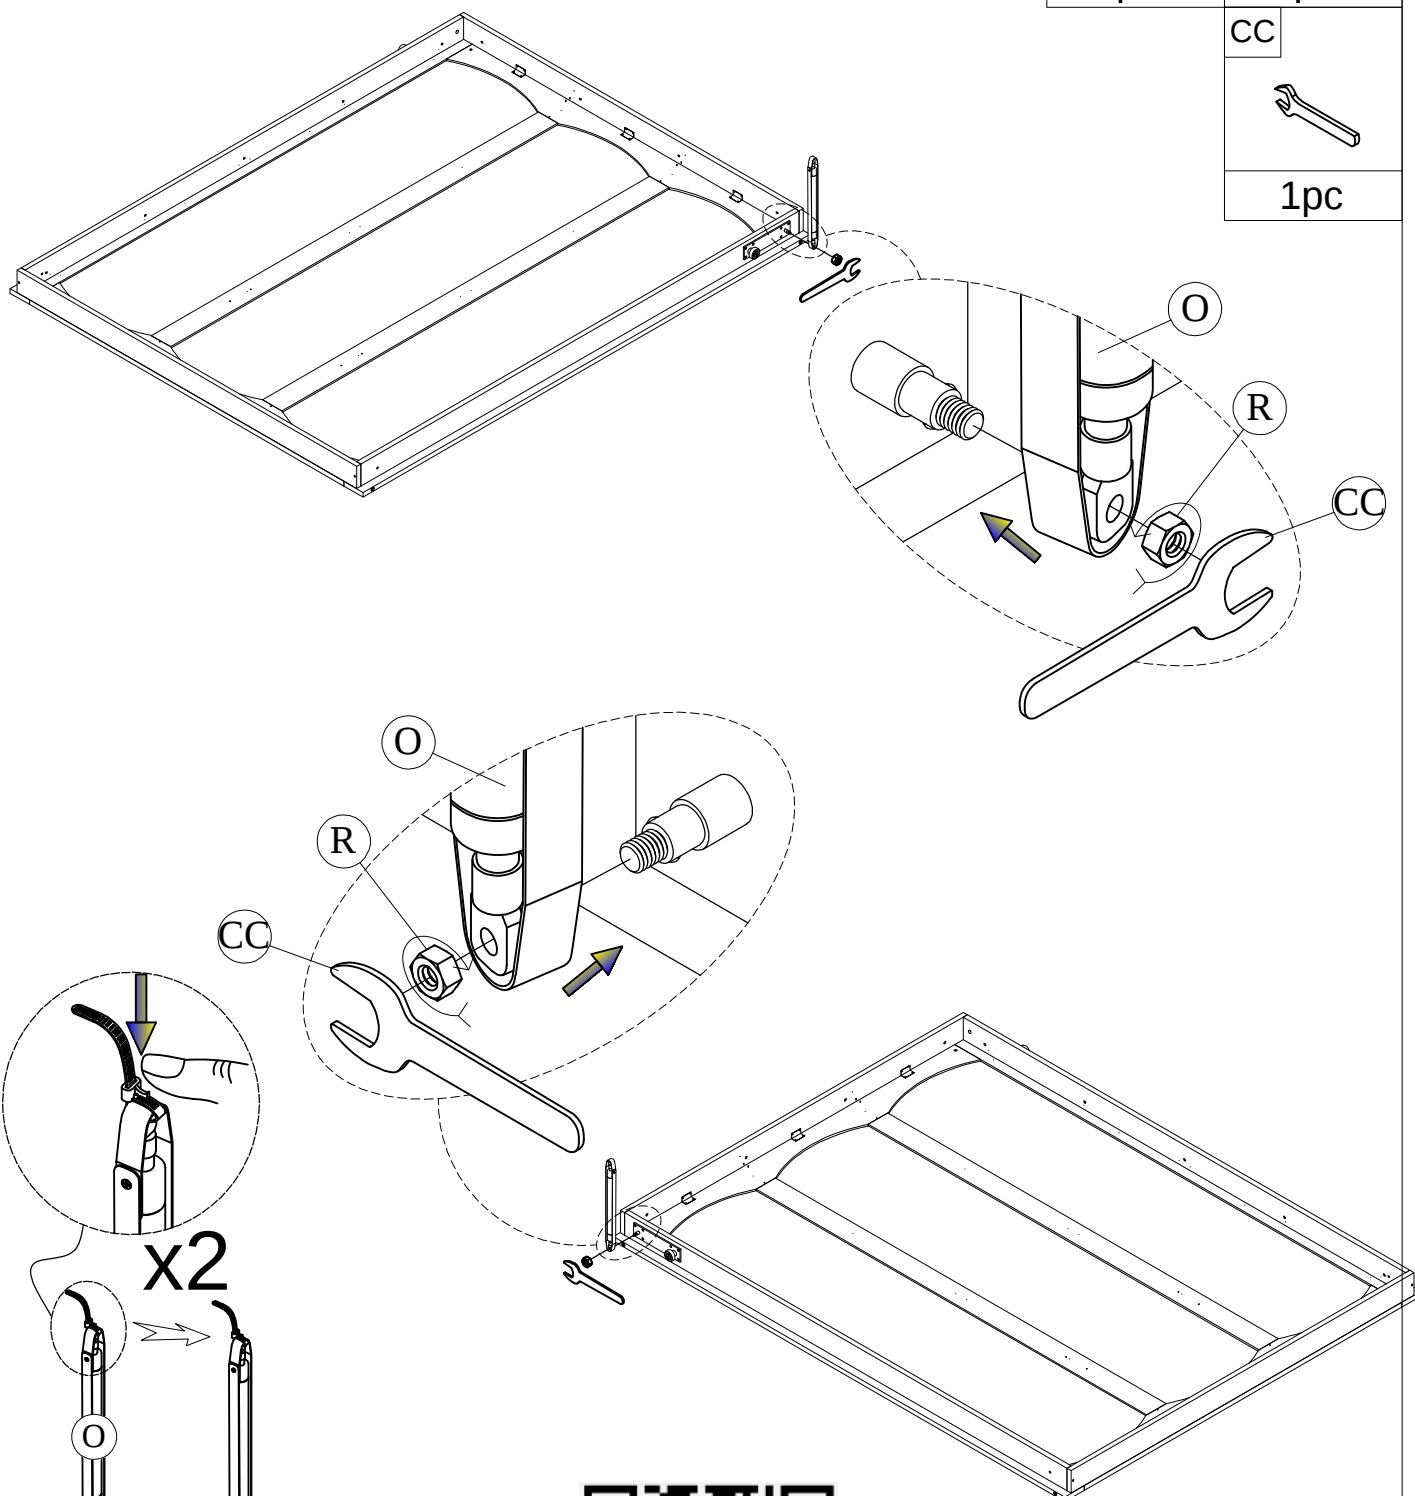


Remove the pulleys from both ends of the piston.




Installation video


- 1- Determine the position of the bed in the room.
- 1- Déterminer l'emplacement du lit dans la pièce.

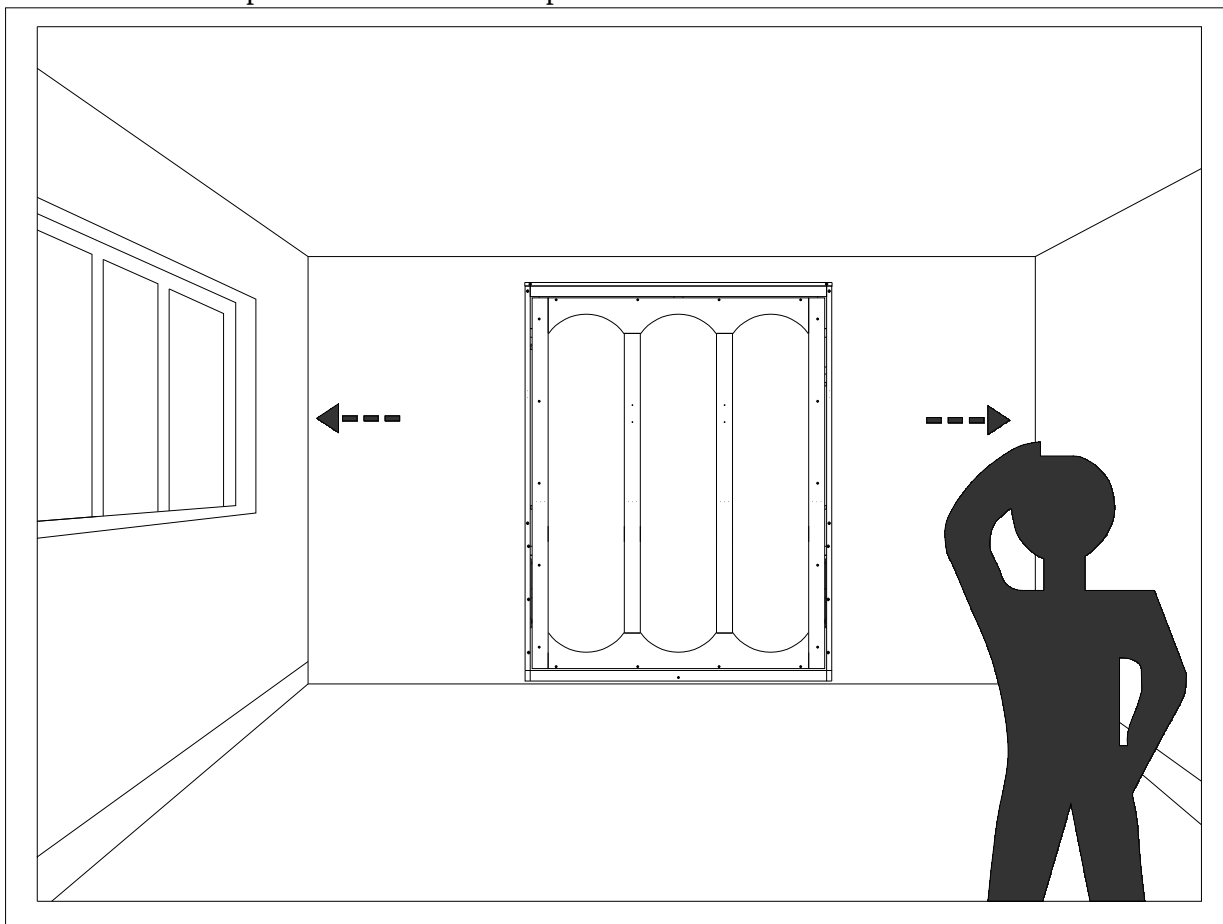


- 2- Put the bed back in its place. Please keep it vertical and horizontal.
- 2- Remettez le lit à sa place. Veuillez le garder bien vertical et horizontal.

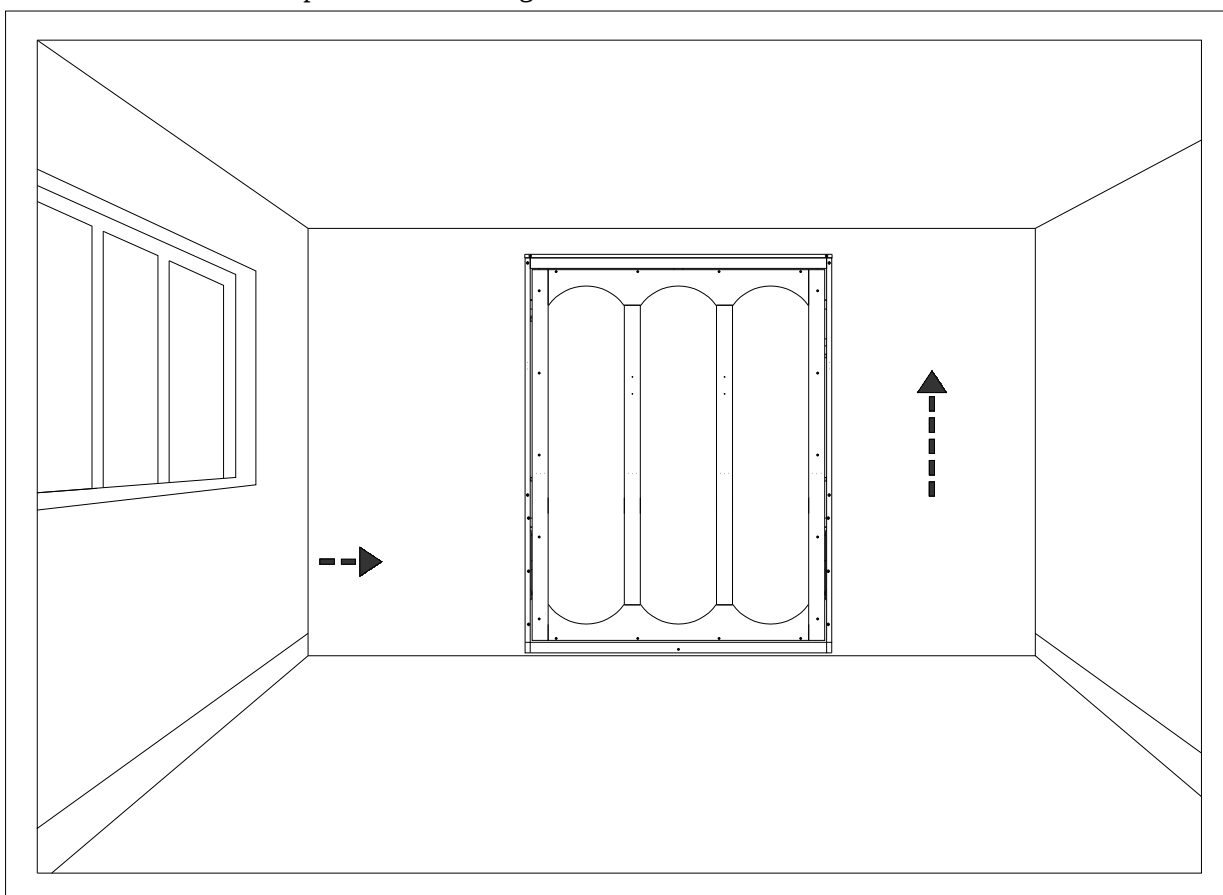



3- Mark the drilling points according to the actual product and the metal brackets already assembled onto the bed.

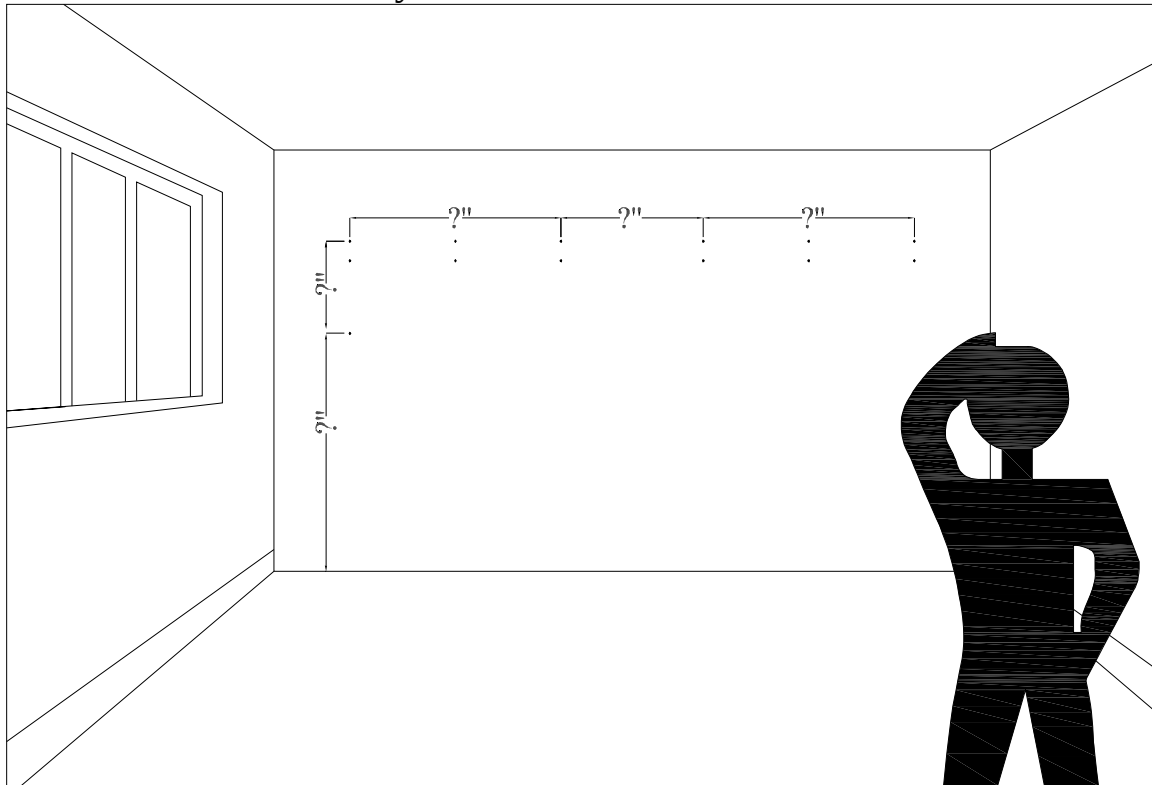


4- Drill holes at the marked points, the holes must be sized to fit the metal anchors.

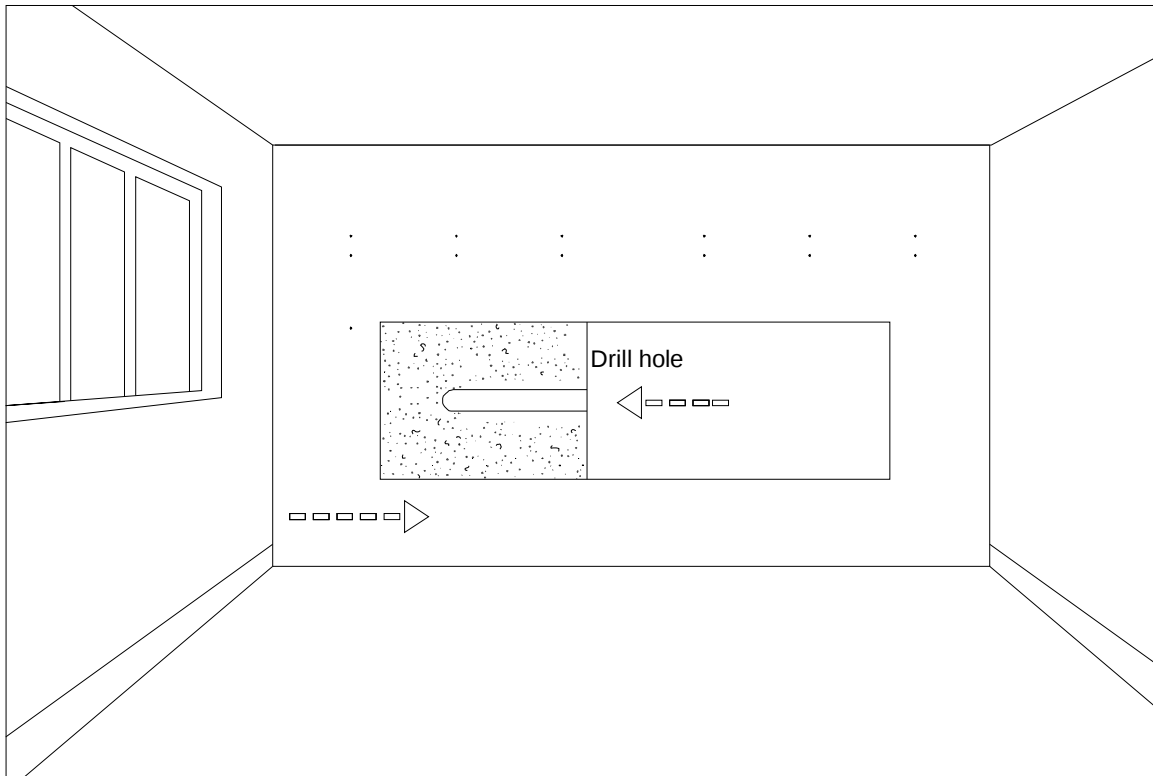


STEP-ÉTAPE 32:

F	AK
	
6pcs	3pcs


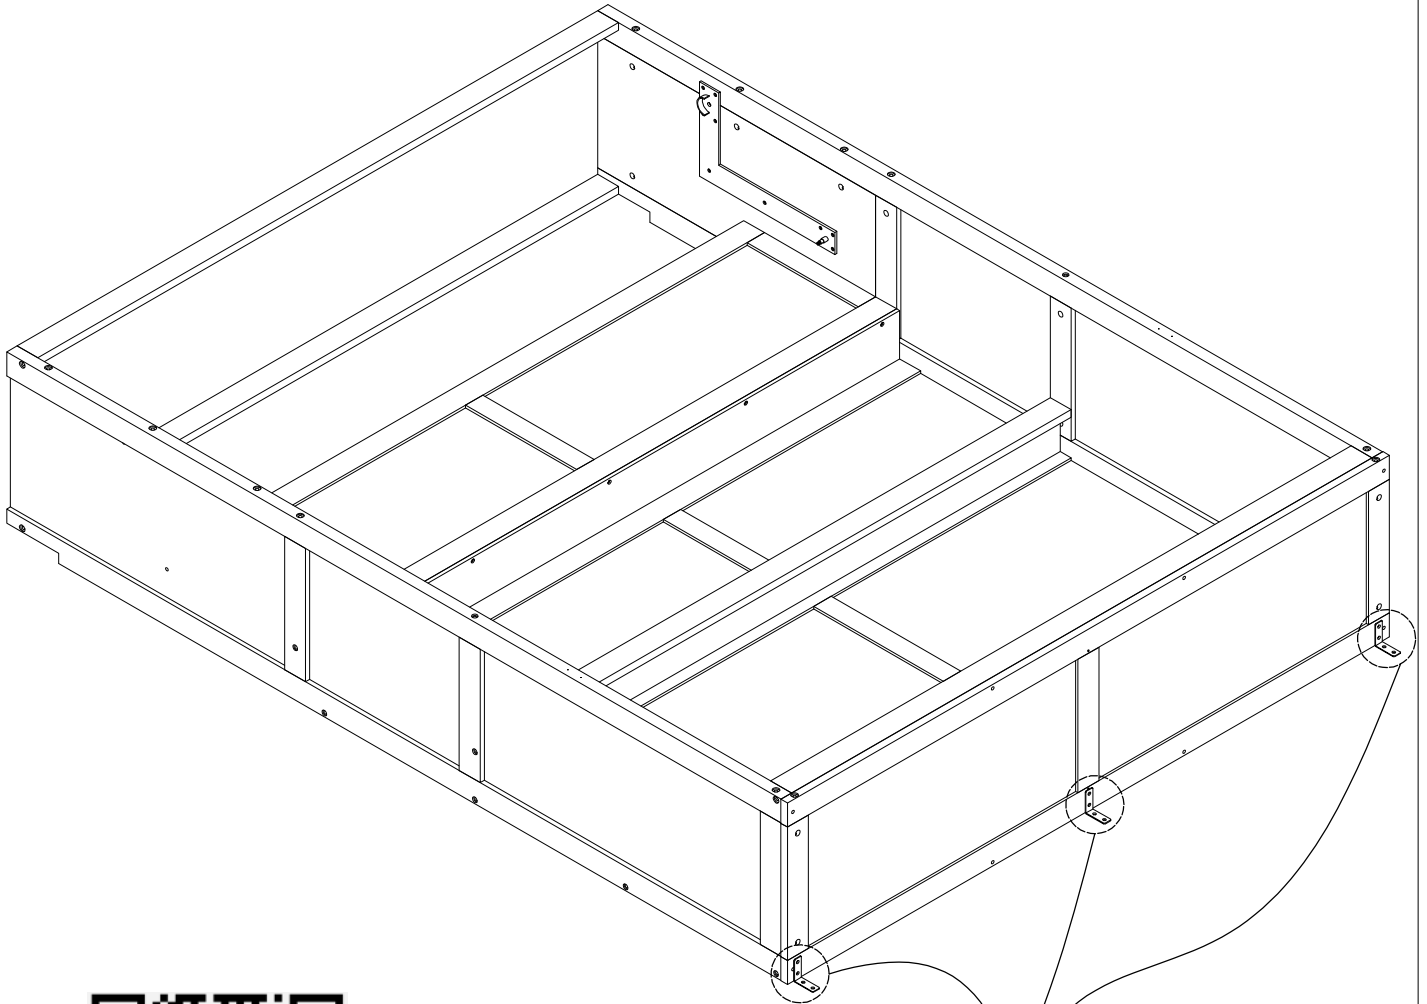




Installation video

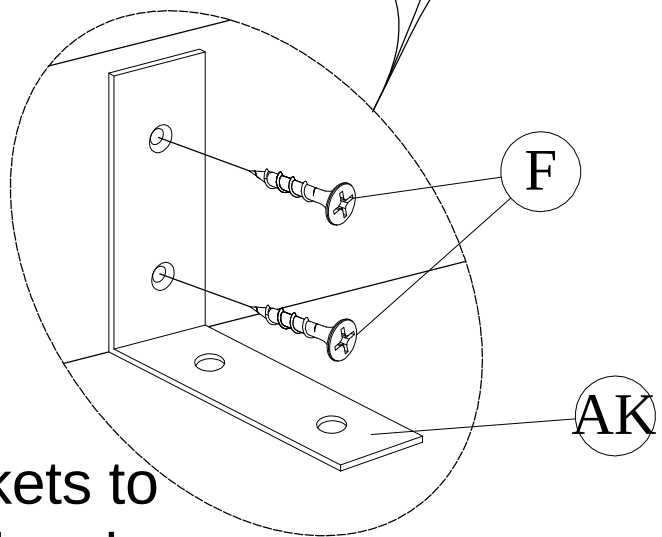

Attach the metal brackets to the bed according to the size of the drilled holes in the wall.

STEP-ÉTAPE 33: This accessory is for use on brick or concrete walls.

EE	DD
	
1pc	6pcs

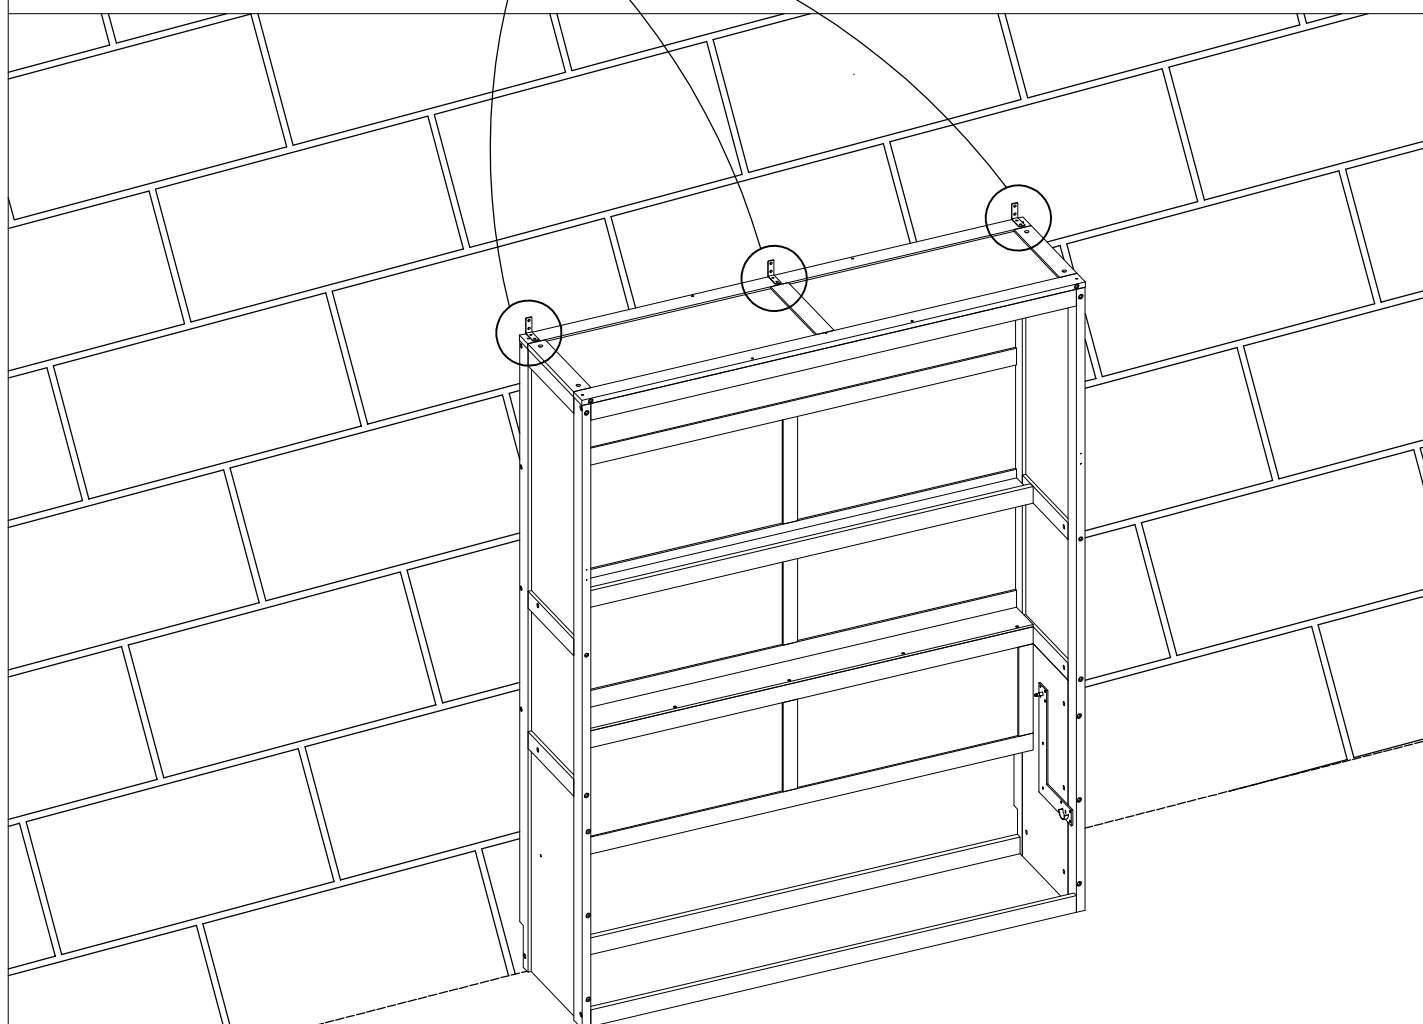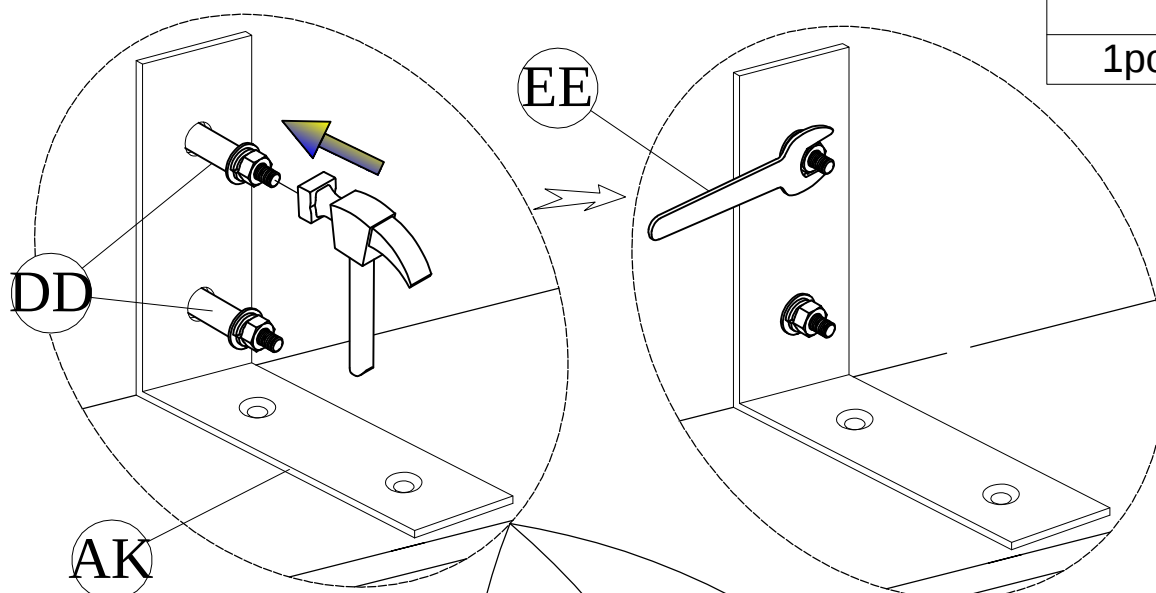



Place the bed and metal brackets into the drilled holes in the wall, then hammer in the metal anchors.




It takes 3 people to assemble (2 people to hold the bed steady and 1 person to attach the accessories to the correct holes drilled in the wall).

STEP-ÉTAPE 34:

BB	AL
	
6pcs	6pcs

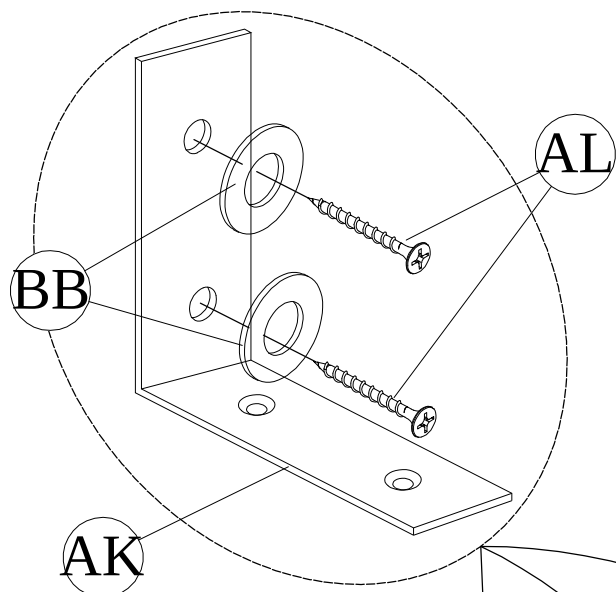

This accessory is for wooden walls.


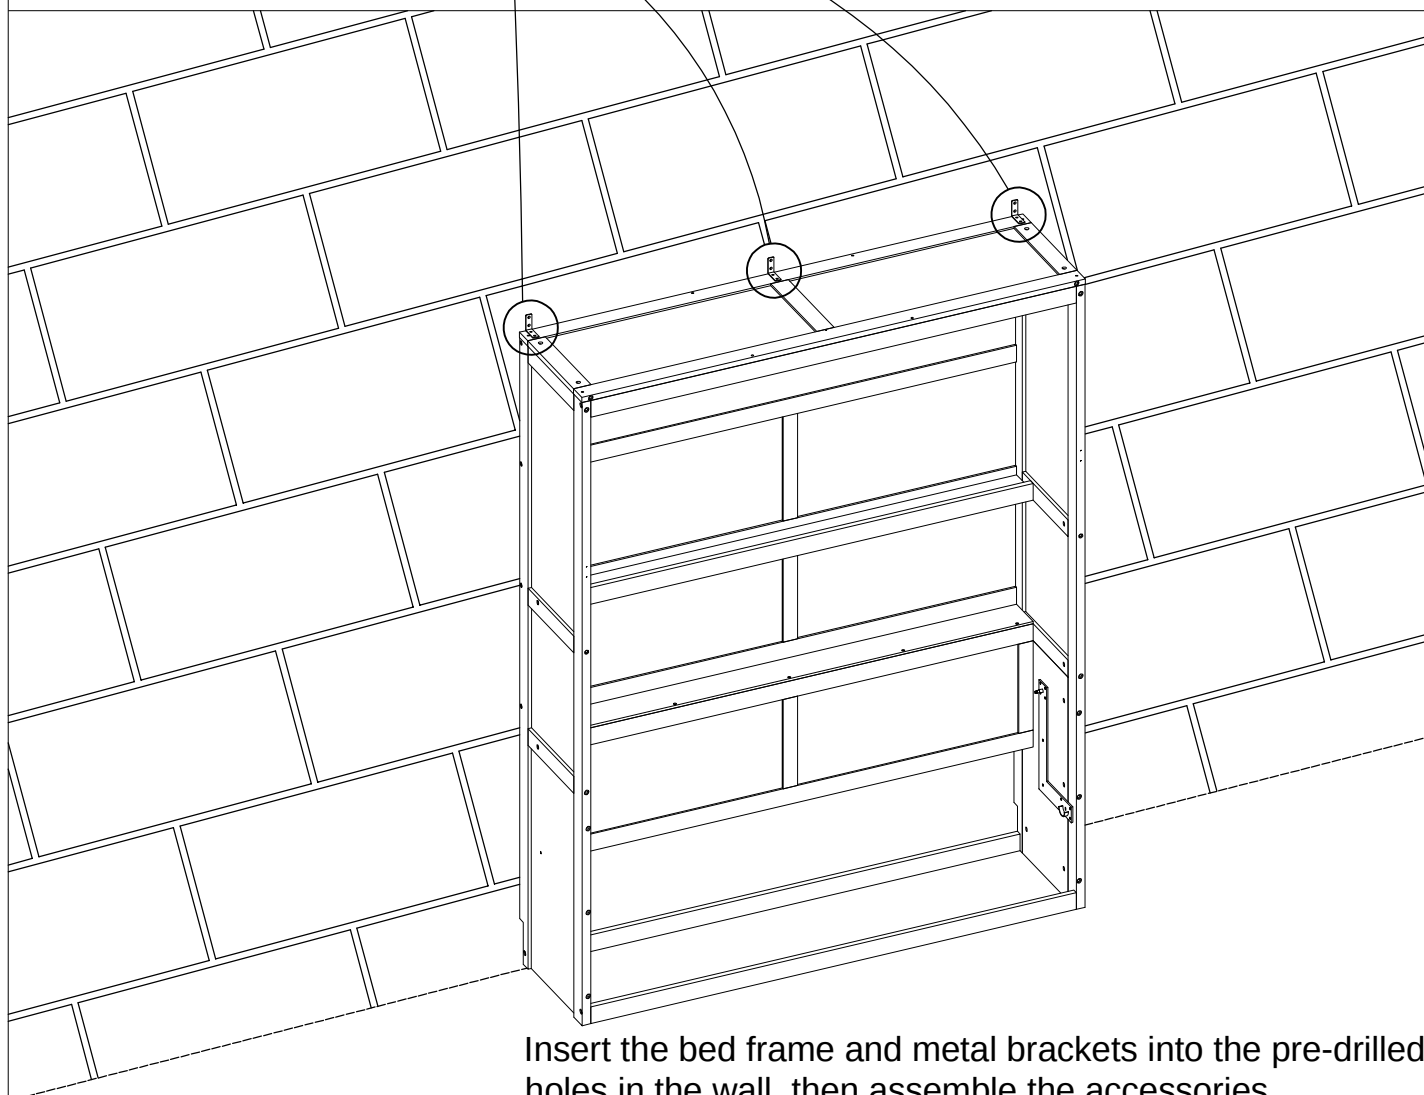


Insert the bed frame and metal brackets into the pre-drilled holes in the wall, then assemble the accessories.



It takes 3 people to assemble (2 people to hold the bed steady and 1 person to attach the accessories to the correct holes drilled in the wall).


STEP-ÉTAPE 35 :

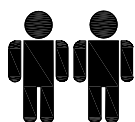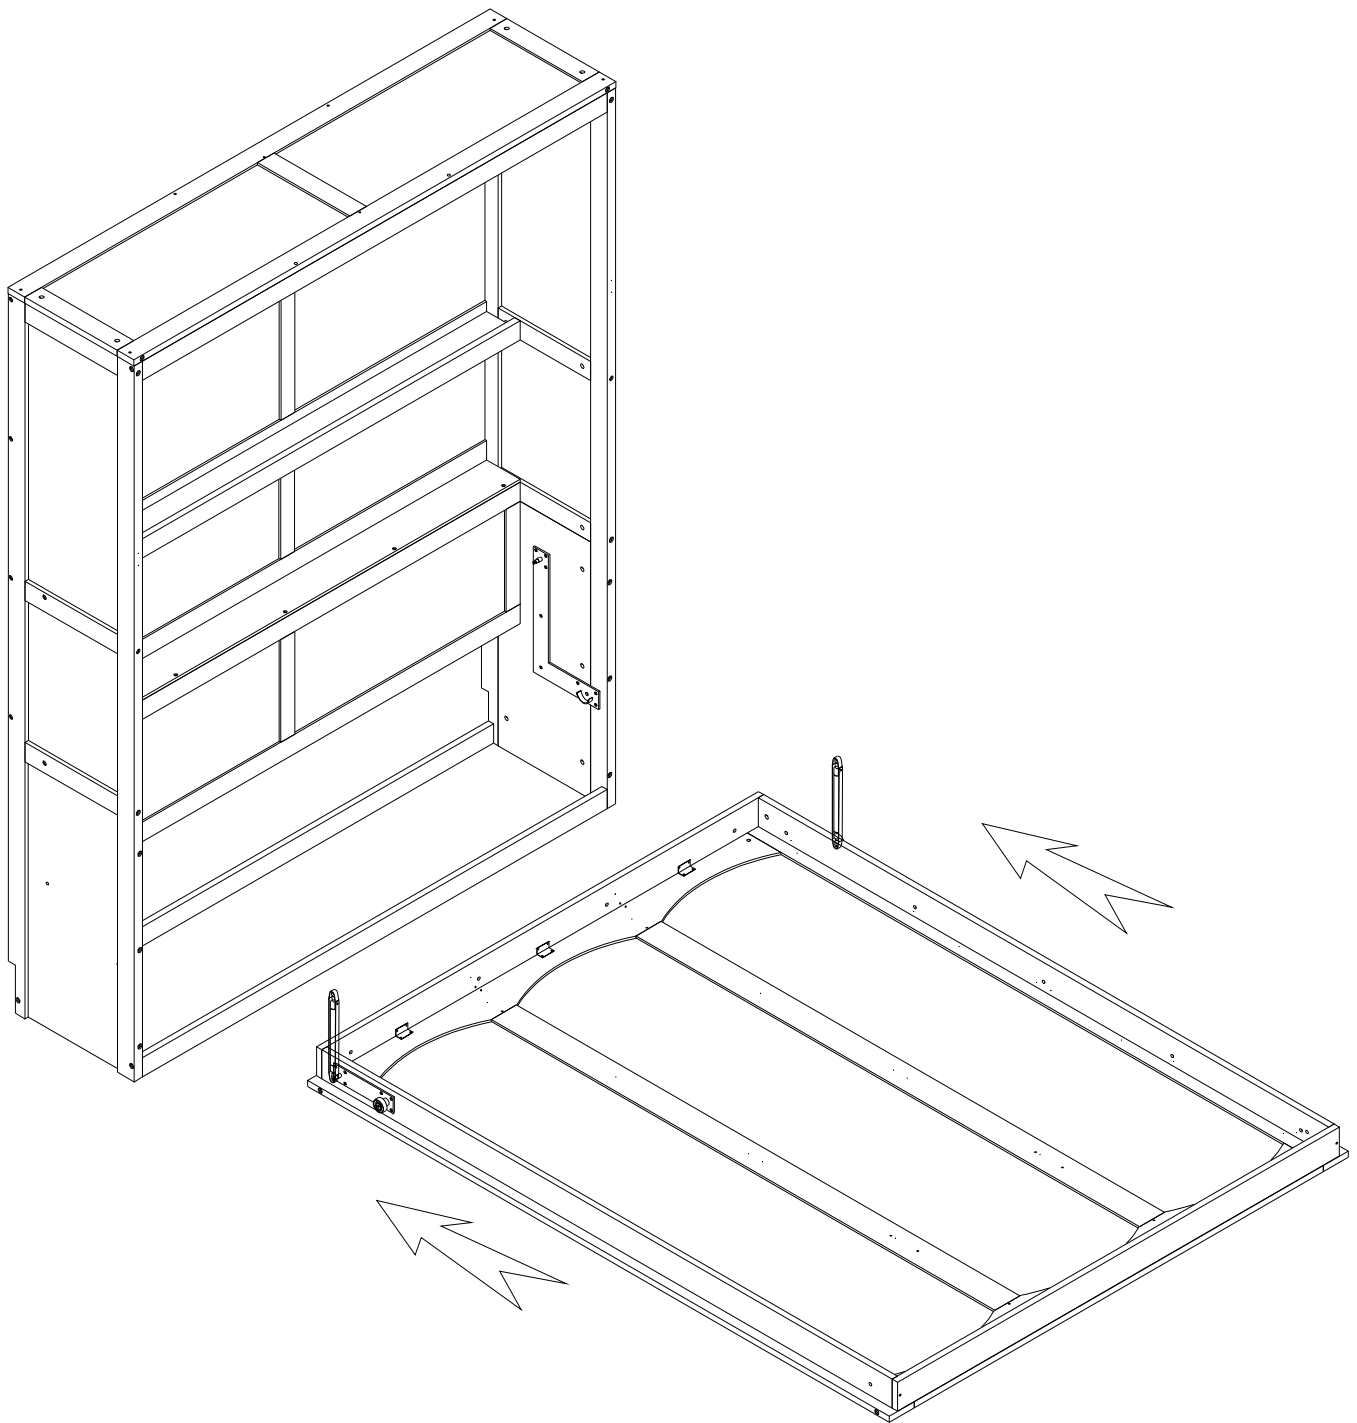

2 people tilt the bed
until accessories are in place)

STEP-ÉTAPE 36 :






V



2pcs




Installation video

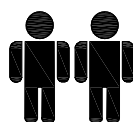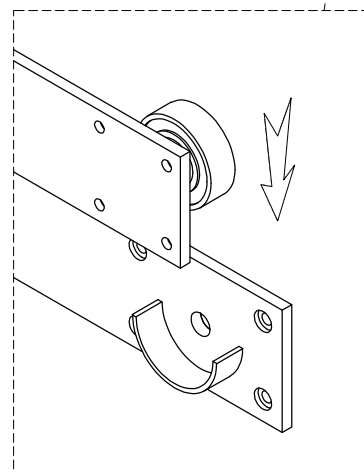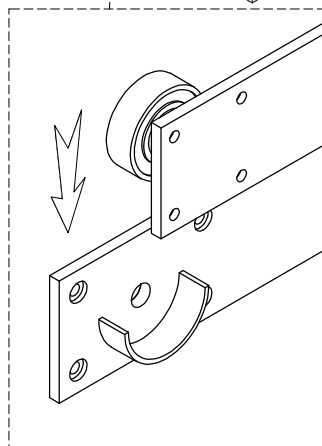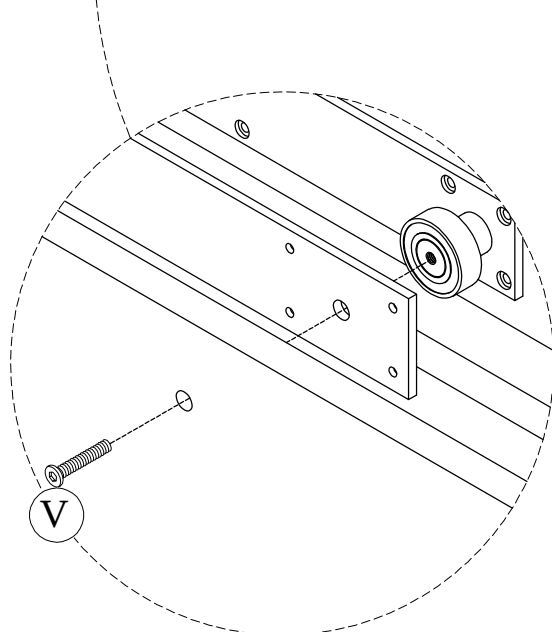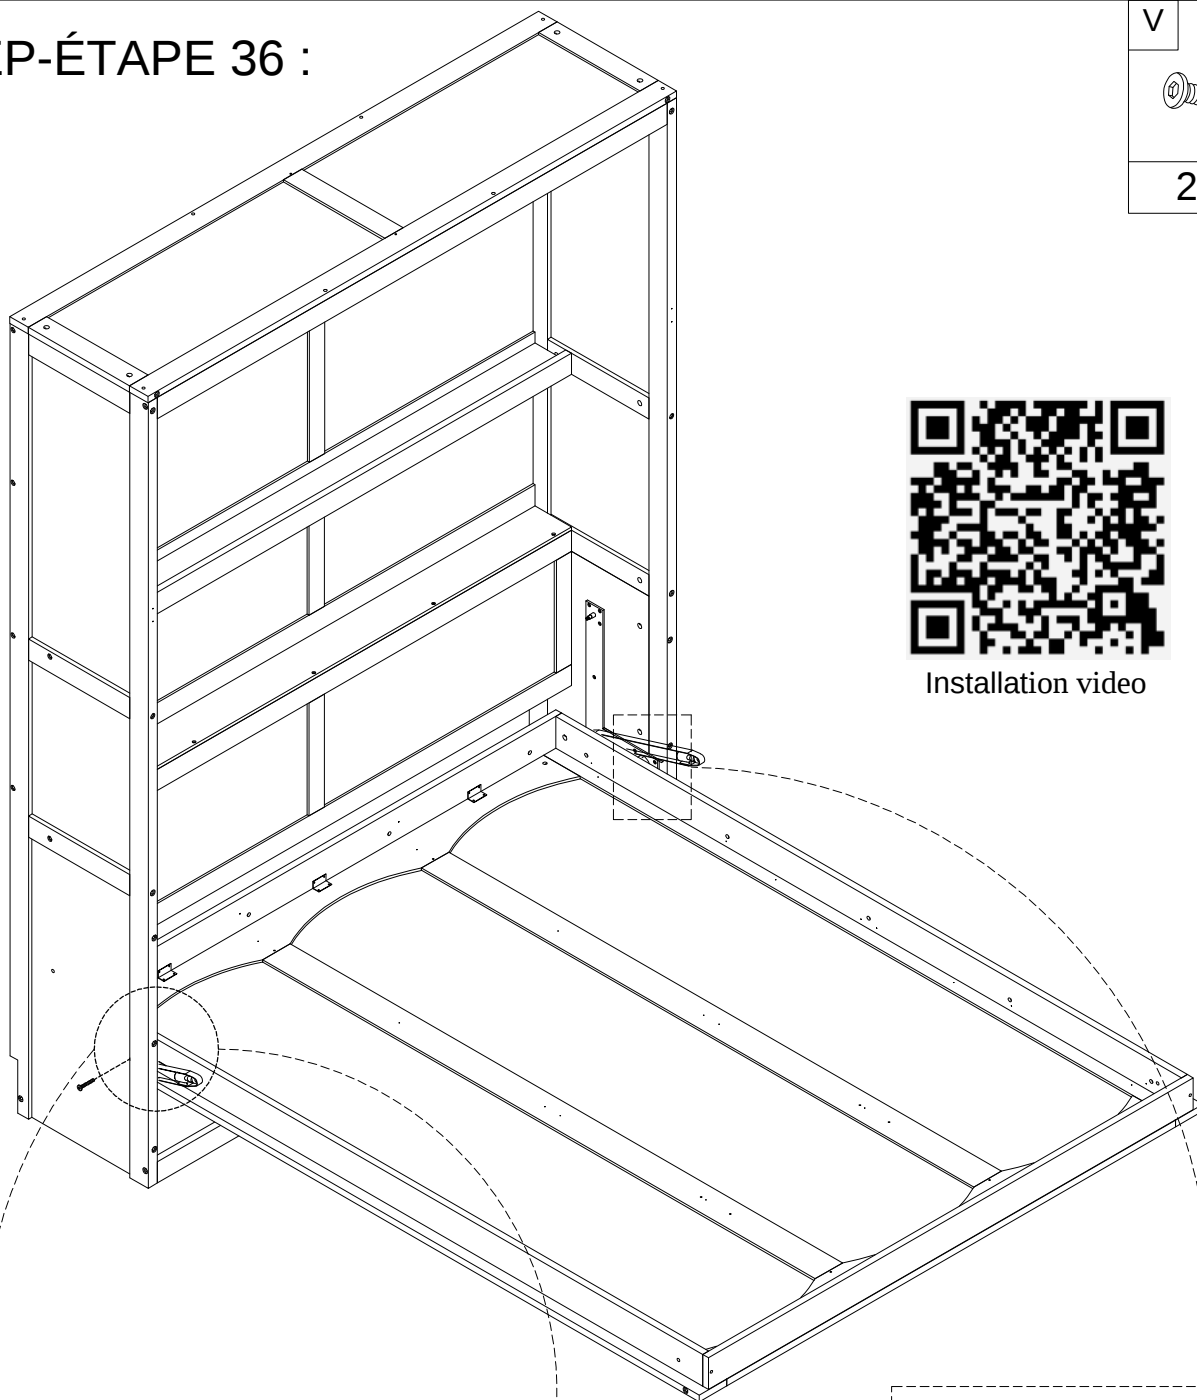


2 people tilt the bed
until accessories are in place)

47/59


STEP-ÉTAPE 37 :

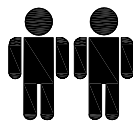

.Requires 2 people to assemble
(1 people hold the large cabinet
in place and 1 people tilt the bed
until accessories are in place)

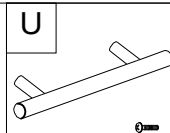

2pcs

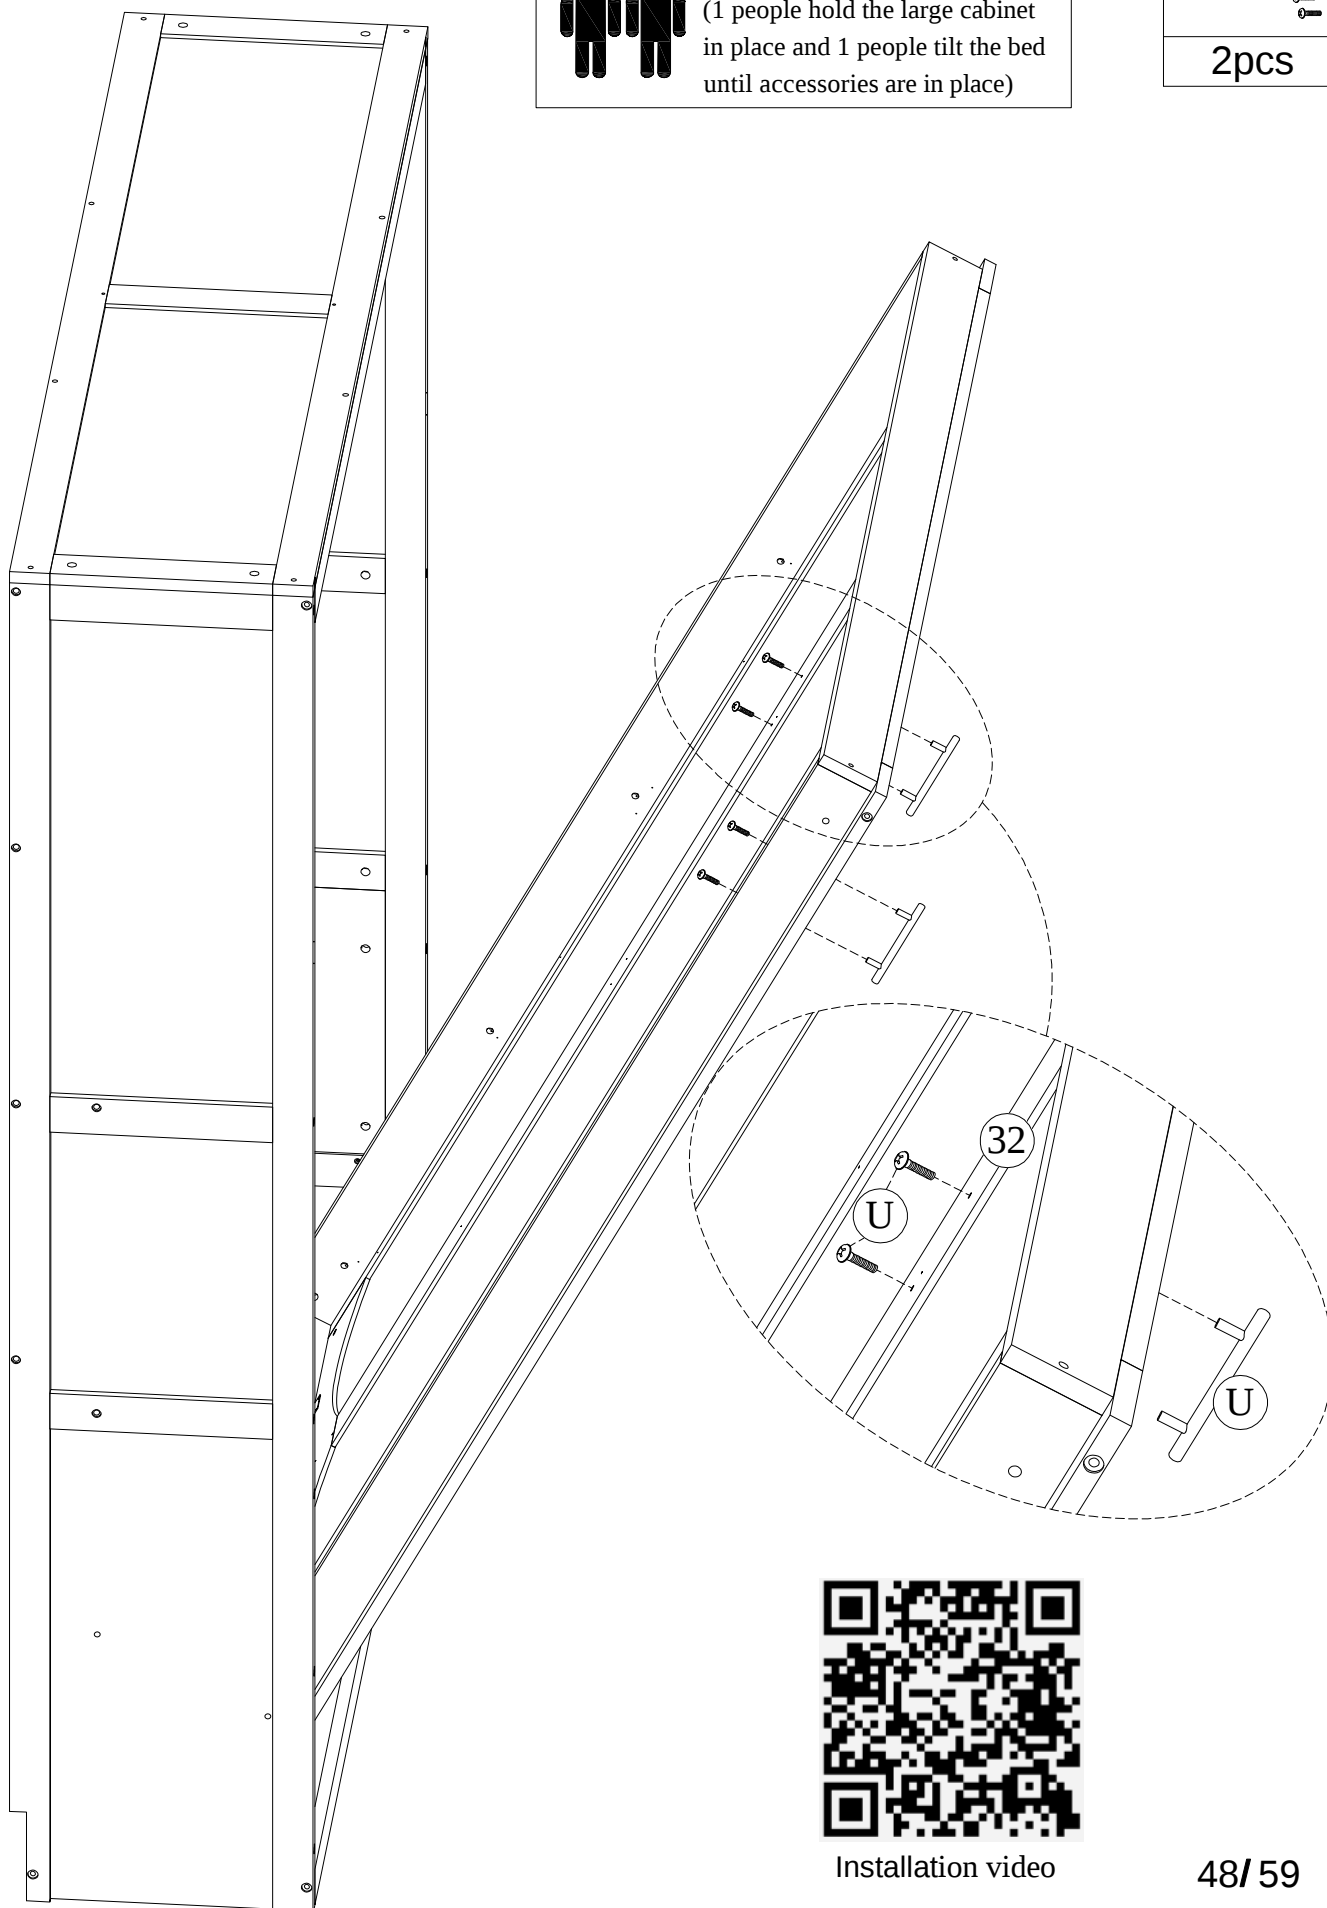


Installation video

STEP-ÉTAPE 38 :


W	Y
	
2pcs	2pcs
	T
	
	2pcs





Installation video

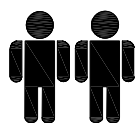


2 people tilt the bed
until accessories are in place)

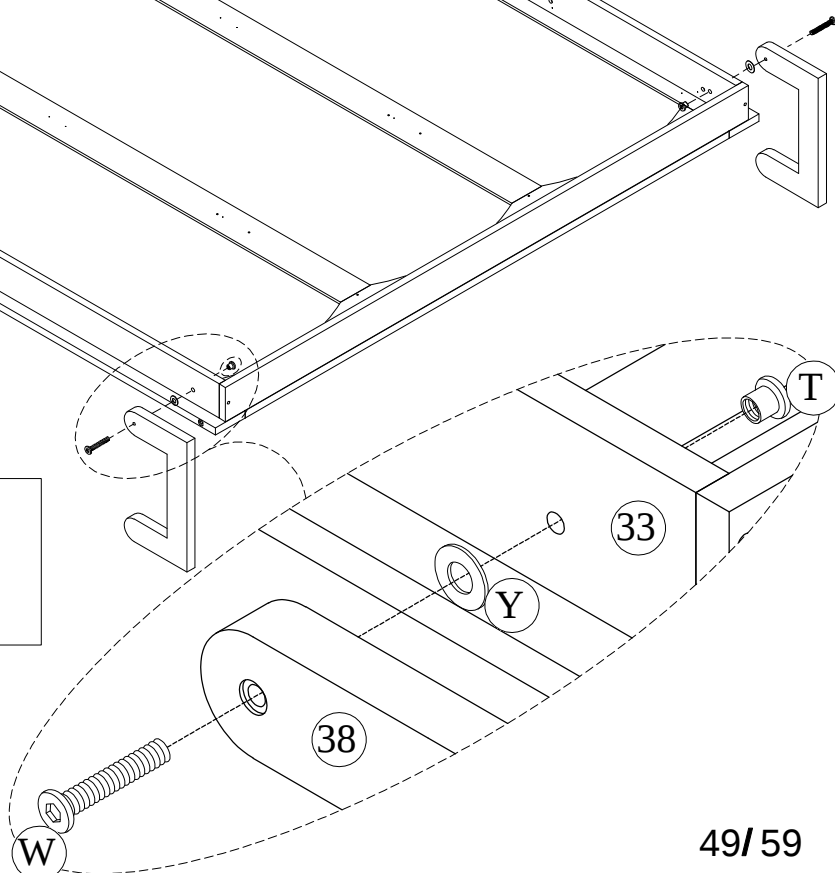


STEP-ÉTAPE 39 :



M	S
	
6pcs	10pcs

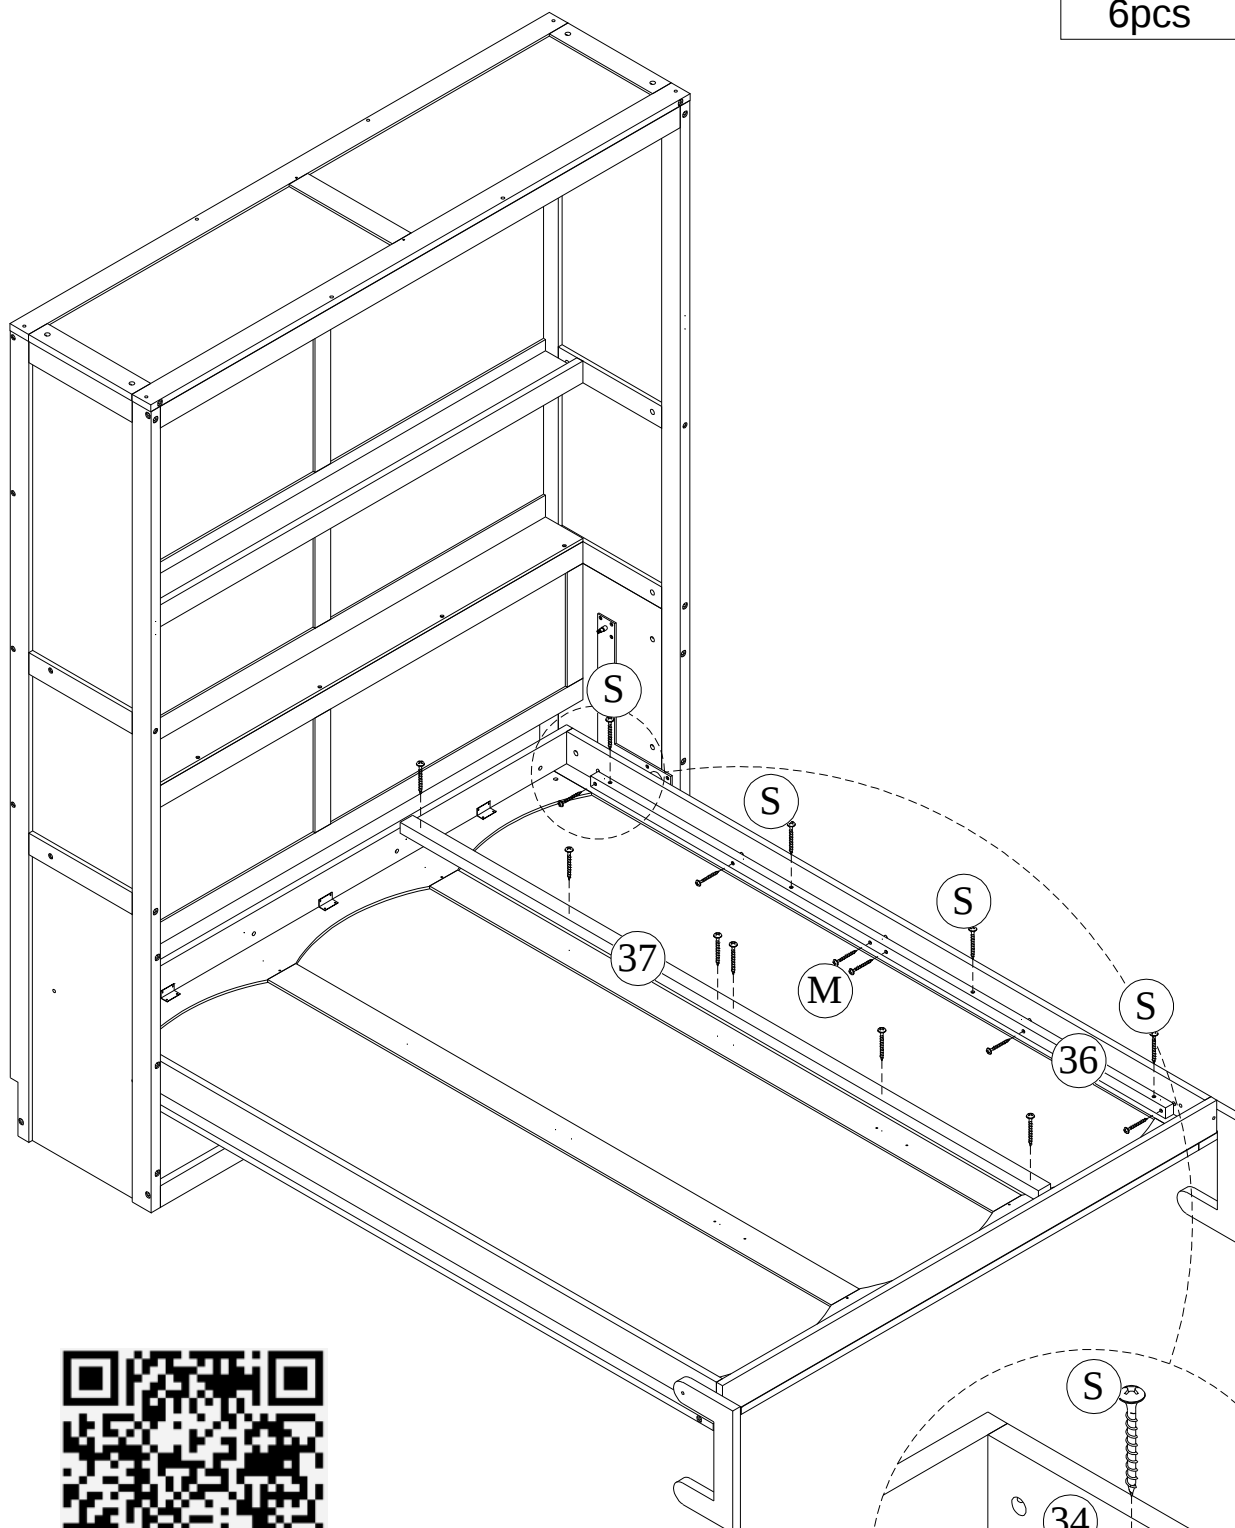


Installation video

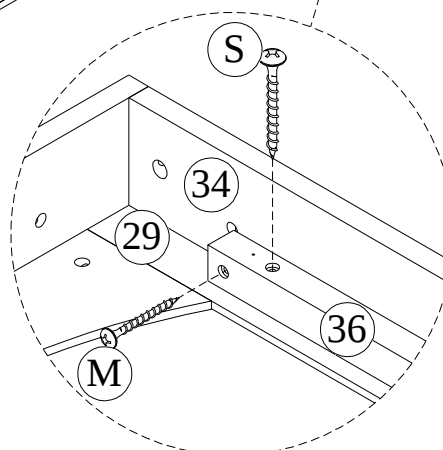



STEP-ÉTAPE 40 :


M	S
	
6pcs	10pcs

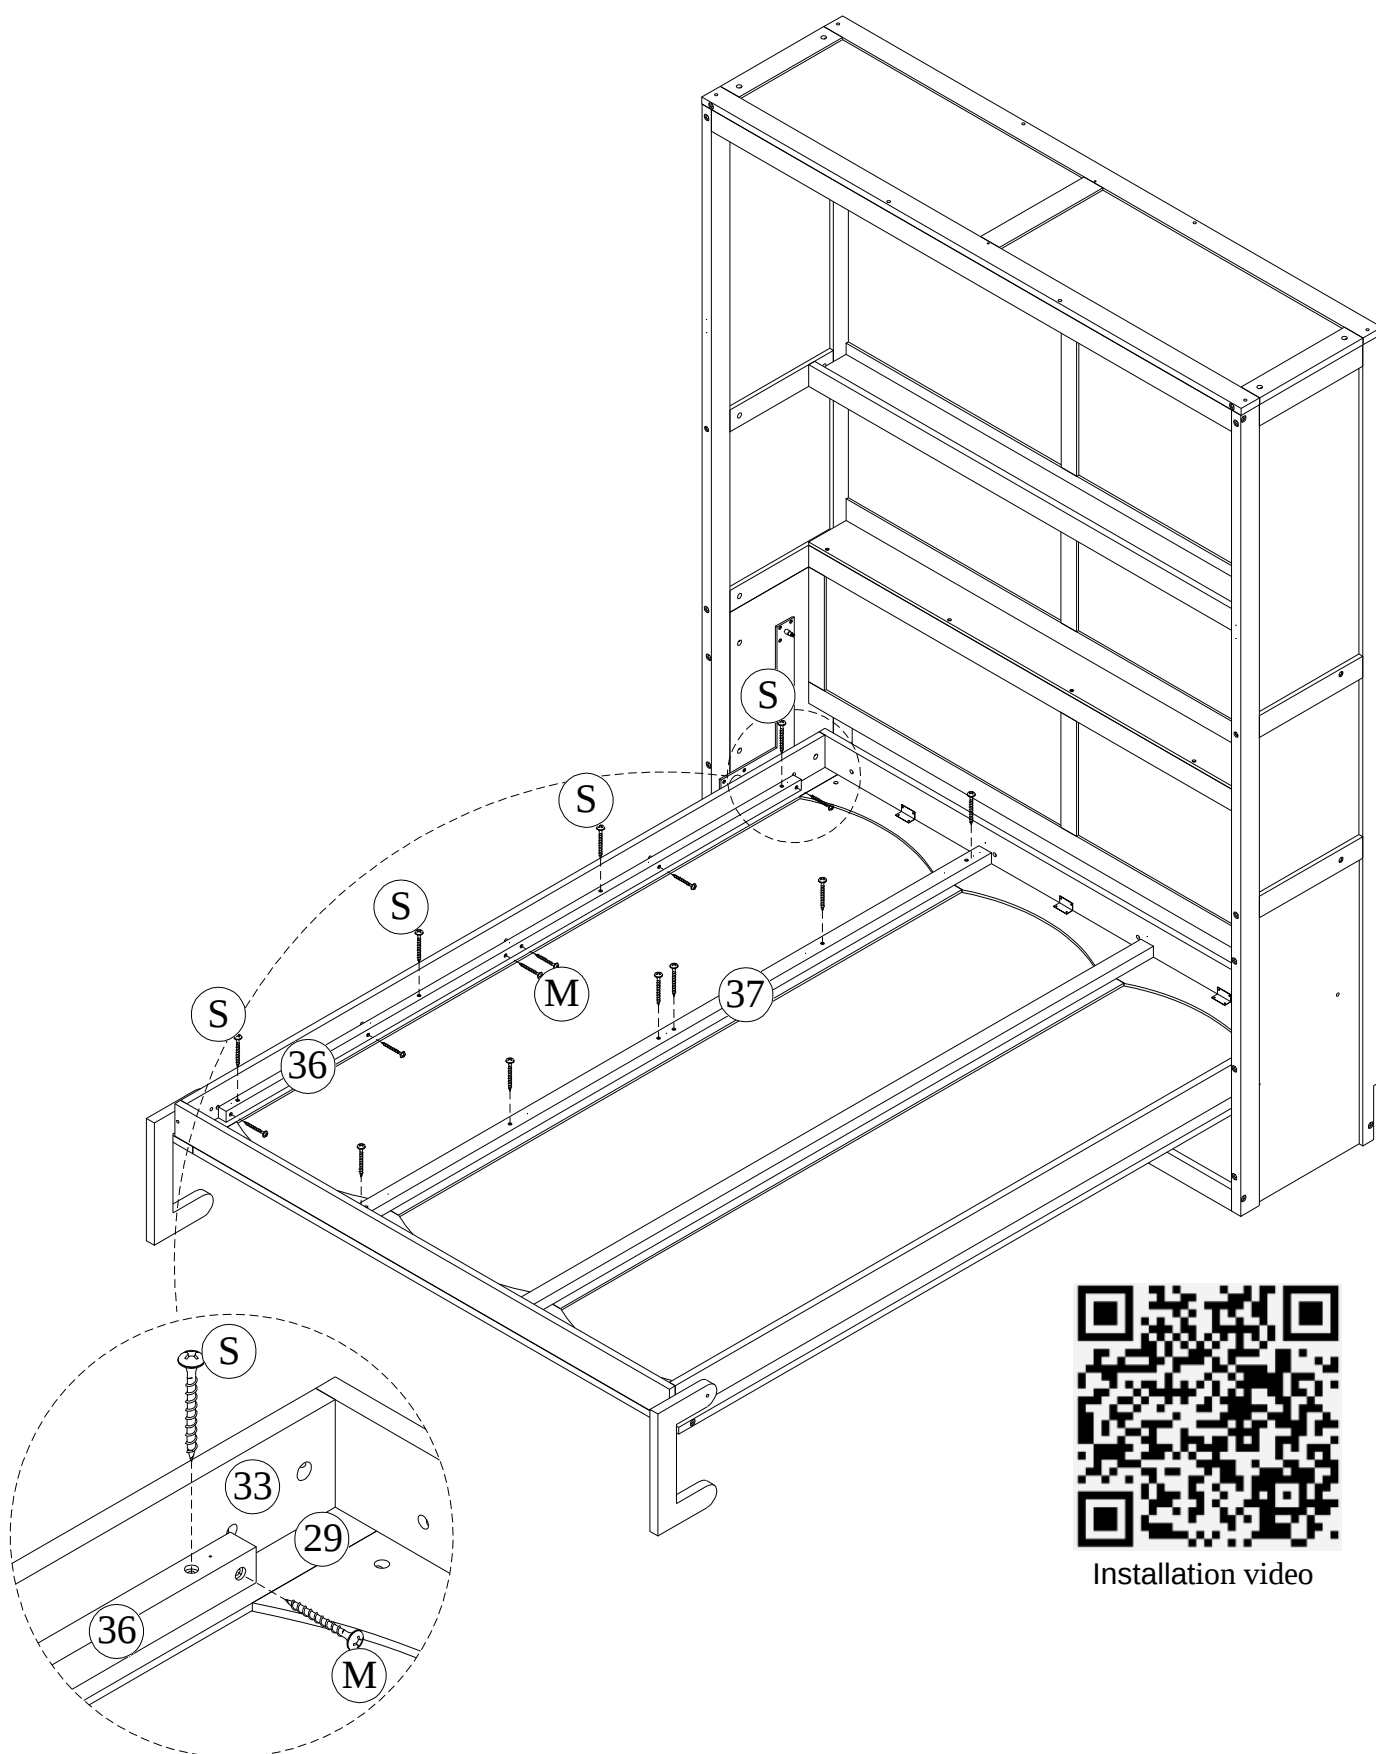

Installation video

STEP-ÉTAPE 41 :


AB	F
	
4pcs	12pcs

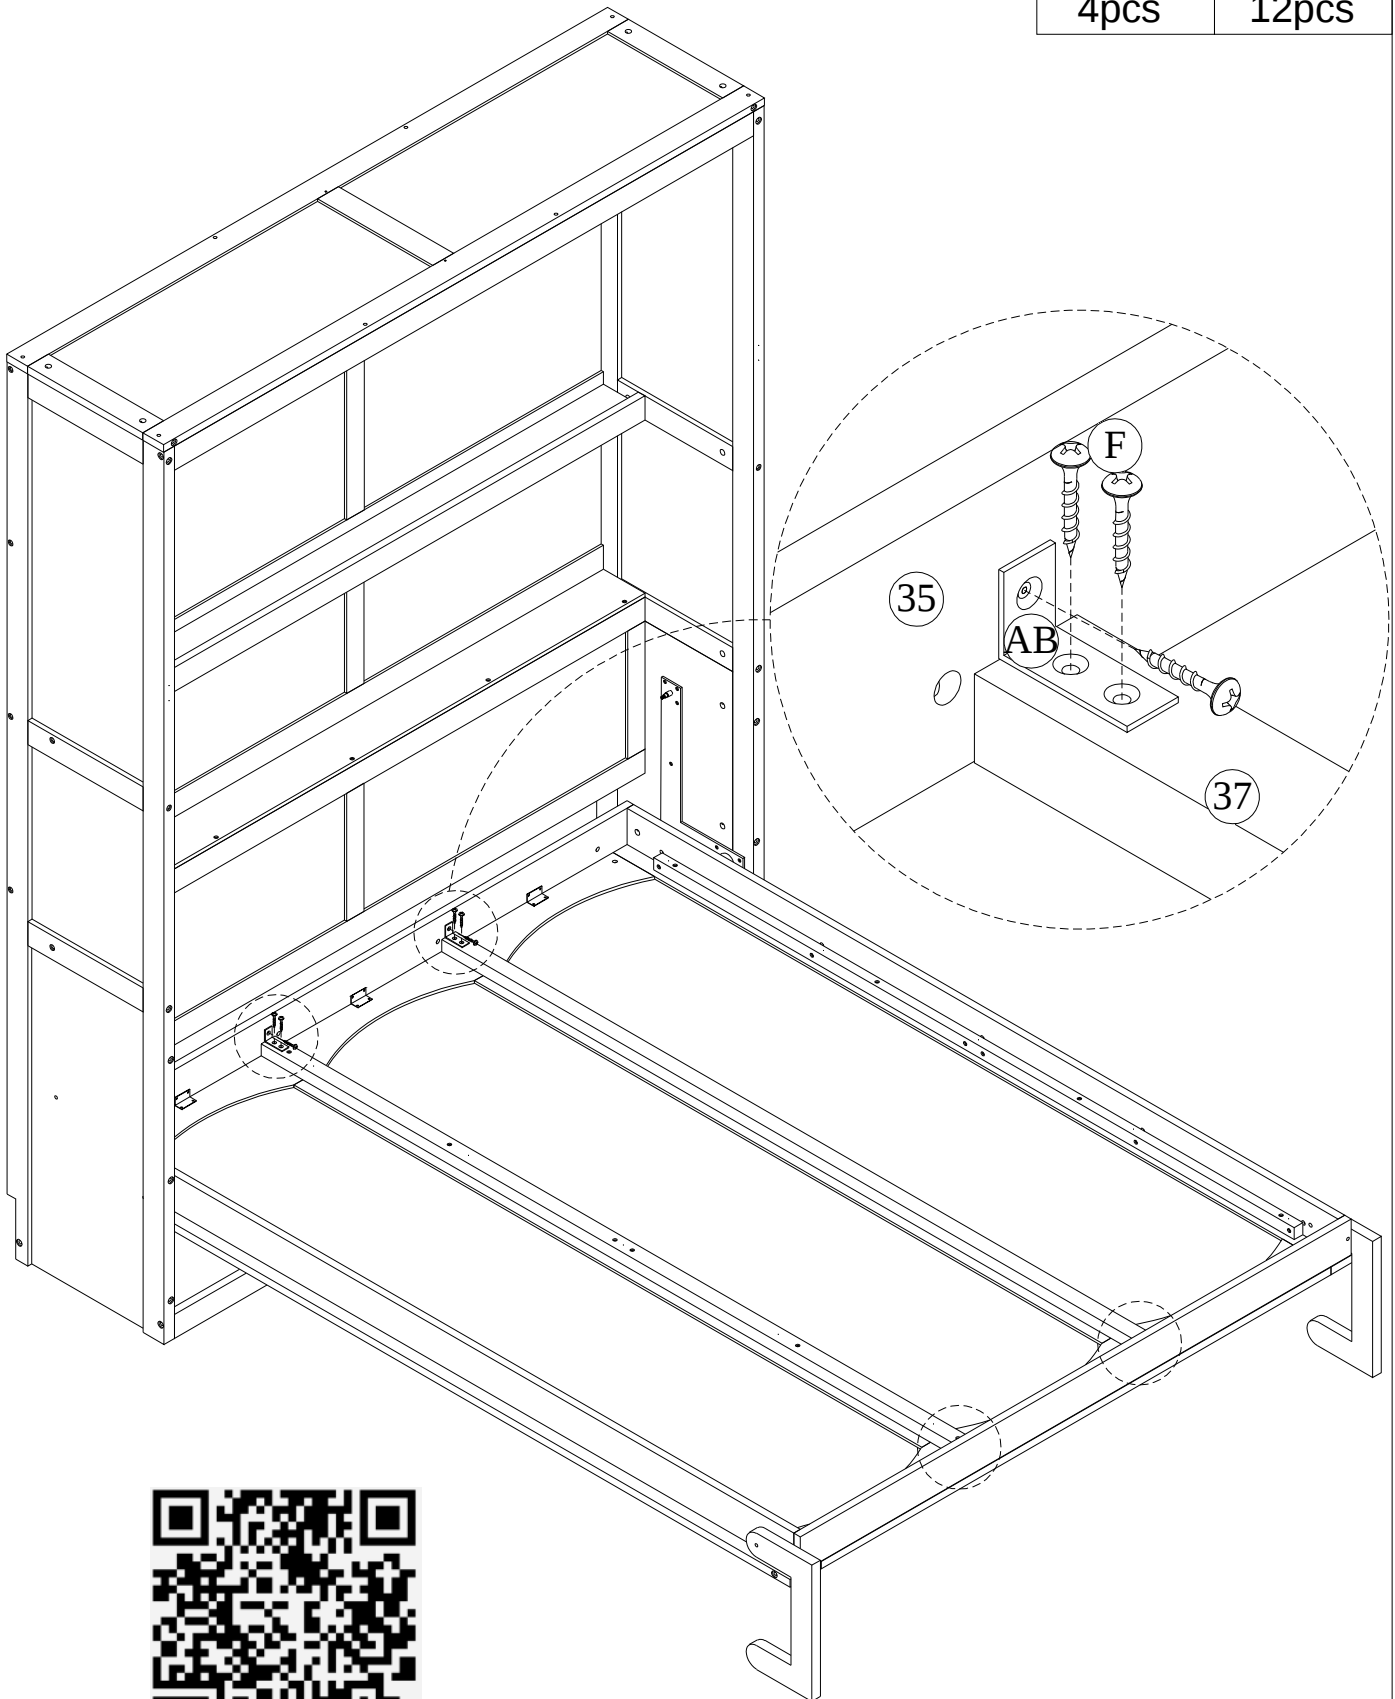


Installation video

STEP-ÉTAPE 42 :

M




20pcs

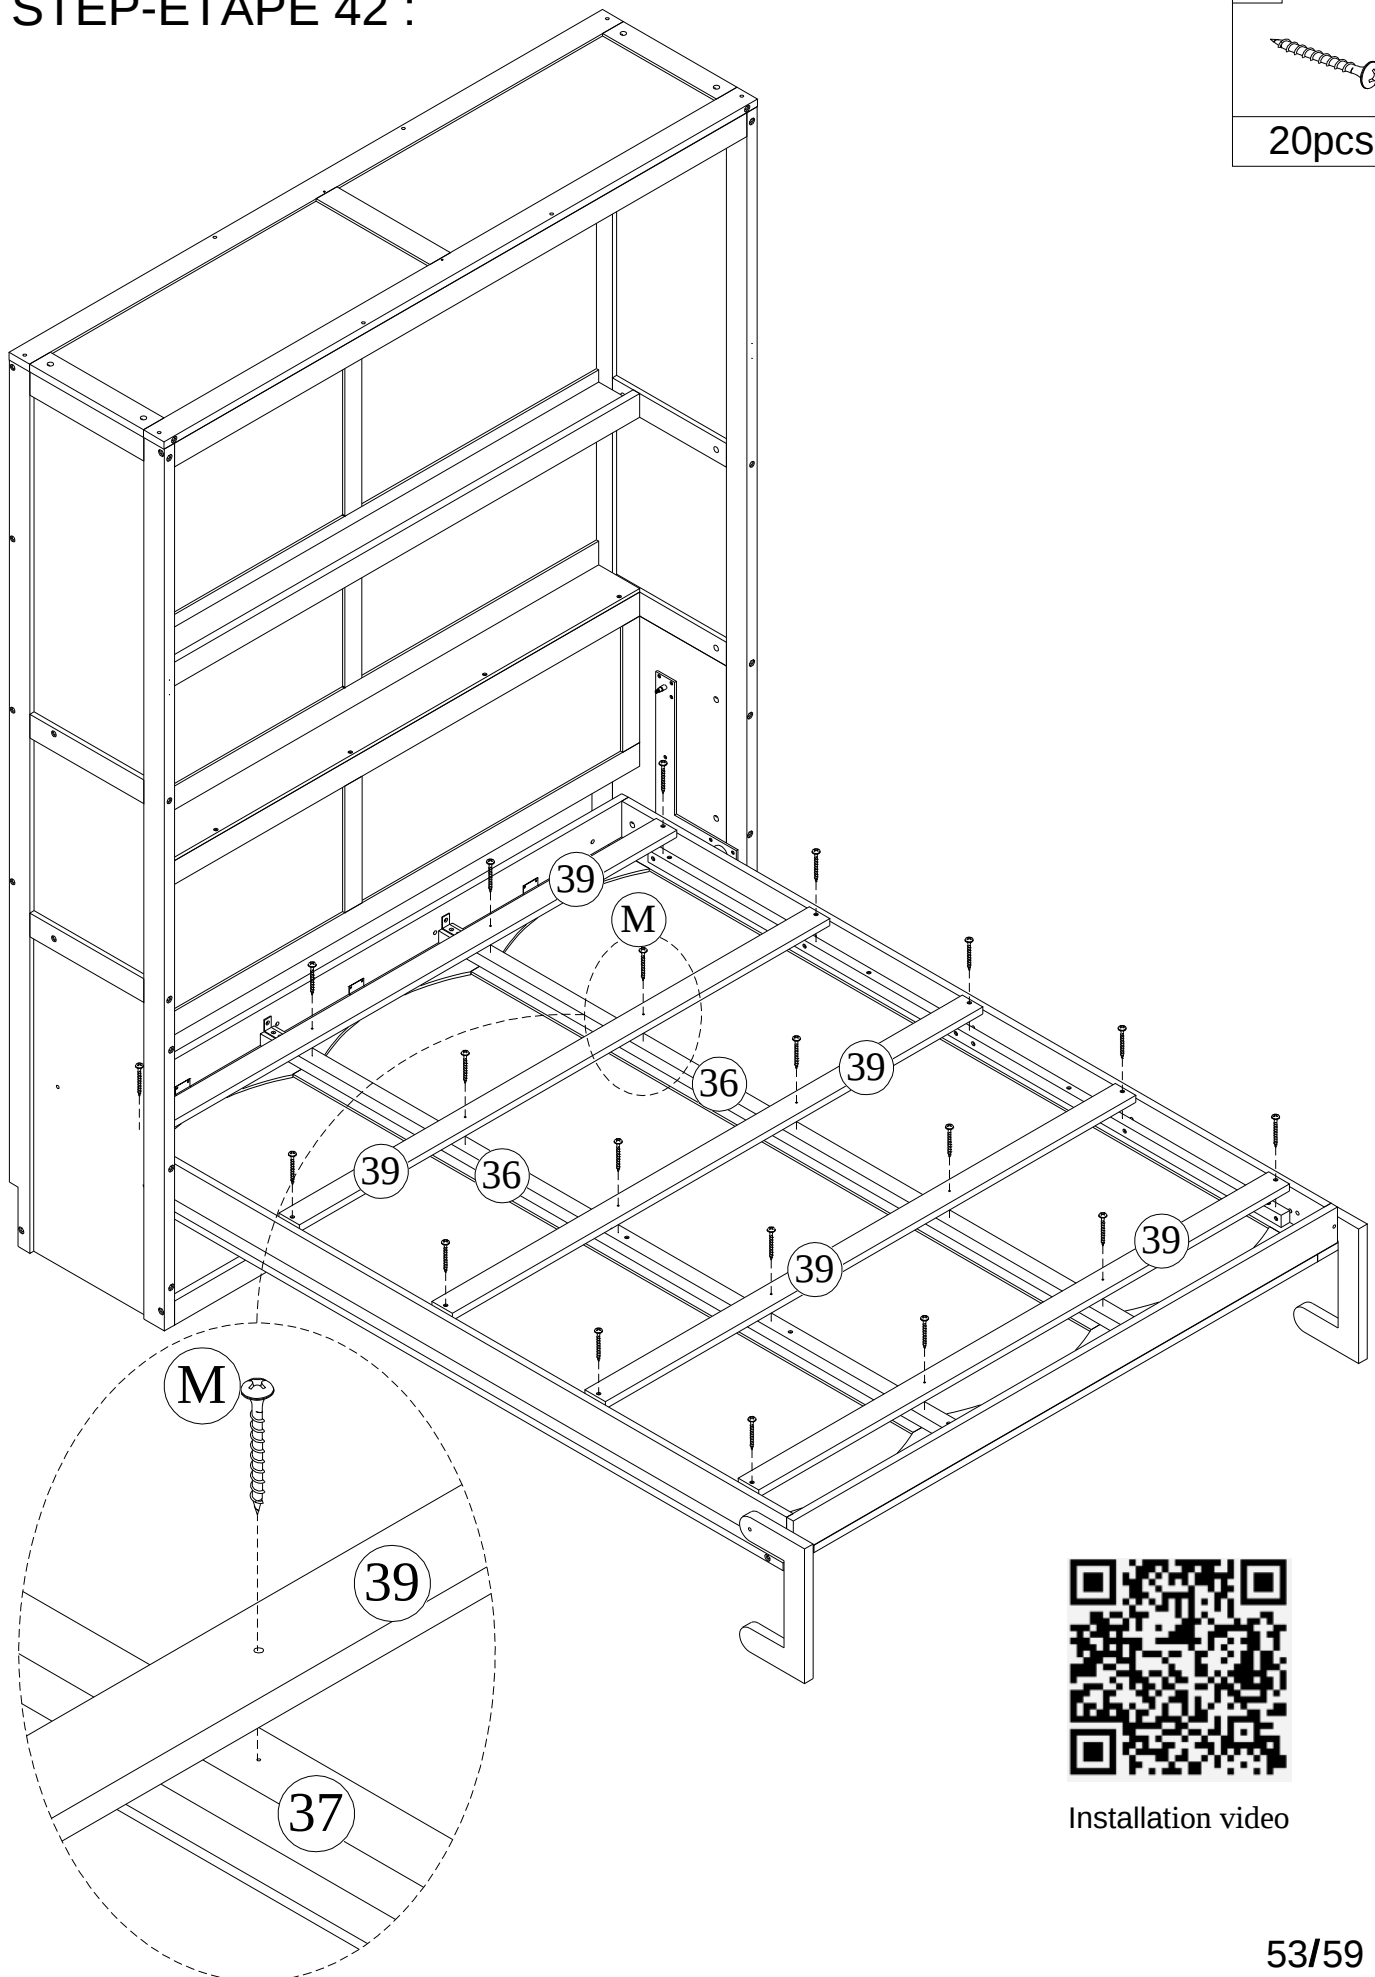


Installation video

STEP-ÉTAPE 43:

FF





2pcs

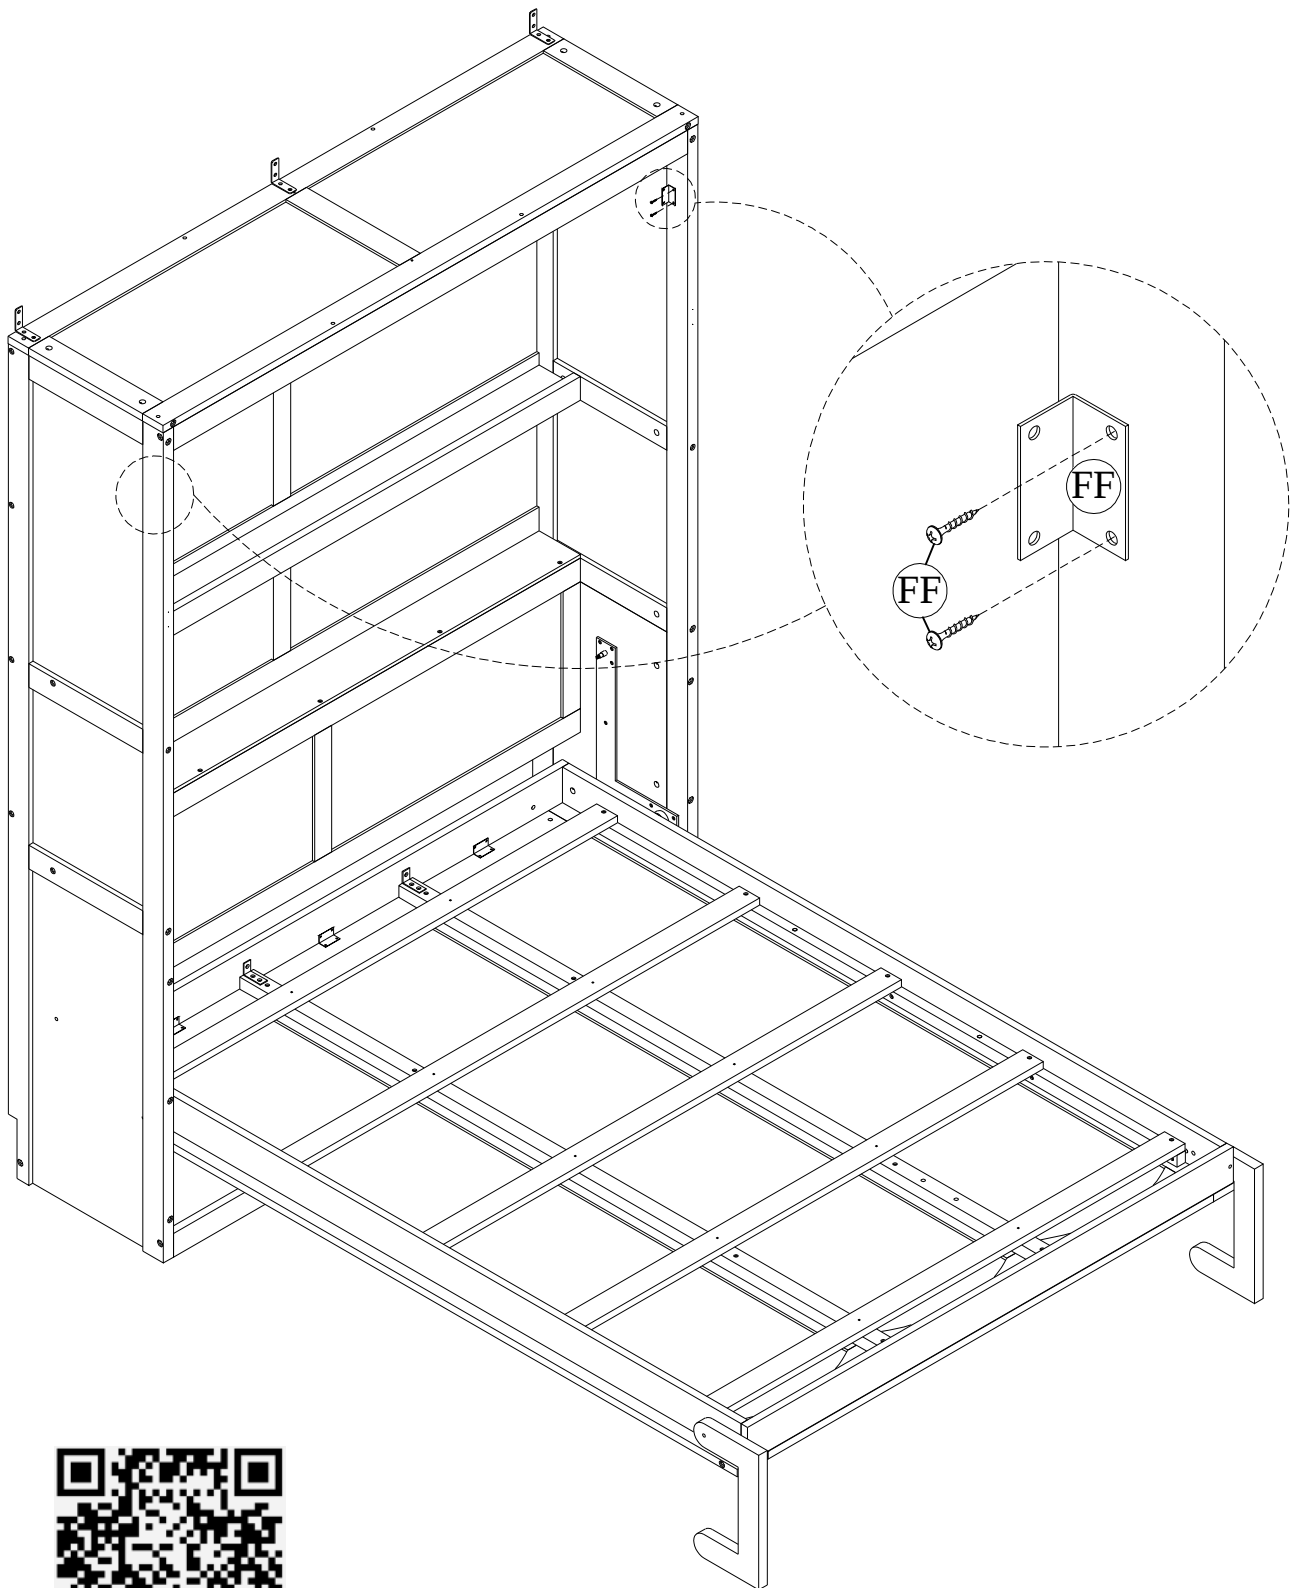

Installation video

STEP-ÉTAPE 44:

CC	R
	
1pc	2pcs

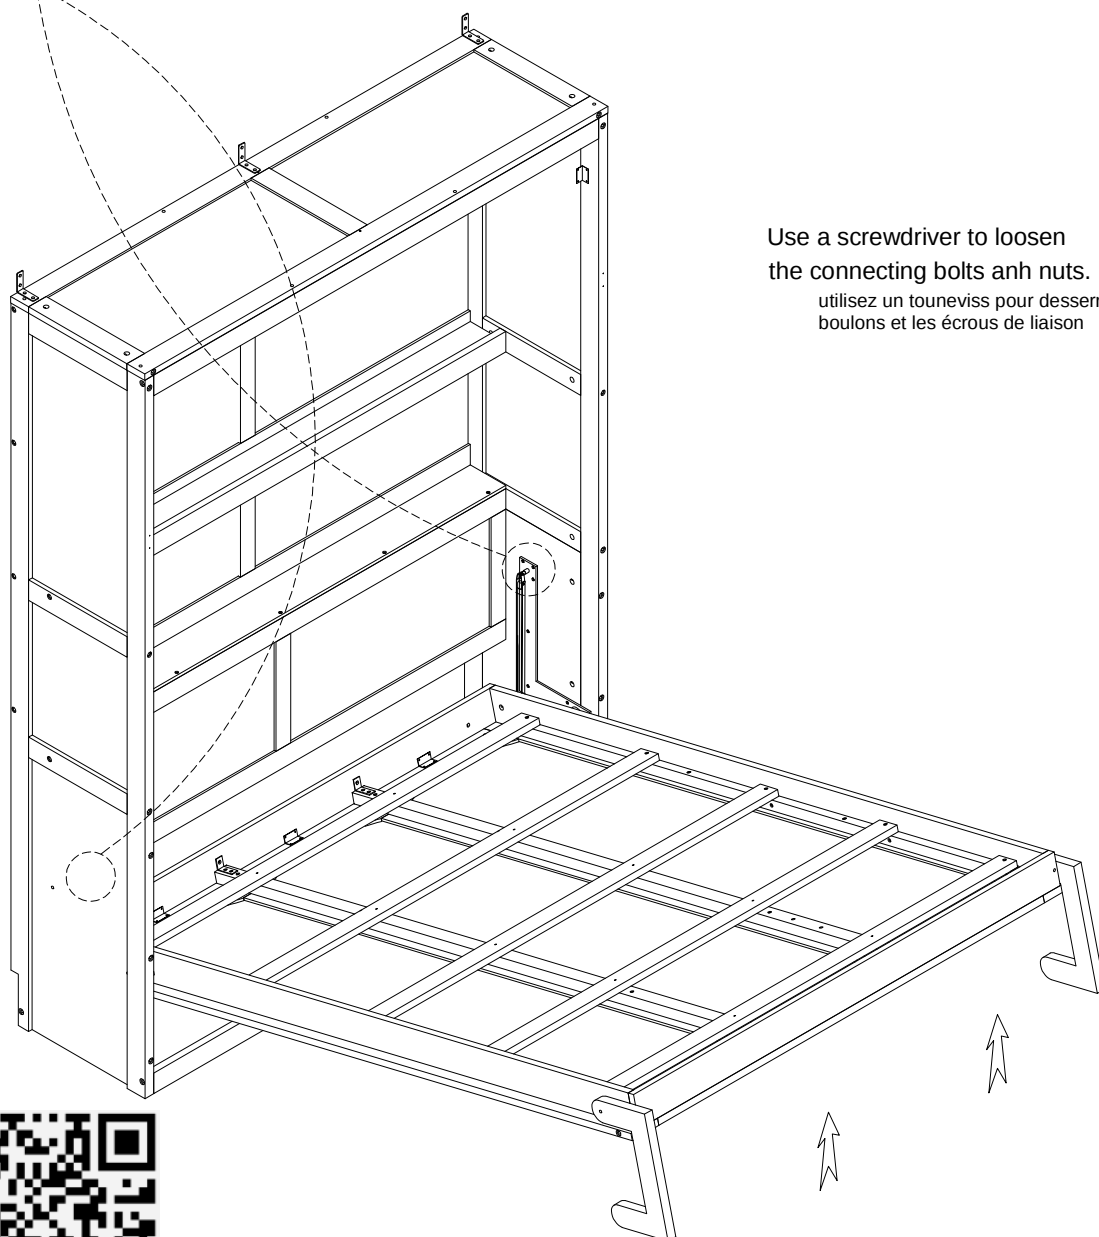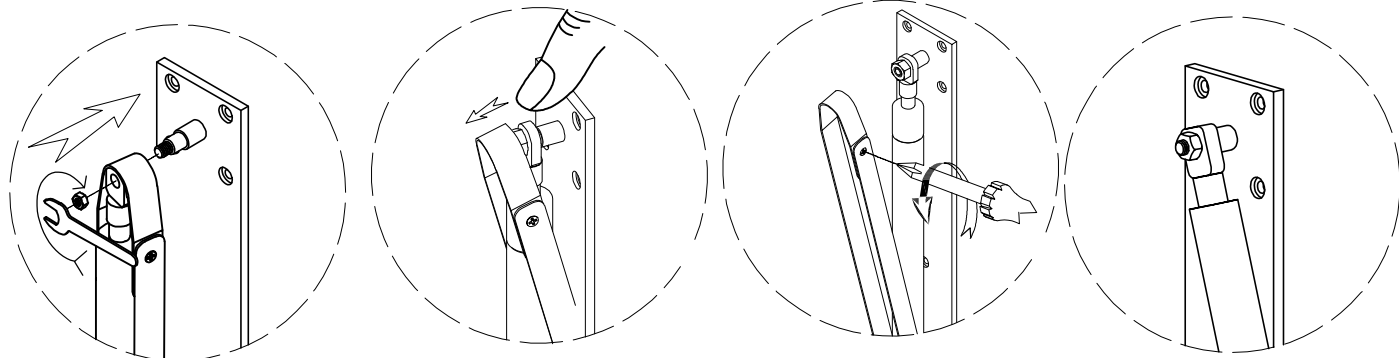

Use a screwdriver to loosen
the connecting bolts and nuts.
utilisez un tournevis pour desserrer les
boulons et les écrous de liaison






Installation video




One person pushes the head of the bed up,
two people insert the syringe

STEP-ÉTAPE 45:

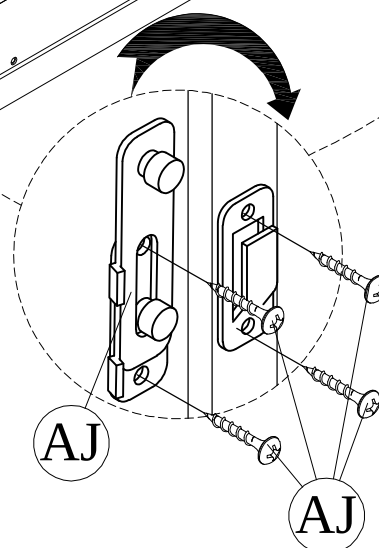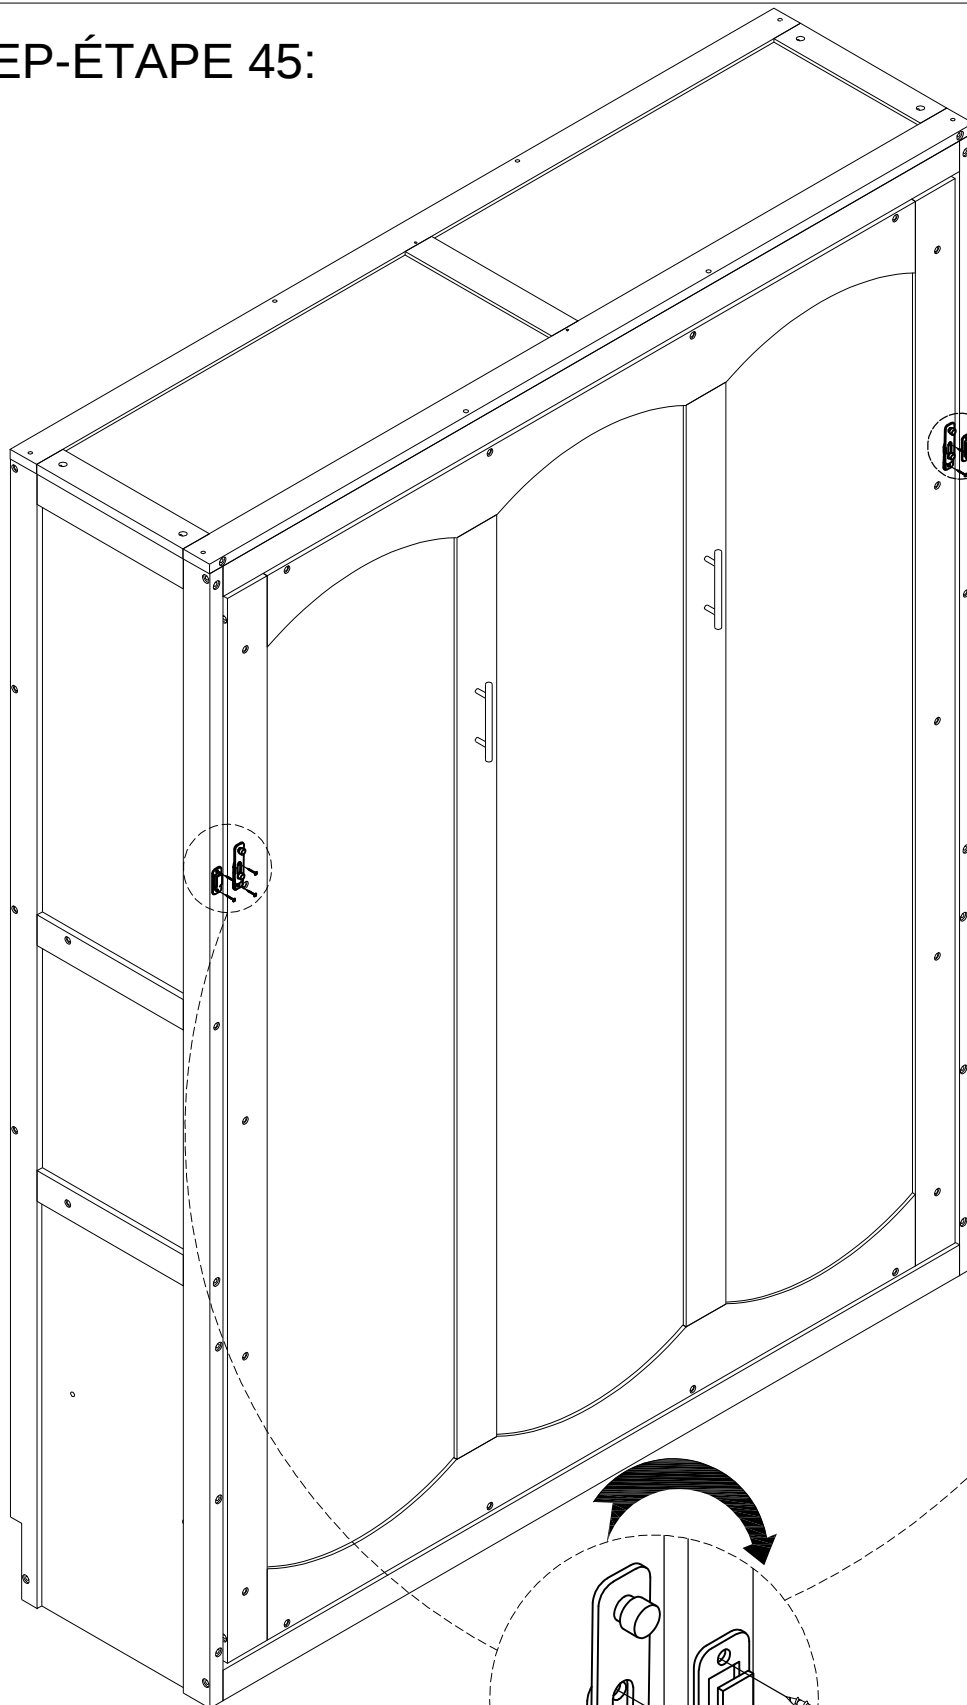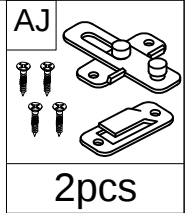


Installation video

FINISH OPTION 1:
FINITION OPTION 1:

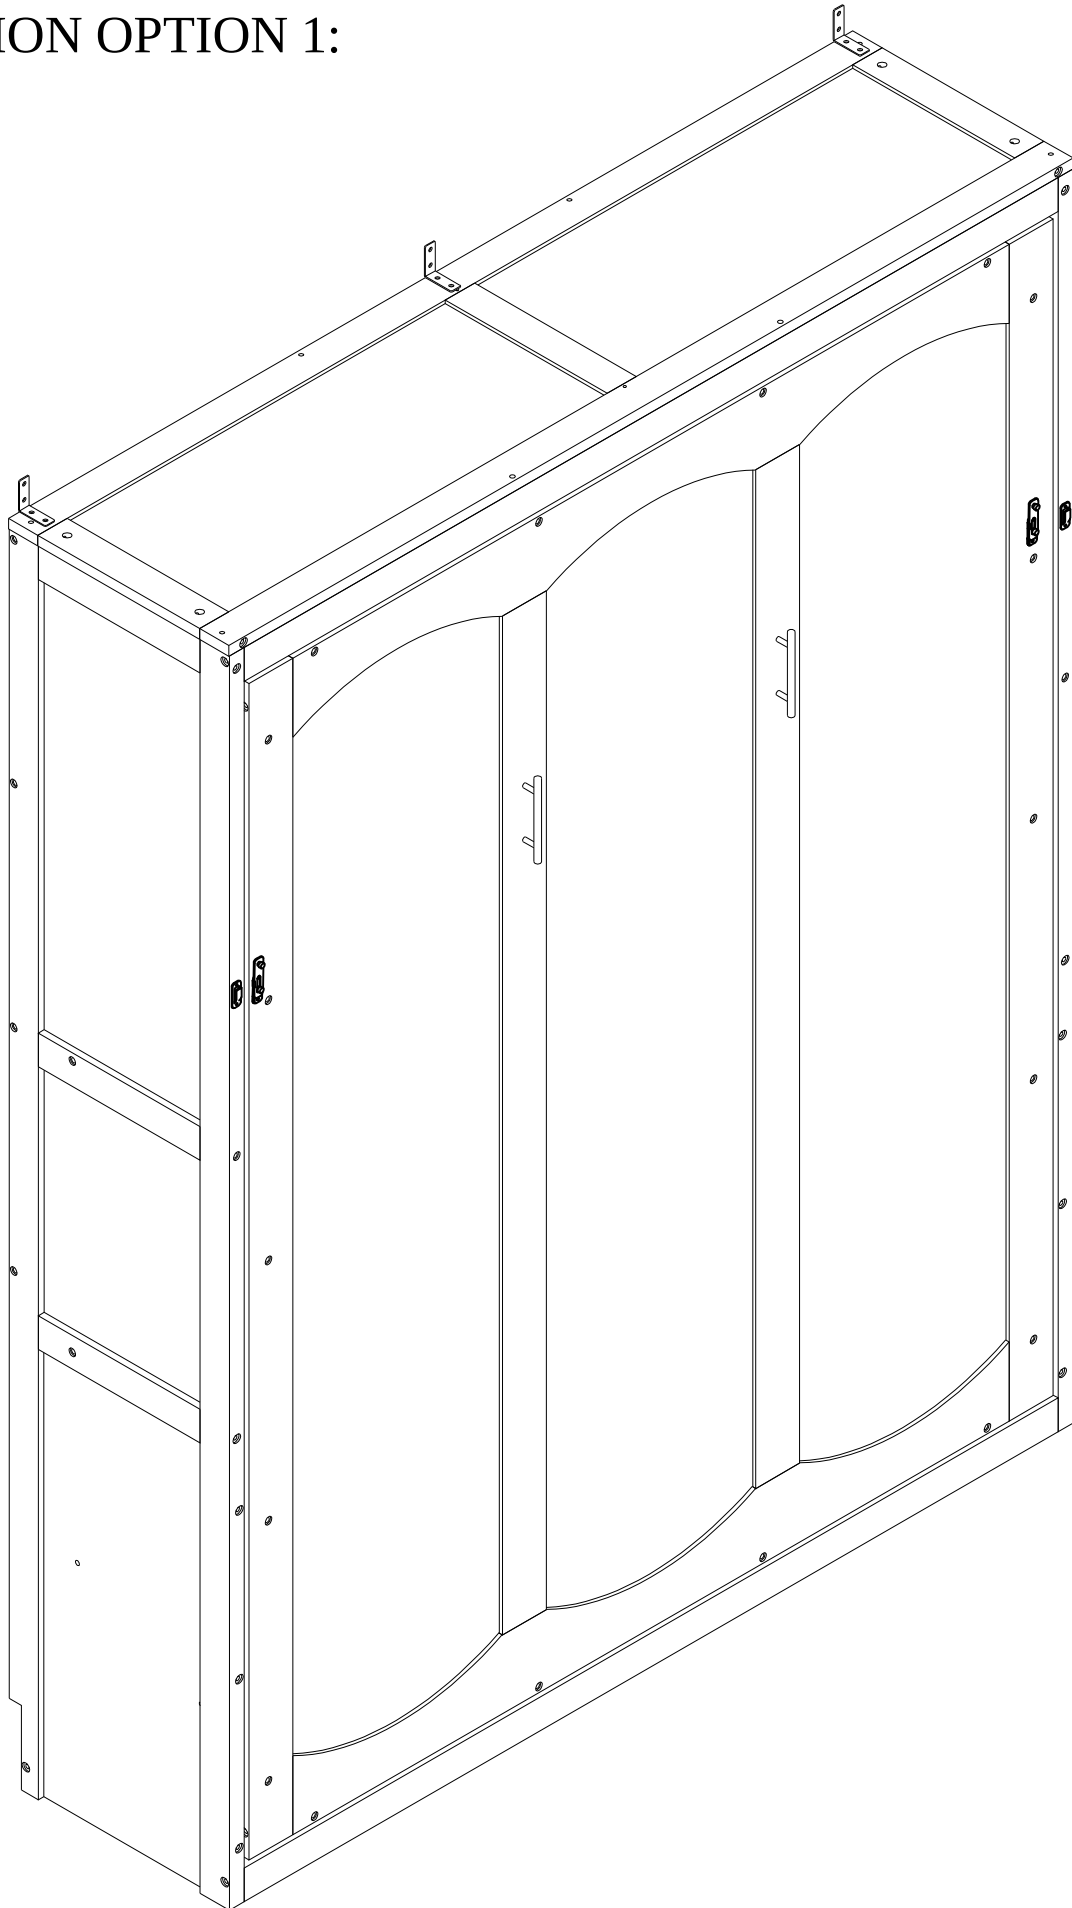

STEP-ÉTAPE 46 :

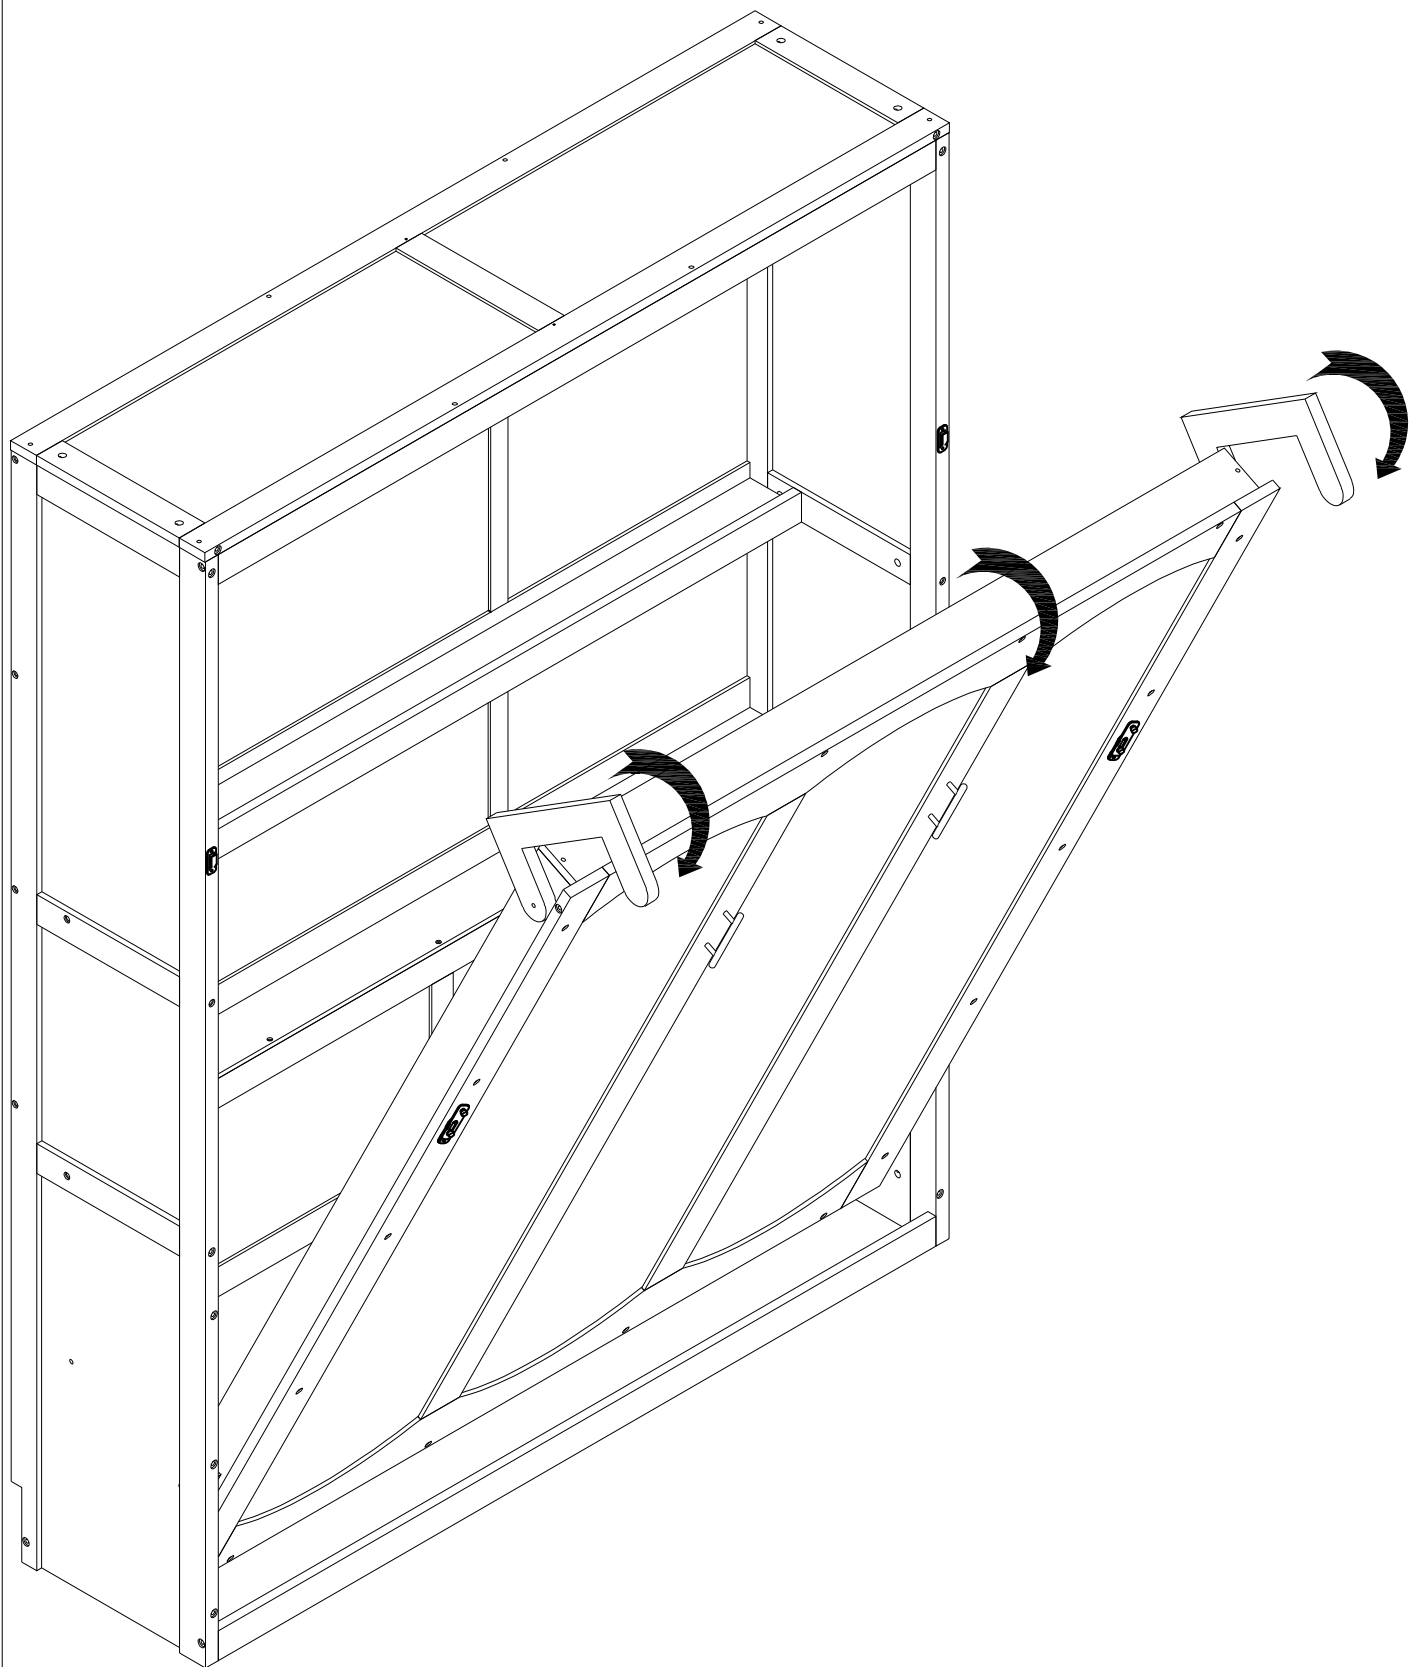

FINISH OPTION 2:
FINITION OPTION 2:

