


# CT-301-1#

Sideboard cabinet

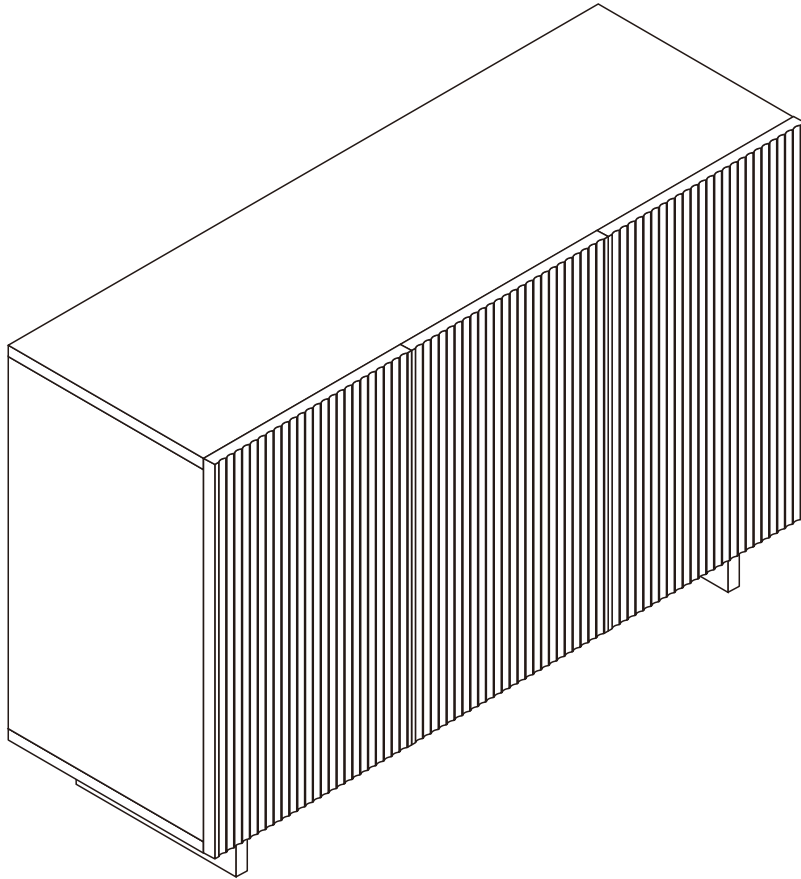


2 Persons


L1200\*W418\*H800MM





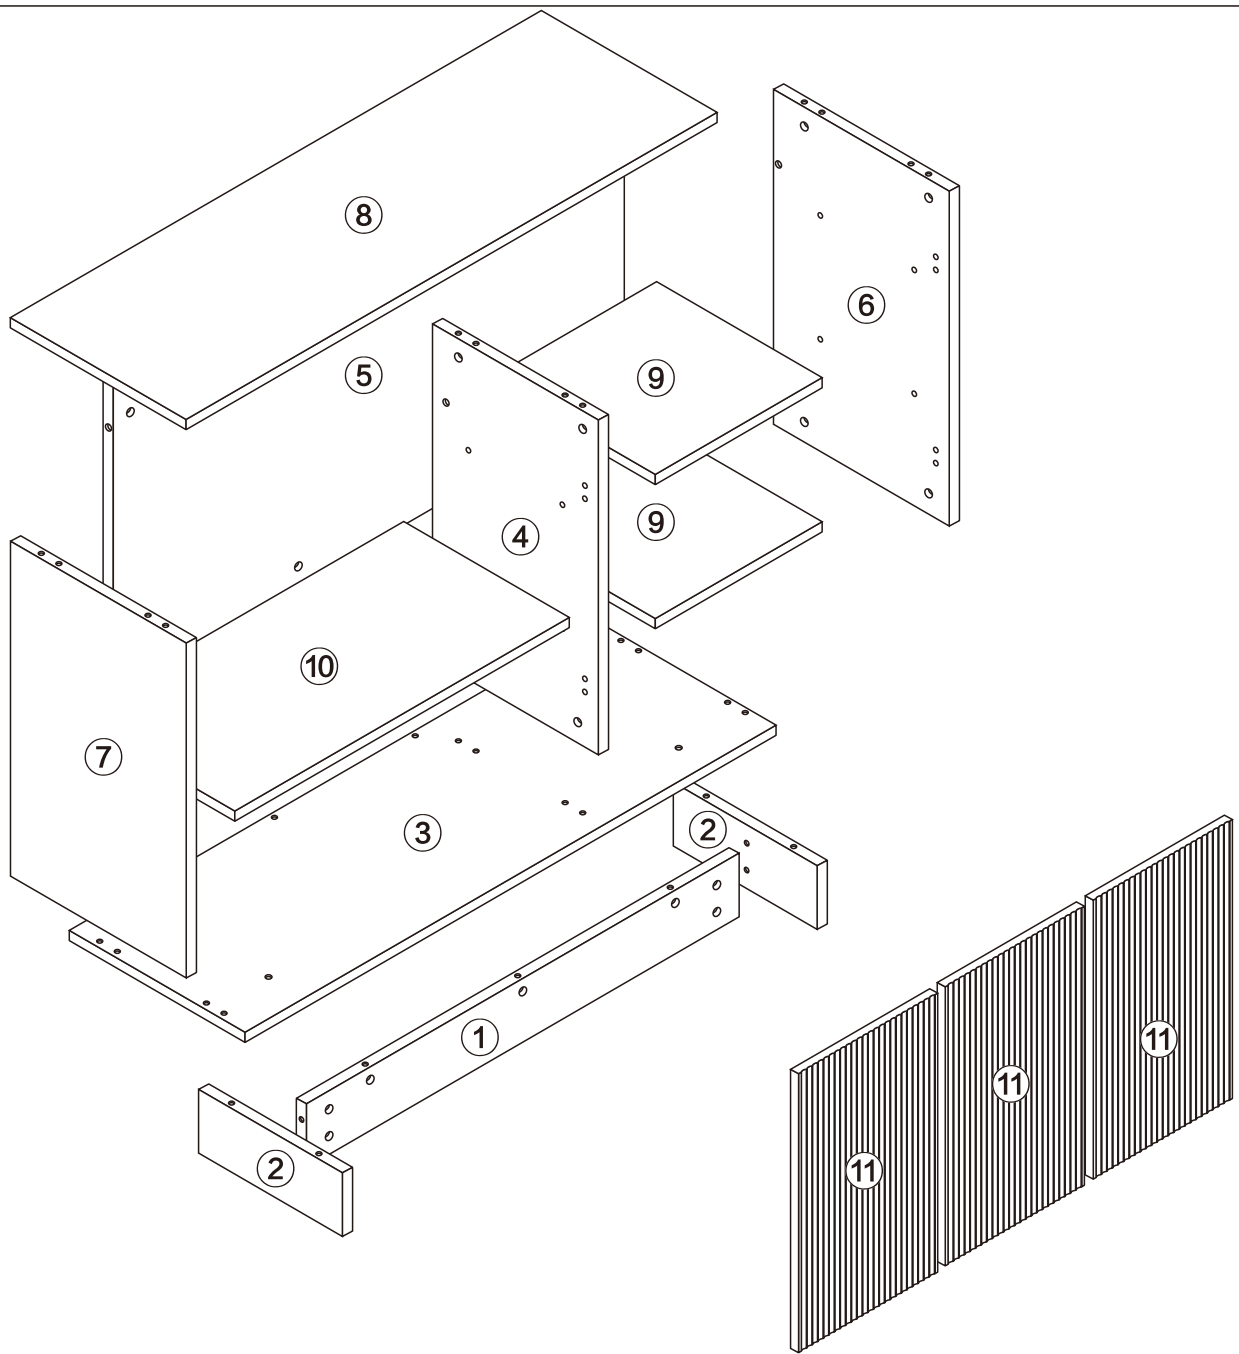


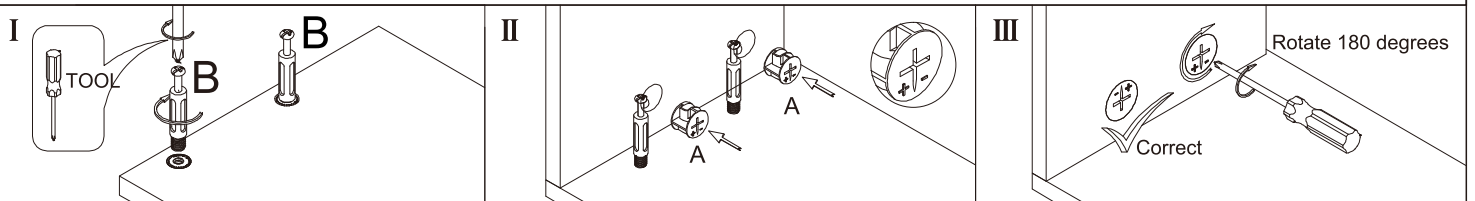



## Installation Instructions









Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.




Disassembly and installation of accessories



<b>A</b> 33PCS  15*10mm	<b>B</b> 33PCS  6*28mm	<b>C</b> 12PCS  3.5*14mm	<b>D</b> 12PCS  8*30mm	<b>E</b> 12PCS  Φ5*8mm	<b>F1</b> 4PCS 	<b>F2</b> 2PCS 	 Tools Recommended	
<b>G</b> 7PCS  Φ15mm	<b>H</b> 24PCS  4*12mm	<b>I</b> 4PCS  6*35mm						

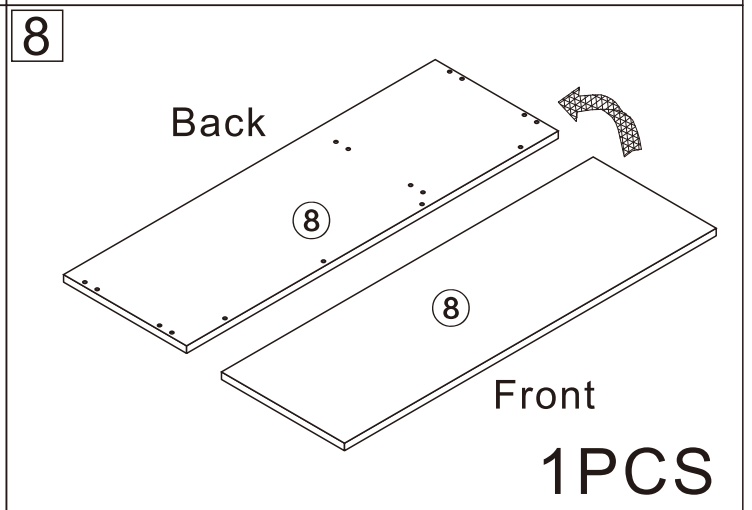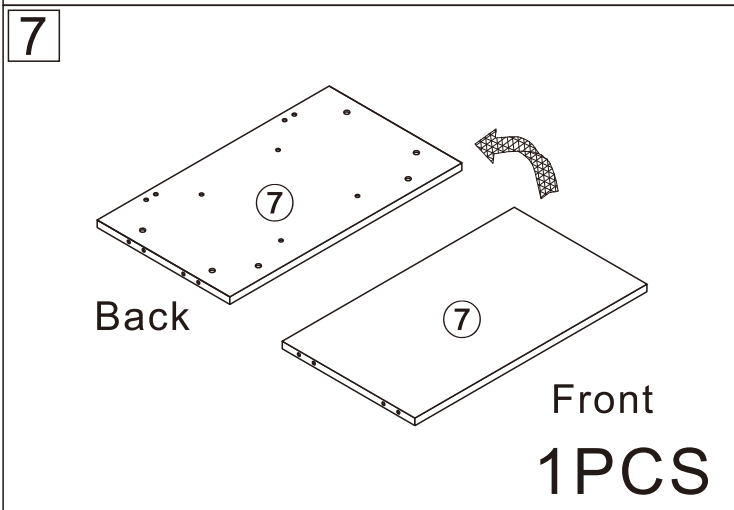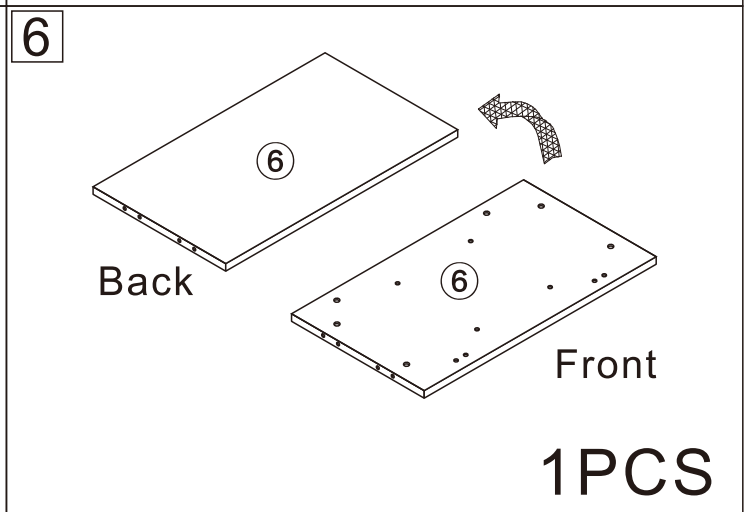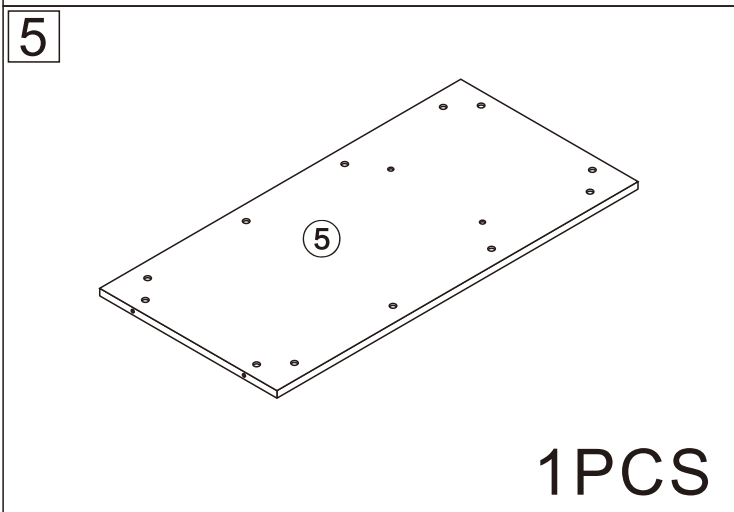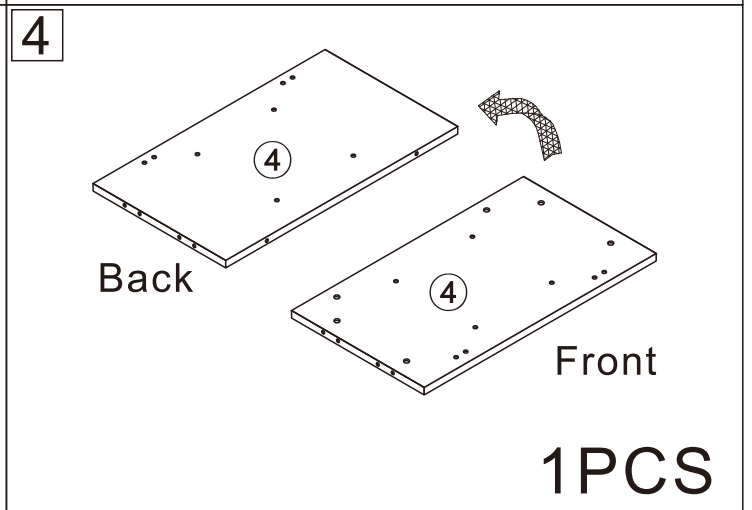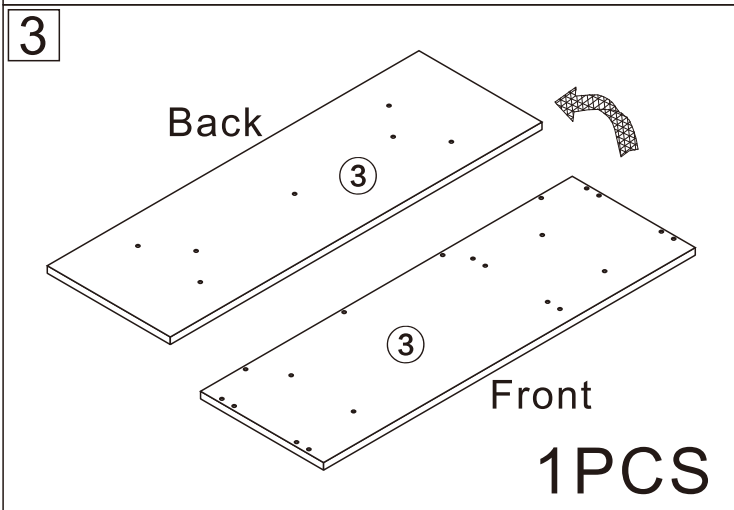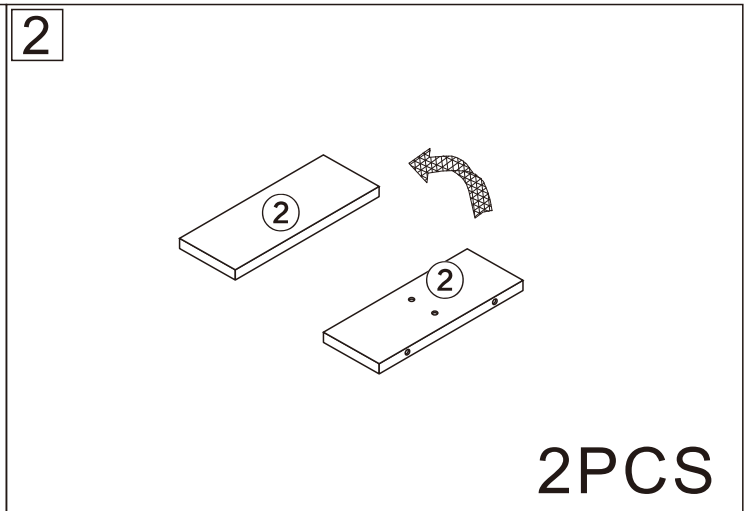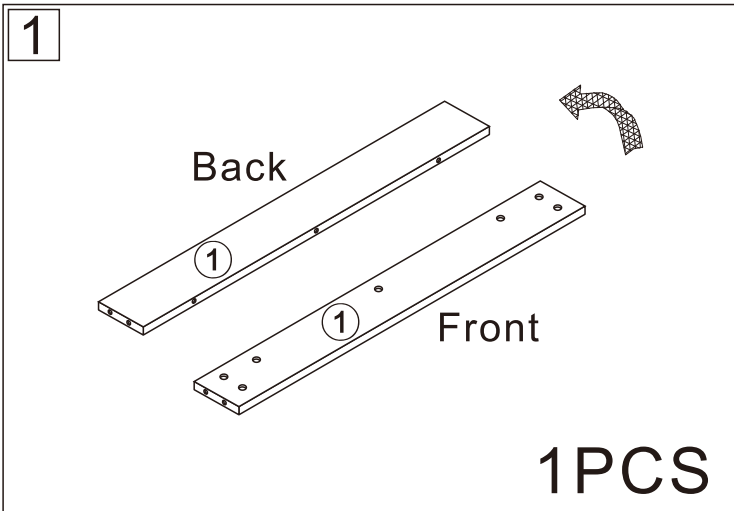


9

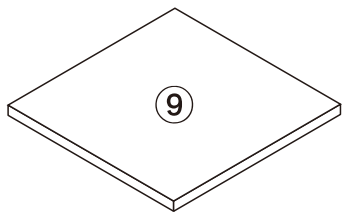


2PCS

10

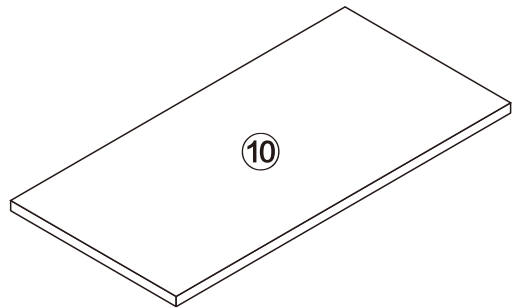







1PCS


11

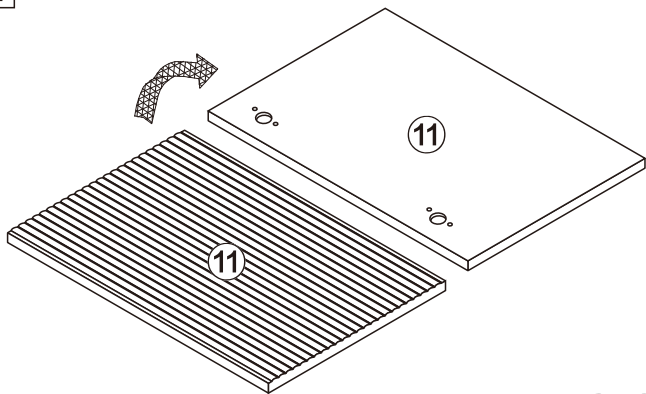


3PCS

1

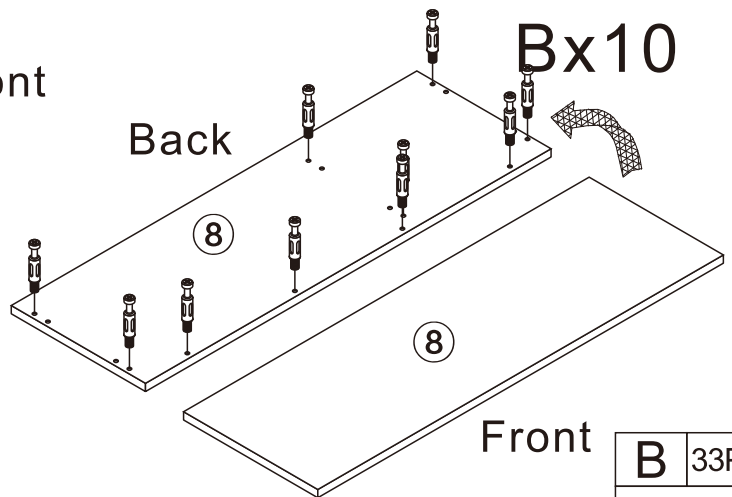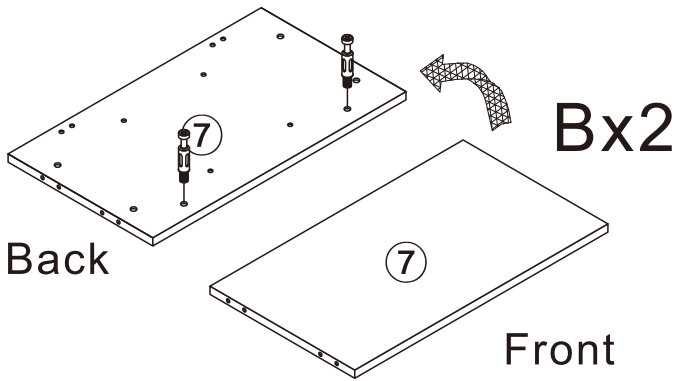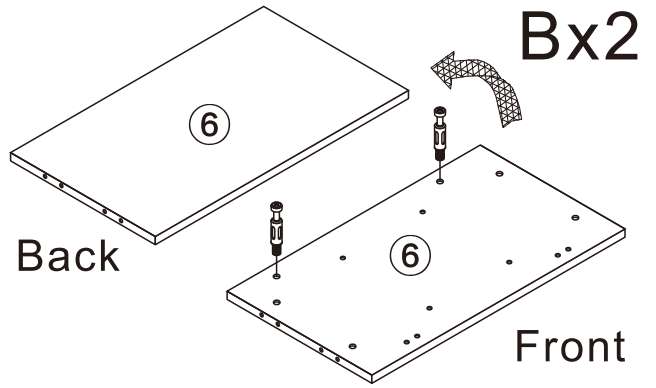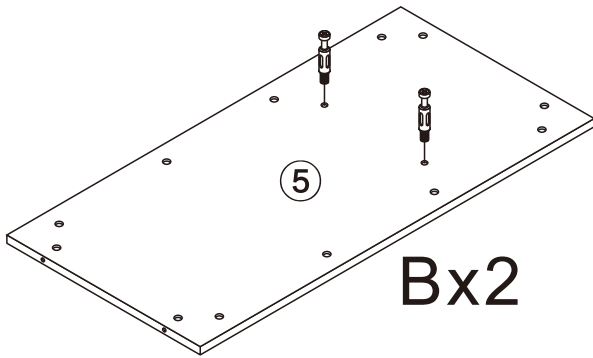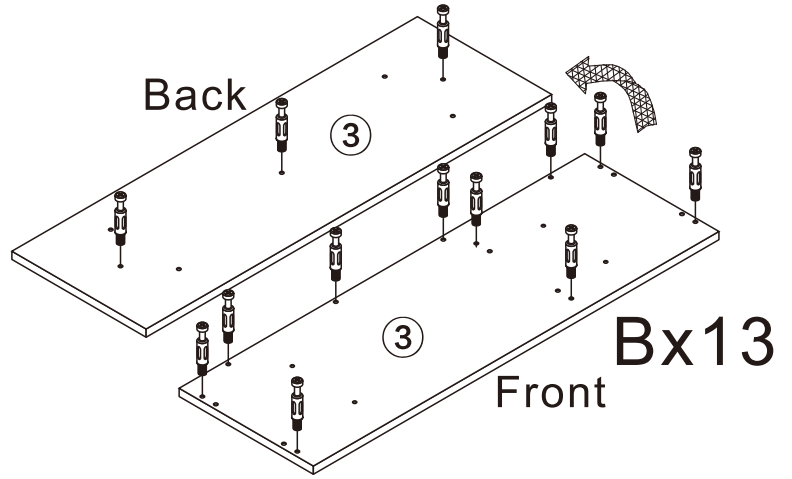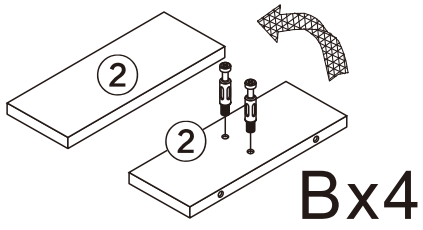


<b>B</b>	33PCS
	
6*28mm	

2

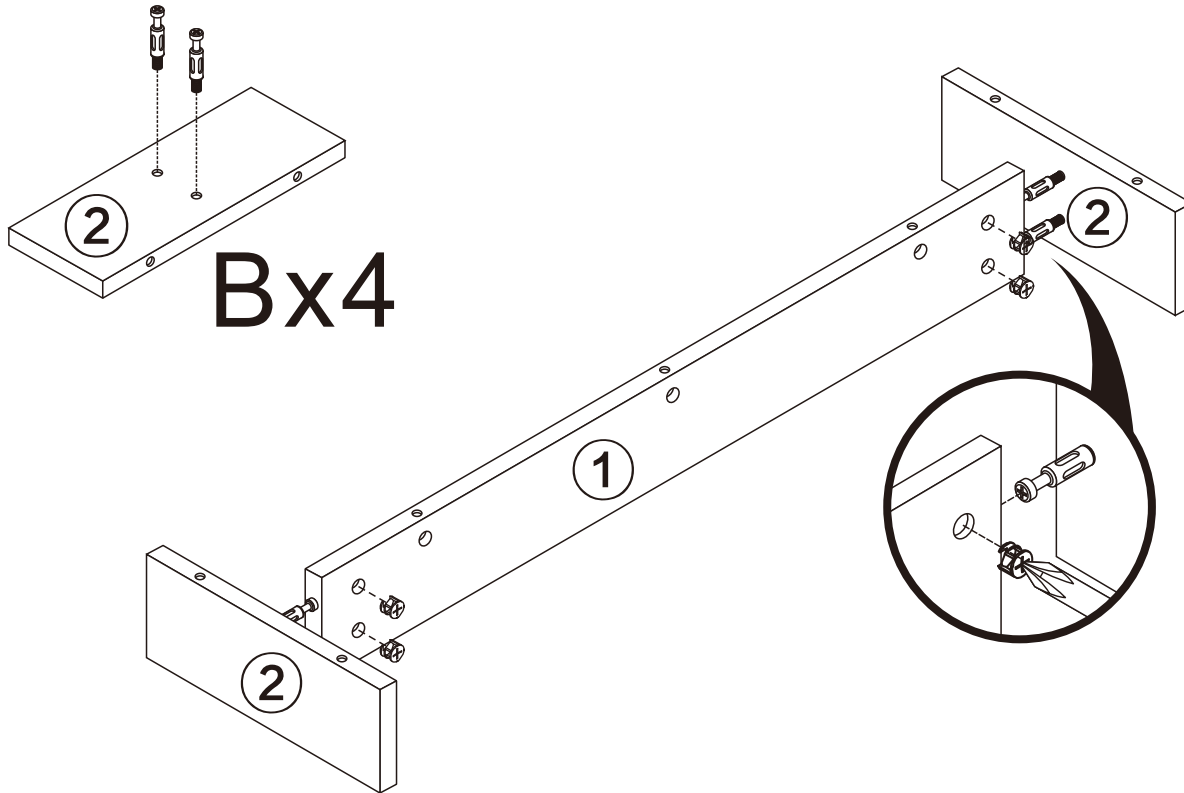


<b>A</b>	4PCS
15*10mm	


3

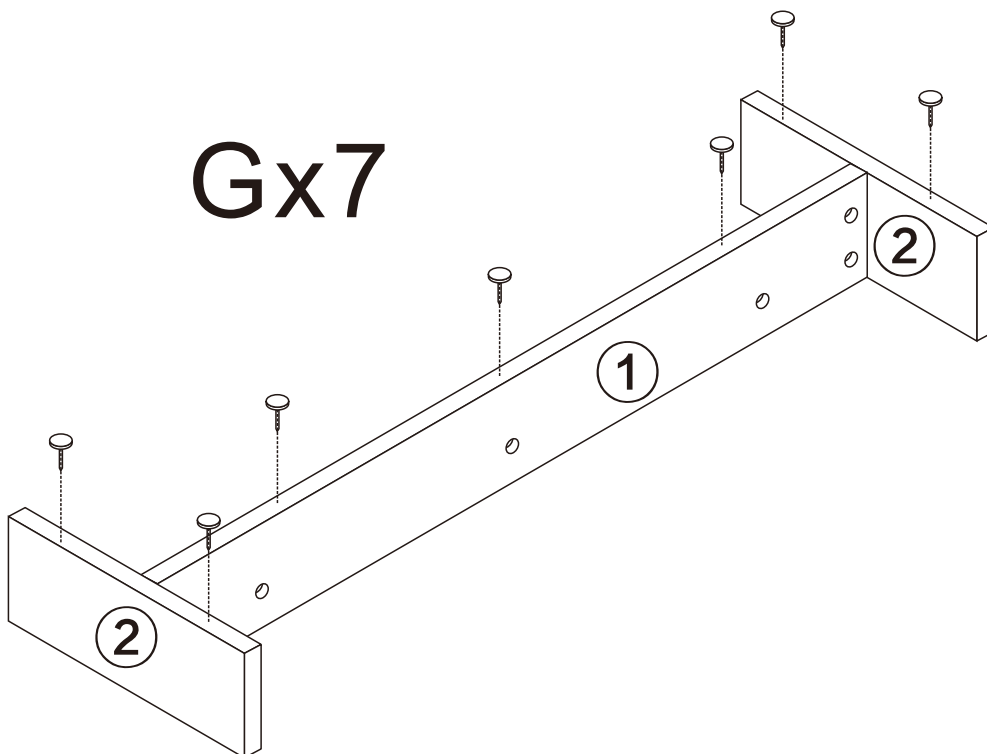


<b>G</b>	7PCS
Φ 15mm	


4

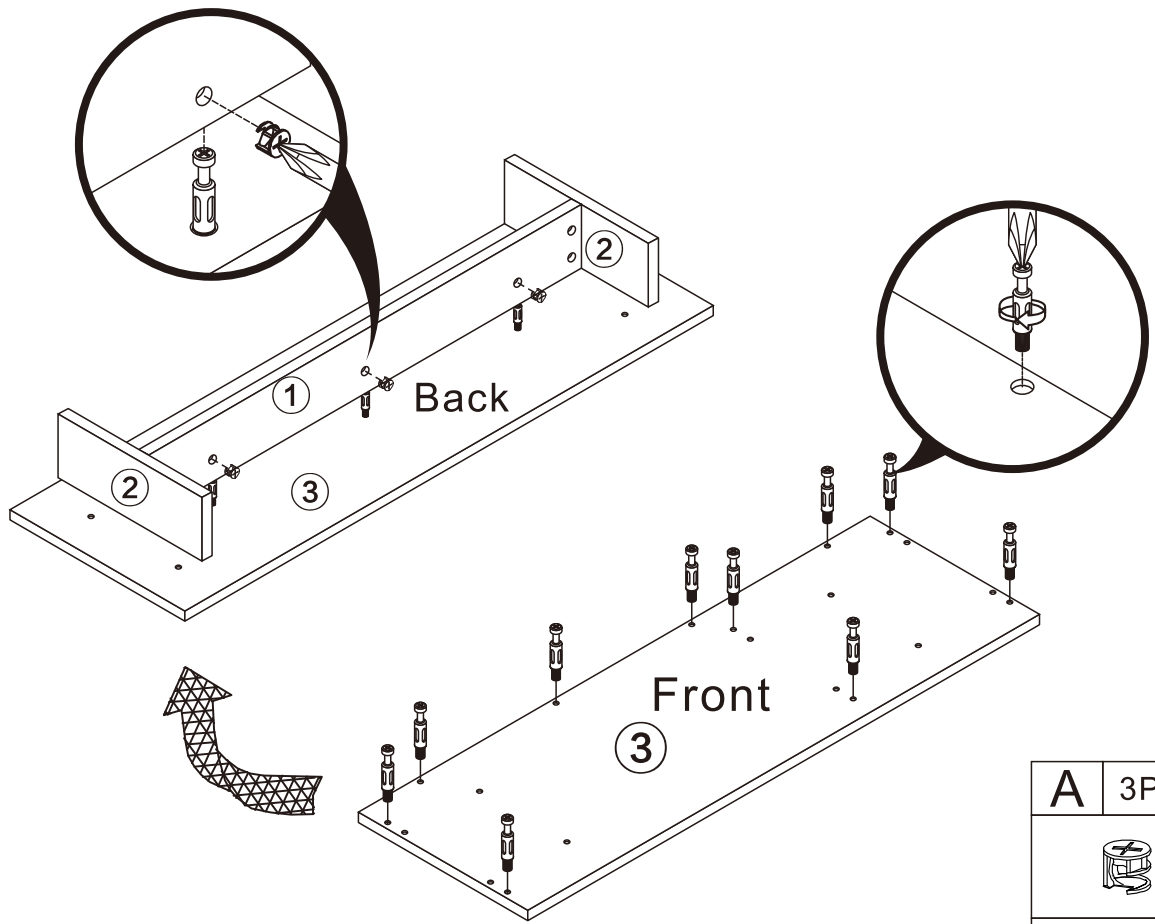


A	3PCS
	
15*10mm	

5

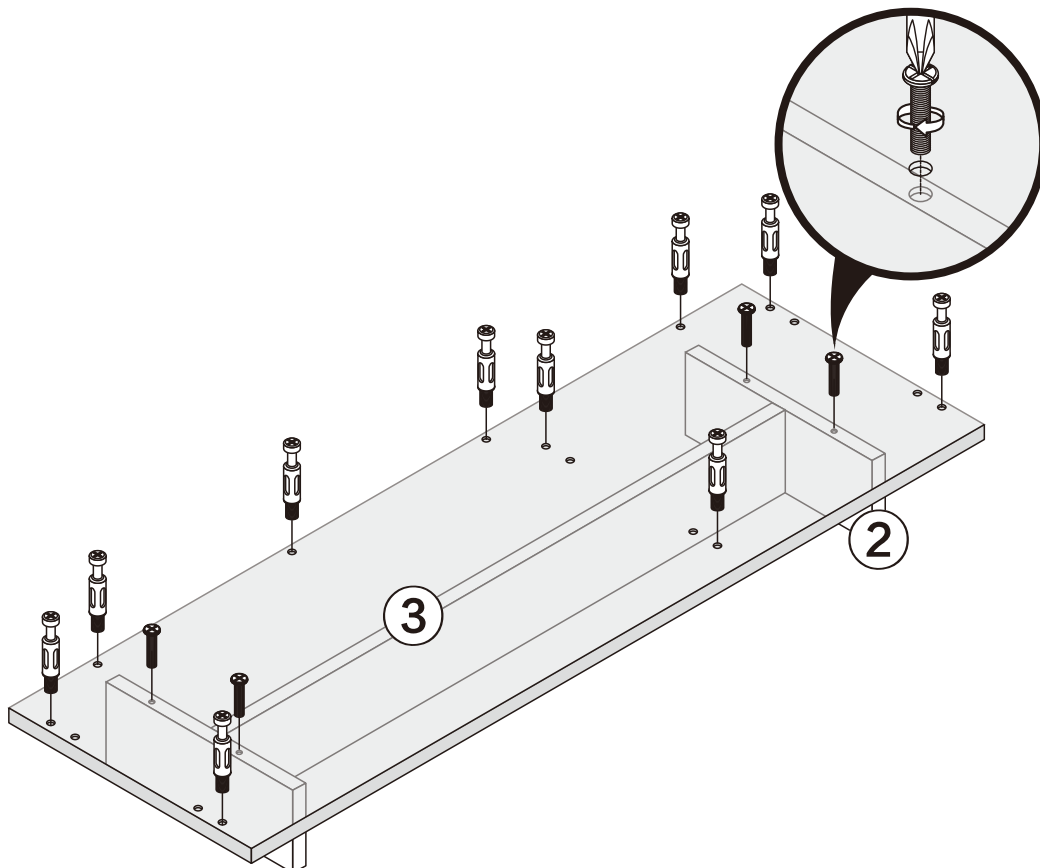

I	4PCS
	
6*35mm	

6

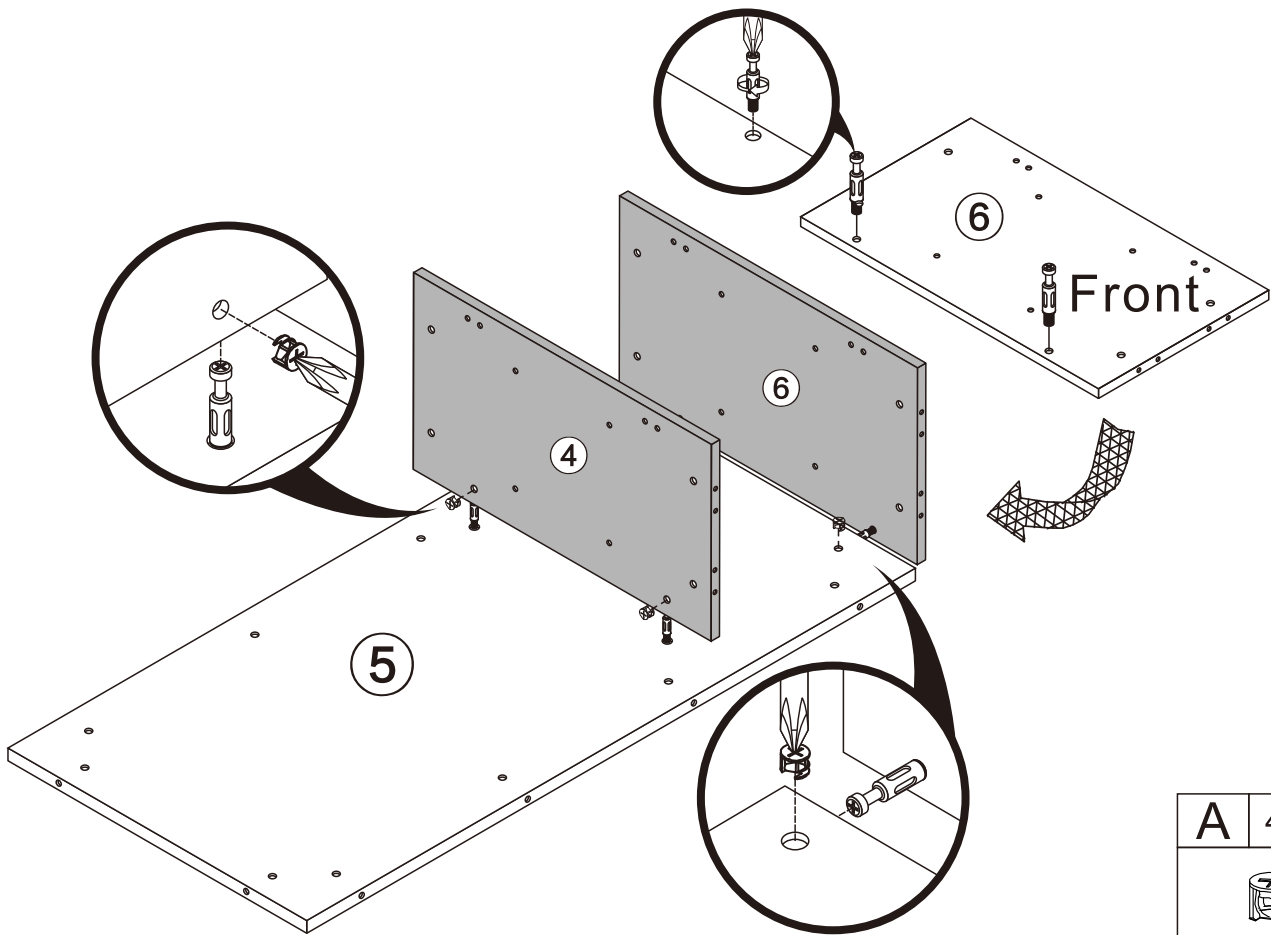


A 4PCS



15\*10mm


7

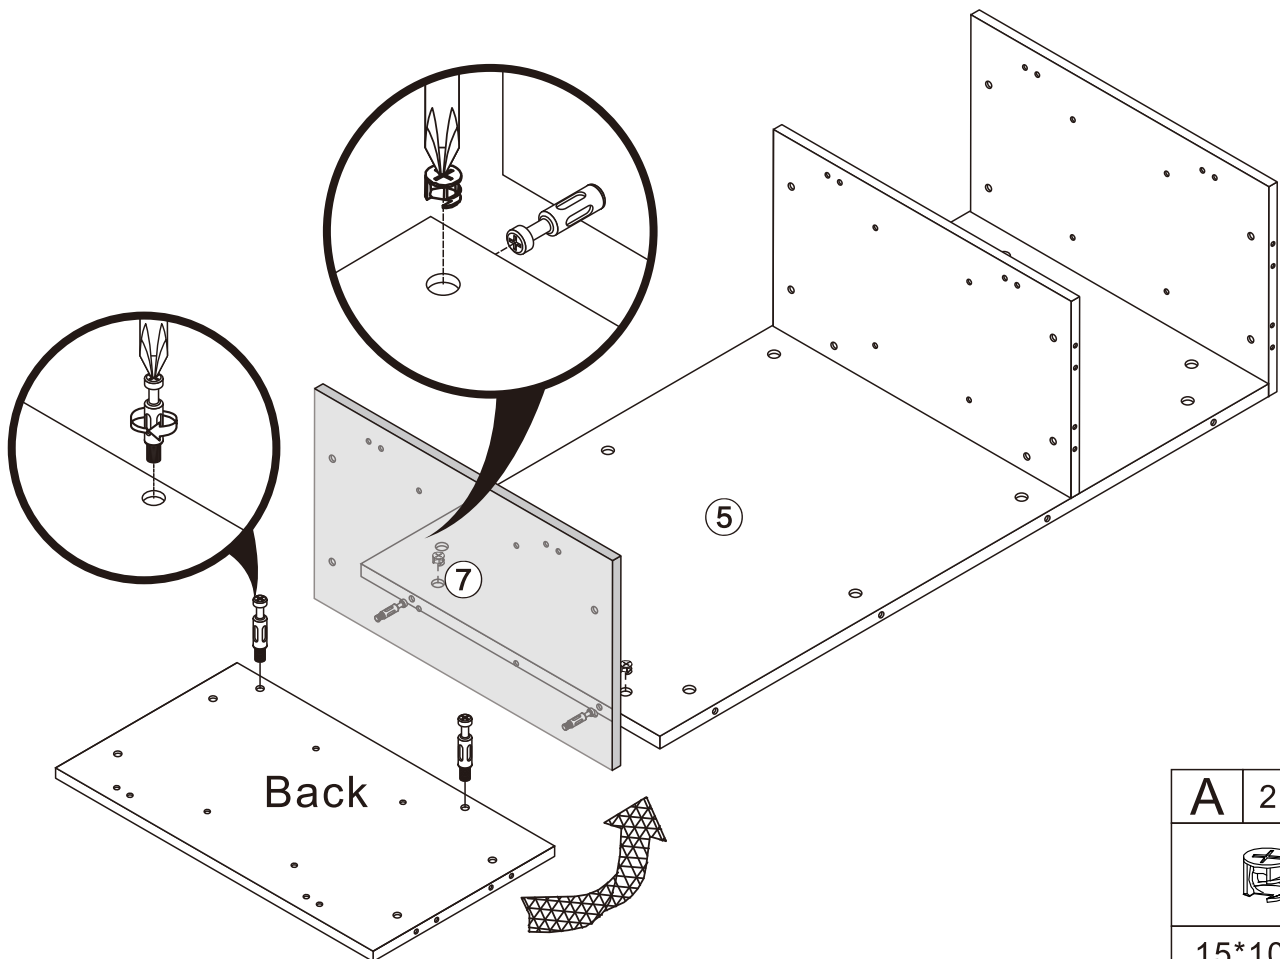




A 2PCS



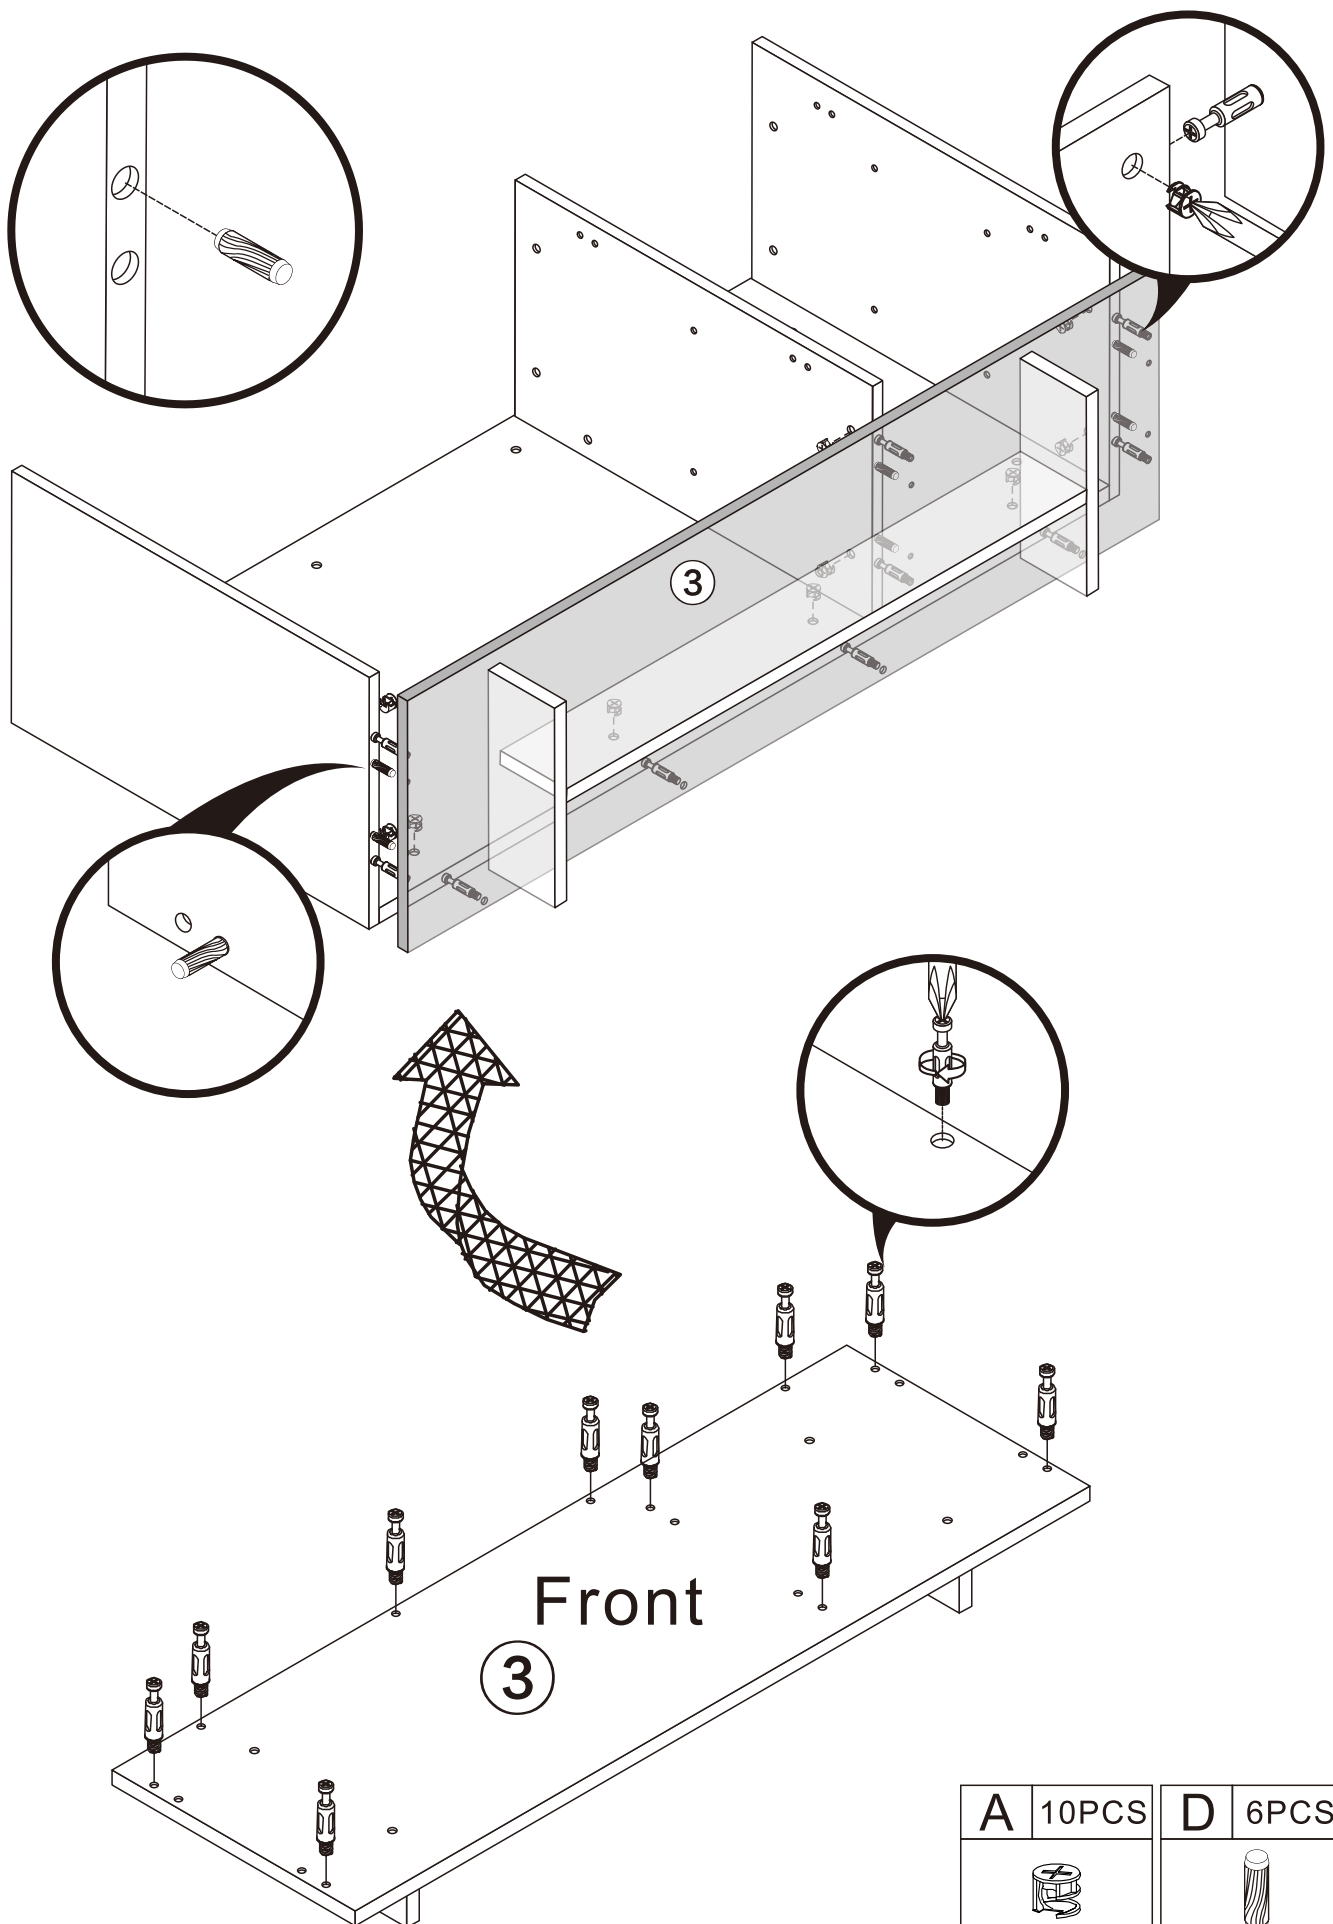


15\*10mm

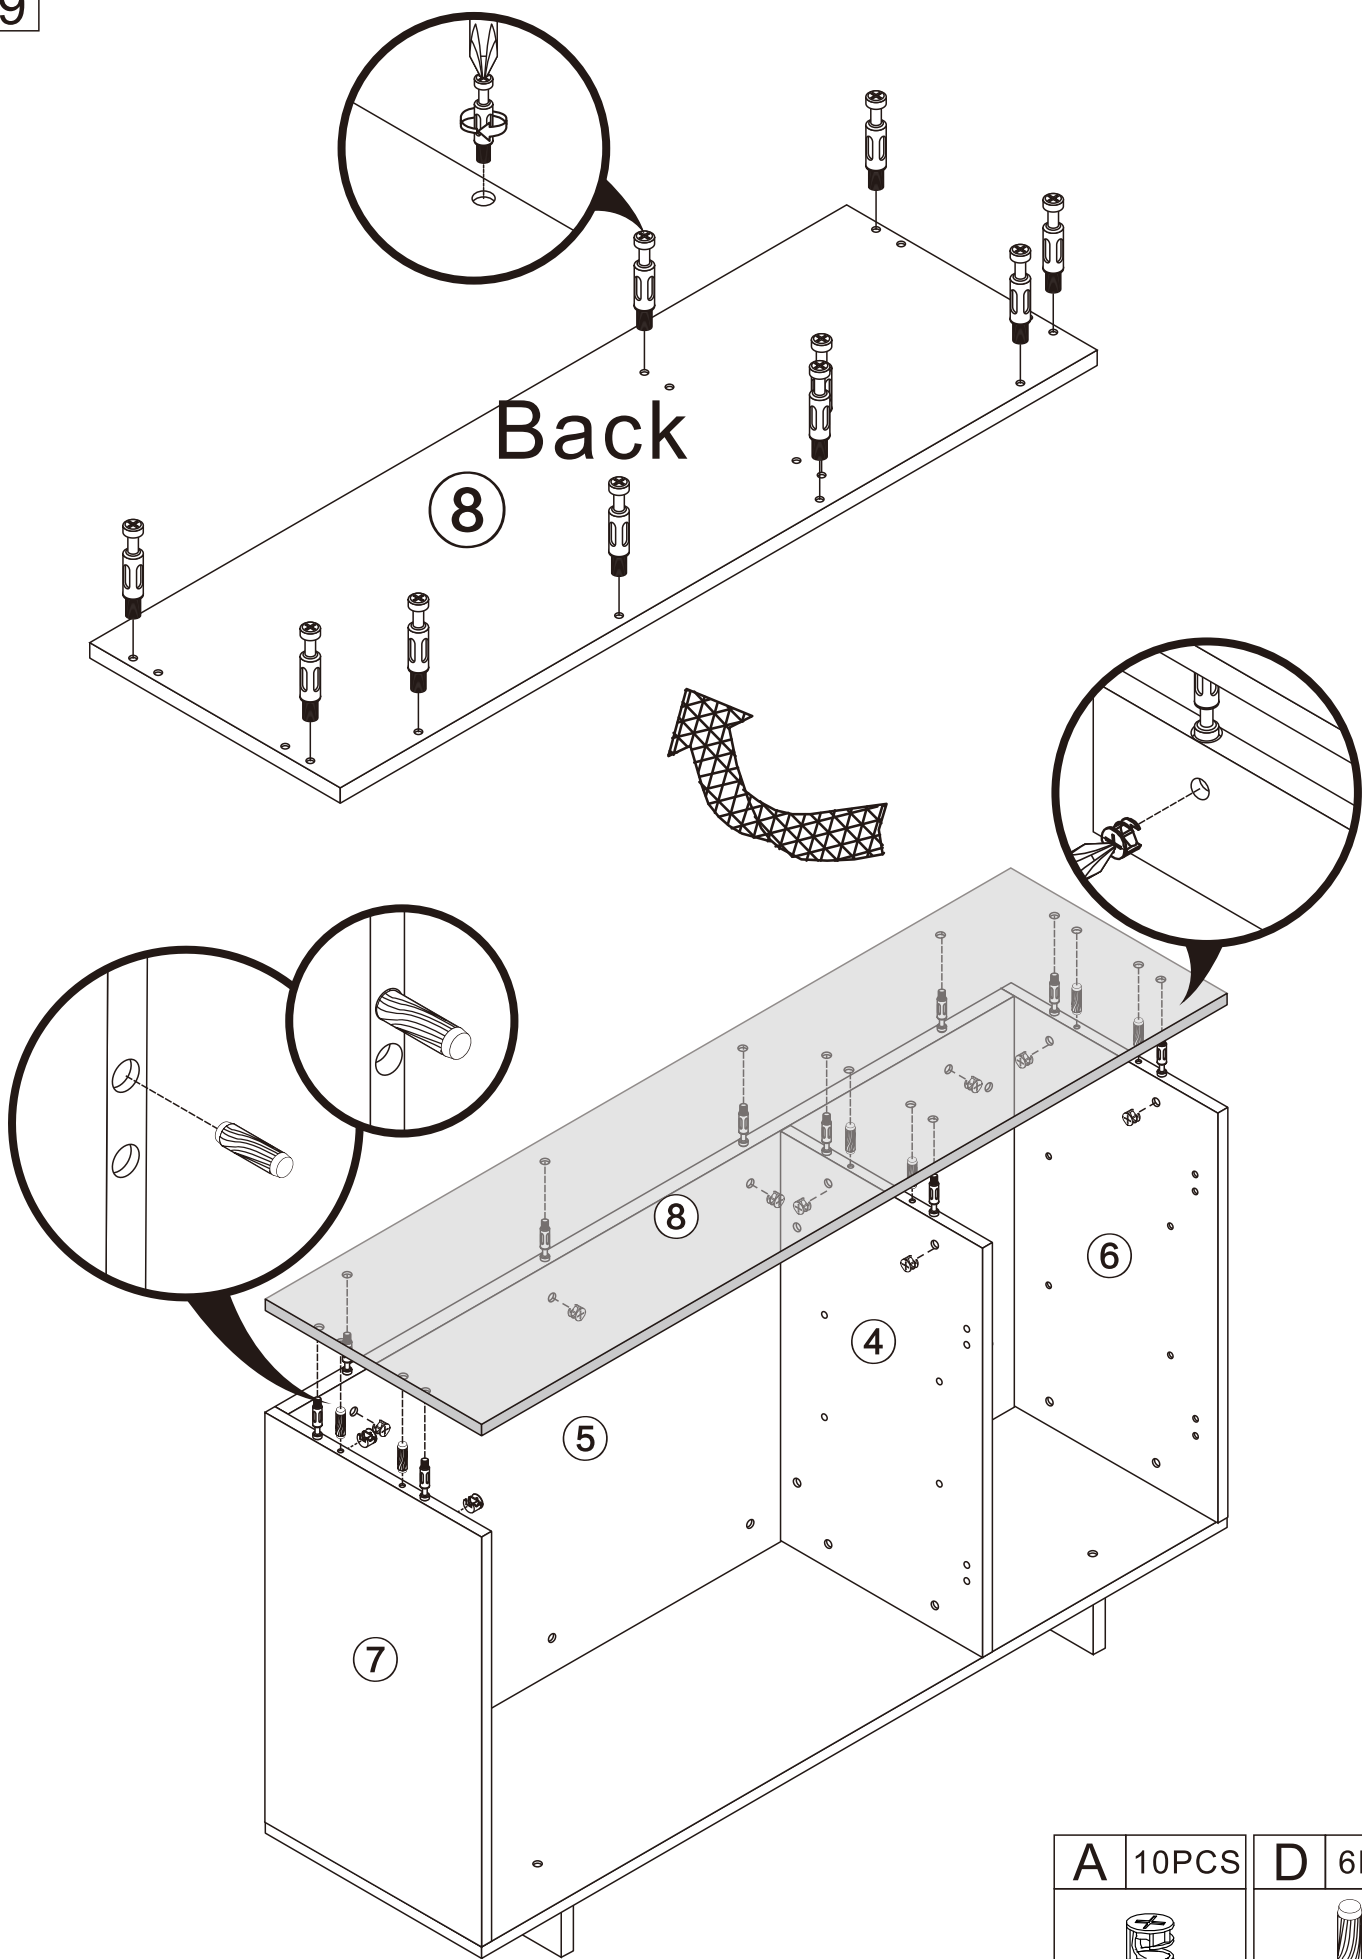



A	10PCS	D	6PCS
			
15*10mm		8*30mm	




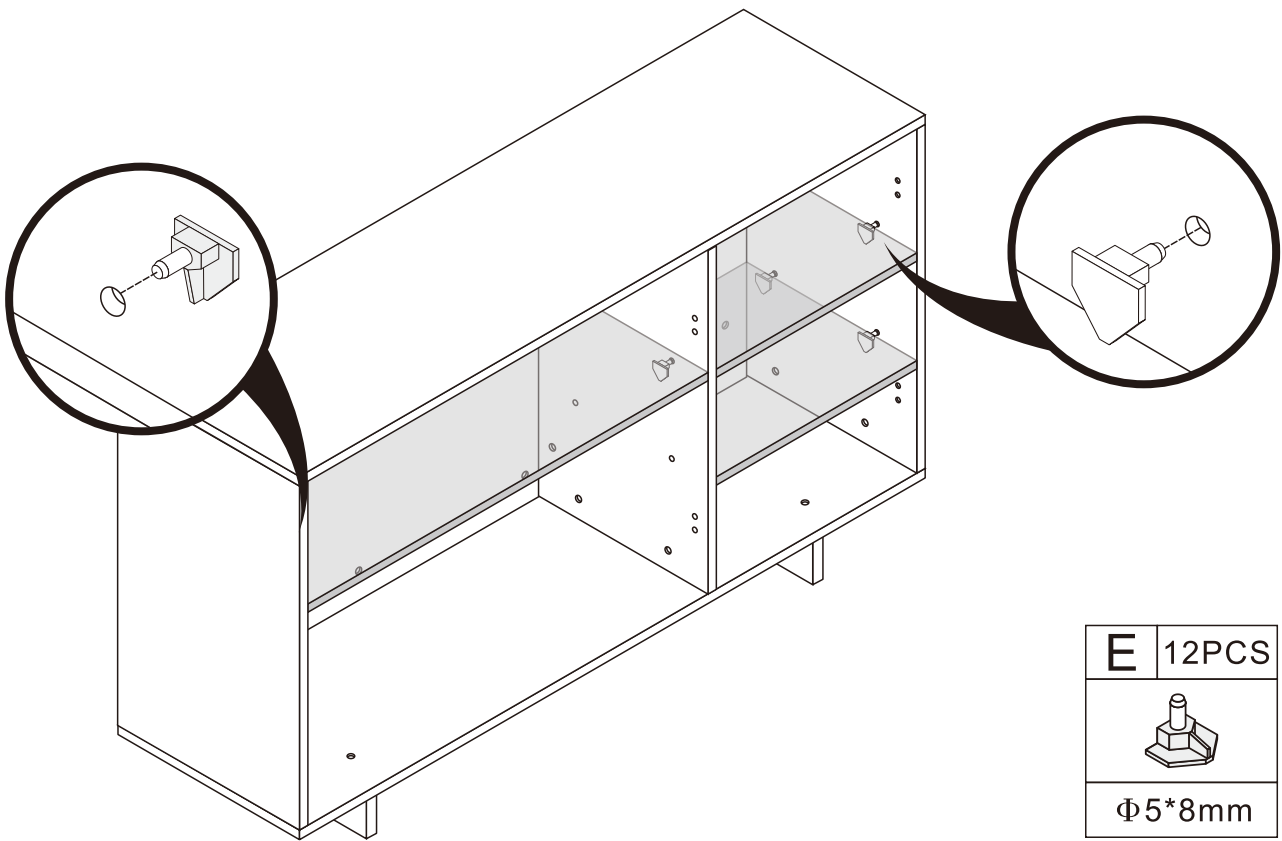



A	10PCS	D	6PCS
			
15*10mm		8*30mm	







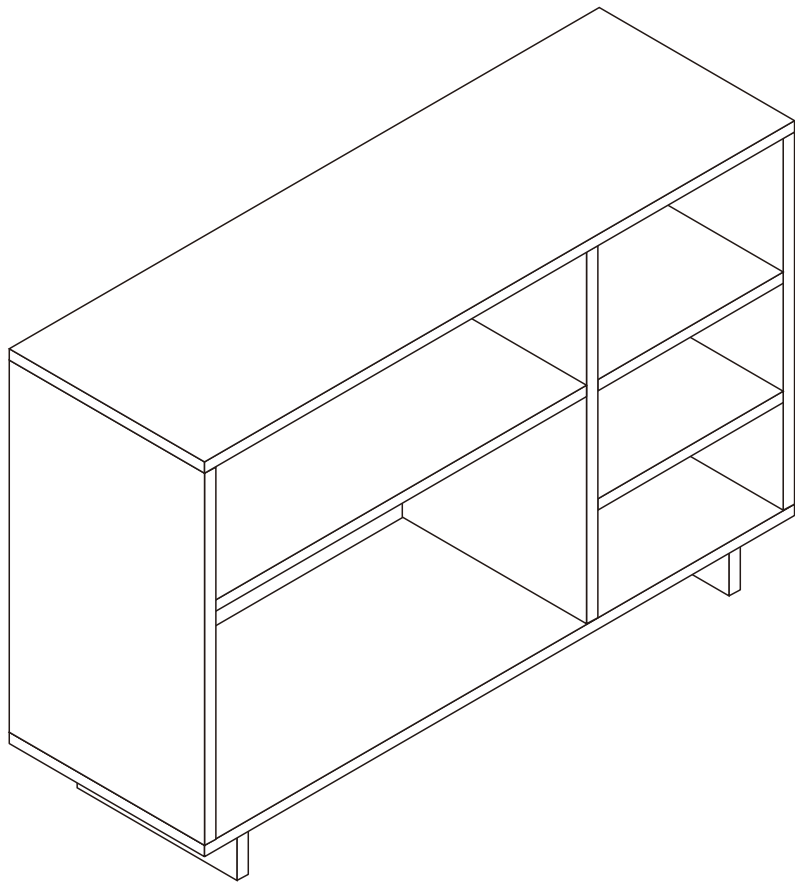
<b>E</b>	12PCS
	
Φ5*8mm	

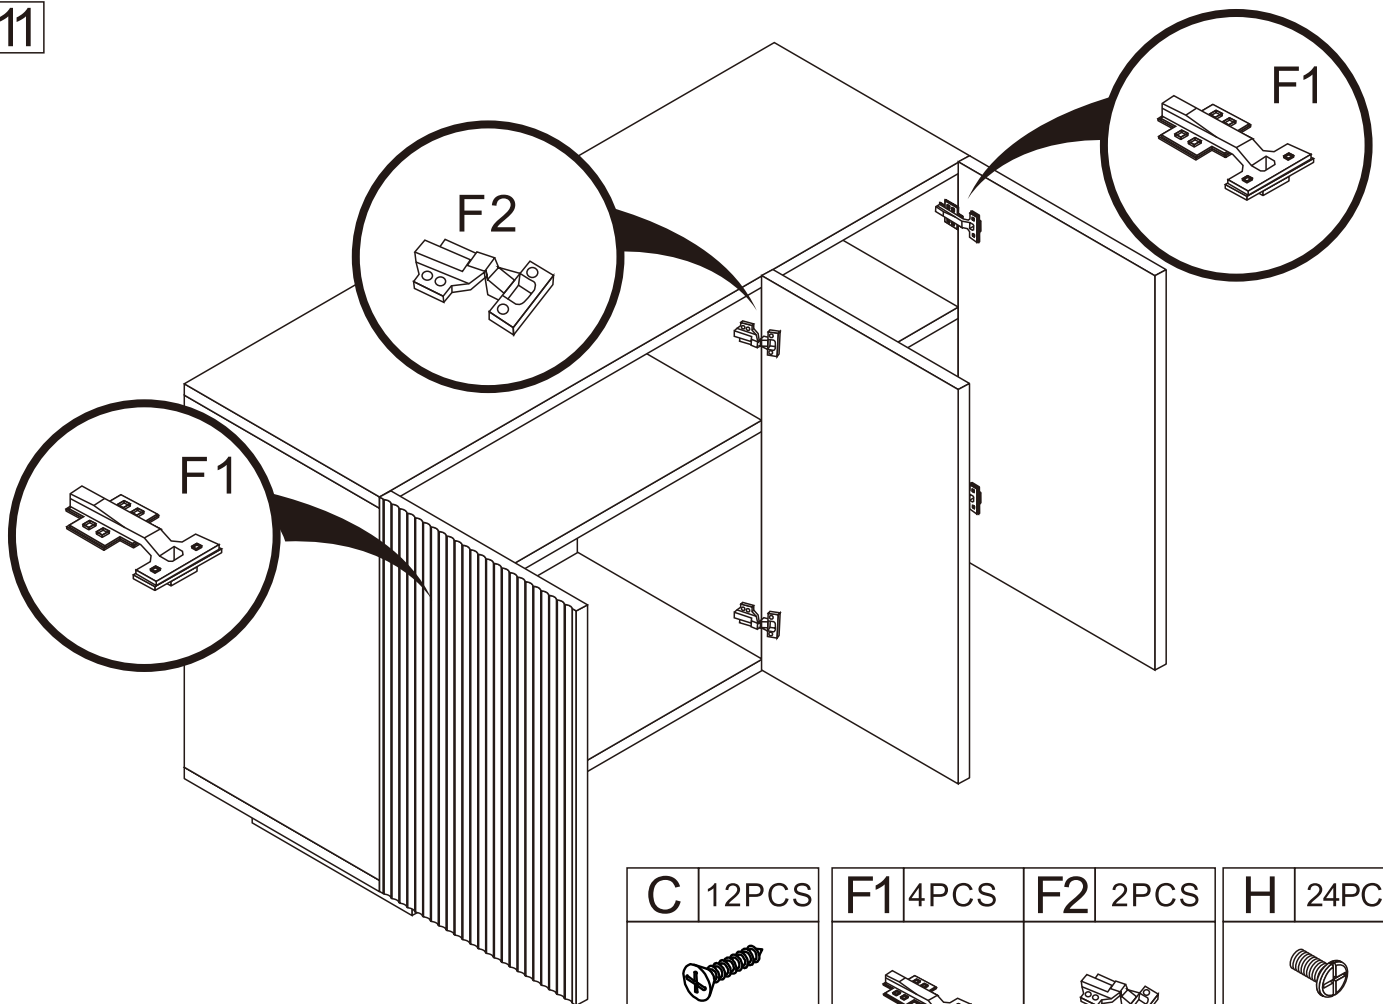



<b>C</b>	12PCS	<b>F1</b>	4PCS	<b>F2</b>	2PCS	<b>H</b>	24PCS
							
3.5*14mm						4*12mm	

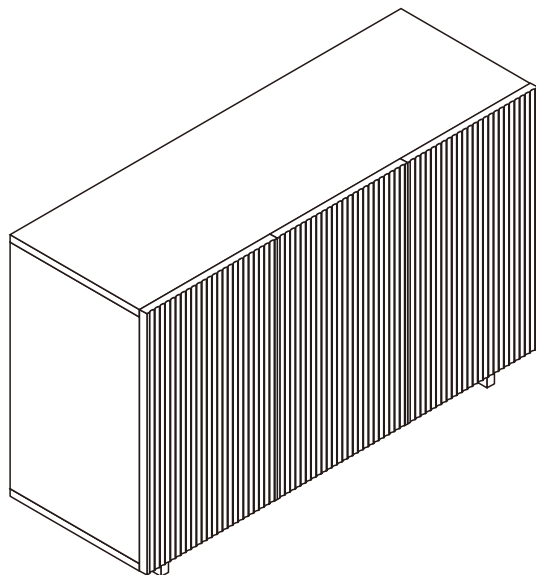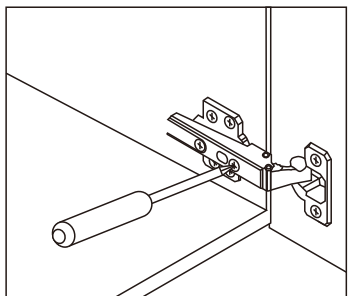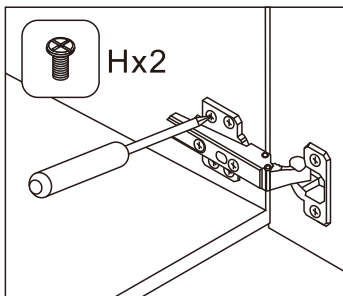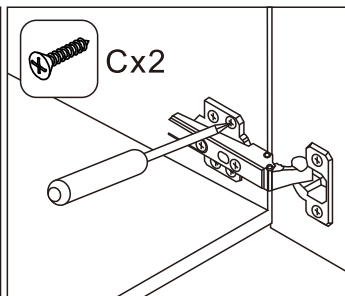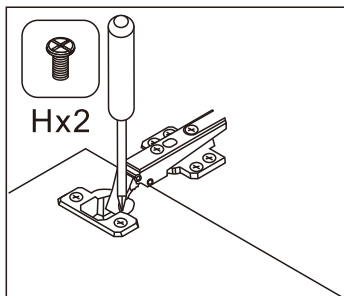

OK!