
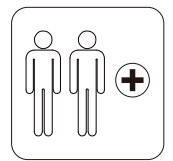
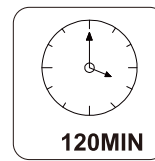
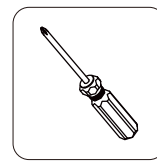
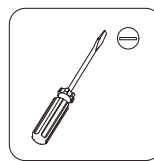


HLG116

Version:1.0

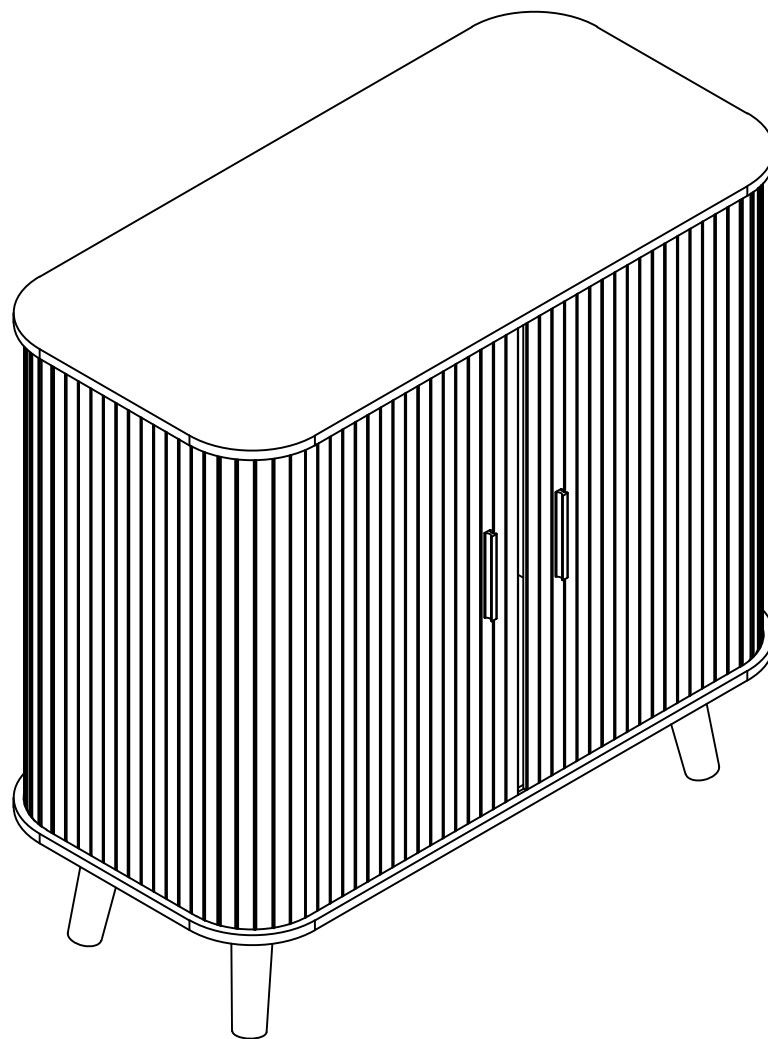

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.



WhatsApp


Email: support @anymaple.com

WANT TO CONTACT US THROUGH AMAZON?


- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.

Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!


USING CAM LOCK AND QUICKFIT

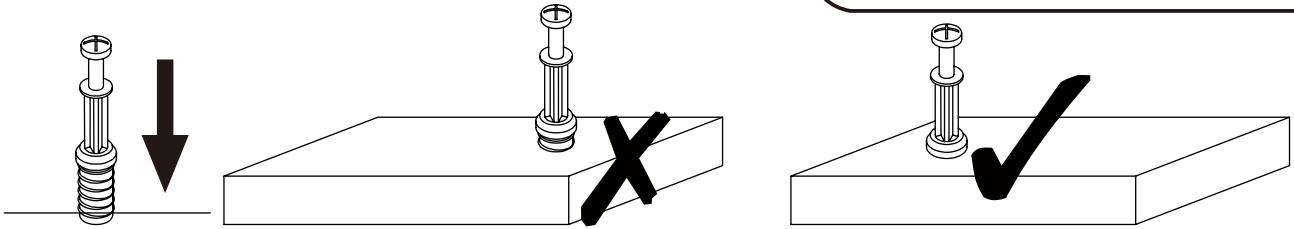


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

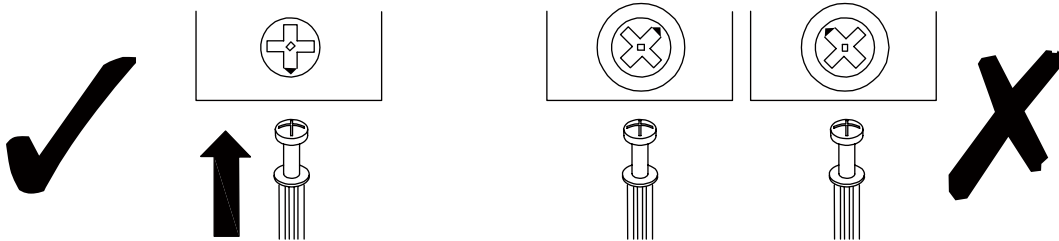

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

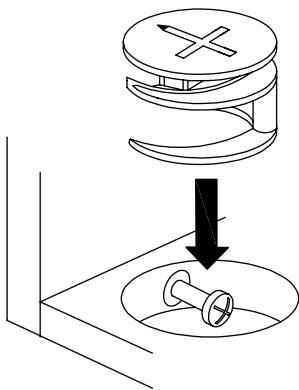

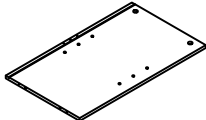
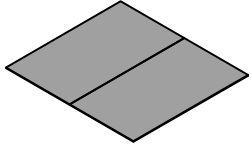
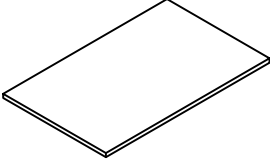




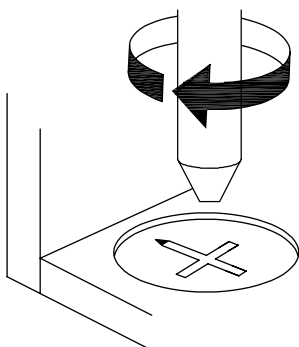



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.




EN_Turn cam lock clockwise to tighten.

PACKING DELALS
















NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x4	
⑧		x1	
⑨		x1	
⑩		x1	

NO.		QTY	SPARE
	 Hardware Kit	x1	

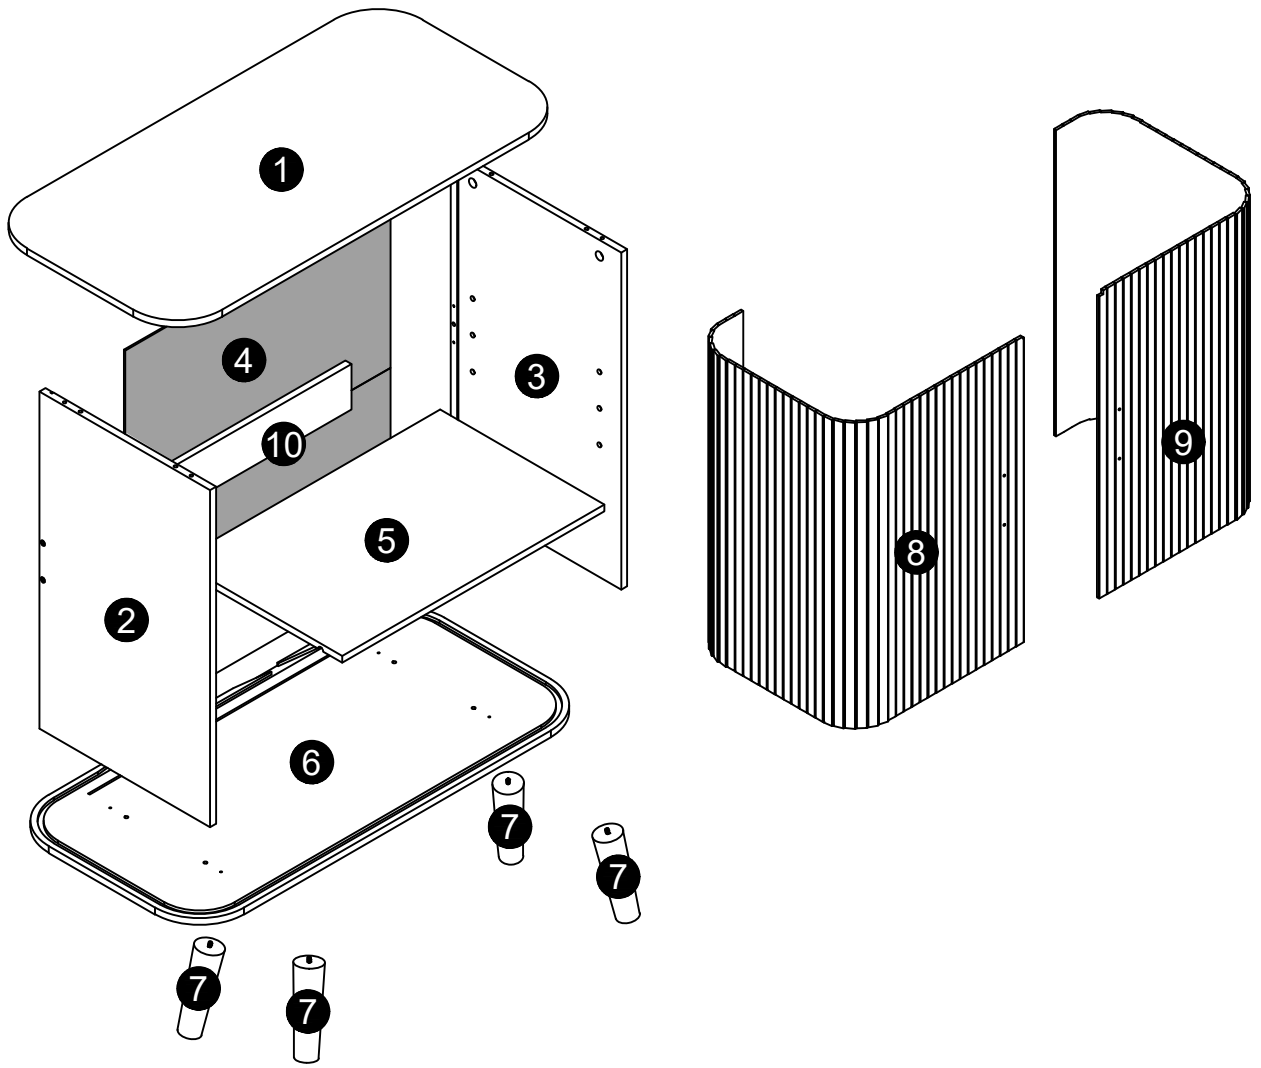PARTS






HARDWARE

<p>A x4 Ø6x35mm</p> 	<p>B x4 Ø15x10mm</p> 	<p>C x10 Ø6x30mm +1(spare)</p> 	<p>D x10 Ø4x35mm +1(spare)</p> 	<p>E x4</p> 	<p>F x2</p> 
<p>G x8 Ø3x16mm</p>  	<p>H x2 Ø6x30mm</p> 	<p>I x2</p>  	<p>J x4</p> 	<p>K x4</p> 	<p>L x4</p> 
<p>M x20 +2(spare)</p> 					




C x2

D x4

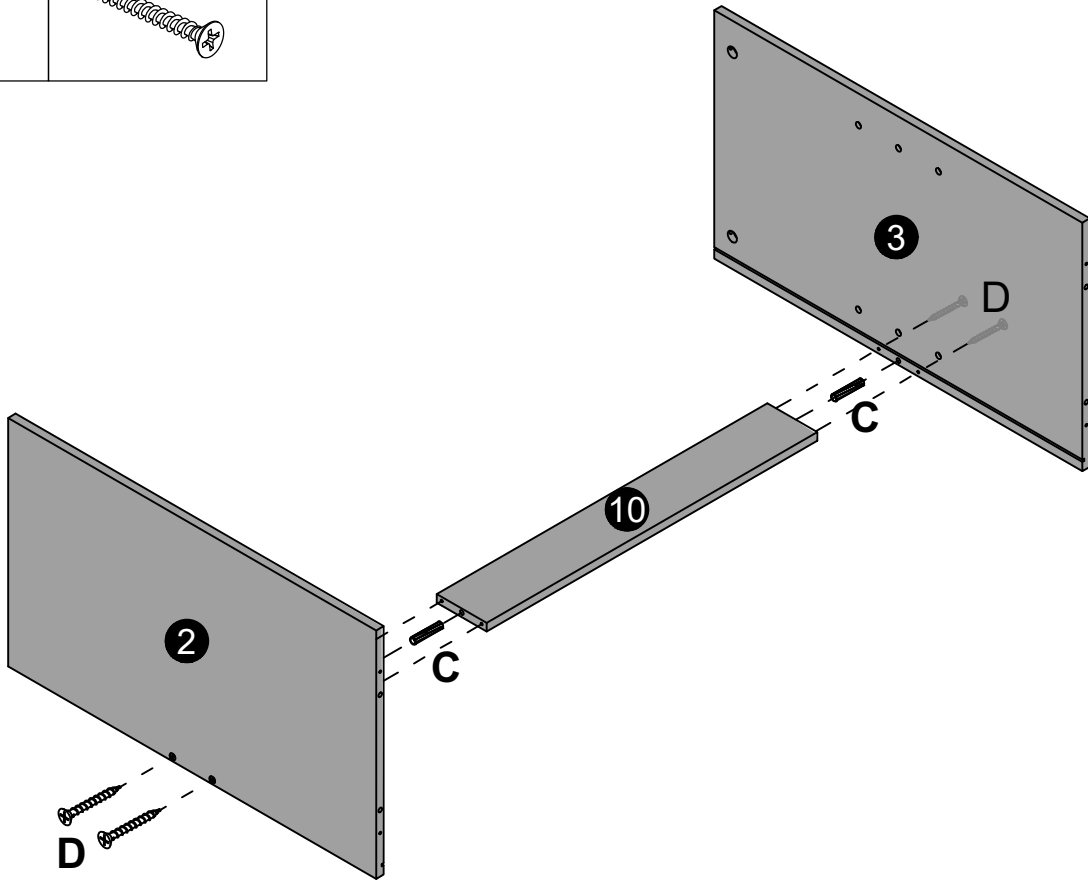

C x4


D x4

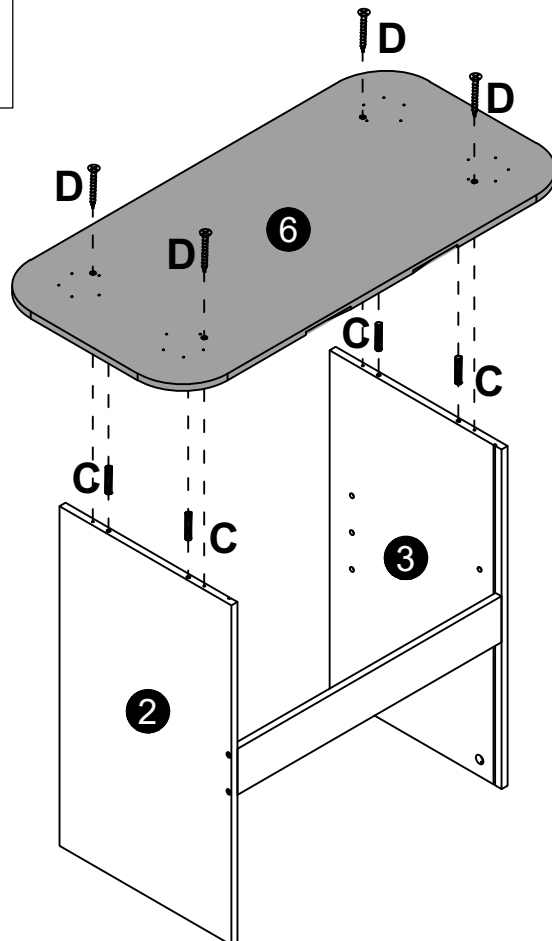


L x20

M x4

03

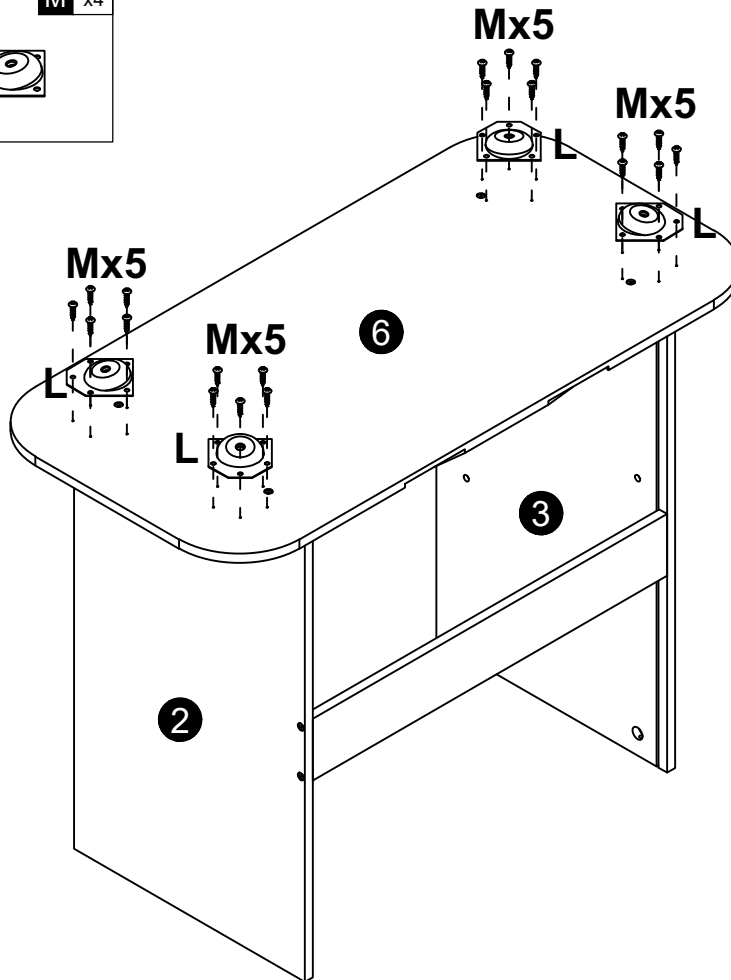


04

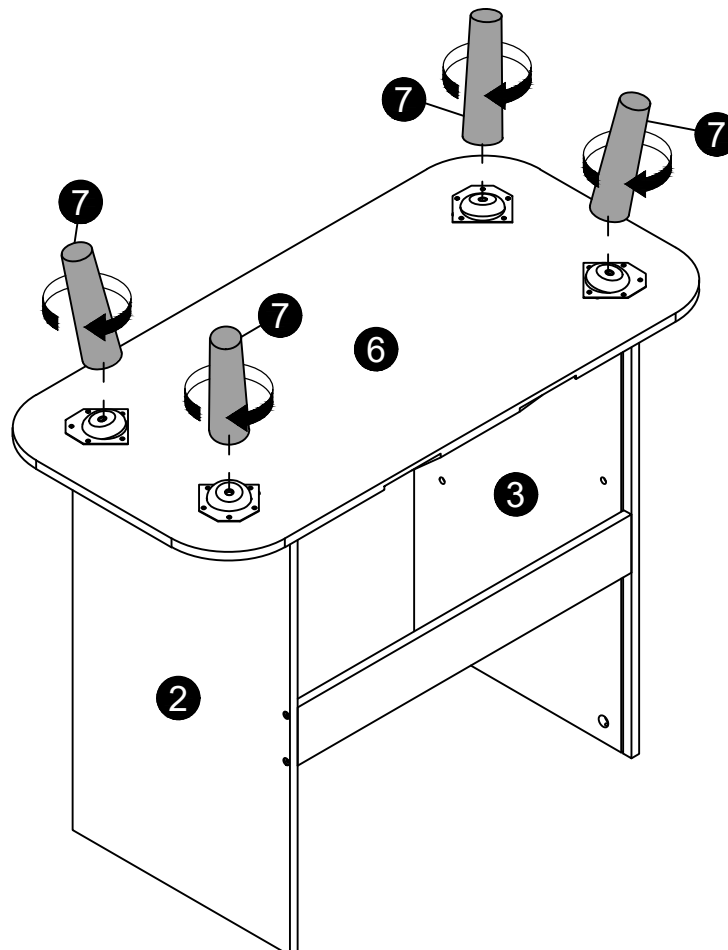


J x4



05

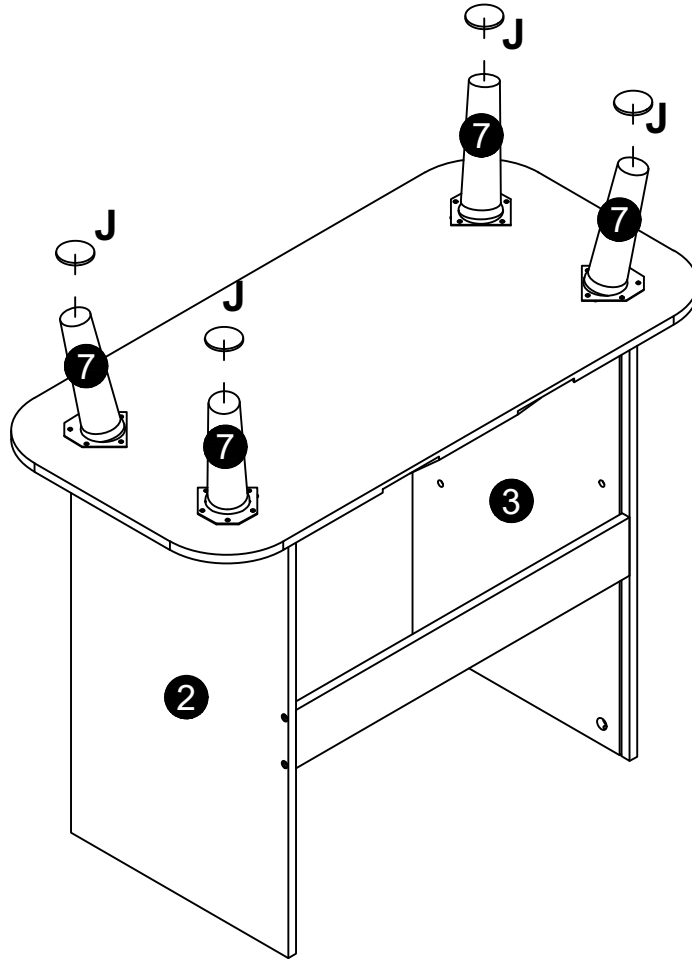

06

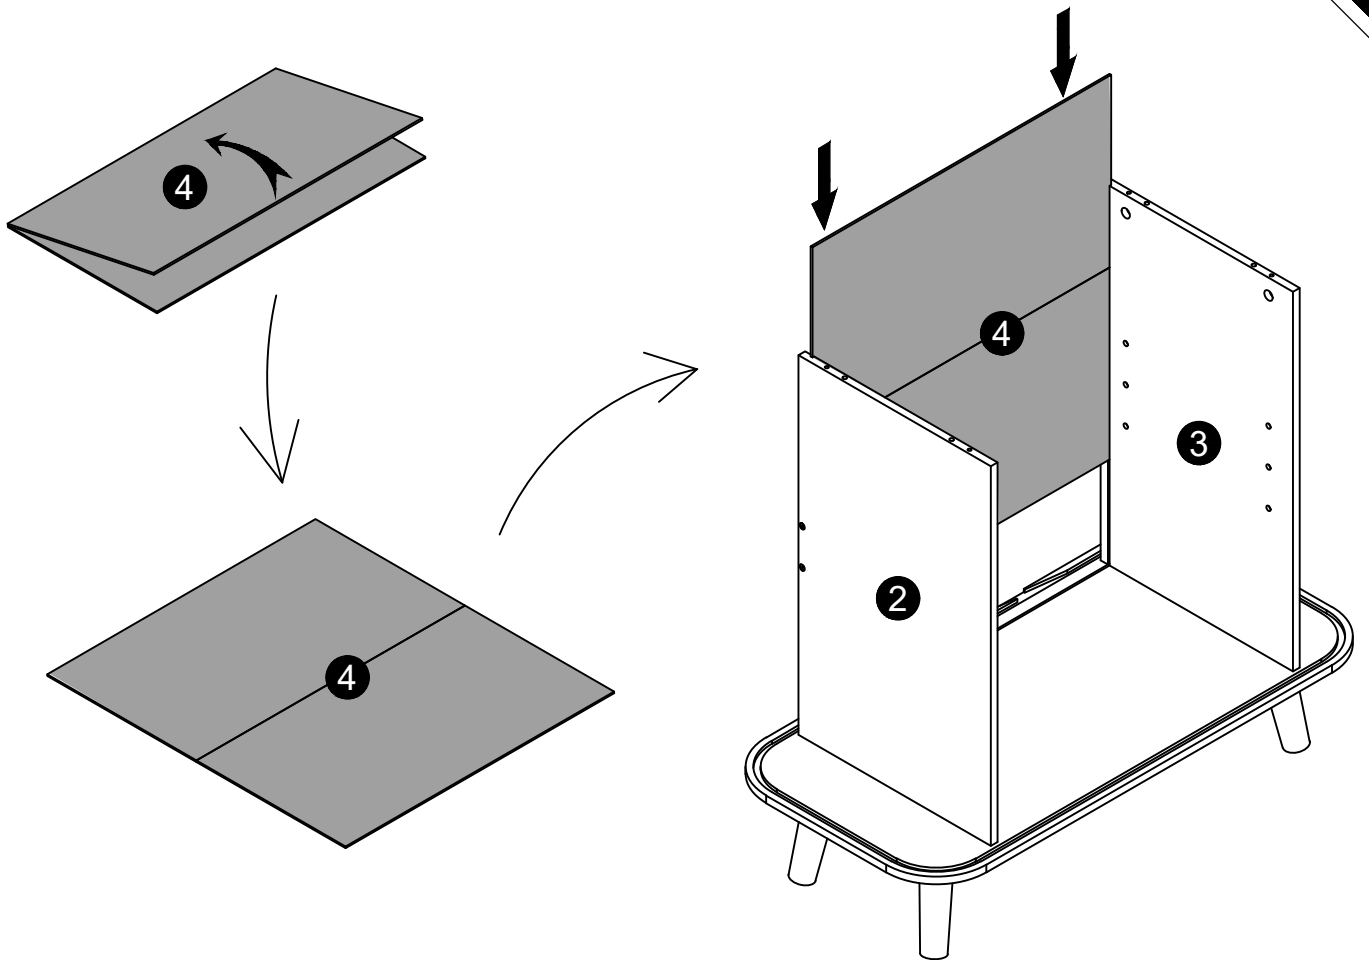


A x4

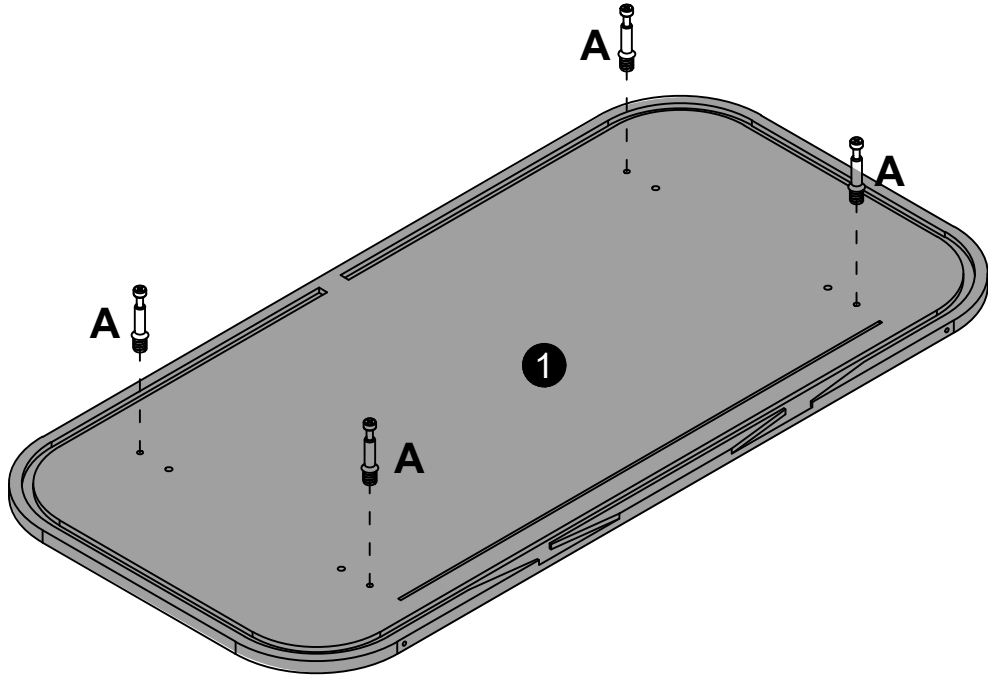

B x4




C x4

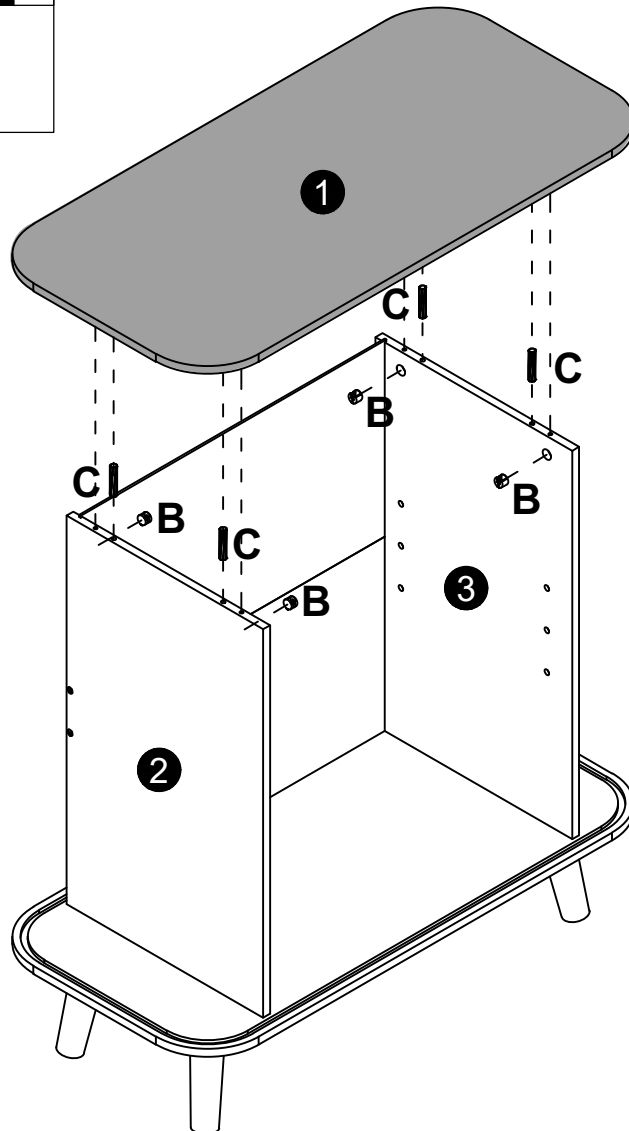

E x4


09

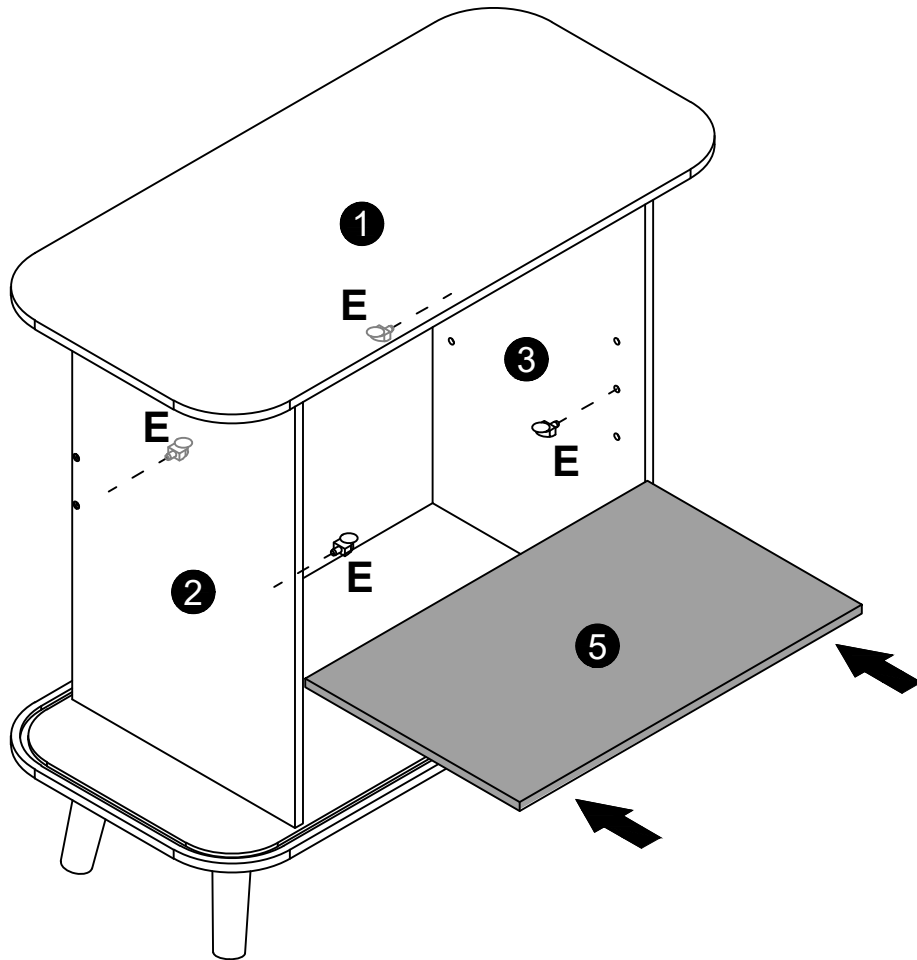

F x2


K x4

10

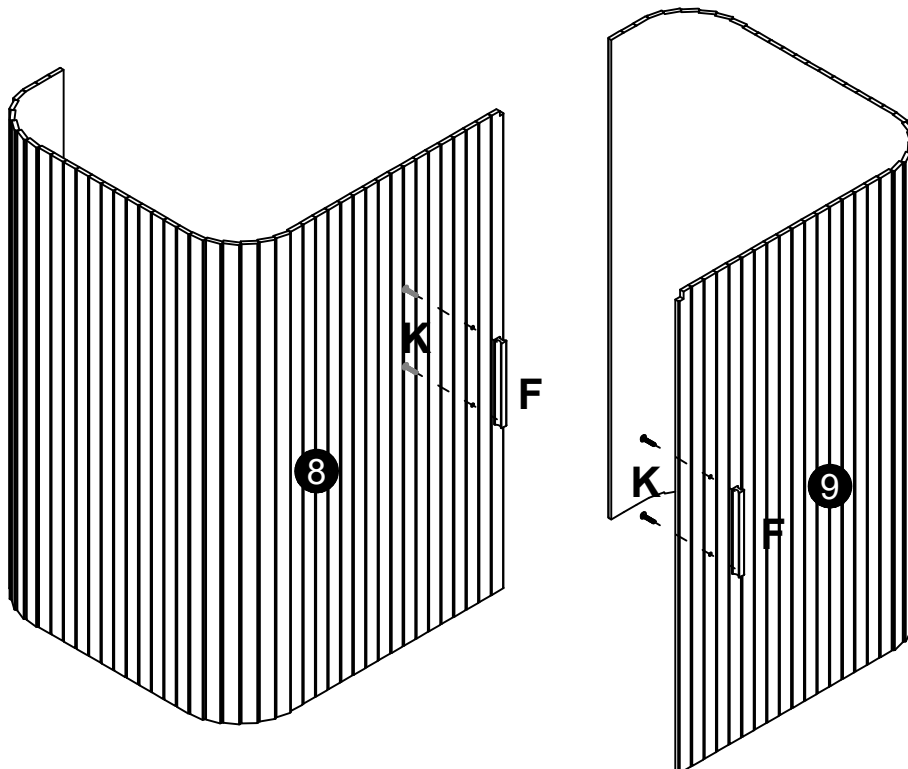






Note: The notched side of Panel No. 8 should face upward.

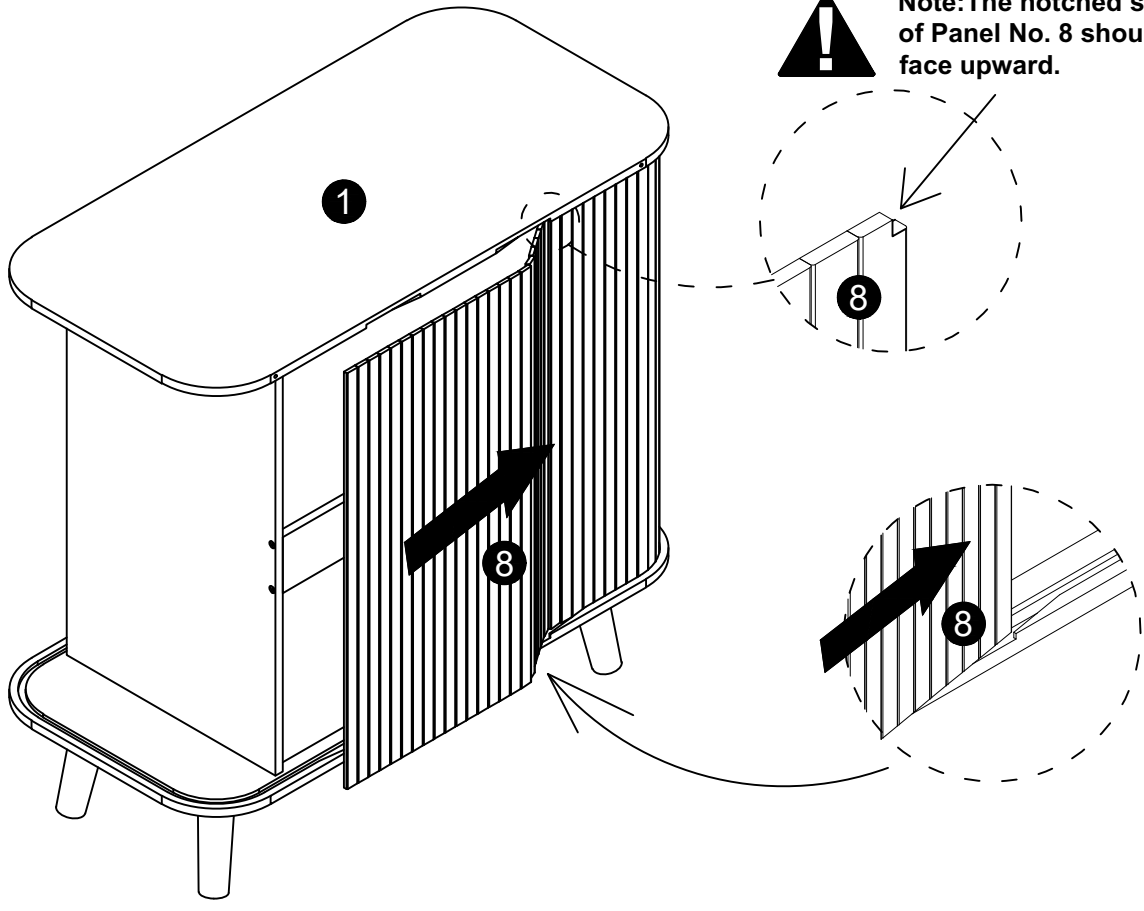

Note: The notched side of Panel No. 9 should face upward.

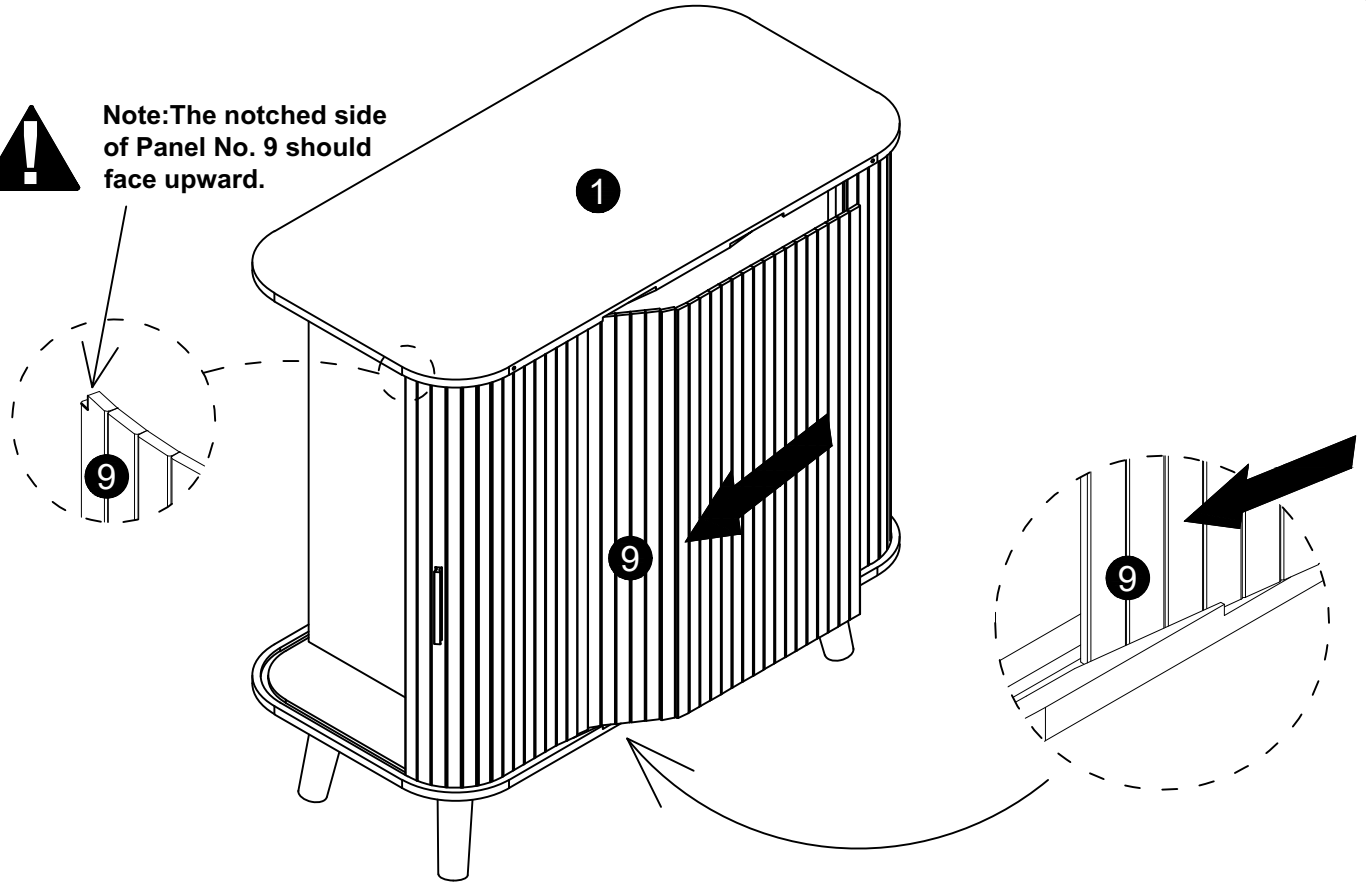


G x8

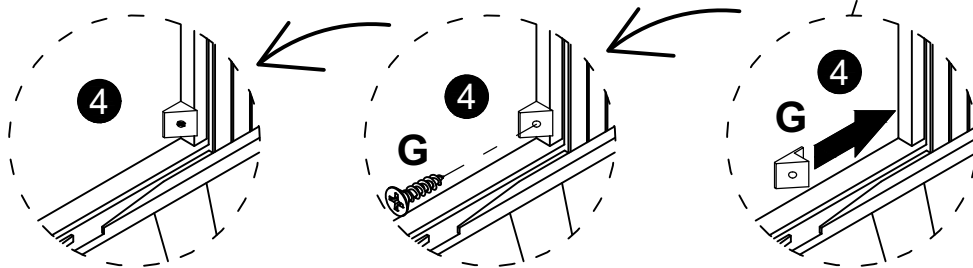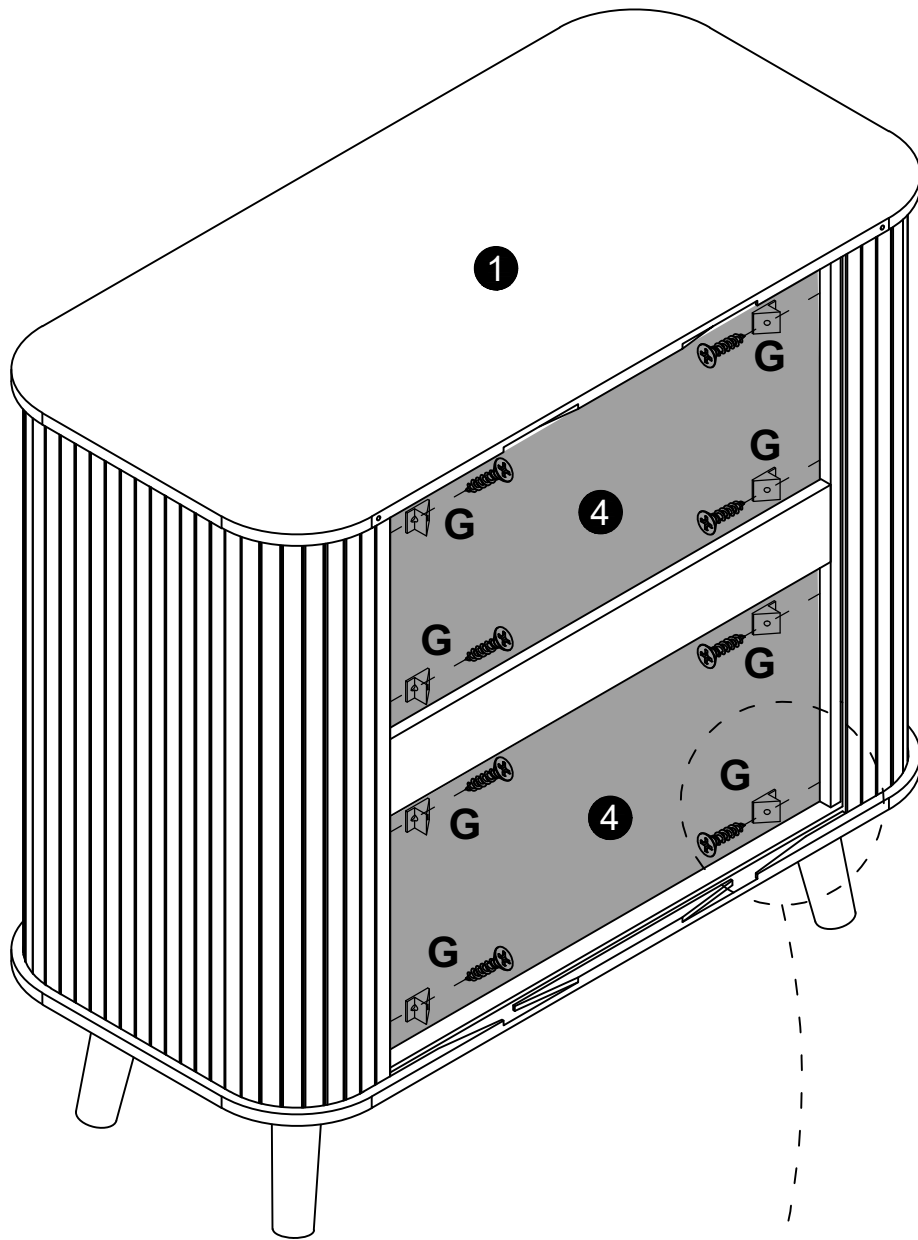


D x2




H x2




I x2

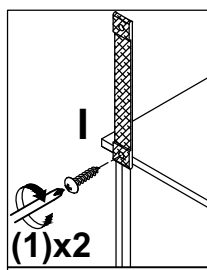


First fix the anti-rewind screw in the reserved hole of the product.

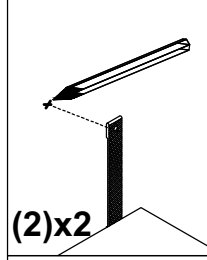


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

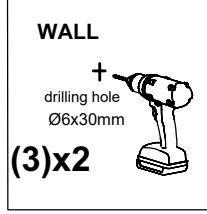

Then use a tape drill to make holes in the wall that are suitable for the product screws.

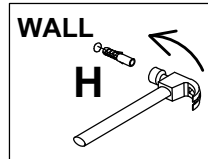

Then, put the expansion bolt into the hole

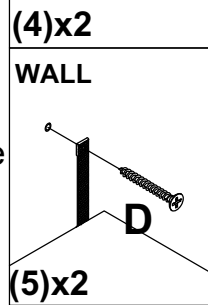

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

