




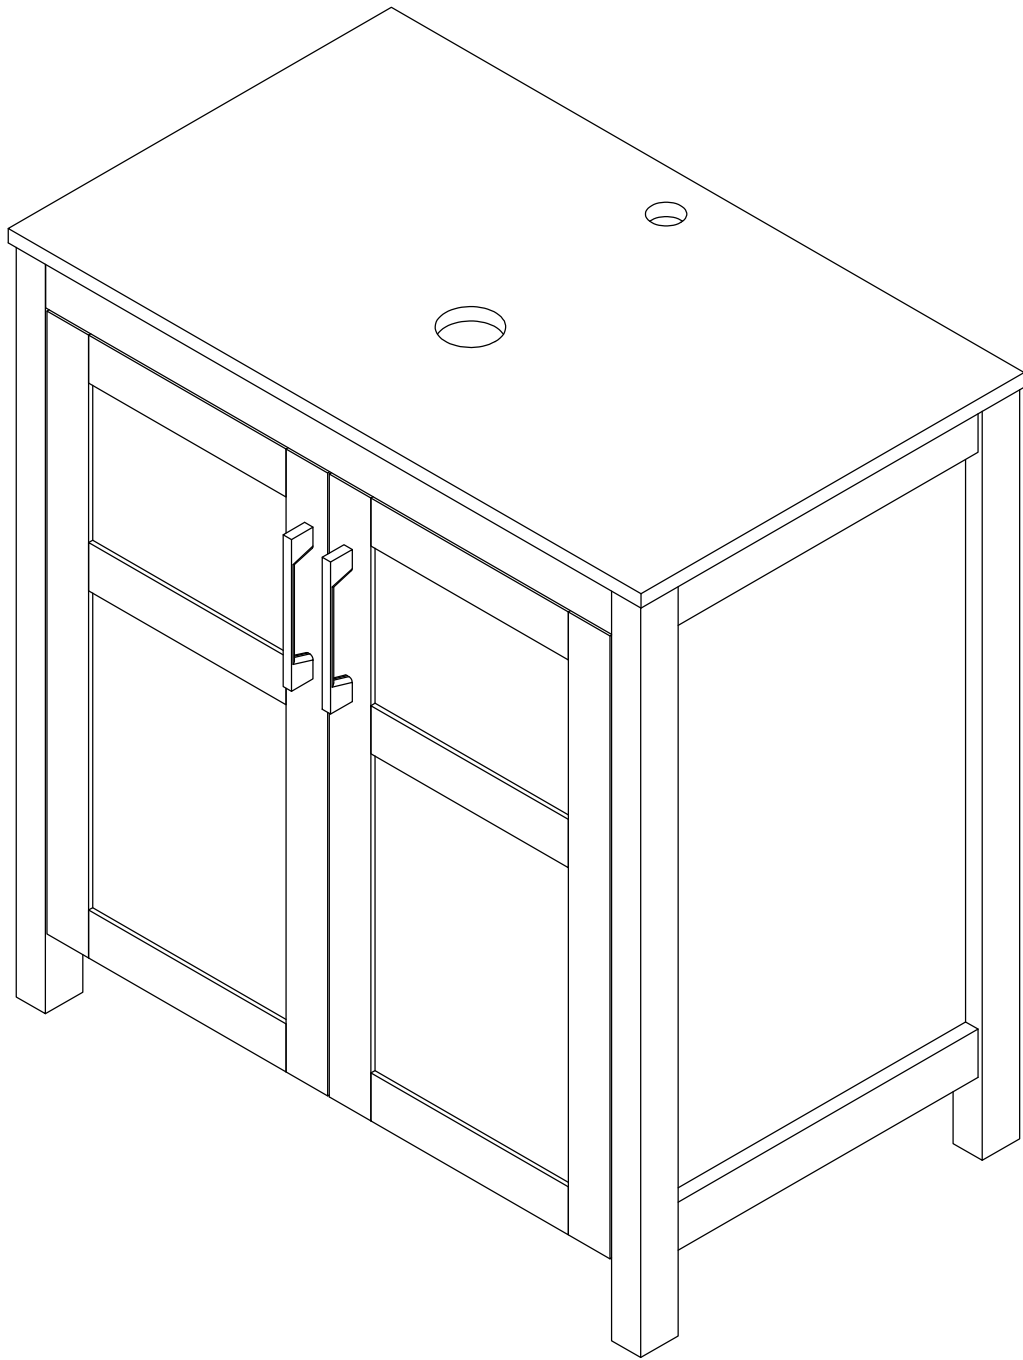


BTC8004-30"

INSTALLATION INSTRUCTIONS

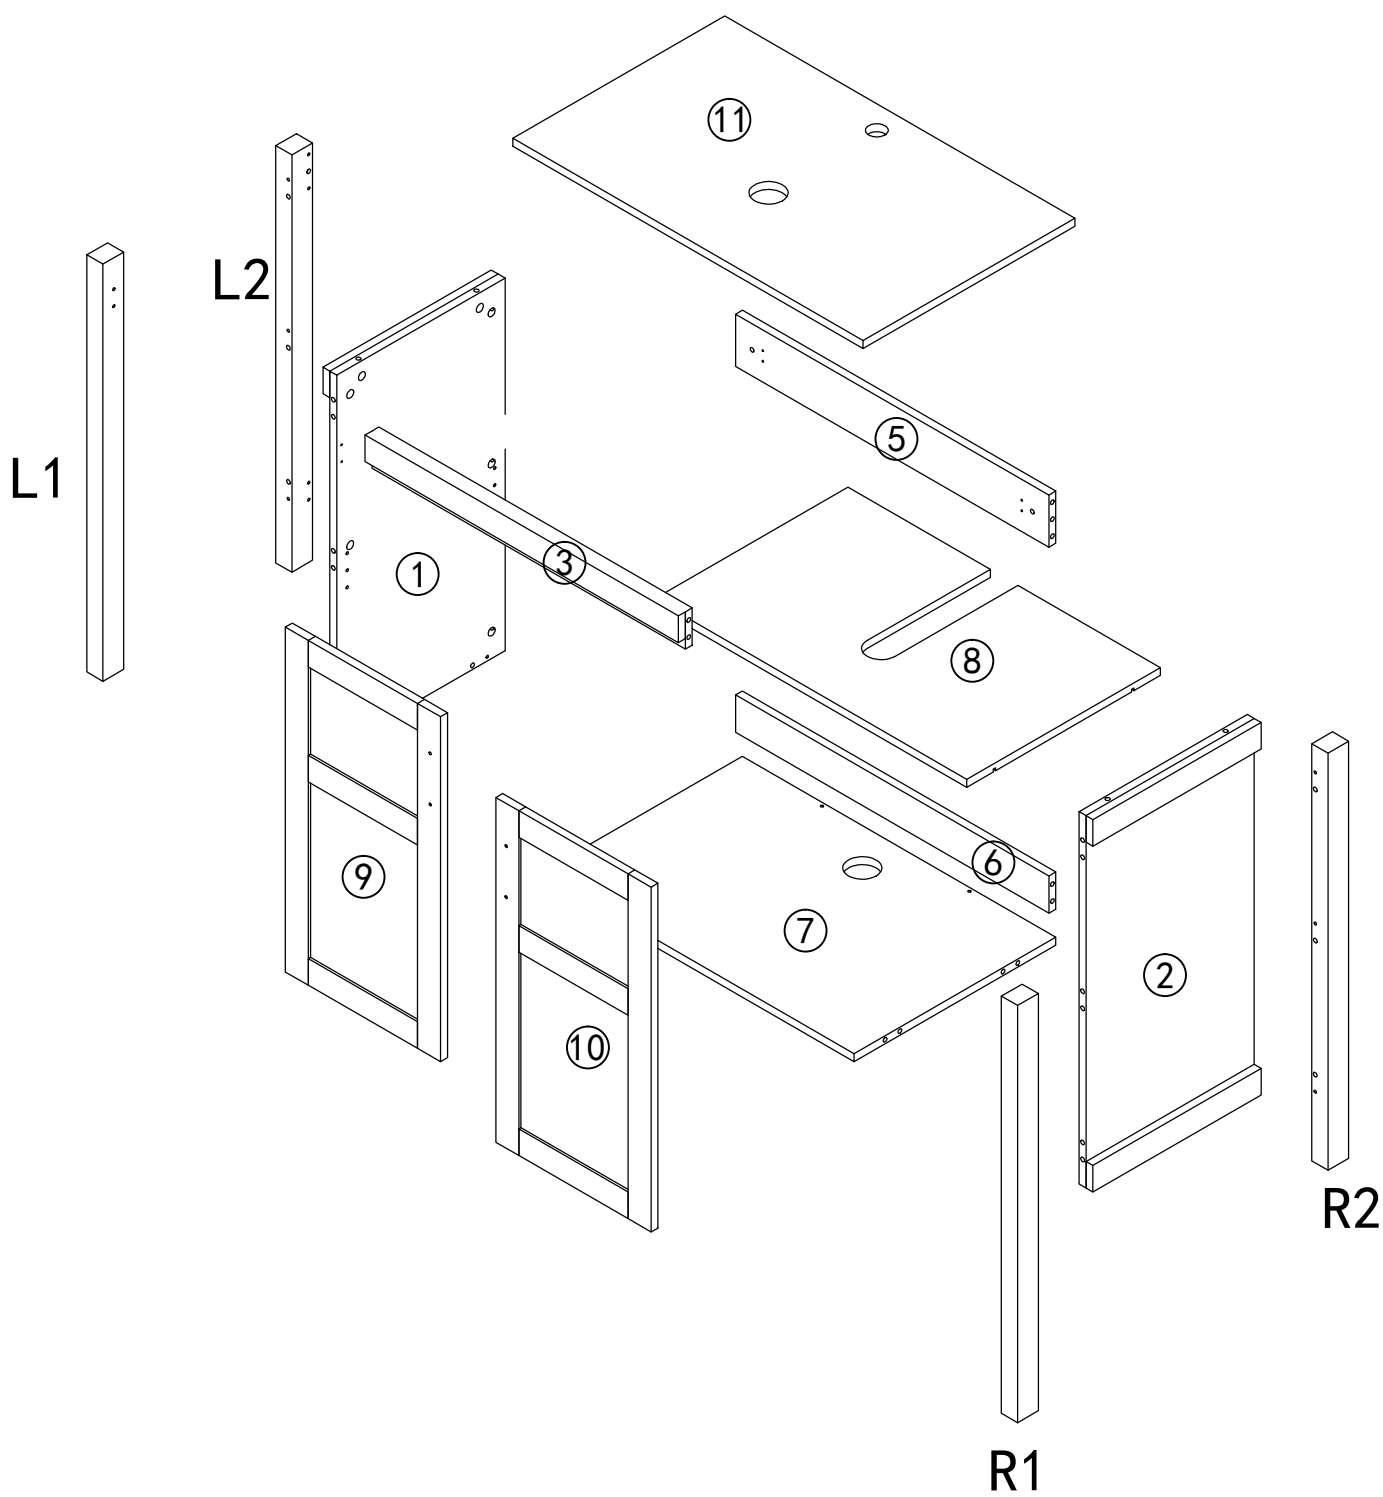


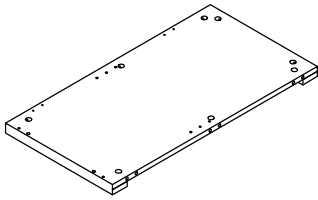


①

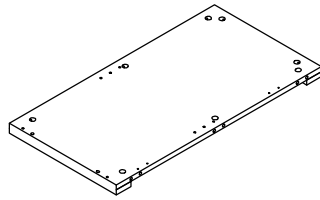


②

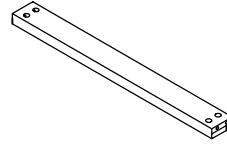


③

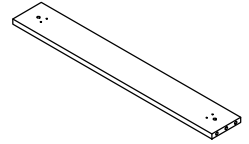


⑤

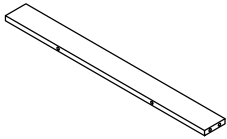


⑥

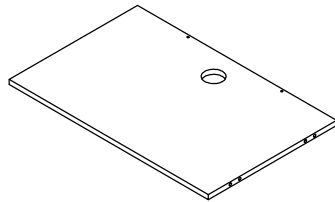


⑦

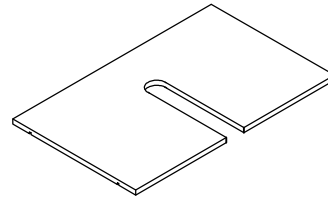


⑧

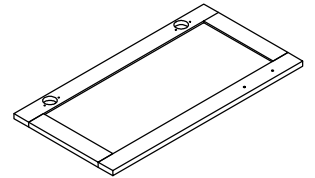


⑨

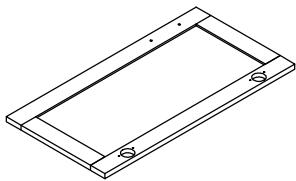


⑩

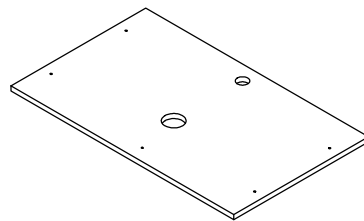


⑪

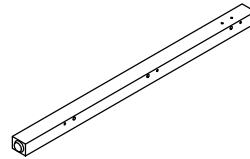


L1

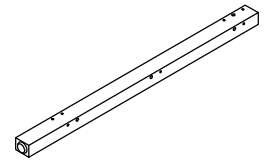

L2

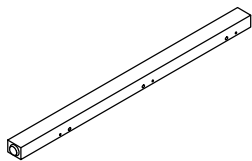


R1

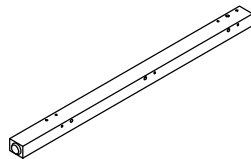

R2

Ax35



Ø5x36mm

Bx35



Ø14.5x11.5mm

Cx35




Ø17mm

Dx18



Ø8x30mm


Ex1



Fx4




Gx40




Ø3.5x14mm

Hx2




Ix4



Ø4x20mm

Jx2



Kx1



Mx4



Ø5mm


Xx2



Yx2






Zx2



Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process

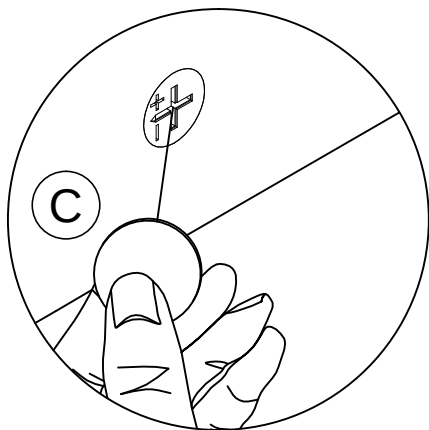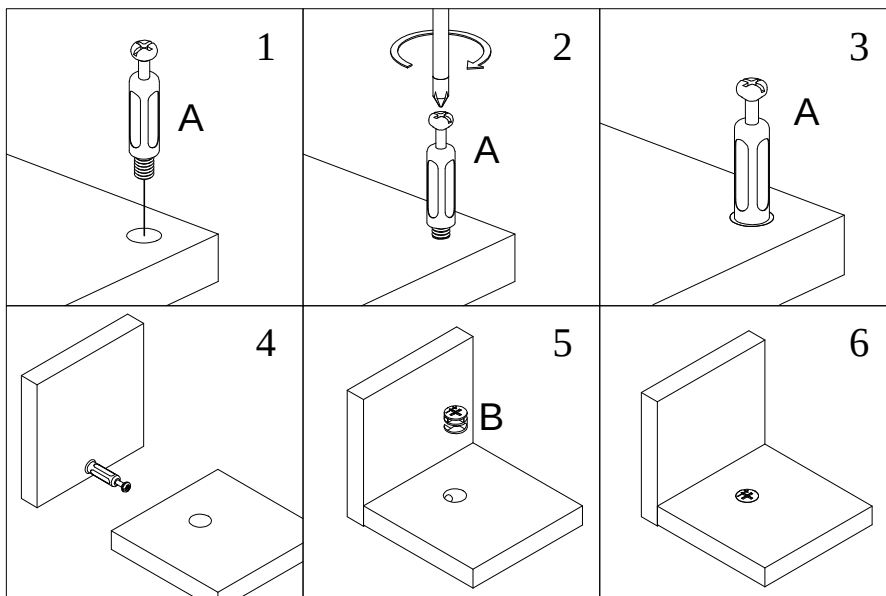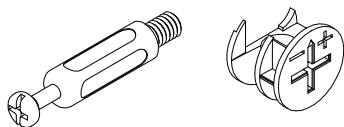


Apply decorative stickers (C) to all CAM LOCK (B) units.



****Important Notes:****

-When assembling the side panels and columns, pay attention to the distinction between left and right, as well as the orientation of the side panels (top and bottom). Refer to the illustration for guidance on the correct assembly position and method.

STEP 1

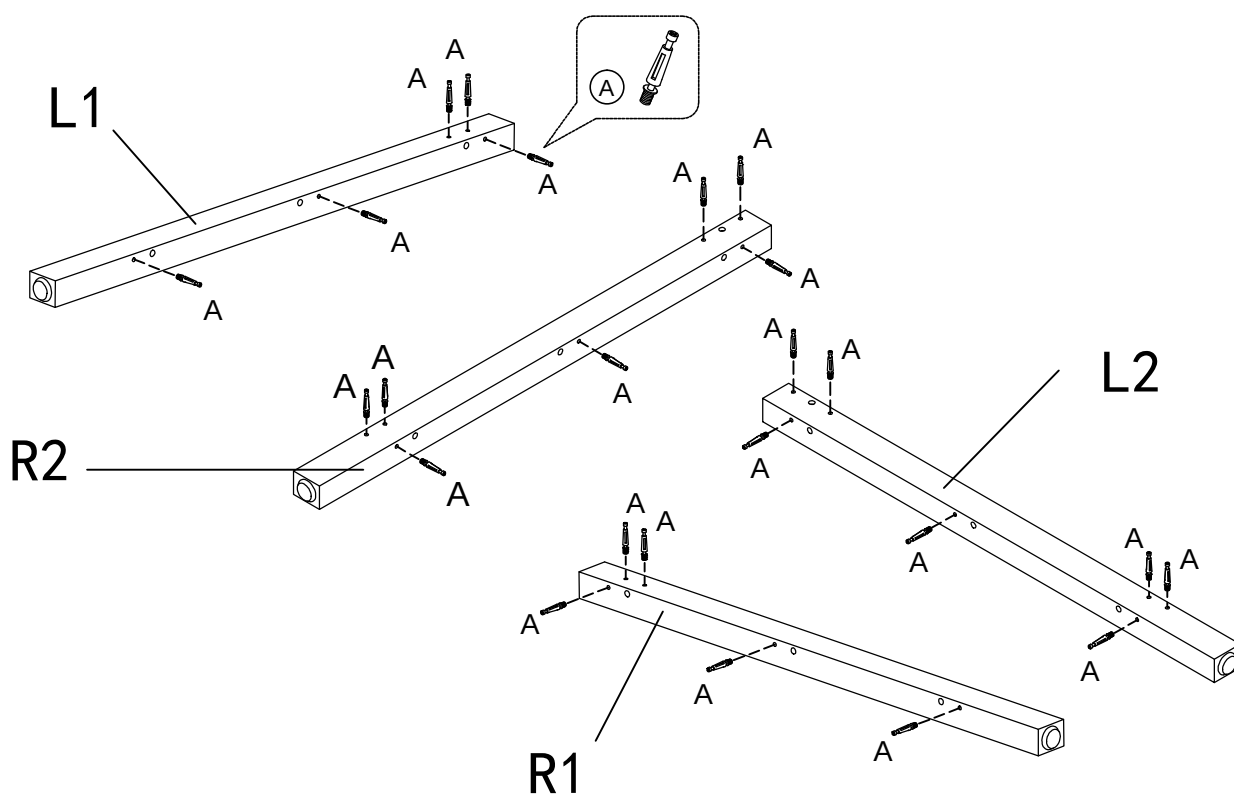

STEP 2

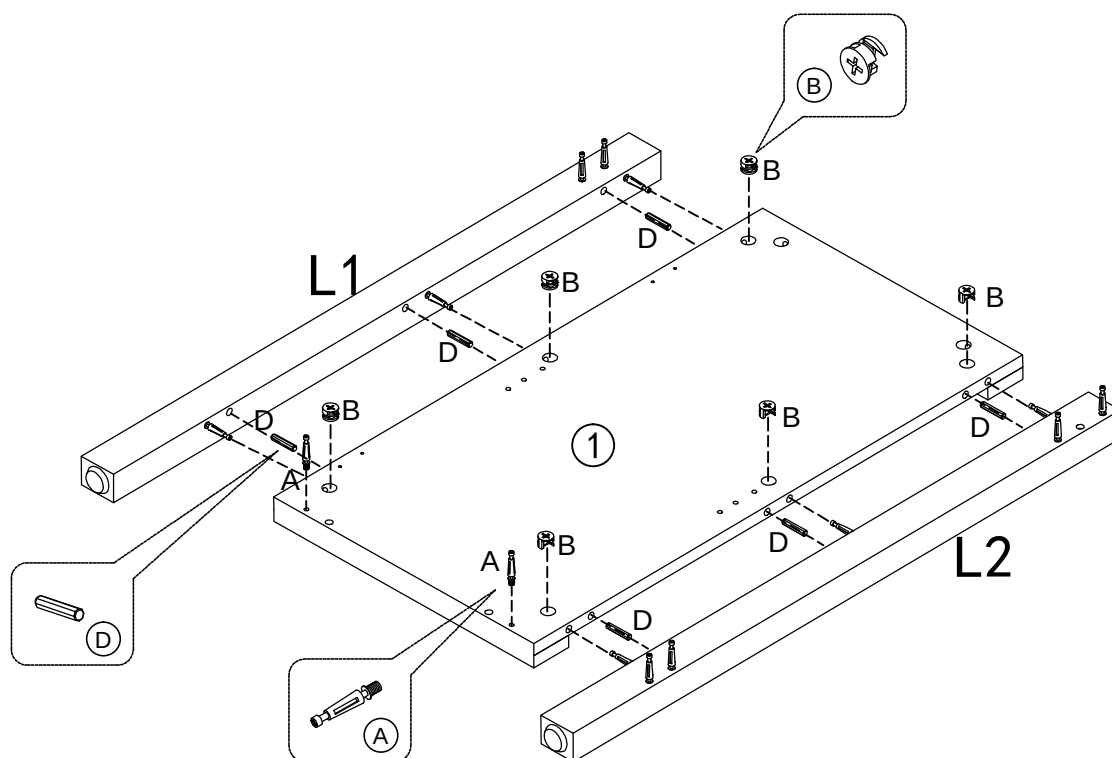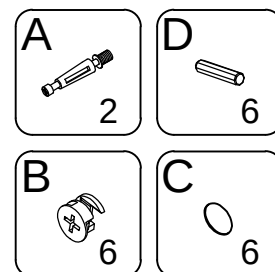

STEP 3

- A



2
- D




6
- B



6
- C



6

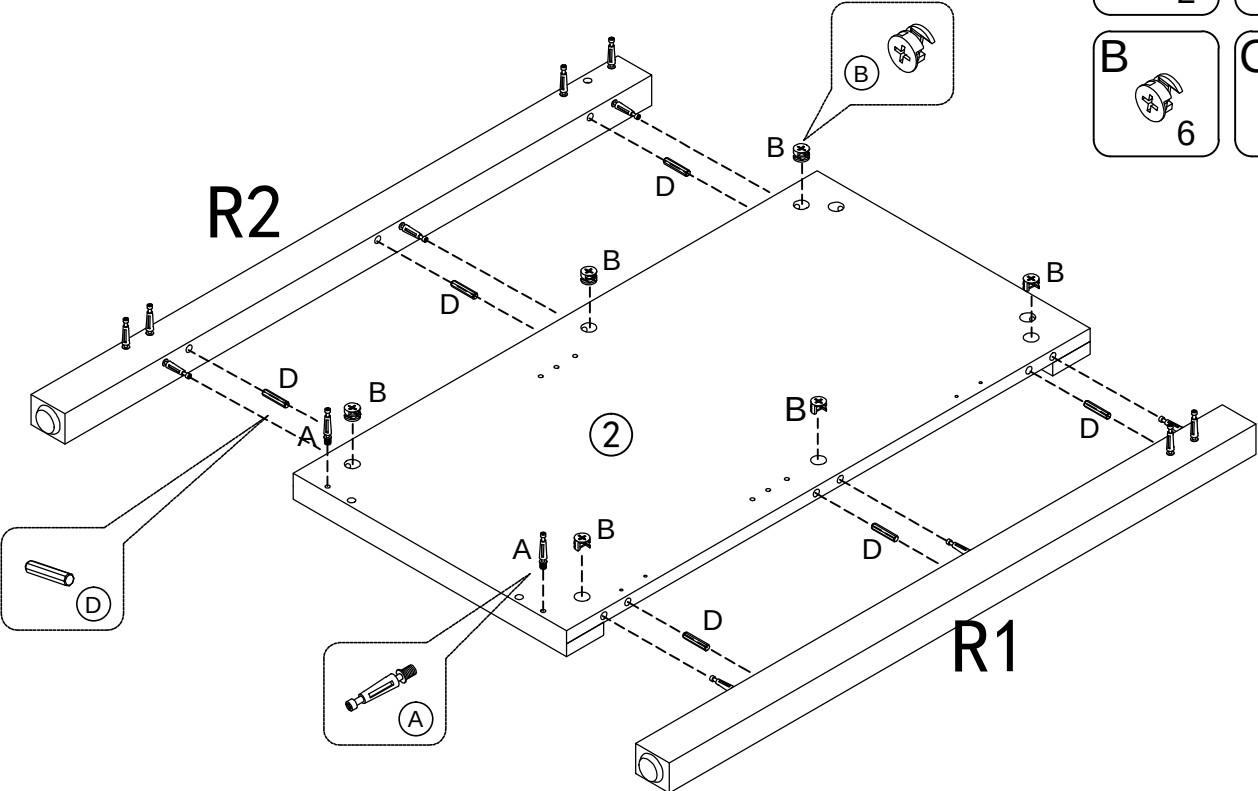

STEP 4


- E





1
- A





2

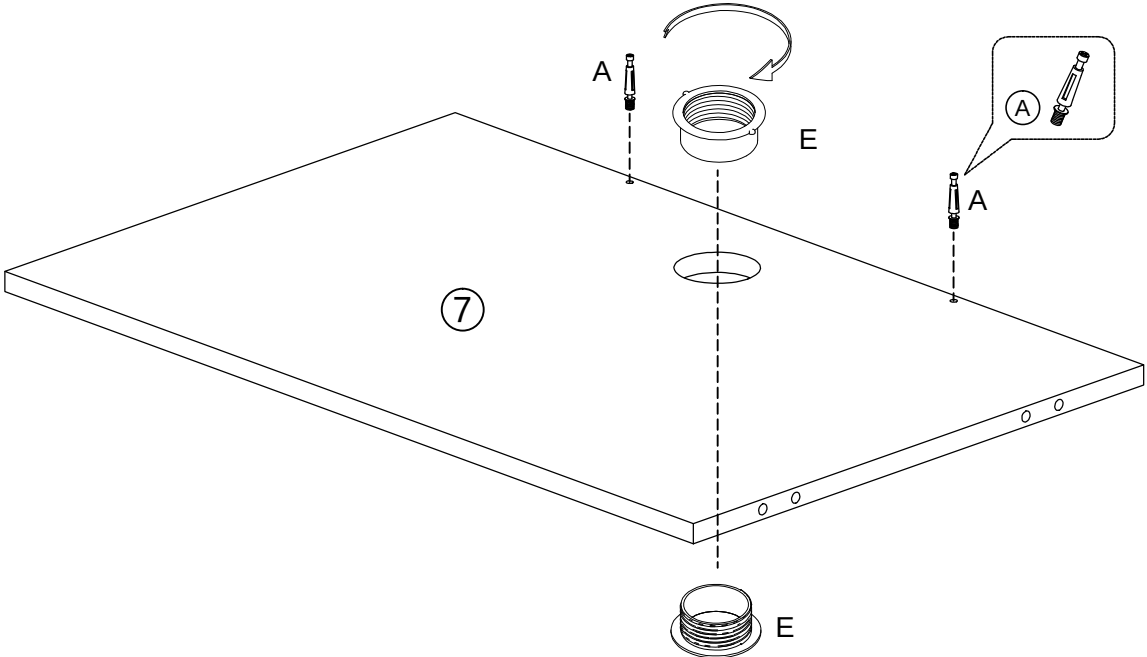



STEP 5

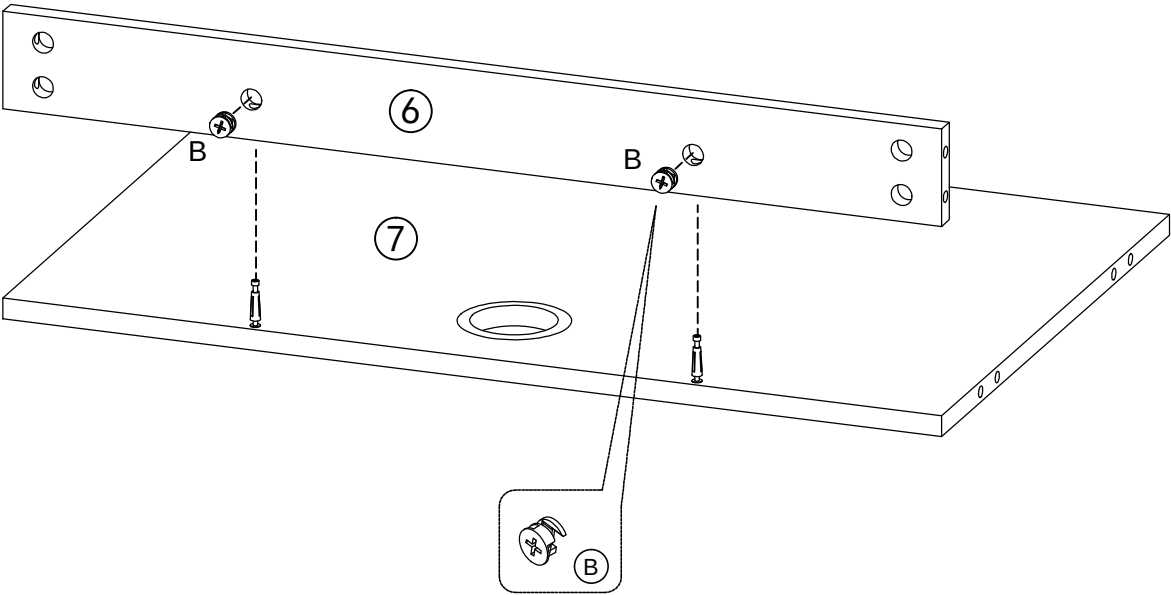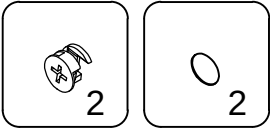



STEP 6

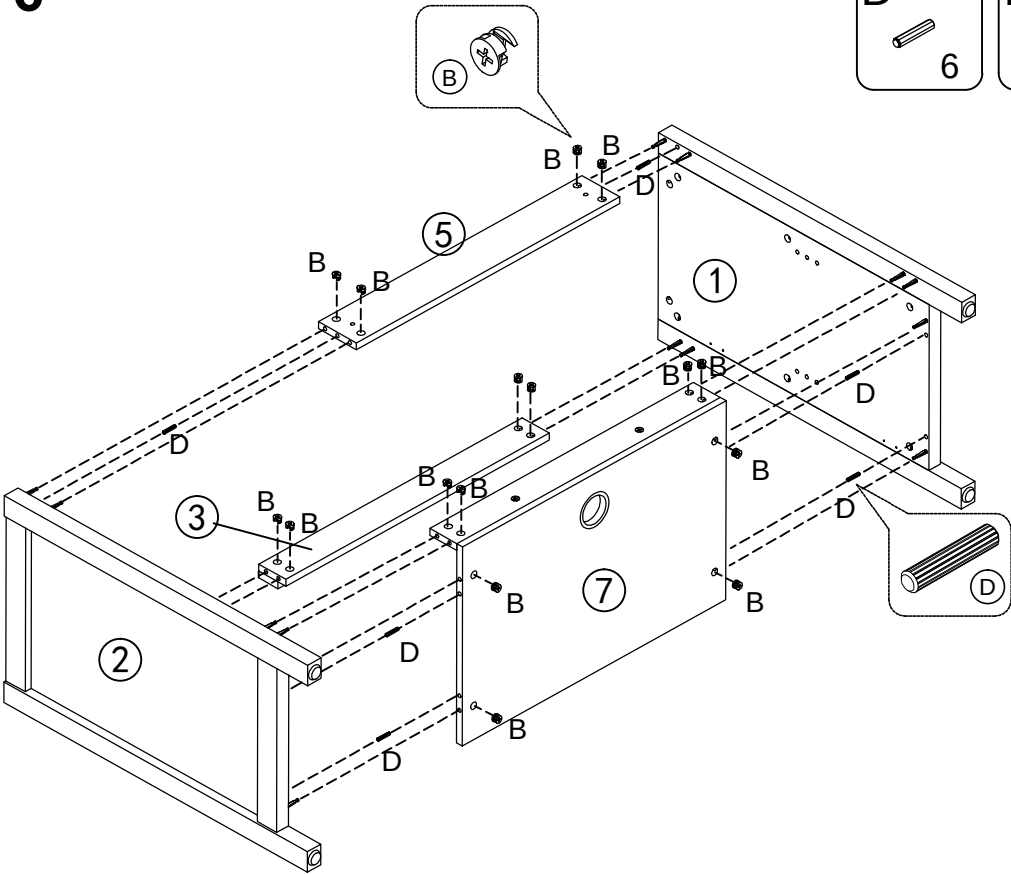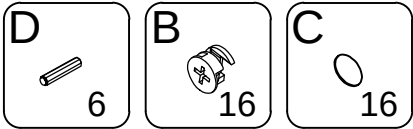



STEP 7

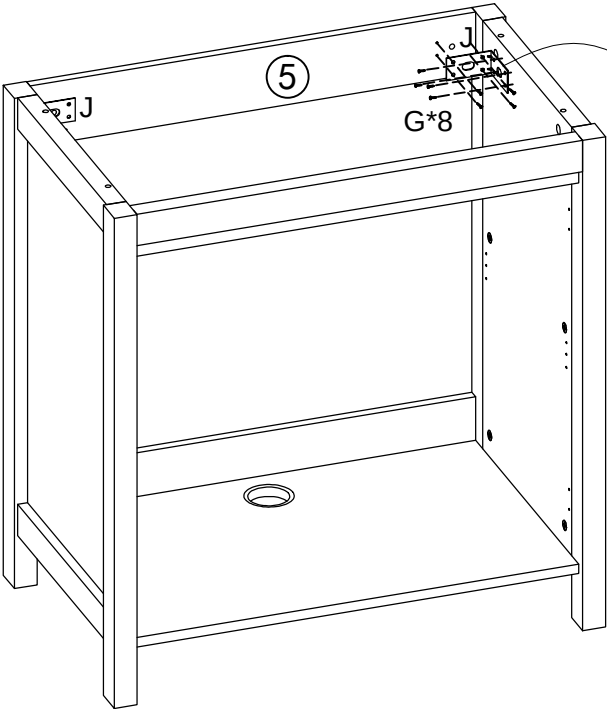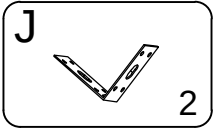


STEP 8

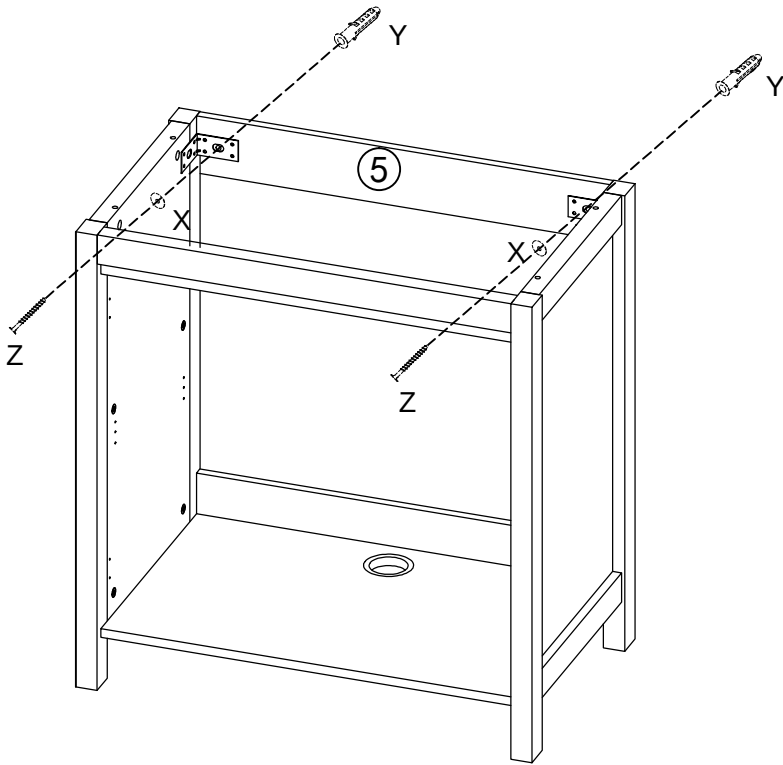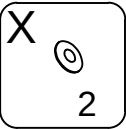


punch two holes in the wall to install accessor.

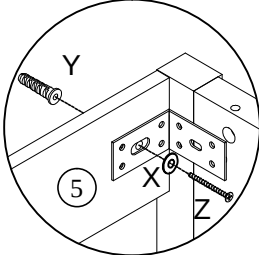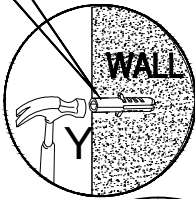

STEP 9

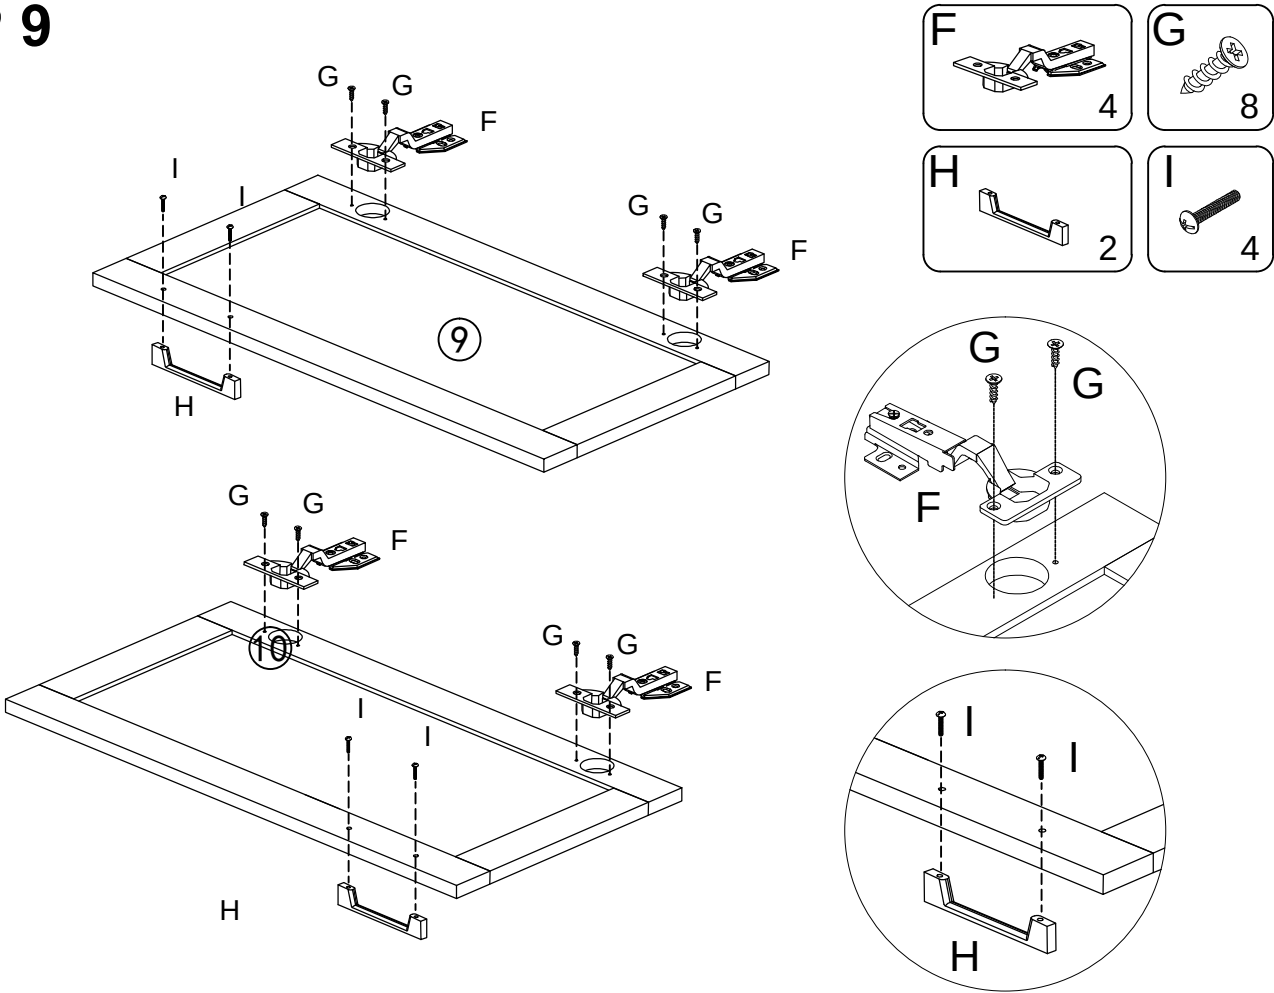



STEP 10

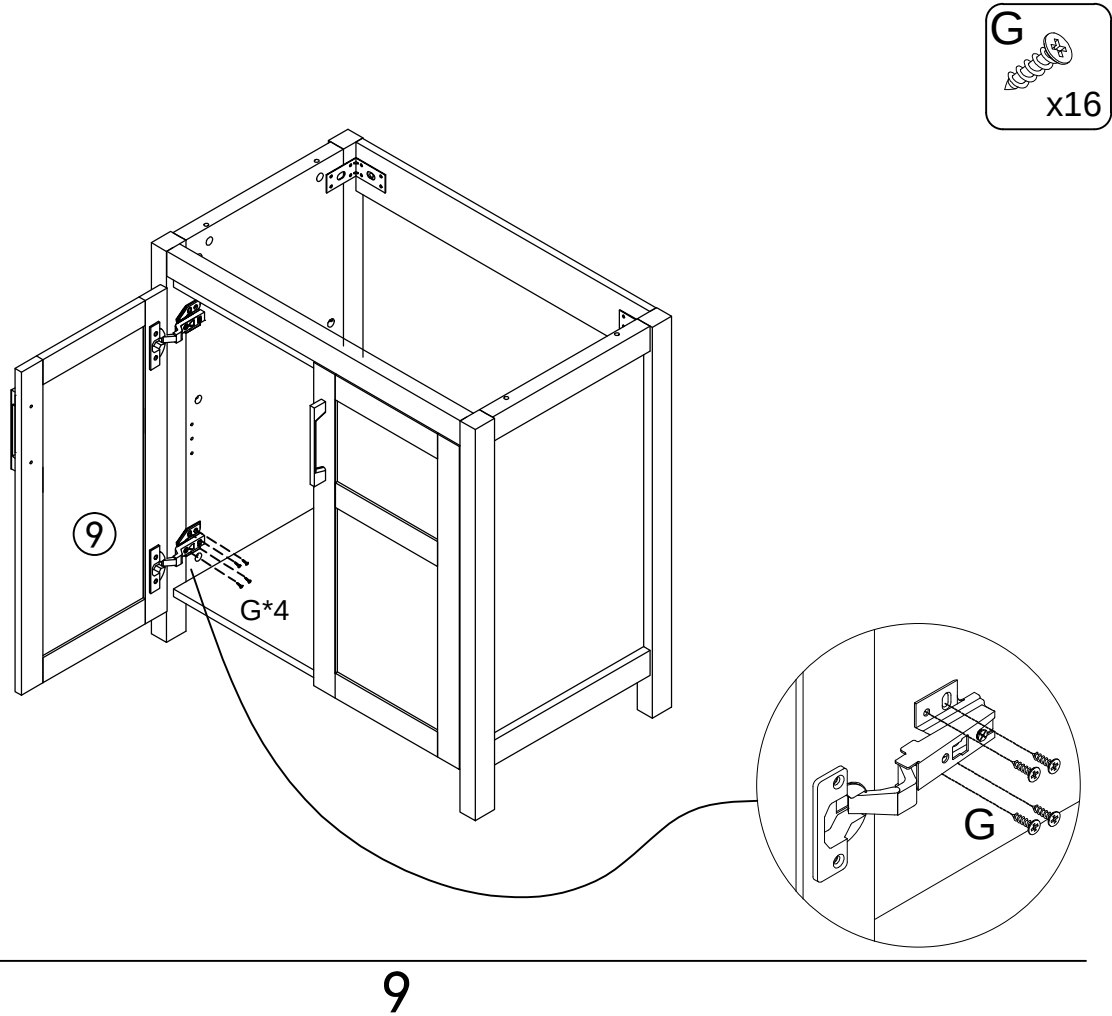

STEP 11

Sideways/Gap Adjustment

Turning the screw "2" on the hinges of each door allows you to adjust the door to the left or right by a few millimeters.

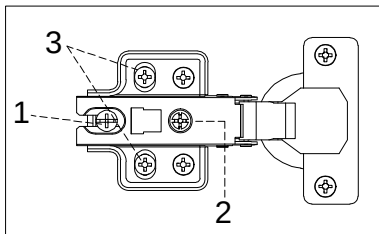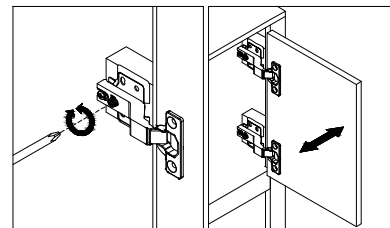


Hinge Adjustment Guide

Three-way adjustable hinge for perfectly aligned doors


Forward/Backward Alignment

Loosen screw "1" to adjust the door forward or backward. After adjustment, Tighten screw "1".



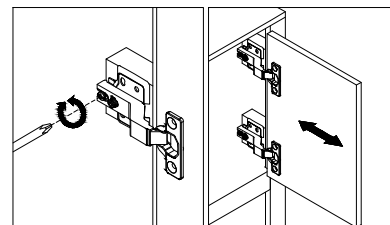


Vertical Height Adjustment


Loosen screw "3" to adjust the door up or down. After adjustment, hold the door panel and tighten screw "3".

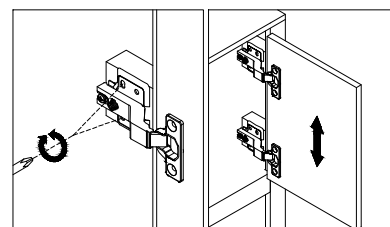




STEP 12

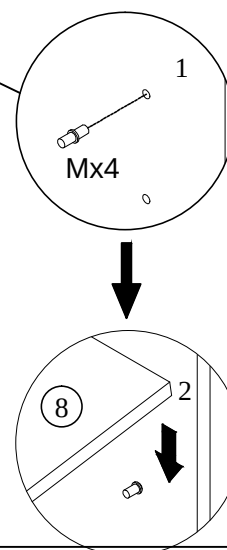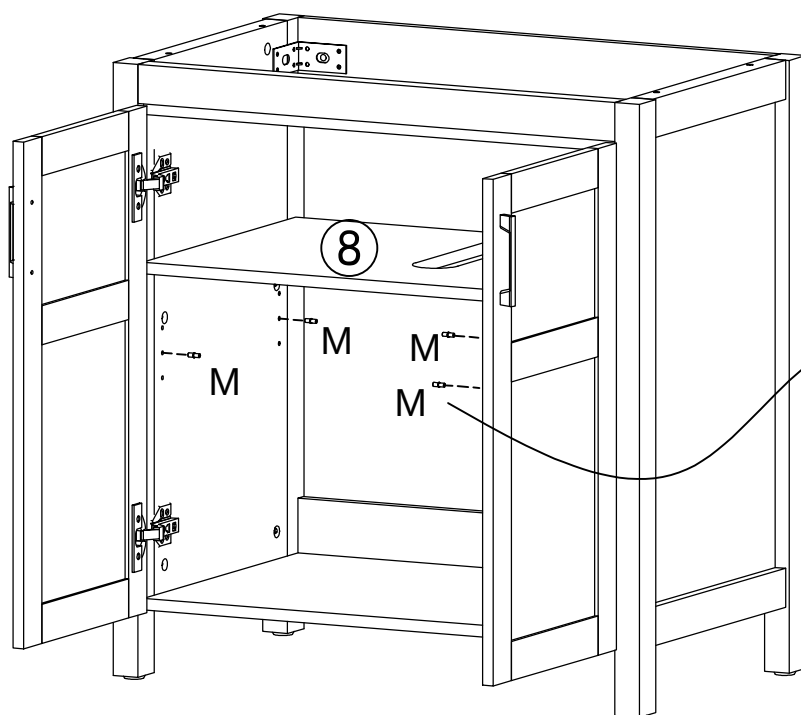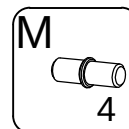


STEP 13

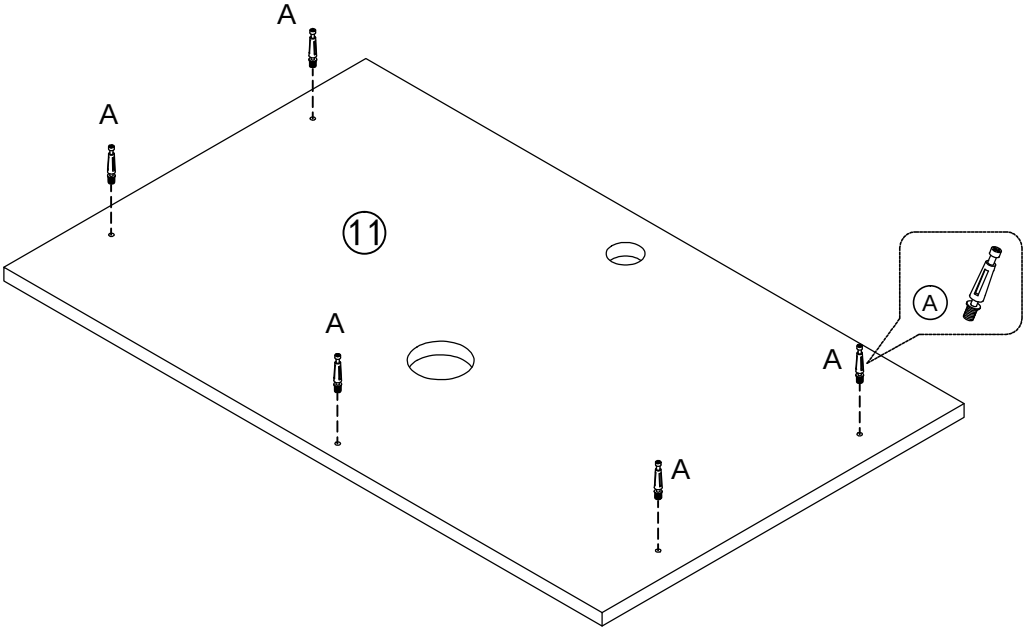



STEP 14

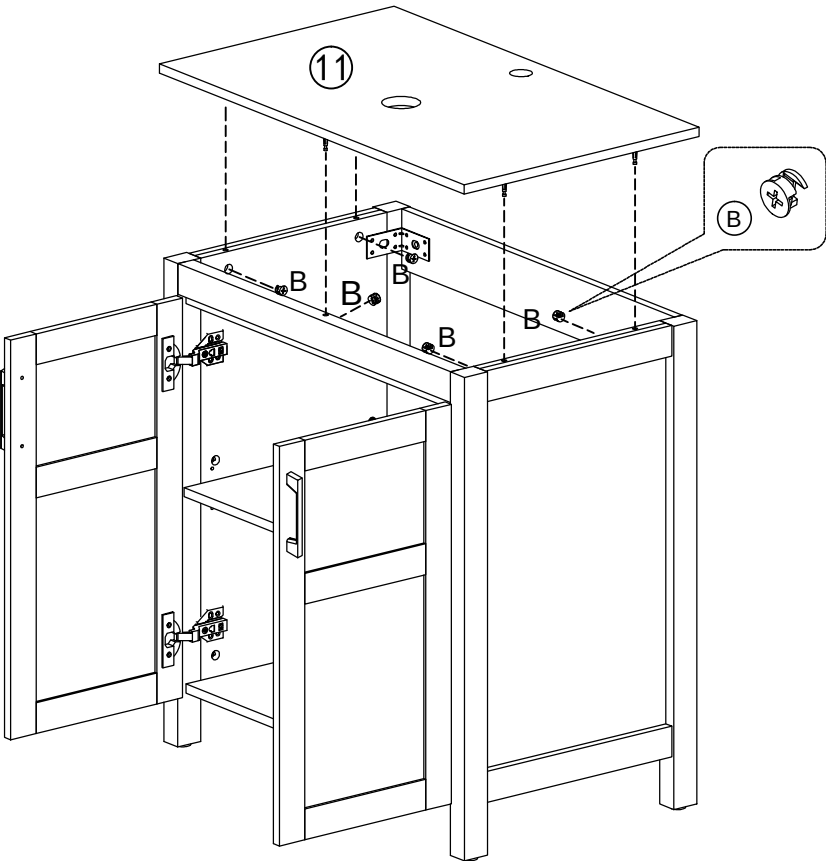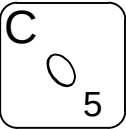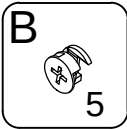

STEP 15

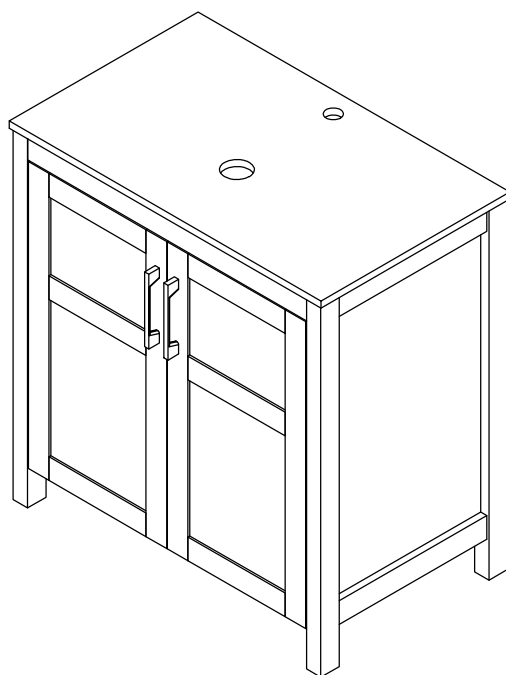


STEP 16

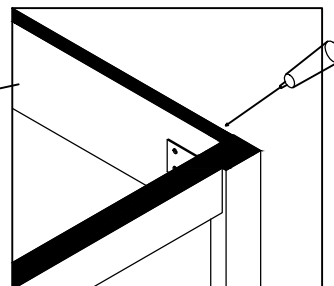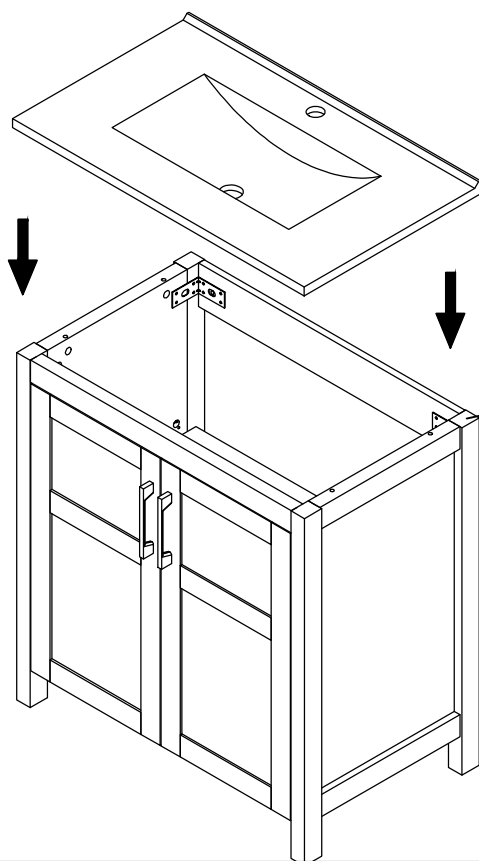

"To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls"

STEP 17

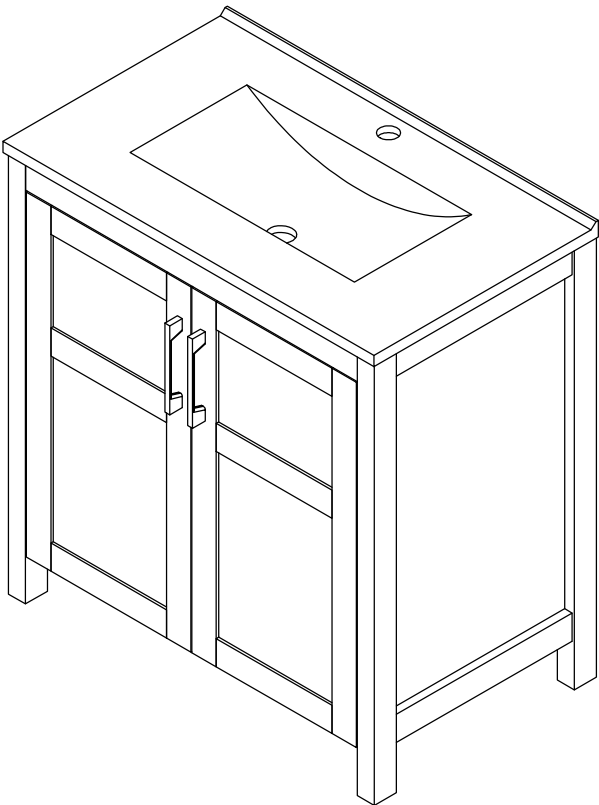

STEP 18