




# ASSEMBLY INSTRUCTIONS

## FABRIC BENCH


NO.	PARTS	QTY	NO.	PARTS	QTY	NO.	PARTS	QTY
a	 M8*80	8	b	 $\Phi 8$	8	c	 $\Phi 8$	8
A		1	C		4	D		1
B		8						

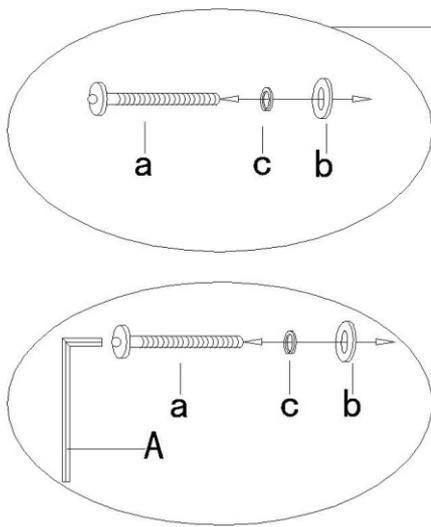

STEP 1

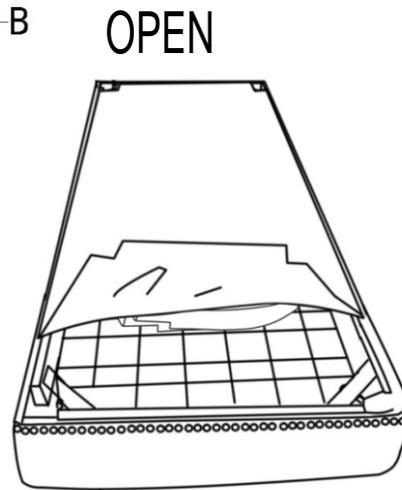


STEP 2

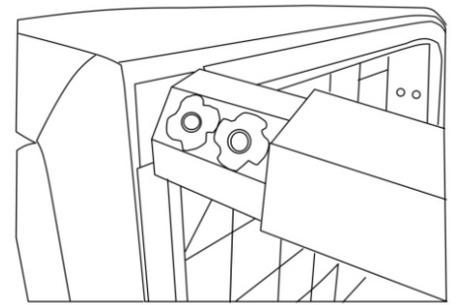


T-nut need to face the corner

STEP 3

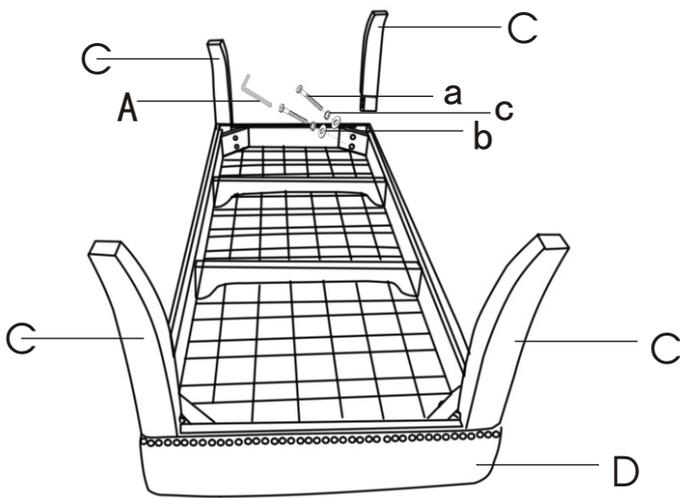

STEP 4

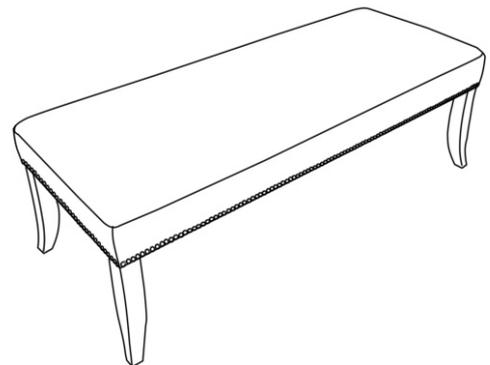

STEP 5