

Installation Guide

Parts list



foot pad



screwdriver



wrench



drawer handle





screw washer



screw


Step 1

For the small side cabinet, first follow the steps in the diagram below: pull out the first-tier drawer by applying simultaneous force—one side downward and the other upward on both drawers. Then, flip the side cabinet over to attach the foot pads.

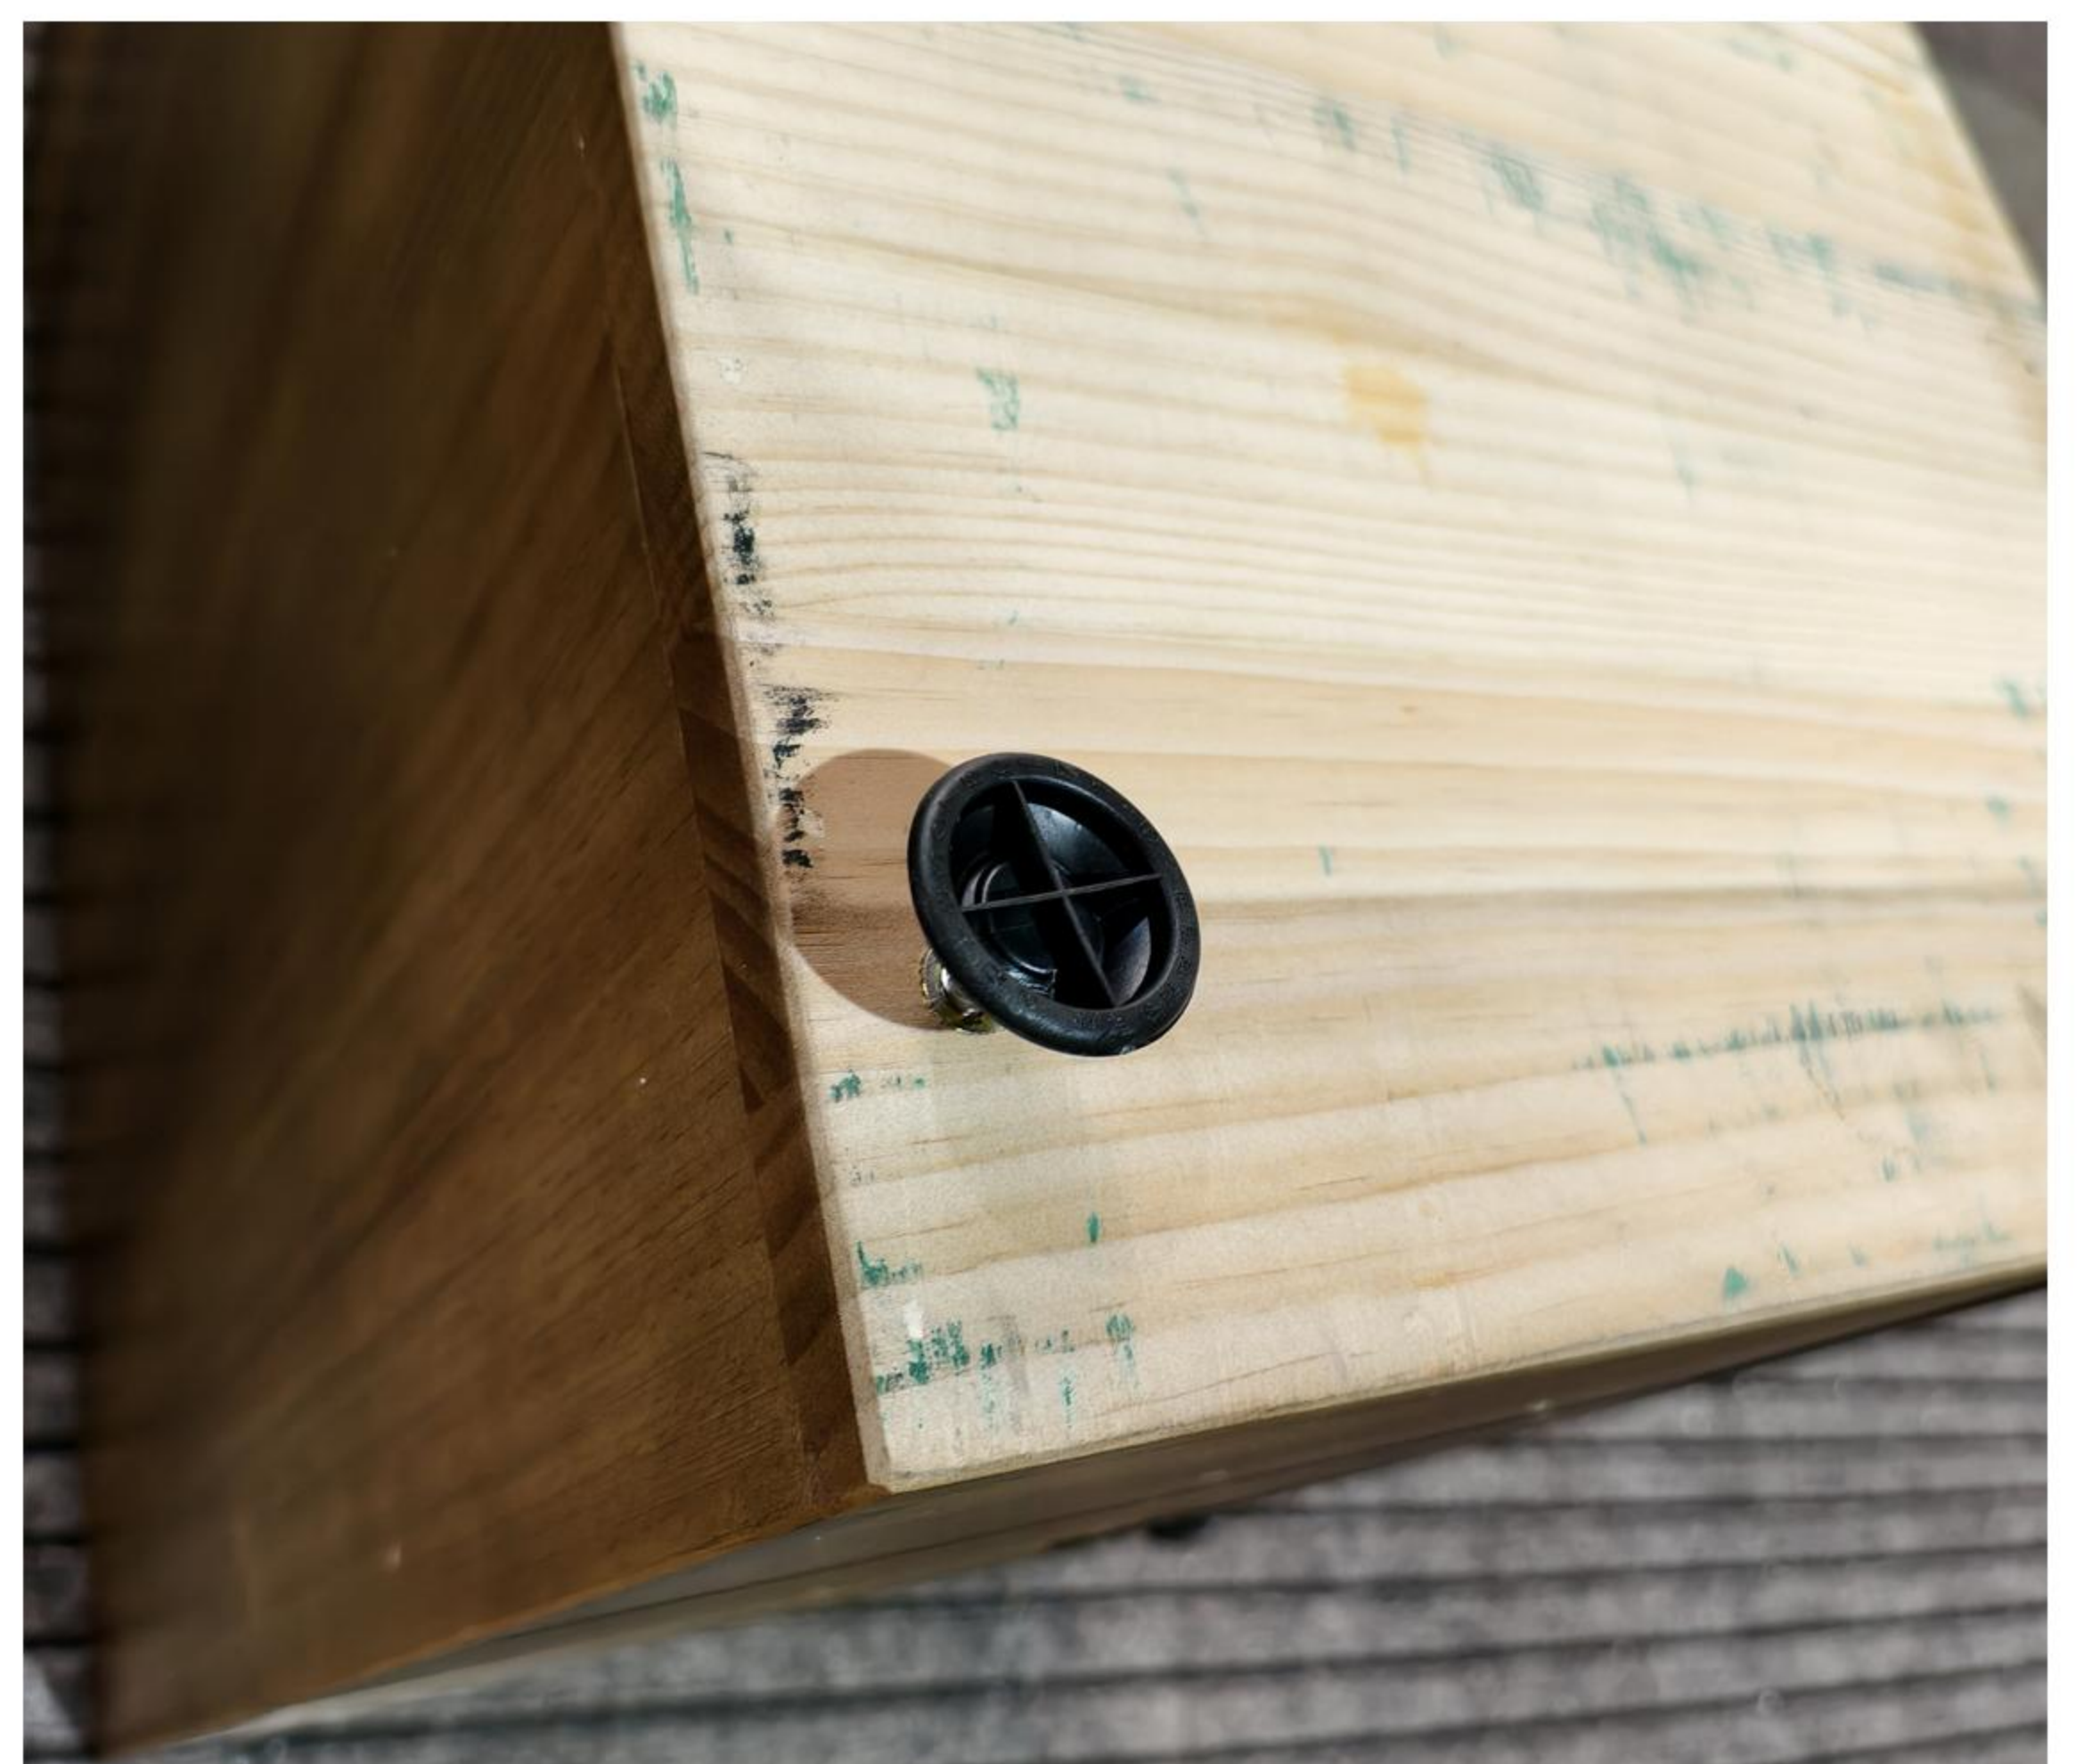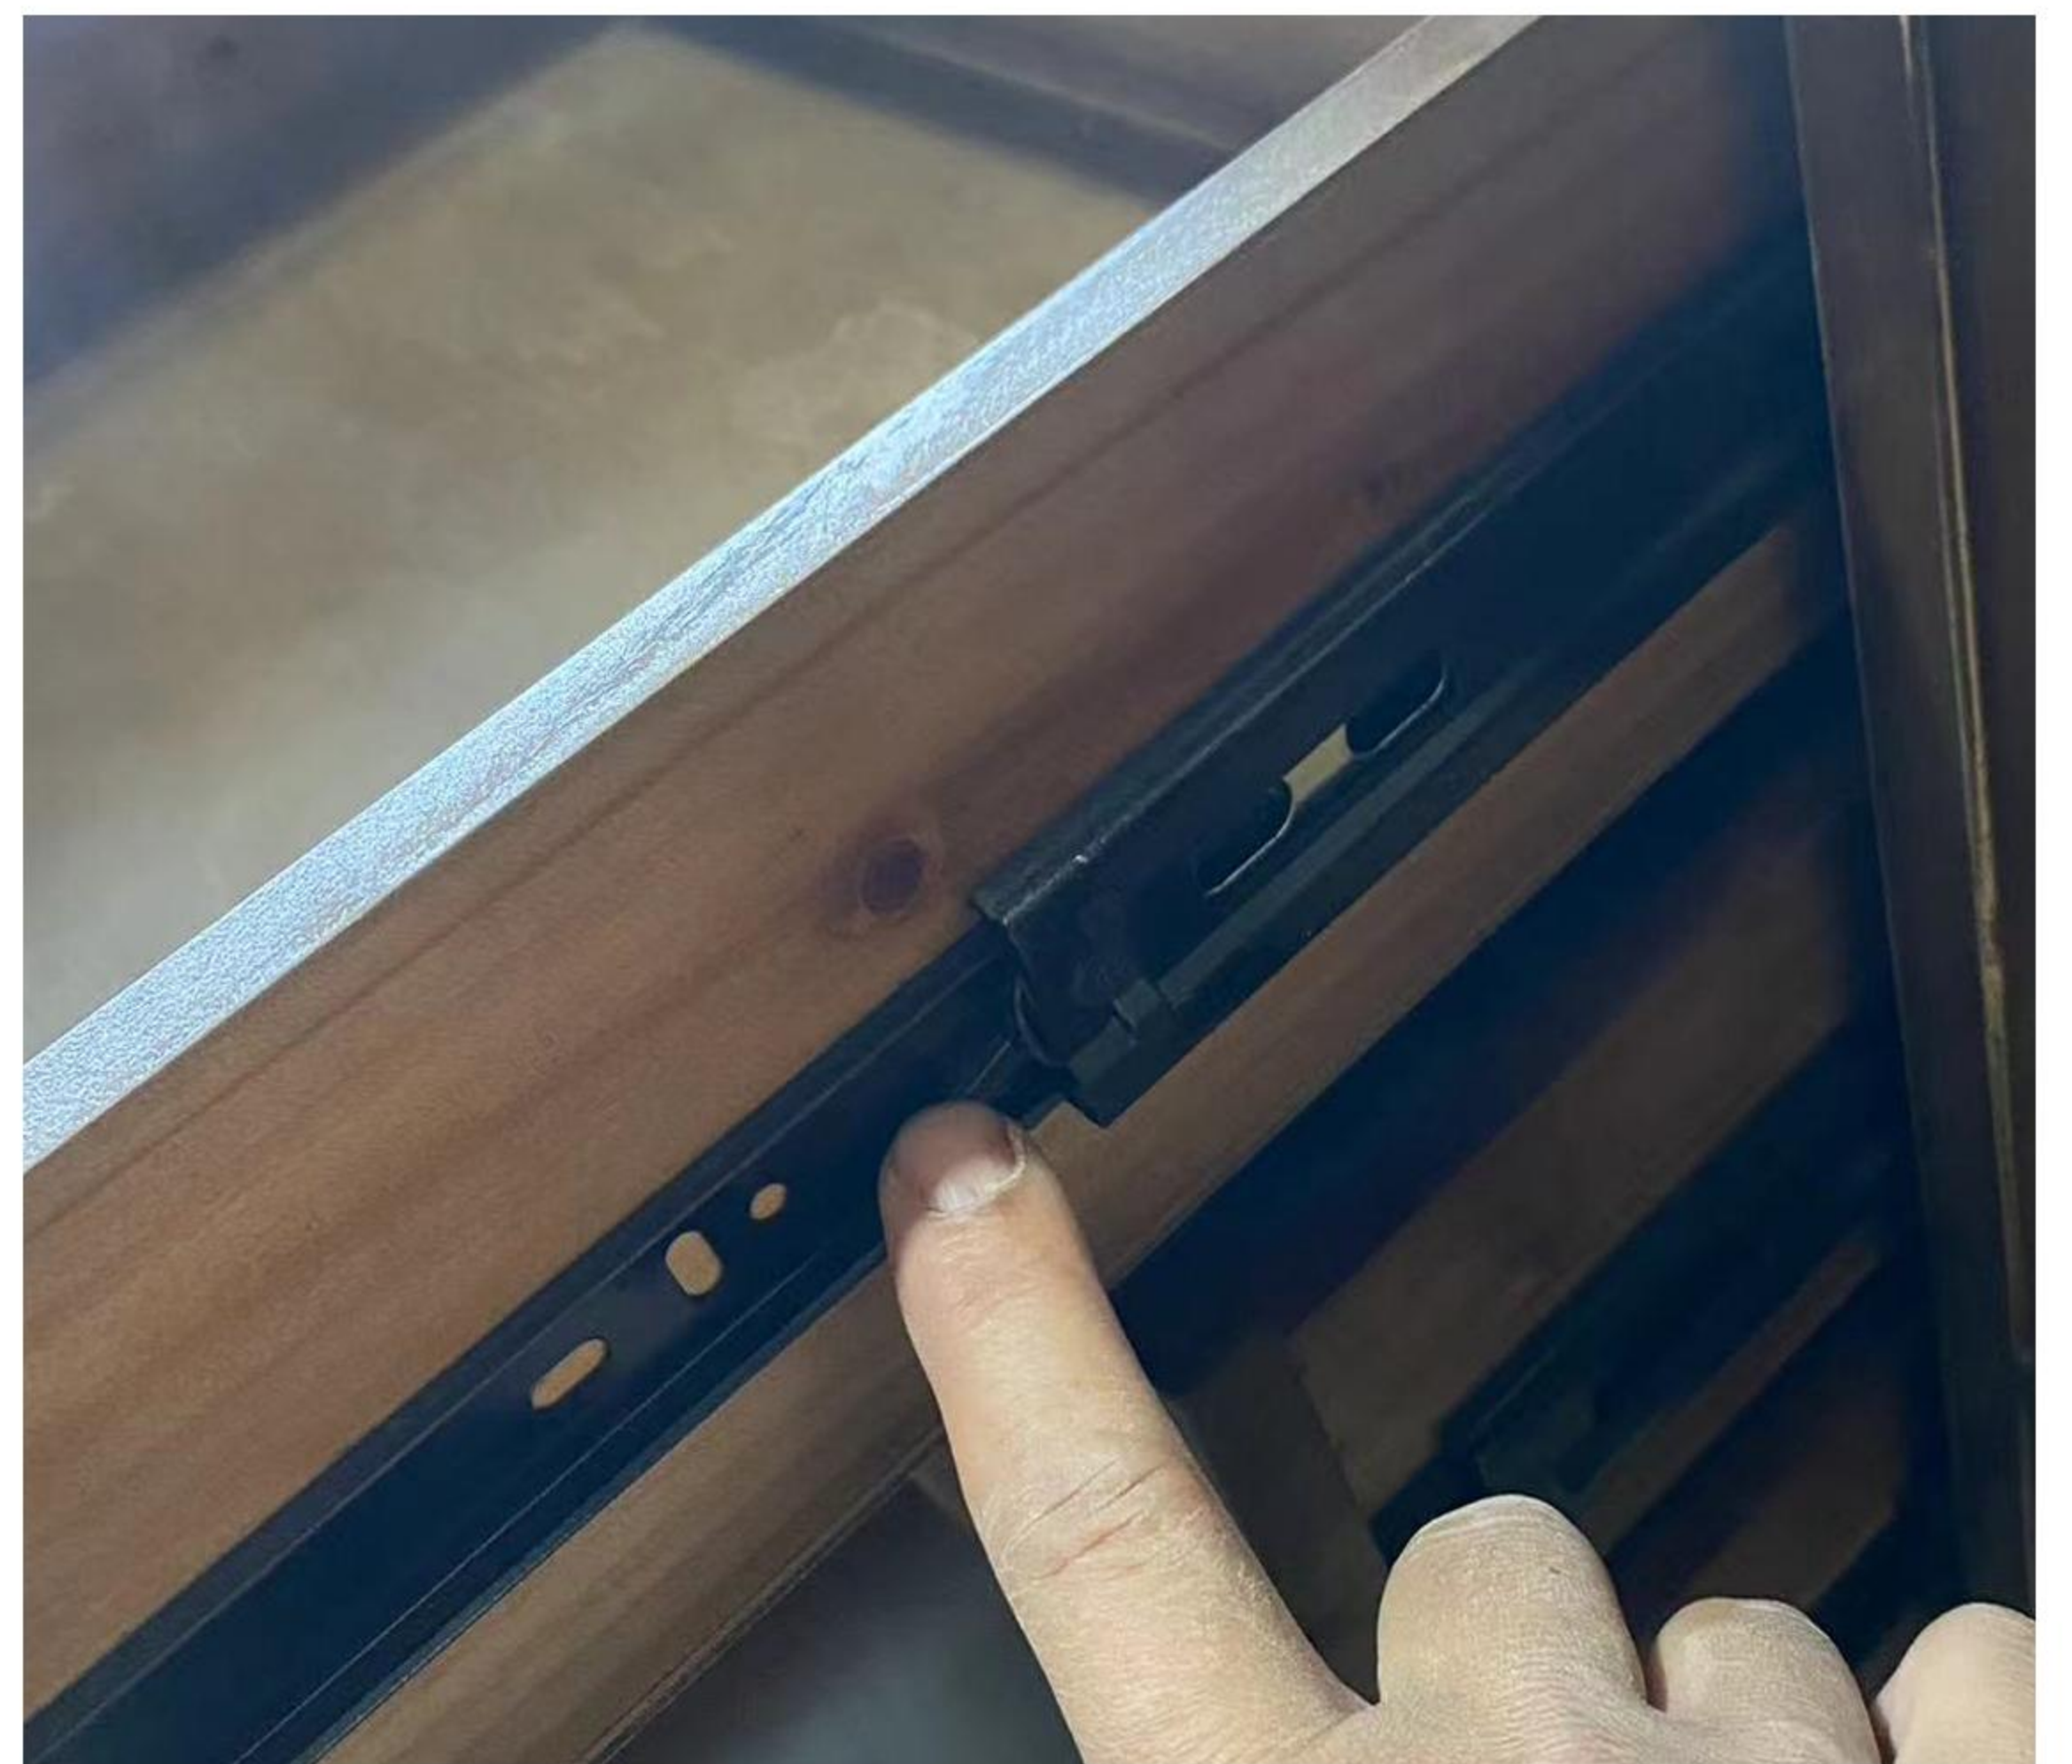

Step 2

Place the screw washer onto the screw, and install the middle baffle by connecting it in the direction indicated in the product image.

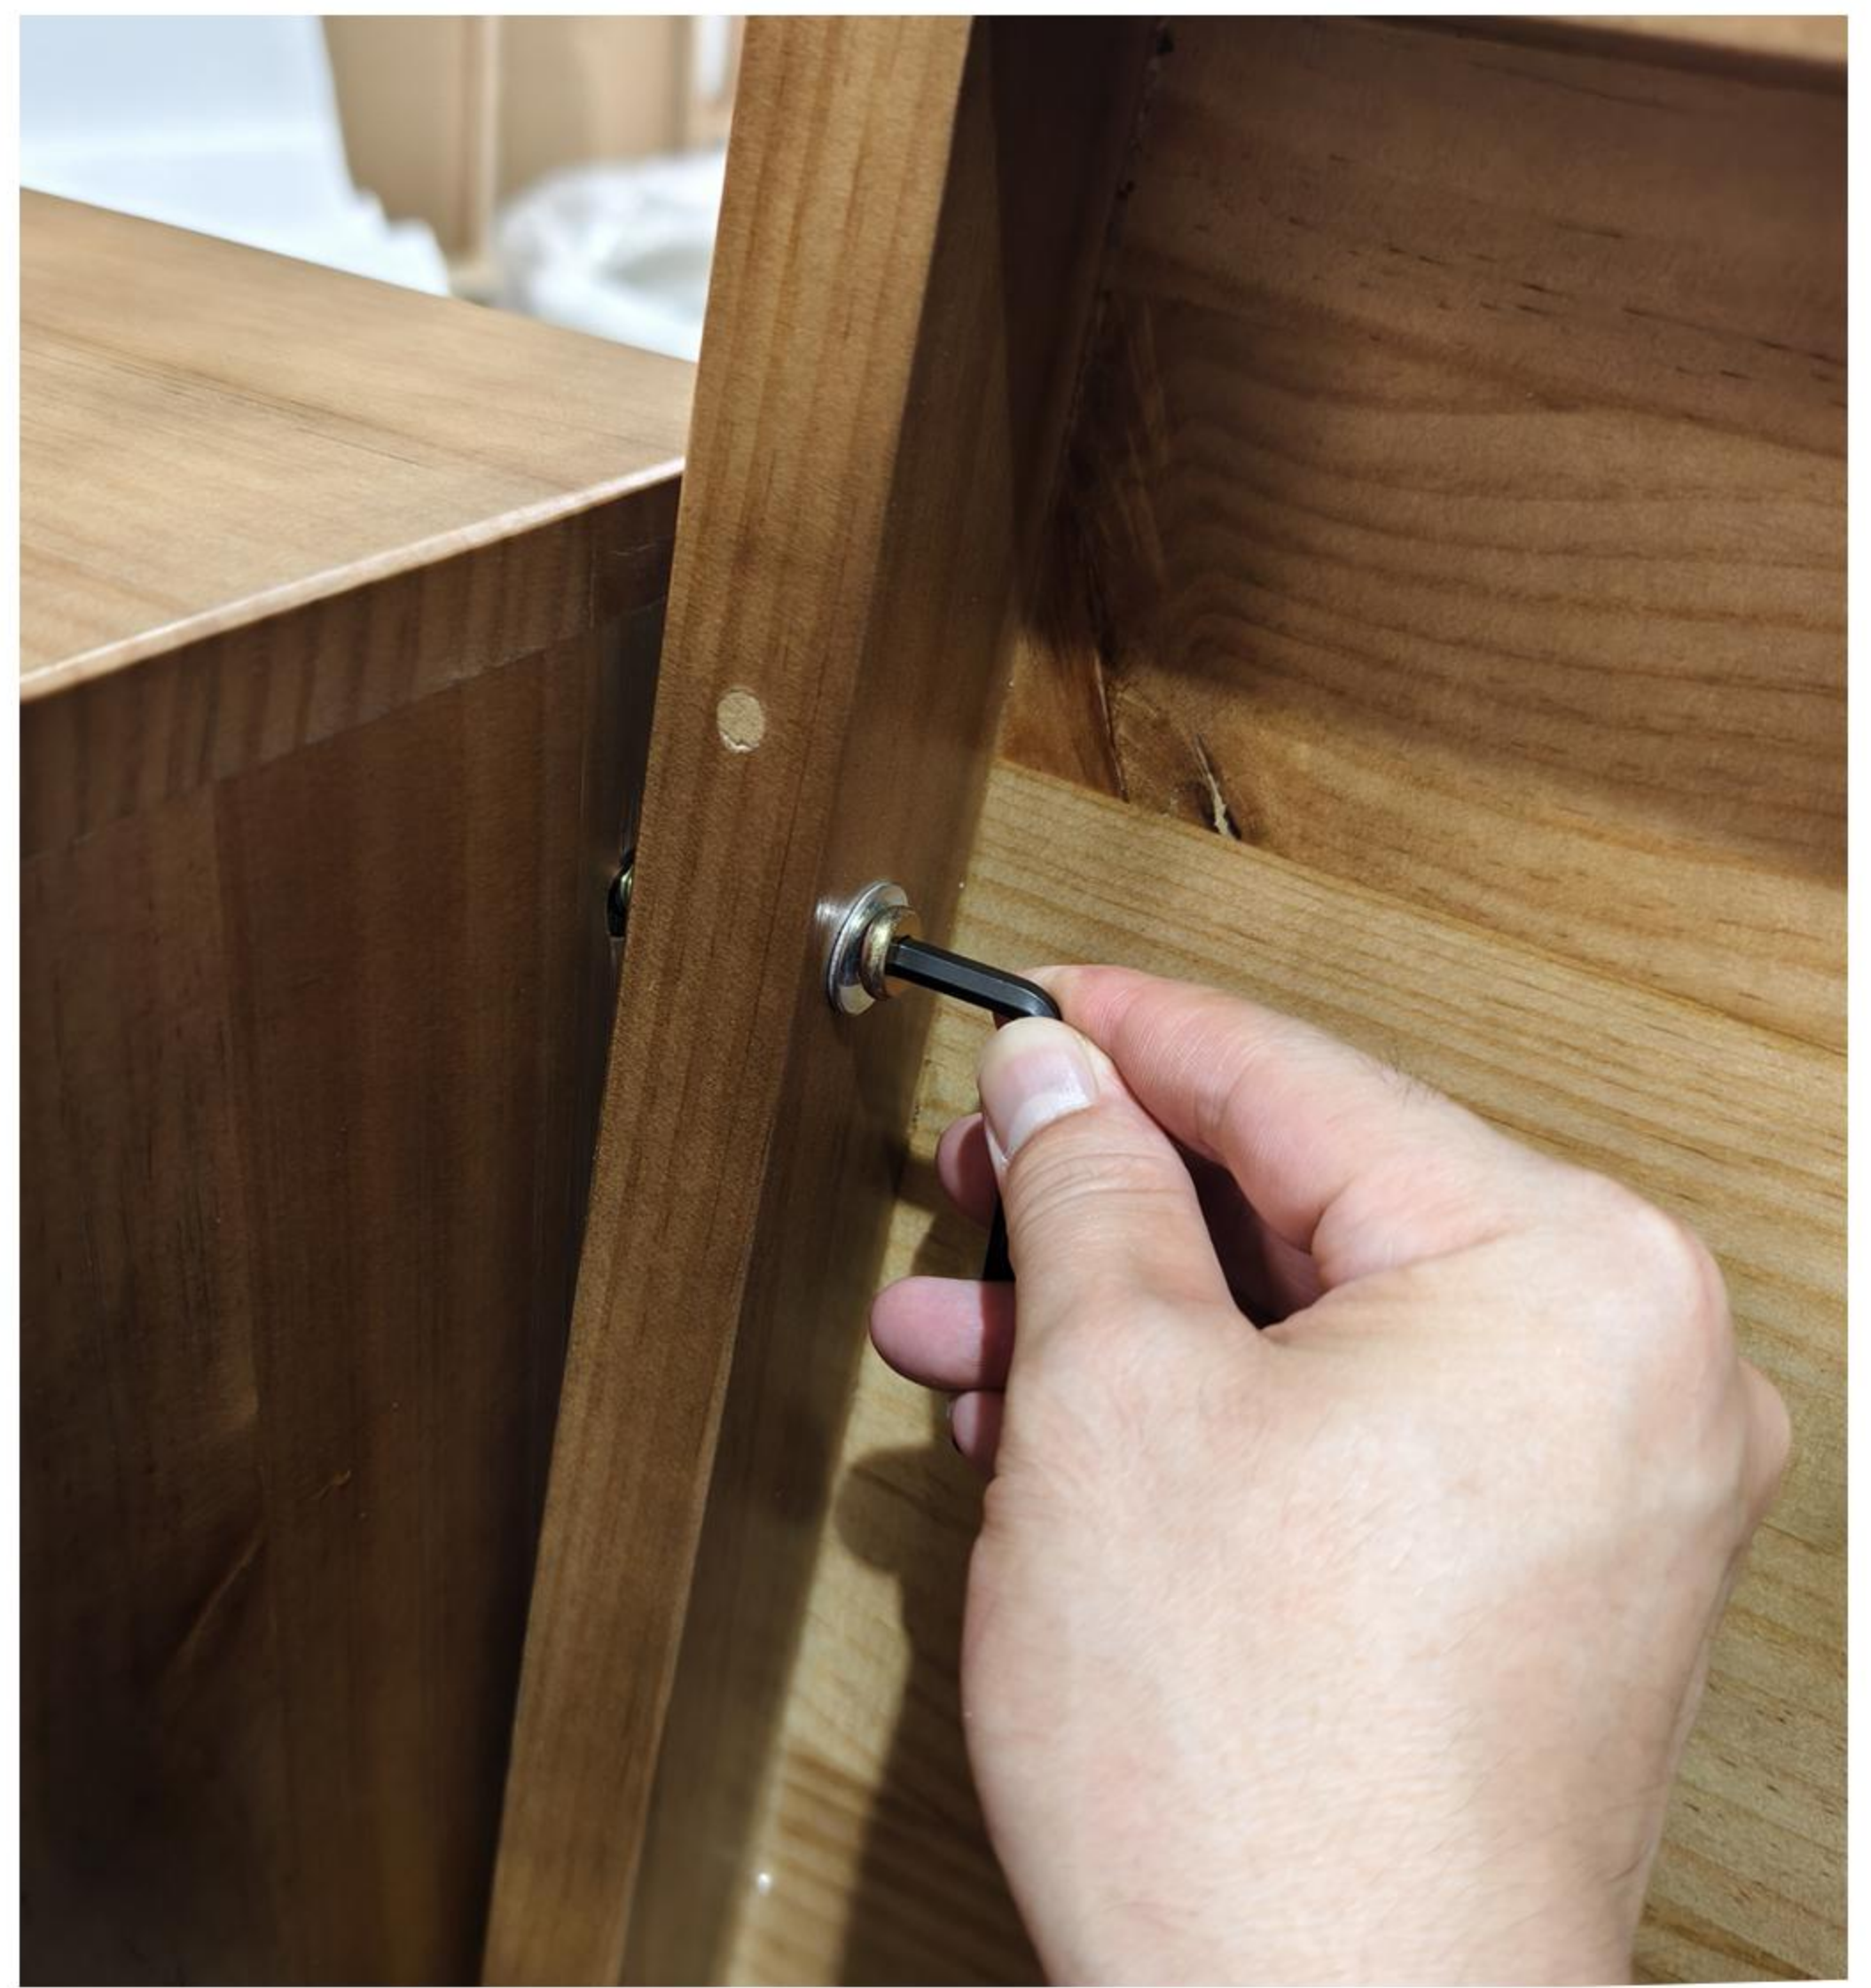


Step 3

As shown in the following diagram, position the desktop onto the partially assembled unit, ensuring that holes A and B, along with all other pre-drilled holes, are properly aligned.



Step 4

As illustrated, use screws to secure the desktop in place by aligning the holes accurately.

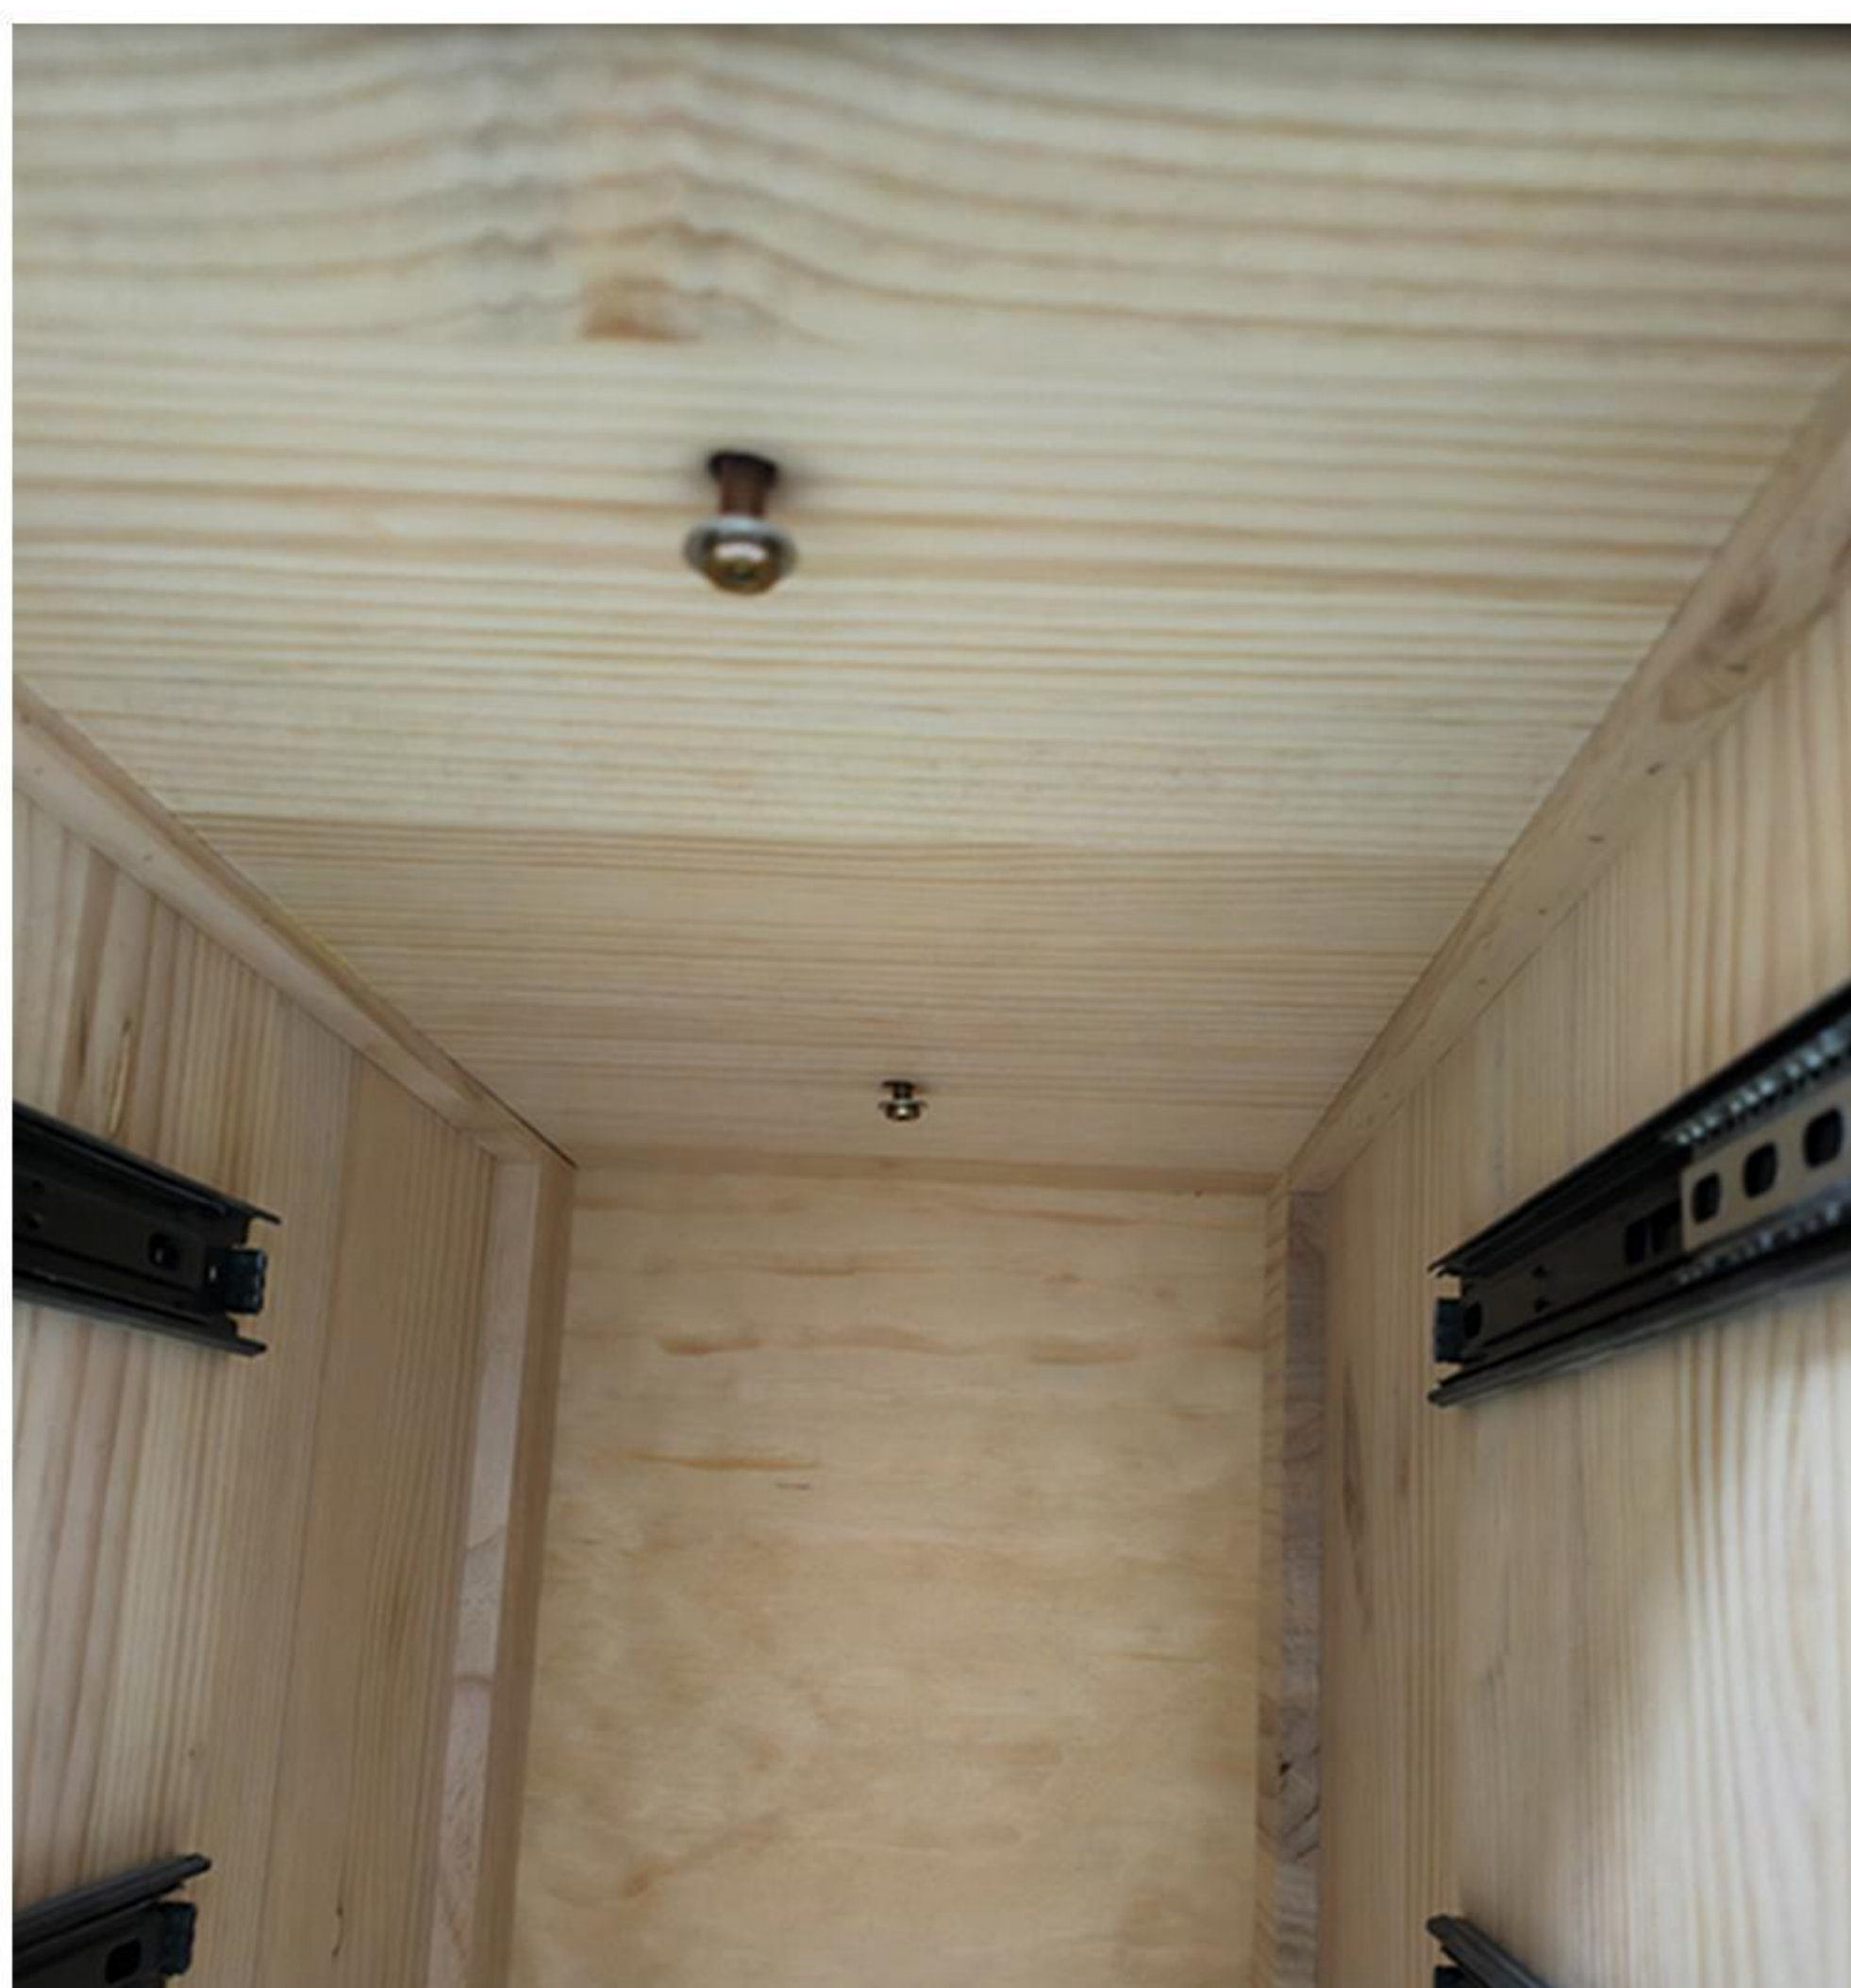

Step 5

As depicted in the image, use a screwdriver to tighten the screws and install the drawer handles.

