

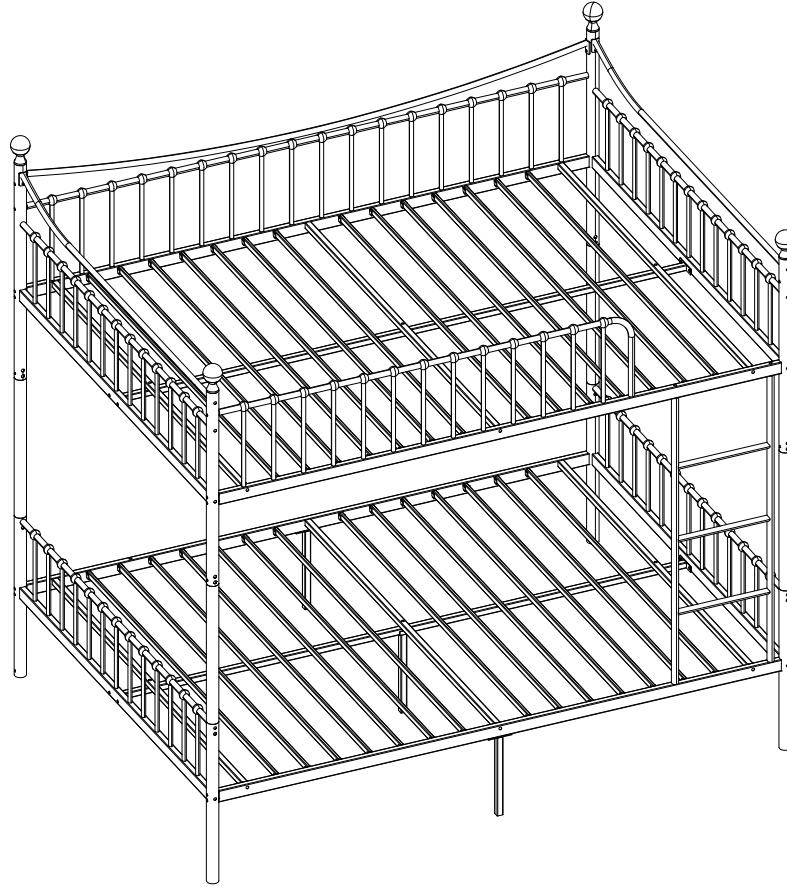
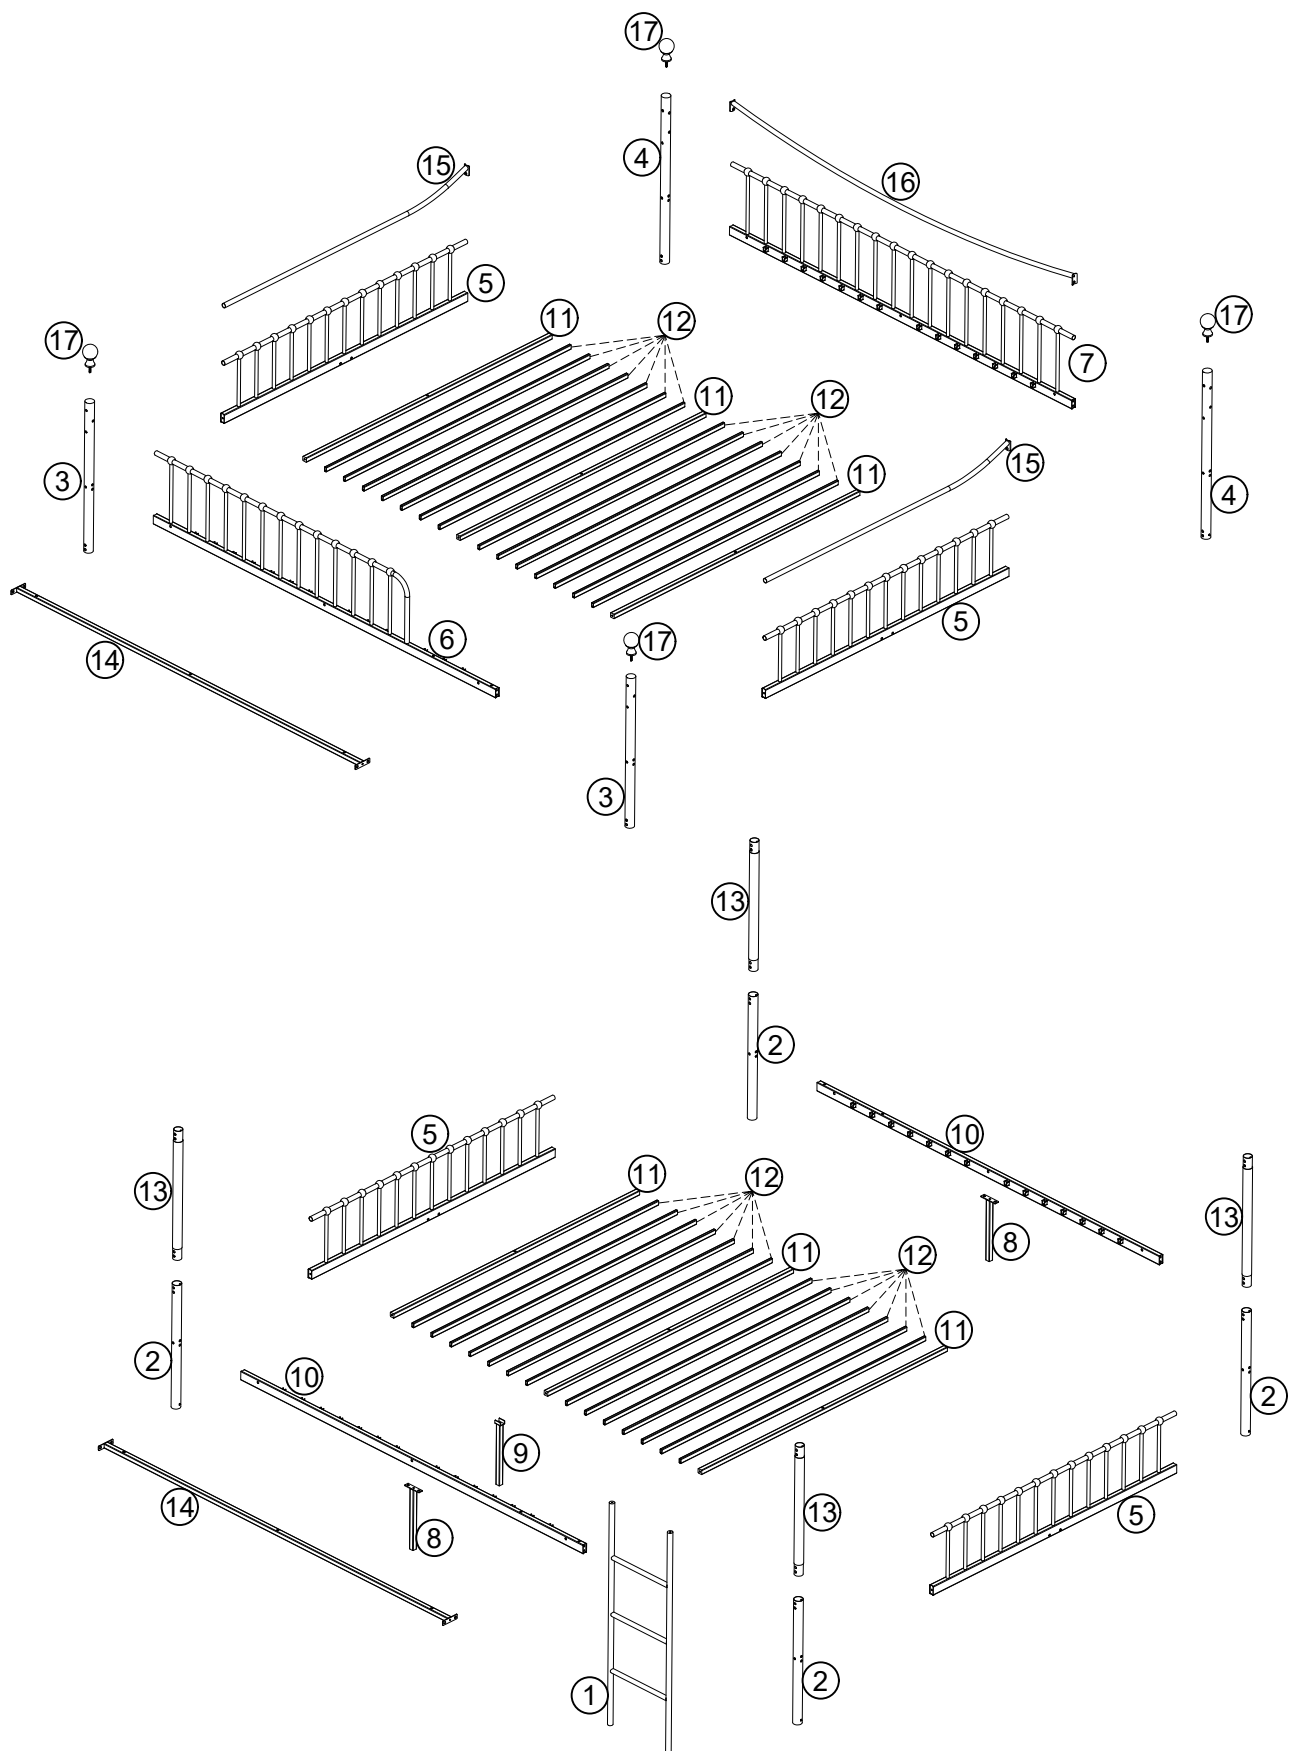
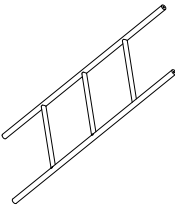
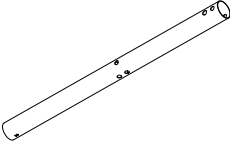
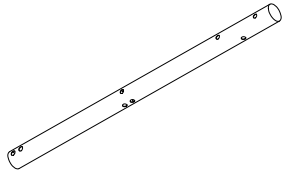
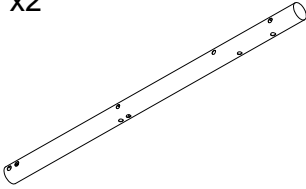
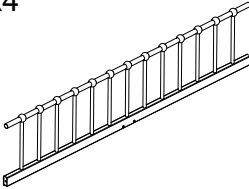
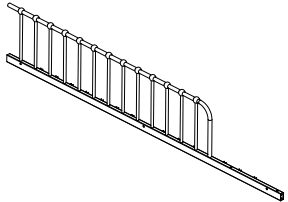
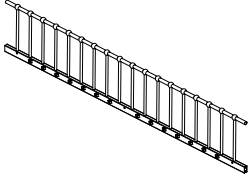

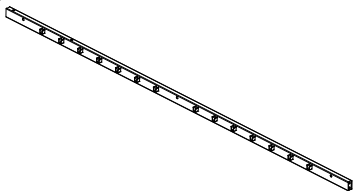
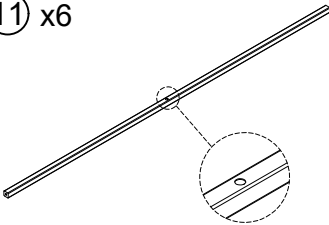
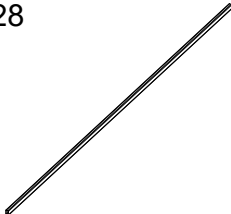
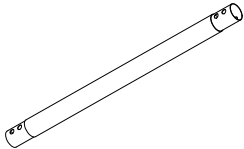
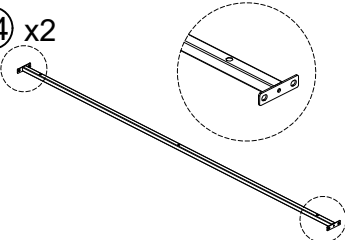


Assembly instruction A (Q / F)








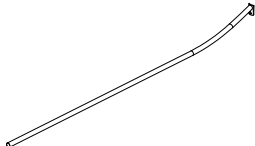


Assembly instruction A (Q / F)

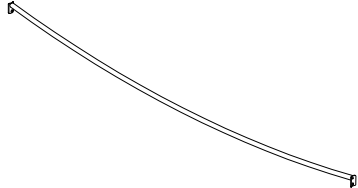


① x1 	② x4 	③ x2 
④ x2 	⑤ x4 	⑥ x1 
⑦ x1 	⑧ x4 	⑨ x2 
⑩ x2 	⑪ x6 	⑫ x28 
⑬ x4 	⑭ x2 	⑮ x2 
⑯ x1 	⑰ x4 	

Hardware List


A×24 (2+extra)  M8×60mm	B×19(1+extra)  M6×50mm	C×12(1+extra)  M6×40mm
D×21 (2+extra)  M6×35mm	E×16 (1+extra)  M6×15mm	F×24 (2+extra)  M6×10mm
G×25 (2+extra)  M6×15mm	H×2  M4	I×2 
J×2  M8×40mm	K×2  M5×40mm	

1

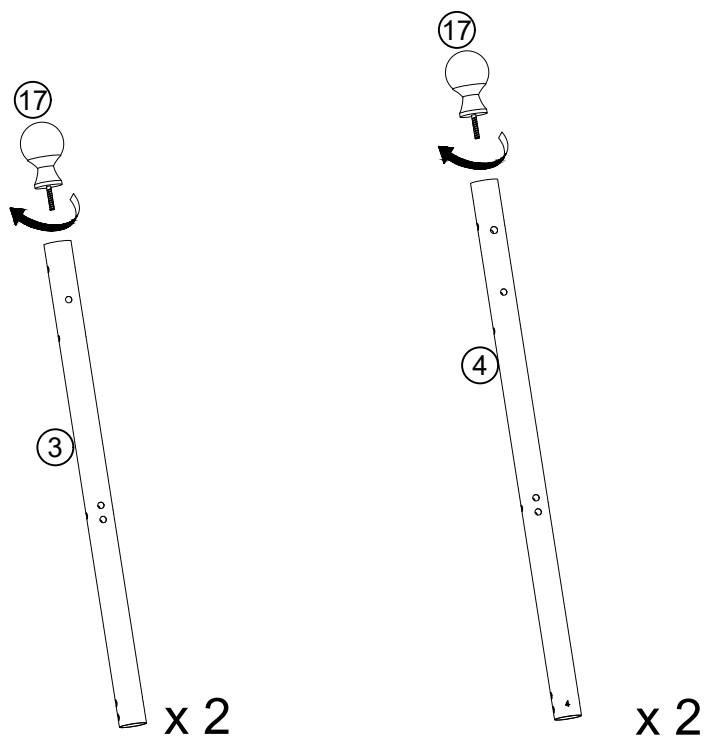


2


Step 1

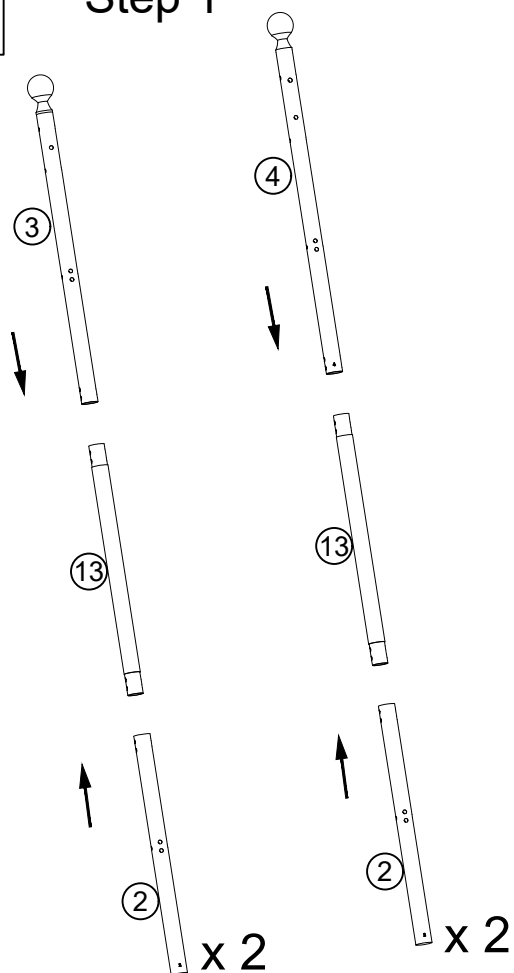

Step 2

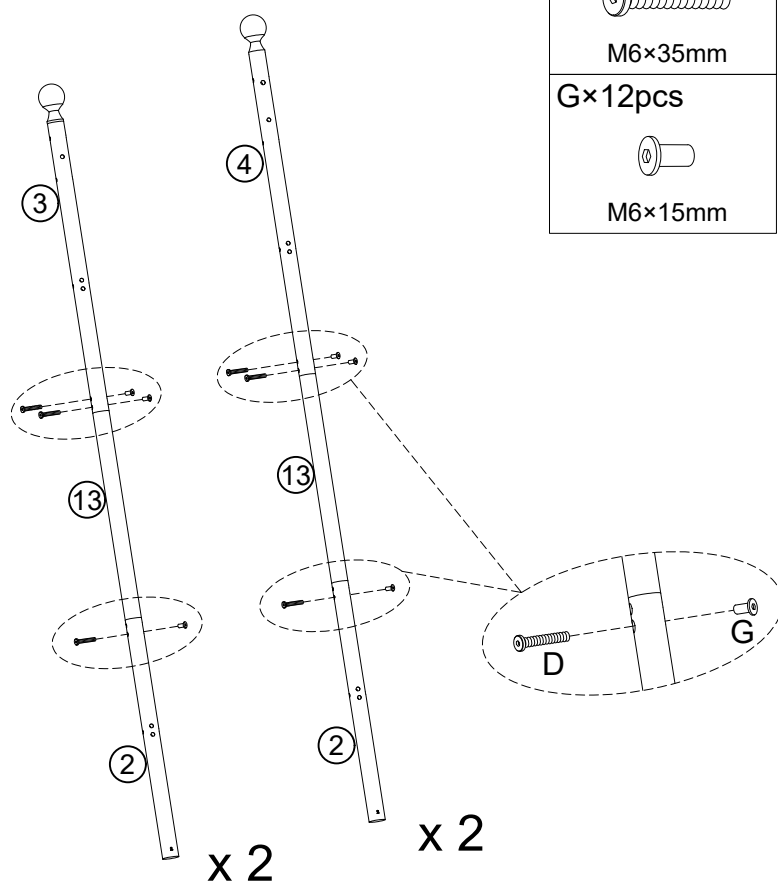

D×12pcs




M6×35mm

G×12pcs



M6×15mm

3

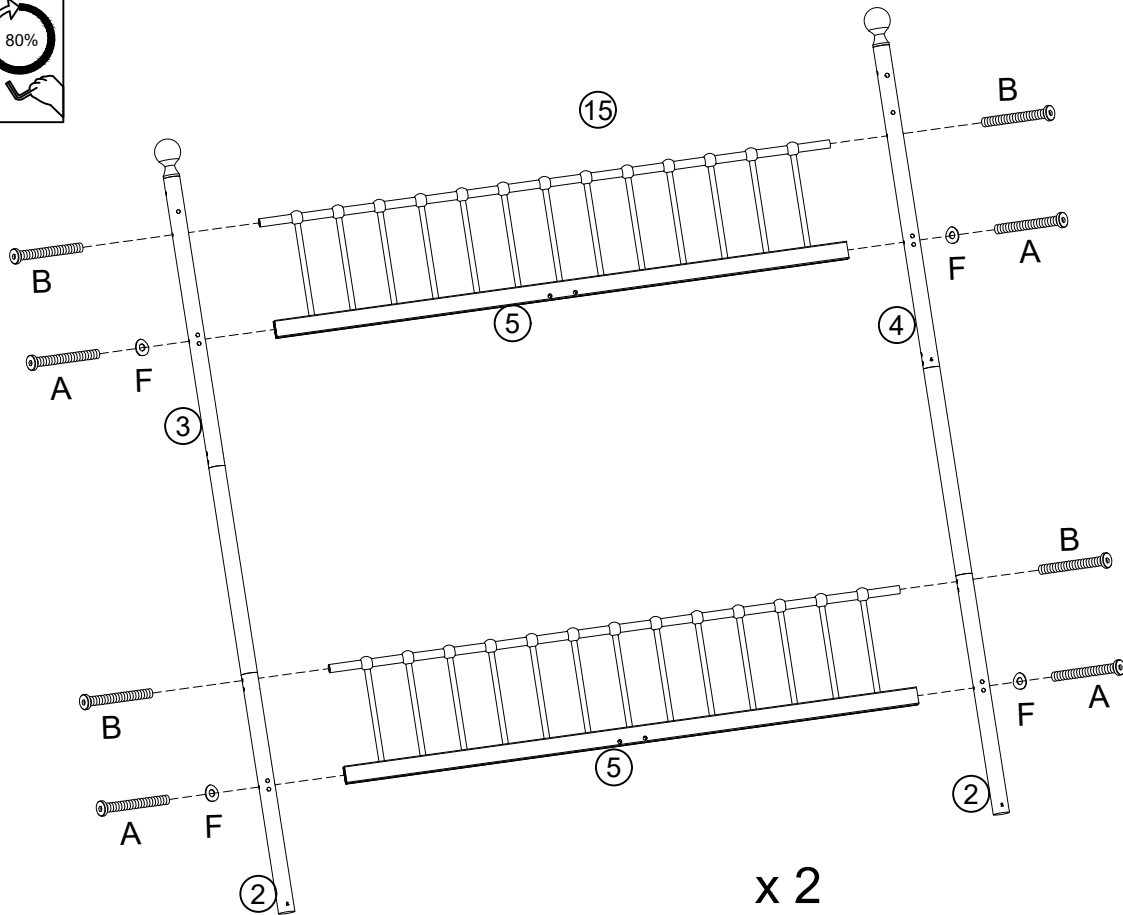


A×8pcs



M8×60mm

B×8pcs




M6×50mm

F×8pcs




Ø18*Ø8.5*1.5T

B×2pcs



M6×50mm

D×2pcs




M6×35mm

G×2pcs



M6×15mm

4

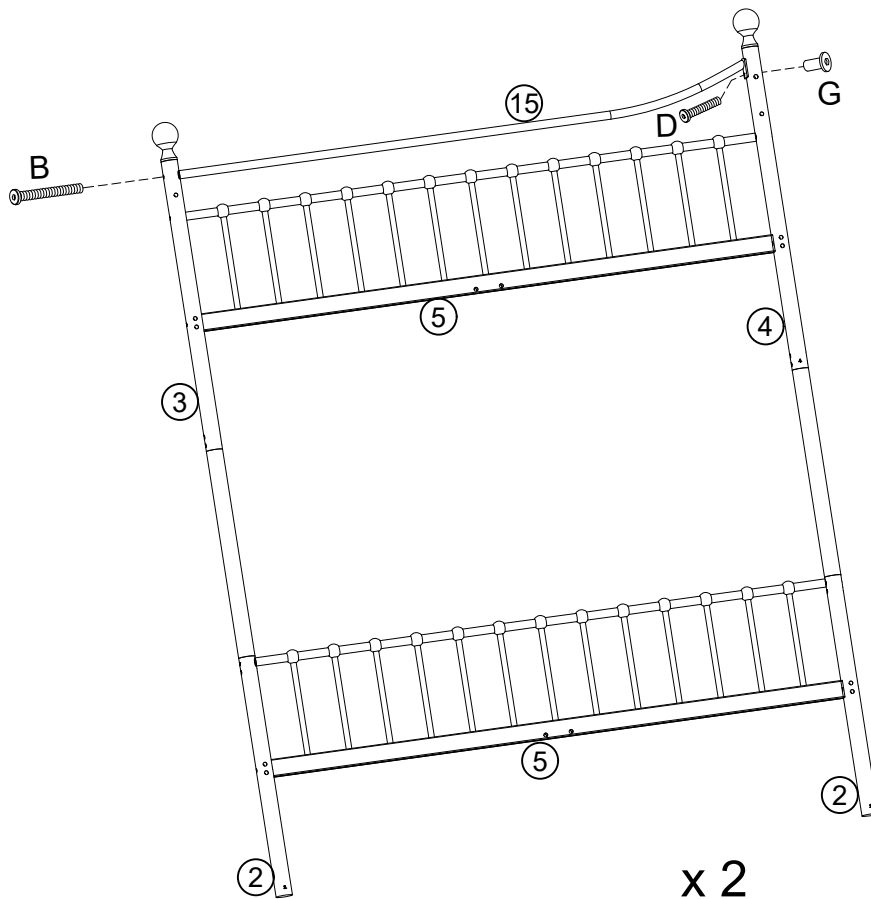


5



E×4pcs




M6×15mm

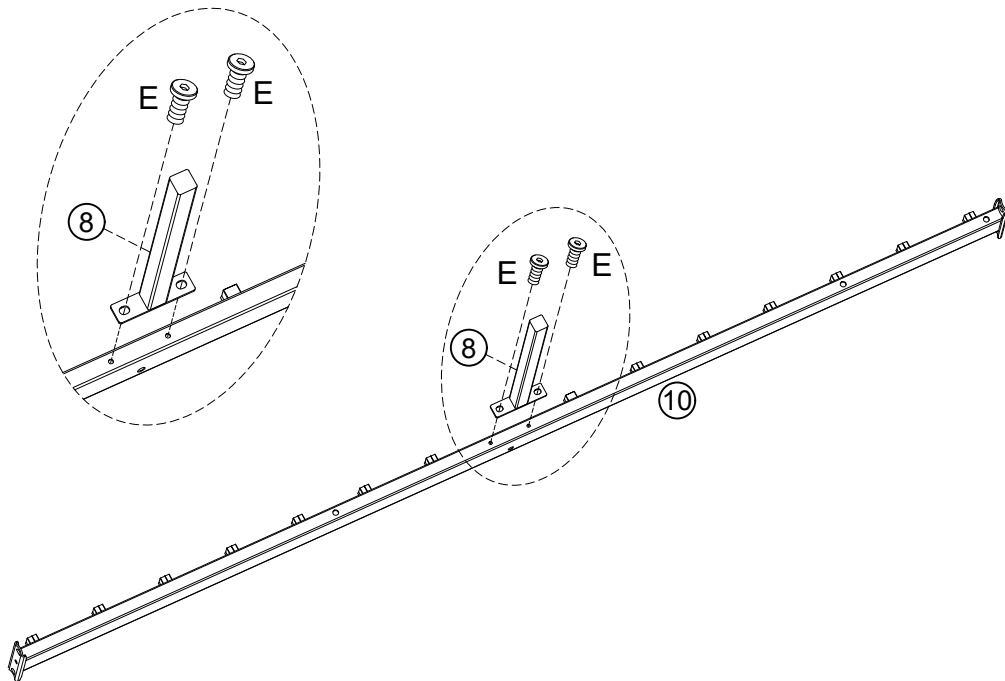


x 2

6



A×8pcs



M8×60mm

B×2pcs





M6×50mm

F×8pcs




Ø18*Ø8.5*1.5T

I×2pcs

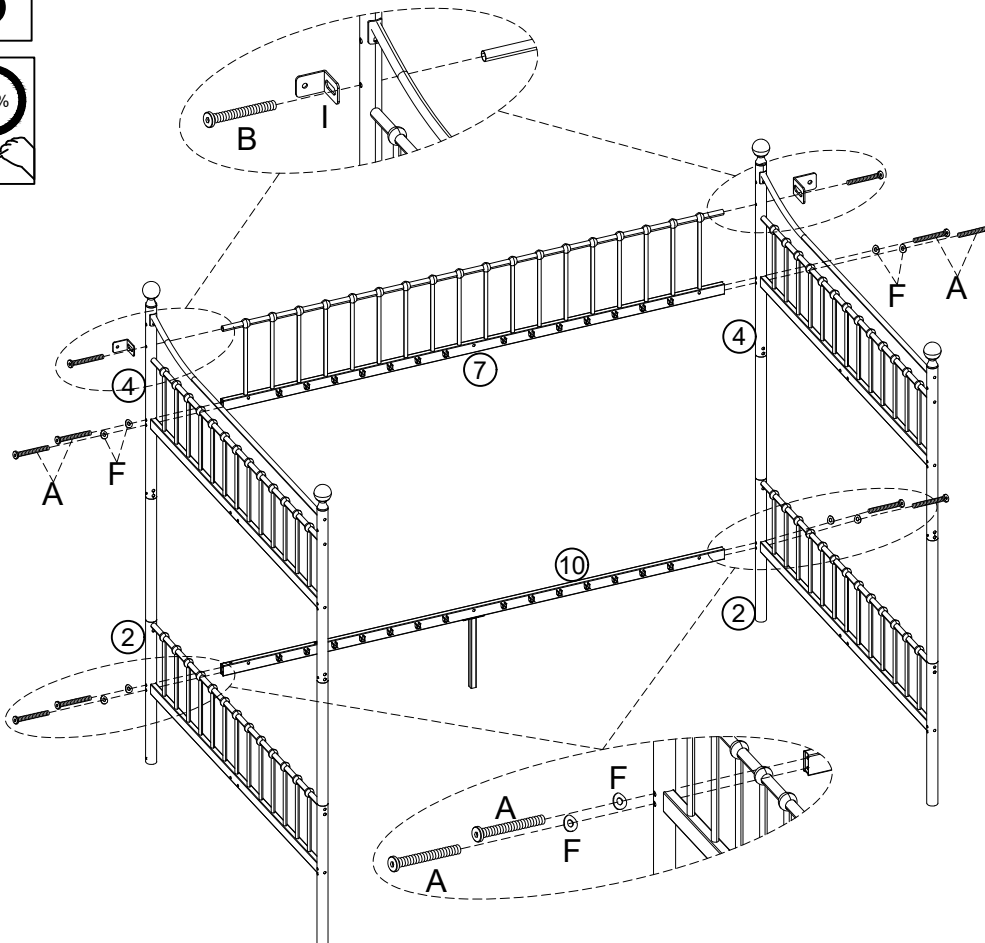

7

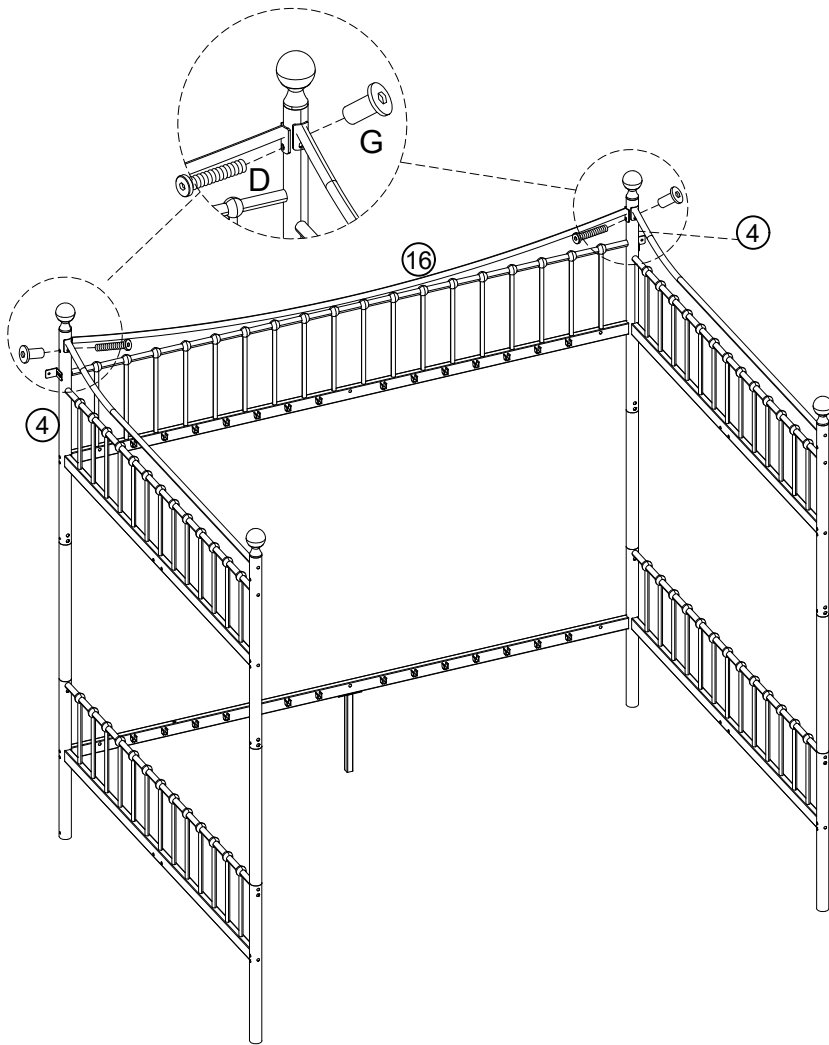

D×2pcs





M6×35mm

G×2pcs



M6×15mm

8

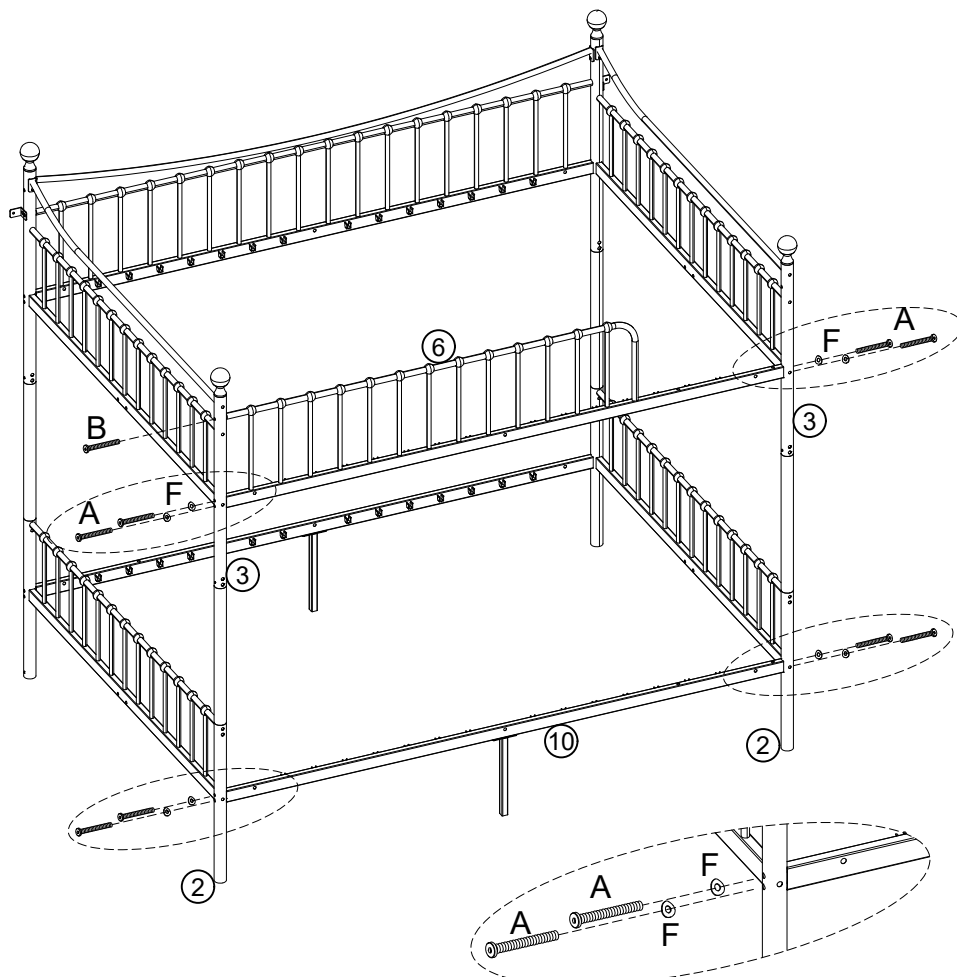

A×8pcs



M8×60mm

B×1pc




M6×50mm

F×8pcs




Ø18*Ø8.5*1.5T


9




C×12pcs



M6×40mm

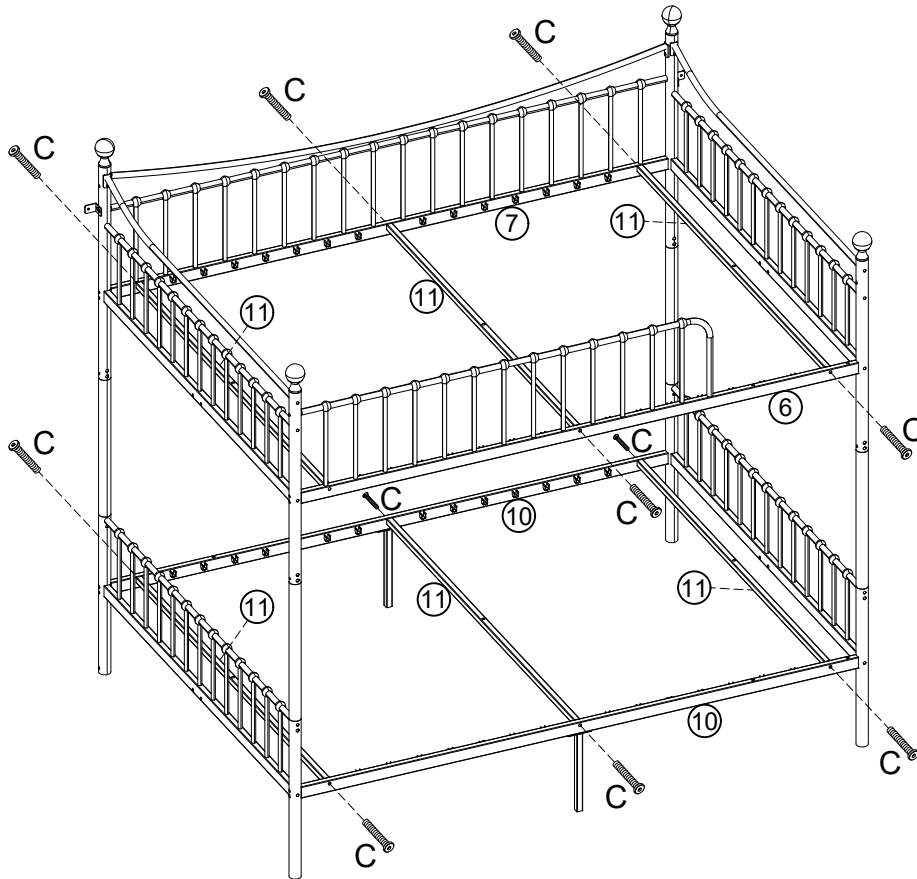

10



E×8pcs




M6×15mm


G×8pcs



M6×15mm

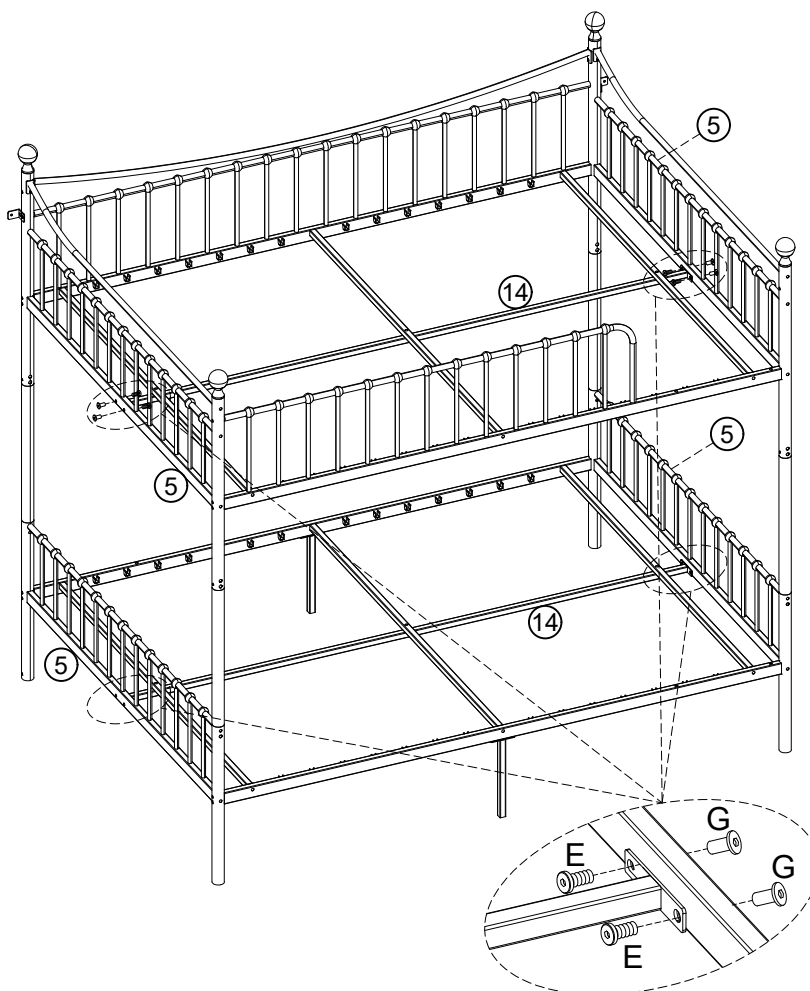

11

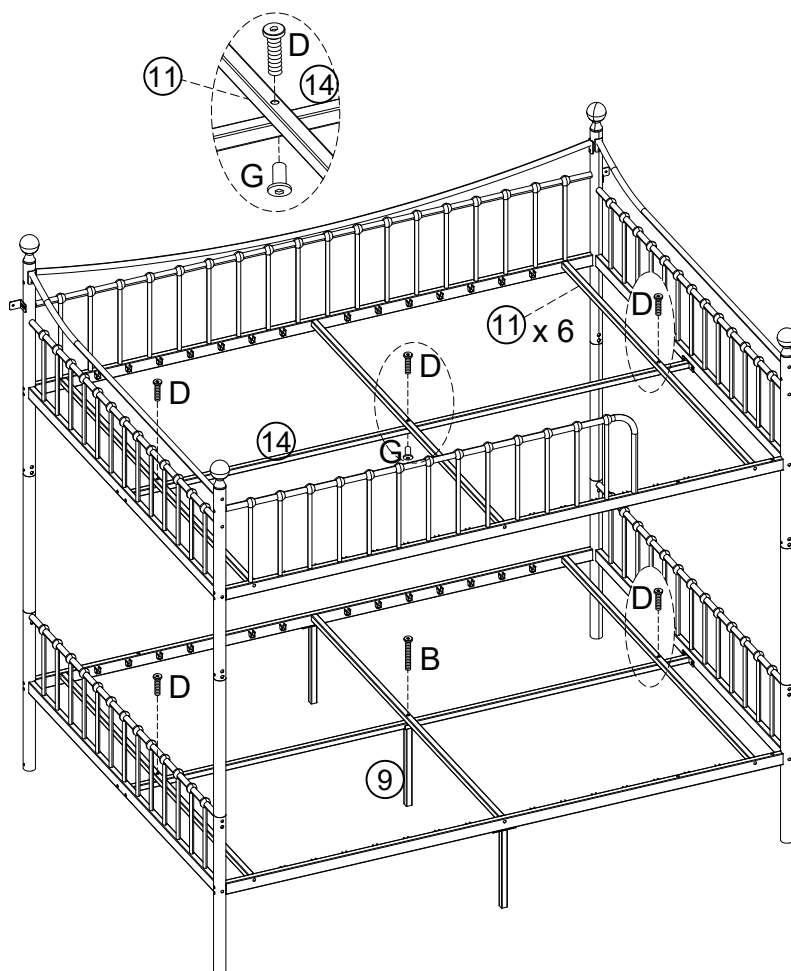


B×1pc



M6×50mm

D×5pcs





M6×35mm

G×1pc



M6×15mm


12

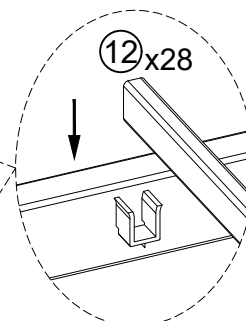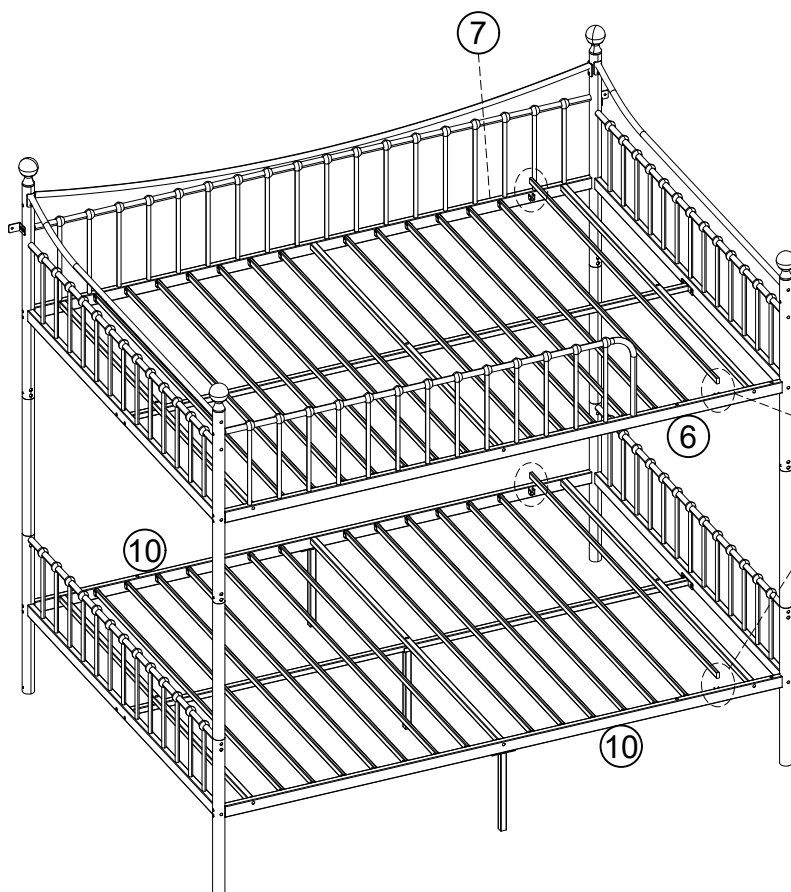


13





B×4pcs



M6×50mm

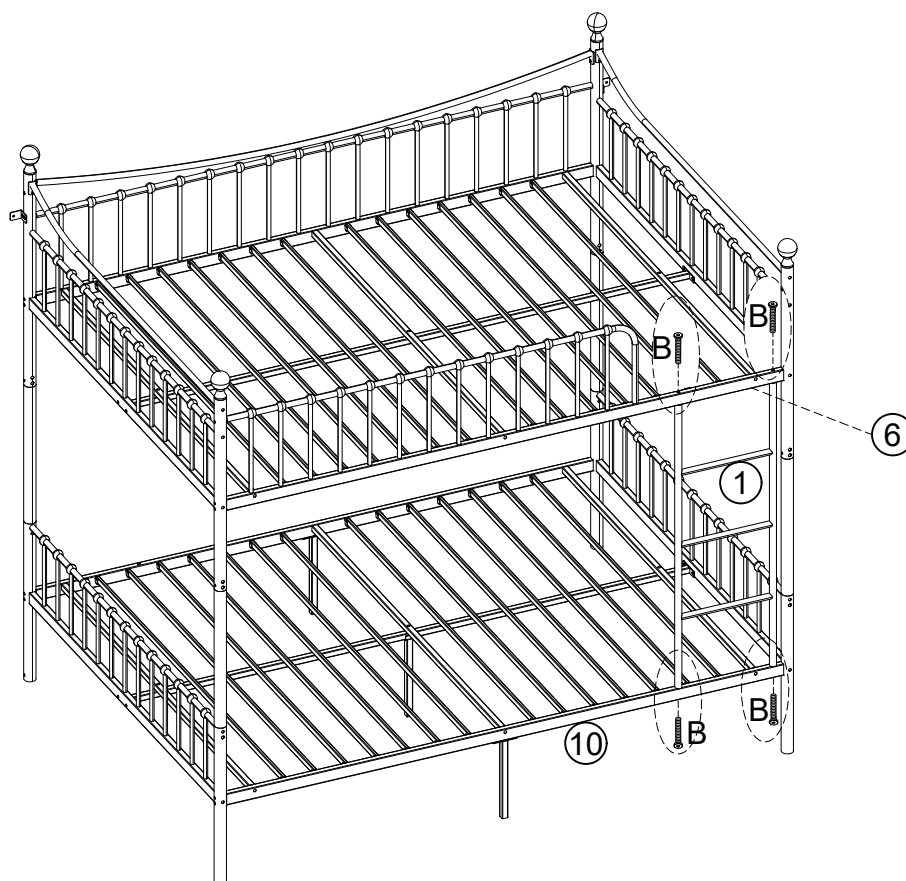

14

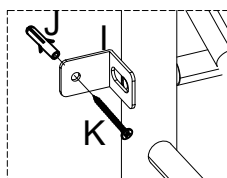

J×2pcs




M8×40mm

K×2pcs



M5×40mm

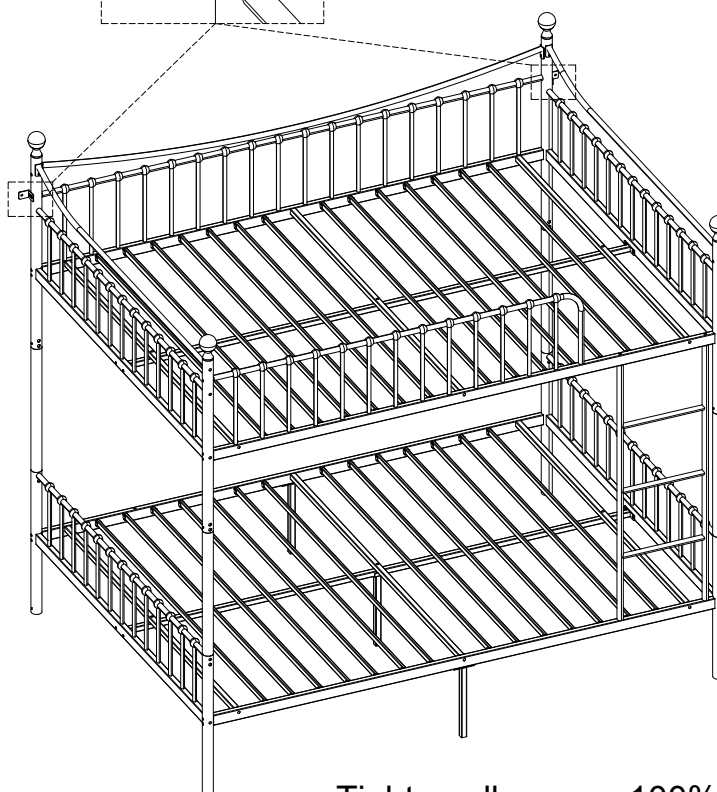

Tighten all screws 100%