





ASSEMBLY INSTRUCTION

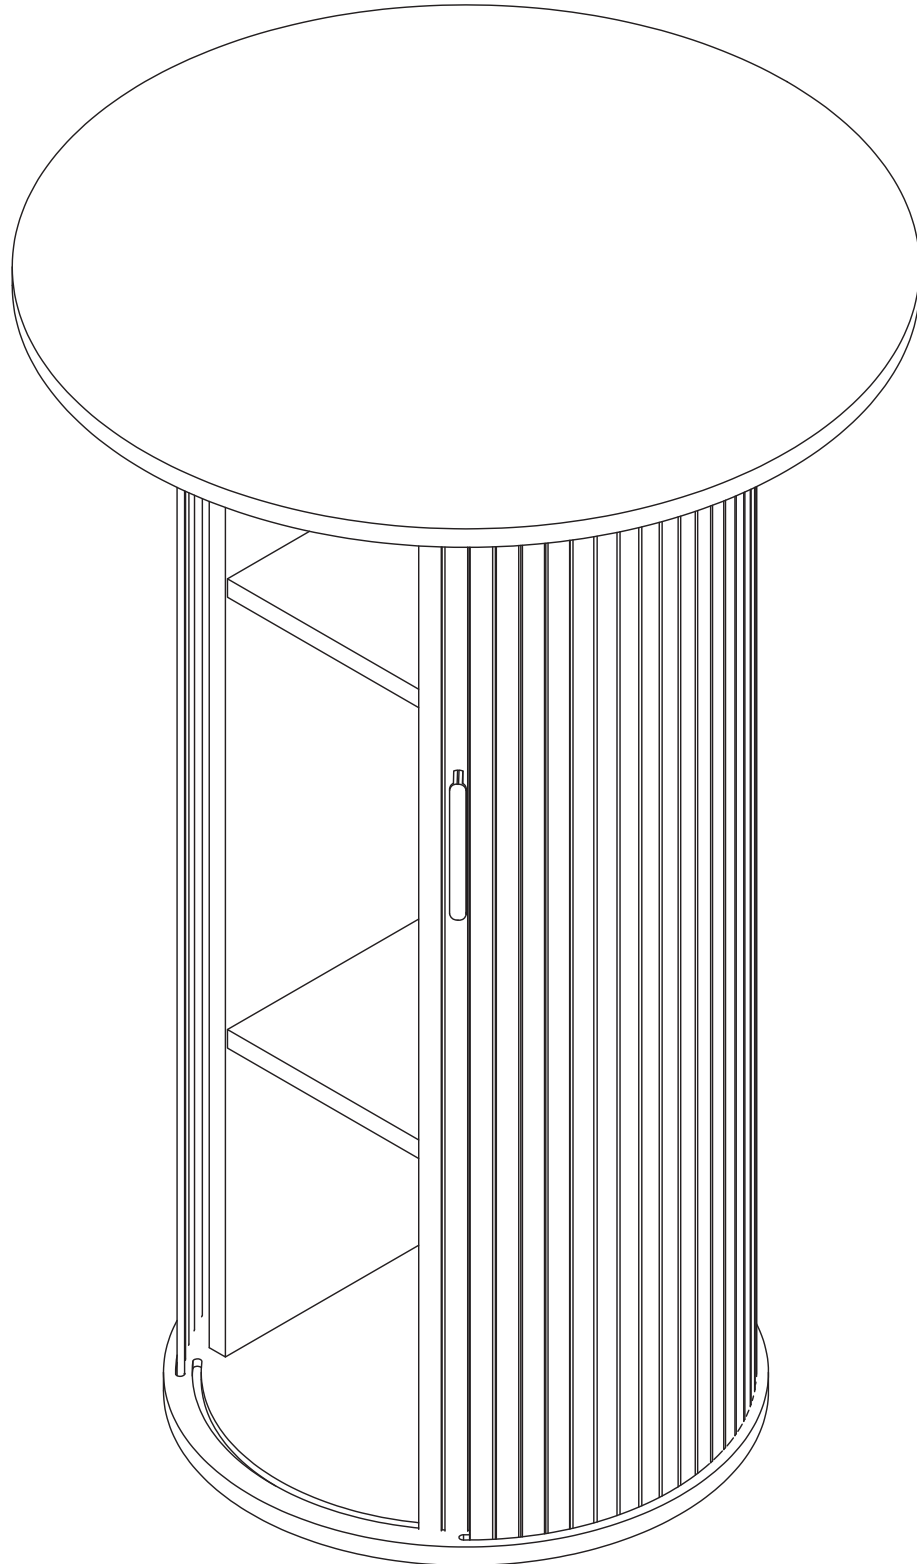

If you need any help during assembly, please contact us
Sharing a video and a brief description of where you're stuck will help us assist you better.

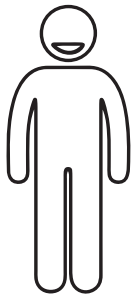

× 2

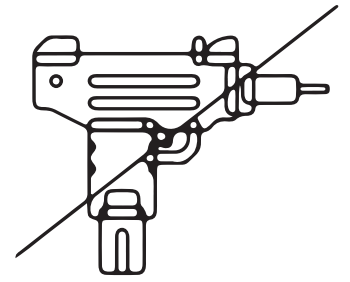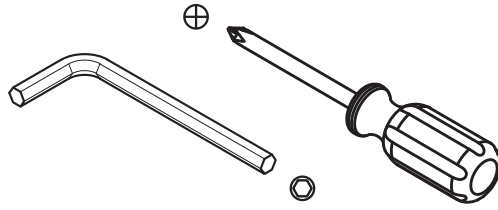

Before You Begin

Two people are recommended for the assembly.

Use the included tools.

If using a power tool, use low power and torque.



Installation of Eccentric Unit




Bolt




Connecting piece

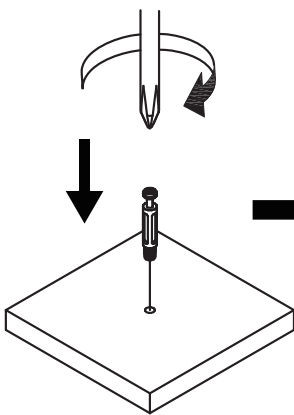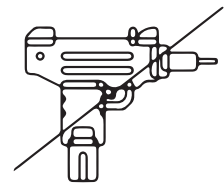


1

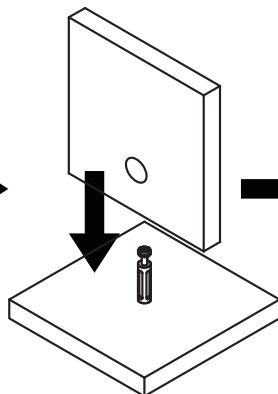




2

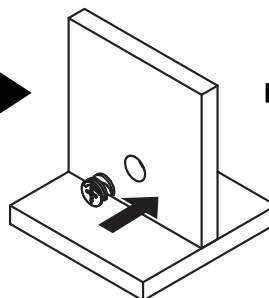


3

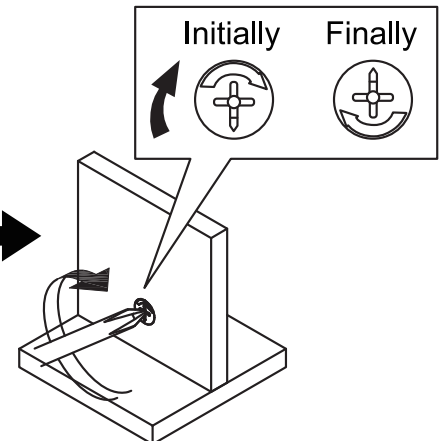






4

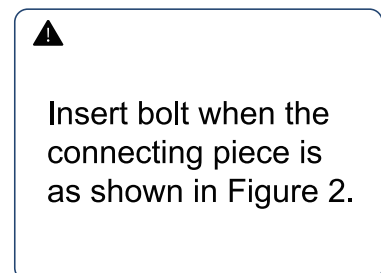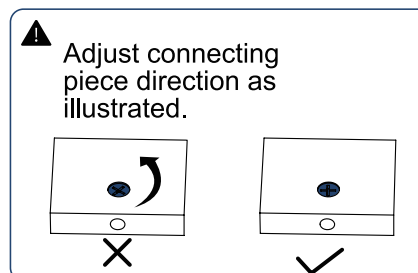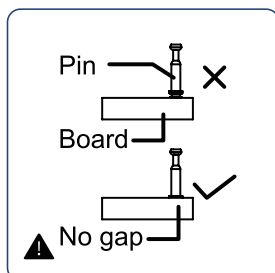

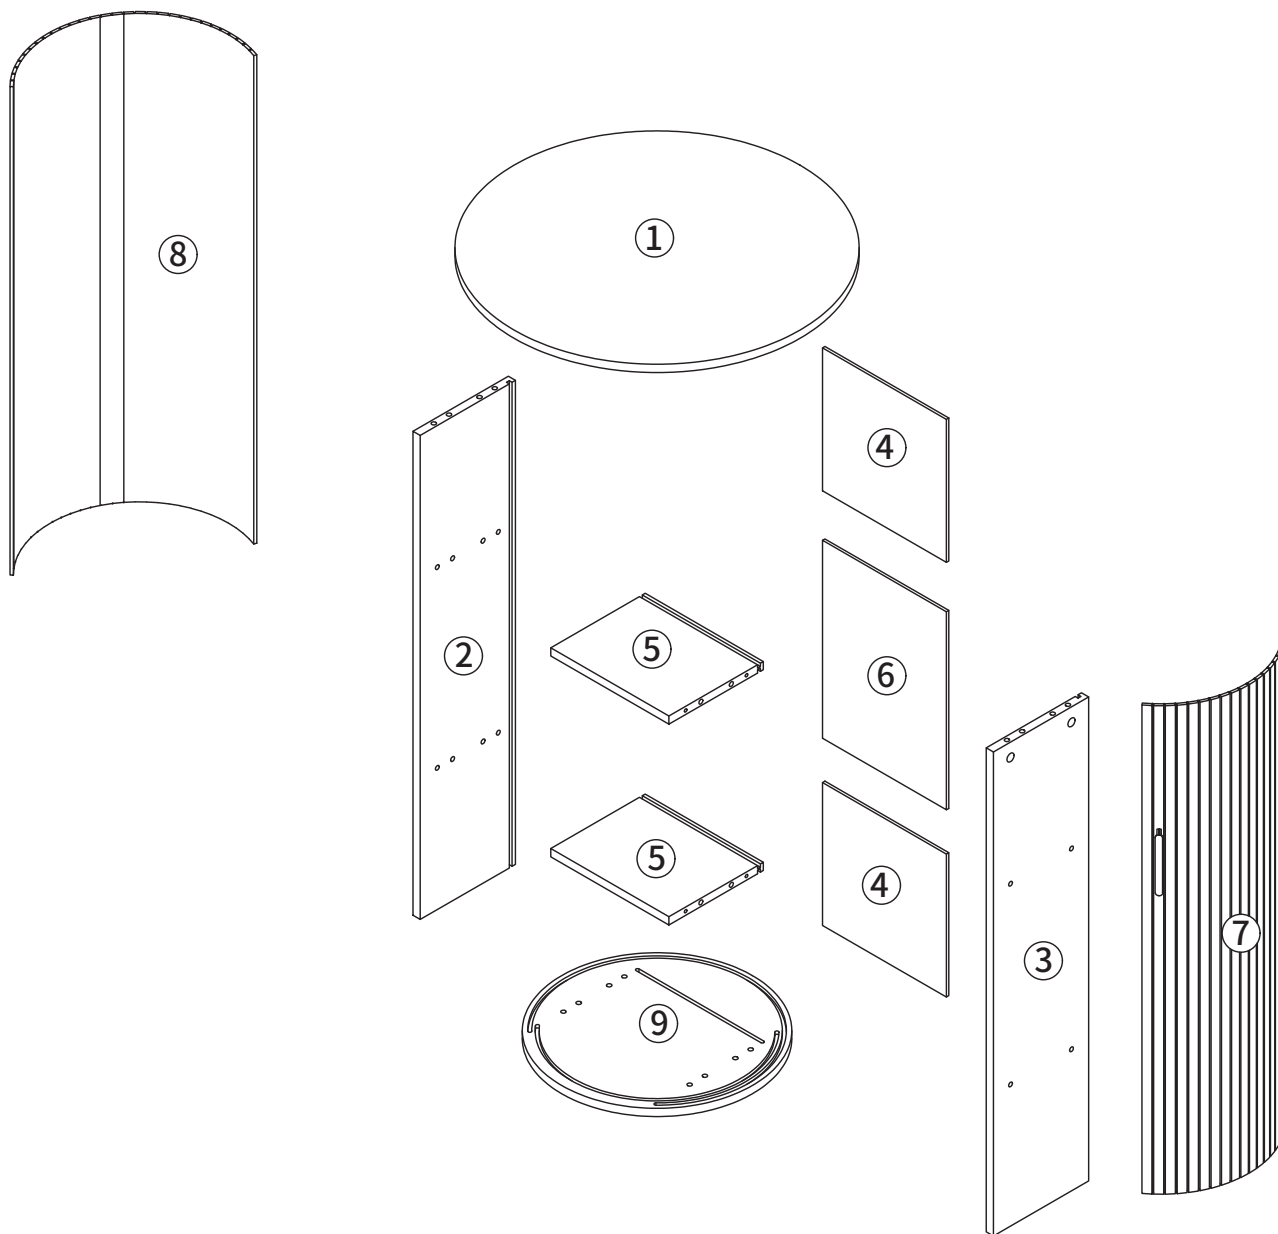


Package Contents: Hardware


Please count and verify all parts before assembly.

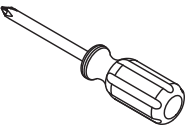A x 4+1	B x 4+1	C x 16+1	D x 4+1	E x 12+1	F x 1	G x 2+1
 Ø15 x 9.5mm	 Ø6.5 x 35mm	 Ø8 x 30mm	 Ø21	 Ø6.3 x 50mm	 115*11*17 mm	 M4 x9mm
H x 6+1	I x 4+1	J x 1	K x 1			
 M3 x 14mm	 Ø40 x 5mm	 4 x 65mm				

1

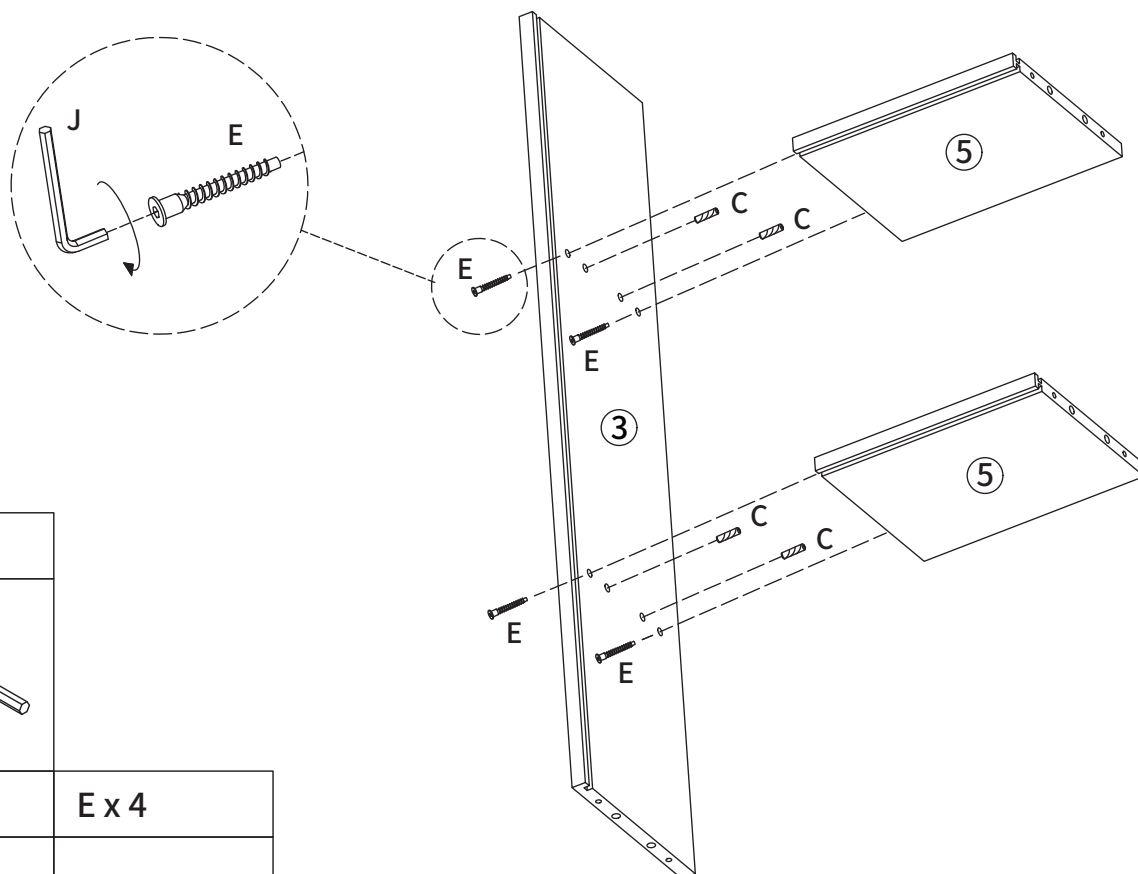

J x 1



C x 4




E x 4



Insert Dowels (C) into the holes in Board (3),
then connect Board (3) to the two Boards (5).
Twist Screws (E) to secure the connection between Board (3) (5).

2

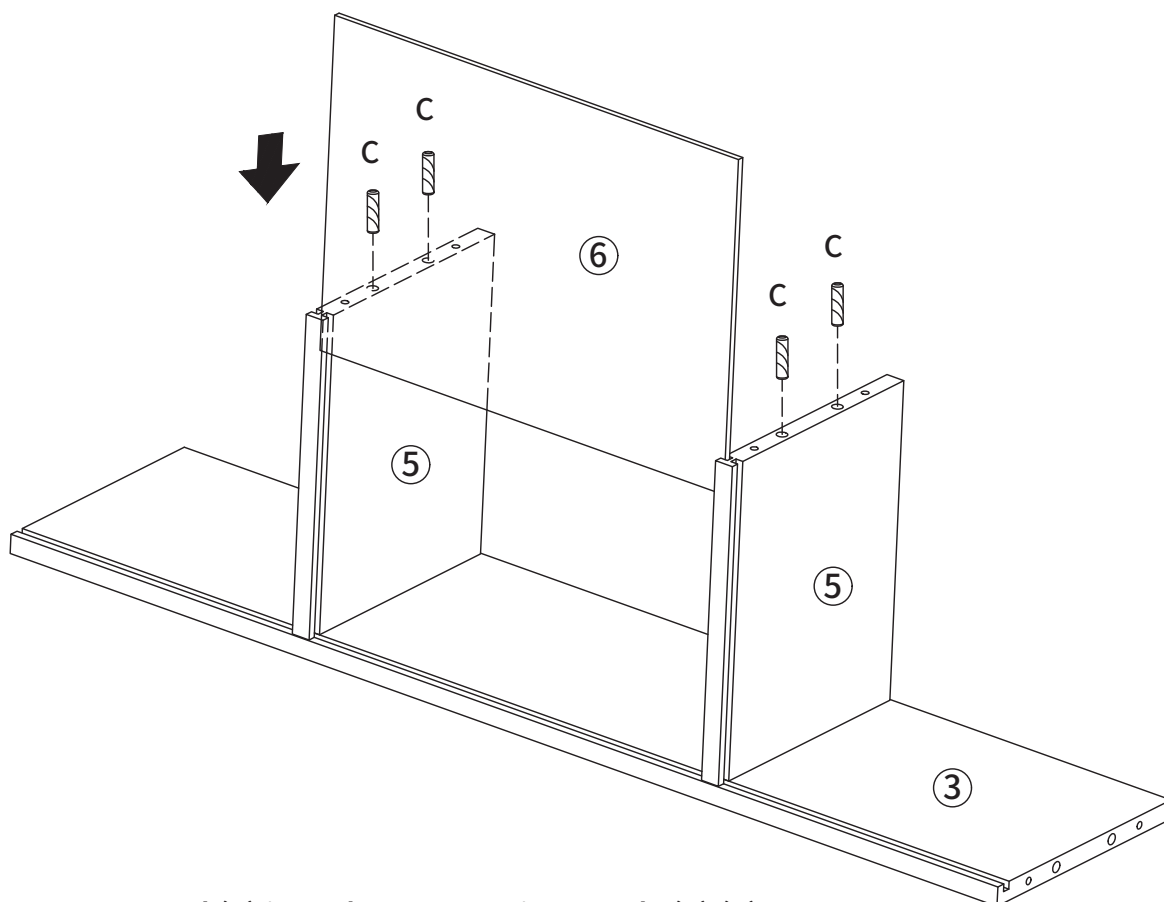


C x 4




Insert Board (6) into the grooves in Boards (3) (5).
Insert Dowels (C) into the holes in the two Boards (5).

3

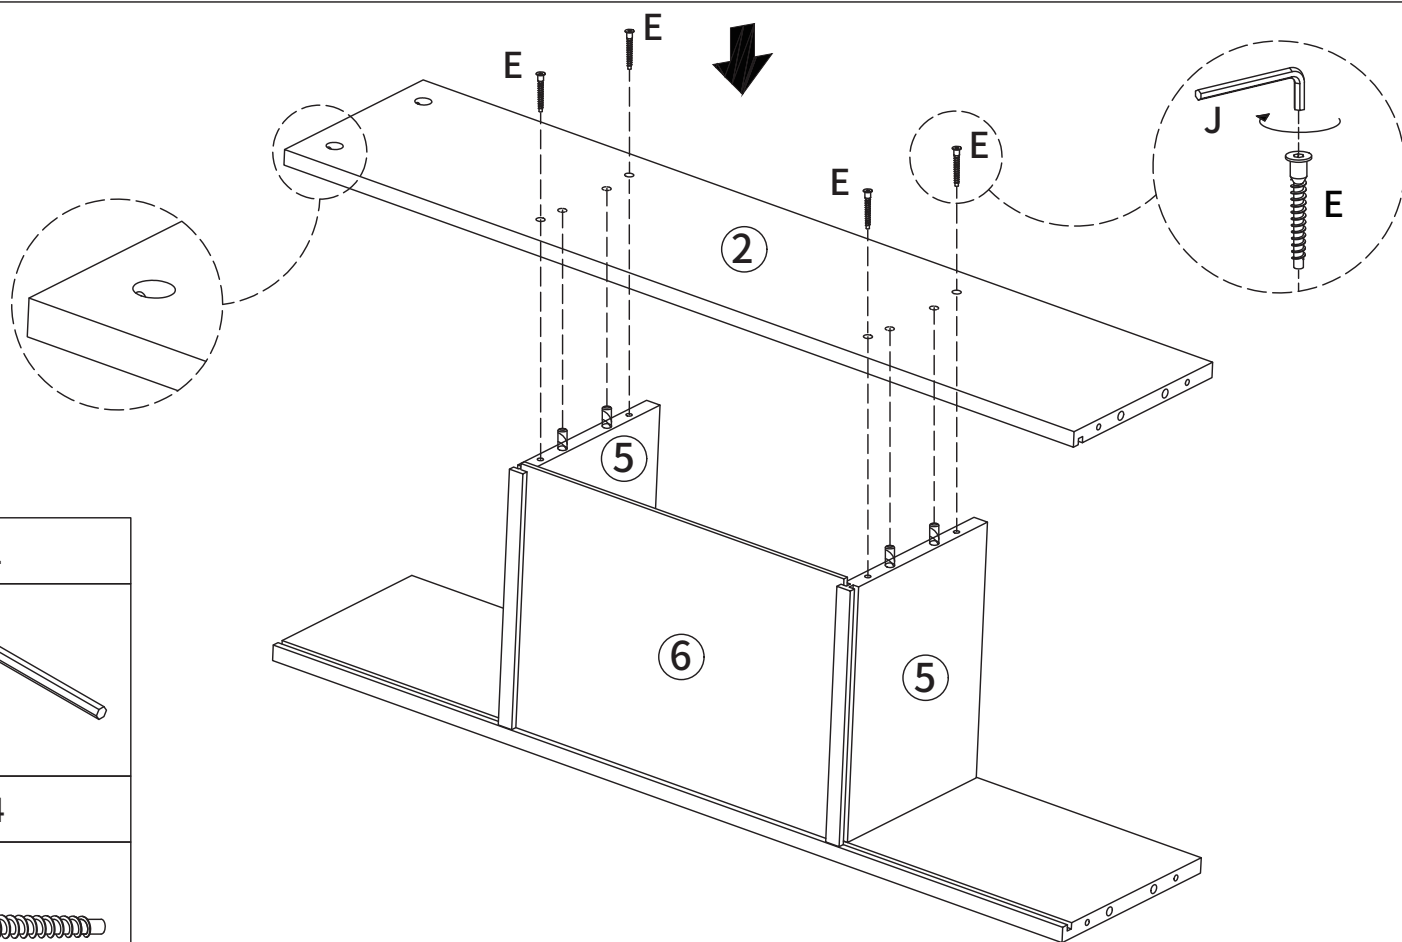

J x 1




E x 4




Connect Board (2) to the two Boards (5), then secure with Screws (E).

4

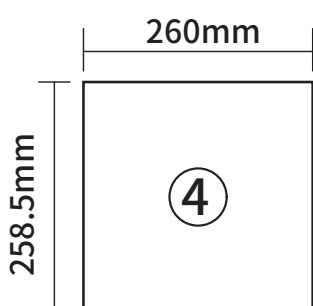

Note: Insert the longer edge of Board (4) into the groove of Board (5), and the shorter edge into the grooves of Boards (2) and (3).

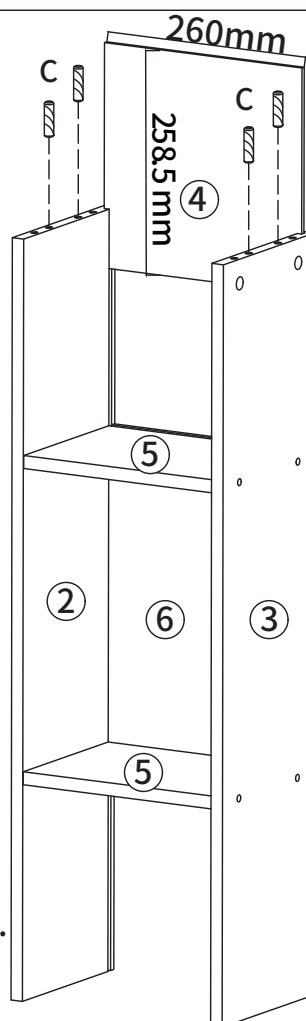


C x 4




Insert Board (4) into the grooves in Boards (2) (3) (5). Insert Dowels (C) into the holes in Boards (2) (3).

5

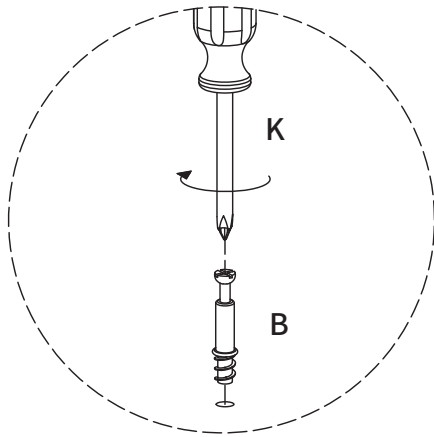


Make sure to screw the bolt in vertically.

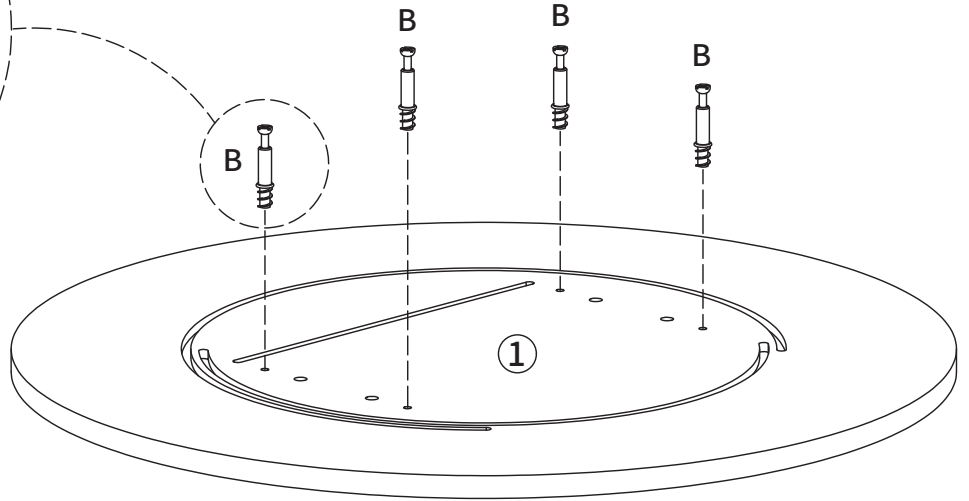

B x 4	K x 1

Twist Bolts (B) into Board (1).


6

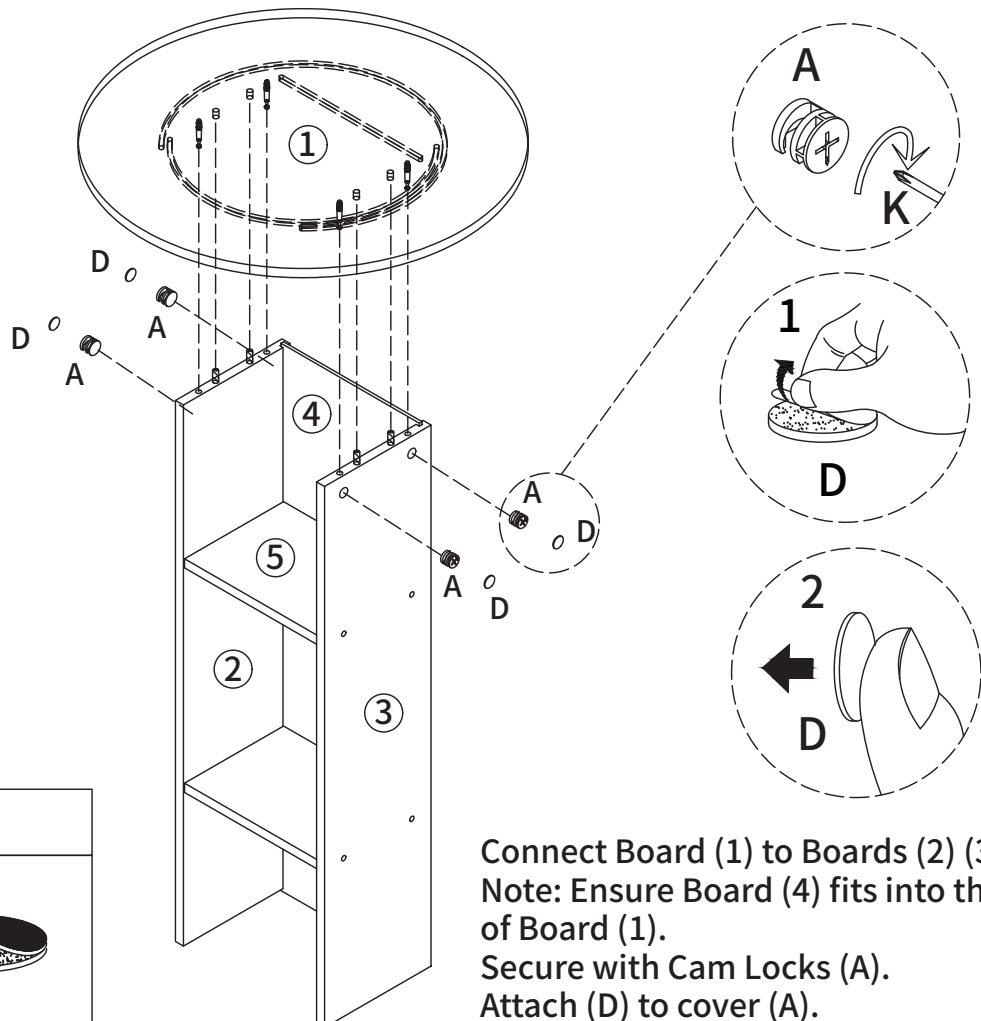


K x 1	
A x 4	D x 4

Connect Board (1) to Boards (2) (3) (4).
Note: Ensure Board (4) fits into the grooves of Board (1).
Secure with Cam Locks (A).
Attach (D) to cover (A).

7

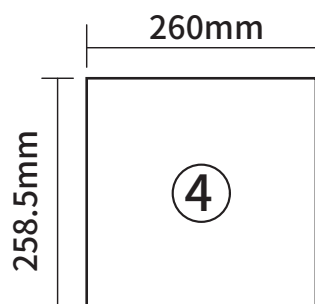

Note: Insert the longer edge of Board (4) into the groove of Board (5), and the shorter edge into the grooves of Boards (2) and (3).

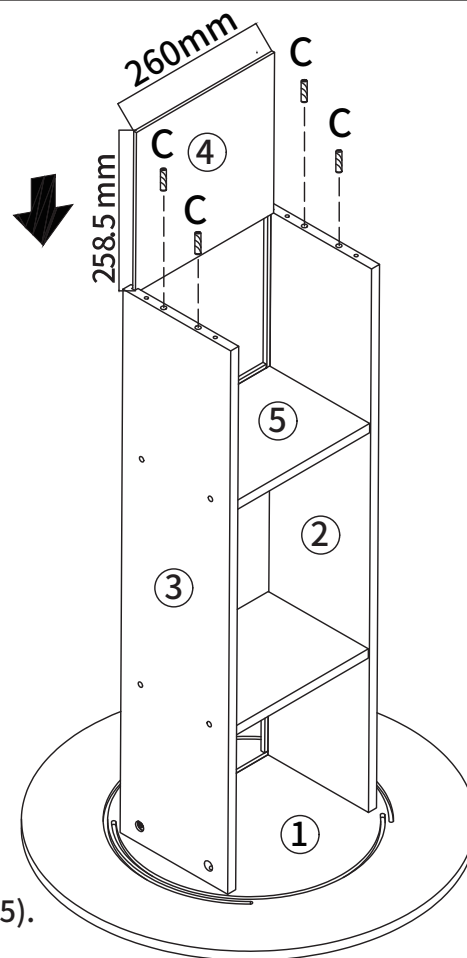





C x 4




Flip the unit over.

Insert Board (4) into the grooves in Boards (2) (3) (5).
Insert Dowels (C) into the holes in Boards (2) (3).

8

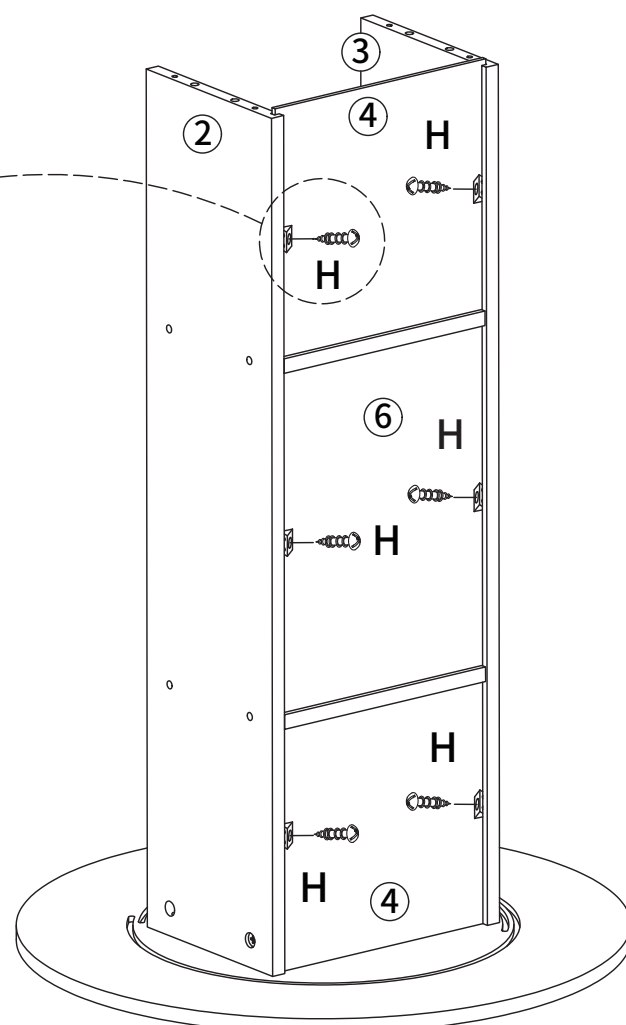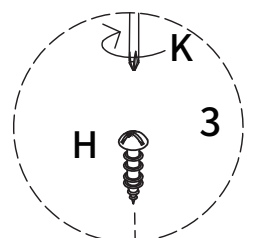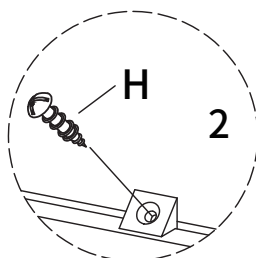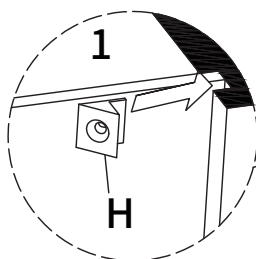

K x 1




H x 6




Insert Fastener (H) into the back of the cabinet, then twist its screws to secure.


9

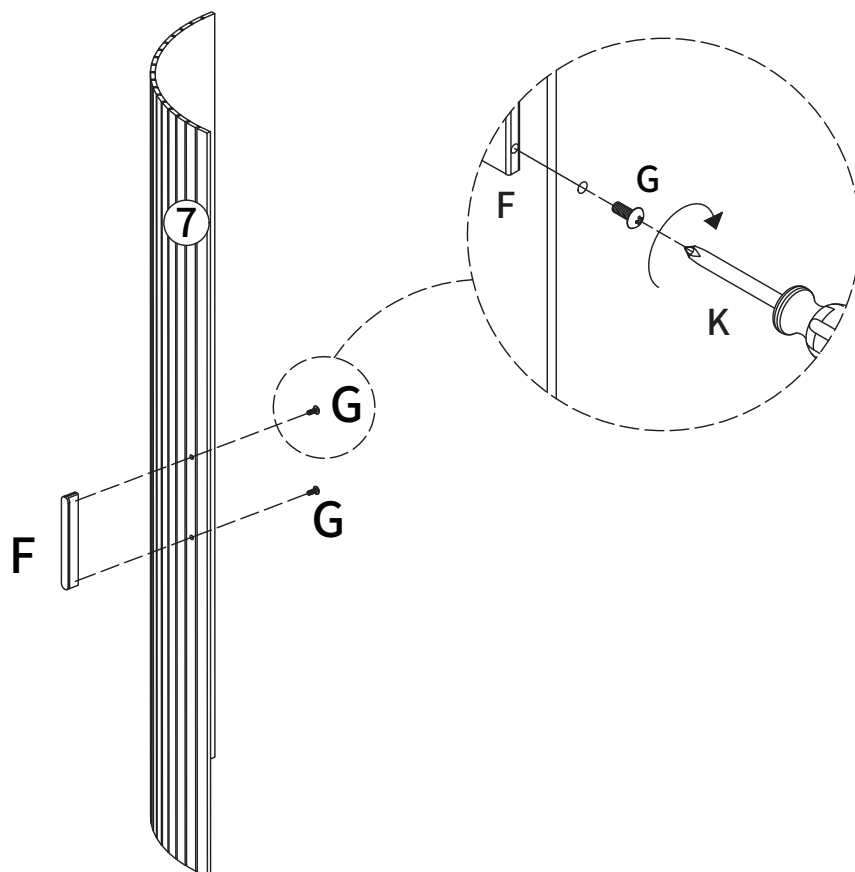


k x 1

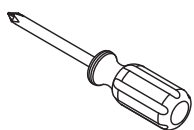

F x 1





G x 2




Twist Screws (G) to connect Handle (F) to Board (7).

10

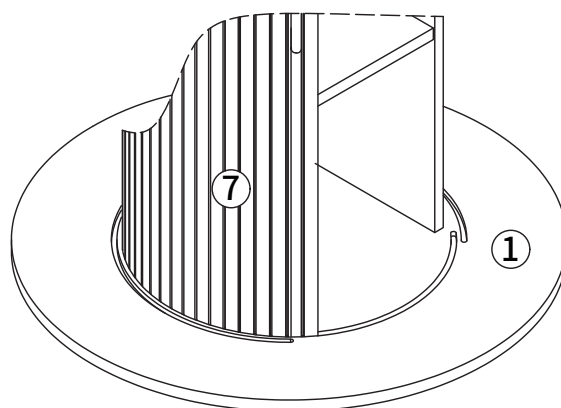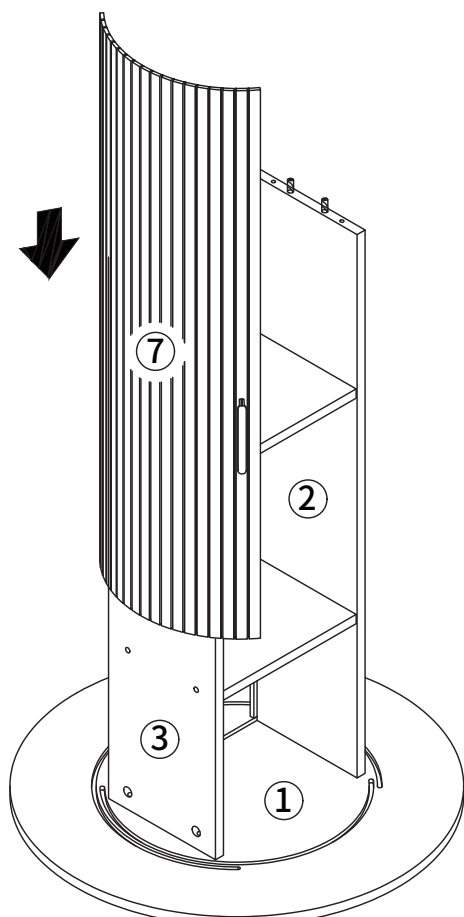


Insert Board (7) into the inner groove of Board (1).
Ensuring Board (7) is fully inserted into the groove.

11

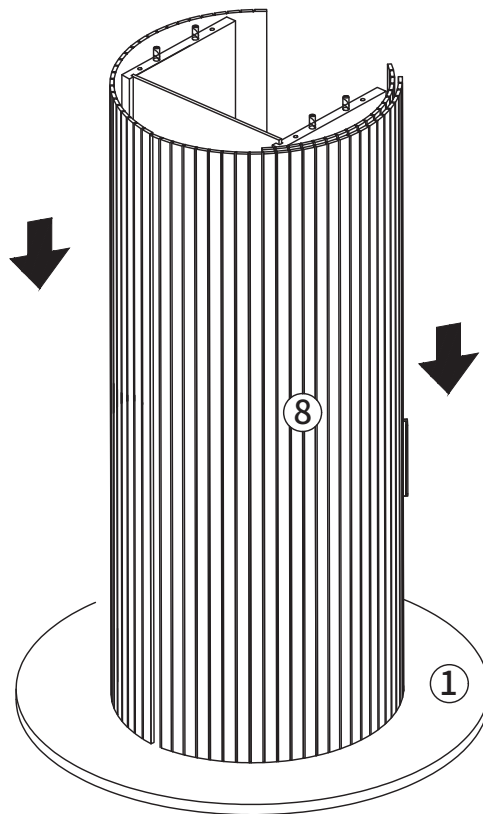


Insert Board (8) into the outer groove of Board (1).
Ensuring Board (8) is fully inserted into the groove.

12

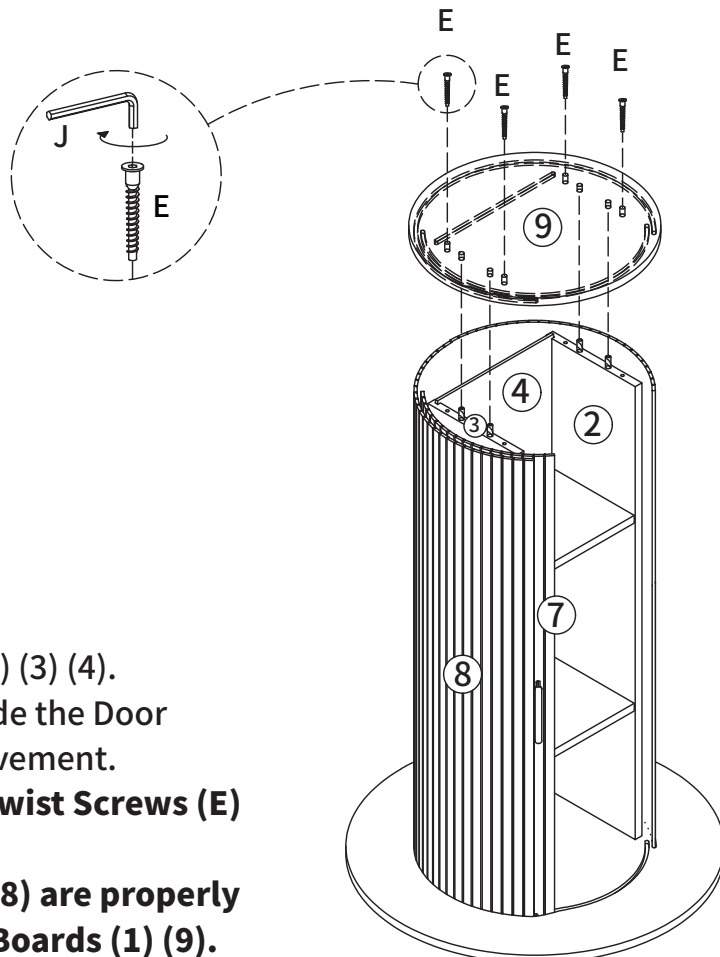

J x 1




E x 4



Connect Board (9) to Boards (2) (3) (4).
Before securing Screws (E), slide the Door
Board (7) to check smooth movement.
**If the door slides smoothly, twist Screws (E)
to secure Board (9).**
**If not, make sure Boards (7) (8) are properly
inserted into the grooves of Boards (1) (9).**

13

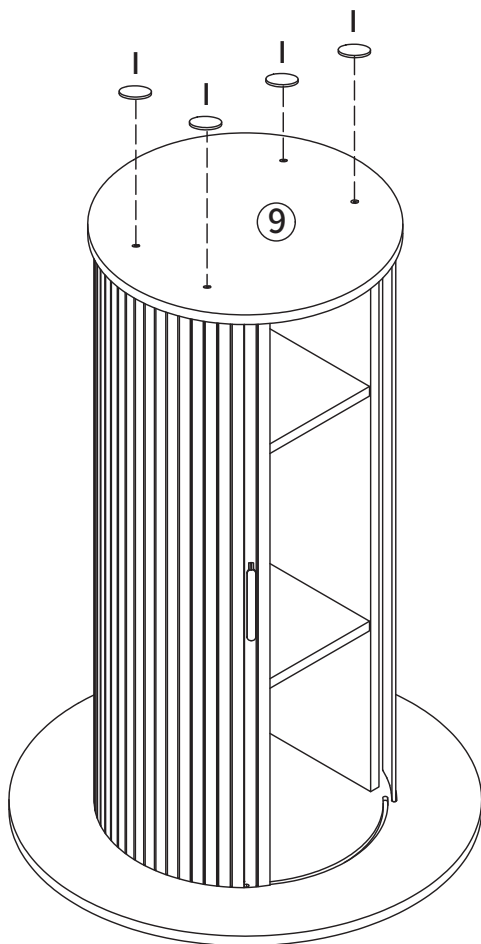


1 x 4



Attach the non-slip pad (I) to Board (9) to prevent slipping and keep the table stable.

14

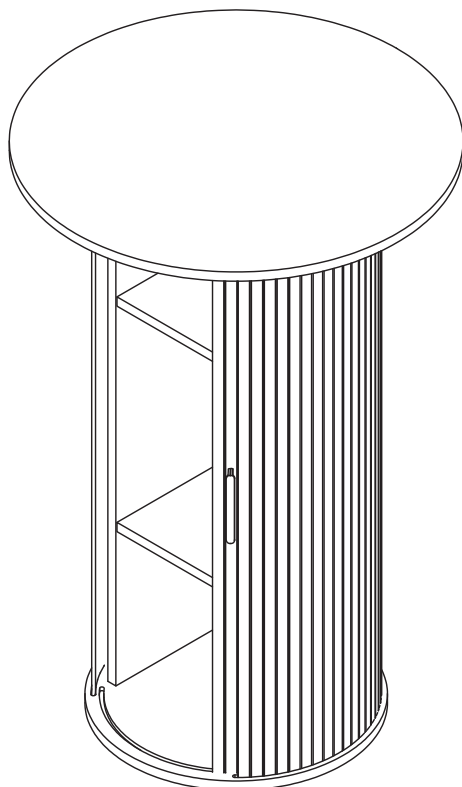

Assembly complete!