

B2118-110 JAMESTOWN 6"6"/6"0" K HEADBOARD

B2118-128 JAMESTOWN 6"6"/6"0" K STORAGE FOOTBOARD & SLATS

B2118-338 JAMESTOWN 5"0"/6"6" Q/EK STG BED RAILS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.

Caution: Please read the instructions thoroughly before assembly.

- 1. We recommend that you assemble this product with the assistance of another person: this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- 2. Please do not over tighten screws or bolts until the assembly is completed.
- 3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently


#### **PARTS LIST**

NO:	COMPONENT	SKETCH	Q'TY
Α	Headboard		1PC
В	Footboard		1PC
С	Side Rail		2PCS
D	Headboard Crossbar		1PC
E	HB Left side facing (LSF) Leg		1PC
F	HB Right side facing (RSF) Leg		1PC
G	Roll out slats		1SET
Н	Support Legs		8PCS

#### HARDWARE LIST

NO:	COMPONENT	SKETCH	Q'TY
1	Bolt 5/16" x 1-3/4"	(a) Daniman (a) Daniman (b) Da	8pcs
2	Bolt 5/16" x 3-1/2"	COMMISSION	8pcs
3	Flat Washer 5/16"*3/4"	0	8pcs
4	Lock Washer 5/16"	0	16pcs
5	Half Moon Washear 5/16"	6	8pcs
6	Nut (5/16")	•	8pcs
7	Screw: #8*1-1/4"	<b>( </b>	26pcs
8	Allen key		1pc
9	Open Wrench 5/16"	<u> </u>	1pc

PAGE: 1 of 4

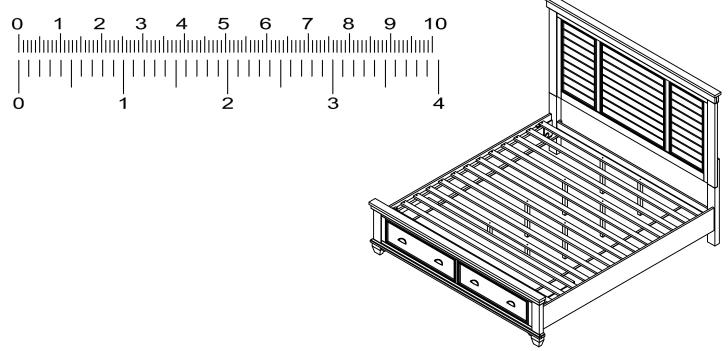

MADE IN VIETNAM




B2118-110 B2118-128

JAMESTOWN 6"6"/6"0" K HEADBOARD JAMESTOWN 6"6"/6"0" K STORAGE FOOTBOARD & SLATS


B2118-338 JAMESTOWN 5"0"/6"6" Q/EK STG BED RAILS

#### STEP 1

Assemble HB LSF Leg (E) and HB RSF Leg (F) to Headboard (A) by using Allen Key (8) with hardware 1,3, and 4. \*DO NOT TIGHTEN THE BOLTS

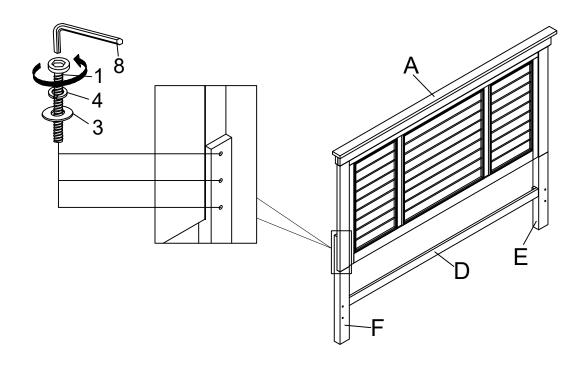

STEP 2 Assemble the HB crossbar (D) to HB legs (E & F) by using Allen Key (8)with hardware 1,3, and 4. \*TIGHTEN ALL THE BOLTS BY USING ALLEN KEY (8)

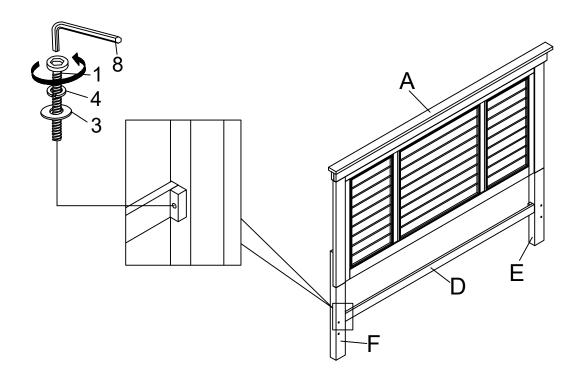


PAGE: 2 of 4




JAMESTOWN 6"6"/6"0" K HEADBOARD JAMESTOWN 6"6"/6"0" K STORAGE FOOTBOARD & SLATS

B2118-338 JAMESTOWN 5"0"/6"6" Q/EK STG BED RAILS

STEP 3 Assemble side rails (C) with Headboard (A) and Footboard (B) by using Open Wrench (9) with hardware 2,4,5, and 6

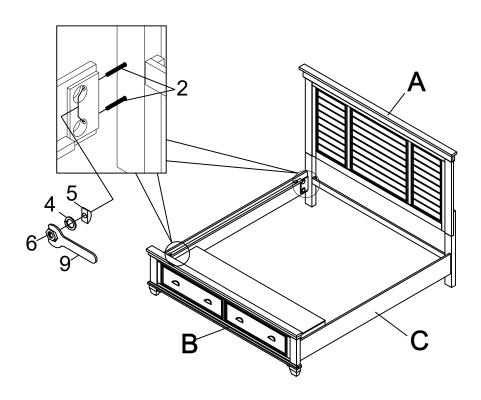

STEP 4 Install the support legs (H) on to the Roll out slat (G)

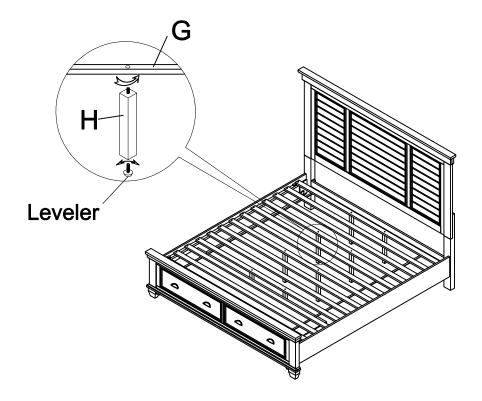

MADE IN VIETNAM

PAGE: 3 of 4



B2118-110 B2118-128

JAMESTOWN 6"6"/6"0" K HEADBOARD JAMESTOWN 6"6"/6"0" K STORAGE FOOTBOARD & SLATS

B2118-338 JAMESTOWN 5"0"/6"6" Q/EK STG BED RAILS

STEP 5 Assemble the Roll out slat (G) to the side rails (C) by using a screwdriver with hardware 7.

