


Carport instructions

(12 * 20FT)









Customer service.
Please contact us at anytime

Parts

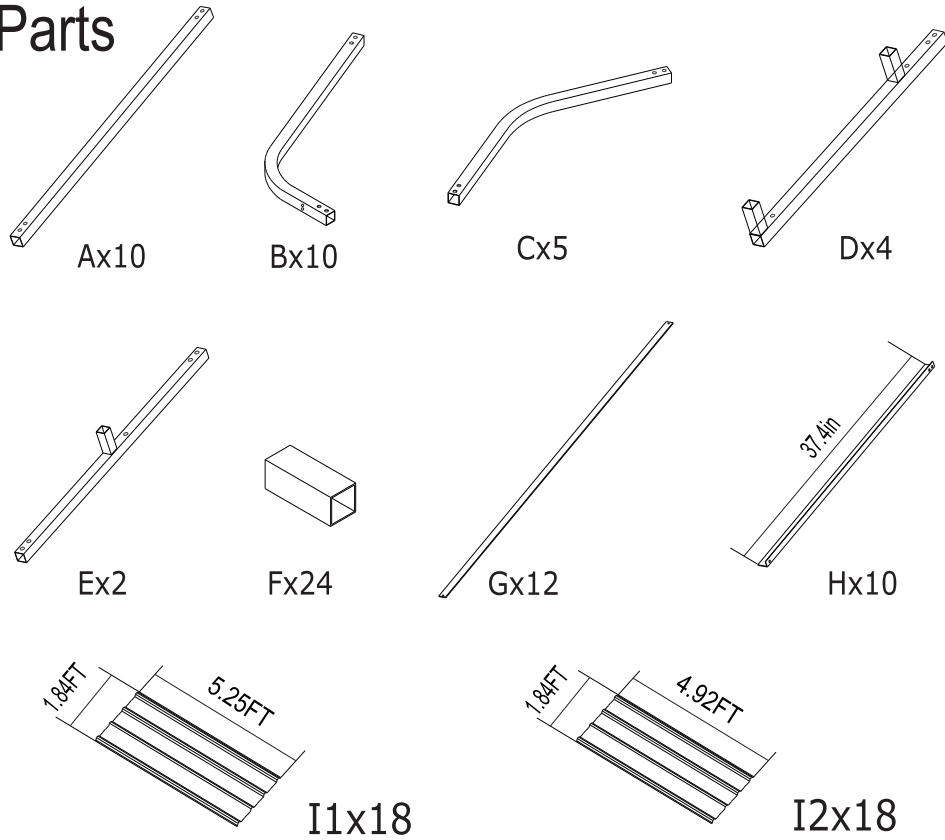


Hardware

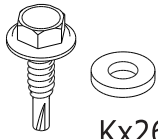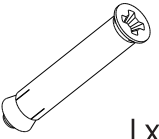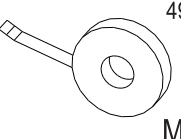


 Jx25	 Kx260	 Lx10	 Mx1
Hex Head Cap Bolt / Screw	Hex Self Drilling Screw	Phillips Flat Head Expansion Screws	Waterproofing Strip
 Nx4	 Ox1	 Px1	
Square Plugs	Edgeband	Sleeve	

STEP1:



The long straight end of Part B must be connected to Part C, and the short bent end to Part A.

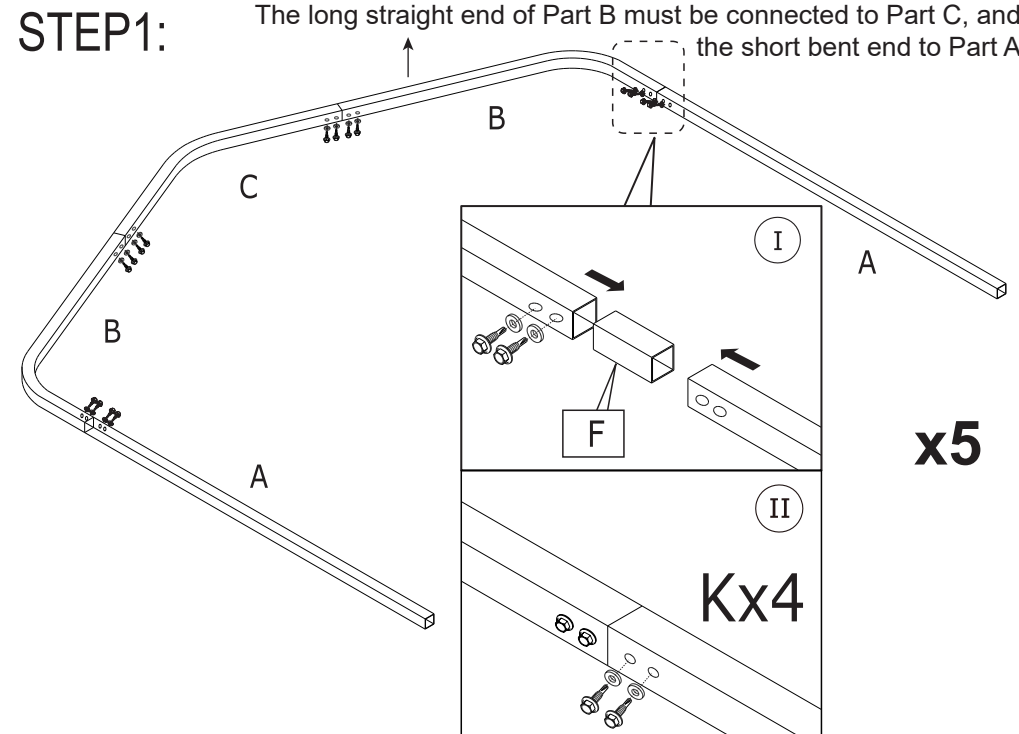


STEP2:

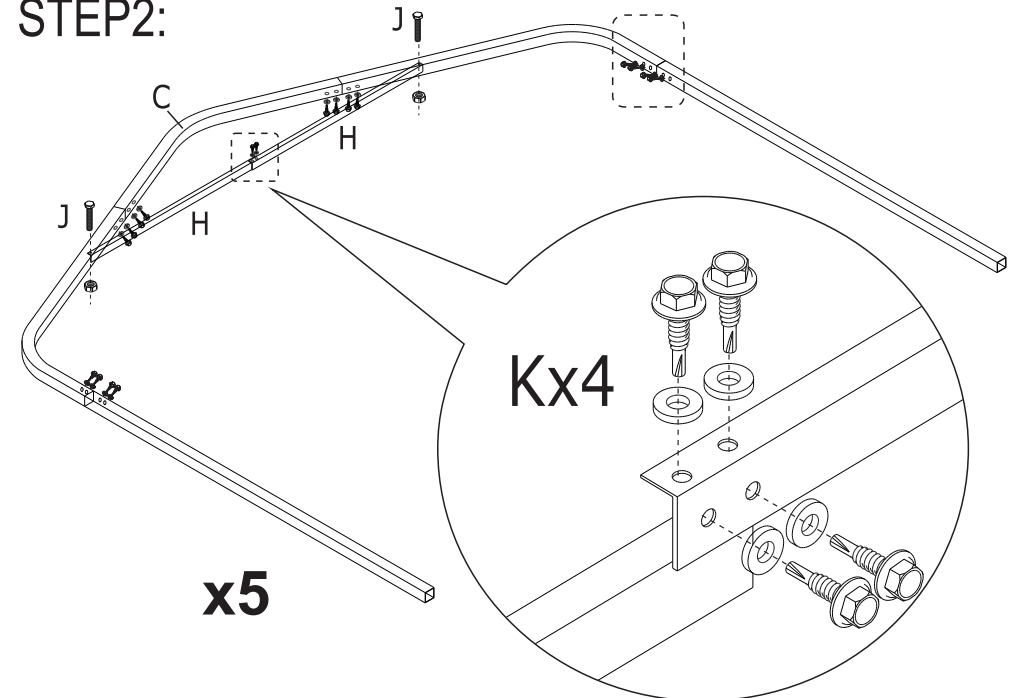

STEP3:

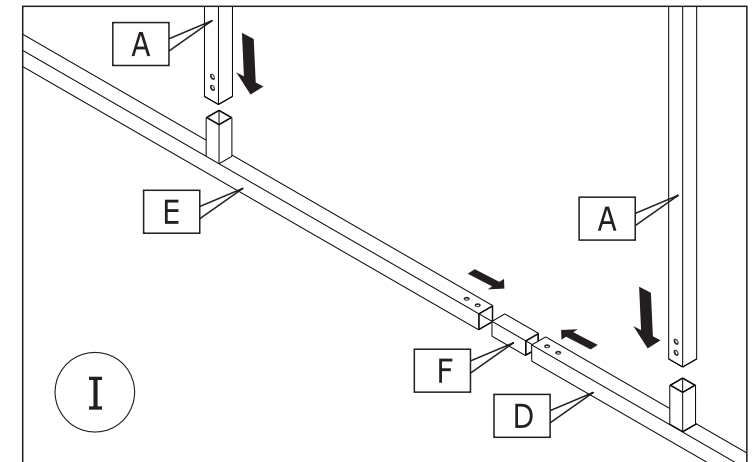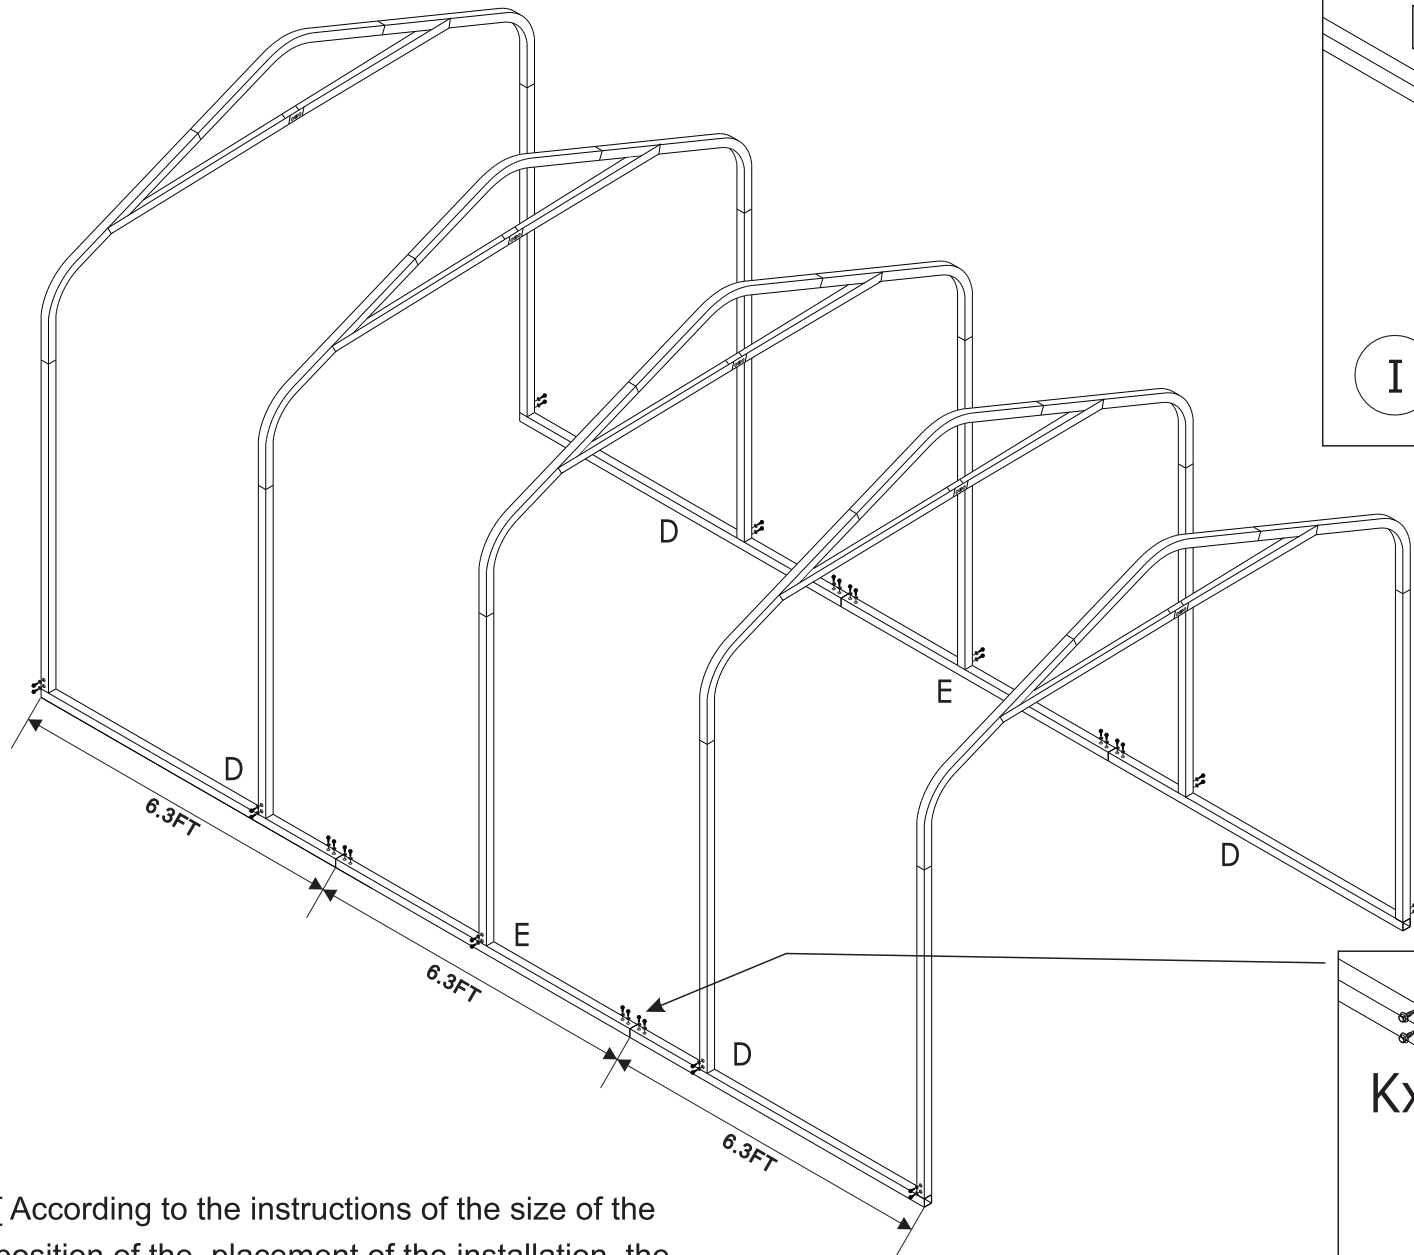


C-C

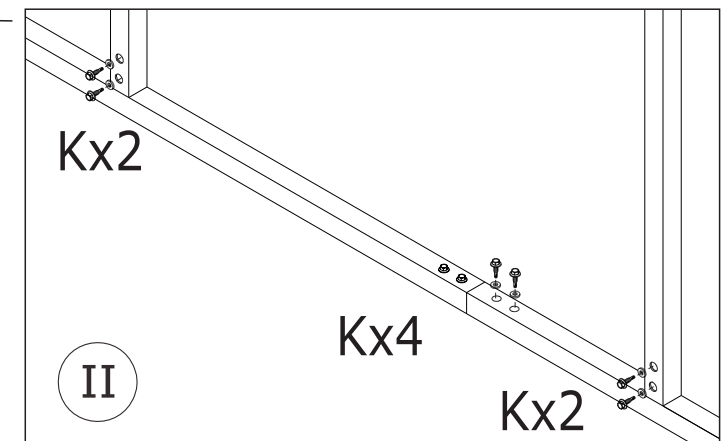



C-C

[According to the instructions of the size of the position of the placement of the installation, the other side of the size of the position as shown in the figure corresponds to one by one, in order to install the successful.]


STEP4:

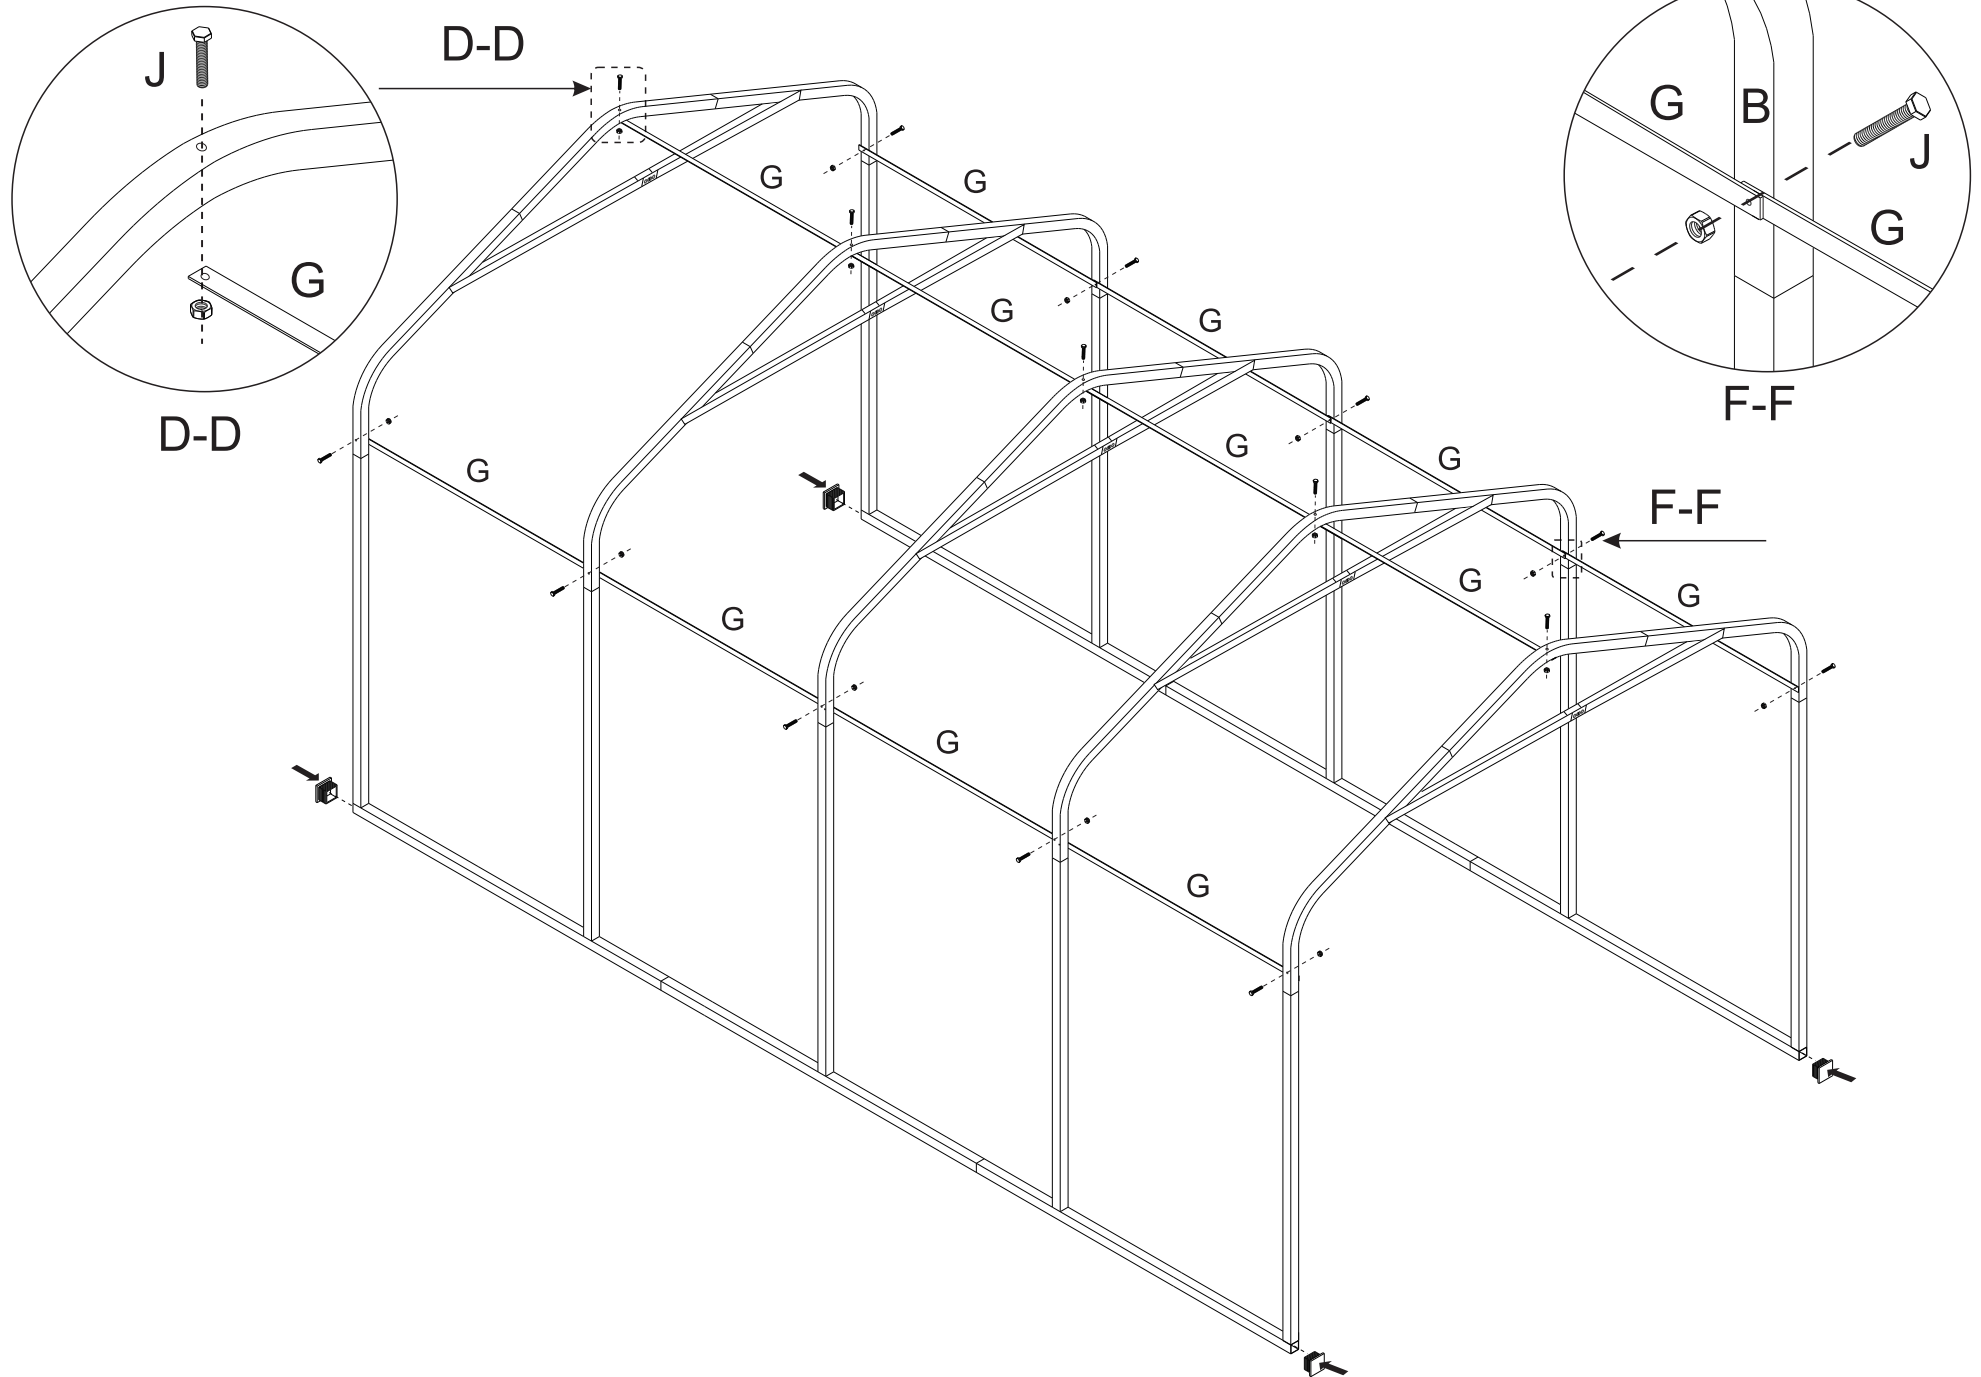

SETP5:

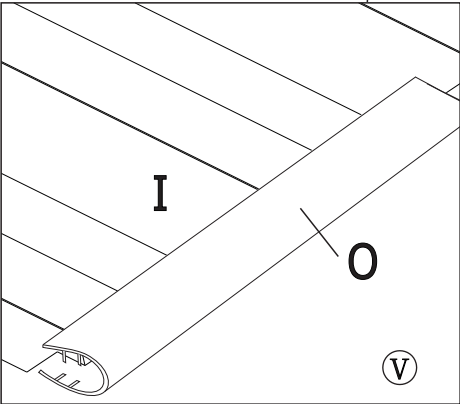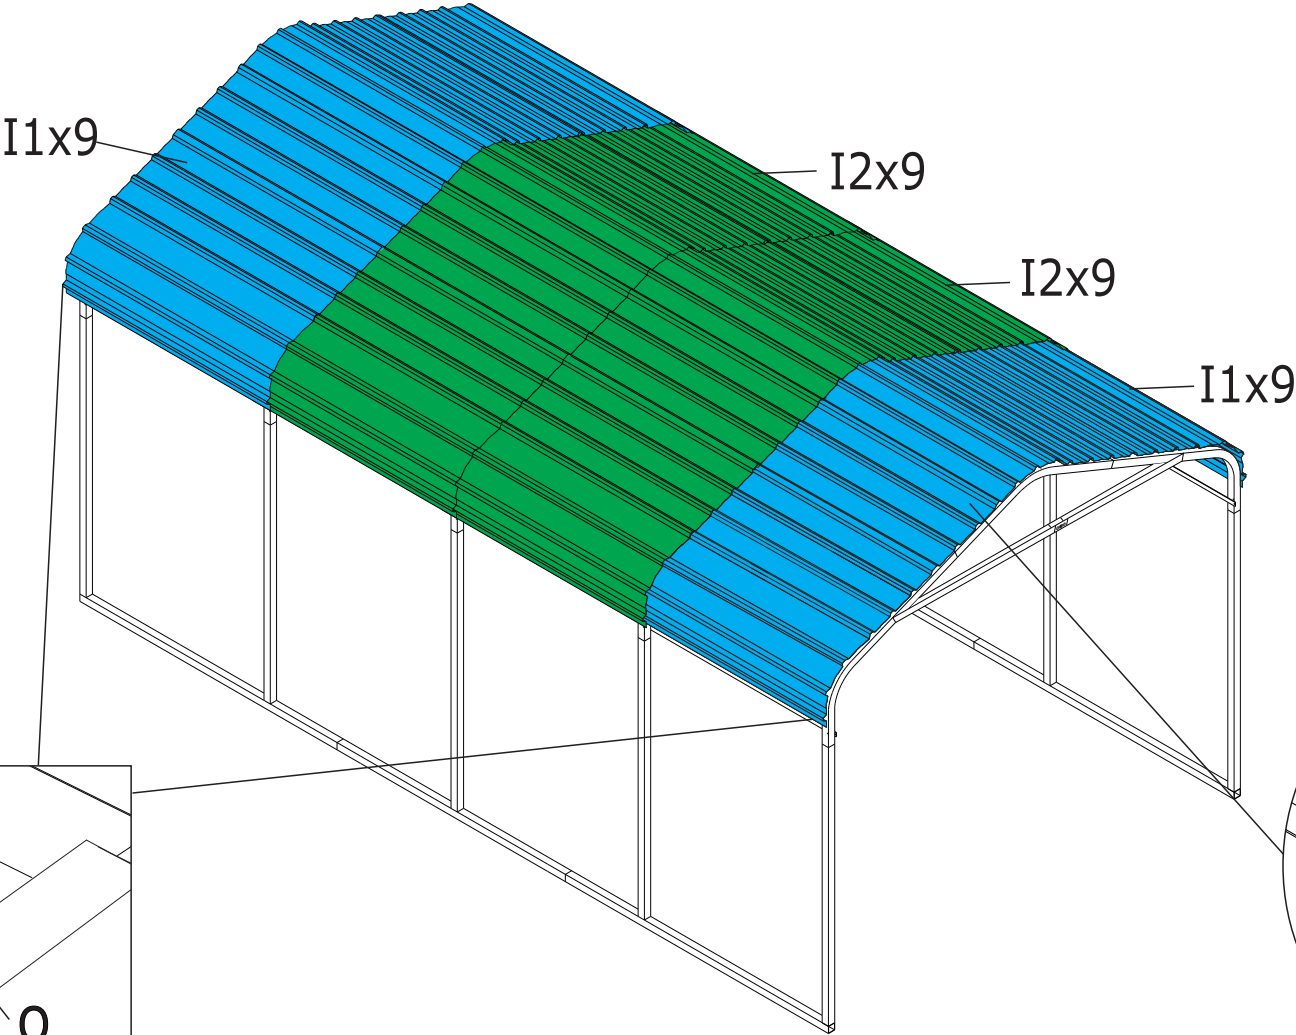


The sealing strip wrapped around the edge of the tile provides a protective function.

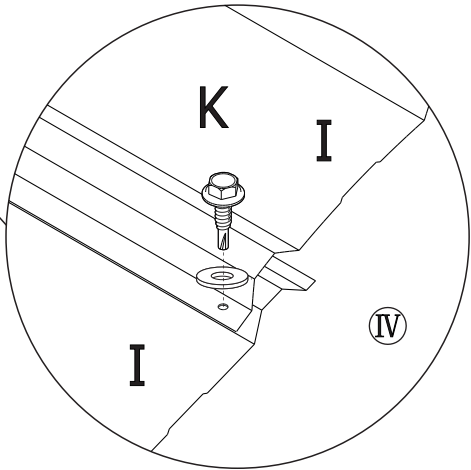

① Apply adhesive tape along the edge of the first tile.

② Pick up the second tile, press firmly to align, and cover the adhesive tape.

③ Finally, secure the overlap with nails for reinforcement.

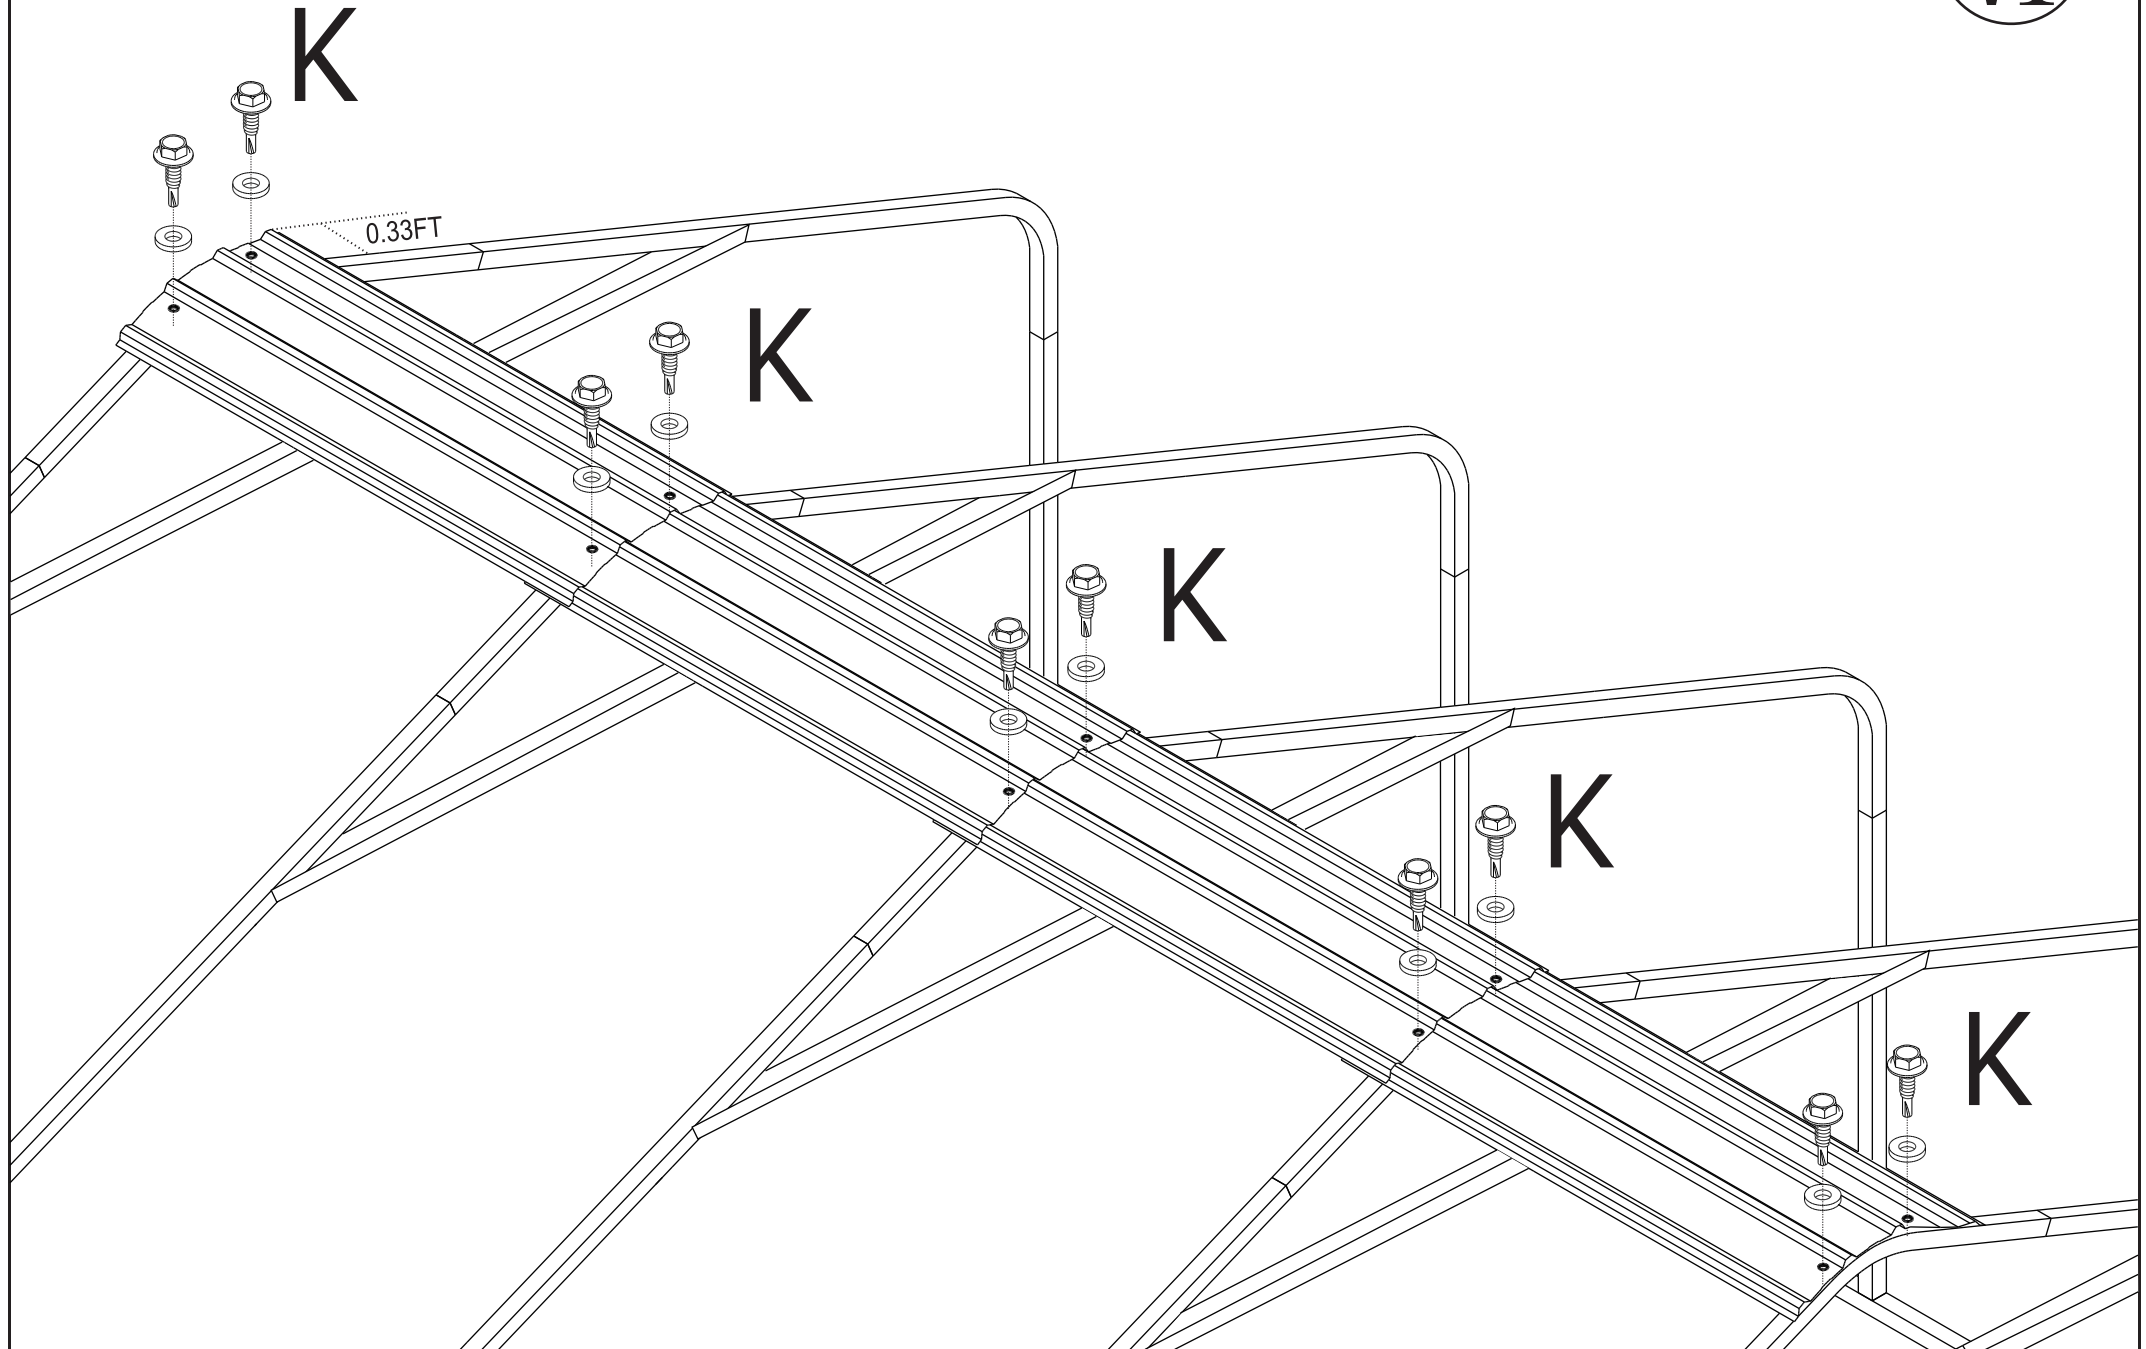

STEP6:

