
MonBlari

SHOWER ROOM

TW102

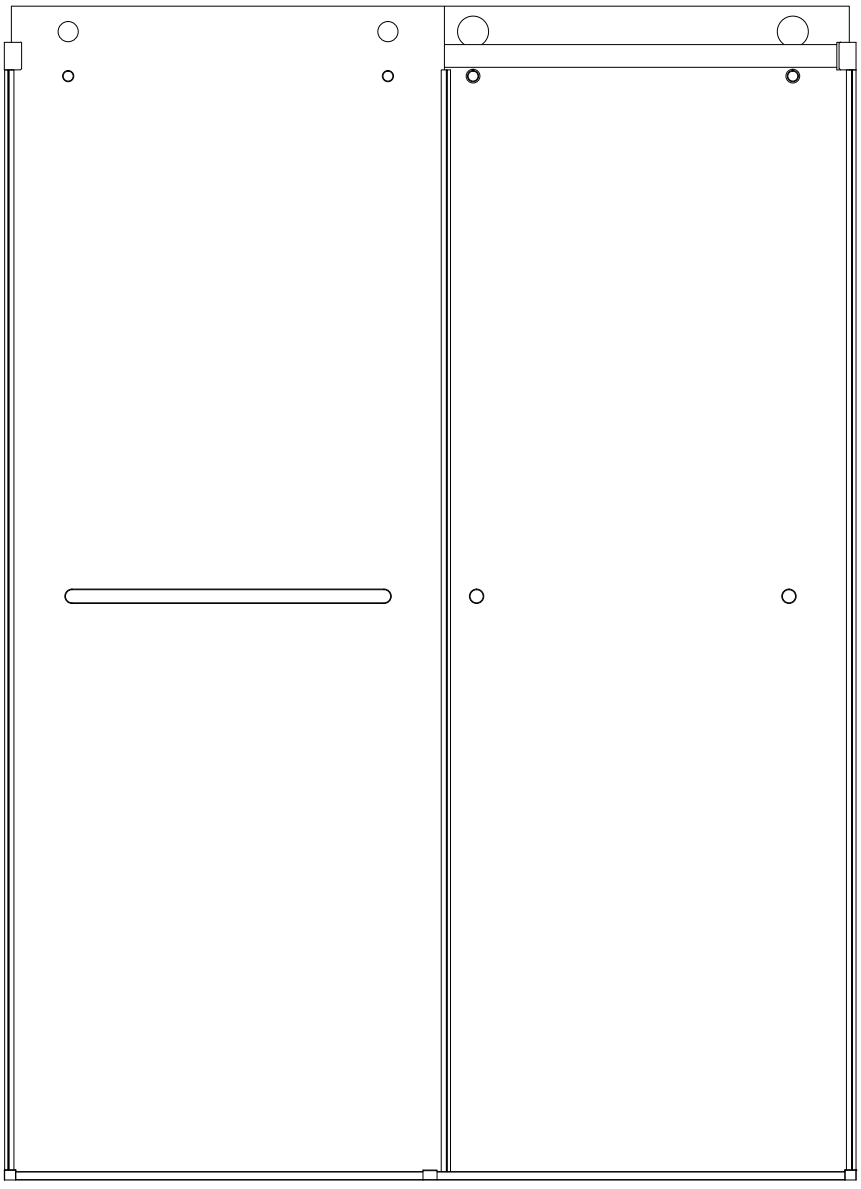

IMPORTANT SAFETY INFORMATION

⚠ WARNING

- Risk of injury. Tempered glass may shatter if damaged.
- Do not cut or drill tempered glass.
- Do not subject glass to impact.
- Wear safety gloves and safety goggles.
- Two-person installation is recommended.
- Failure to follow these instructions may result in serious injury.
- Always protect glass edges and corners during handling and installation.


INSTALLATION REQUIREMENTS


- Professional installation is strongly recommended.
- Install on a flat, finished, and plumb wall surface.
- Wall thickness tolerance should be within ±1/8 inch.

INSTALLATION NOTES

- Apply silicone sealant as instructed.
- Allow sealant to cure for at least 24 hours.
- Do not use the shower during this time.

TOOLS REQUIRED

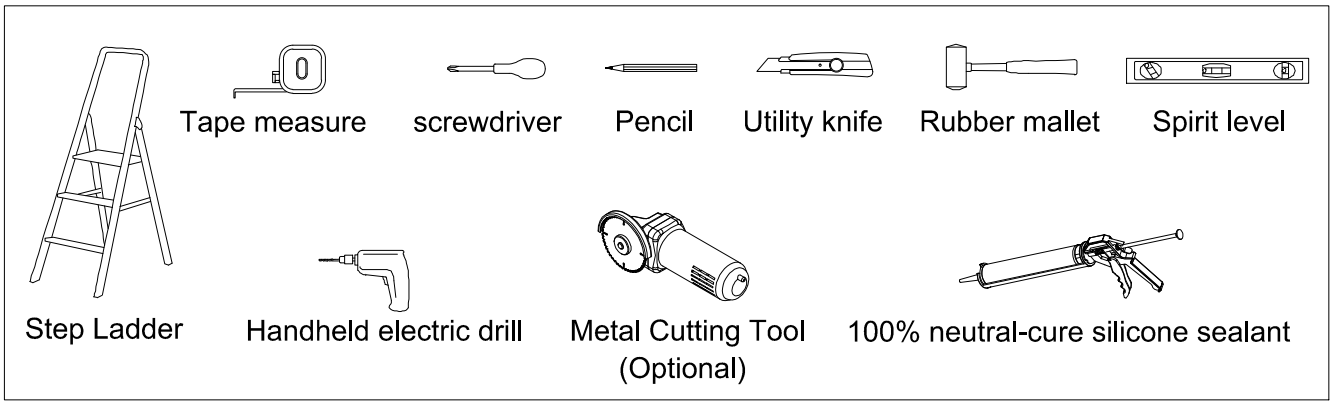

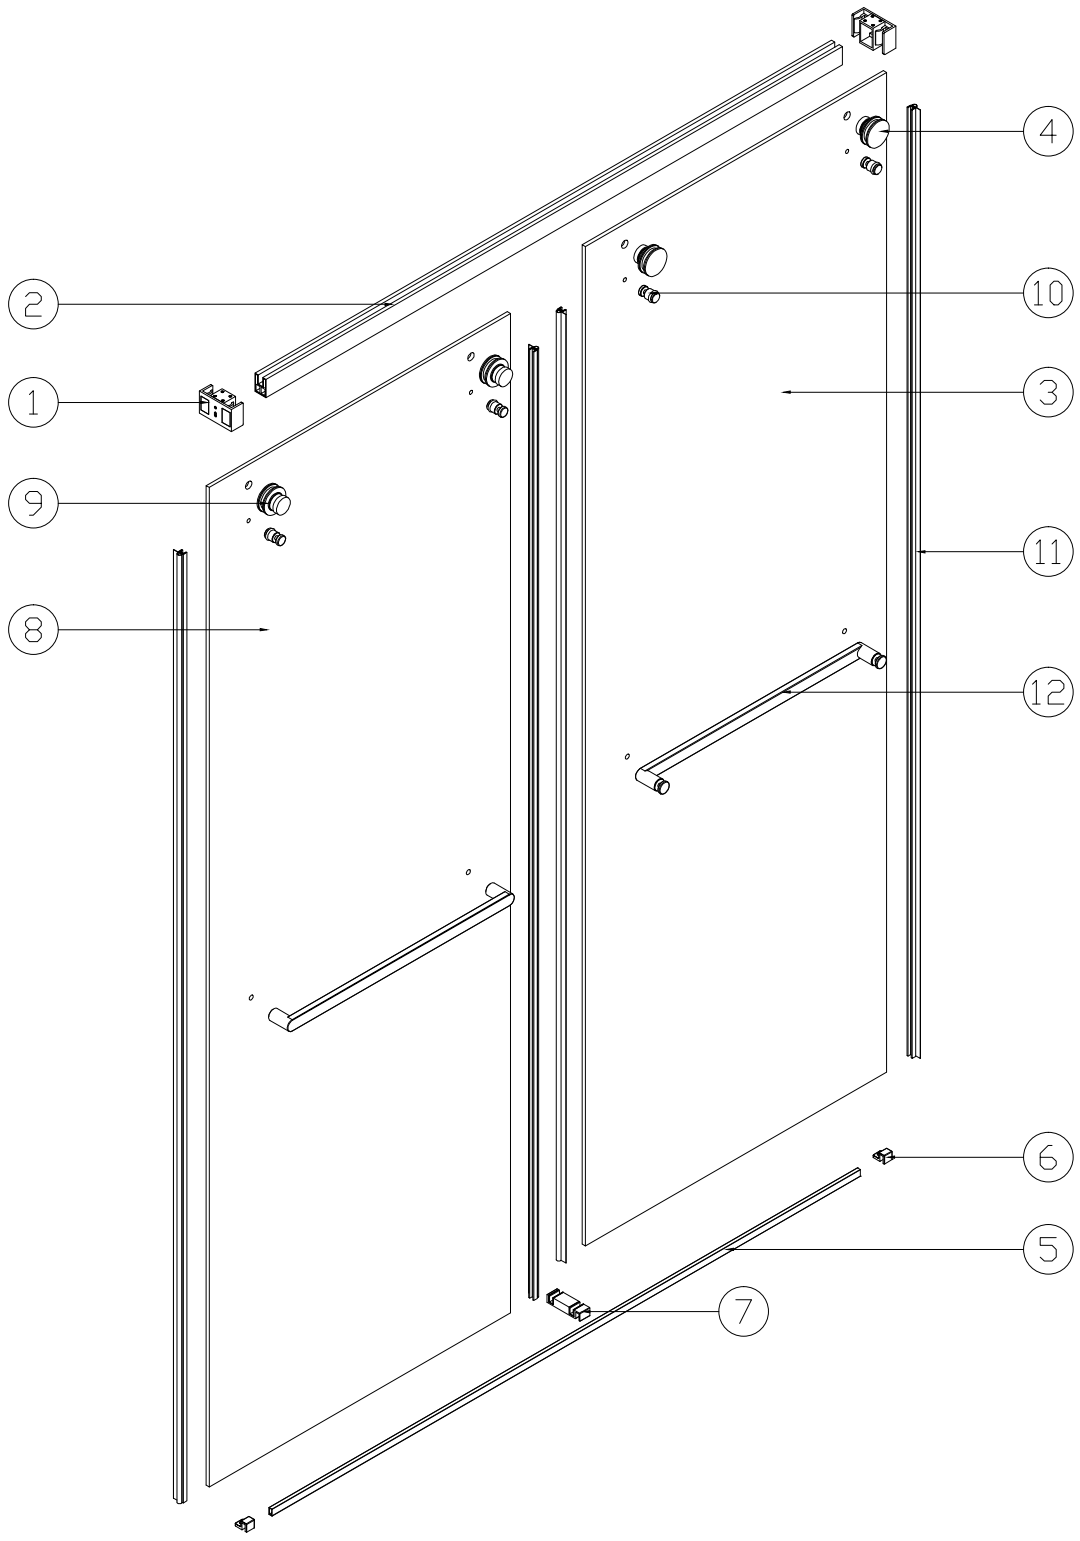



1	×2	5	×1	9	×2	13	×8
2	×1	6	×2	10	×4	14	×4
3	×1	7	×1	11	×4	15	×4
4	×2	8	×1	12	×2		


1

The shower enclosure height is 76 inches.

H=76" H-2=74"

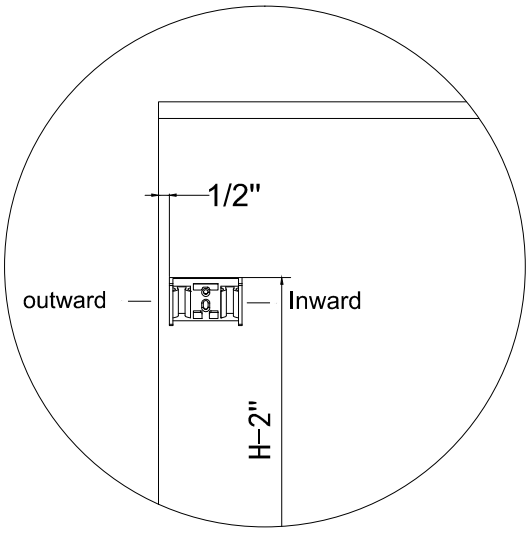

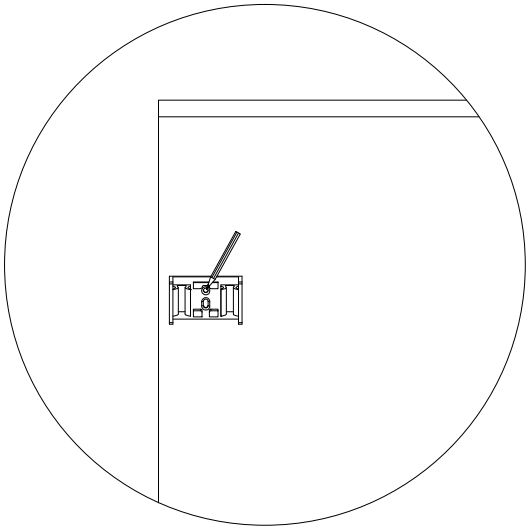


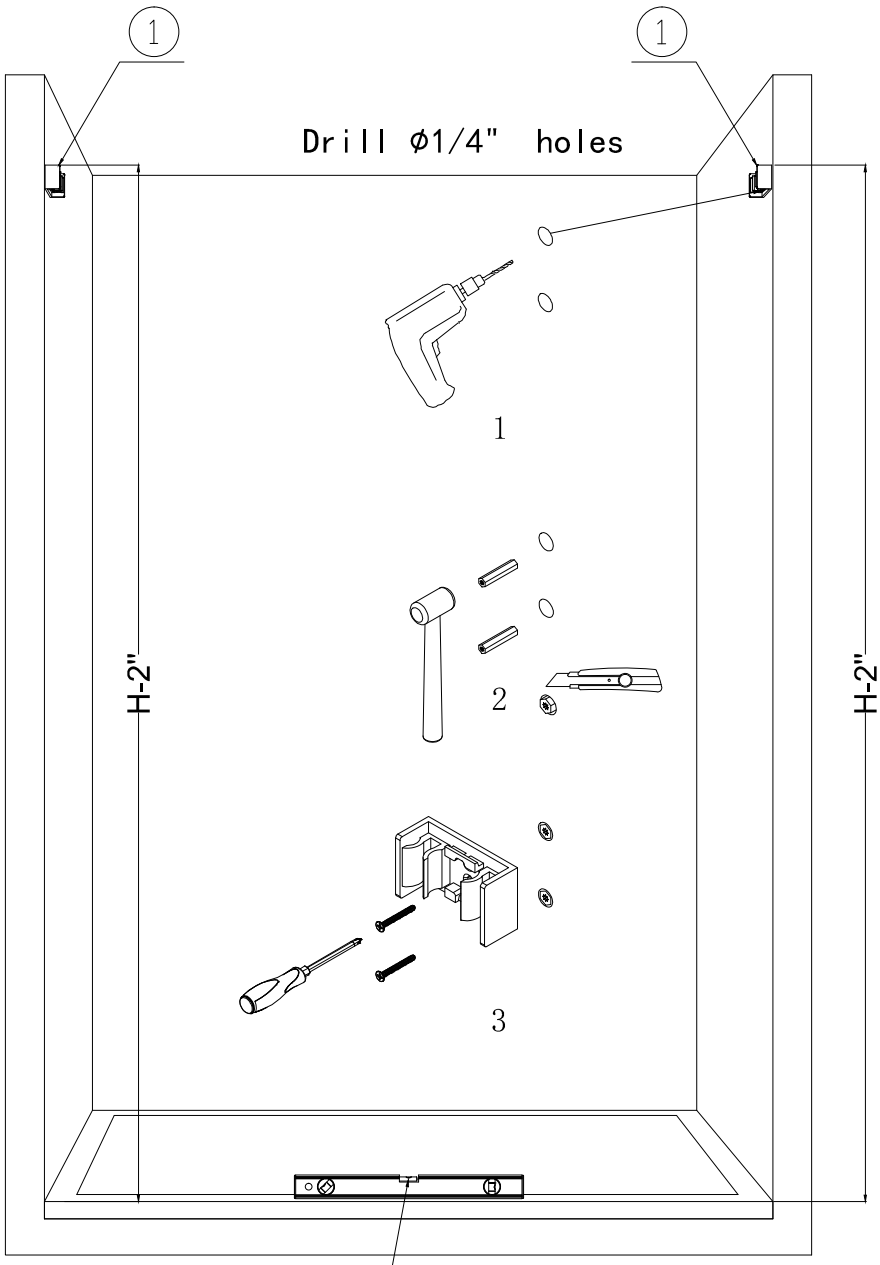


Drill holes at the marked locations

Ensure the panel is level

First, disassemble the components.

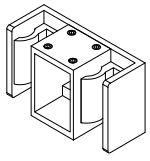

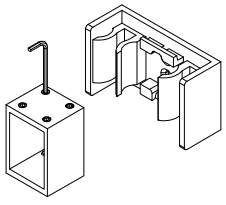

1





Insert wall anchors




Please use M5x35mm self-tapping screws

2

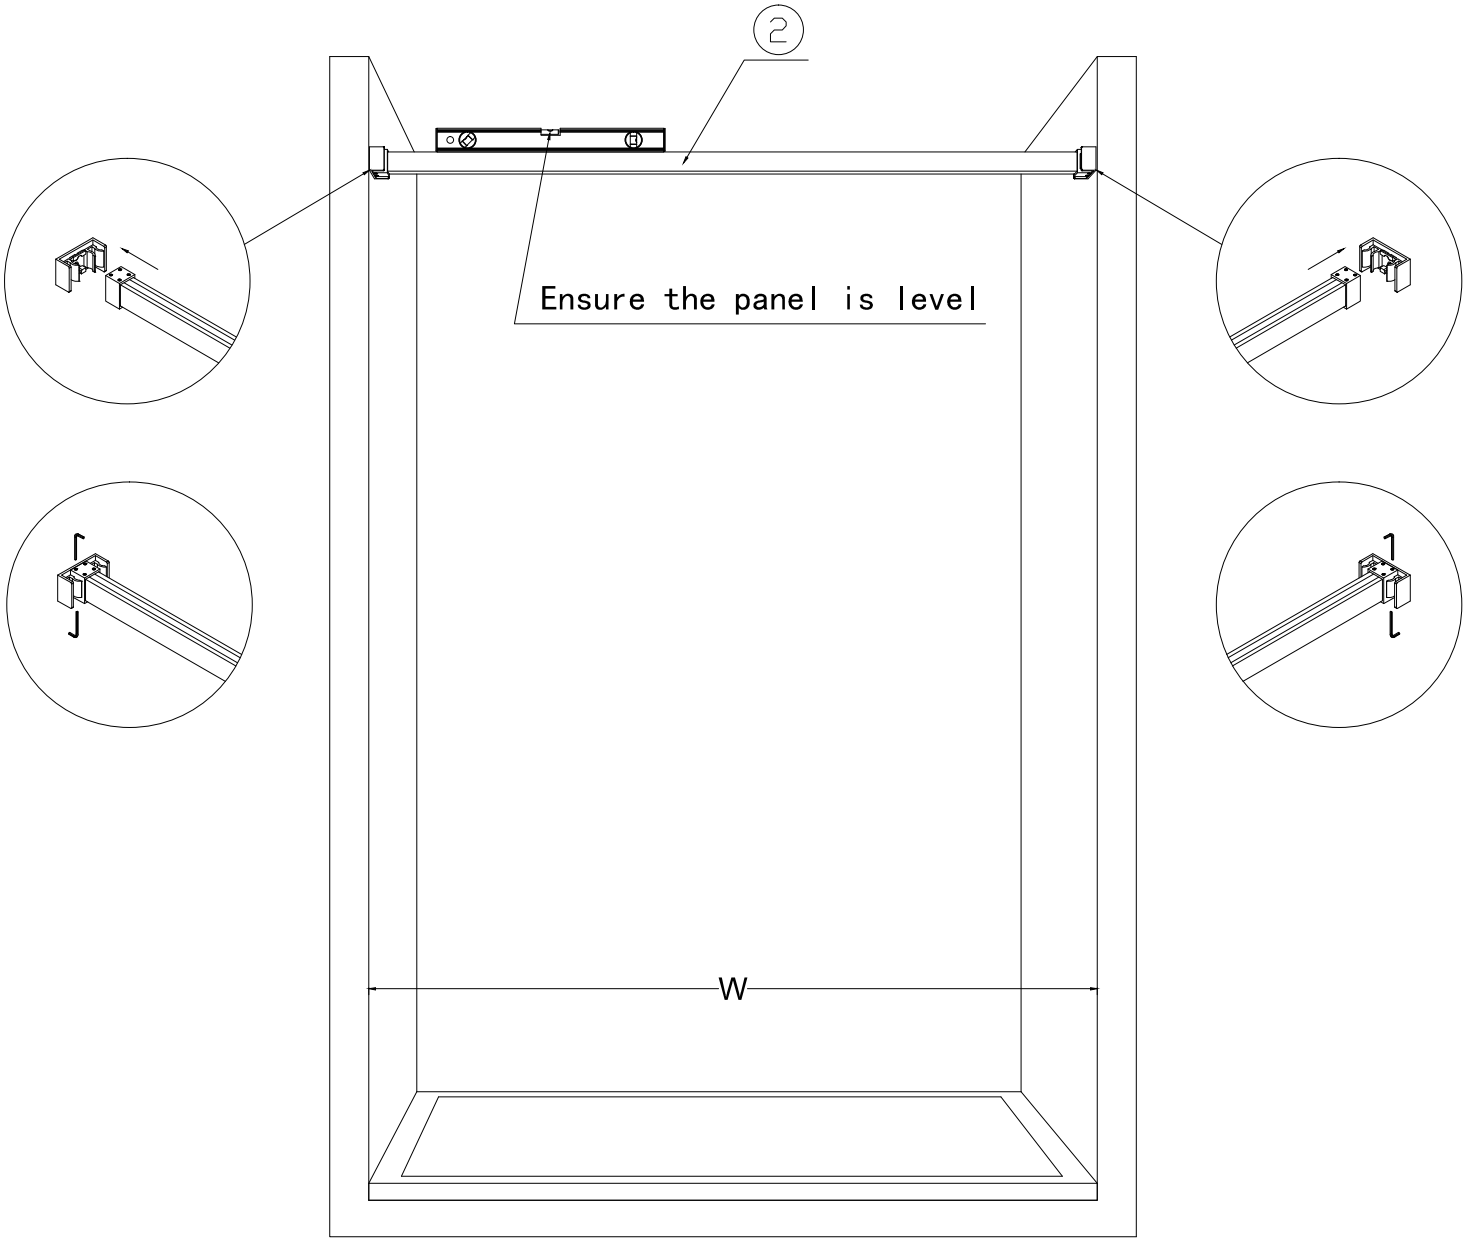


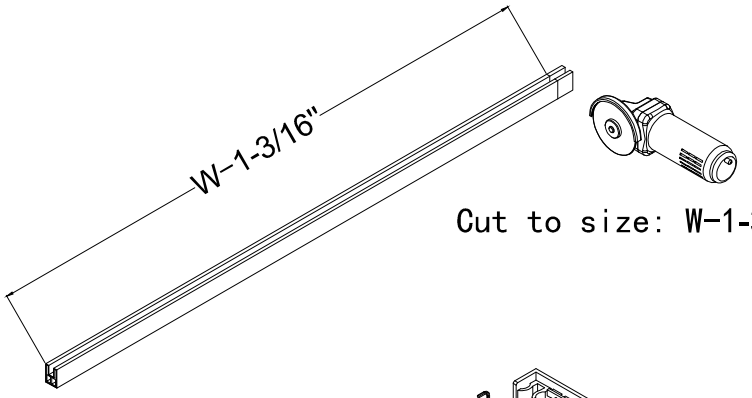

Cut to size: W-1-3/16"





②

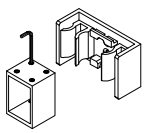


disassemble a component and install it onto the track.

3

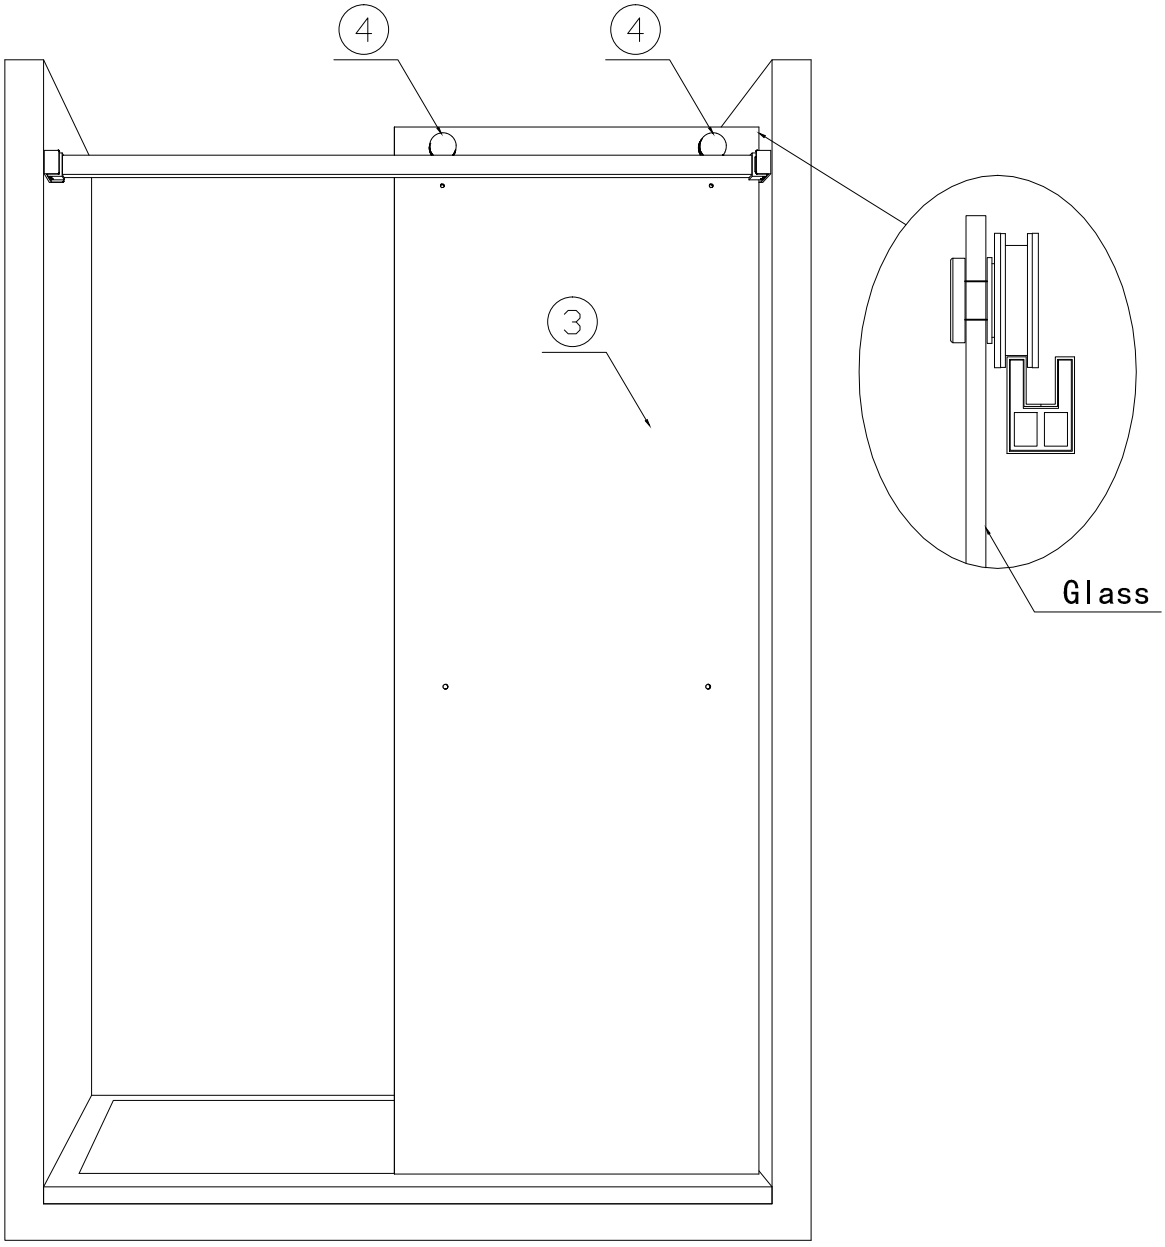





3




4

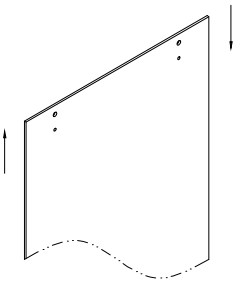

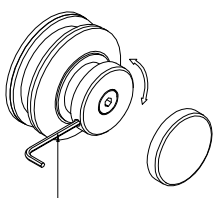


Adjust the height of the glass panel

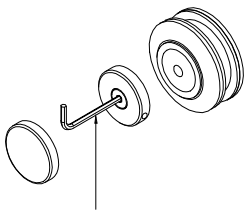

Secure the glass panel


4

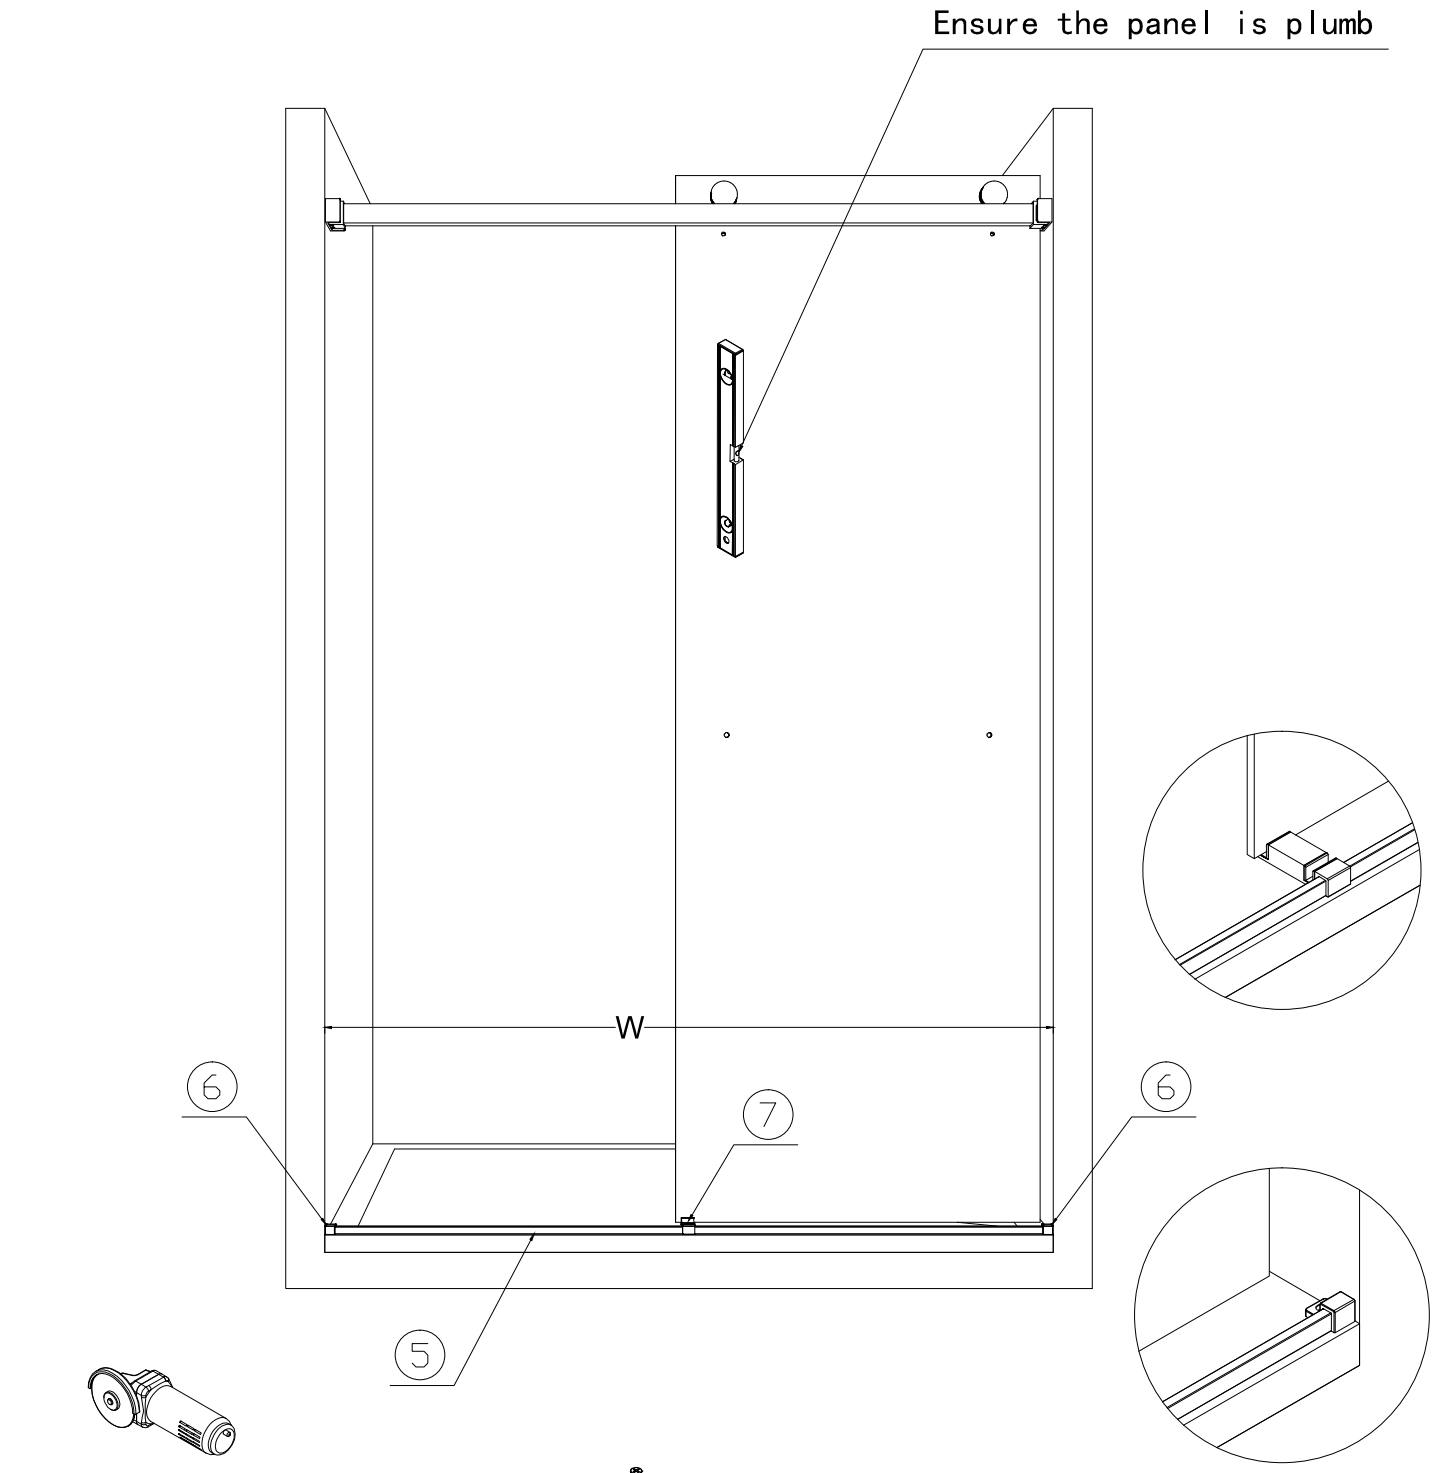


Cut to size: W-5/8"



5



6

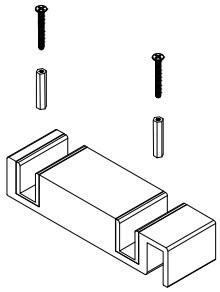

7




Insert wall anchors




Please use M4x18mm self-tapping screws


Drill holes at the marked locations

5

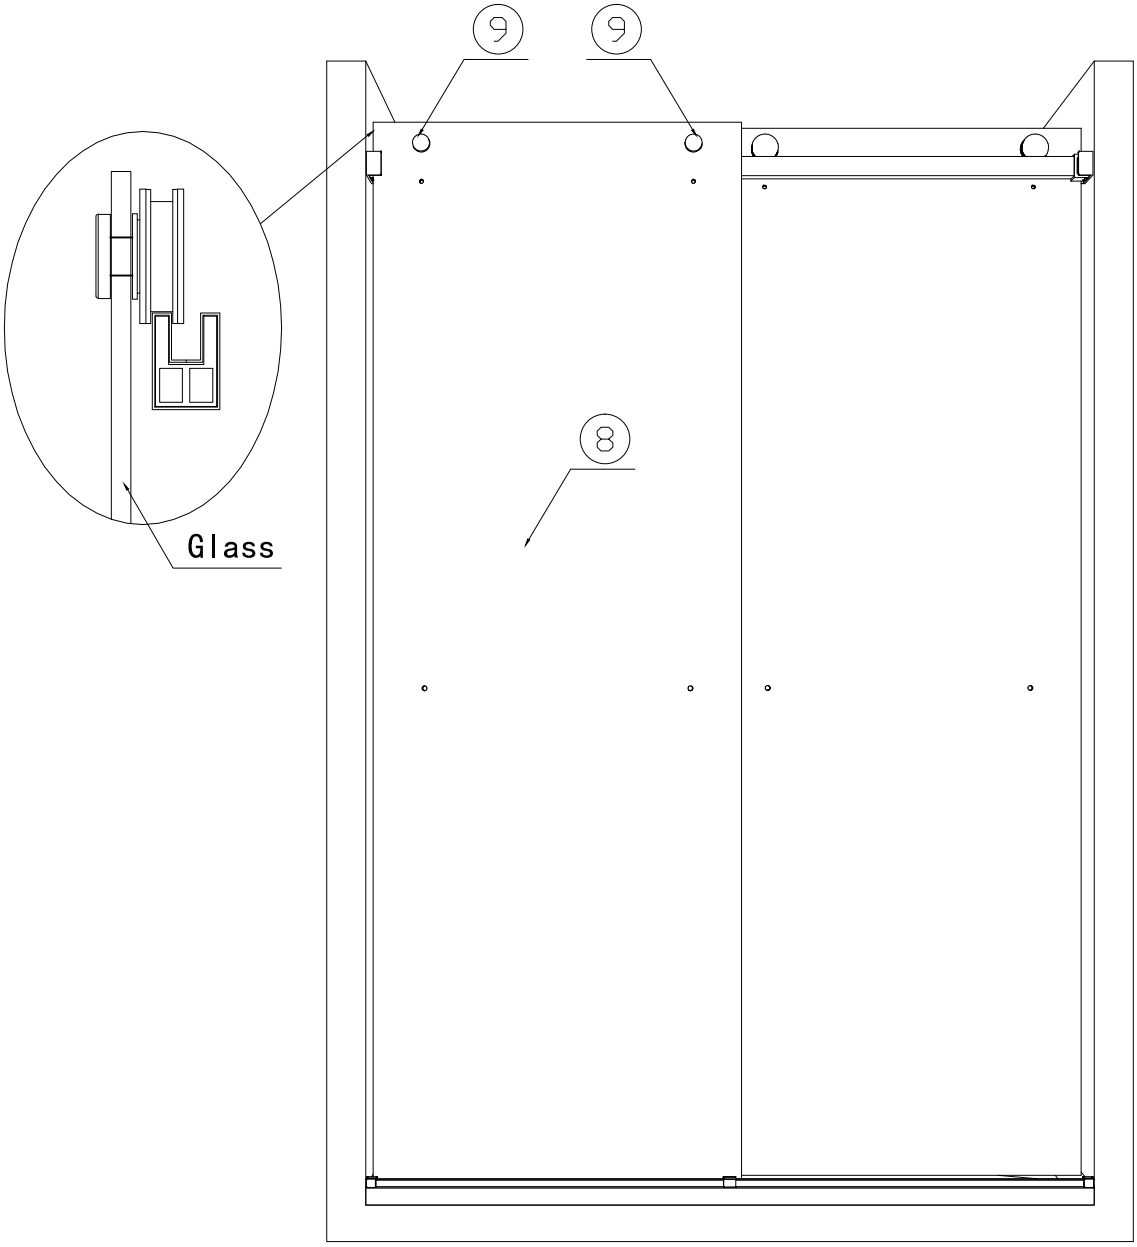





⑧




⑨

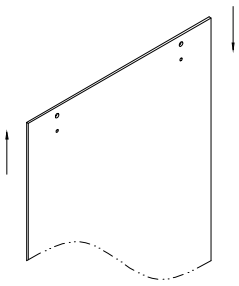

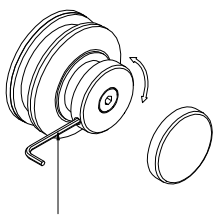



Adjust the height of the glass panel

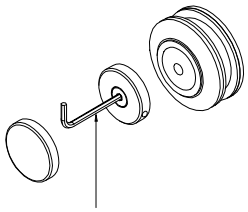


Secure the glass panel

6

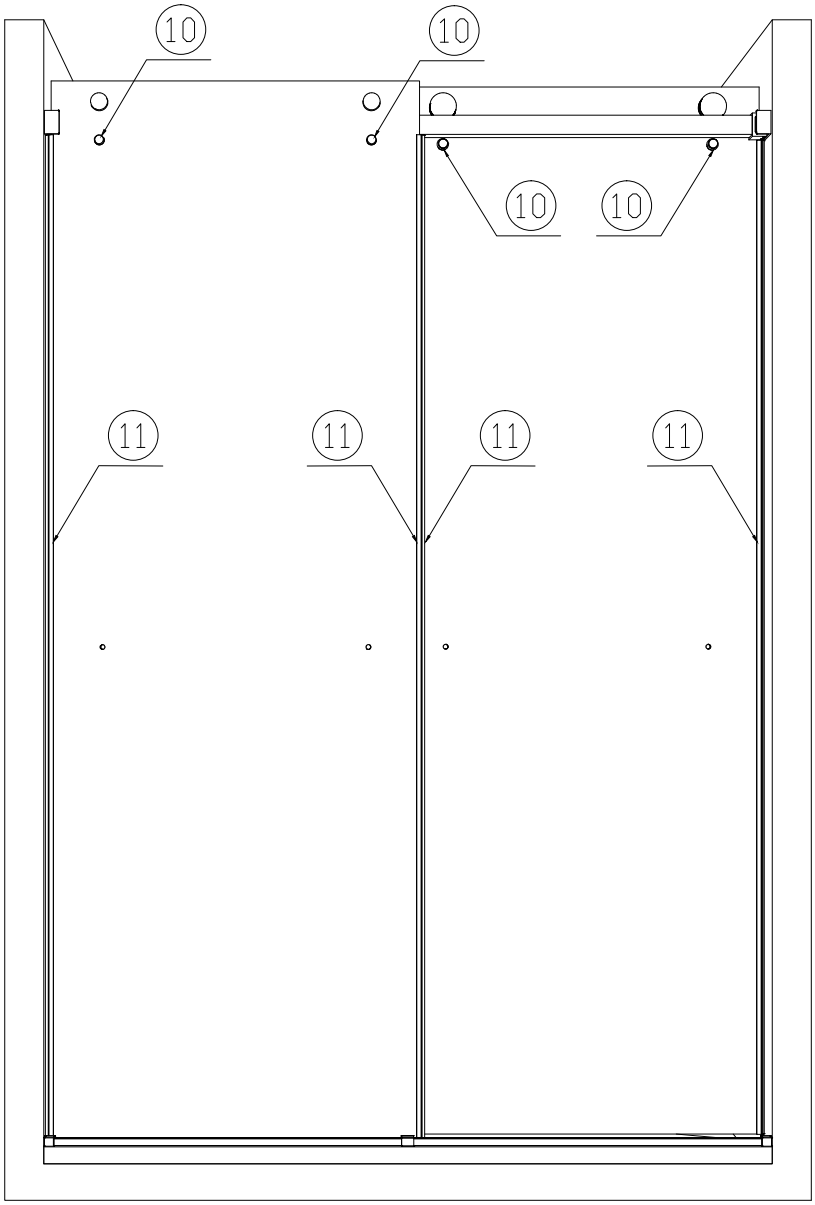




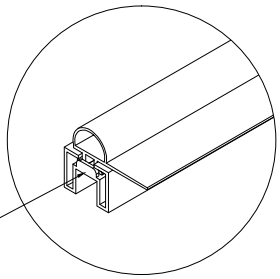










10


Misaligned adjustable

11


7

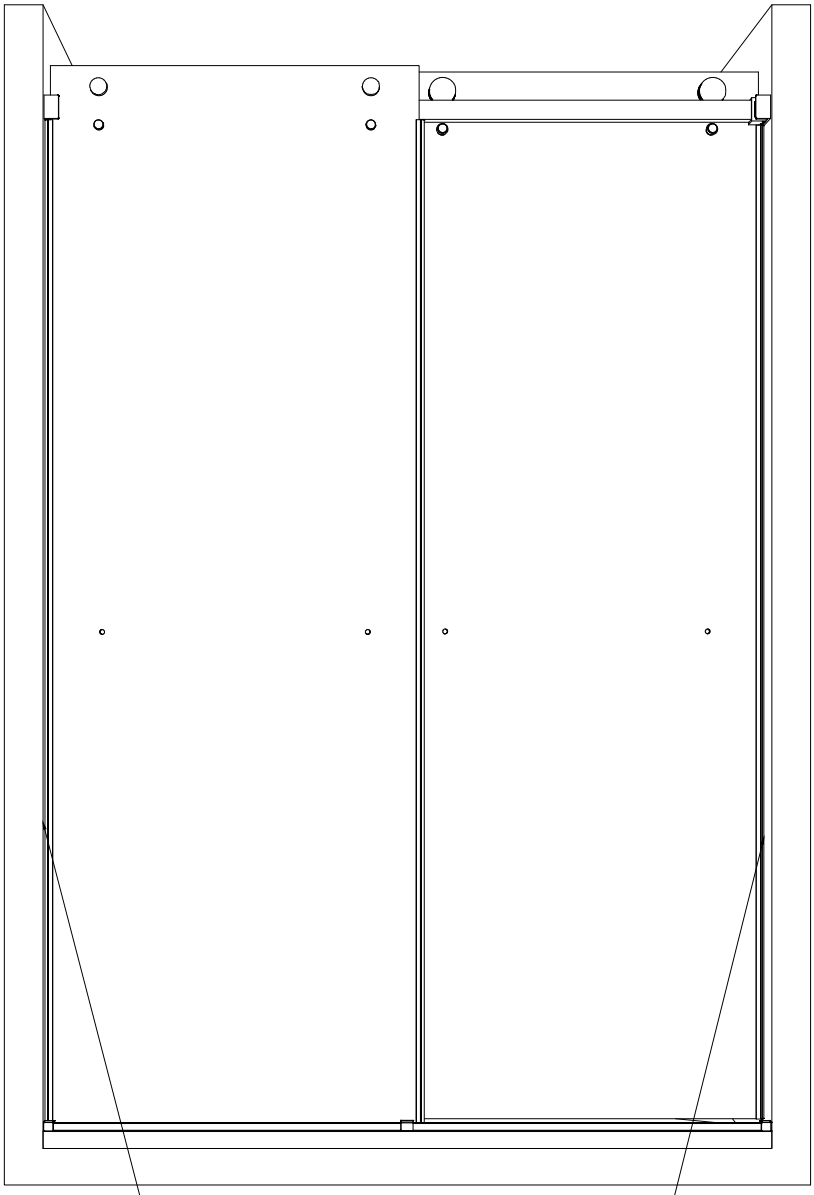



If the door is misaligned,
please adjust the rollers.

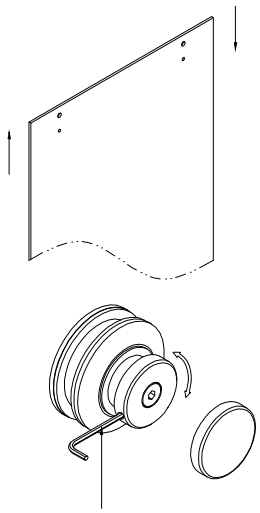


Adjust the height of the glass panel

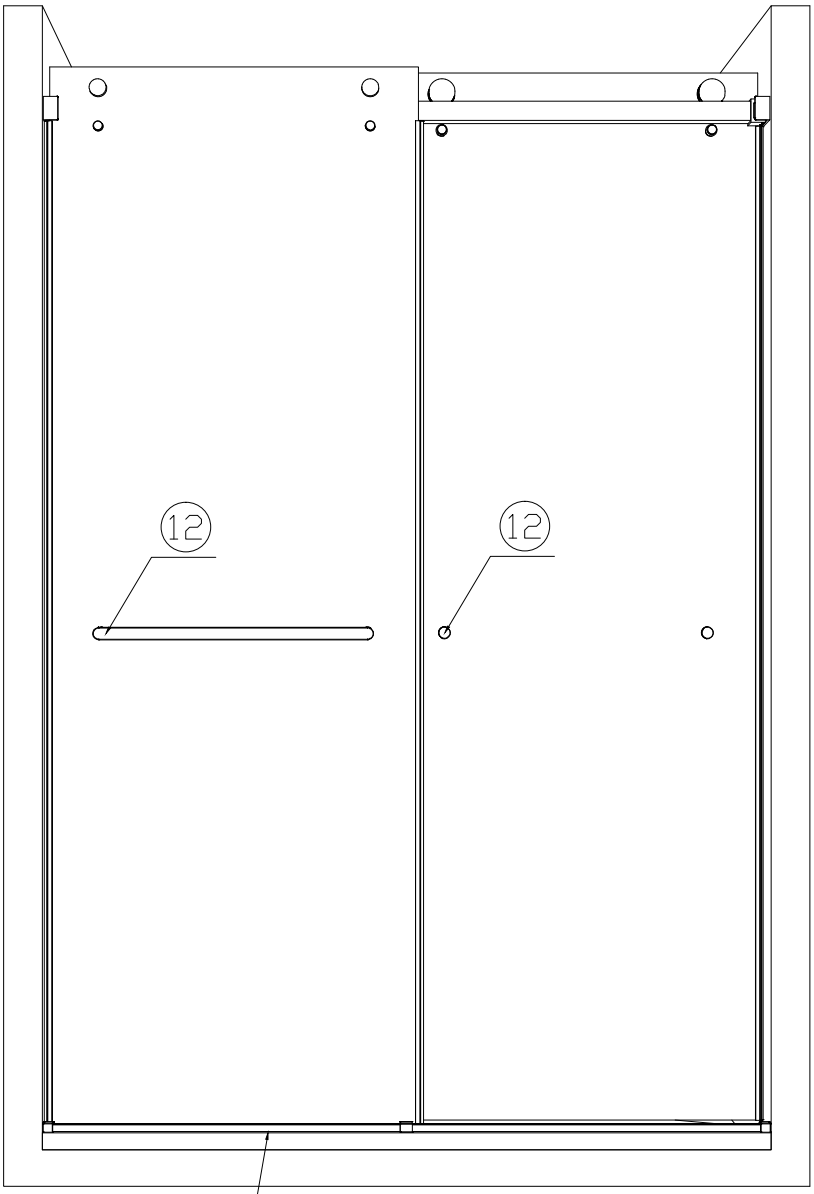

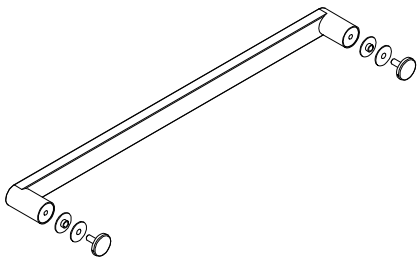

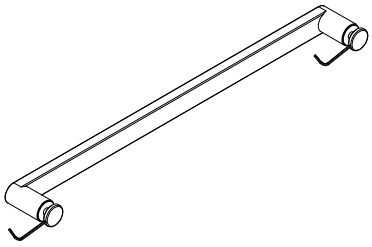

Apply silicone sealant to the gaps between the wall and the metal frame, and between the metal frame and the floor.

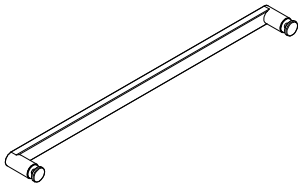

12

Allow 24 hours for silicone to fully cure before use

