

10 DRAWER DRESSER USER MANUAL

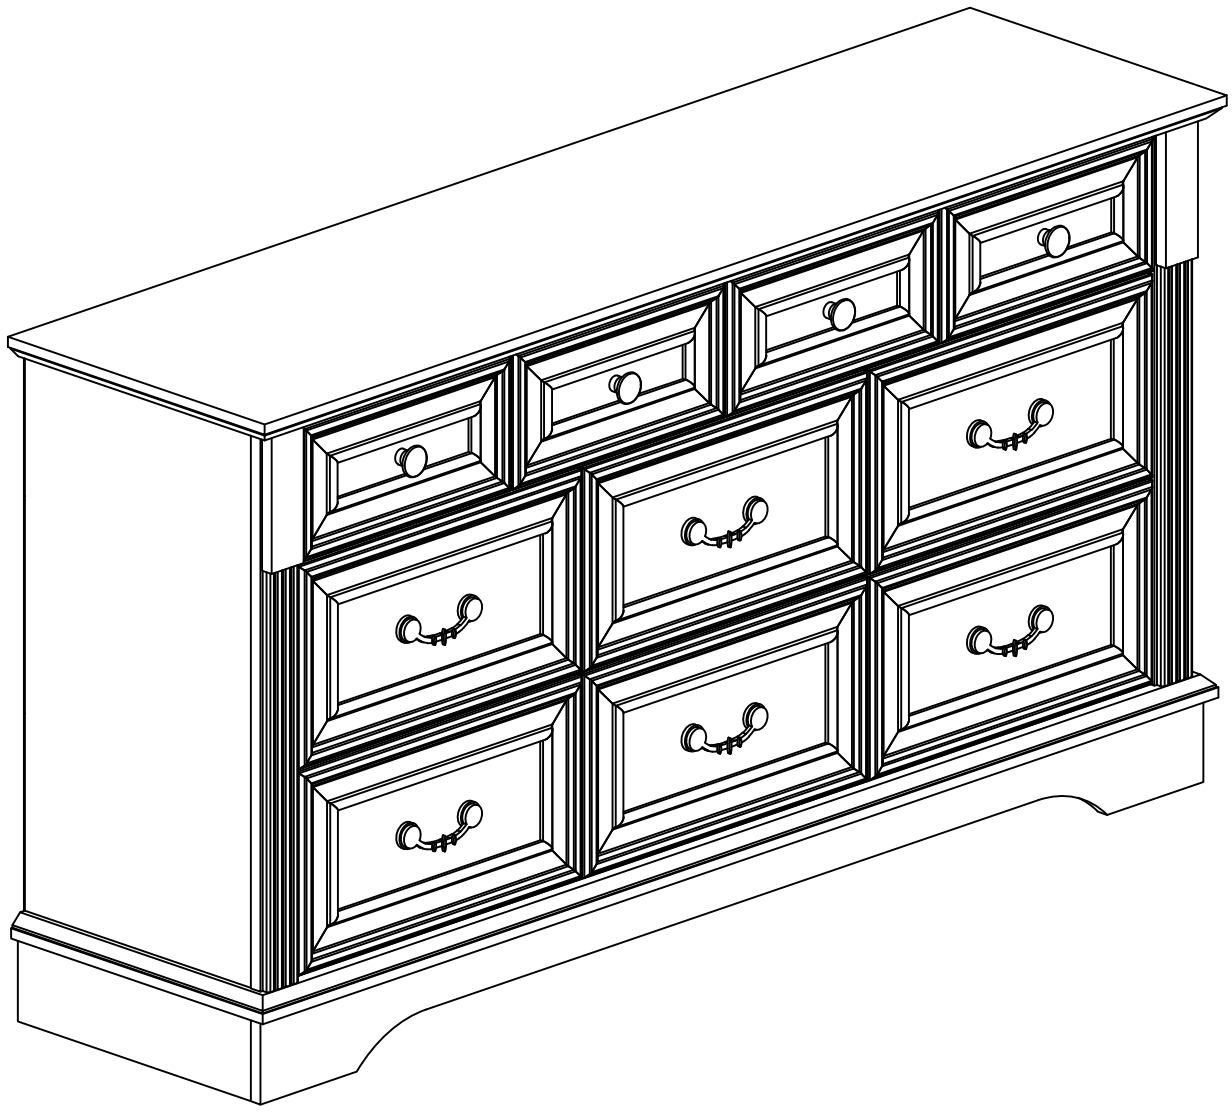


STRUCTURE FOR REFERENCE TO ASSEMBLE

Chest

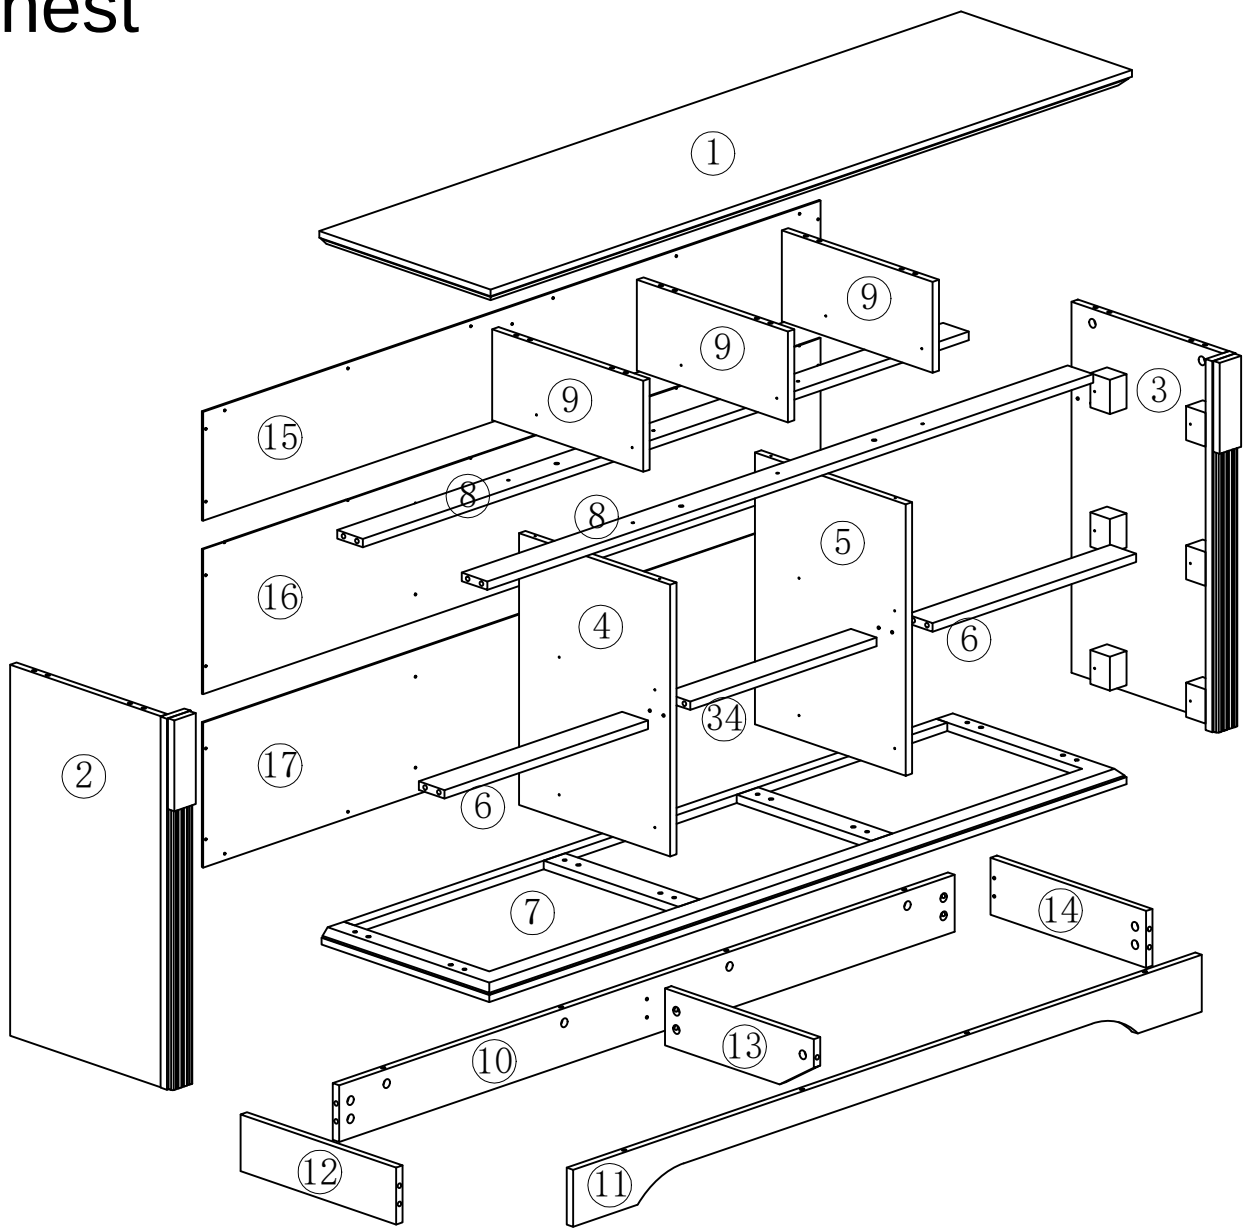





Drawers

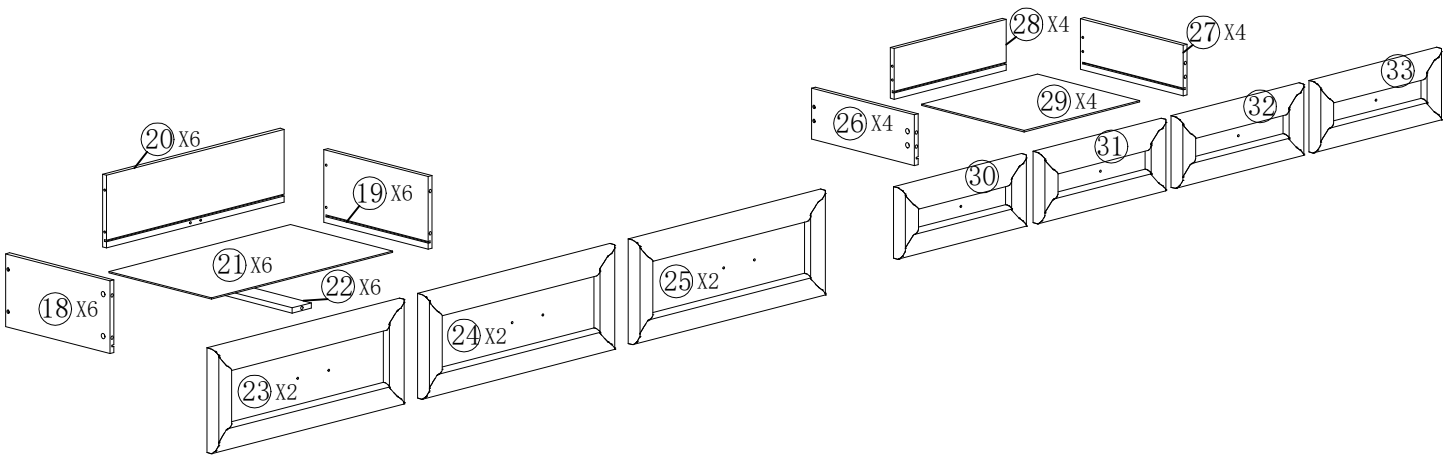


PARTS IDENTIFICATION

CODE	DESRIPTION	QTY
1	Top panel	1
2	Left side panel	1
3	Right side panel	1
4	Lower left center side panel	1
5	Lower Right center side panel	1
6	Lower drawbar	2
7	Bottom panel	1
8	Upper drawbar	2
9	Upper middle partition panel	3
10	Back bottom panel	1
11	Front bottom panel	1
12	Left bottom panel	1
13	Middle bottom panel	1
14	Right bottom panel	1
15	Top back panel	1
16	Middle back panel	1
17	Bottom back panel	1
18	Drawer left side panel	6
19	Drawer right side panel	6
20	Lower drawer tail plate	6
21	Bottom panel of lower drawer	6
22	Bottom drawbar of lower drawer	6
23	Left front panel of lower drawer	2
24	Middle front panel of lower drawer	2
25	Right front panel of lower drawer	2
26	Drawer left side panel	4
27	Drawer right side panel	4
28	Upper drawer tail plate	4
29	Bottom panel of upper drawer	4
30	Left front panel of upper drawer	1
31	Front of upper middle drawer	1
32	Front of upper middle drawer	1
33	Right front panel of upper drawer	1
34	middle drawbar	1

List of Parts

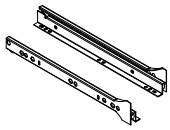
No.	Hard ware	Quantity
A	 **M6x34MM**	99+3
B	 **Ø8x30MM**	18+1
C	 **Ø15x9MM**	53+2
D	 **Ø3.5x30MM**	62+2
E		4
F		6
G	 **M4x8MM**	16+2
H	 **Ø3.5x12MM**	120+4
I	 **Ø3.5x14MM**	40+2
J	 **12"**	10
K		2
L	 **Ø12x9MM** (for drawer)	46+2
M	 **7x38MM**	8

How the knock down (kd) assembly system works

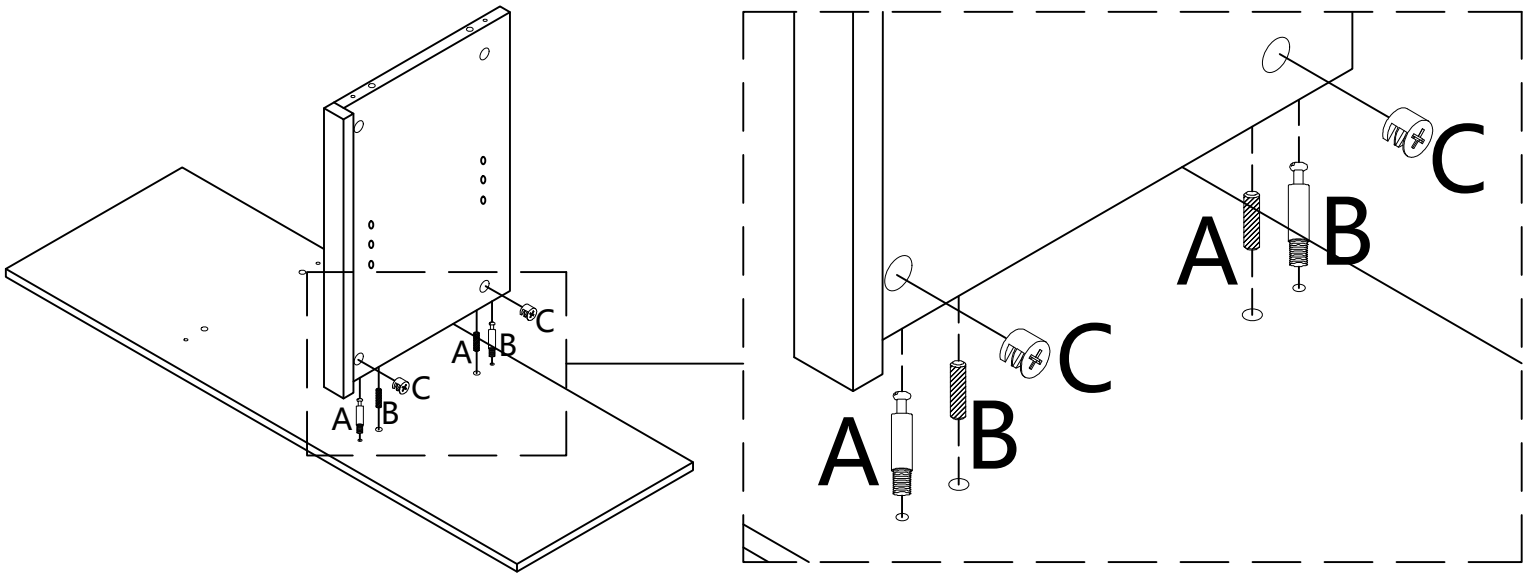


How do we install the wood dowel

Insert the wood dowel[B] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

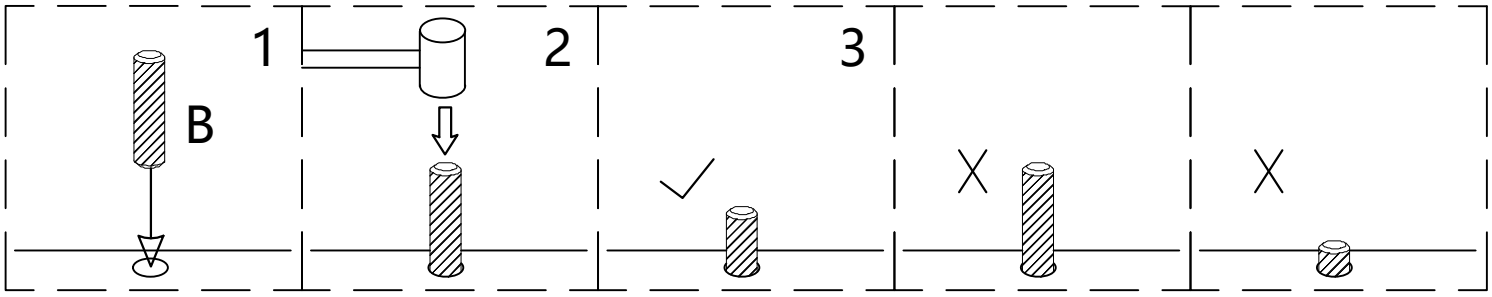

CAM LOCK SYSTEM OPERATION

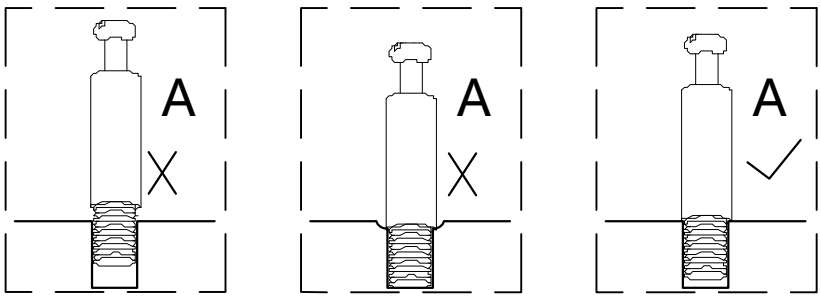


1. Screw the cam bolt [A] into the threaded insert on the panel.

2. Connect both panels together making sure cam bolt [A] goes into the pre-drilled large hole on the end of panel for cam lock [C].


3. Insert the cam lock [C] into the pre-drilled large hole on the panel. Make sure the cross slot of cam lock [C] faces out.

4. Rotate the cam lock [C] clockwise with a supplied screwdriver to lock the cam bolt [A] in place.

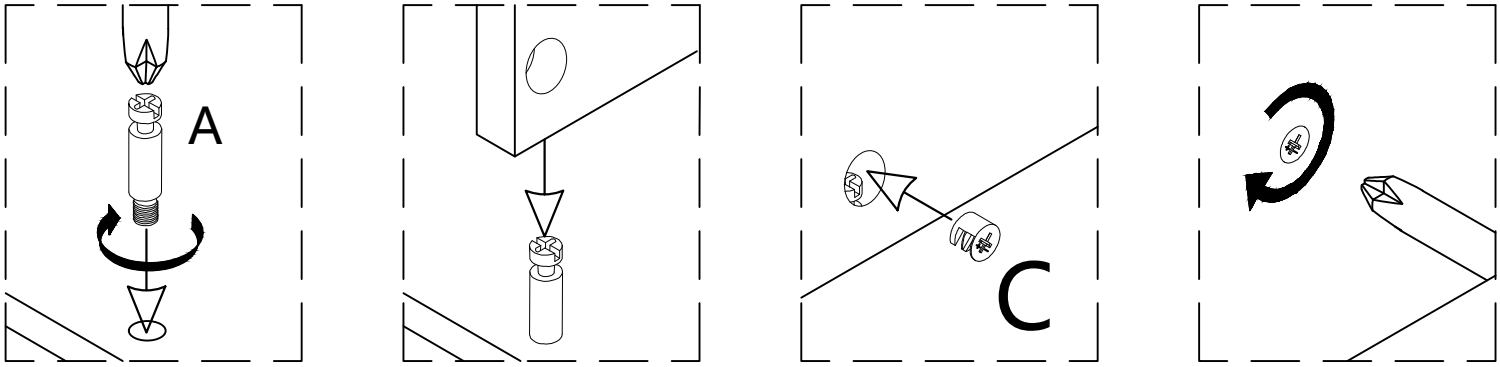


You are now ready to assemble the dresser

Before installation, observe each structure of the drawer dresser. The drawer dresser consists of two main parts. You will assemble the chest first, and then install the three small drawers and four larger drawers. We should keep all track slides on the dresser body in one direction like the below finished look.

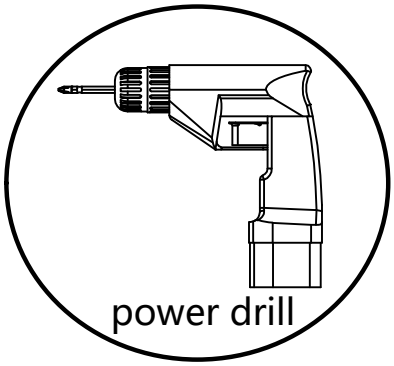


We recommend using a power drill to assemble.

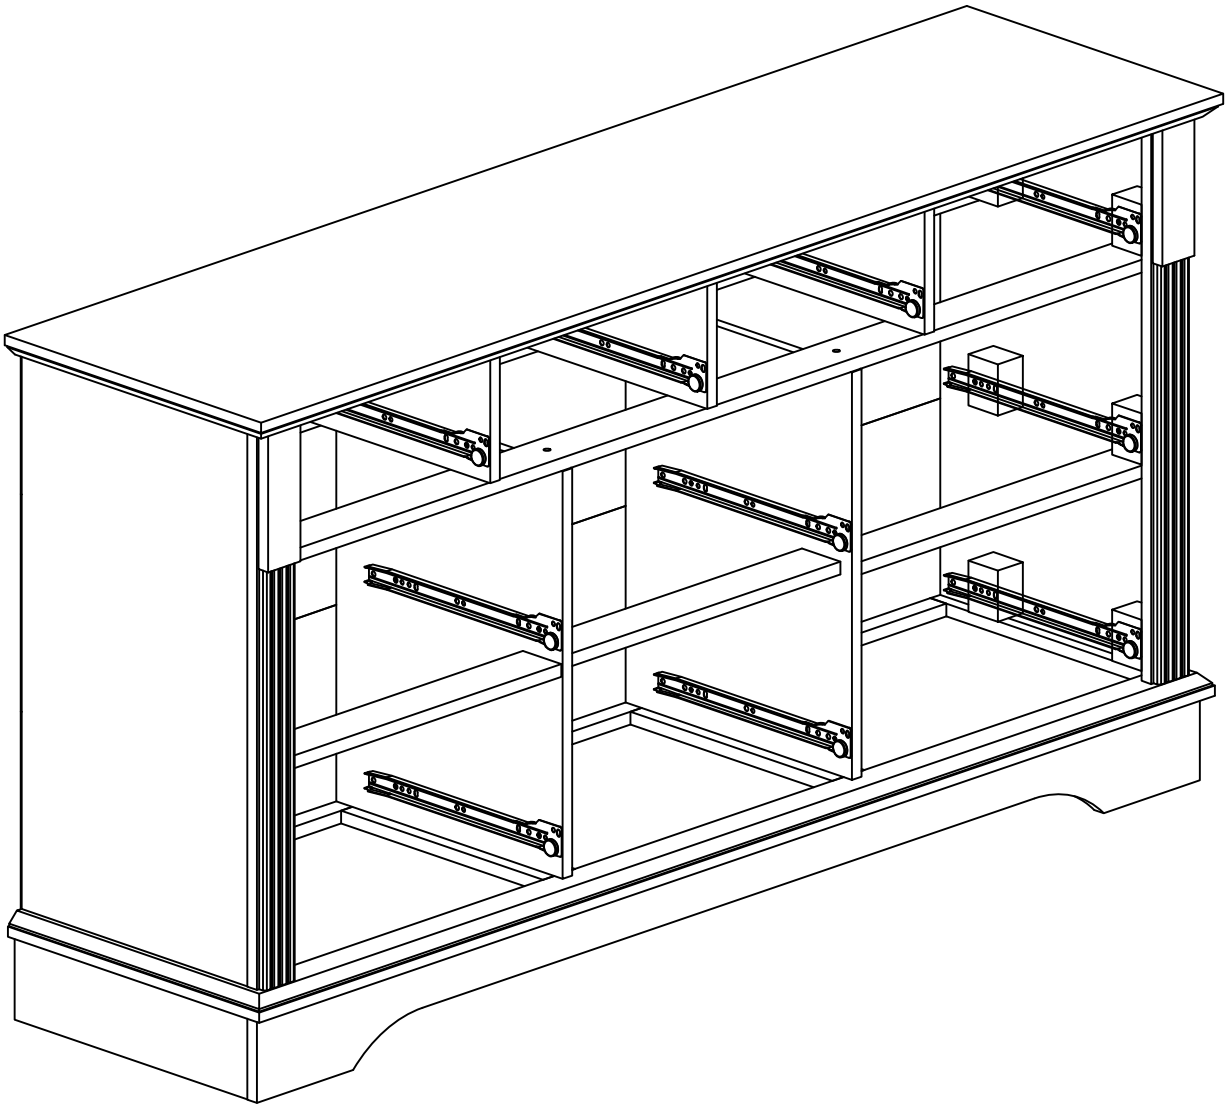


Step 1-1


J	3 pcs	H	6 pcs


-Install the drawer slides (J) on the left side panel (2). There is a CL sign on the track. We have 10 X (J), one batch (J) has one CL track. So we need to open 3 batches (J) to get 3 CL tracks.
-Screw (H) to tighten the track slides as below shown.

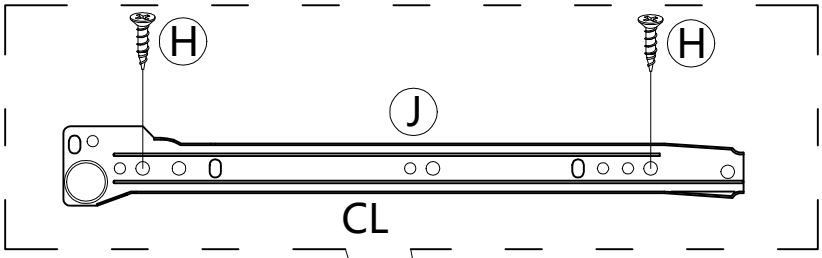

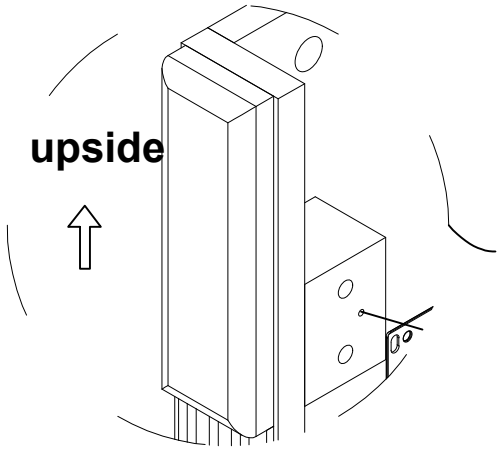


Make sure this end with the carving should be the upside

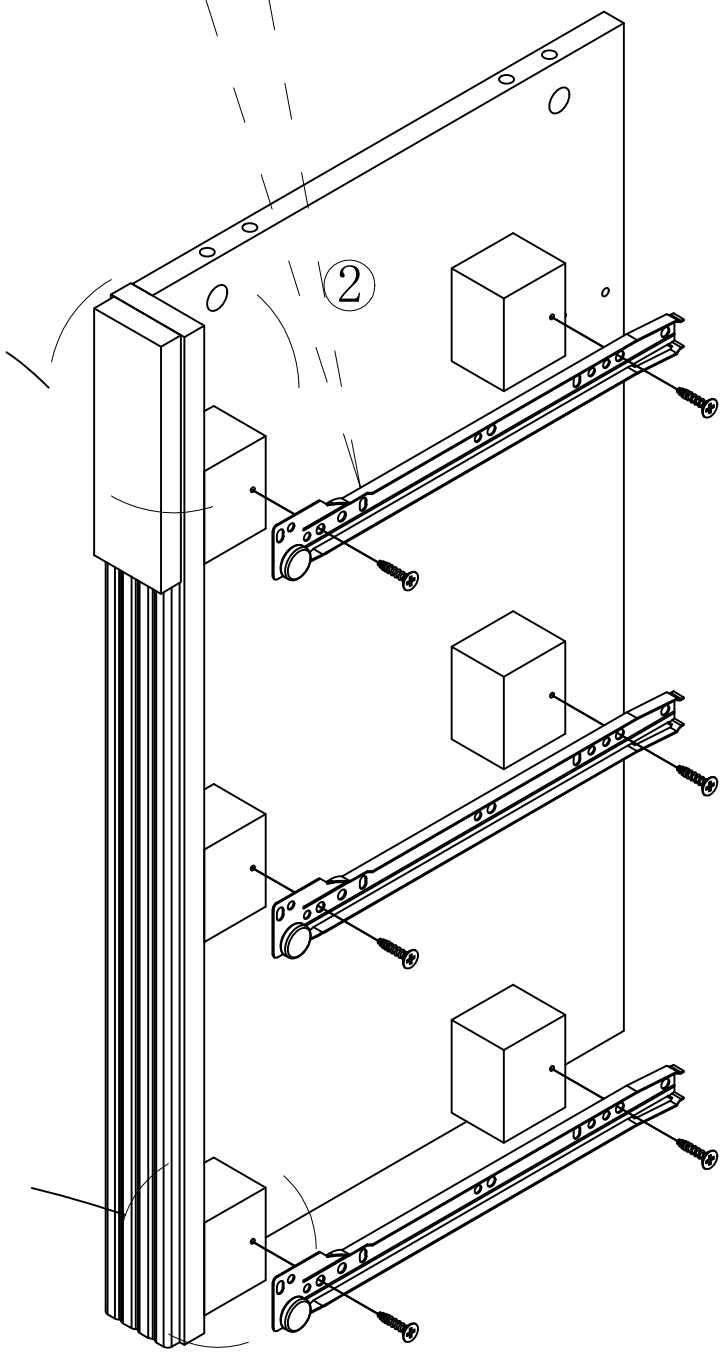


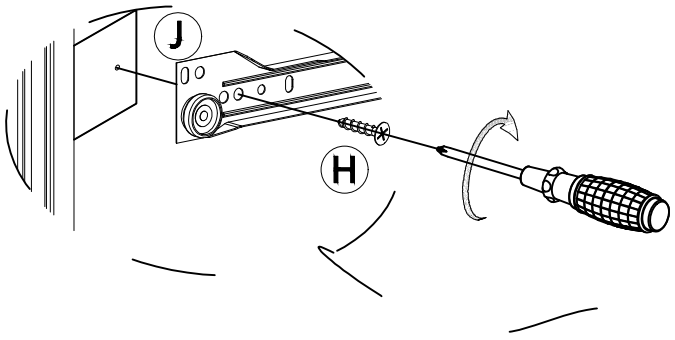


Step 1-2

H  3 pcs

-Screw (H) to tighten the track slides as below shown

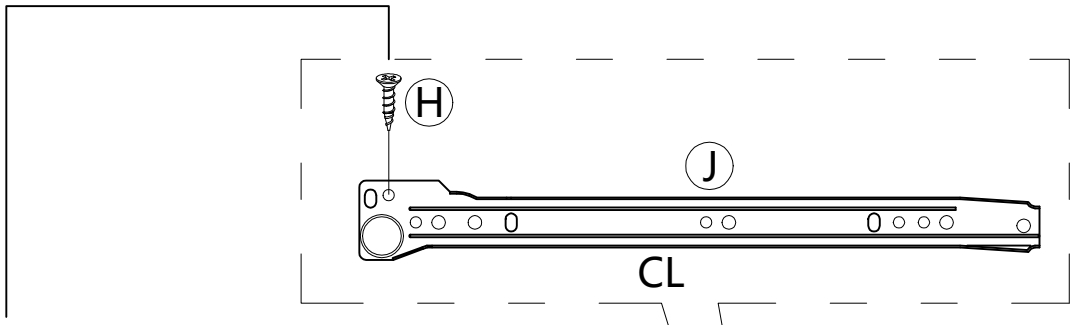


There are no pre-drilled holes corresponds to the UPPER row holes of the tightening. We need to confirm the position of the track slide, then screw the (H) on.

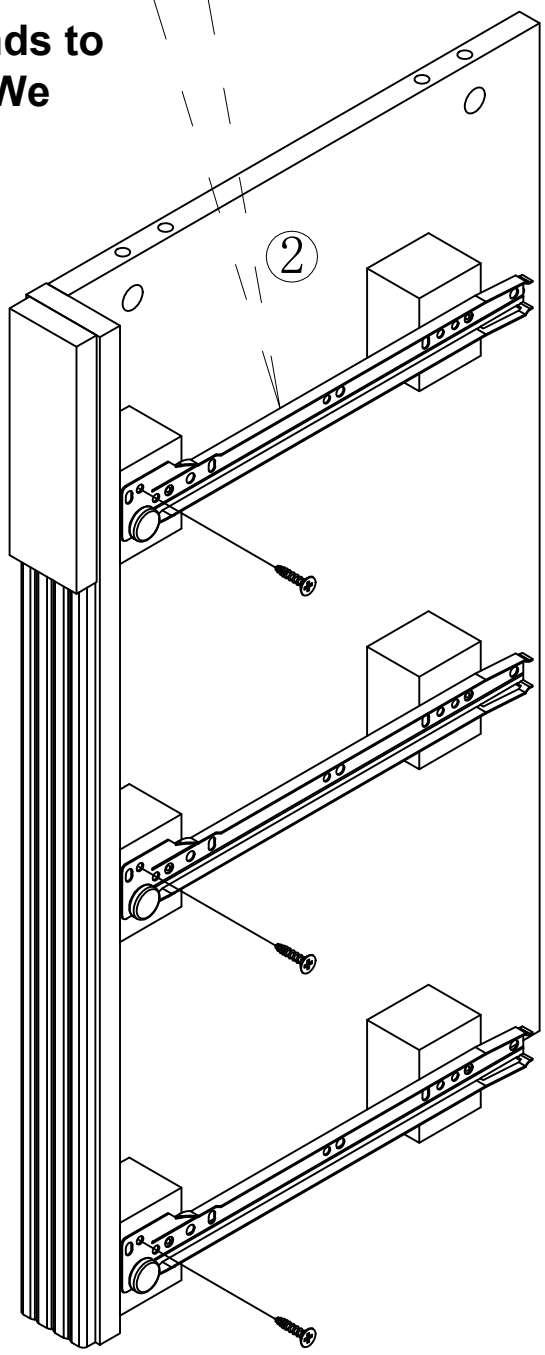



Step 1-3

-Please refer the below look and check carefully after you assembled 3 x CL track slides
-Make sure you used 9x(H) and screw them on the correct holes as below shown
-Make sure the end with roller of the track slides are in one direction

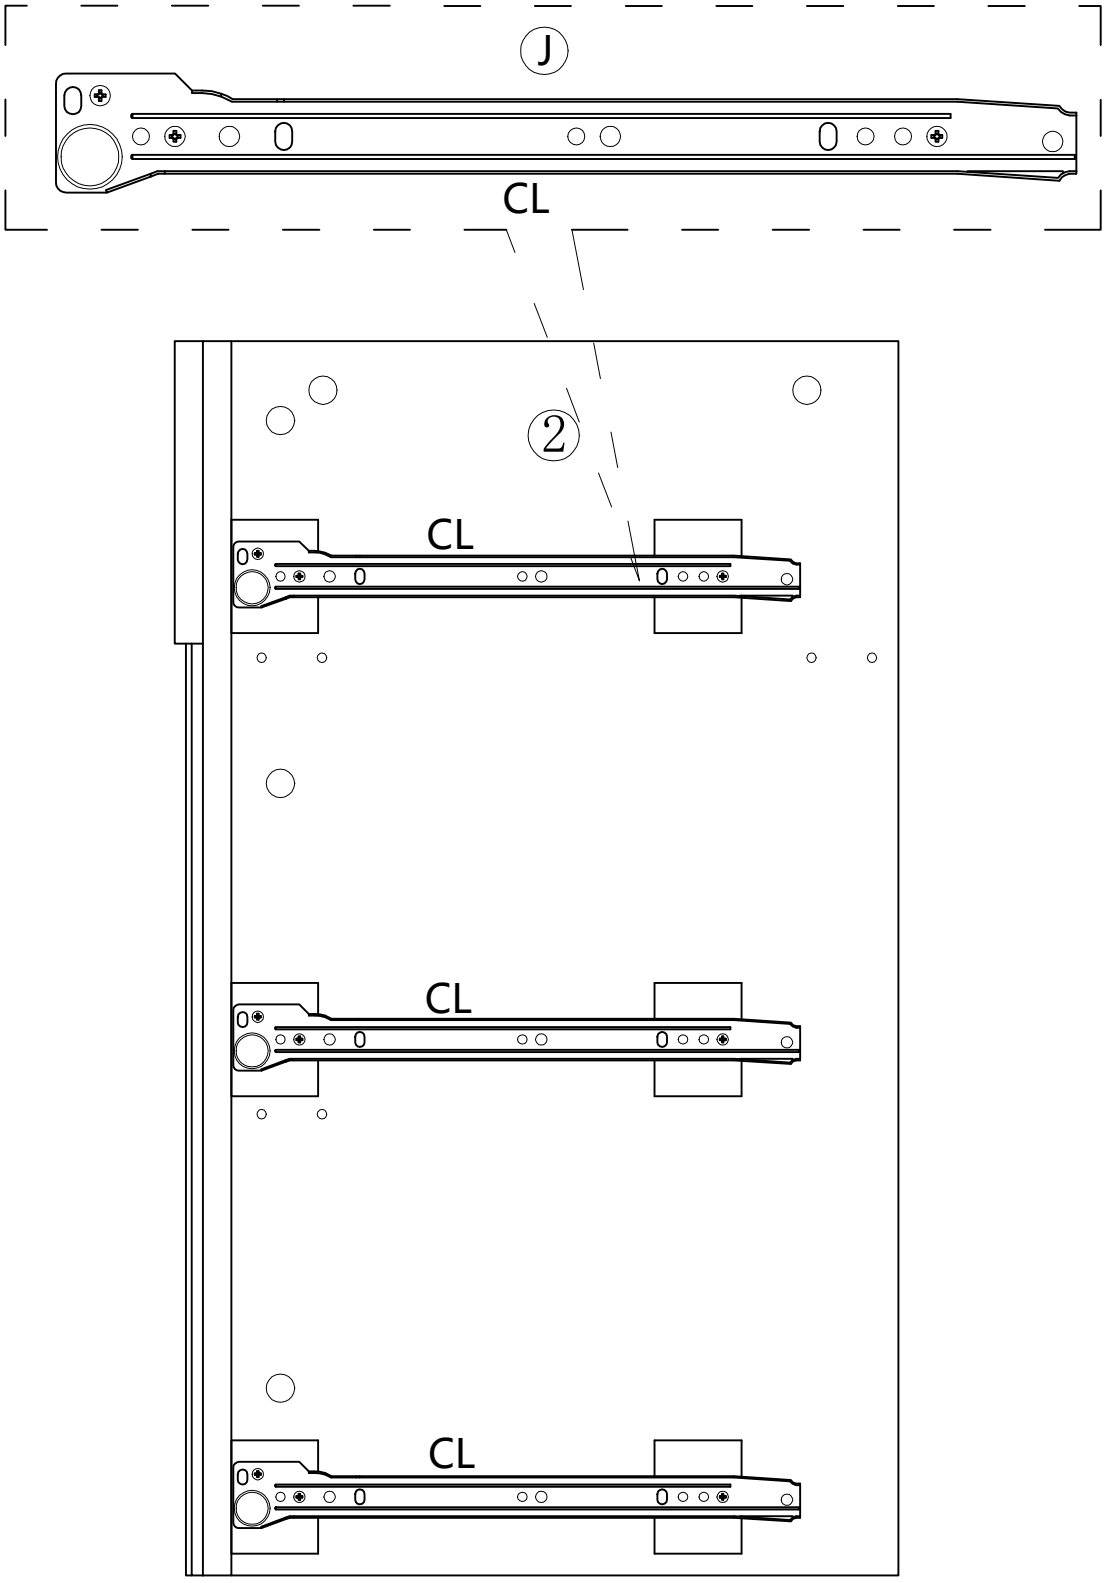



Step 2-1


J  3 pcs

H  6 pcs


-Install the drawer slides (J) on the left side panel (3). There is a CR sign on the track. We have 10 X (J), one batch (J) has one CR track. So we need to open 3 batches (J) to get 3 CR tracks.
-Screw (H) to tighten the track slides as below shown.

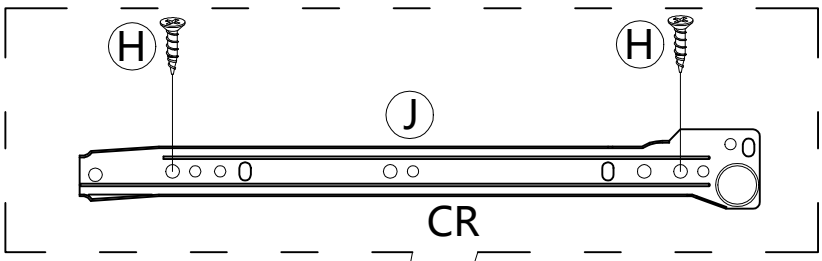

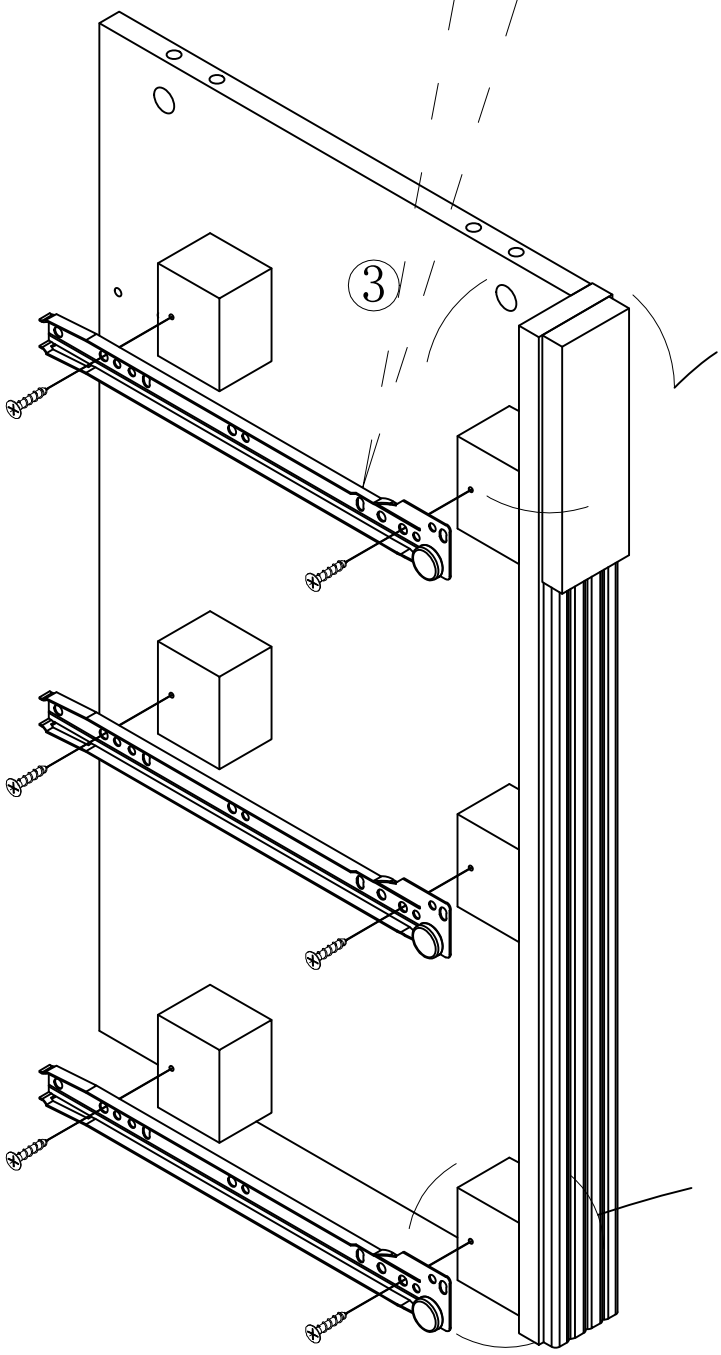


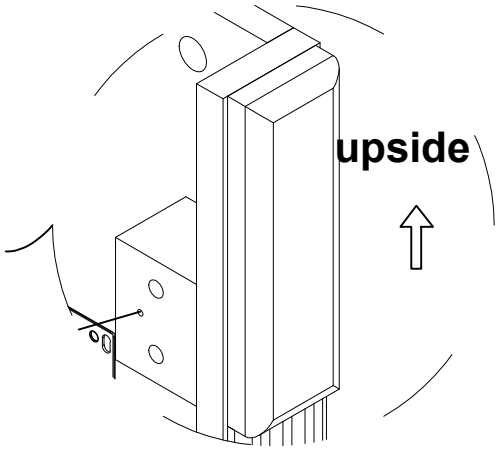


Make sure this end with the carving should be the upside

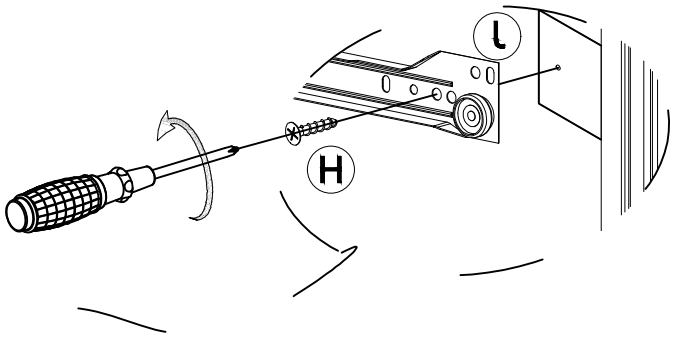


Step 2-2

H  3 pcs

-Screw (H) to tighten the track slides as below shown

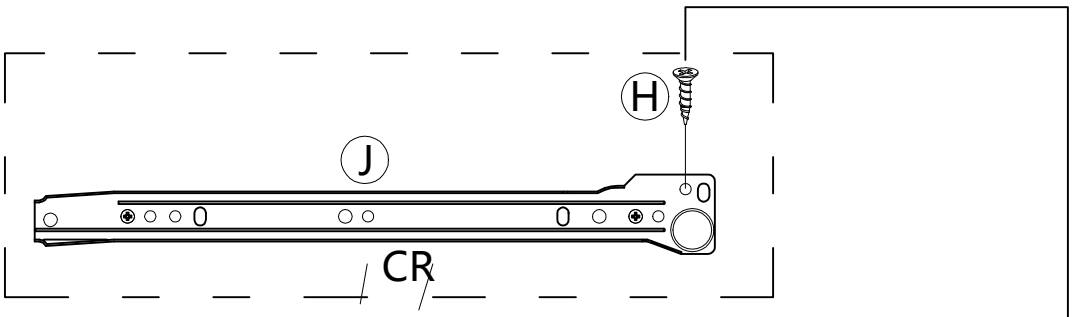


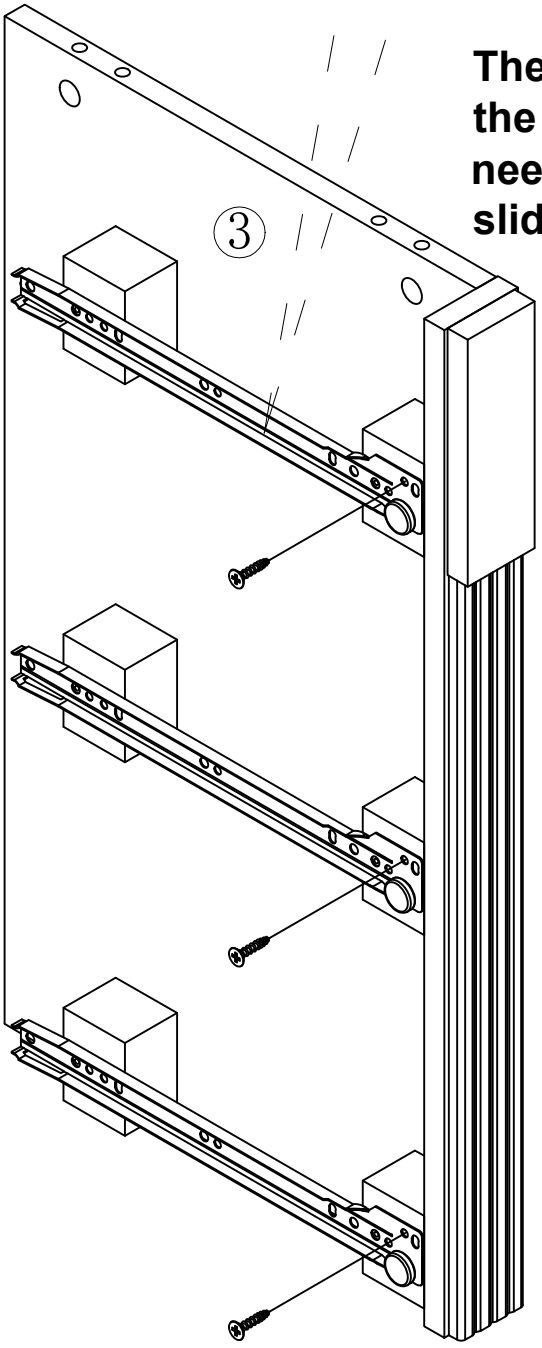

There are no pre-drilled holes corresponds to the UPPER row holes of the tightening. We need to confirm the position of the track slide, then screw the (H) on.

Step 2-3


-Please refer the below look and check carefully after you assembled 3 x CR track slides
-Make sure you used 9x(H) and screw them on the correct holes as below shown
-Make sure the end with roller of the track slides are in one direction

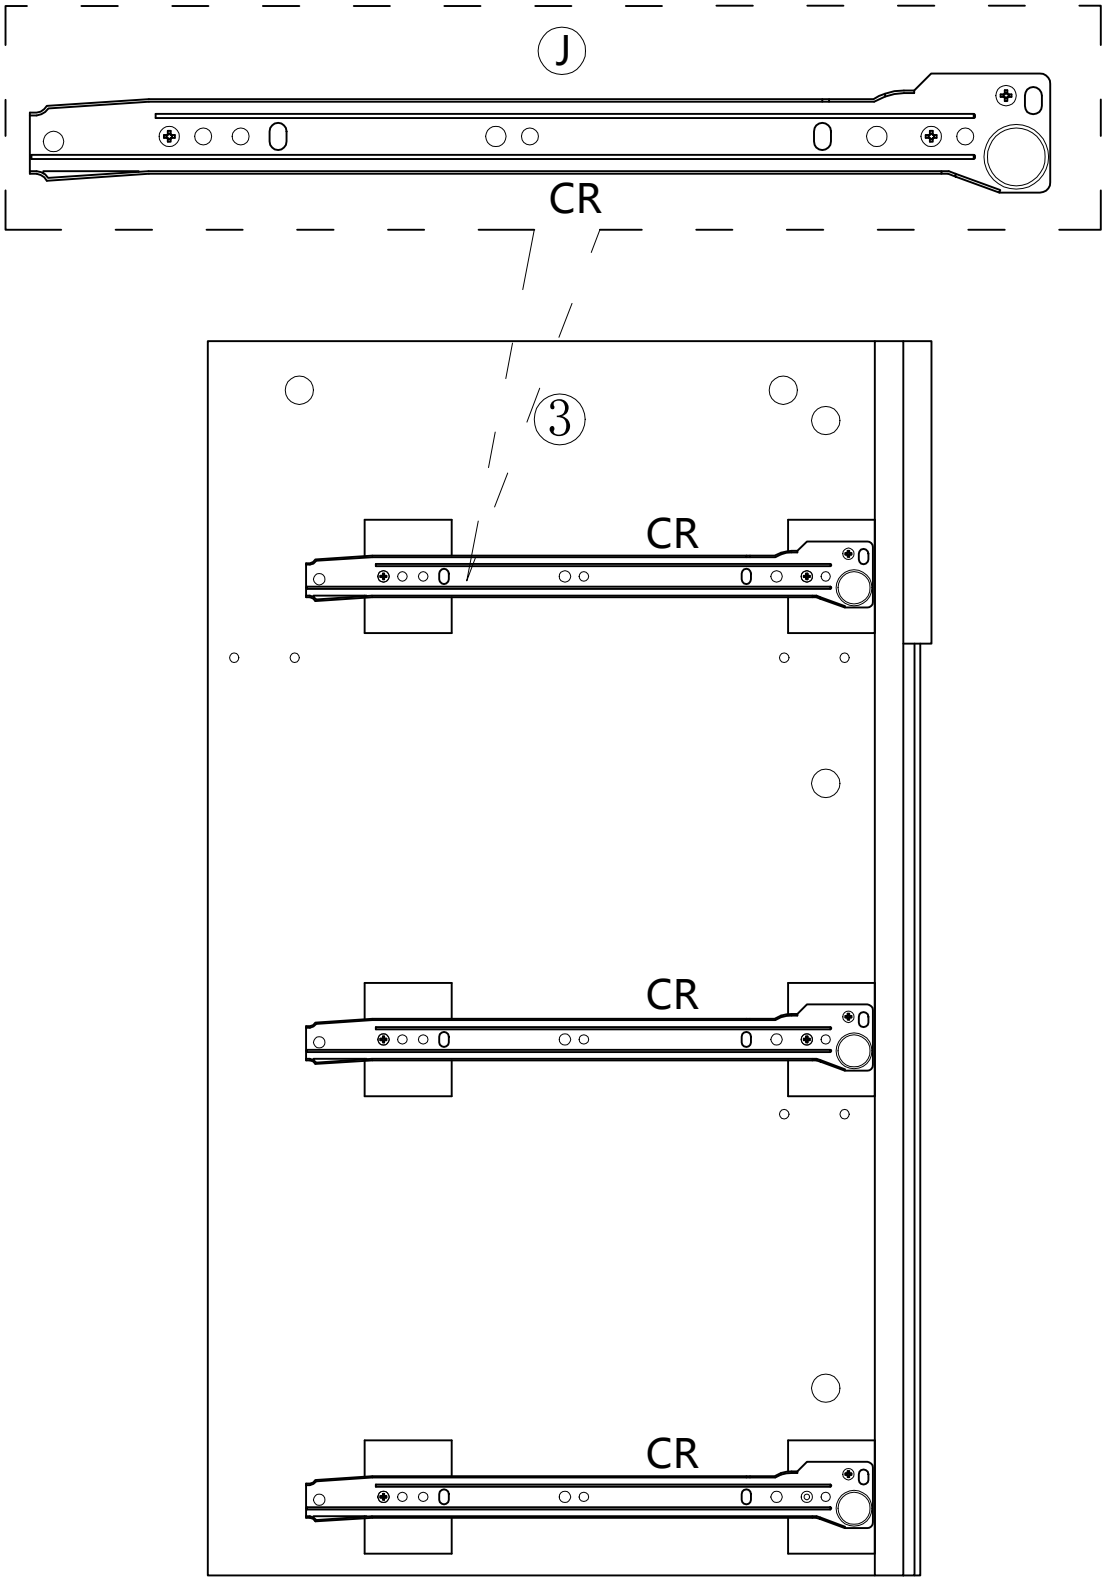

Step 3


-The correct installation is shown in the picture below, please check it first before starting the installation.
-On one panel (9), make sure the end with roller of the 2 track slides are in one direction

CR track should be assembled on this side without holes of the panel (9)


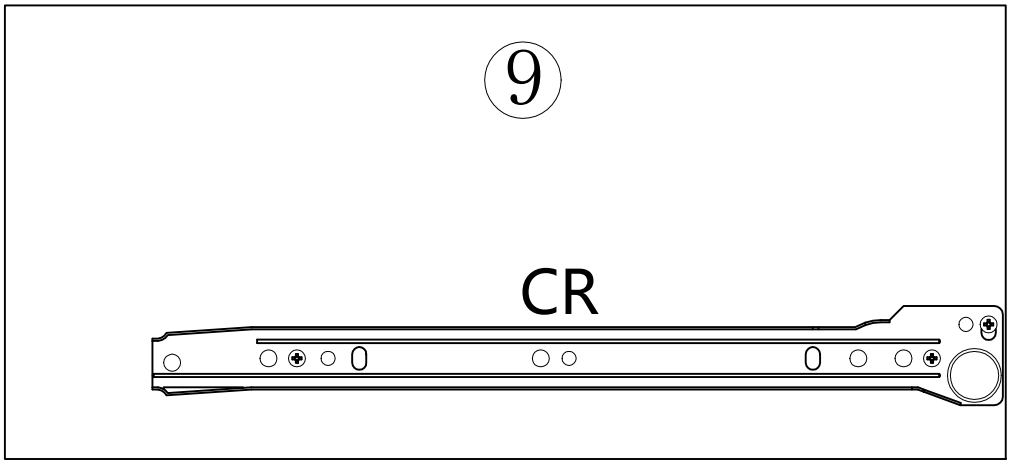


X 3


CL track should be assembled on this side with 2 big holes of the panel (9)

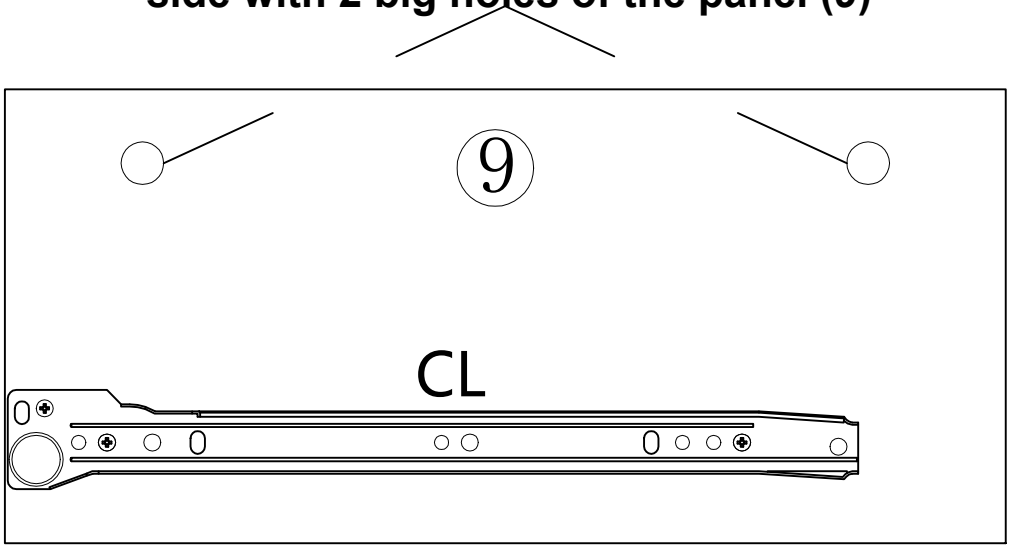


X 3

Step 3-1	J  3 pcs	H  9 pcs


-Install the drawer slides(J) on the right side of upper middle partition panel(9).
-There is a CR sign on the track.Install CR track on the side without 2 big holes of panel (9)
-Screw(H)to tighten the track slides as below shown.

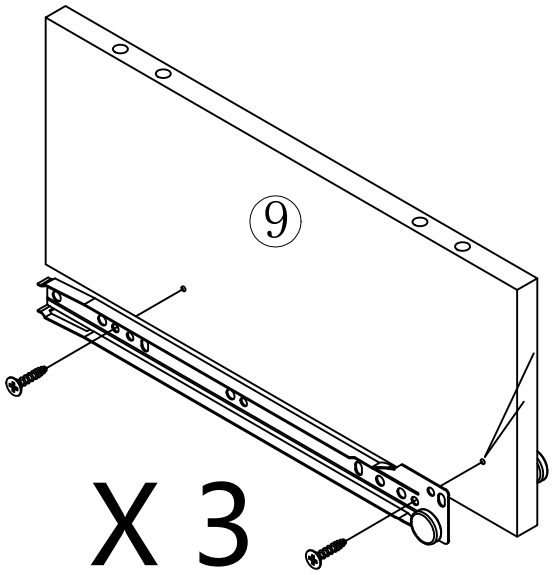


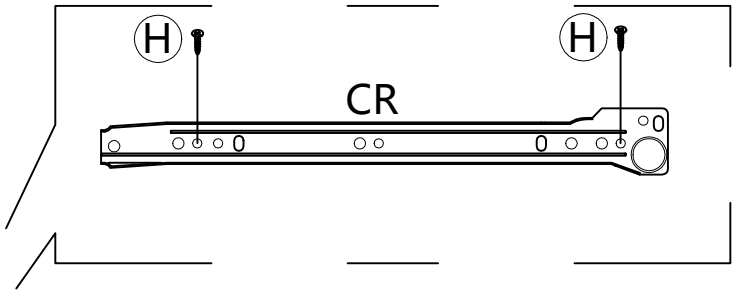


-Screw 2x (H) to the correct holes as below shown

There are no pre-drilled holes corresponds to the UPPER row holes of the tightening. We need to confirm the position of the track slide, then screw the (H) on.

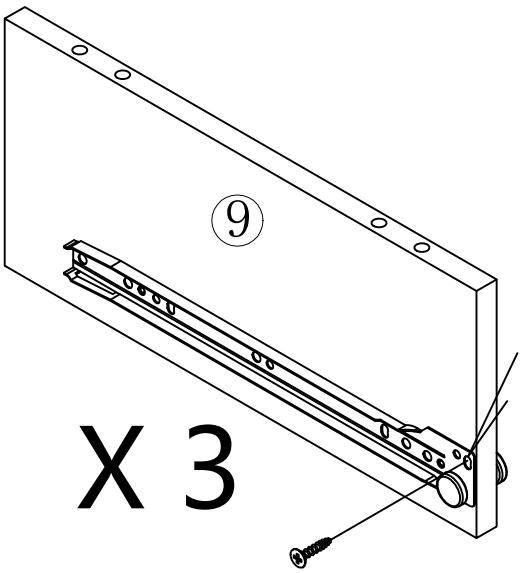


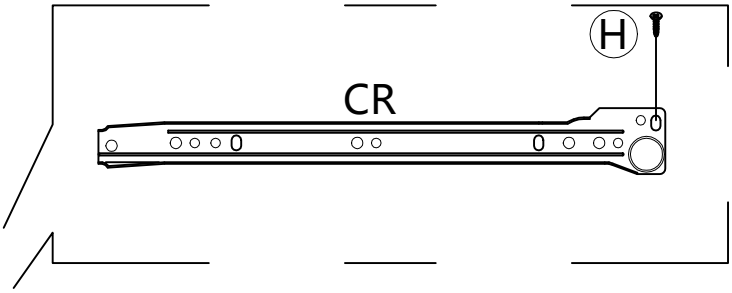


Step 3-2

J 


3 pcs

H  9 pcs


-Install the drawer slides(J) on the right side of upper middle partition panel (9).
-There is a CL sign on the track. Install CL track on the side with 2 big holes of panel (9).
-Screw (H) to tighten the track slides as below shown.

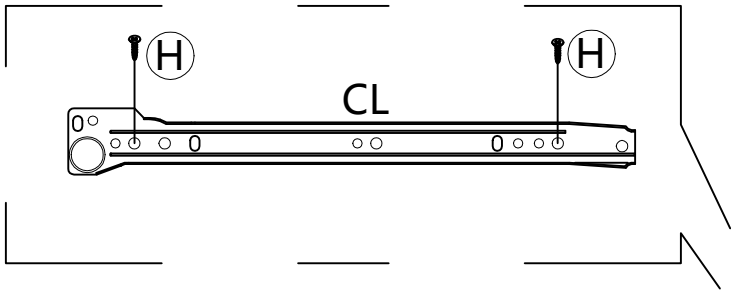


-Screw 2x (H) to the correct holes as below shown

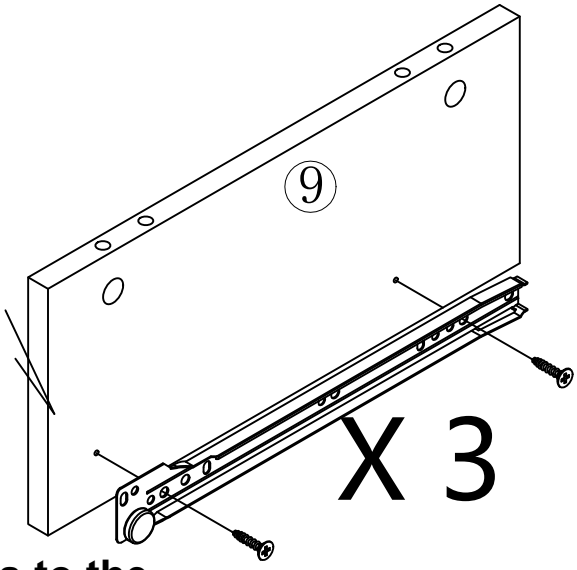

There are no pre-drilled holes corresponds to the upper row holes of the tightening. We need to confirm the position of the track slide, then screw the (H) on.

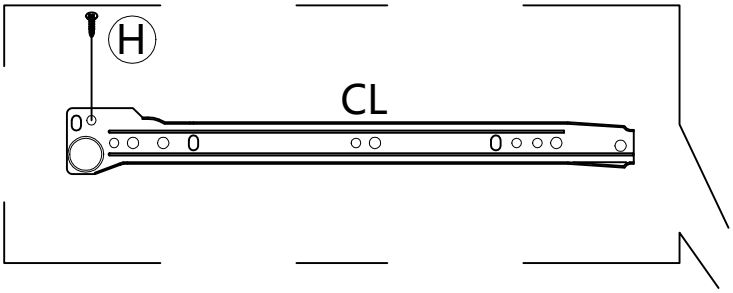


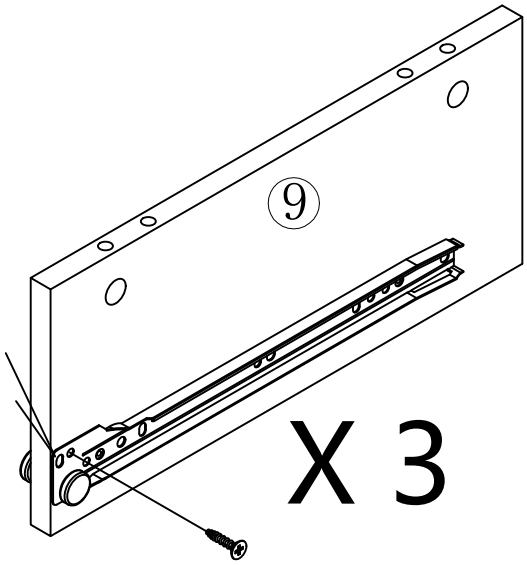

Step 4


-On one panel (4), make sure the end with roller of the 2 track slides are in one direction

Left side

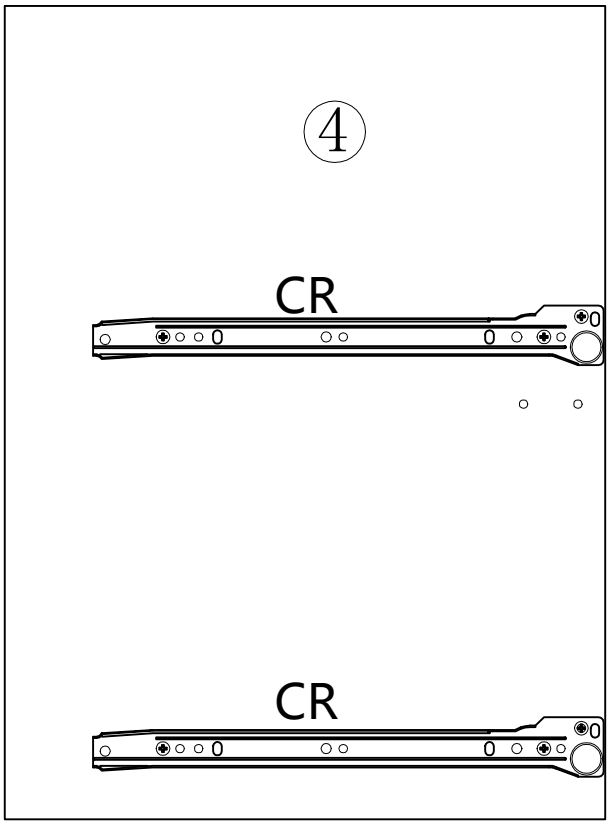

front

Right side

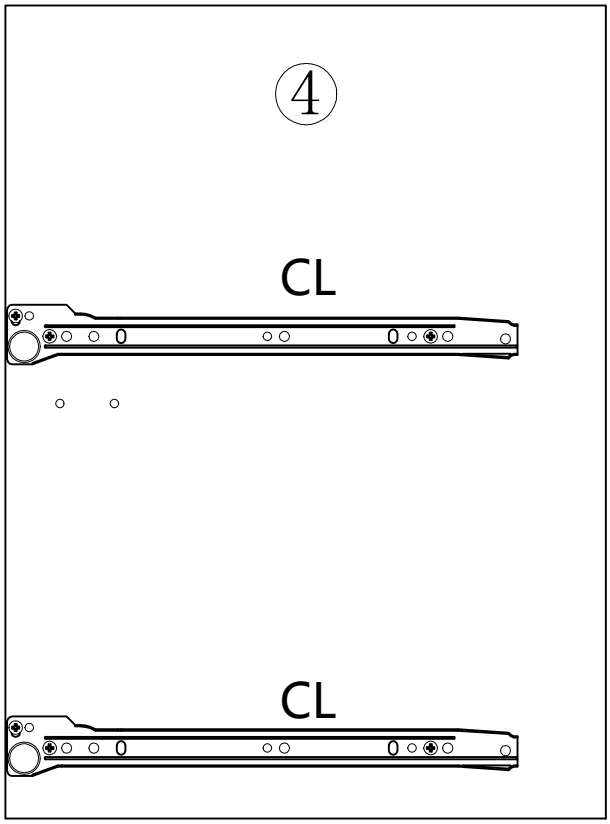



front

Step 4-1


J	2 pcs	H	6 pcs

-Install the drawer slides (J) on the lower left center side panel (4).
-There is a CR sign on the track. Install CR track on the of panel (4).
-Screw(H)to tighten the track slides as below shown.

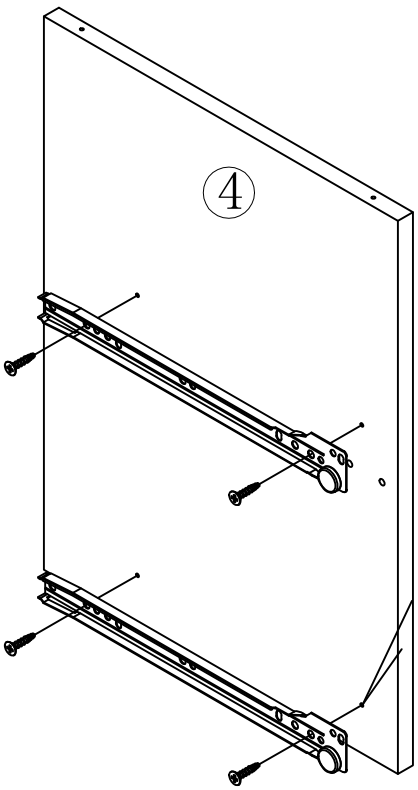


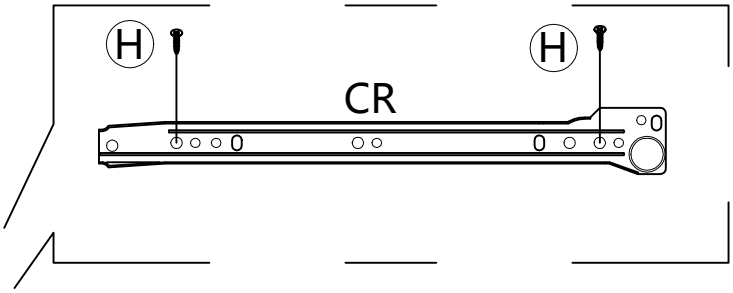


-Screw 2x (H) to the correct holes as below shown

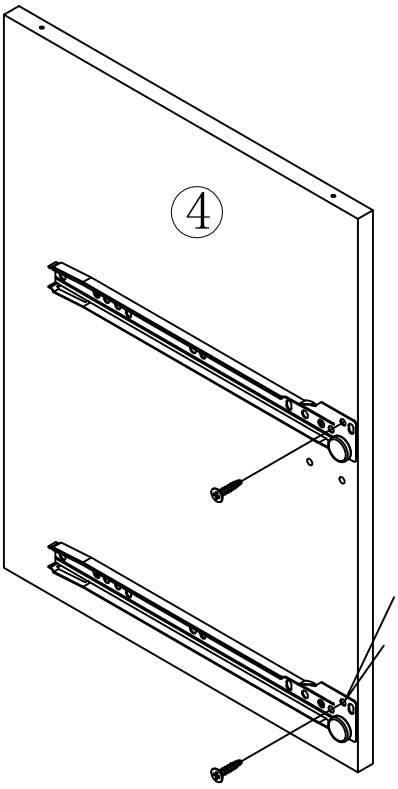


There are no pre-drilled holes corresponds to the UPPER row holes of the tightening. We need to confirm the position of the track slide, then screw the (H) on.

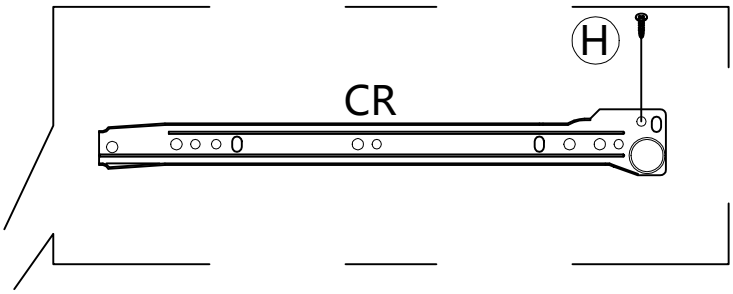


Step 4-2


J  2 pcs

H  6 pcs


-Install the drawer slides (J) on the lower left center side panel (4).
-There is a CL sign on the track. Install CL track on the of panel (4).
-Screw (H) to tighten the track slides as below shown.

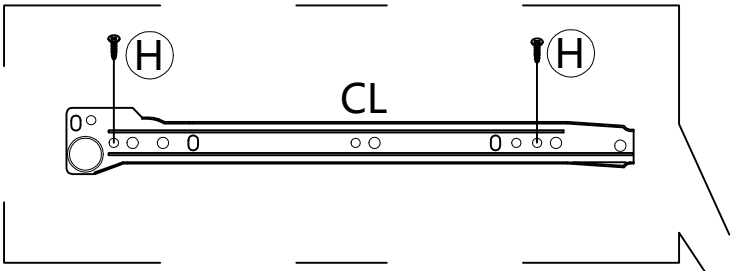


-Screw 2x (H) to the correct holes as below shown

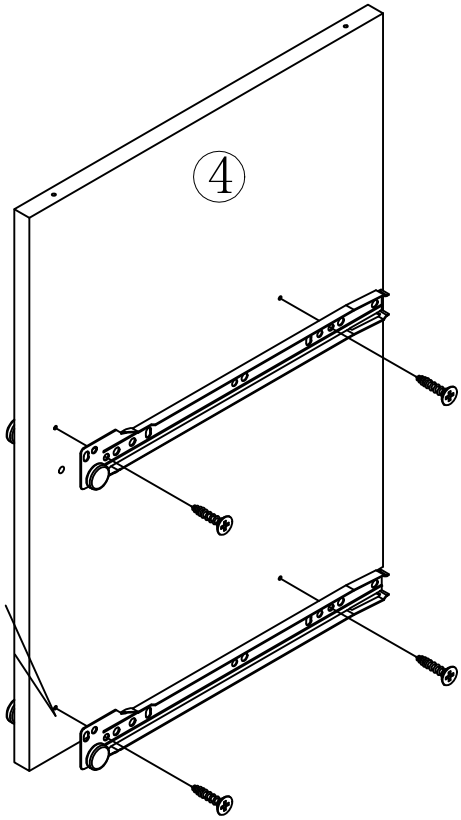

There are no pre-drilled holes corresponds to the upper row holes of the tightening. We need to confirm the position of the track slide, then screw the (H) on.

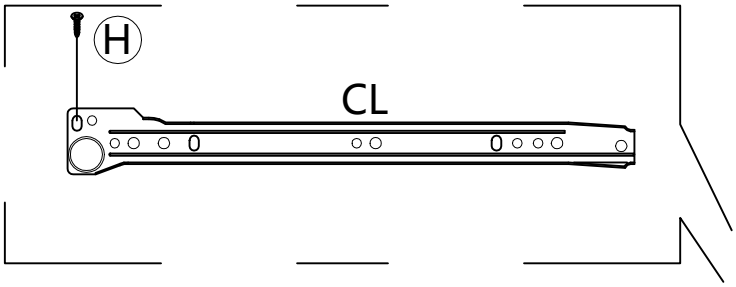


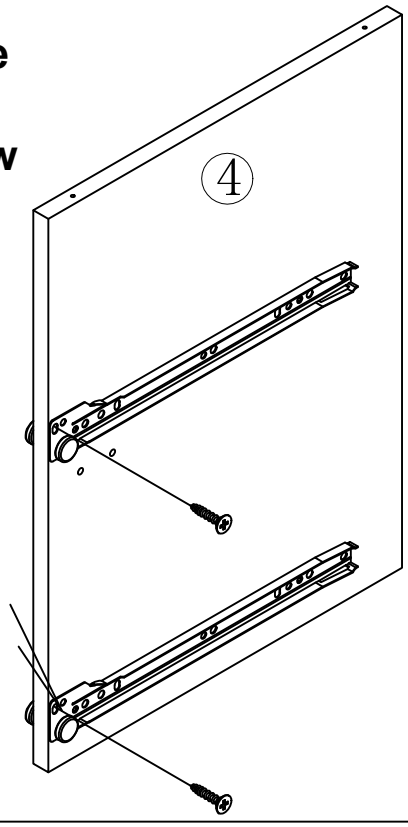

Step 5

-On one panel (5), make sure the end with roller of the 2 track slides are in one direction


Left side

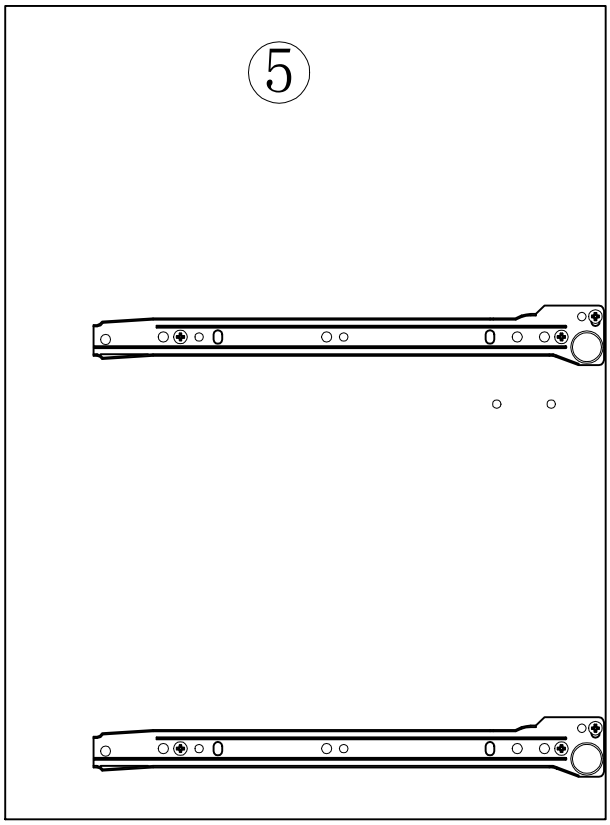


front


Right side

front

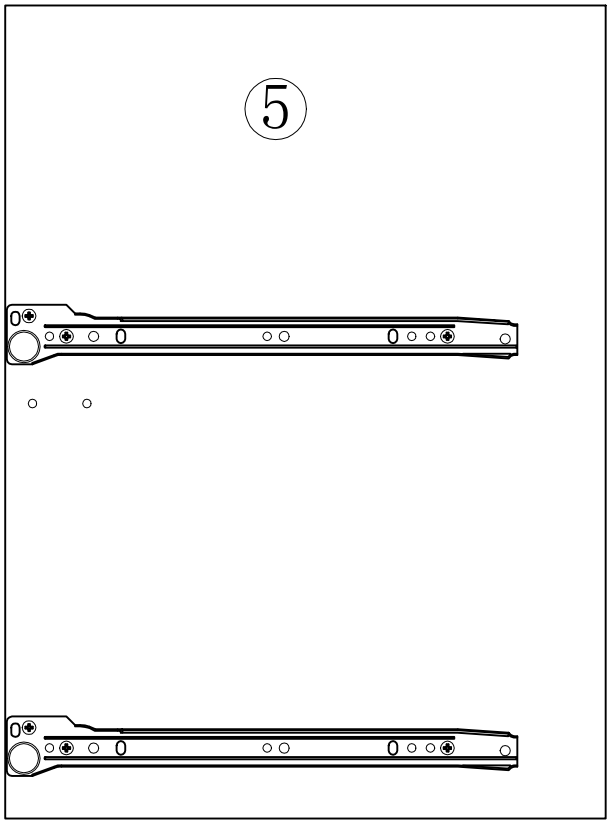



Step 5-1

J  2 pcs


H  6 pcs

-Install the drawer slides (J) on the lower right center side panel (5).
-There is a CR sign on the track. Install CR track on the of panel (5).
-Screw (H) to tighten the track slides as below shown.

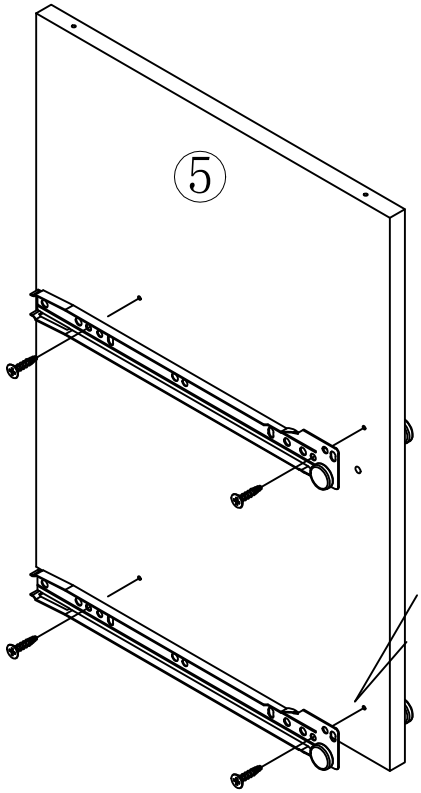


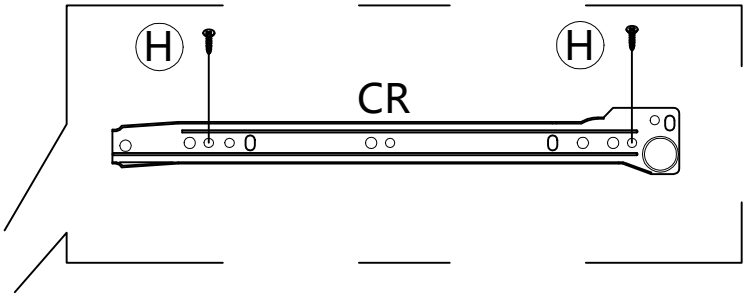


-Screw 2x (H) to the correct holes as below shown

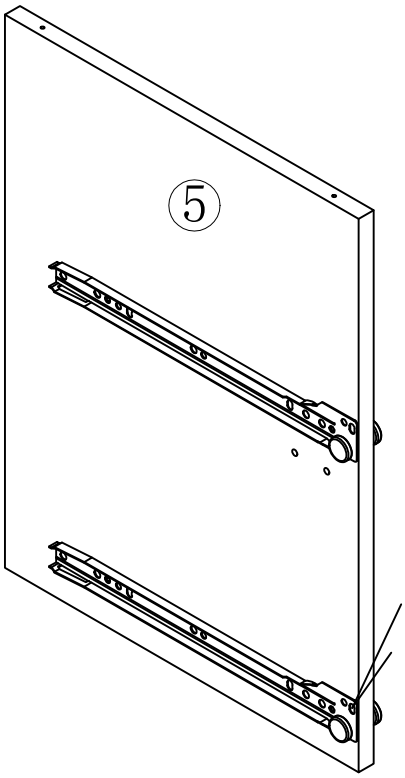


There are no pre-drilled holes corresponds to the UPPER row holes of the tightening. We need to confirm the position of the track slide, then screw the (H) on.

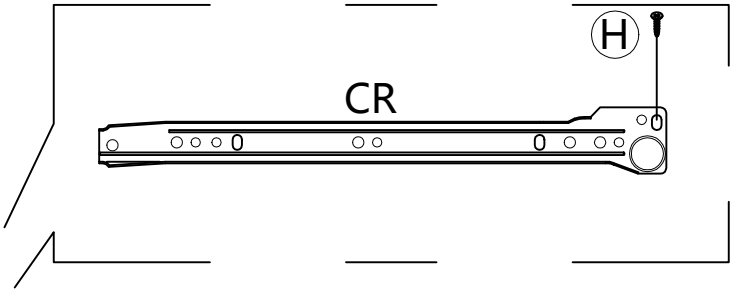



Step 5-2

J  2 pcs

H  6 pcs


-Install the drawer slides (J) on the lower right center side panel (5).
-There is a CL sign on the track. Install CL track on the side of panel (5).
-Screw (H) to tighten the track slides as below shown

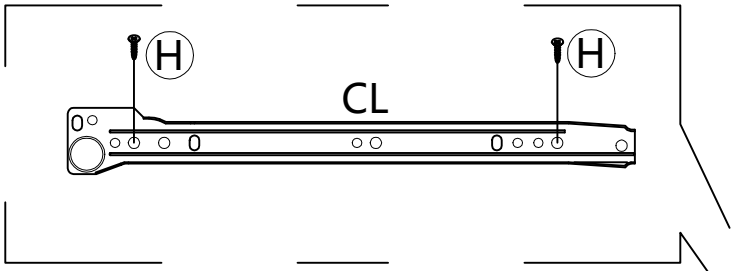


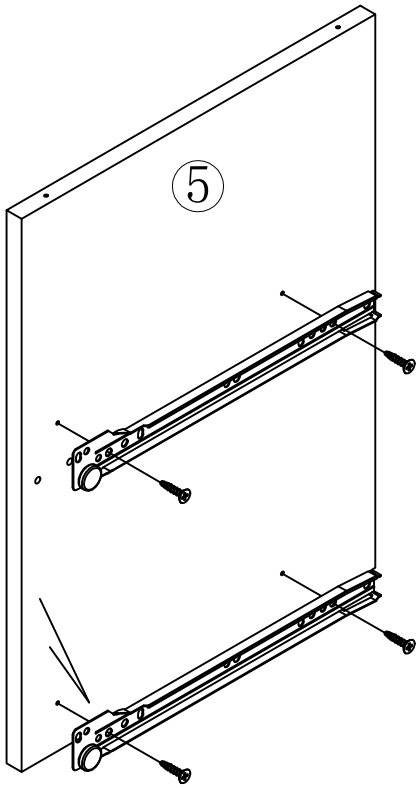

-Screw 2x (H) to the correct holes as below shown


There are no pre-drilled holes corresponds to the upper row holes of the tightening. We need to confirm the position of the track slide, then screw the (H) on.

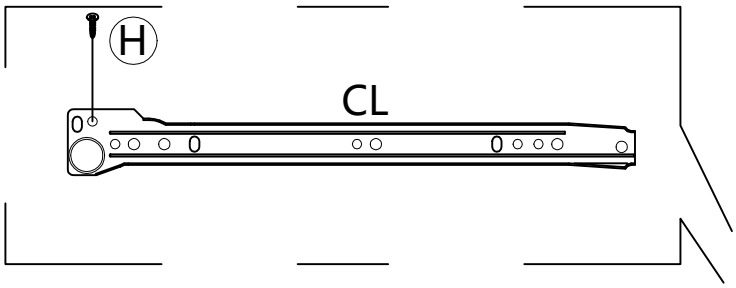

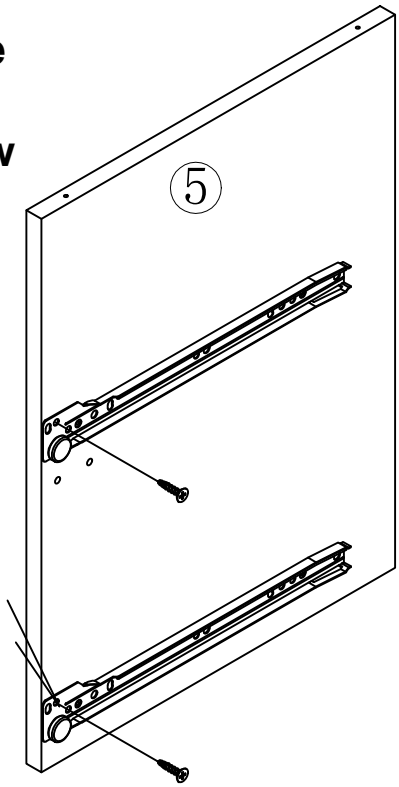

Step 6	A 8 pcs	C 4 pcs


-Screw (A) to (4),(5) as below shown
-Screw (C) to lock (34) and (4), (5) as below shown

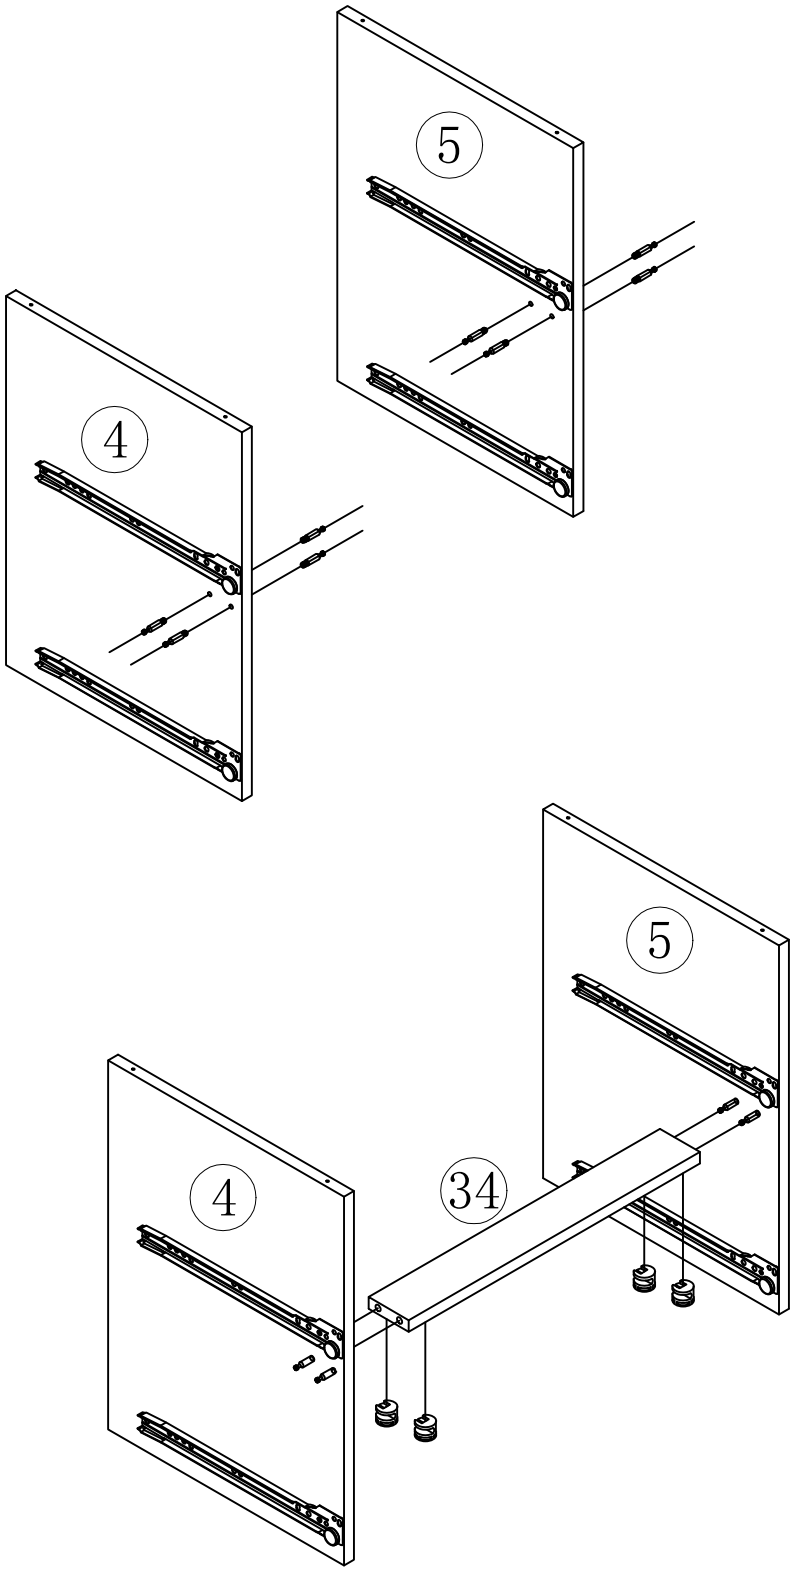

Step 7

D  4 pcs


-Screw (D) to lock (8) and (4), (5) as below shown

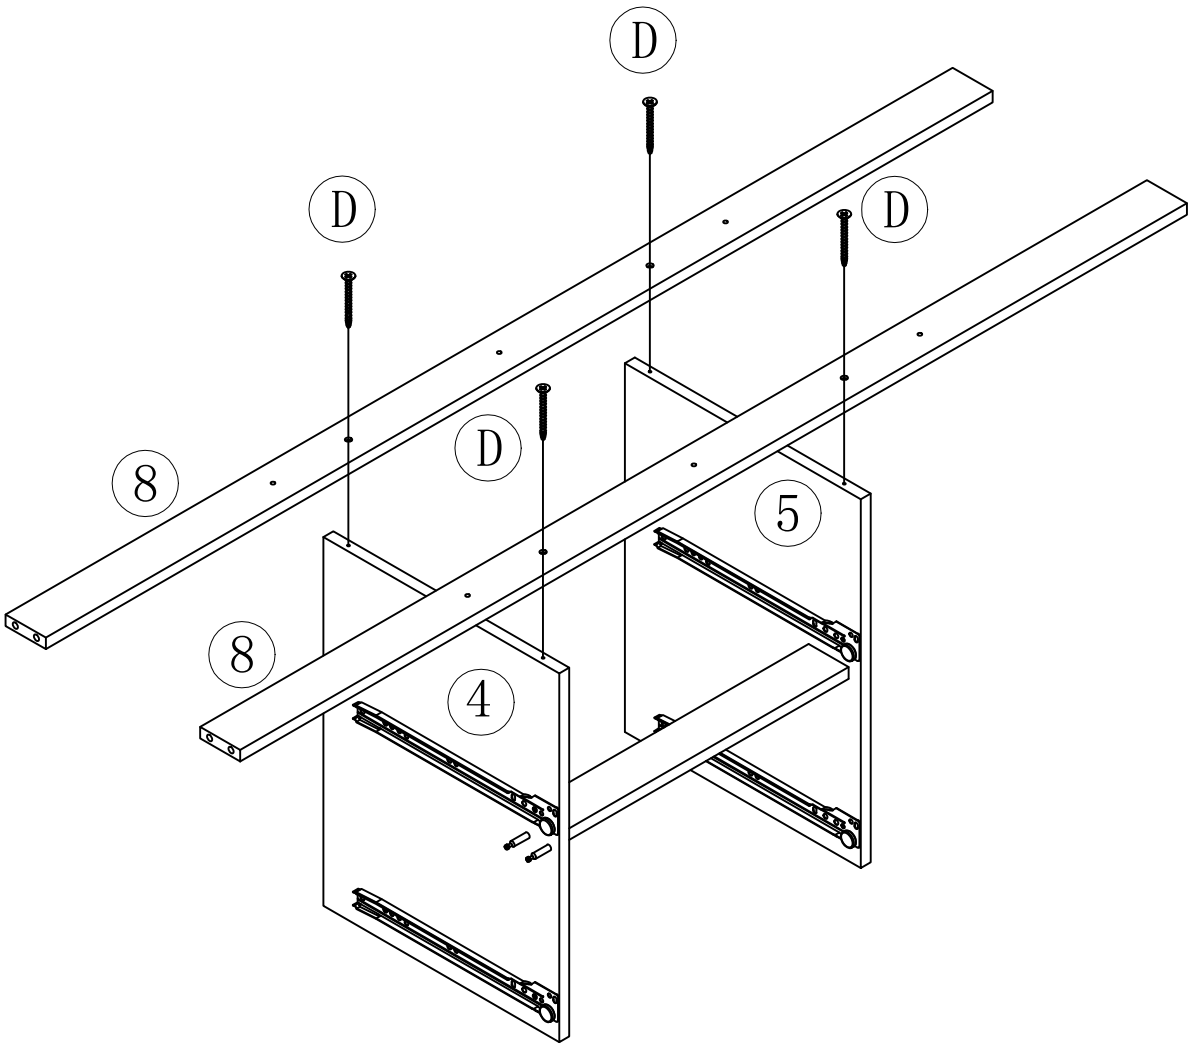

Step 8

D  6 pcs


-Screw (D) to lock (8) and (9) as below shown

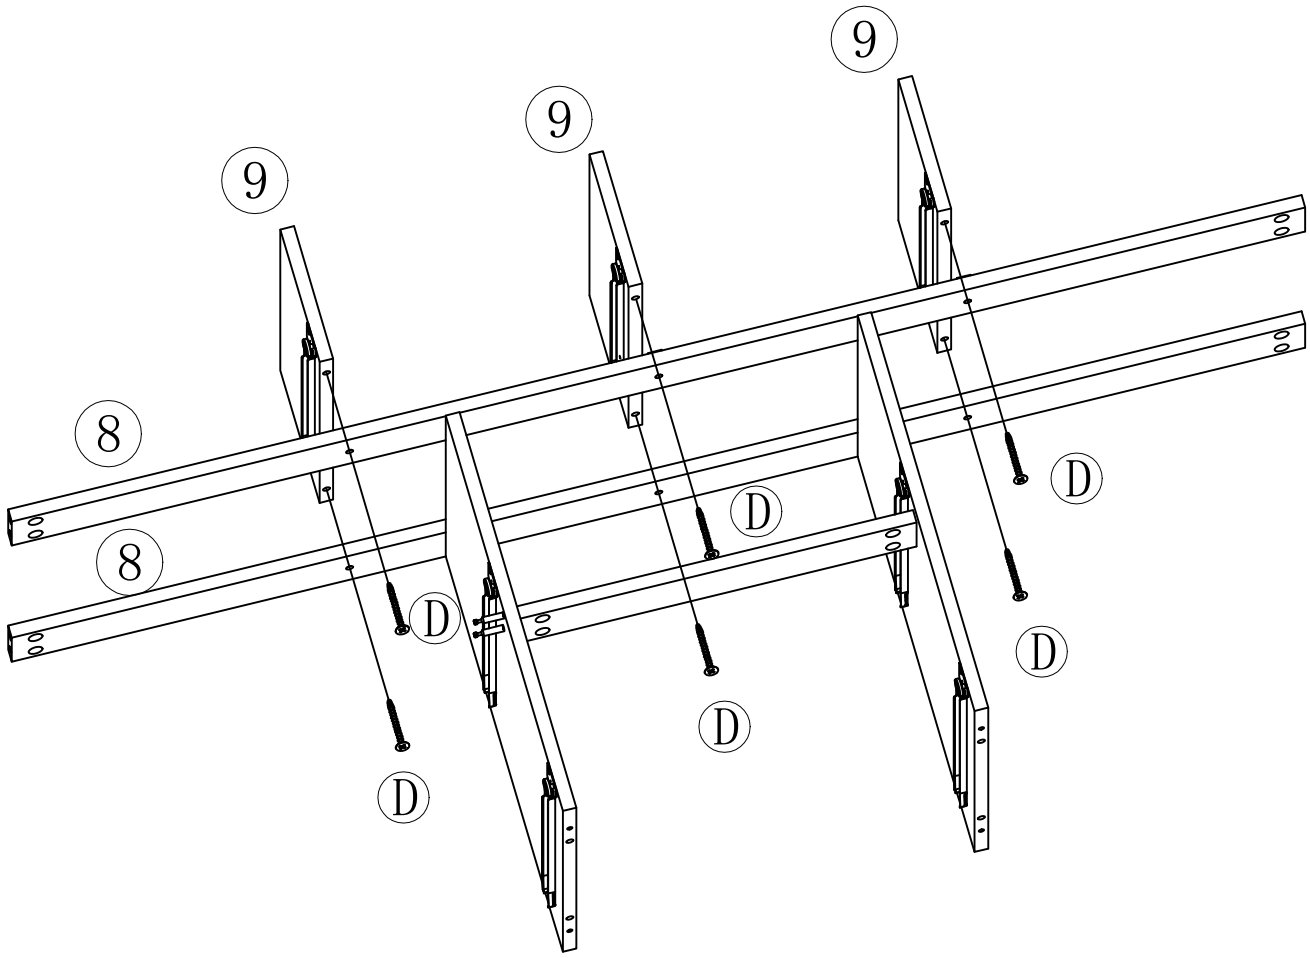


Step 9

C 4 pcs

-Screw (C) to lock (6) and (4), (5) as below shown

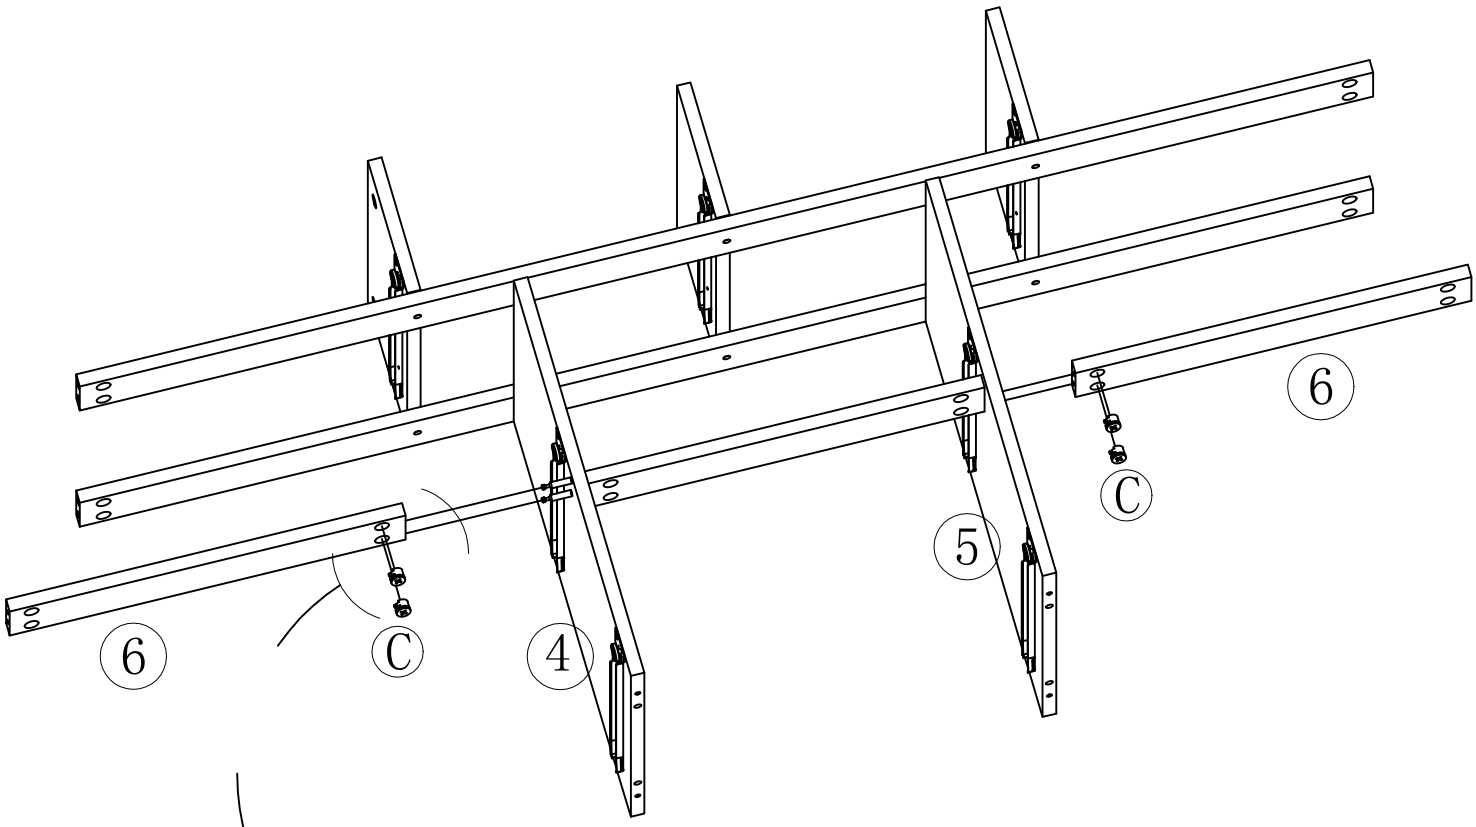


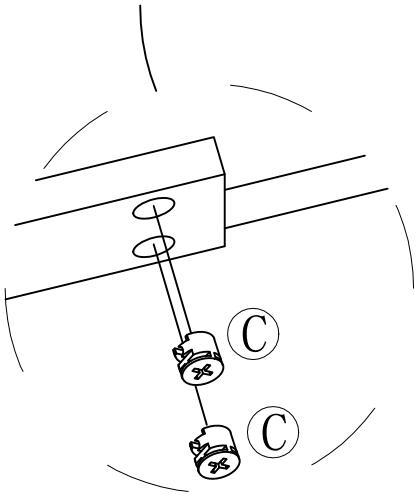


Step 10

A 12 pcs

-Screw (A) to (2),(3) as below shown

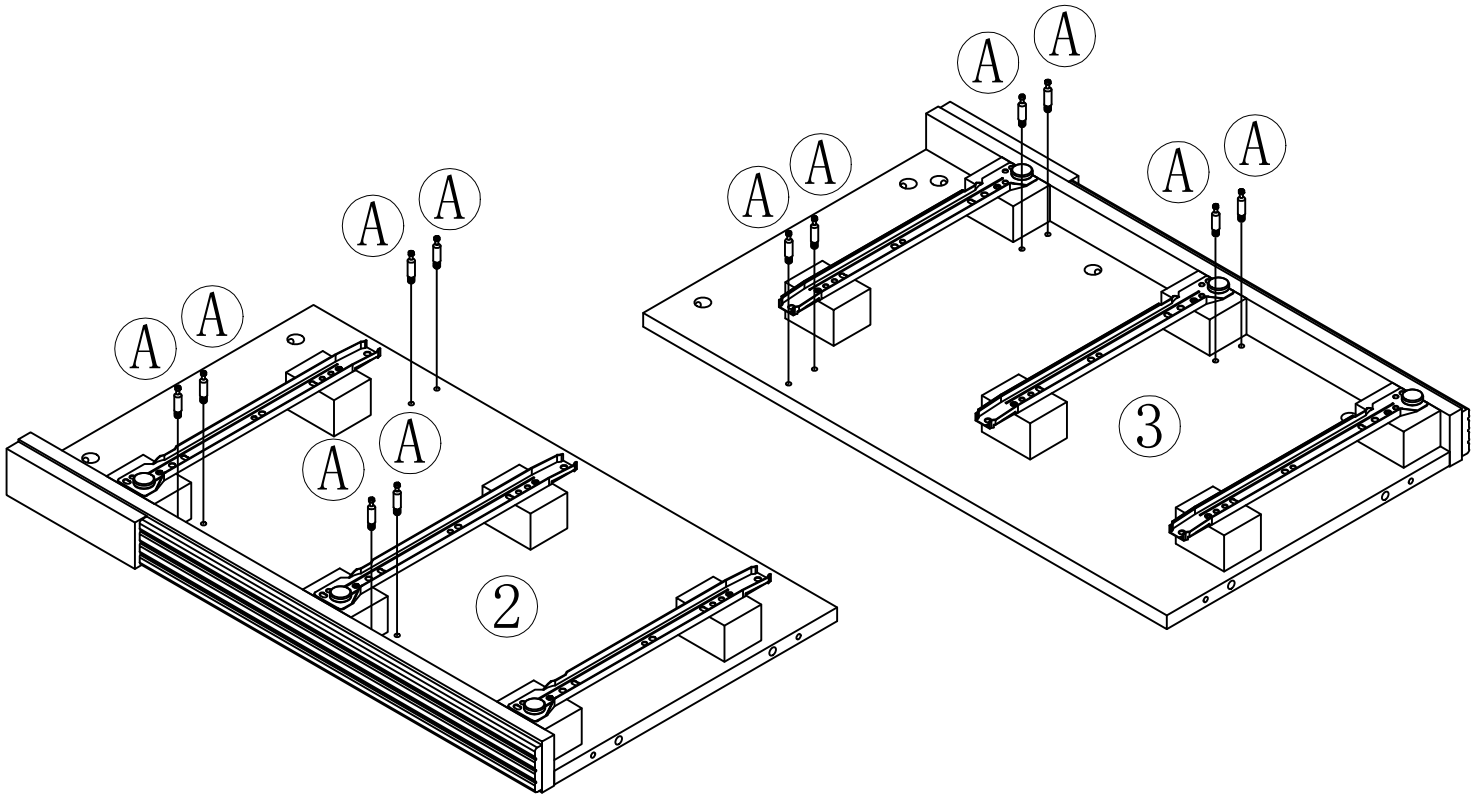


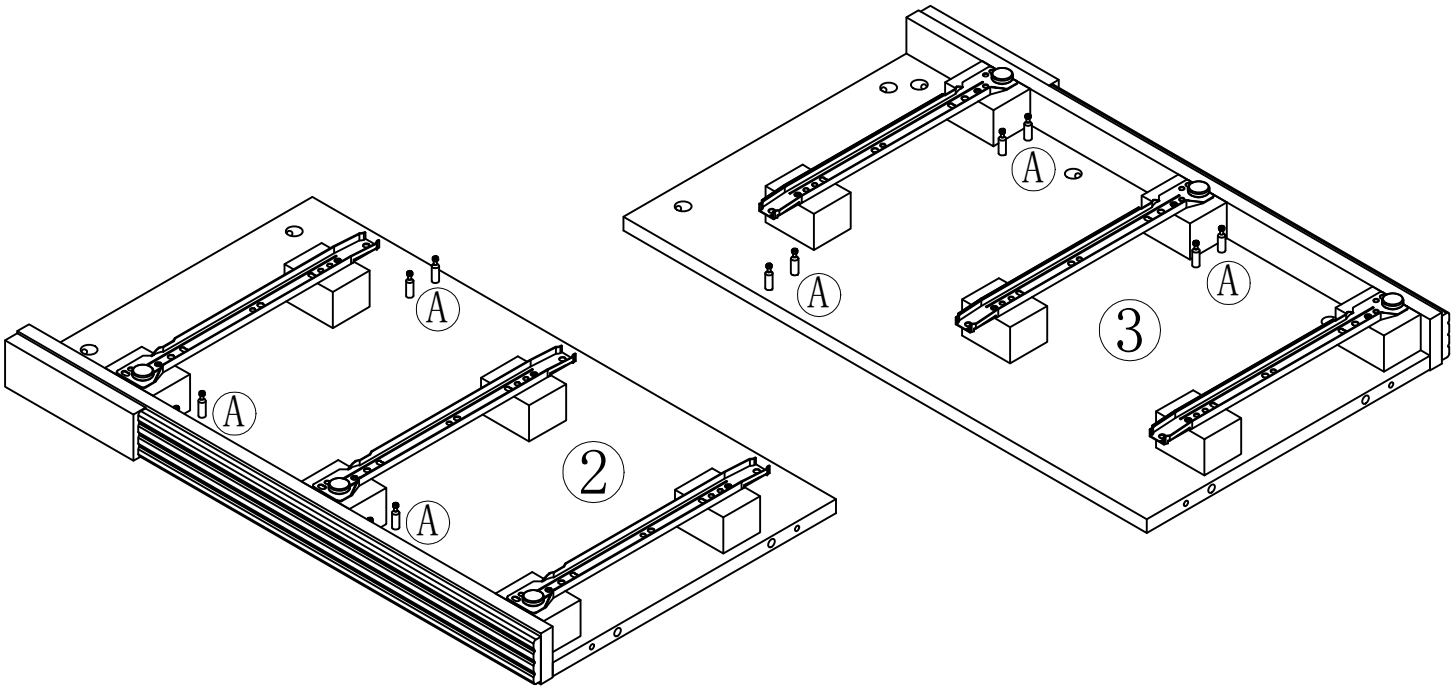

Step 11


C 12 pcs

-Screw (C) to lock (6),(8) and (2), (3), as below shown

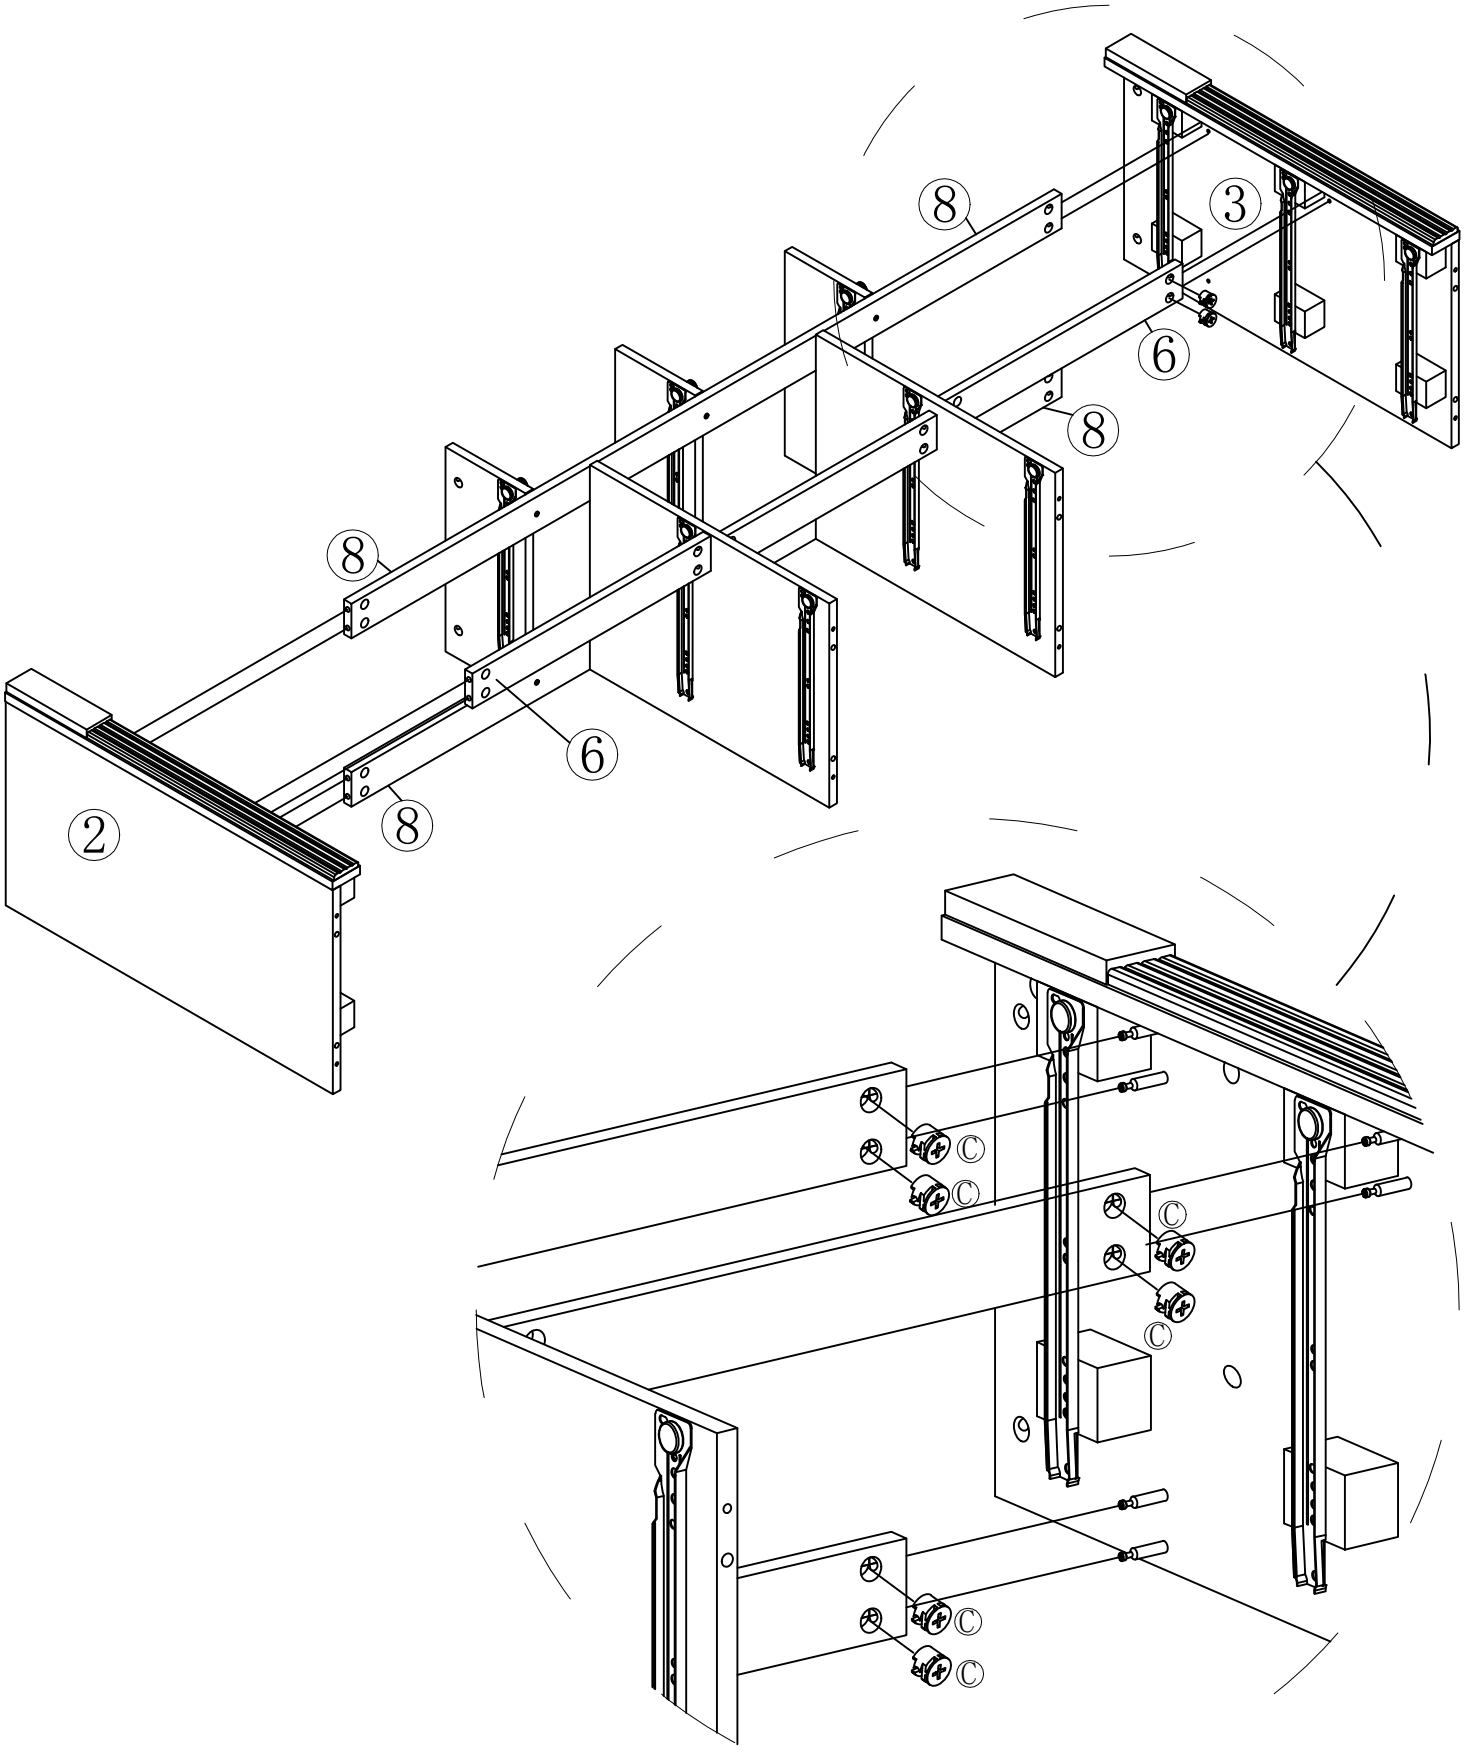


Step 12	B 8 pcs	M 8 pcs


-Screw (B) to (2),(3),(4),(5) as below shown
-Screw (M) to lock (7) and (2), (3), (4), (5) as below shown

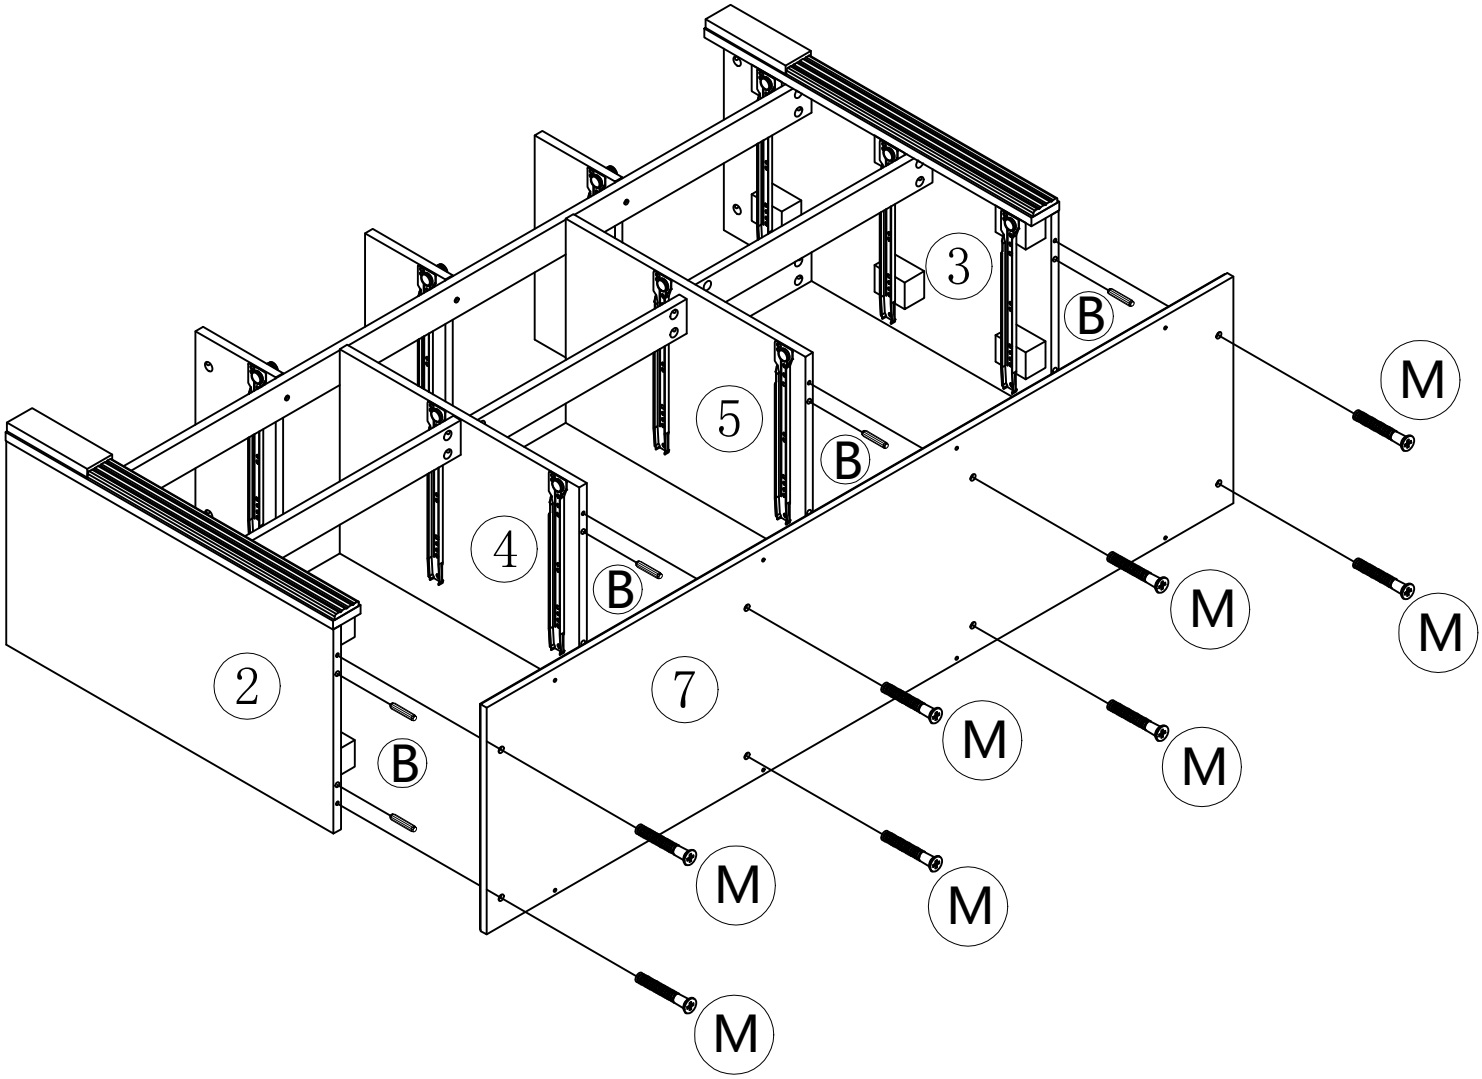

Step 13-1

A  11 pcs


-Screw (A) to (10) as below shown
-Screw (A) to (11) as below shown
-Screw (A) to (12) as below shown
-Screw (A) to (14) as below shown

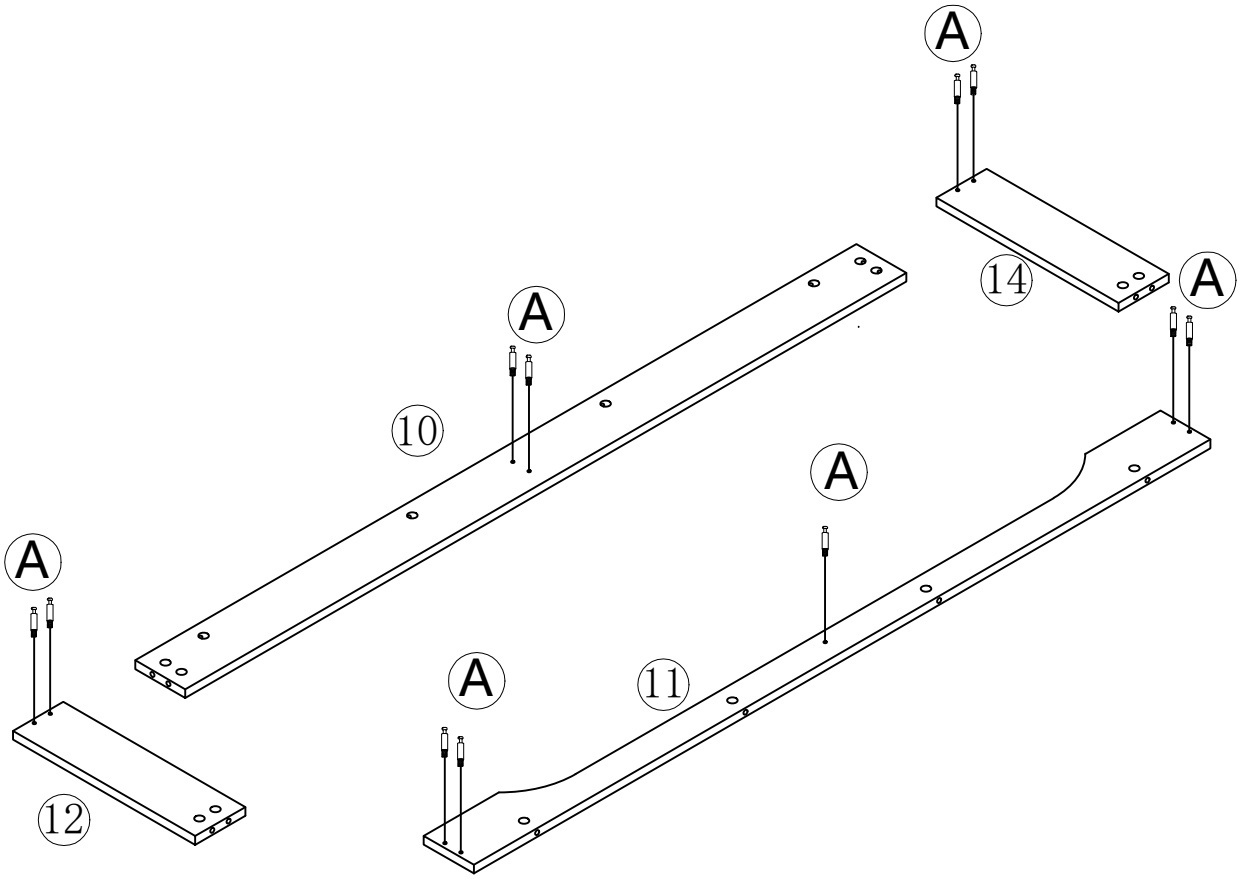

Step 13-2


C 11 pcs

-Screw (C) to lock (10) and (12), (13), (14) as below shown
-Screw (C) to lock (11) and (12), (13), (14) as below shown

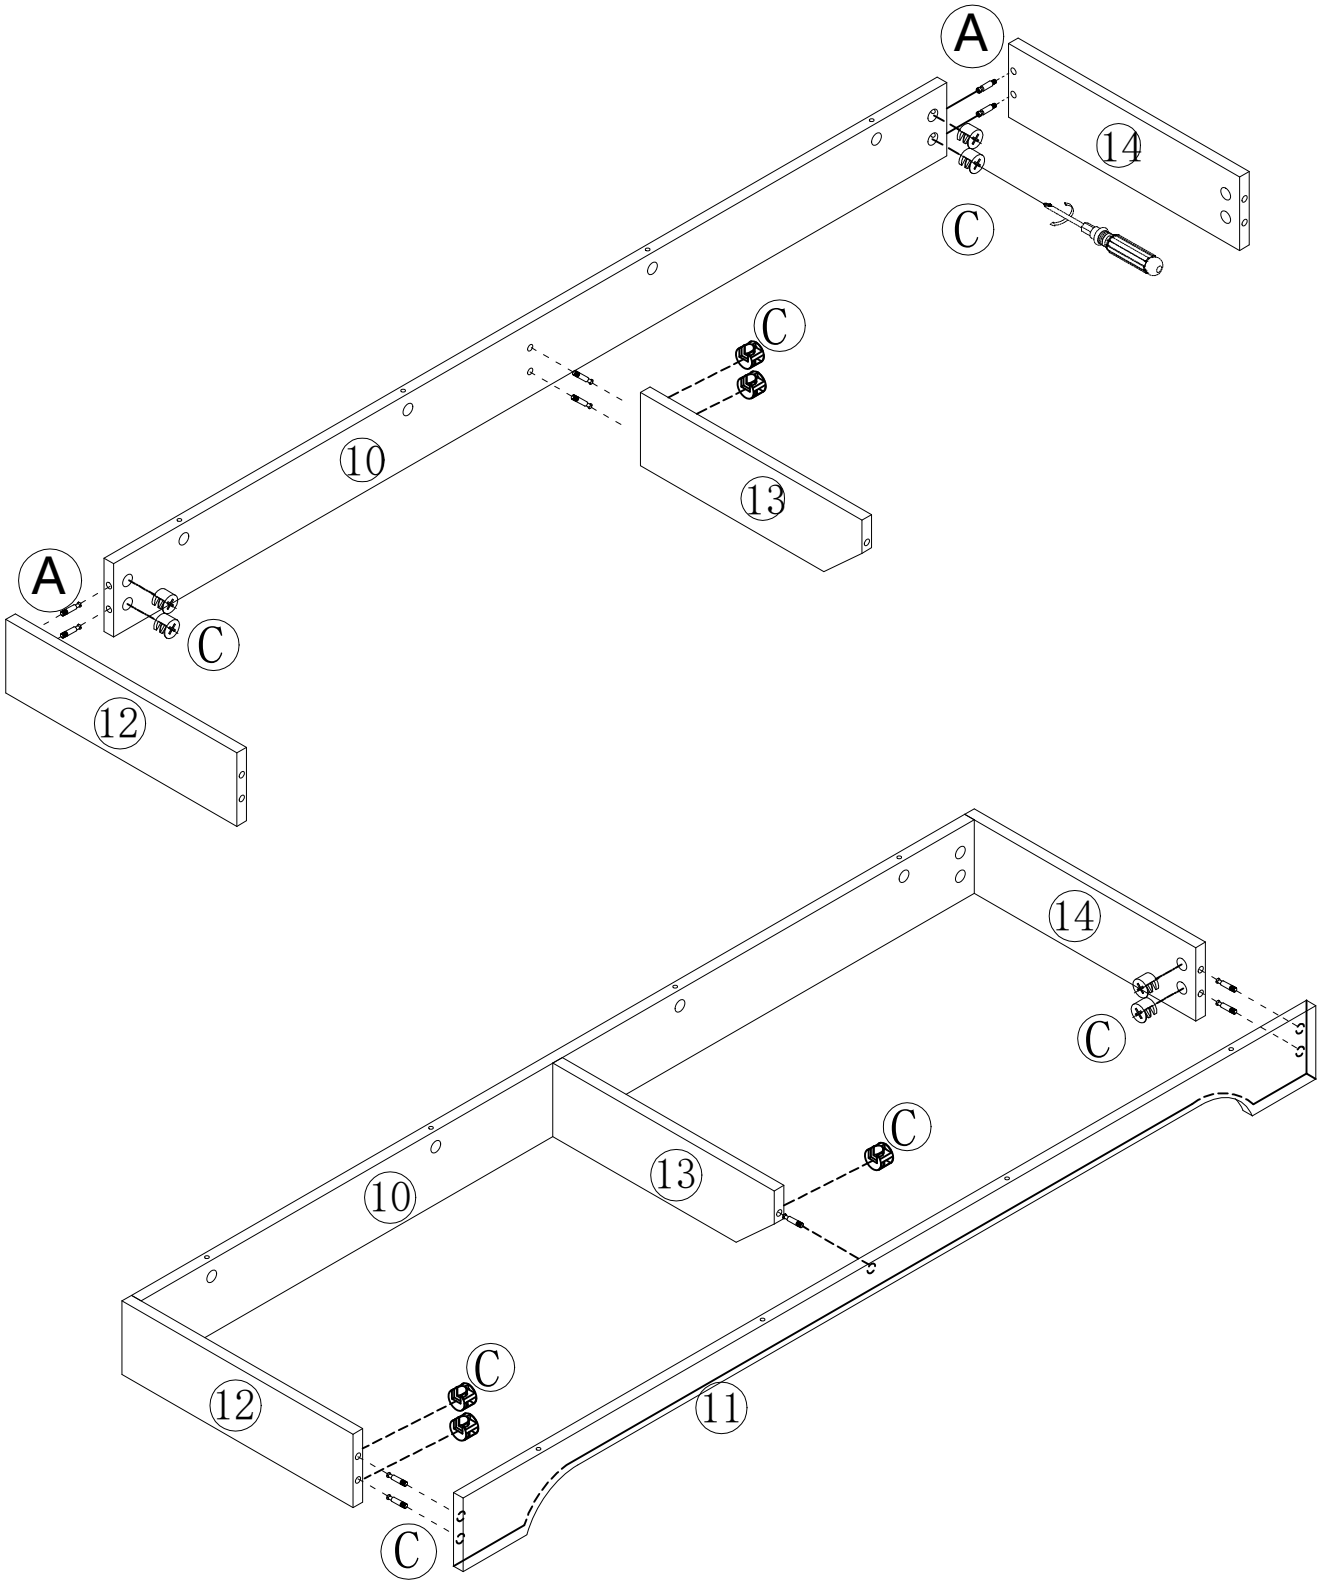

Step 14	A 8 pcs	C 8 pcs


-Screw (A) to (7) as below shown
-Screw (C) to lock (7) and (10), (11), (12), (13), (14) as below shown

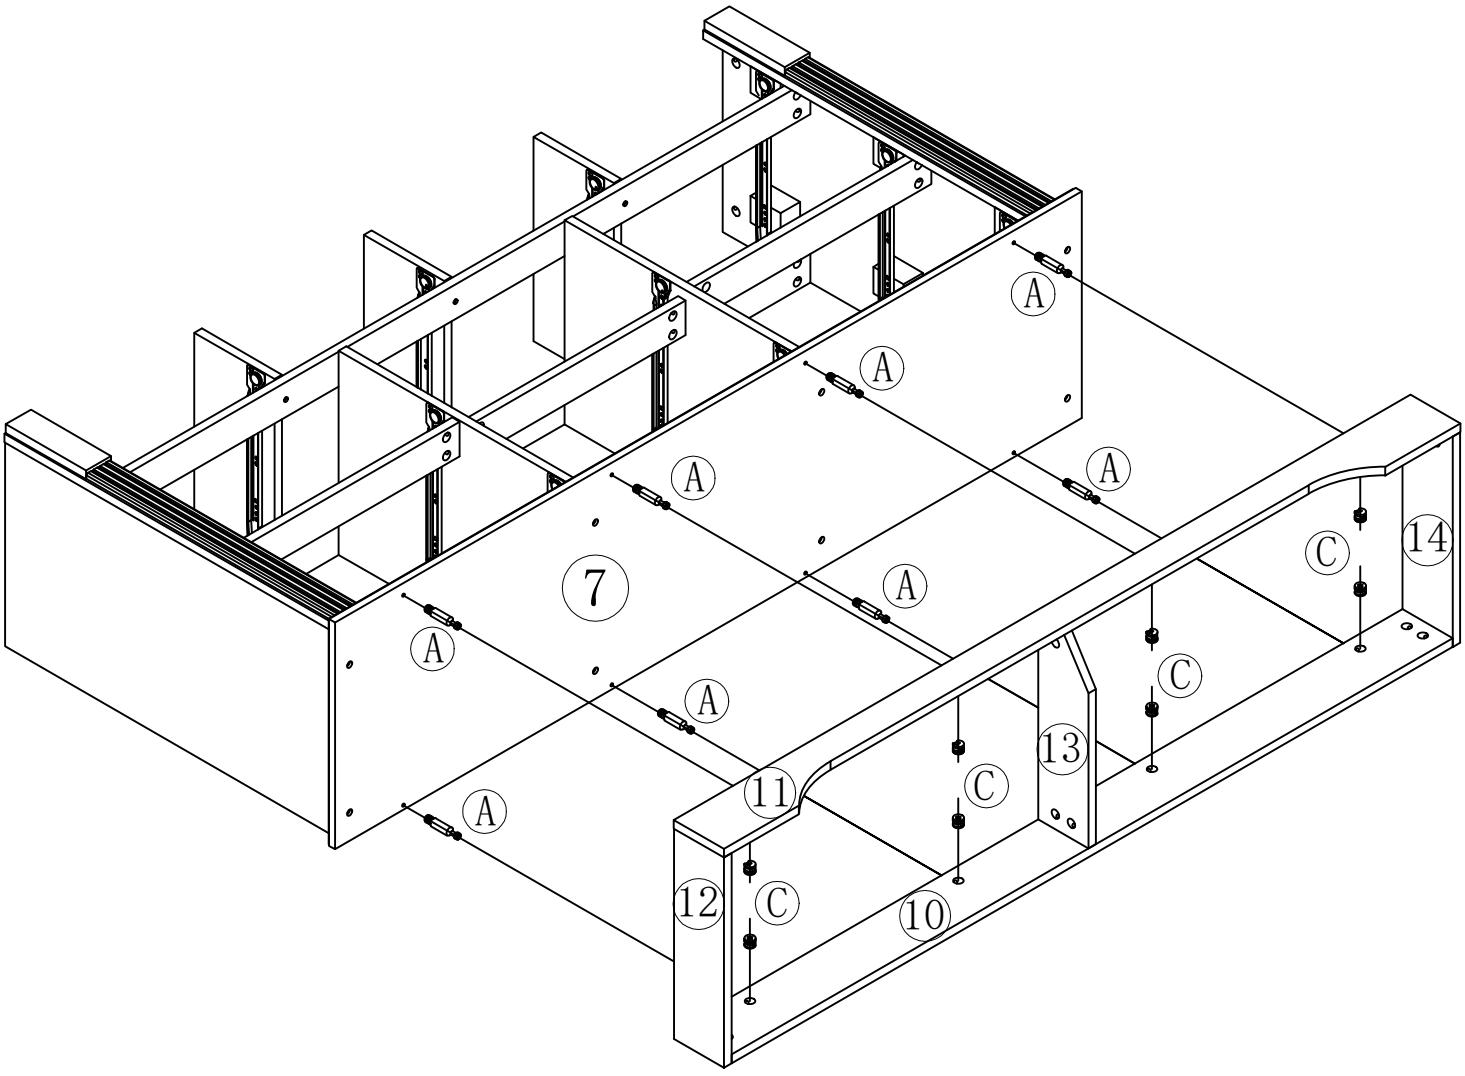

Step 15

B 10pcs	A 10pcs	C 10 pcs


-Screw (A) to (1) as below shown
-Screw (B) to (2),(3),(9) as below shown
-Screw (C) to lock (1) and (2), (3), (9) as below shown

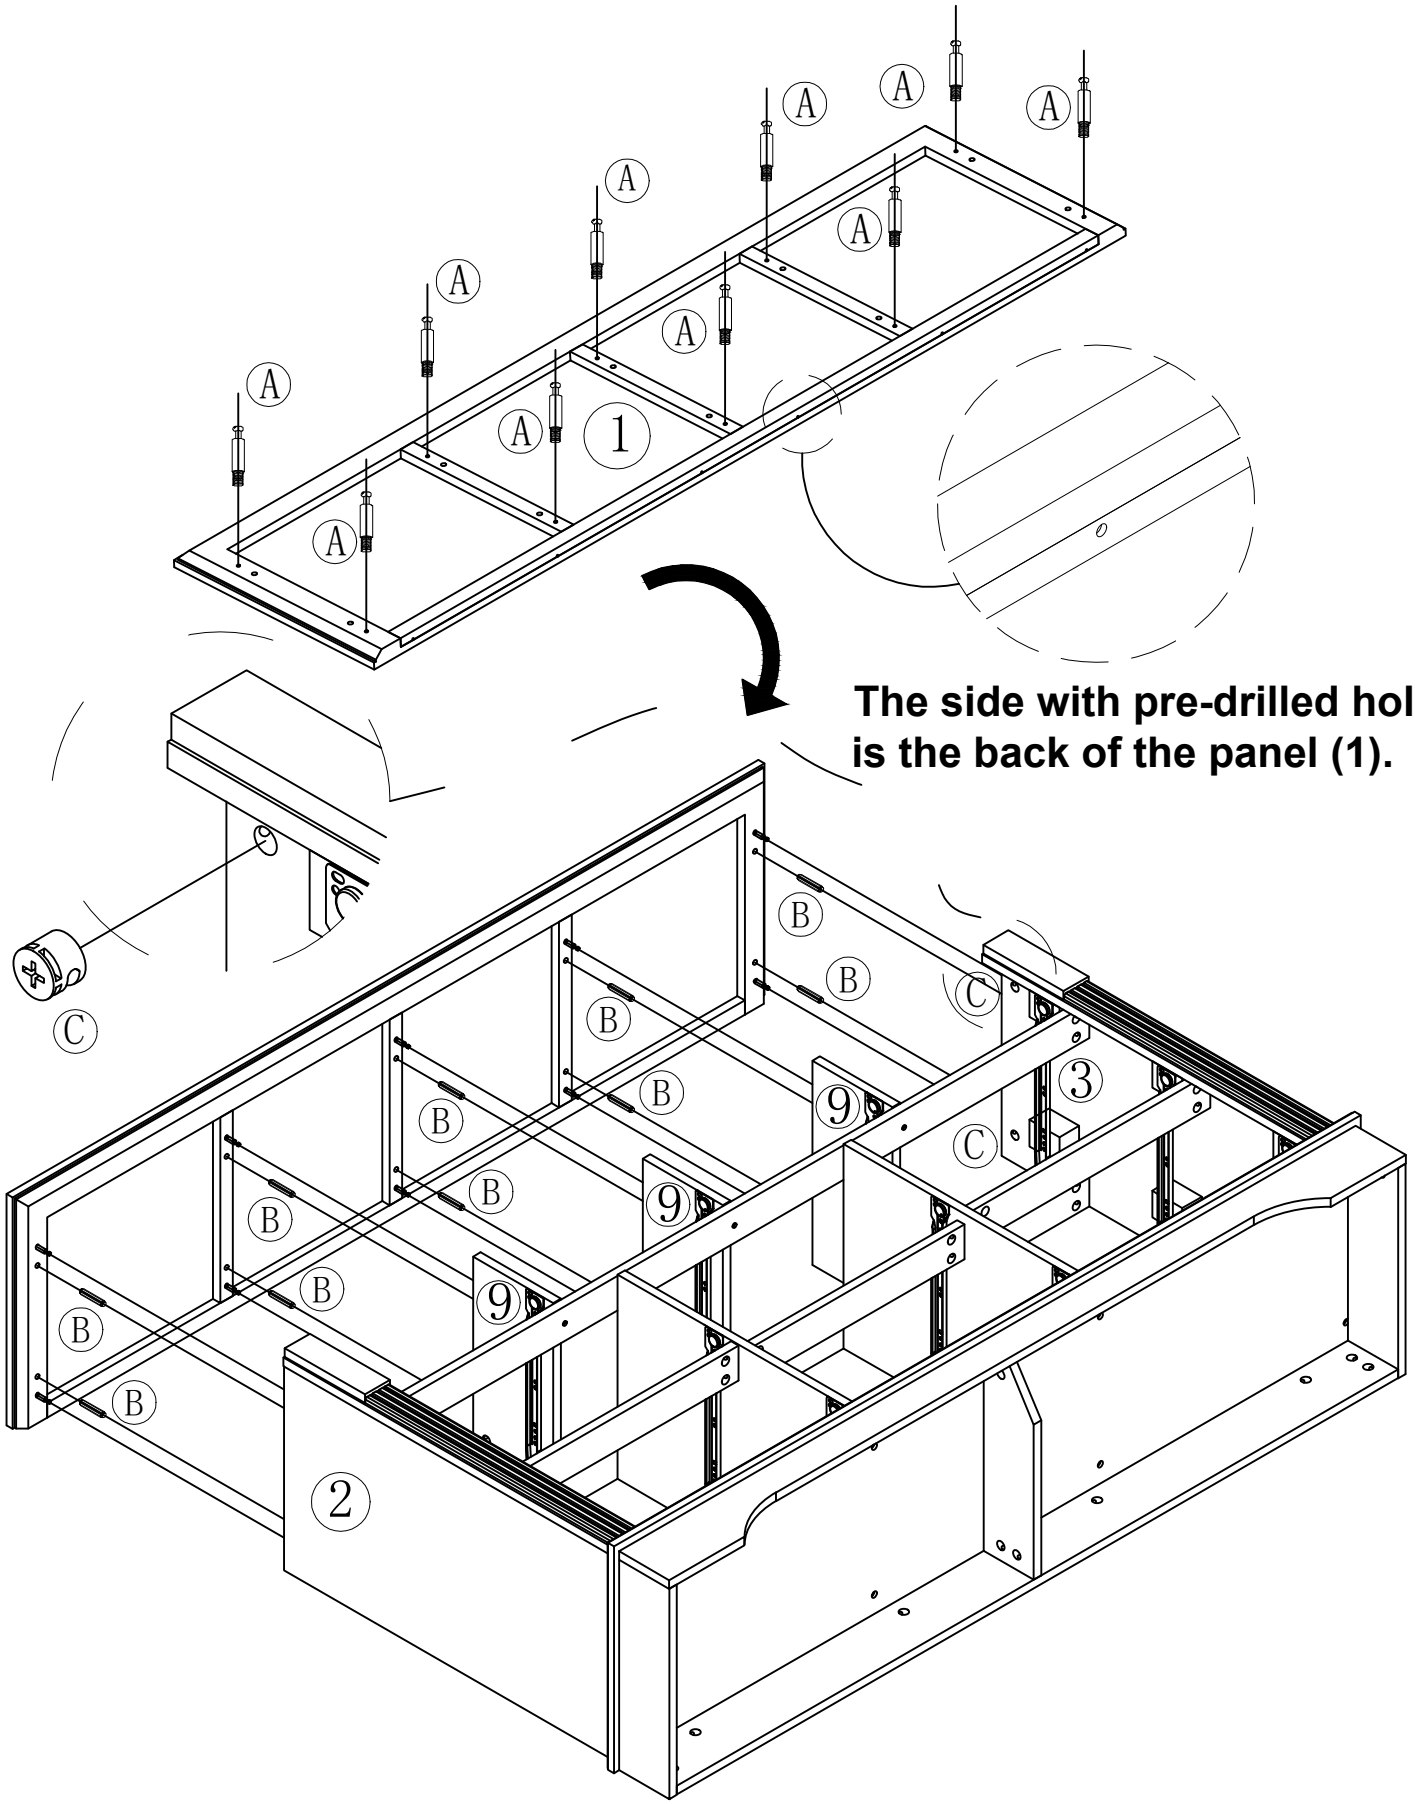

The side with pre-drilled holes is the back of the panel (1).

Step 16

K	2 pcs	I	40 pcs

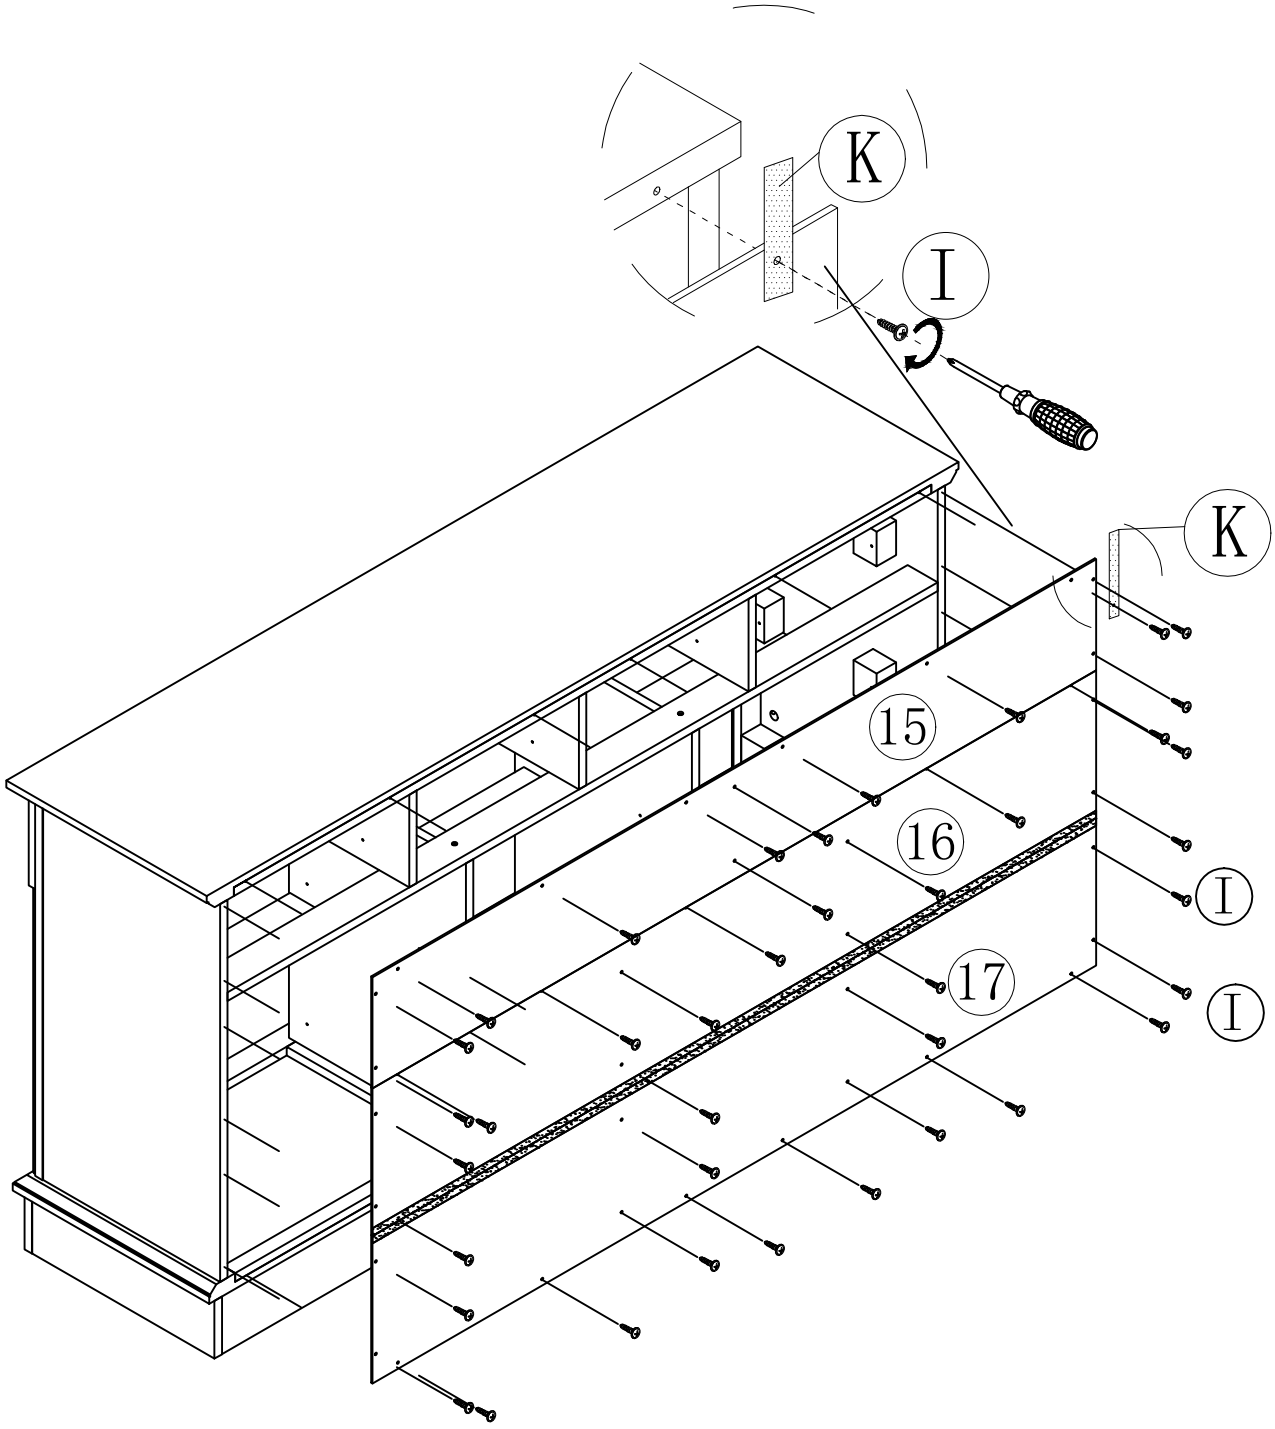

-It is recommended to attach the back panel (15) at the top panel (1) first. Please remember not to fully tighten all the screws (I) until all of them are in correct position.
-Only the panel(1)&(7) has pre-drilled holes, other backboards without pre-drilled holes, just screw directly into it.
-For installing the back panel easier, we should lay down the dresser body, let the front face the ground and the back should be up, then ready to assemble the back panel (15)(16) and (17).
-We suggest use a power drill to install the back panel.

Step 17


D 36 pcs

start assemble the 6 biger drawers


Warning: Keep the number stickers on panels until finish assembling. or may put drawers in wrong position and cause drawer stuck and improper outlook!

-Attach (18), (19), (20) and (22) as below shown

-Screw D to lock (18) & (19) & (22) & (20) as below shown

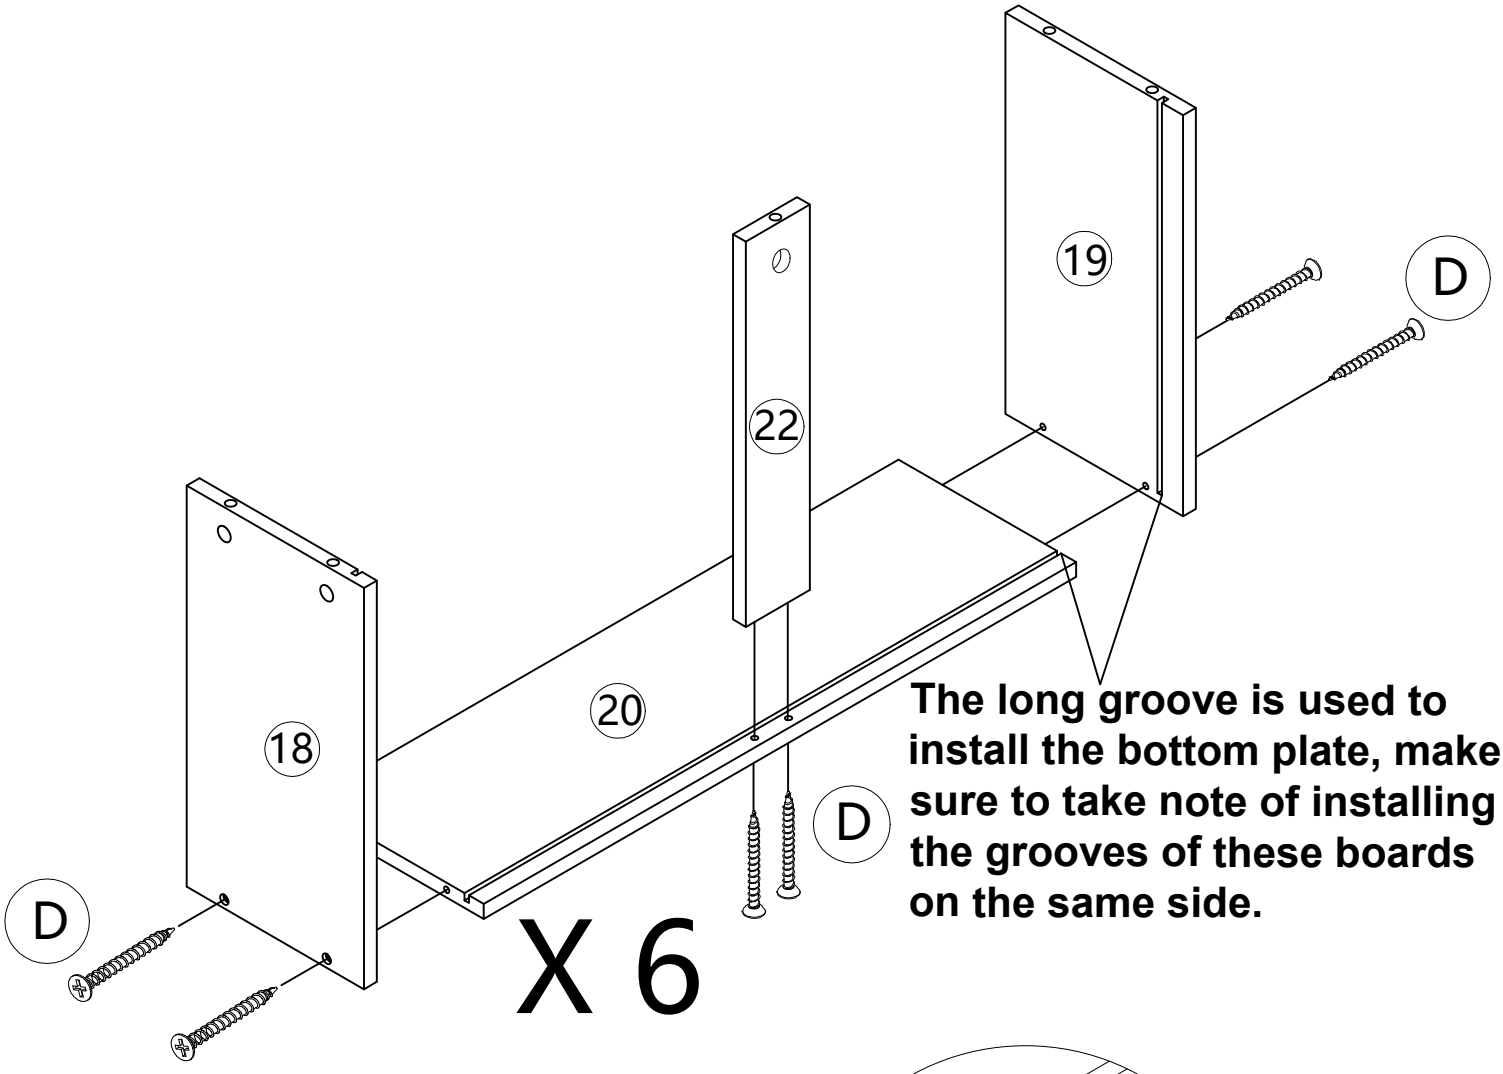



The long groove is used to install the bottom plate, make sure to take note of installing the grooves of these boards on the same side.

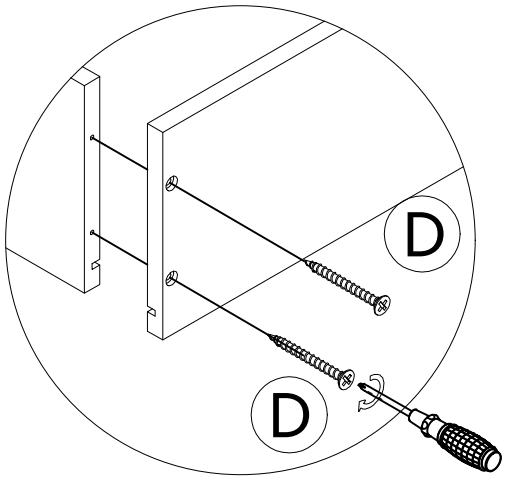

Step 18	A 10 pcs	L 10 pcs


-Put into the (21) aligns the groove as below shown
-Screw A to (23) as below shown
-Screw L to lock (23) and (18) & (19) & (22) as below shown

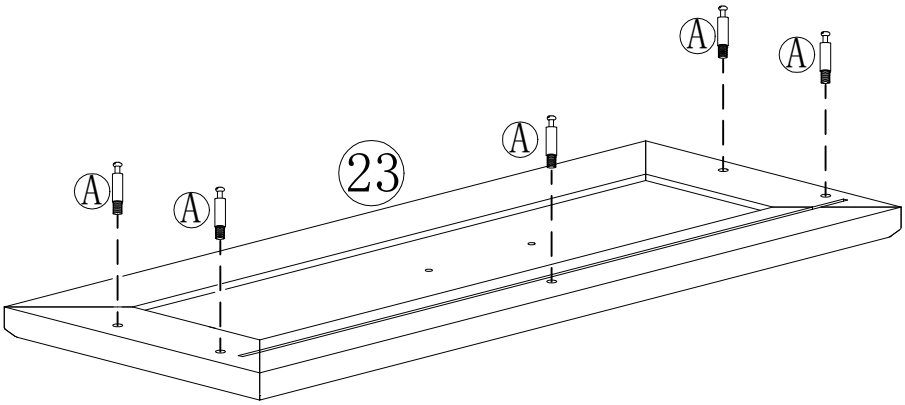


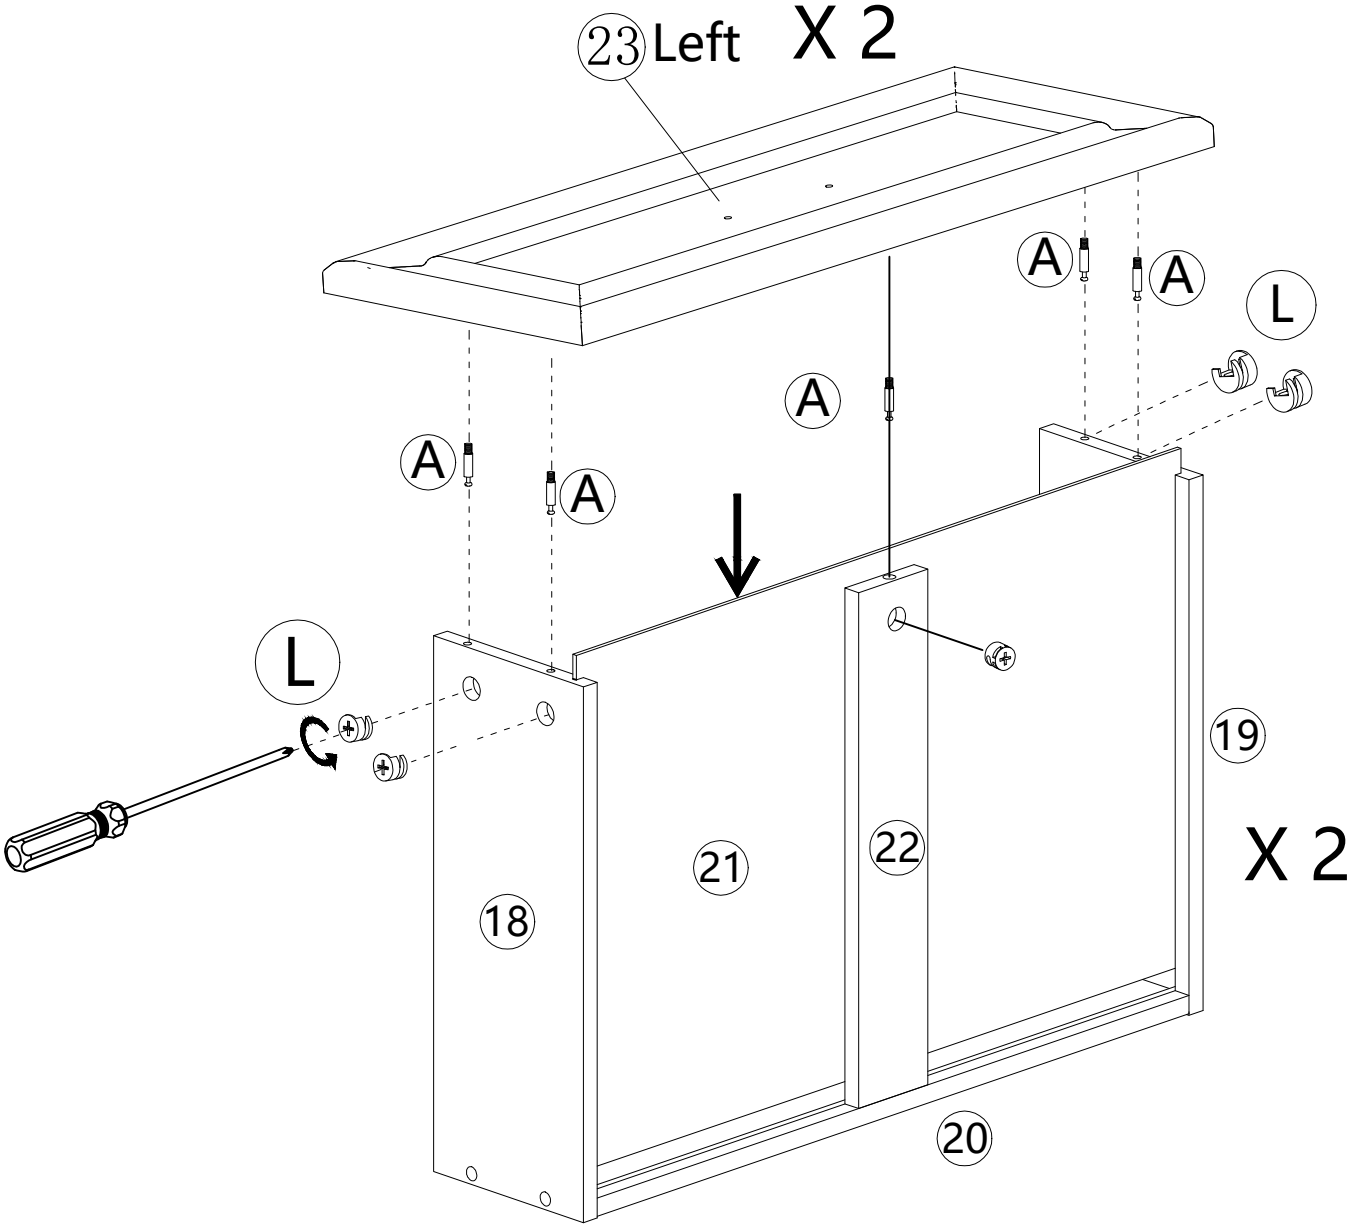

Step 19	A 10 pcs	L 10 pcs


-Put into the (21) aligns the groove as below shown
-Screw A to (24) as below shown
-Screw L to lock (24) and (18) & (19) & (22) as below shown

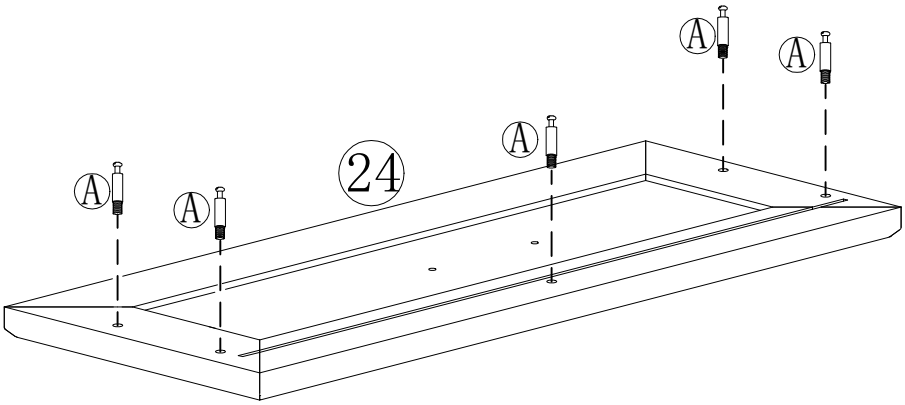


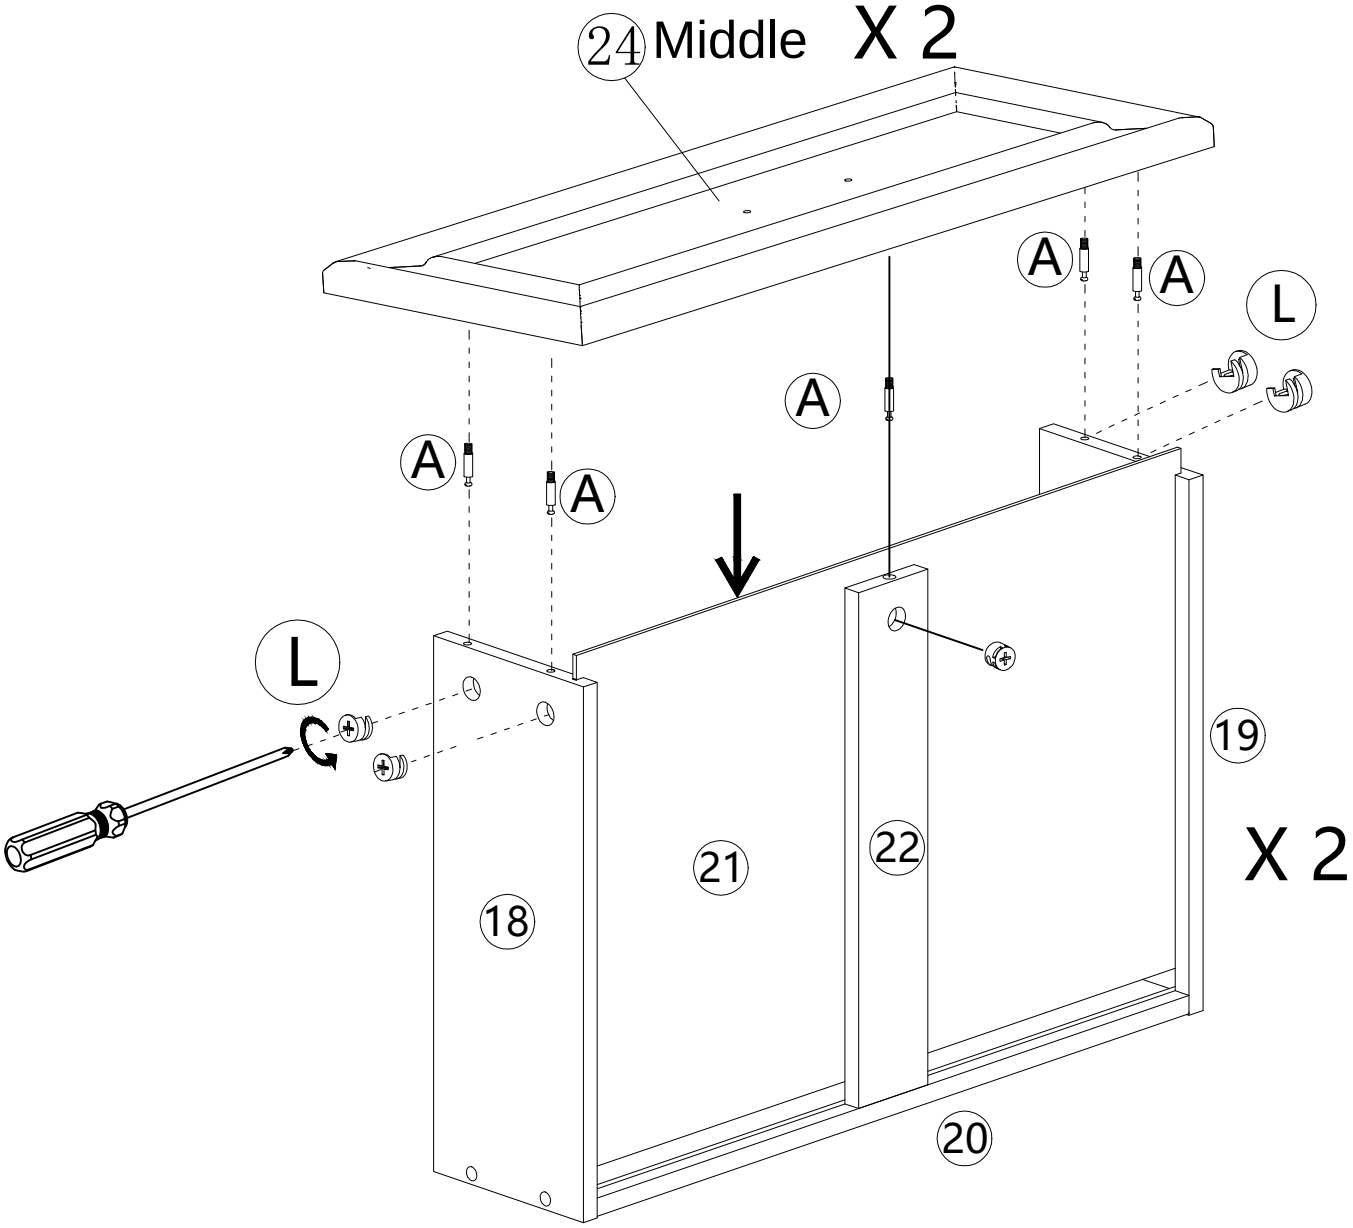

Step 20	A 10 pcs	L 10 pcs


-Put into the (21) aligns the groove as below shown
-Screw A to (25) as below shown
-Screw L to lock (25) and (18) & (19) & (22) as below shown

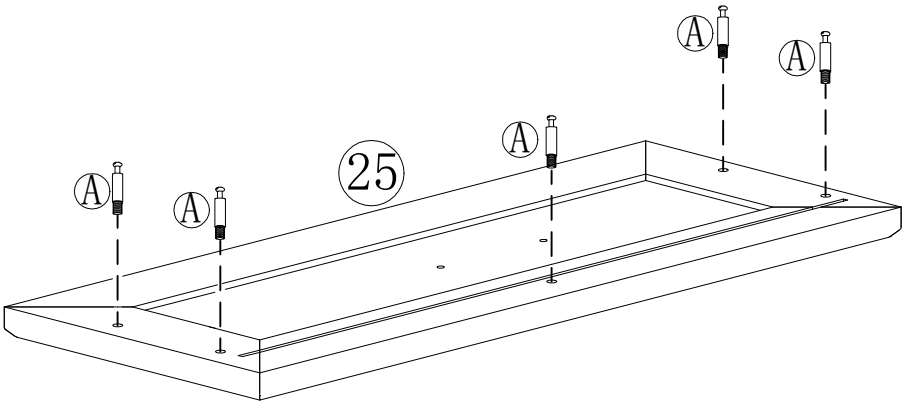


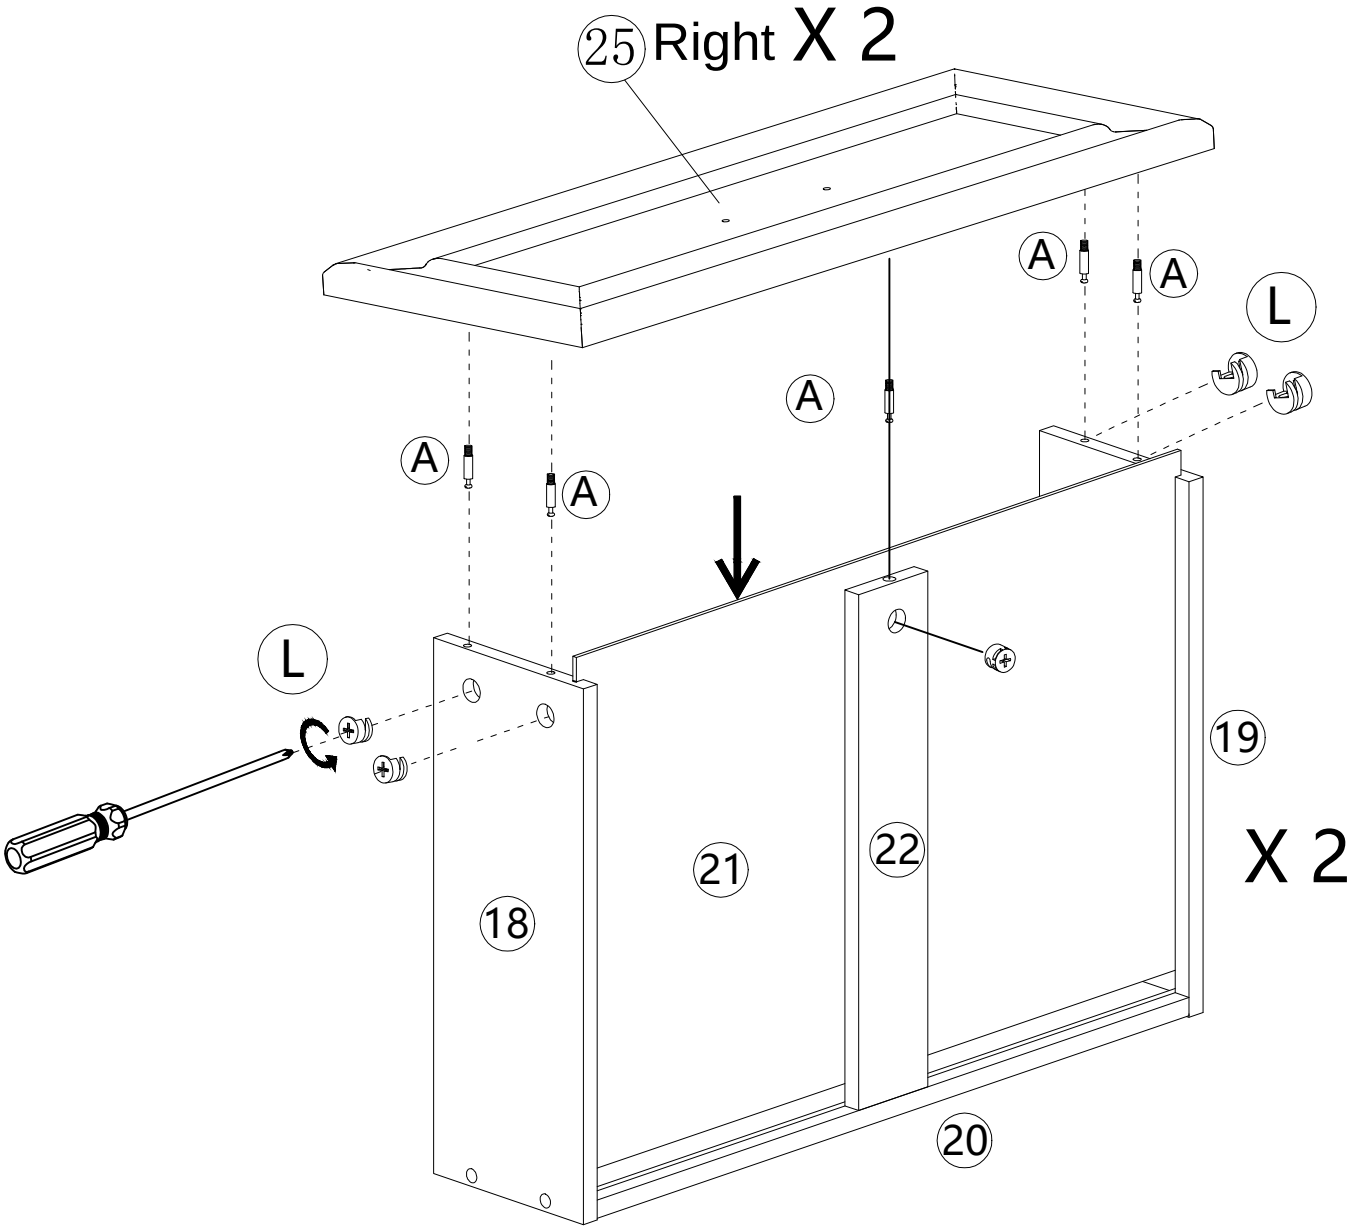

Step 21	F  6 pcs	G  12 pcs

-Screw a G to attach the knob F of one side
-Connect the handle to both sides of the F and screw another G to lock the knob
-Repeat the last 2 steps to install another F

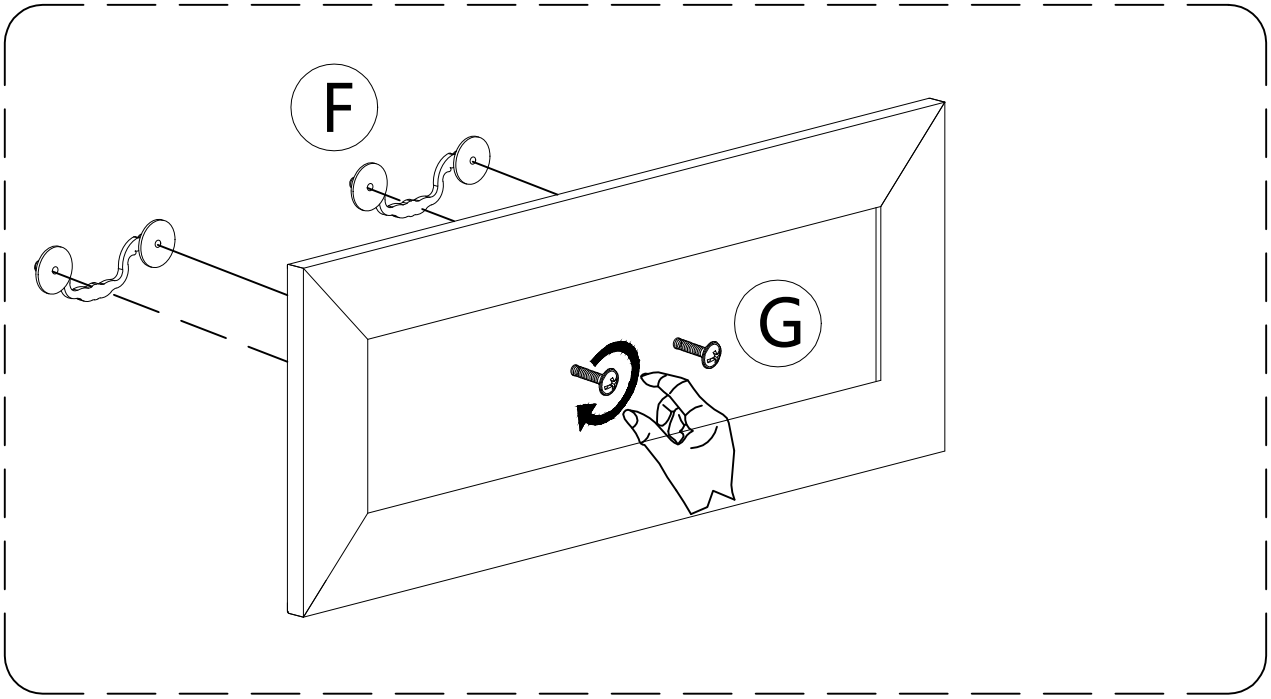

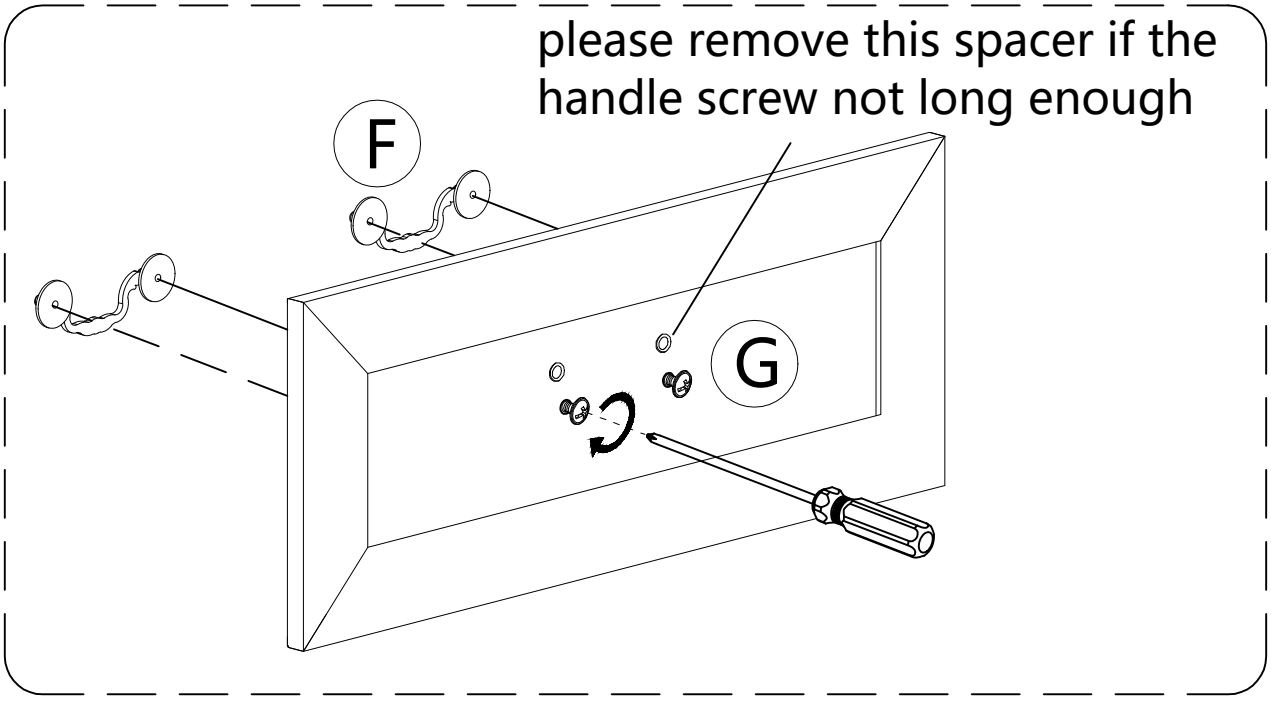

X 6

(#23*2,#24*2,#25*2)


Insert screw G first, then align the pre-drilled holes of the pull, and tighten the screws.

Step 22

J 6 pcs

H 36 pcs

-Install the drawer slides (J) on the drawer side panels (18) & (19) as below shown

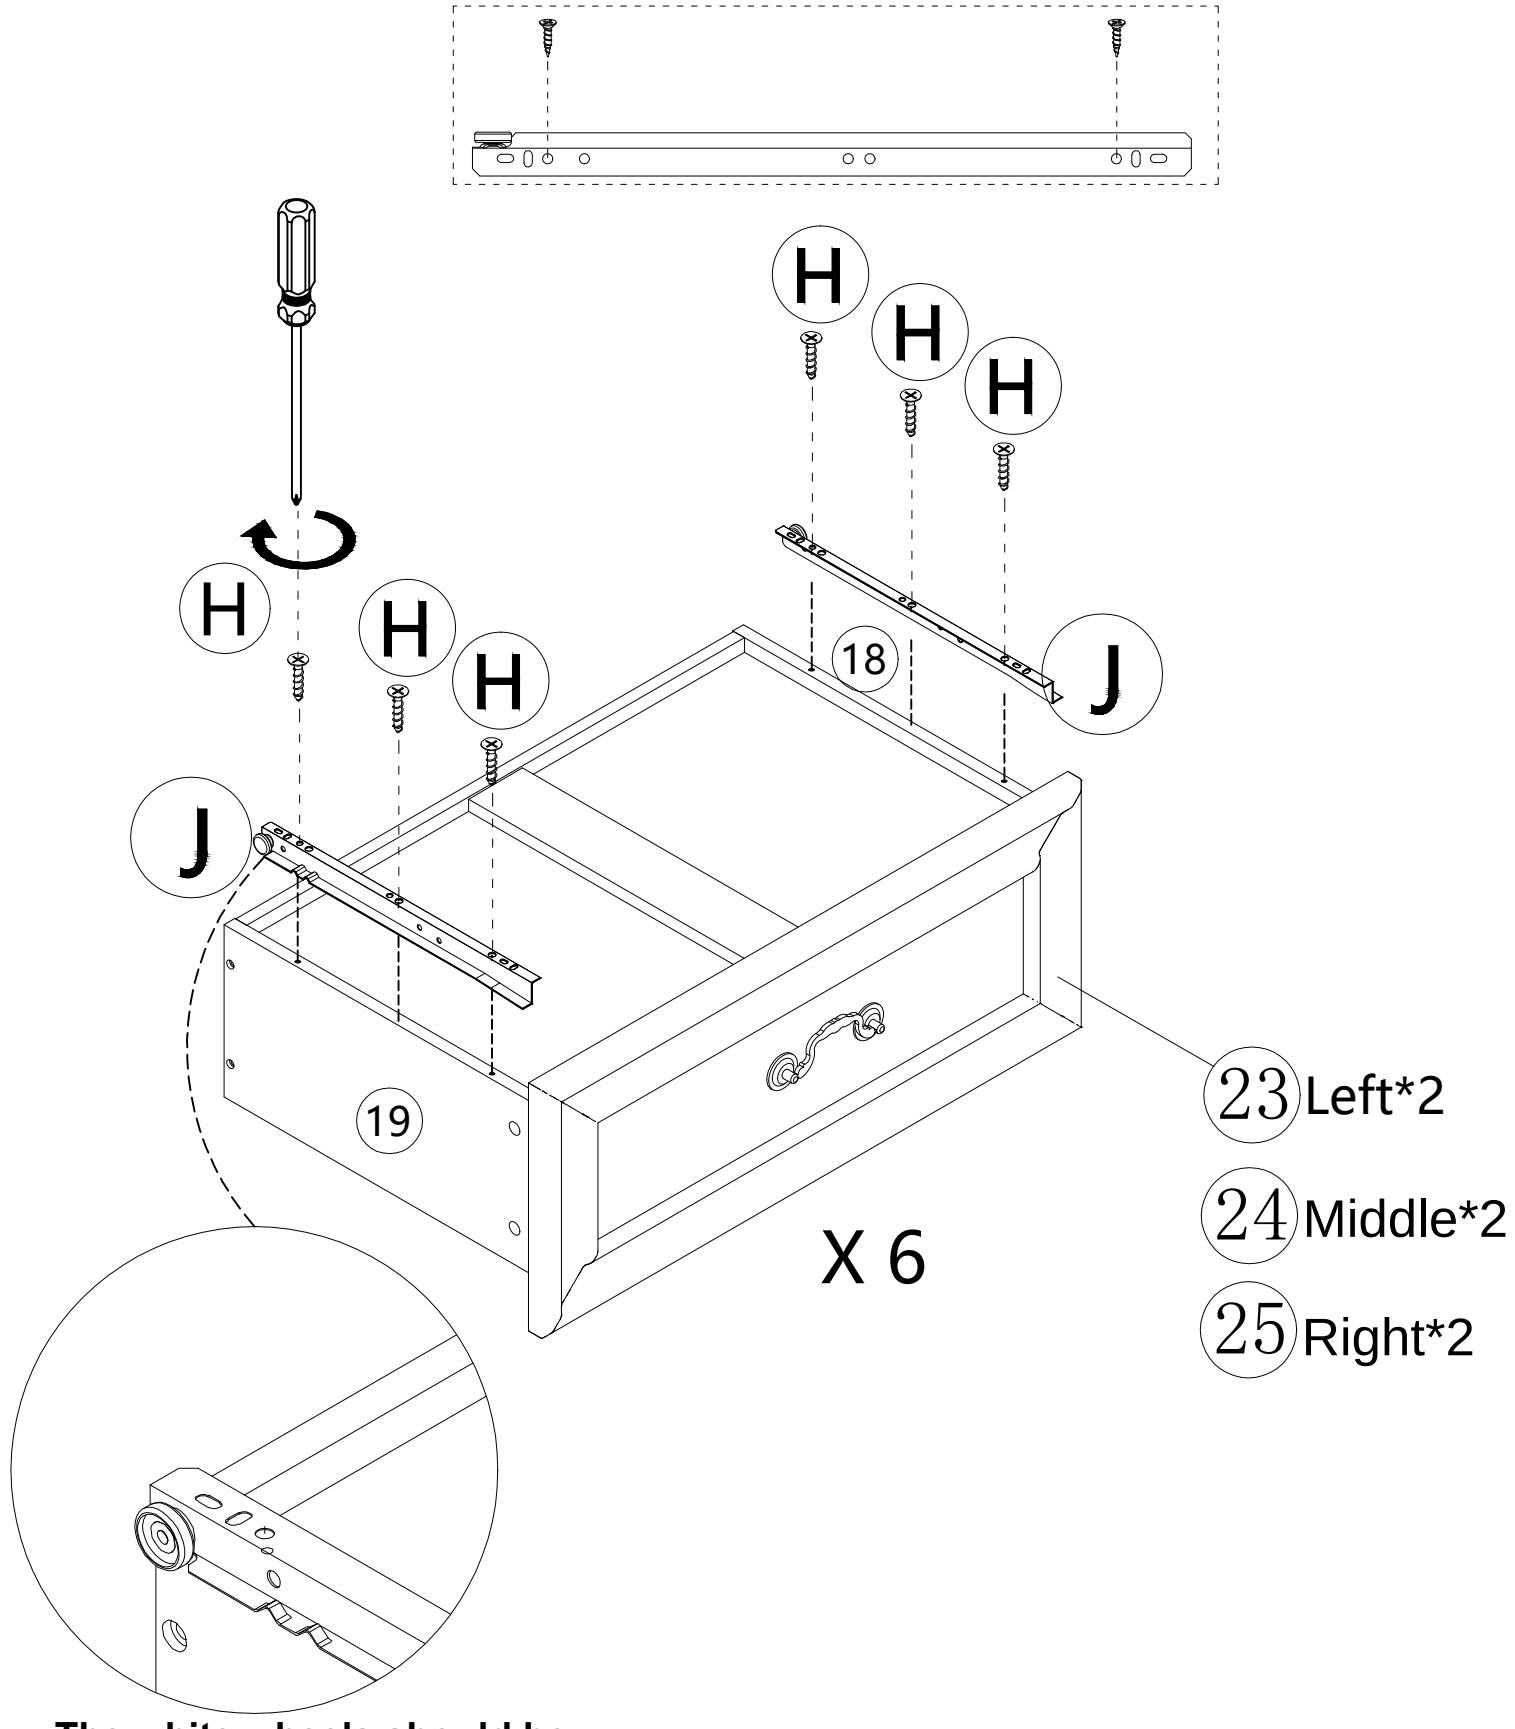

The white wheels should be installed towards to the back side.

Step 23


D 16 pcs

Start assembling the upper four smaller drawers.

Warning: Keep the number stickers on panels until finish assembling. Or may put drawers in wrong position and cause drawer stuck and improper outlook!

-Attach (26), (27), (28) as below shown
-Screw D to lock (26), (27), (28) as below shown

The long groove is used to install the bottamplate, make sure to take note of installing thegrooves of these boards on the same side.

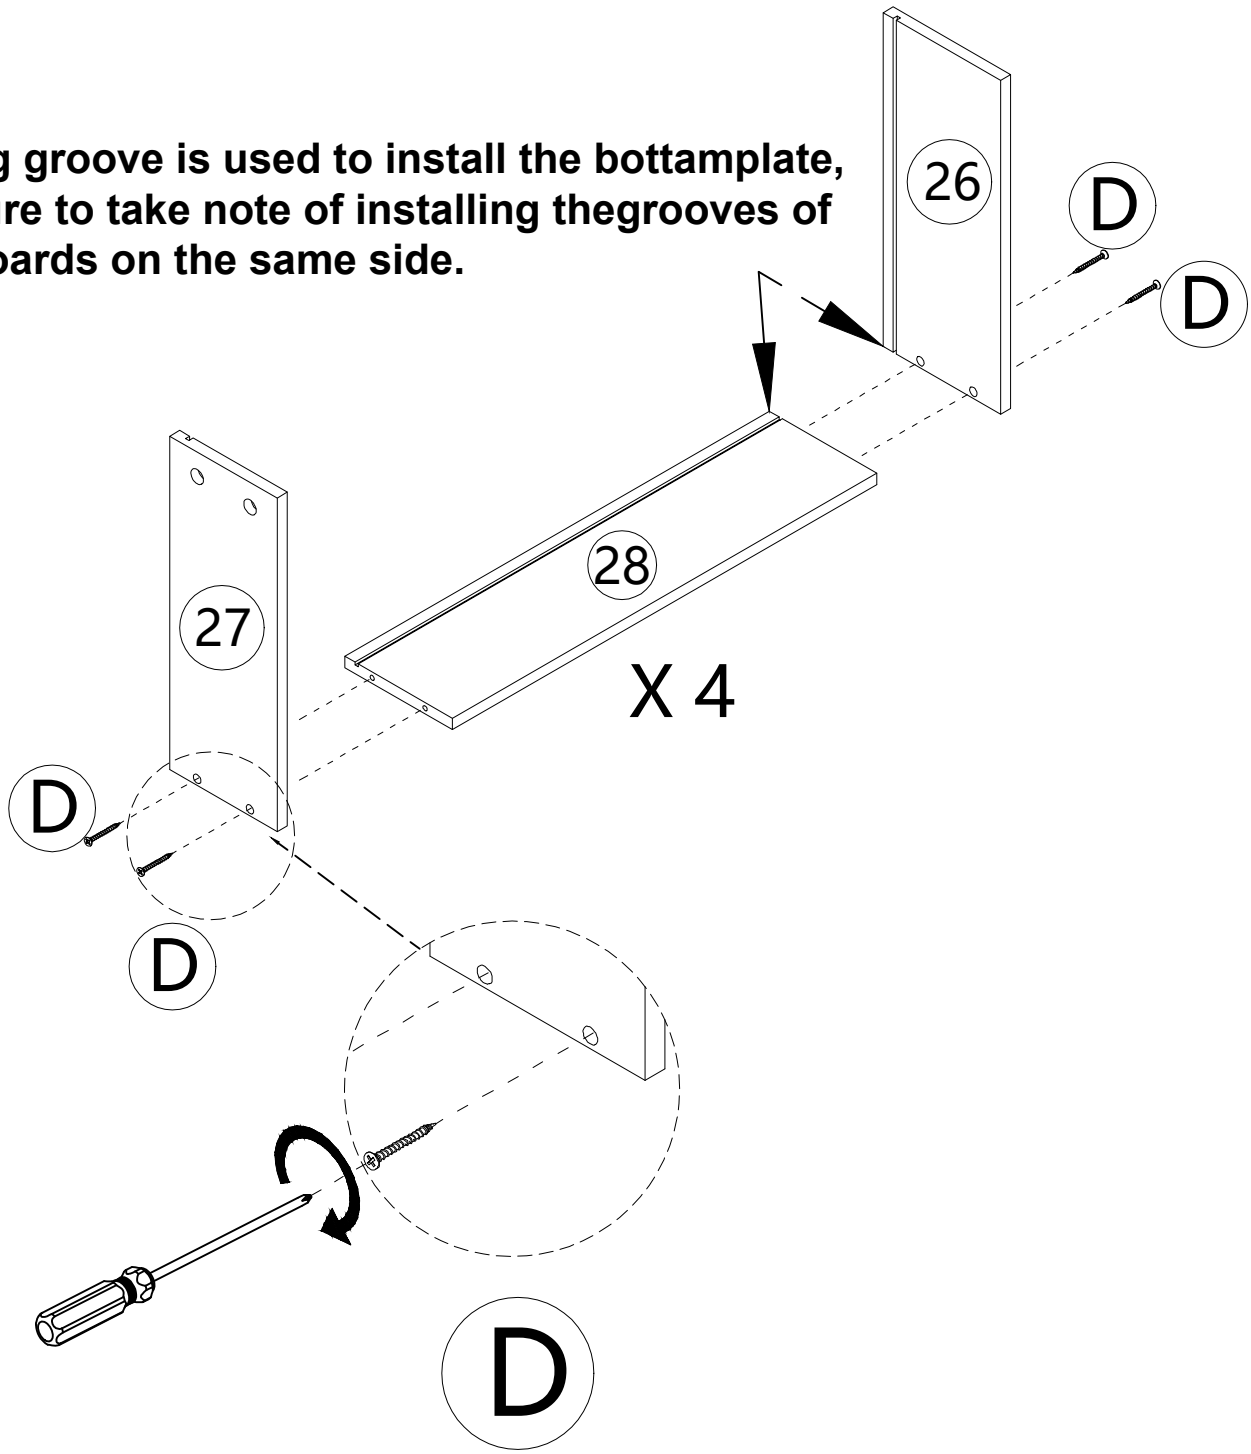


Step 24

A 16 pcs


L 16 pcs

-Put into the (29) aligns the groove as below shown
-Screw A to (30)/(31)/(32)/(33) as below shown
-Attach (30)/(31)/(32)/(33) to (26) & (27) as below shown
-Screw L to lock (30)/(31)/(32)/(33) and (26) & (27) as below shown

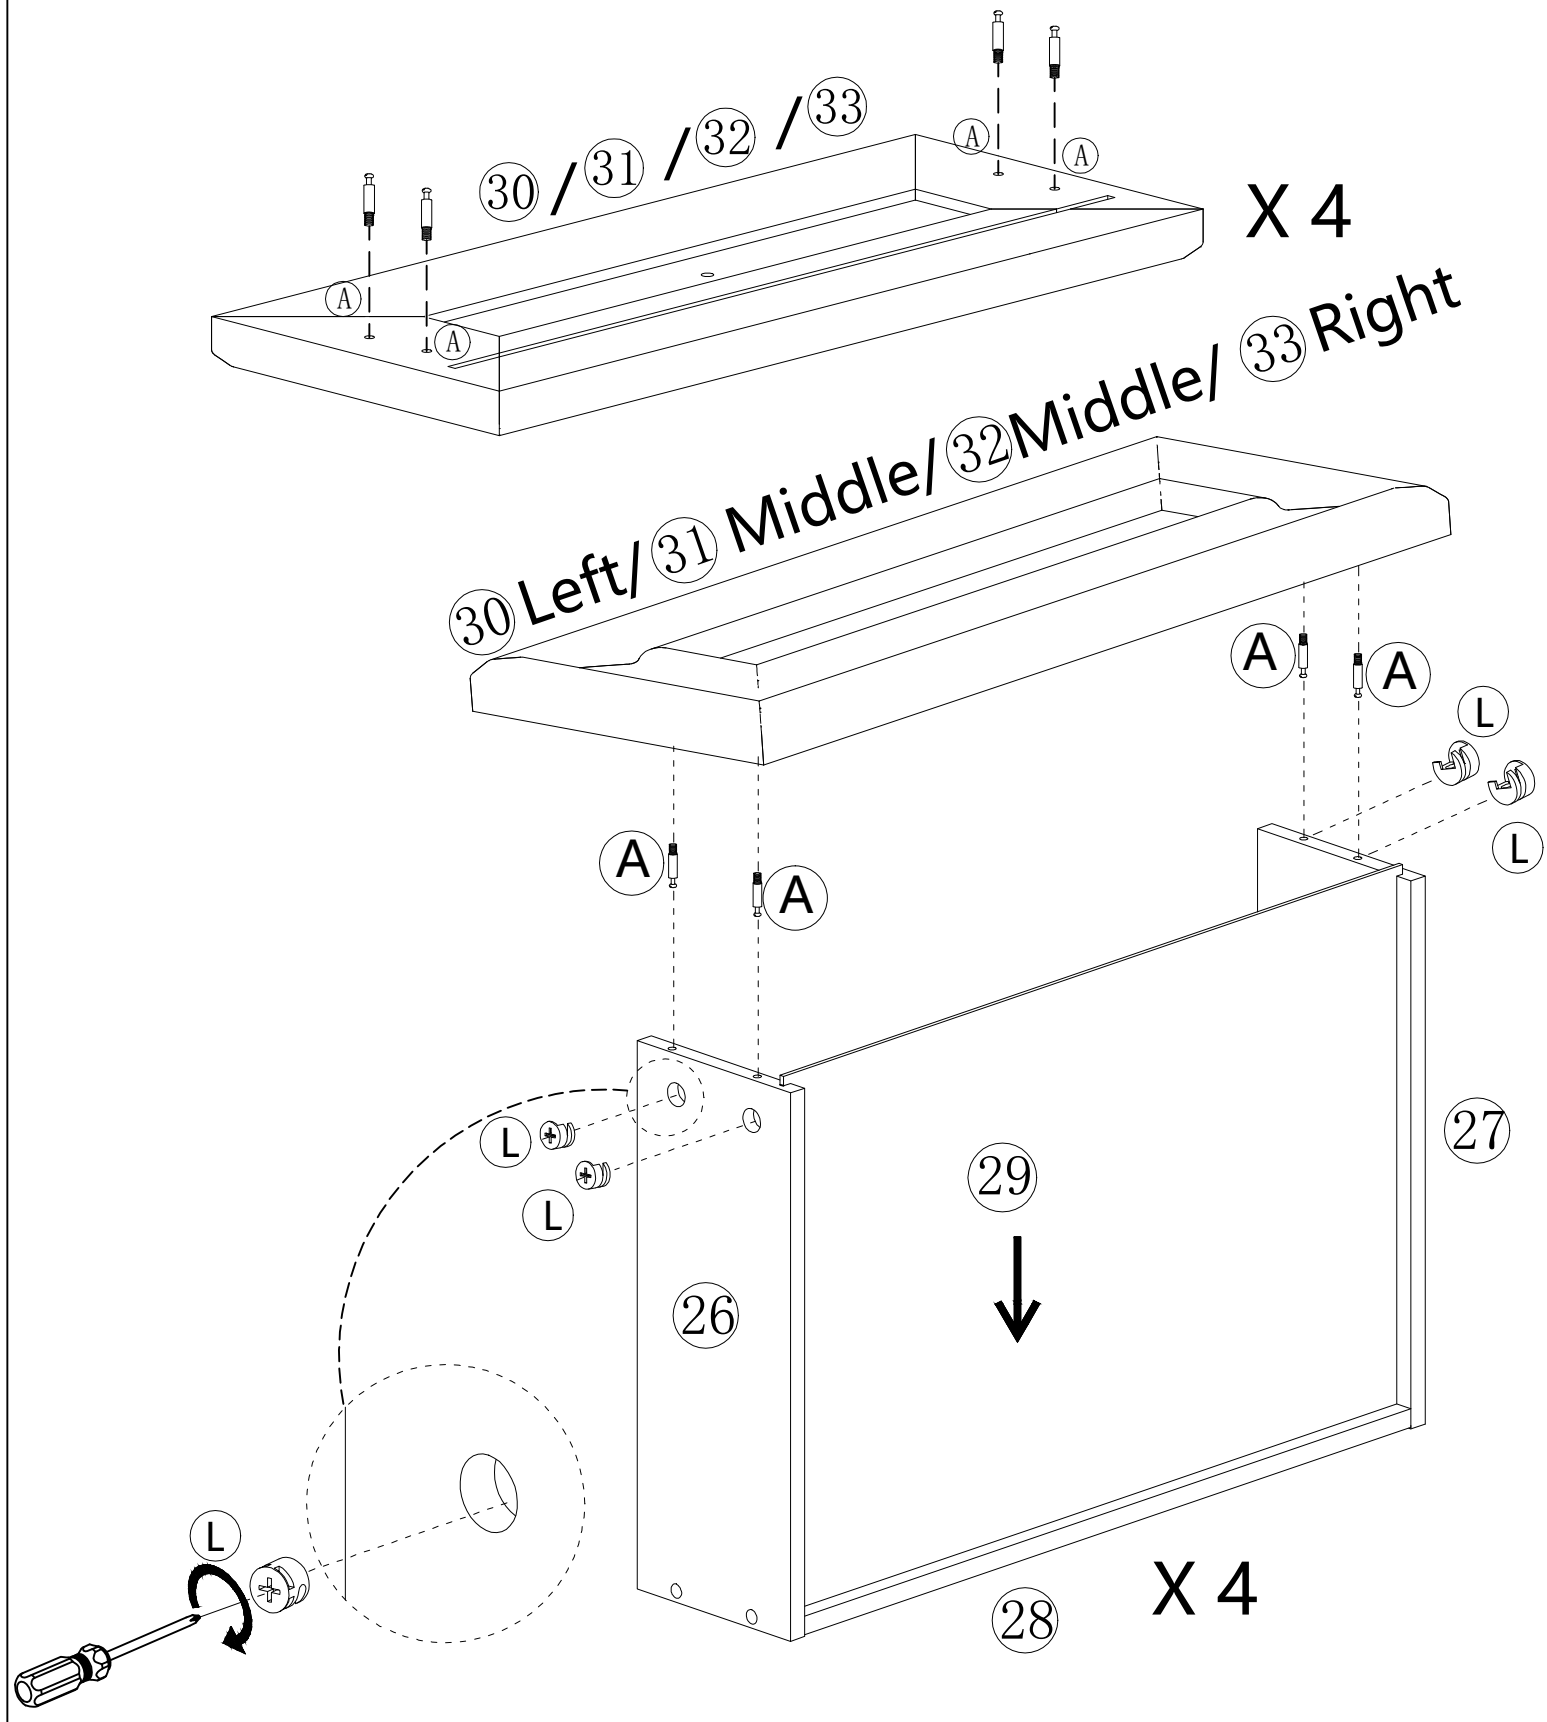


Step 25	E  4 pcs	G  4 pcs


-Screw G to install E to (30)/(31)/(32)/(33) as below shown

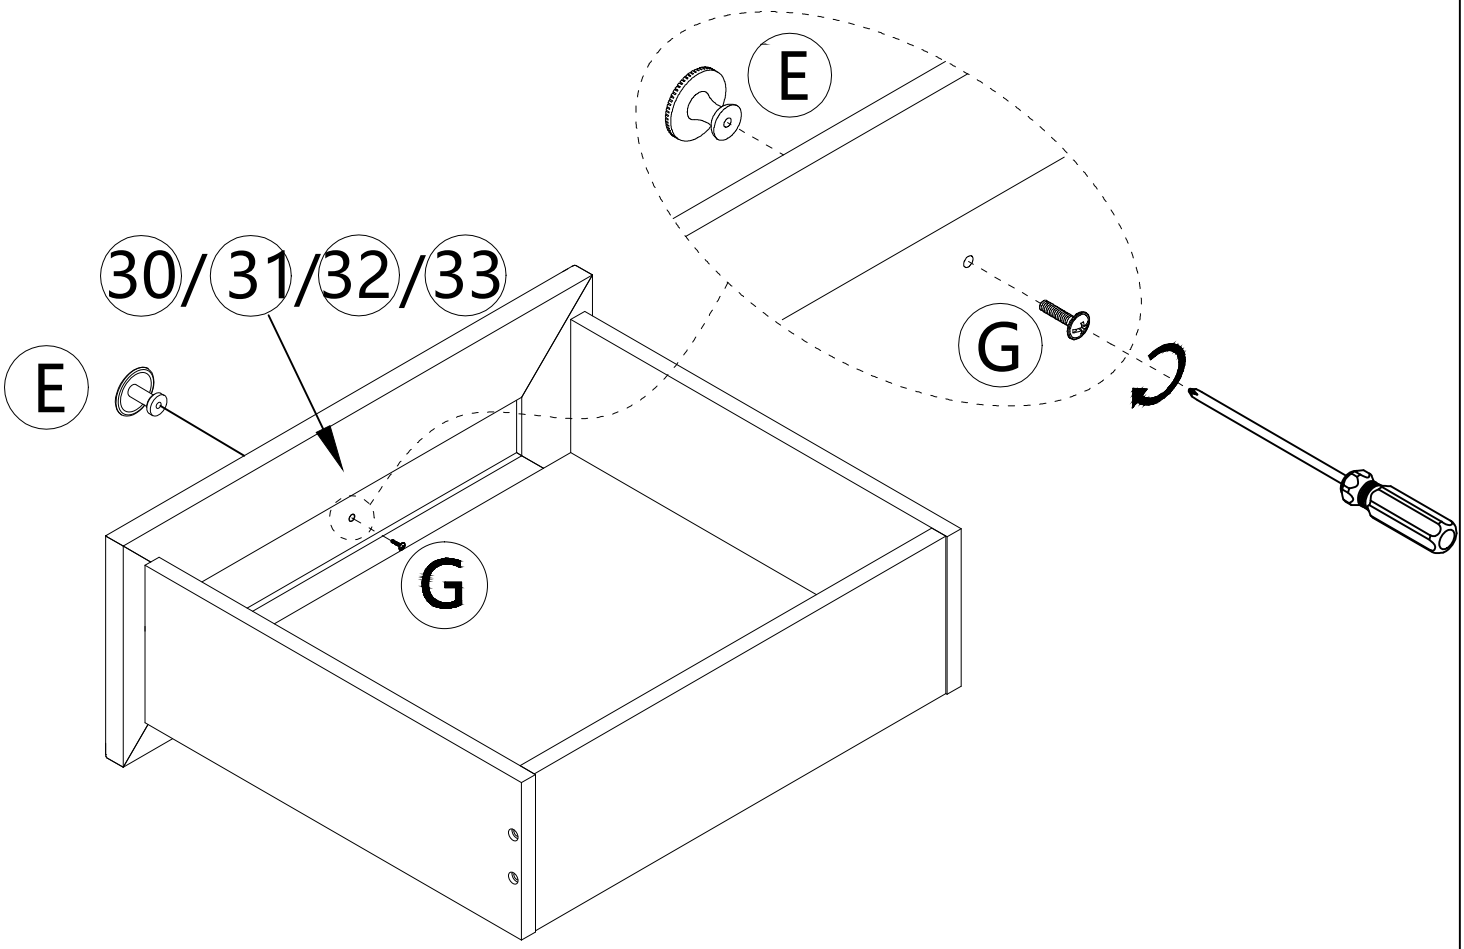


Insert screw G first, then align the pre-drilled holes of the pull, and tighten the screws.

Step 26

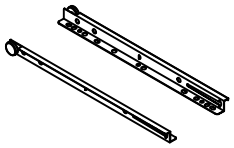J  4 pcs

H  24 pcs

-Install the drawer slides (J) on the drawer side panels (26)& (27) as below shown

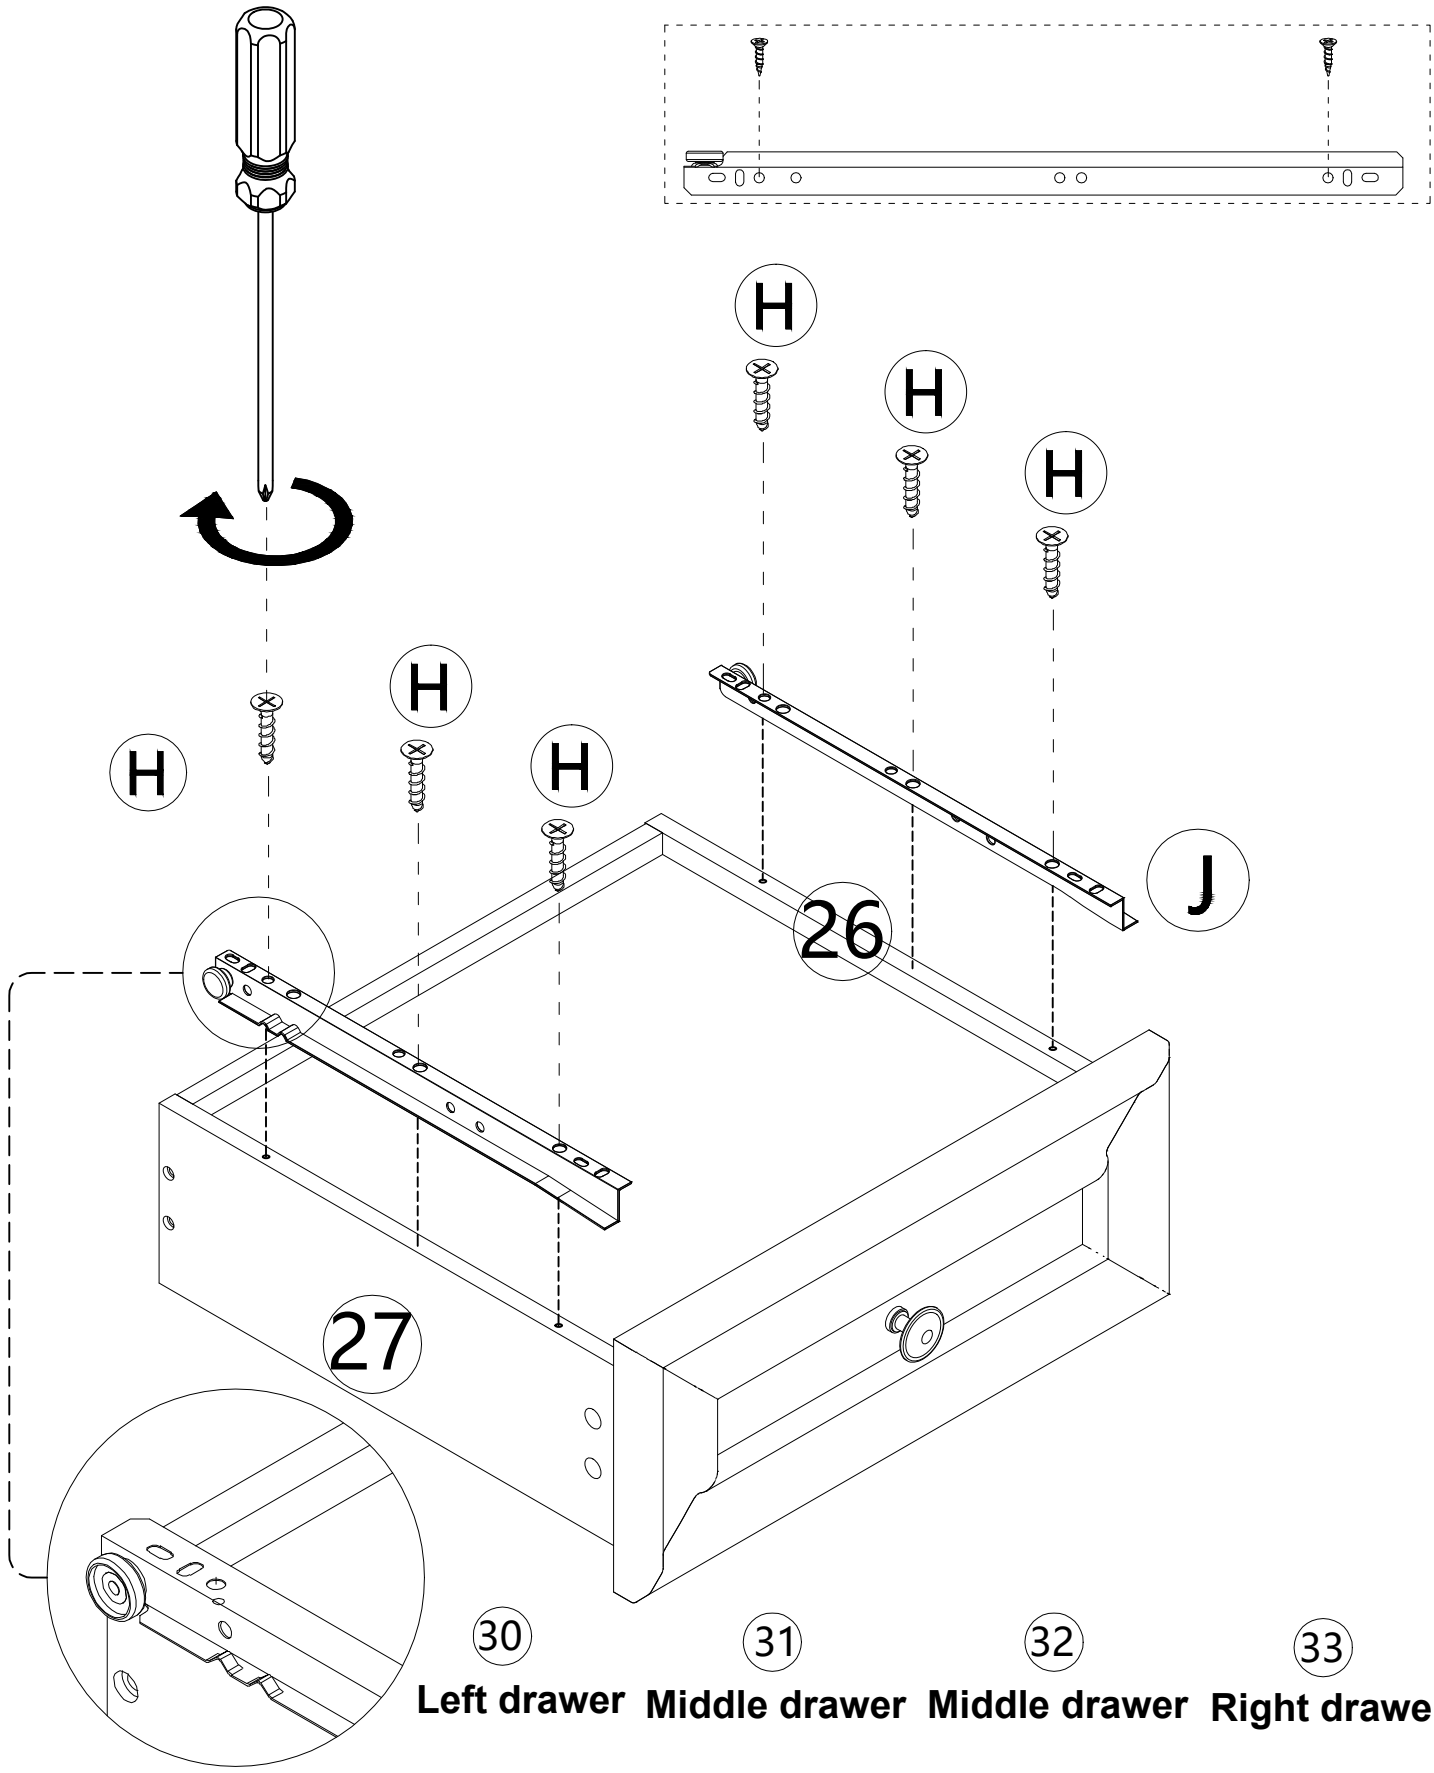

30 **Left drawer**


31 **Middle drawer**


32 **Middle drawer**

33 **Right drawer**

The white wheels should be installed on the back side.


Step 27

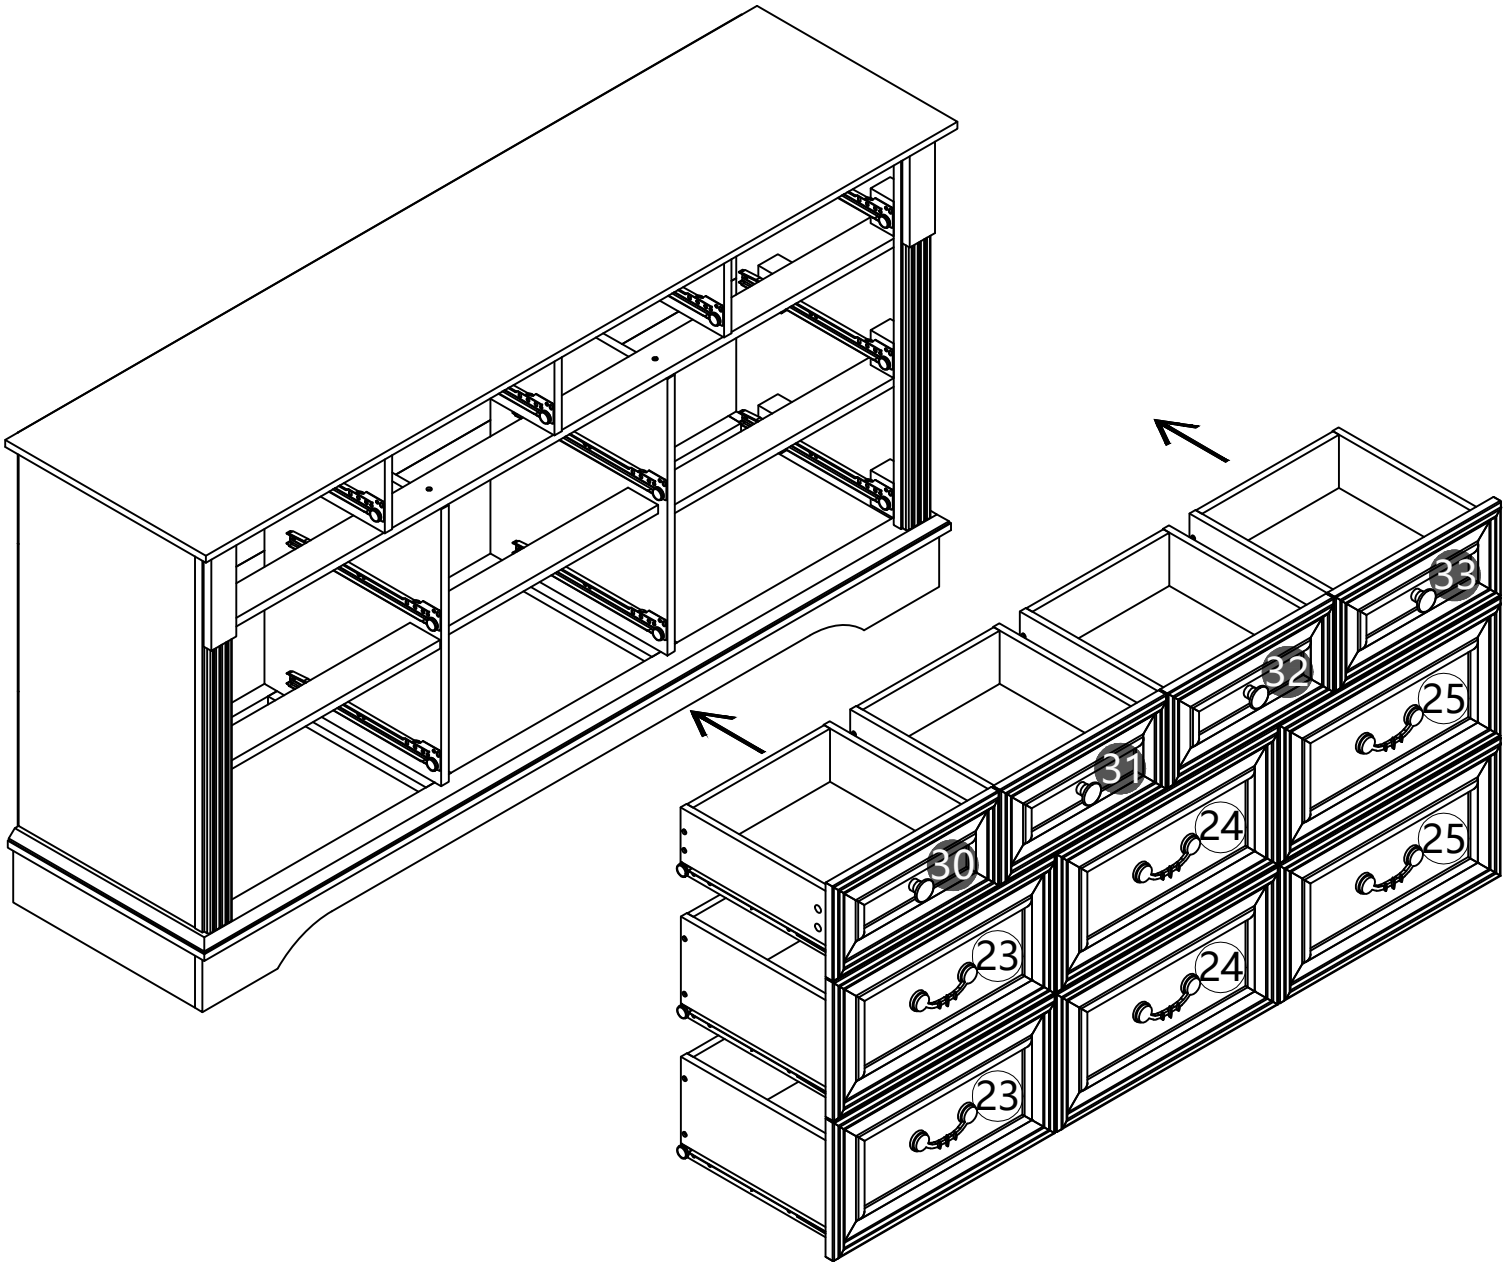

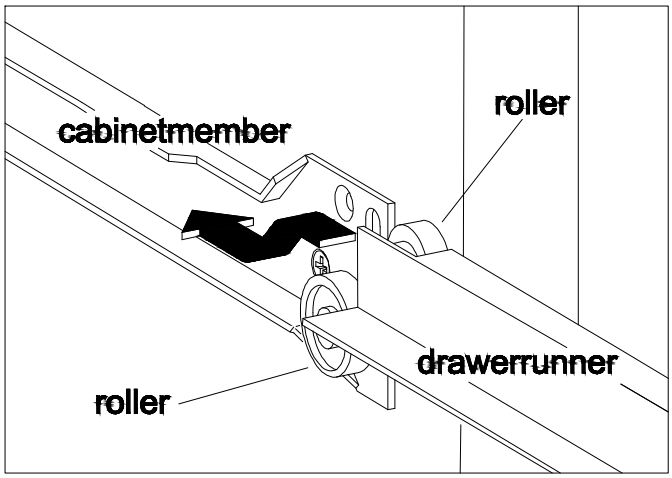


When you put the drawer, please note that the drawer wheels on top of the wheels of the slide, then check whether the drawer is smooth when pulled out. Otherwise, the drawer will not be aligned with other drawers.

Step 28



2 pcs

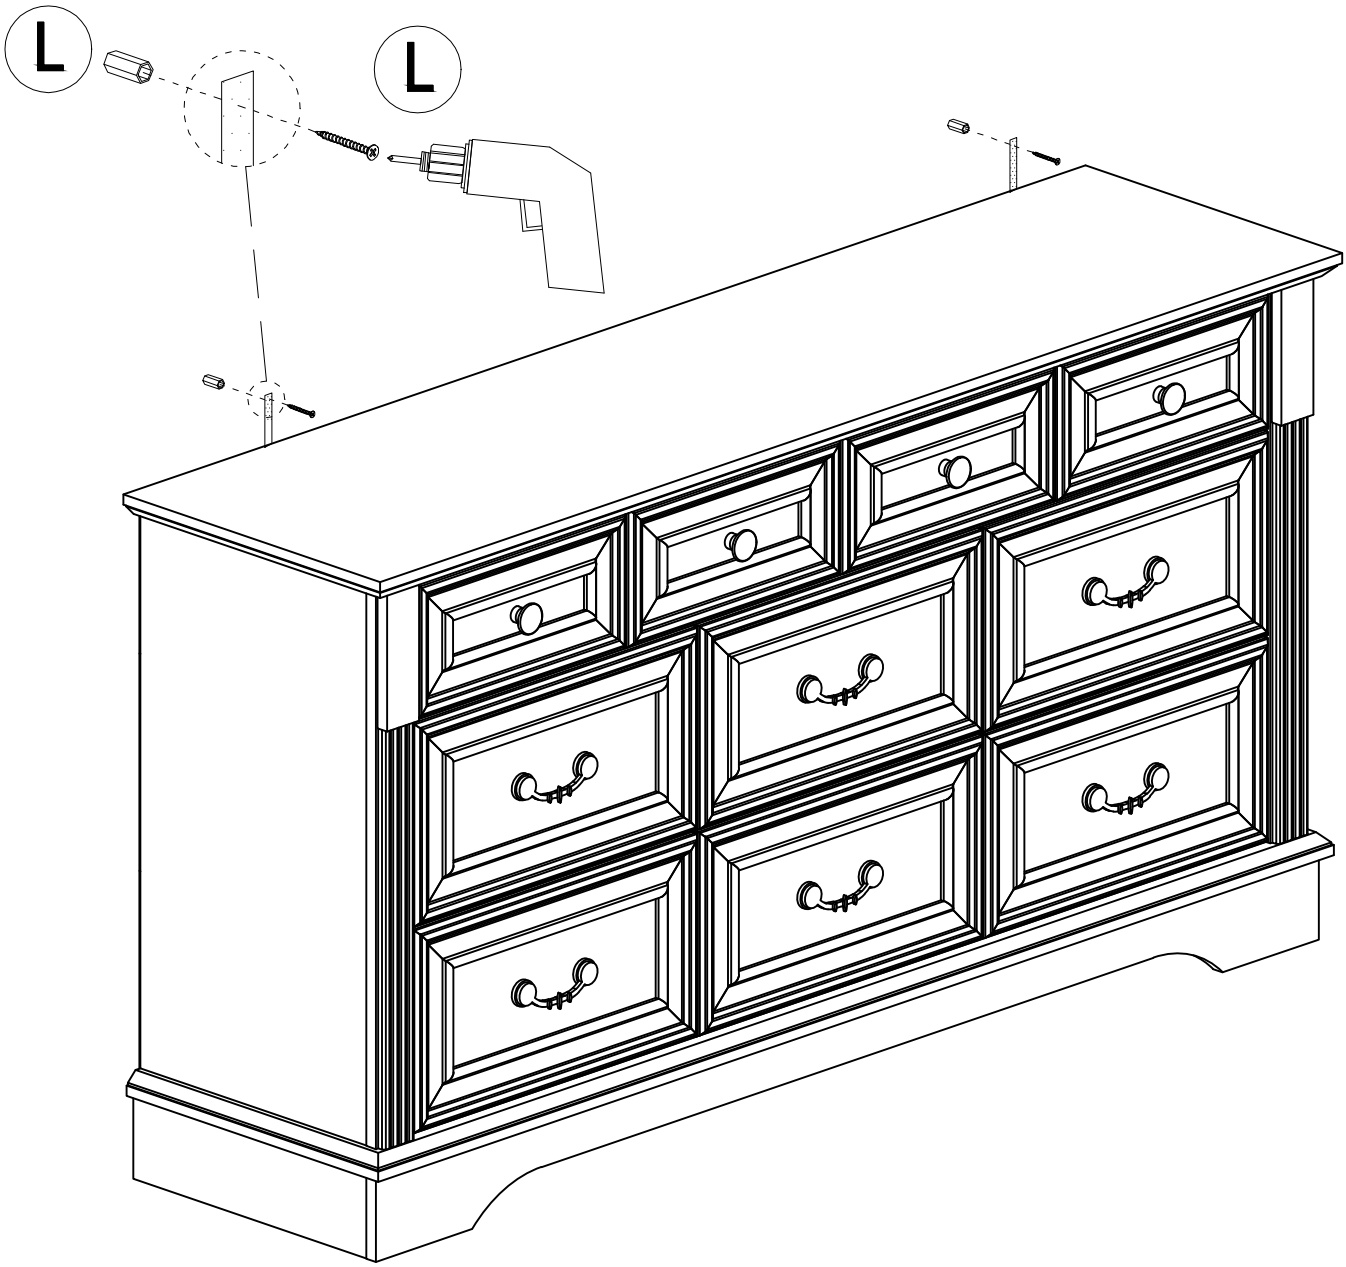

Tools required (not included): stud finder, tape measure, pencil, power drill and 3/16" drill bit. Now, follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE:

-The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud

-Depending upon your wall construction, different anchor hardware maybe required. Please contact your local hardware store for assistance

-Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping causing any accidents or damage

-The tipping restraints are intended only as a deterrent, and they are not a substitute for proper adult supervision.

-The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately

FINAL

Great, you got a 10 drawer dresser !

