



ASSEMBLY INSTRUCTION

SKU NO. : N736P432628
NIGHTSTAND











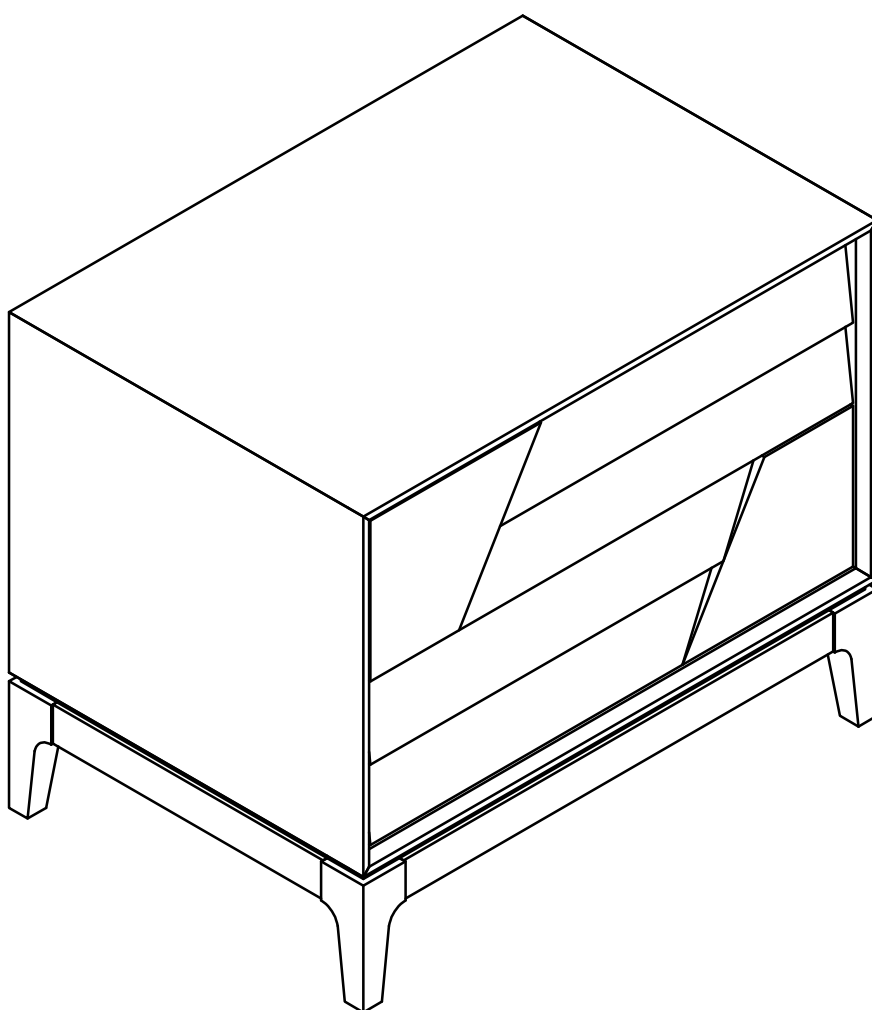


ASSEMBLY INSTRUCTION




SKU NO. : N736P432628

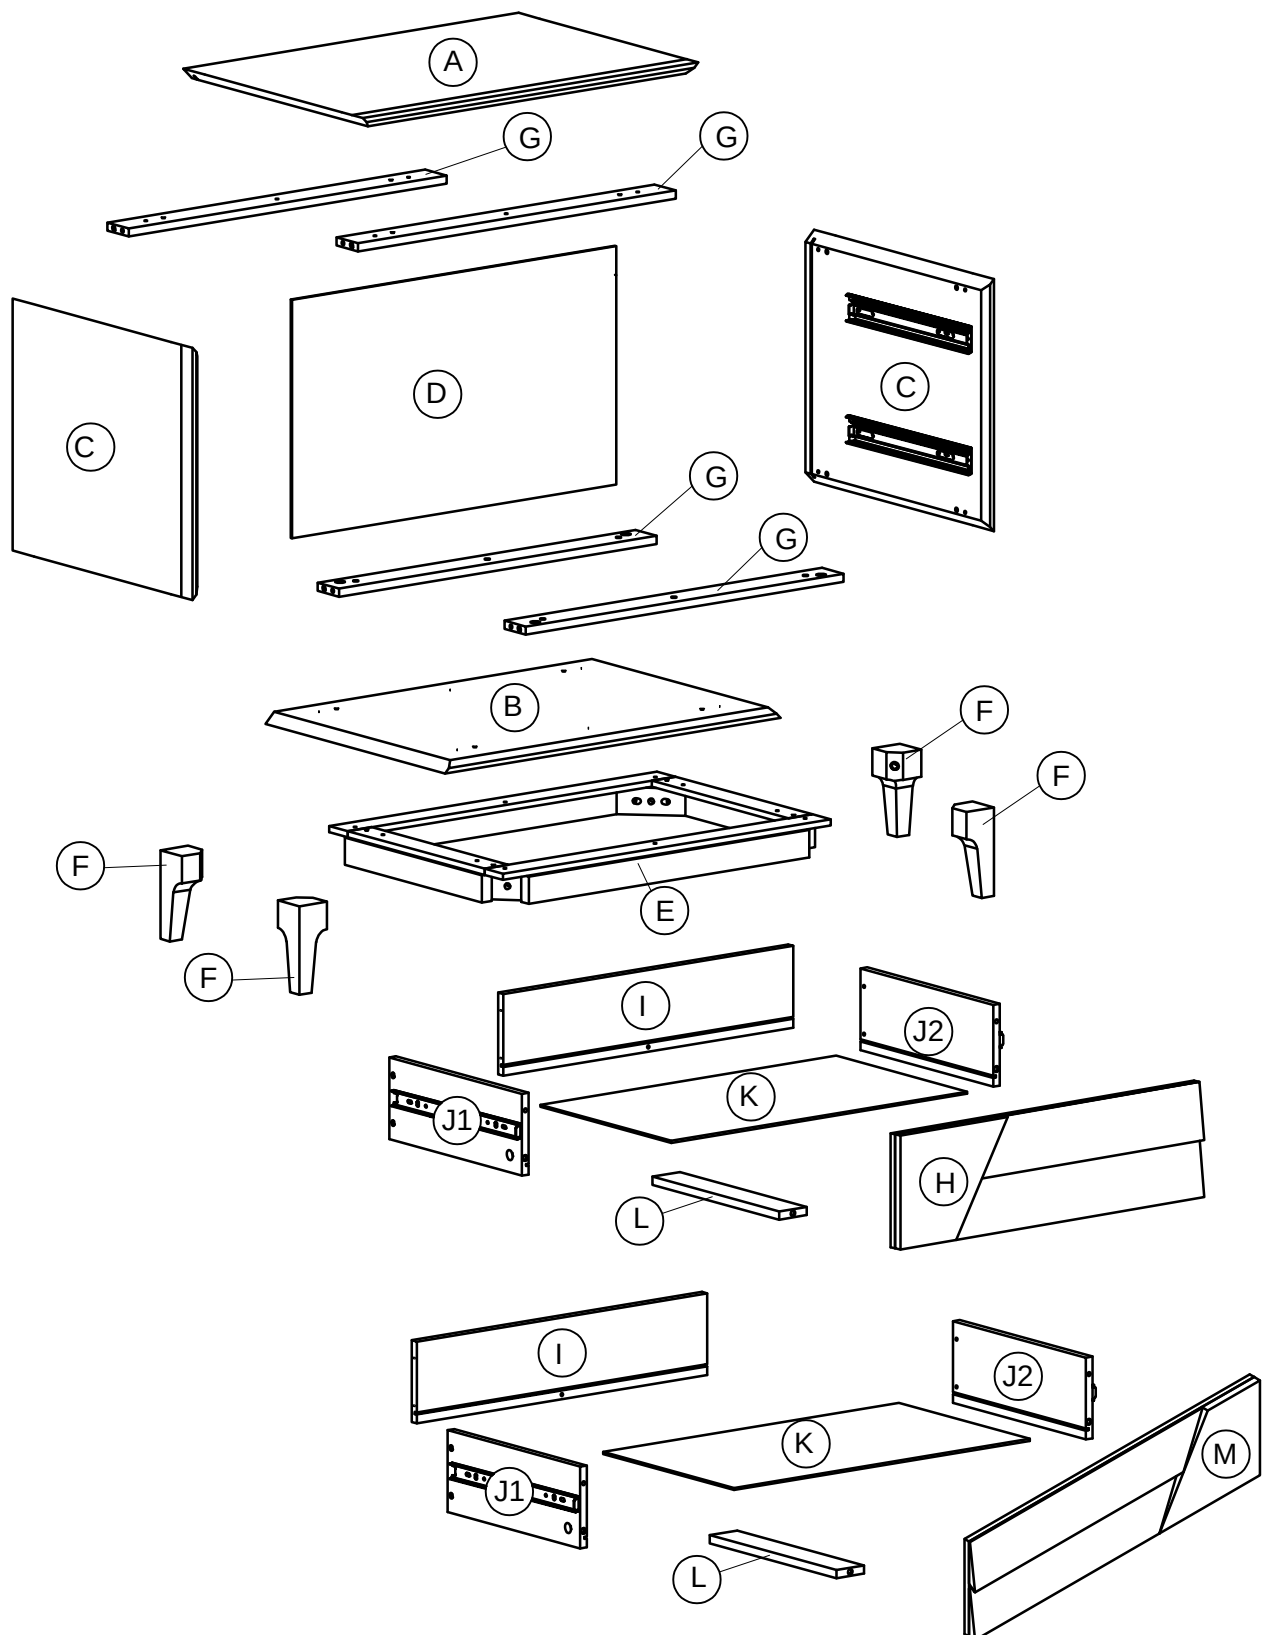


PART LIST

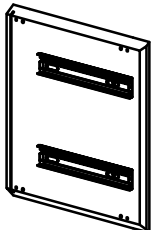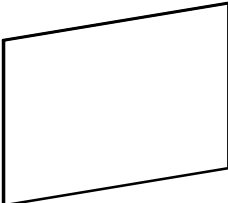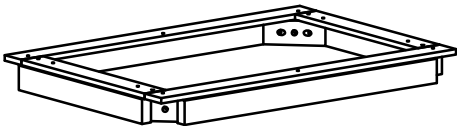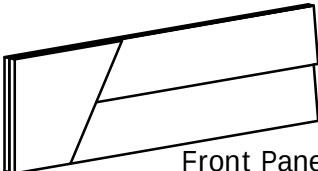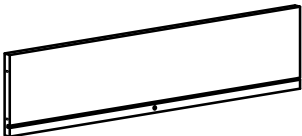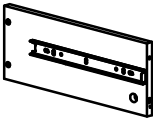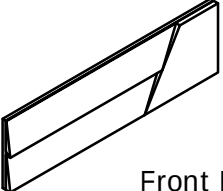(A) x 1  Top Panel	(B) x 1  Bottom Panel
(C) x 2  Side Panel	(D) x 1  Back Panel
(E) x 1  Base Frame	(F) x 4  Leg
(G) x 4  Connect Bar	(H) x 1  Front Panel 1- Drawer
(I) x 2  Back Panel- Drawer	(J1) x 2  L-Side Panel- Drawer
(J2) x 2  R-Side Panel- Drawer	(K) x 2  Bottom Panel- Drawer
(L) x 2  Support Bar- Drawer	(M) x 1  Front Panel 2- Drawer

HARDWARE LIST

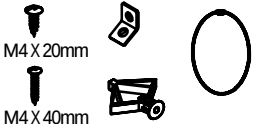1	 M4x25mm Wood Screw 10pcs + 1pc	2	 M4x20mm Wood Screw 22pcs + 1pc	3	 Ø6 x 30 mm Wood dowel 12pcs + 1pc
4	 Ø6 x 20 mm Wood dowel 12pcs + 1pc	5	 Ø15x9mm Cam Head 14pcs + 1pc	6	 Ø6x35mm Cam Bridge 14pcs + 1pc
7	 M6 x 40 mm Bolt 4pcs + 1pc	8	 Ø19 x M6 x 1 mm Flat Washer 4pcs + 1pc	9	 M4*110 Allen key 1pc
10	 M4 X 20mm M4 X 40mm Anti-tip 2 set				


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



STEP 1: Following below illustration

-Using hardware #2 and #4 connect G with A


2		6
4		4

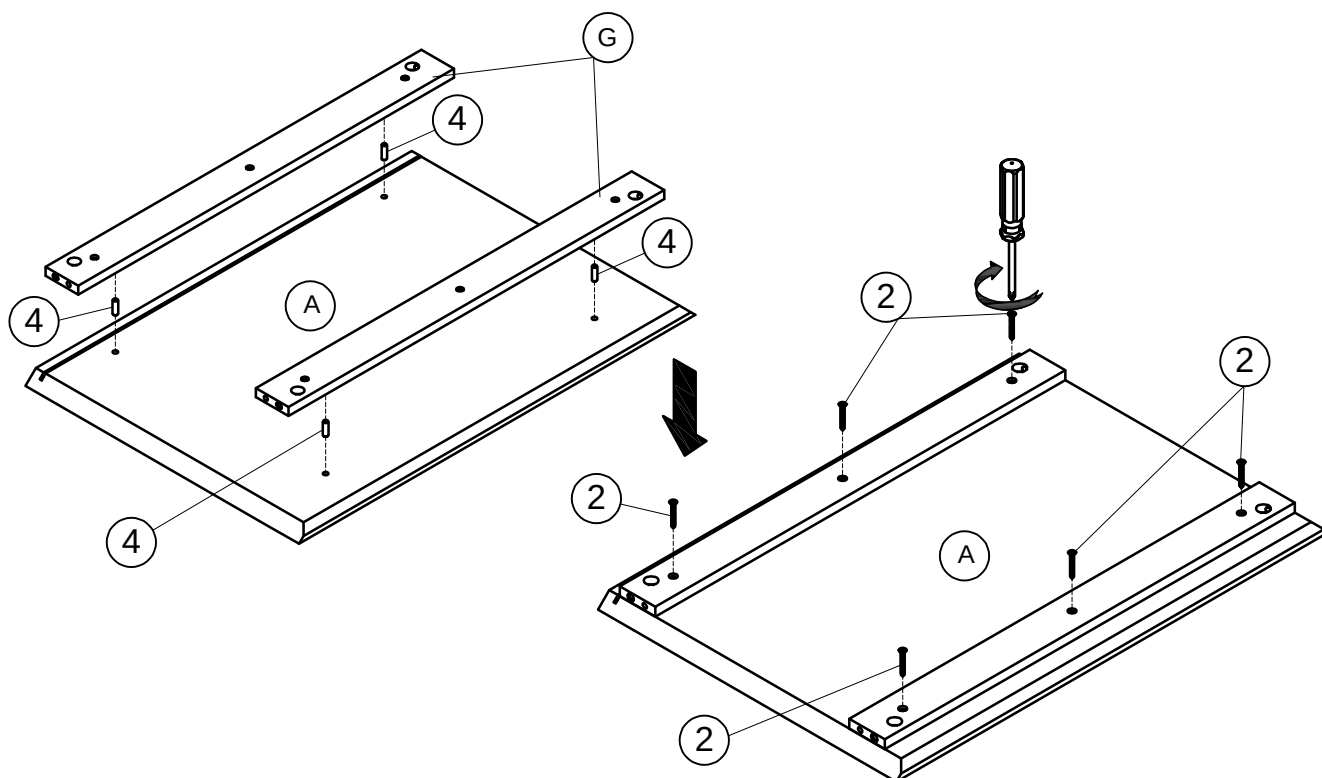

STEP 2: Following below illustration

-Using hardware #2 and #4 connect G with B


2		6
4		4

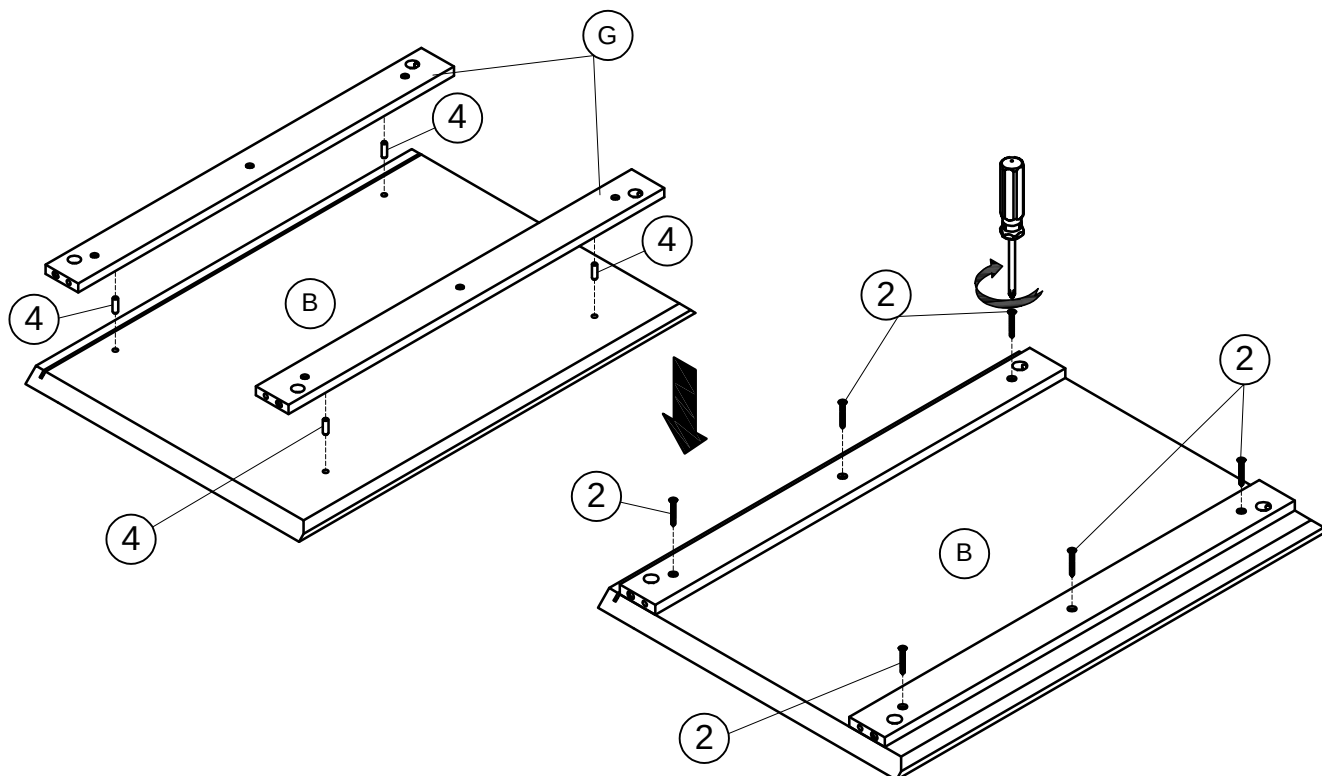

STEP 3:

Following below illustration
-Using hardware #3 and #6 assembly into C


3		8
6		8

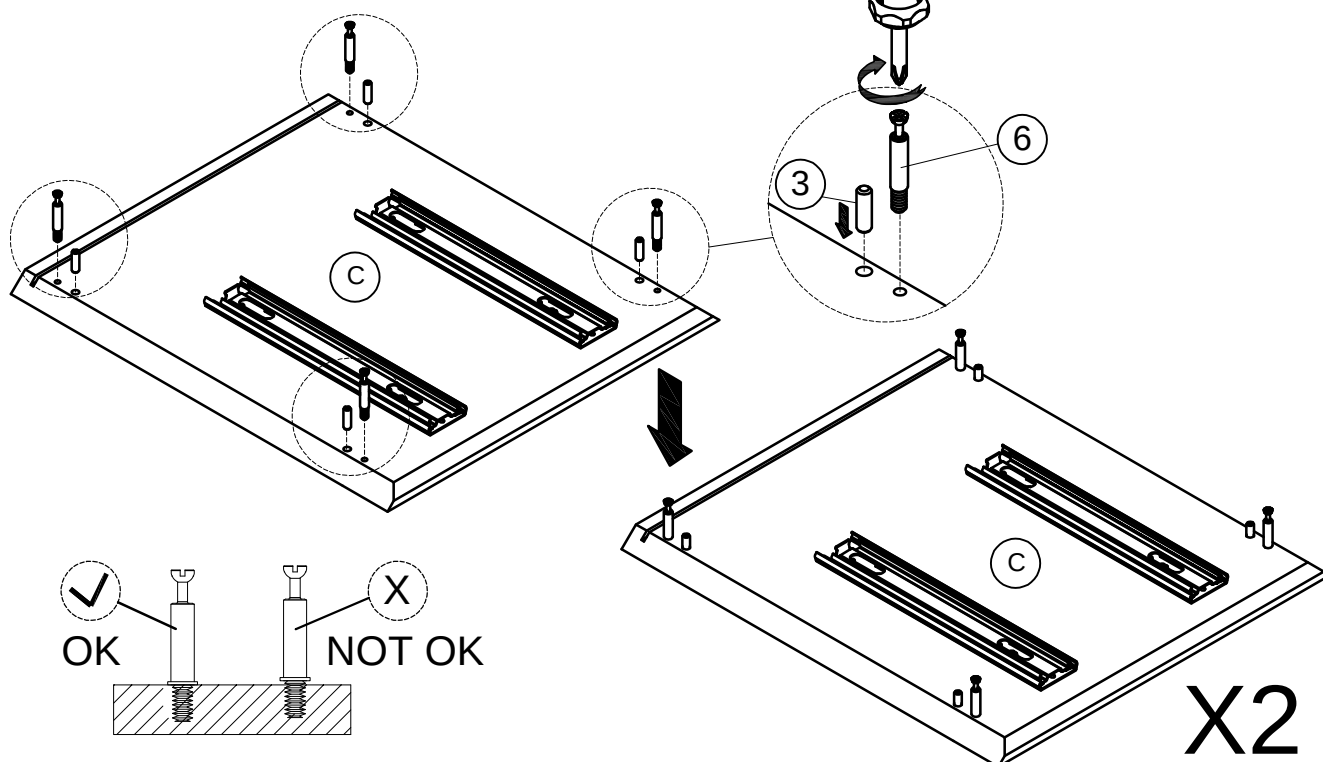

STEP 4:


Following below illustration
-Using hardware #5 connect C with G assembly step 1

5		2
---	--	---

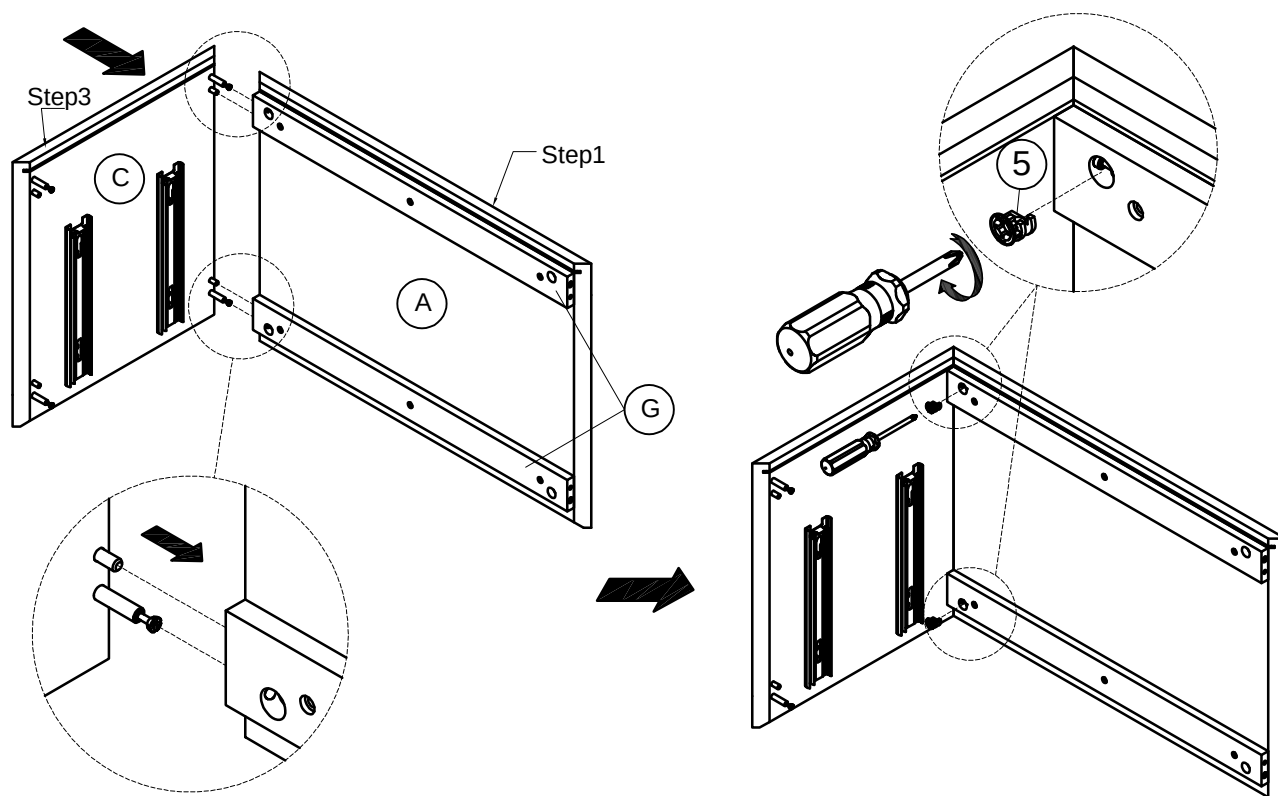


STEP 5: Following below illustration

-Using hardware #5 connect C with G assembly step 2

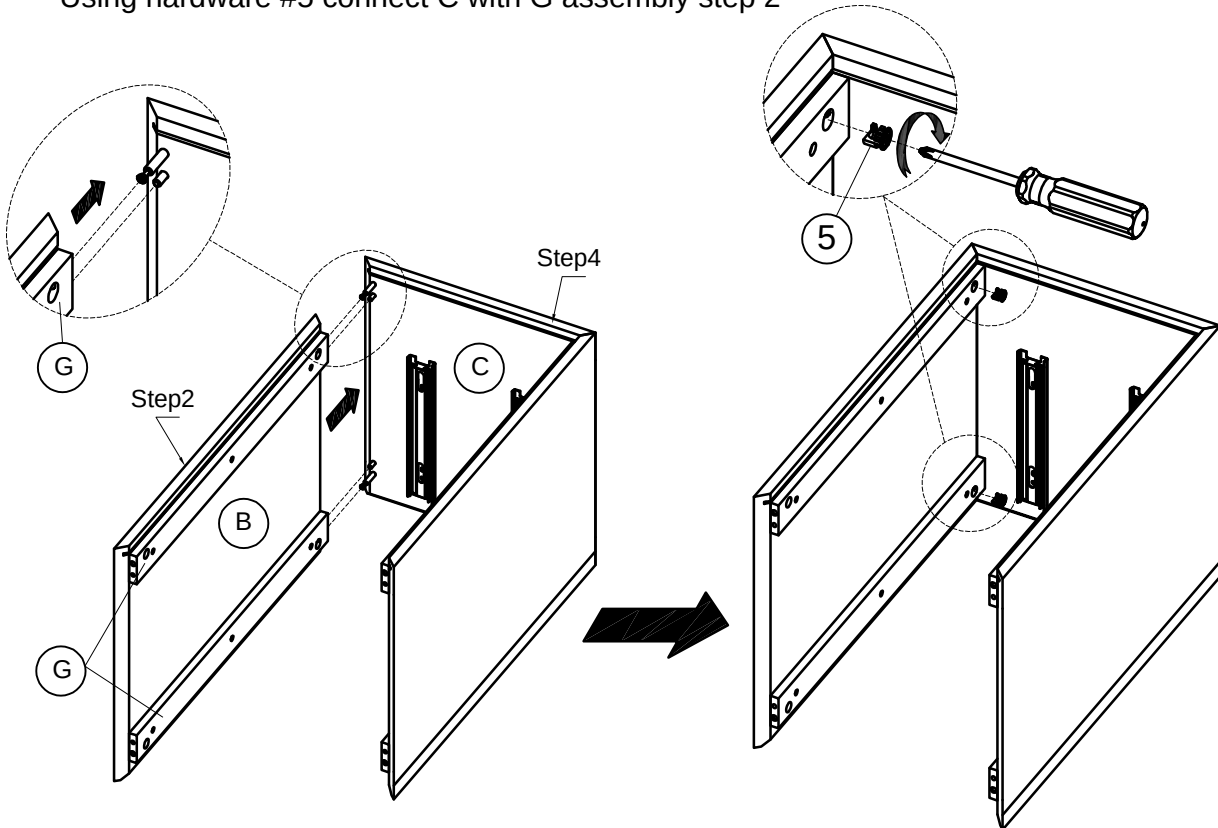

STEP 6: Following below illustration

-Using hardware #5 connect C, D with A, B assembly step 5


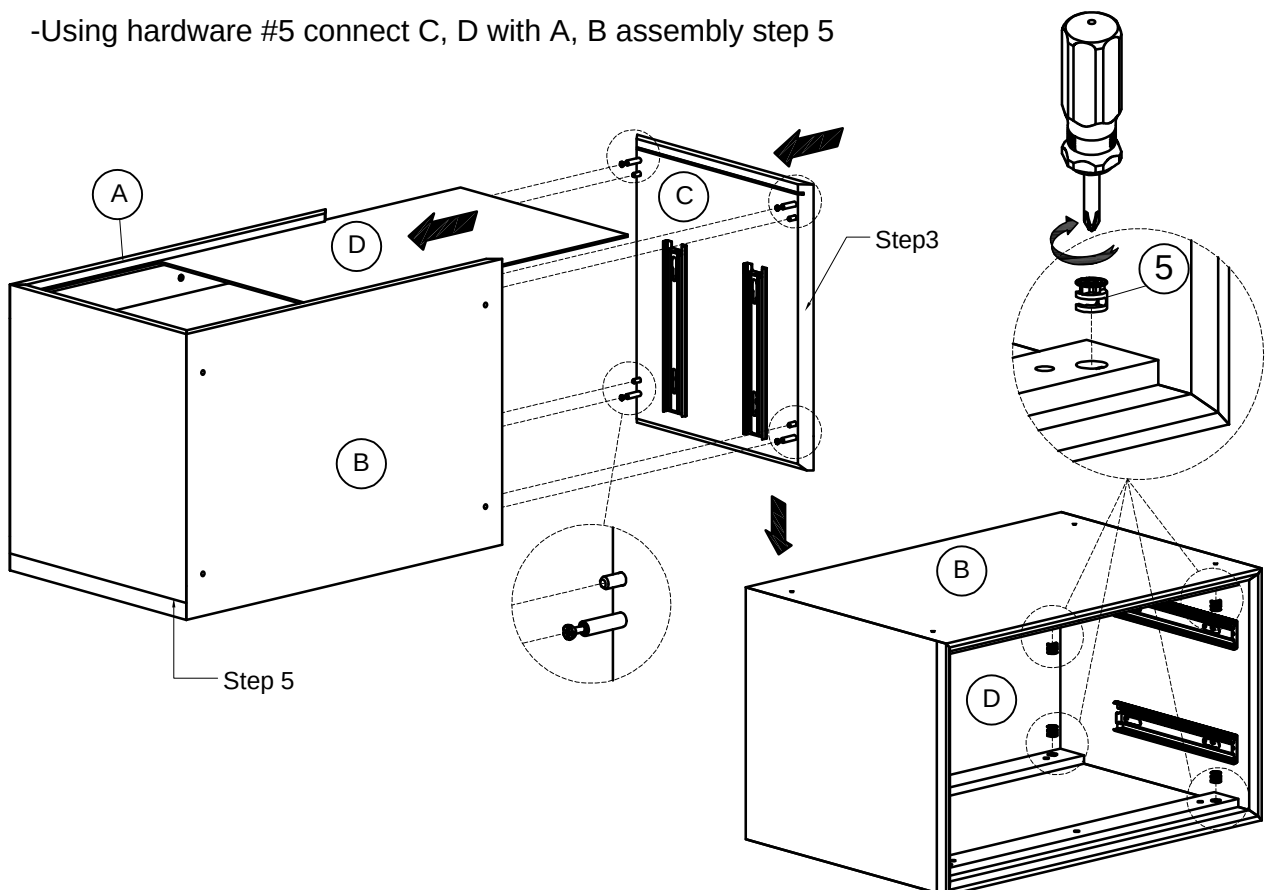


STEP 7:

Following below illustration

-Using hardware #2 and #4 connect E with B assembly step 6

2		10
4		4

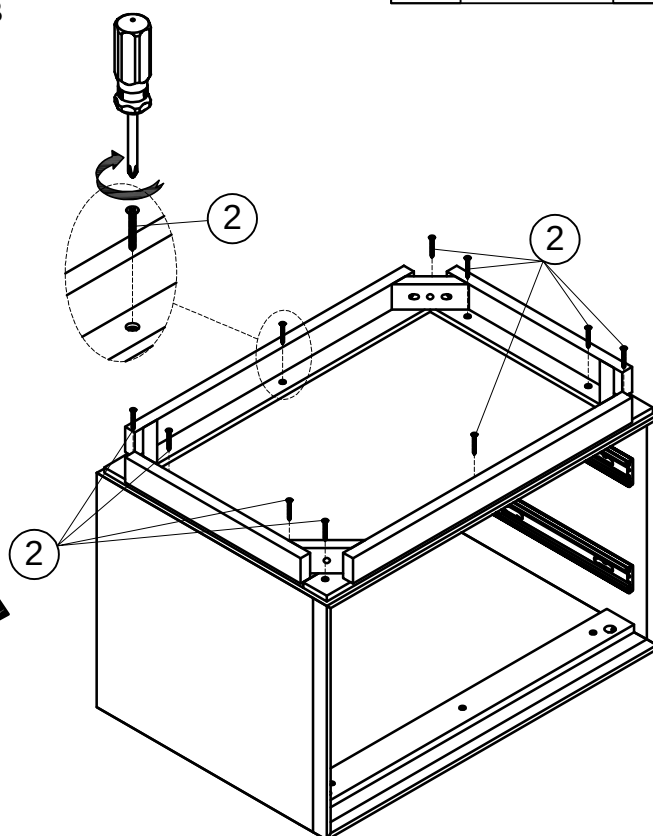
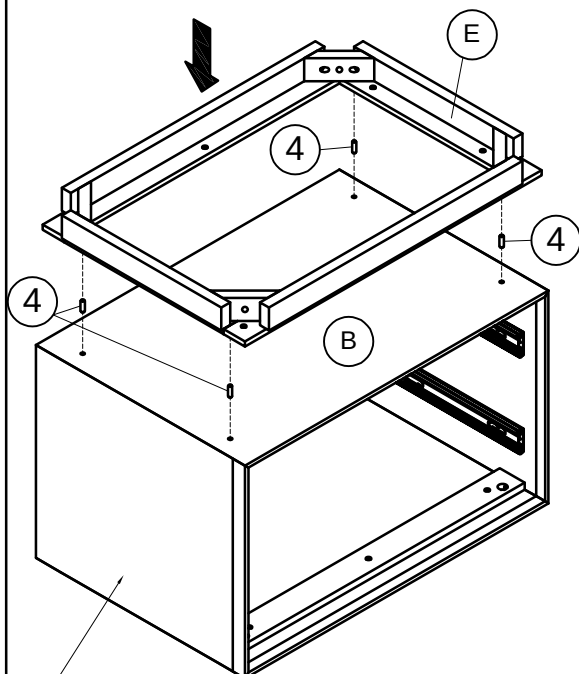


STEP 8:


Following below illustration

-Using hardware #7,#8 connect F with E assembly step 7

7		4
8		4
9		1






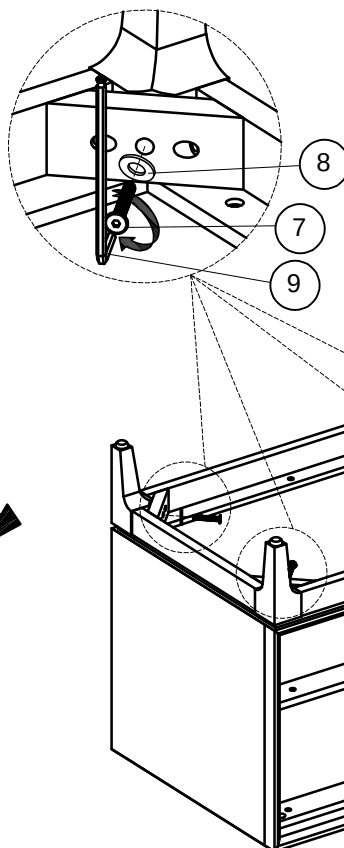
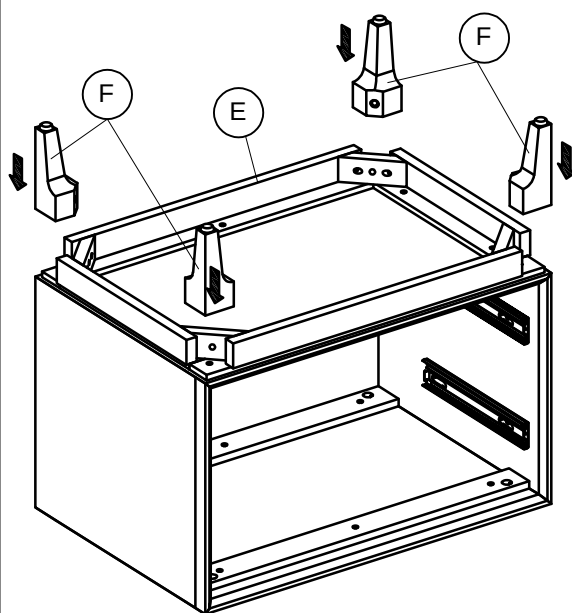


6



6


STEP 9: Following below illustration
-Using hardware #6 assembly into H, M

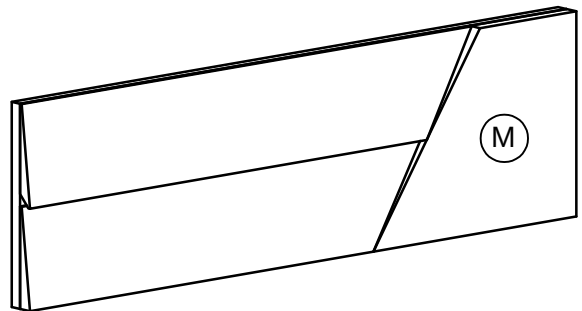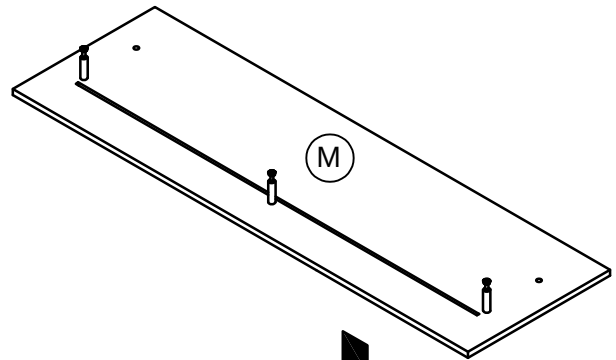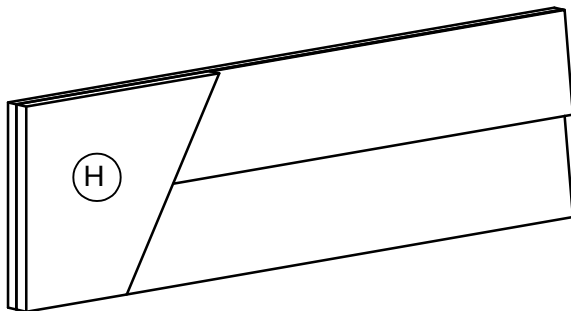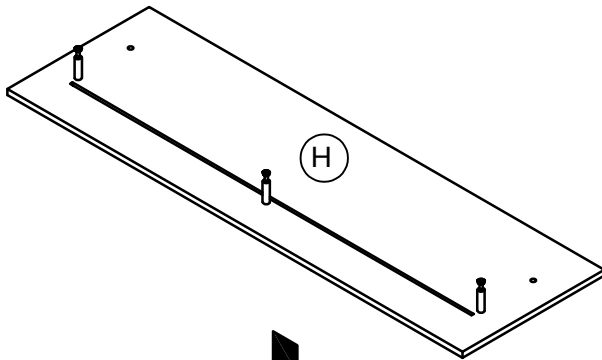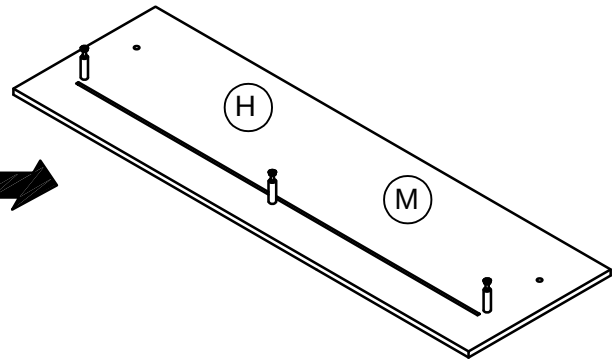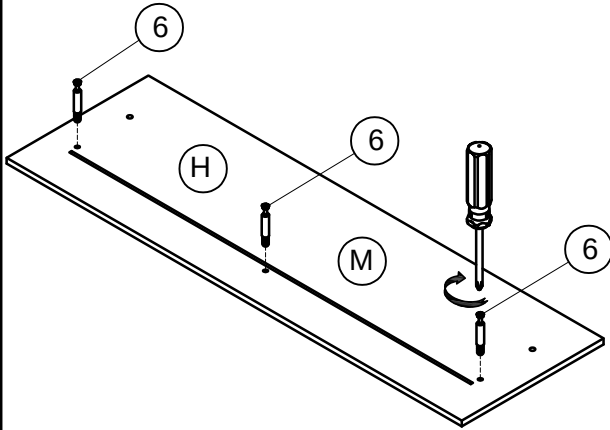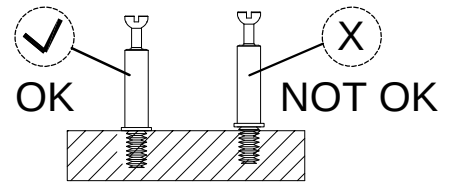

STEP 10: Following below illustration


-Using hardware #3 and #5 connect J1, J2 with H, M

3		4
5		4

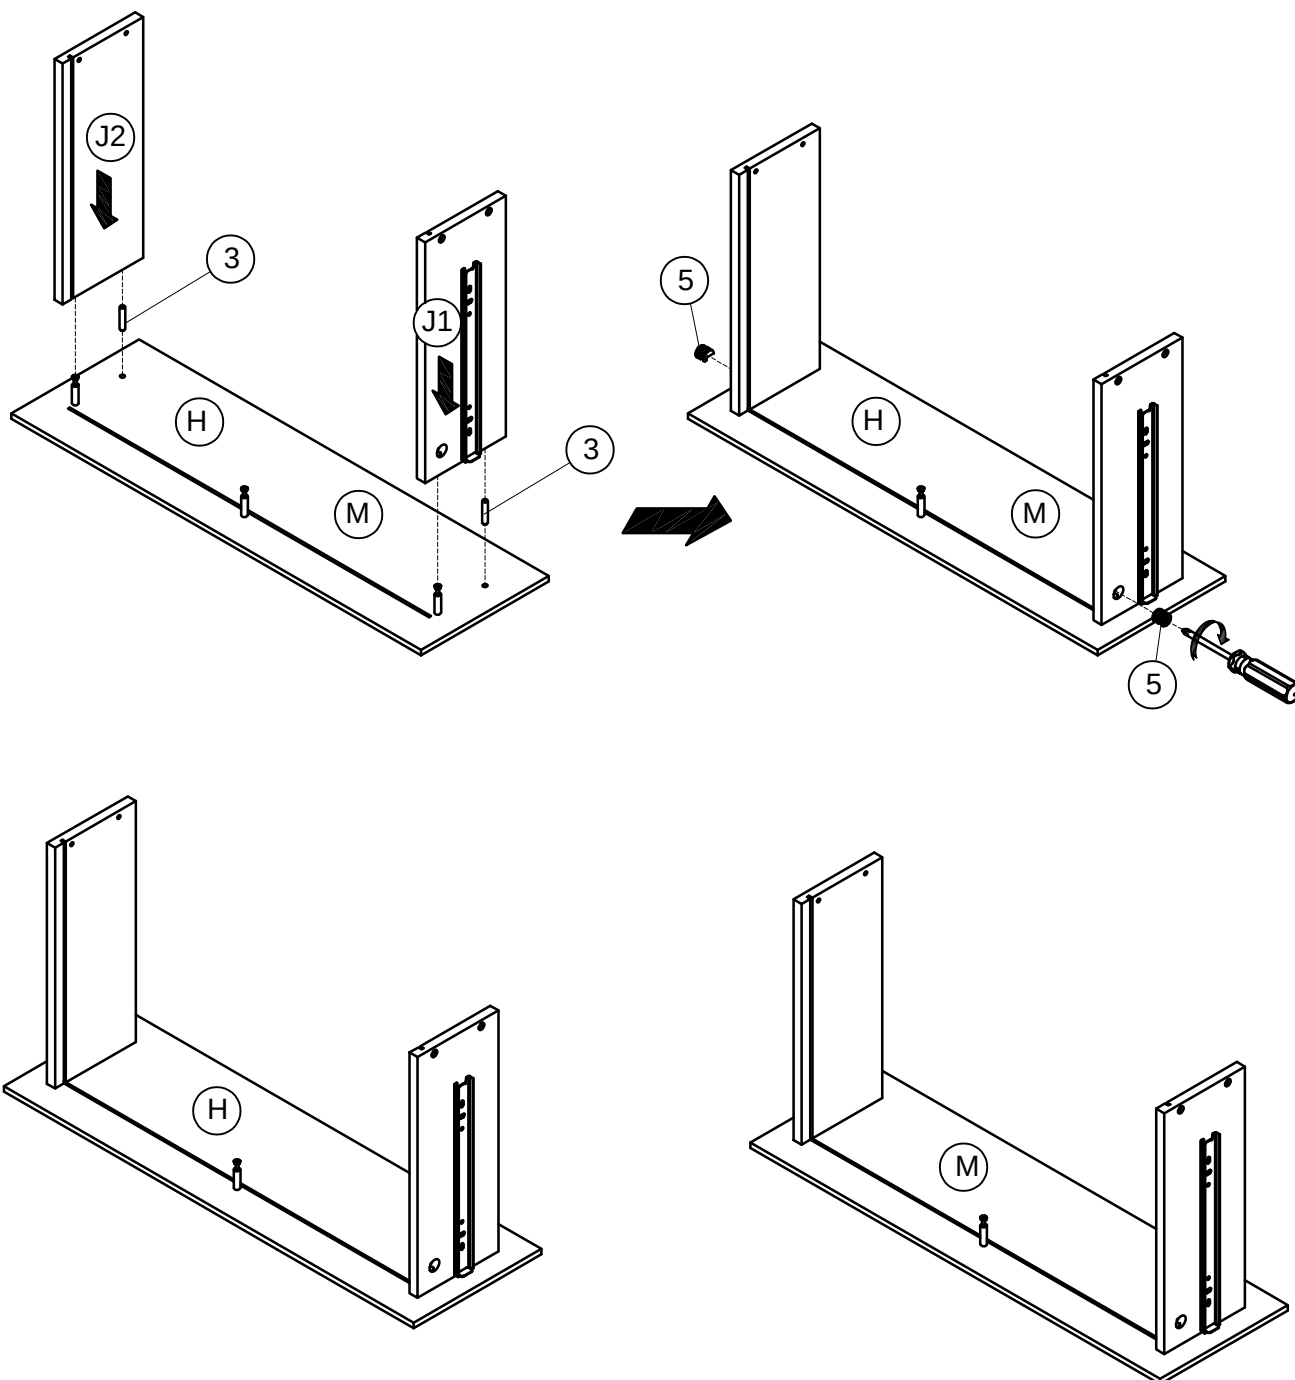


STEP 11: Following below illustration

-Using hardware #5 connect K, L with H, M assembly step 10

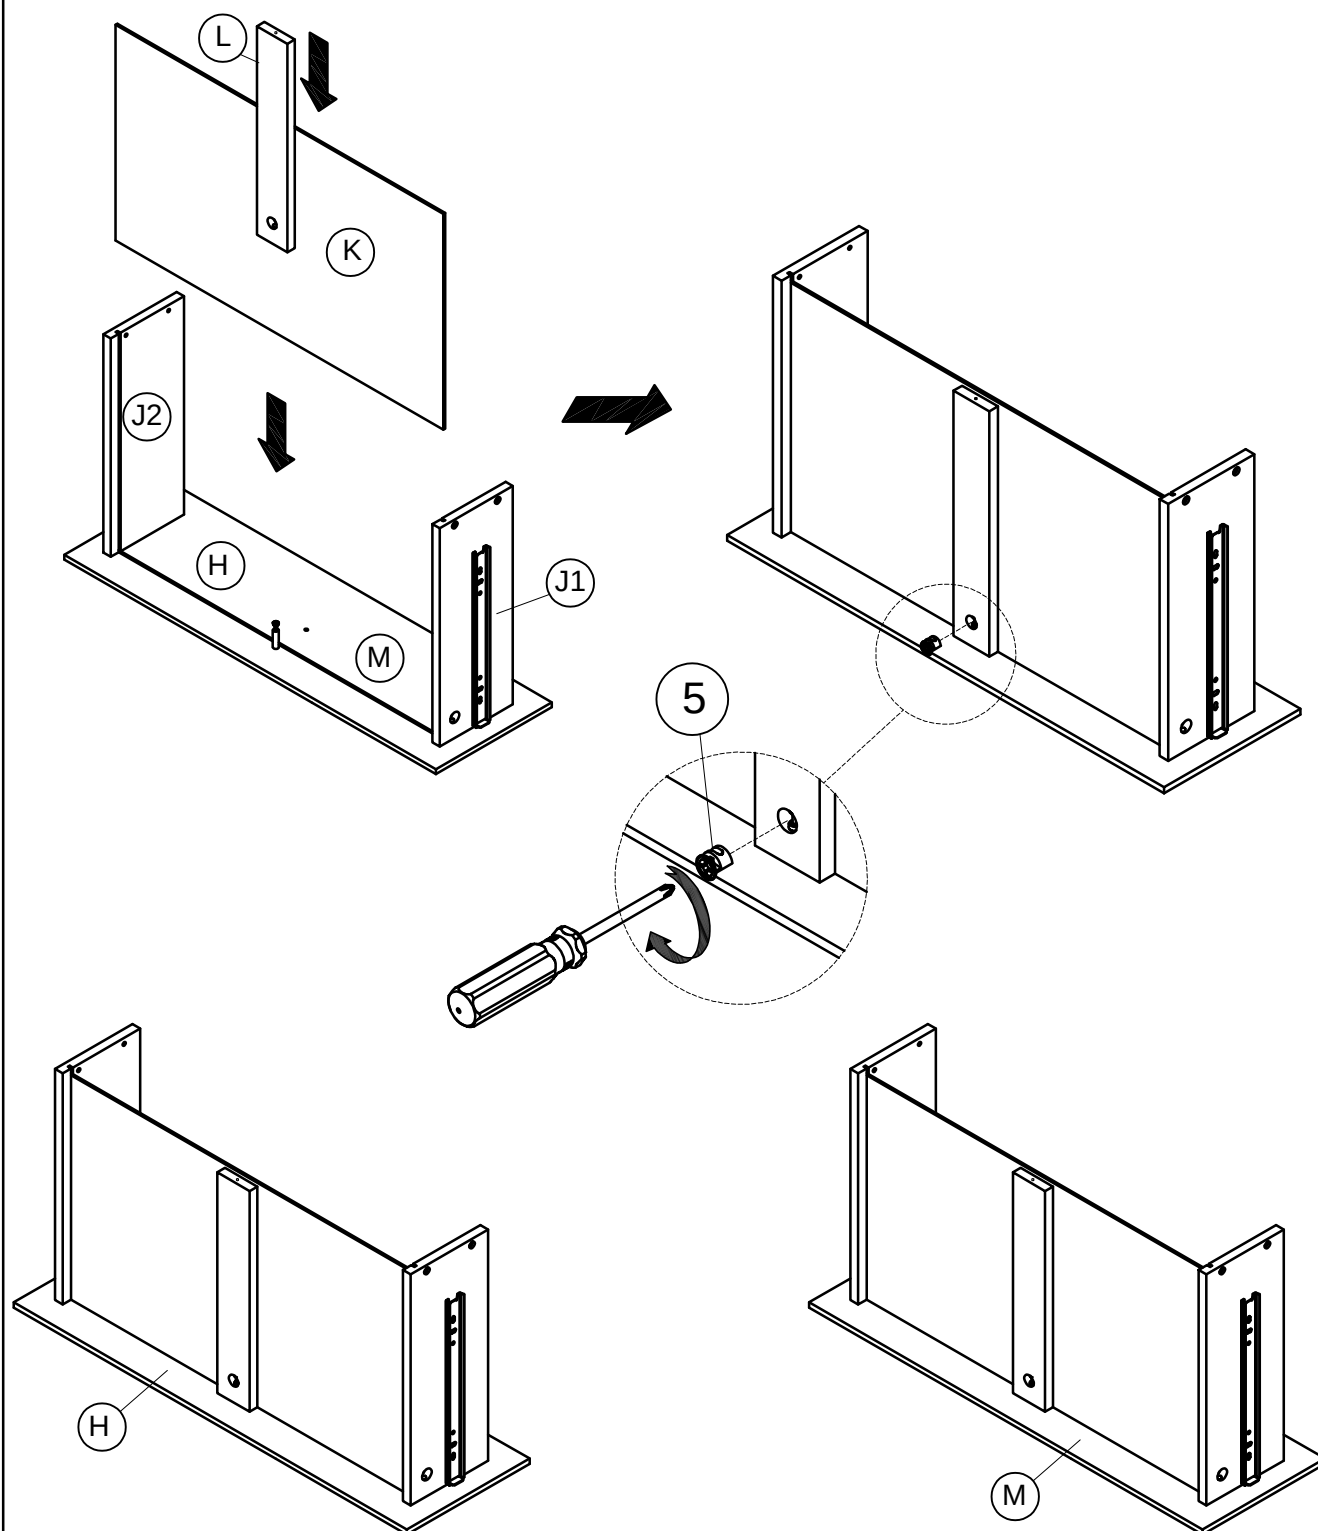


1






10

STEP 12: Following below illustration

-Using hardware #1 connect I with J1, J2 and L assembly step 11

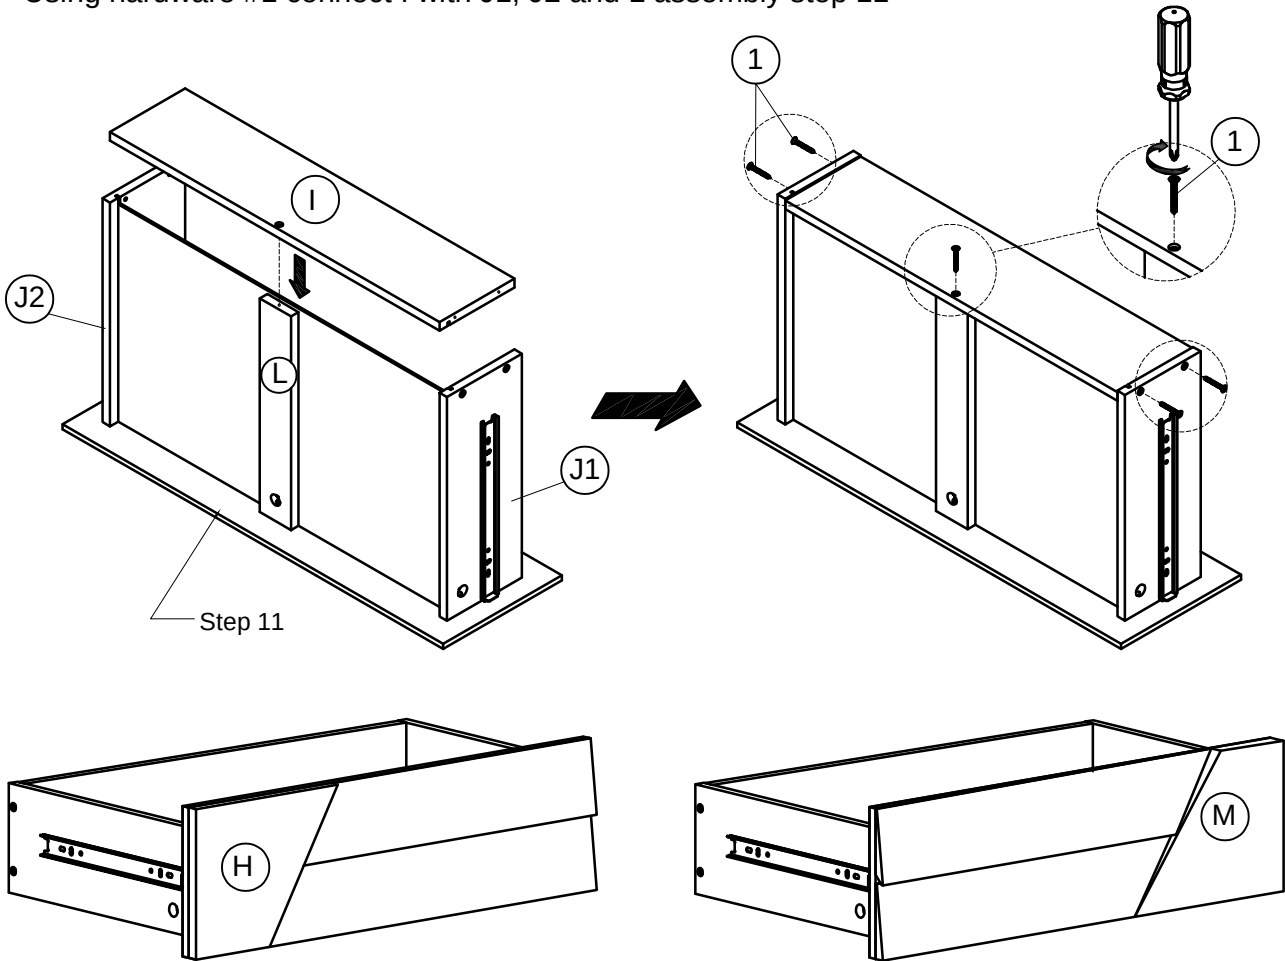

STEP 13: Following below illustration

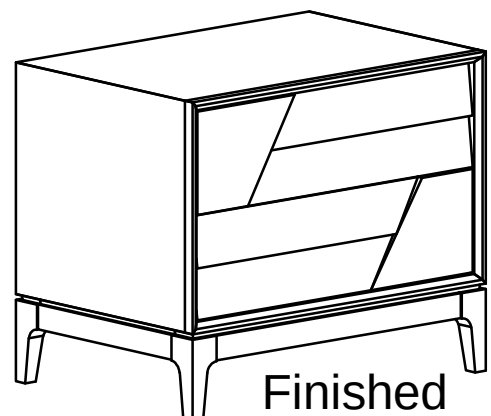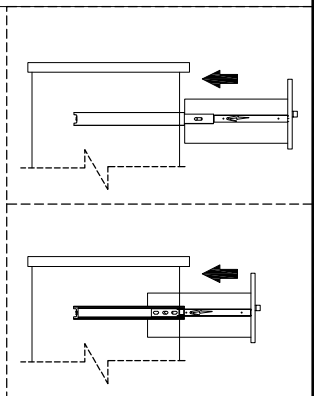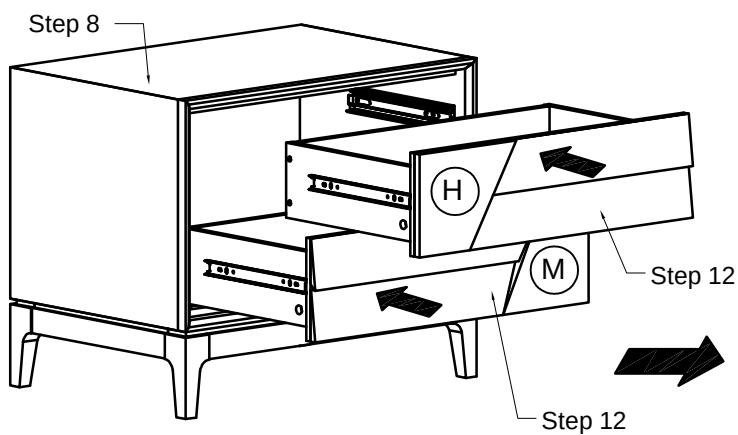



Finished



WARNING


Serious or fatal crushing injuries can occur from furniture tip-over.
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

10A		4	10D		2
10B	 M4 X 20mm	2			
10C	 M4 X 40mm	2	10E		2



NOTE: The screwdriver is not included in the hardware pack.

It can be attached with a wall plug or not, depending on the wall's hardness.

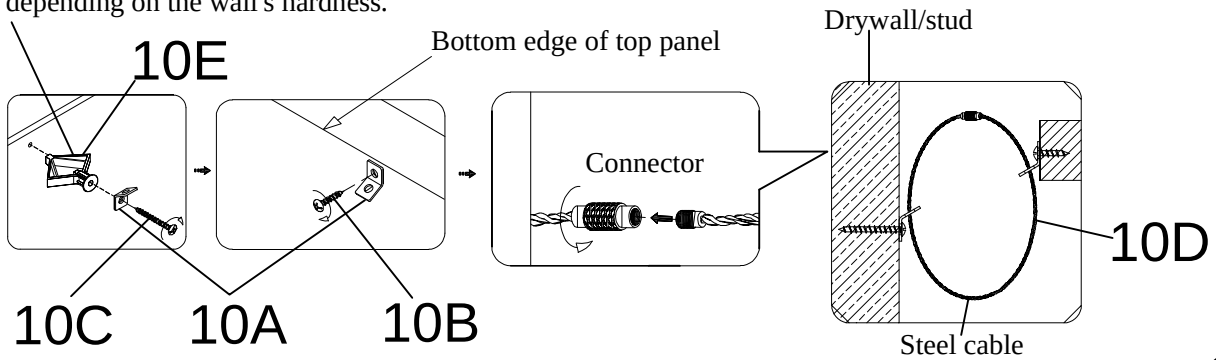

WALL

