



INSTALLATION INSTRUCTIONS FOR 5/8" SINGLE BLACKOUT ROD


NOTE: The 28 to 48 inch rod does not come with center support(s).

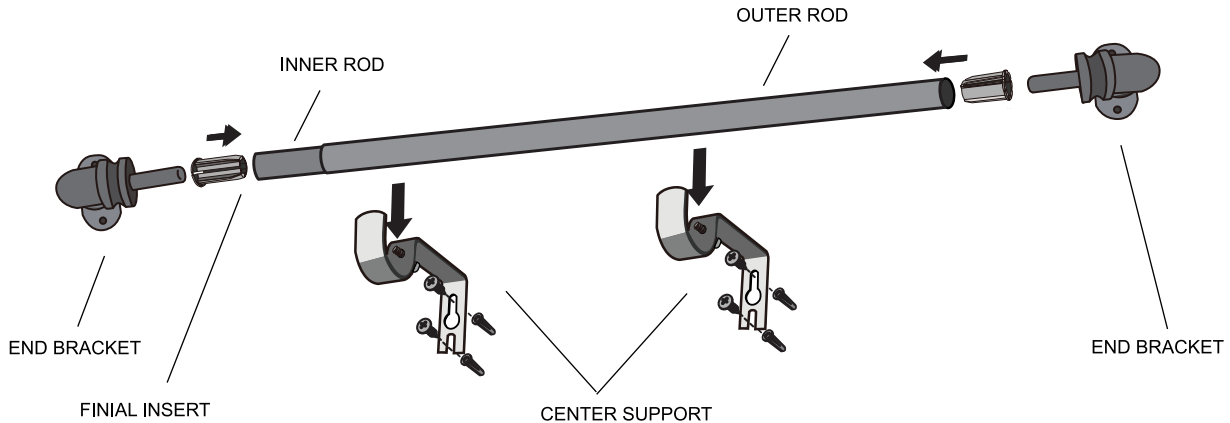


1 MEASURING
Place end brackets against wall at desired locations. Mark screw holes with pencil. Be sure marks are level across opening.

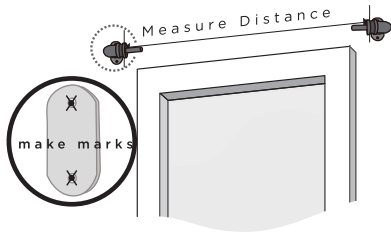

2 MOUNTING END BRACKET
If screws are going directly into wood trim or wall studs, drill a 1/8" pilot hole at pencil marks. If screwing into drywall, follow drywall anchor instruction at the bottom of the page.

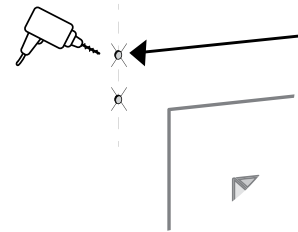


3 ASSEMBLE ROD
Assemble the rod by inserting and sliding the smaller diameter rod into the larger diameter rod. Ensure that finial inserts are exposed on each open end after rod assembly.

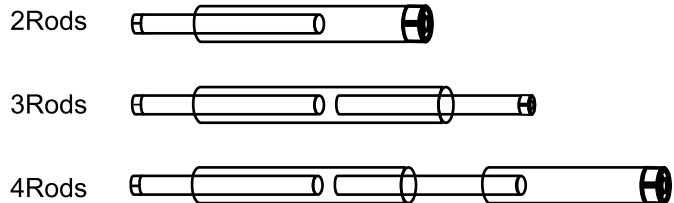


4 ROD TO BRACKET INSTALLATION
There are two sizes of adapters included. For a three-piece-rod, there is only one size of adapter.

a. Push corresponding insert into each end of rod with the fin side going into the pole and the flat end facing out.

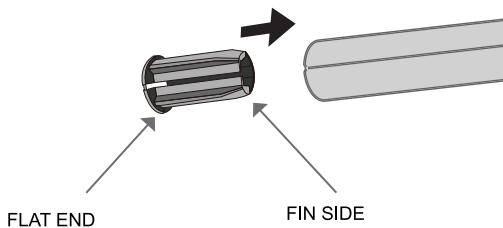

b. Take your assembled rod and insert each end into the end brackets. Insert one of the rod ends into a bracket until it snug, then expand the rod until it has reached the other bracket to insert.

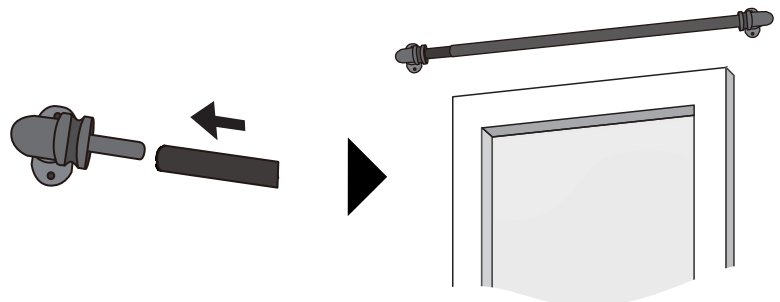

DRYWALL ANCHOR INSTALLATION




If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.

INSTALLATION INSTRUCTIONS FOR 5/8" SINGLE BLACKOUT ROD


5 CENTER SUPPORT PLACEMENT

Place center support(s) at desired locations along the rods. Be sure there is at least one bracket or support placed on each rod. Mark screw holes with pencil. Be sure rods and marks are level across opening.

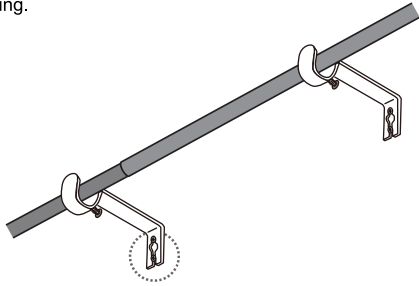


6 CENTER SUPPORT INSTALLATION

Remove rods from end brackets (step 4b in reverse) and drill screw holes for center supports. If screws are going directly into wood trim or wall studs, drill a 1/8" pilot hole at pencil marks. If screwing into drywall, follow dry wall anchor instruction at the bottom of the page.

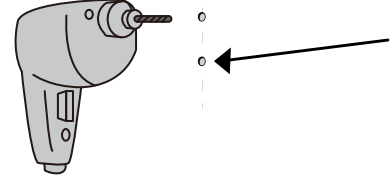


7 ATTCHING DRAPERY

Slide the drapery onto the pole.

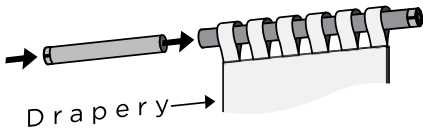


8 ROD/DRAPERY INSTALLATION

Extend and lift rod with drapery, drop into center supports if any. Insert each rod end into each end bracket until fully secure. Adjust drapery to desired position.

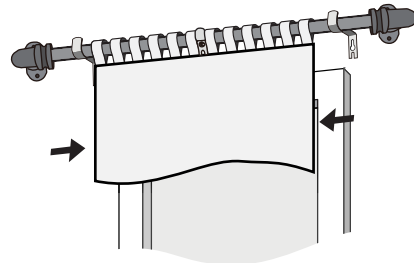

3 LOCKING RODS

Lock rods into position by tightening leveling screw(s) by hand until finger tight. This will prevent the rods from moving.

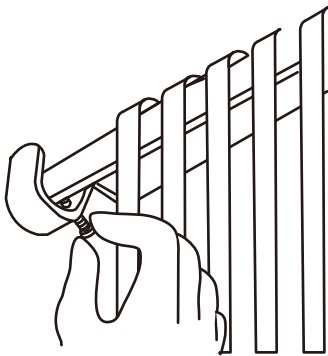

DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.