

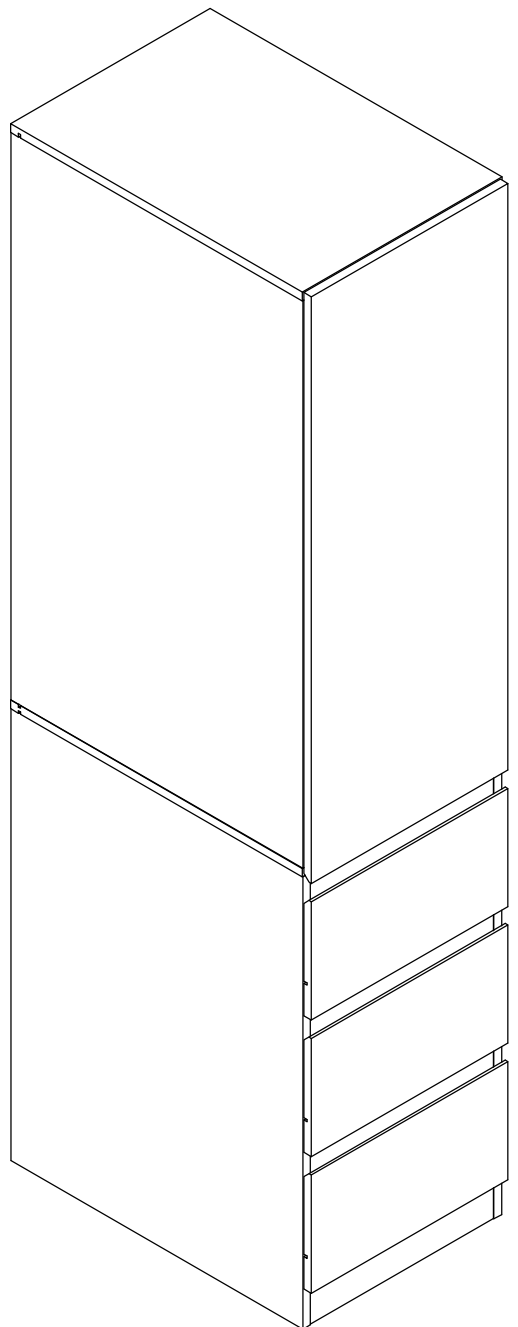
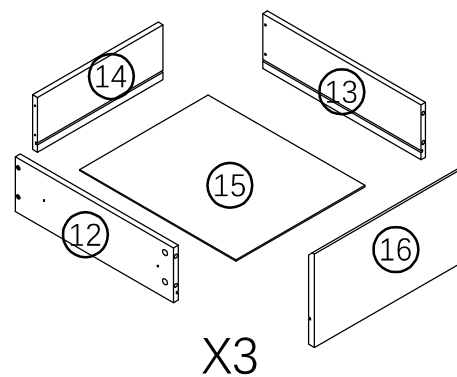
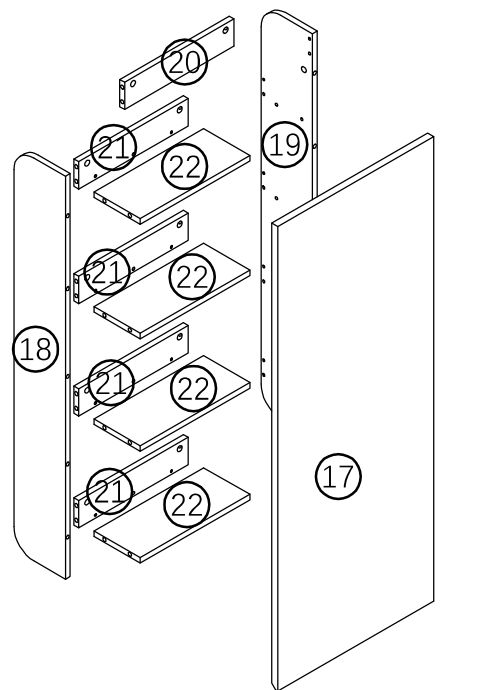
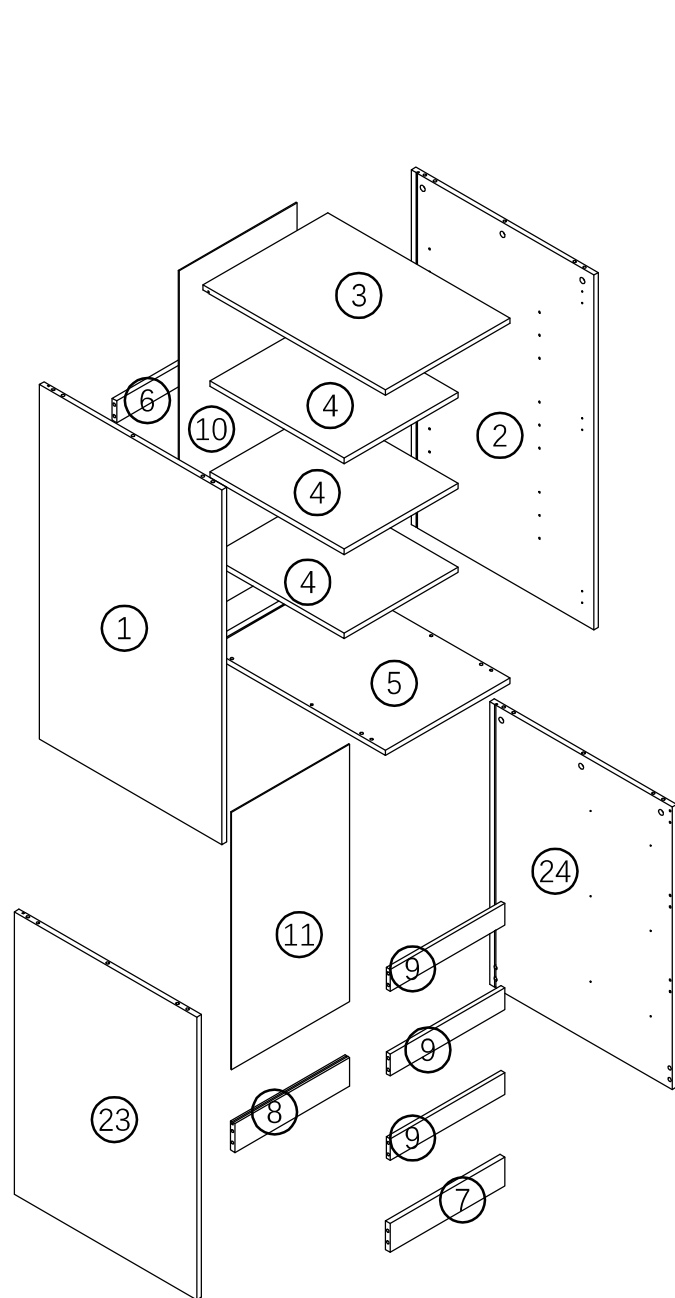








X3


O  01  02  03  04 2PCS	H  12PCS	A  24PCS
P  7*50 6PCS	I  I1  I2 400mm 3PCS	B  24PCS
J  3.5*30 12PCS	C  8*40 12PCS	
K  10PCS	D  64PCS	
L  3*12 10PCS	E  64PCS	
M  3.5*14 30PCS	F  6*30 18PCS	
N  3.5*12 12PCS	G  3PCS	

1

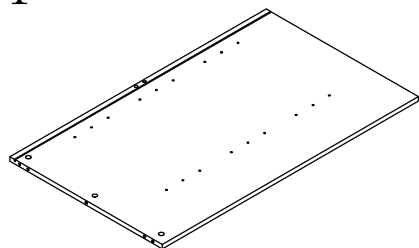


985*585 1PS

2

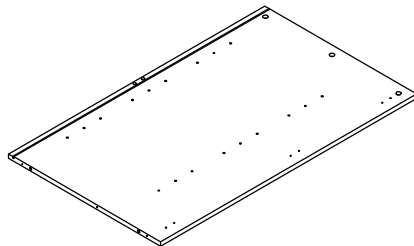


985*585 1PS

3

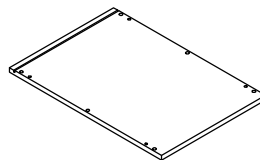


400*585 1PS

4

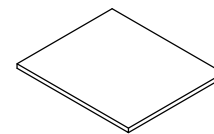


366*429 3PS

5

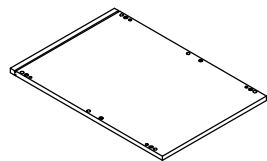


400*585 1PS

6

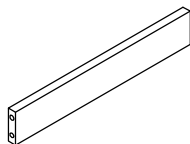


368*60 1PS

7

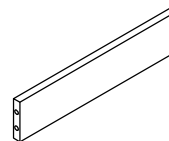


368*80 1PS

8

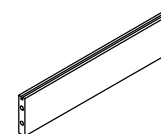


368*80 1PS

9

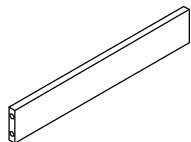


368*60 3PS

10




994*378 1PS

11




714*378 1PS

12

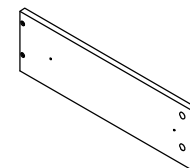


400*120 3PS

13

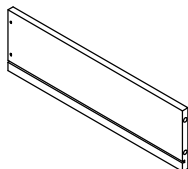


400*120 3PS

14

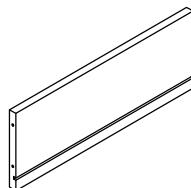


318*120 3PS

15











326*396 3PS


16

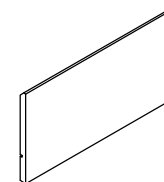


394*205 3PS

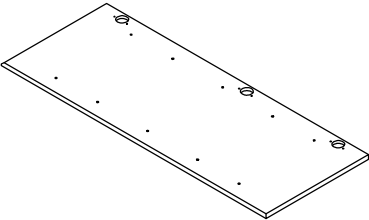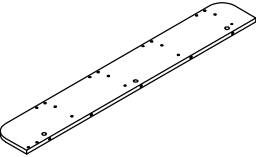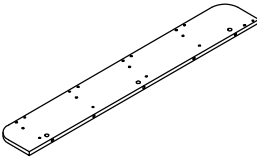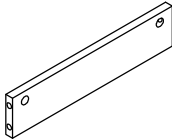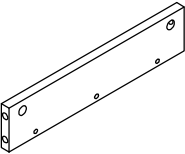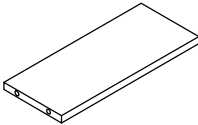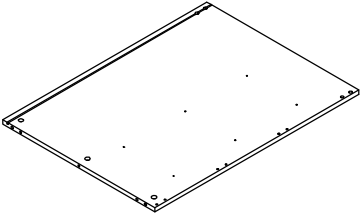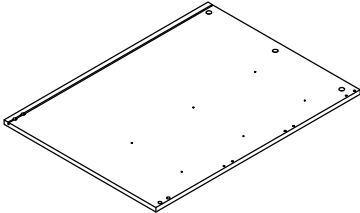17  1018*394 1PS	18  883*130 1PS	19  883*130 1PS	20  277*60 1PS
21  277*60 4PS	22  277*117 4PS	23  785*585 1PS	24  785*585 1PS


1

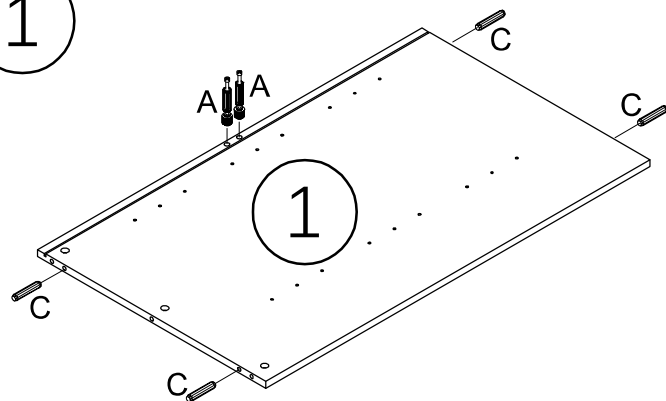


2

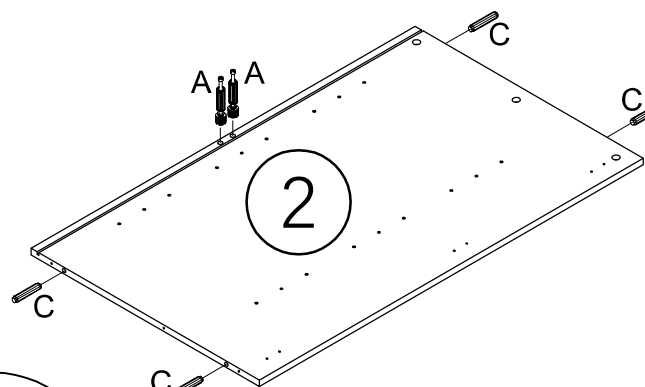


3

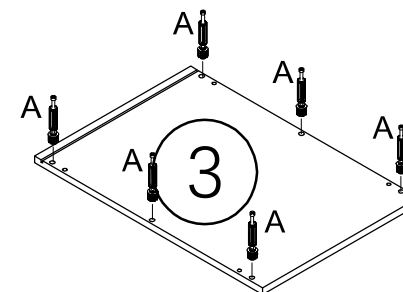


23

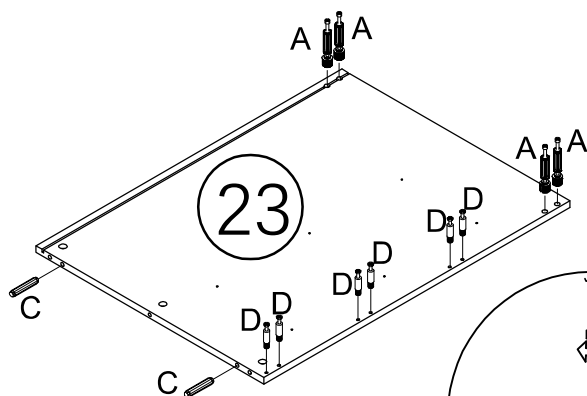



24

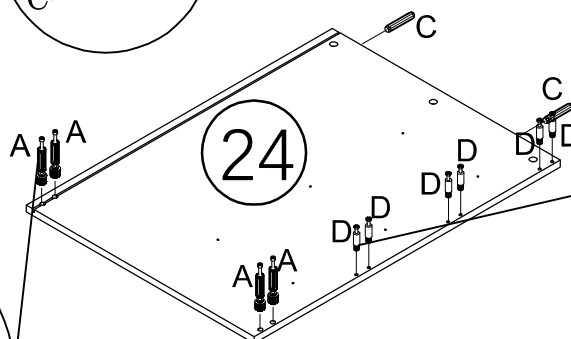

D

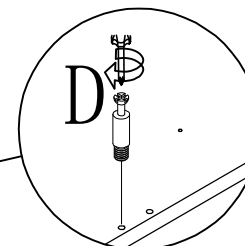

5

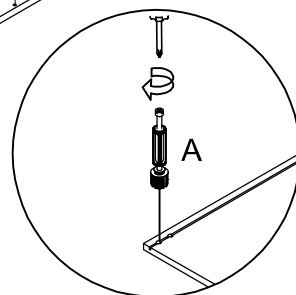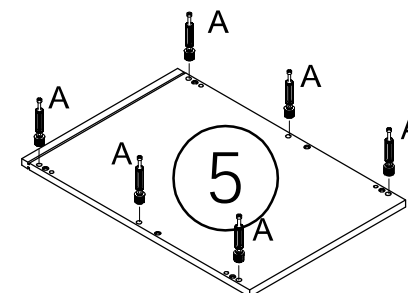


	A*24
	C*12
	D*12

put A on board 1 2 3 5 23 24

put C on board 1 2 23 24


put D on board 23 24

2

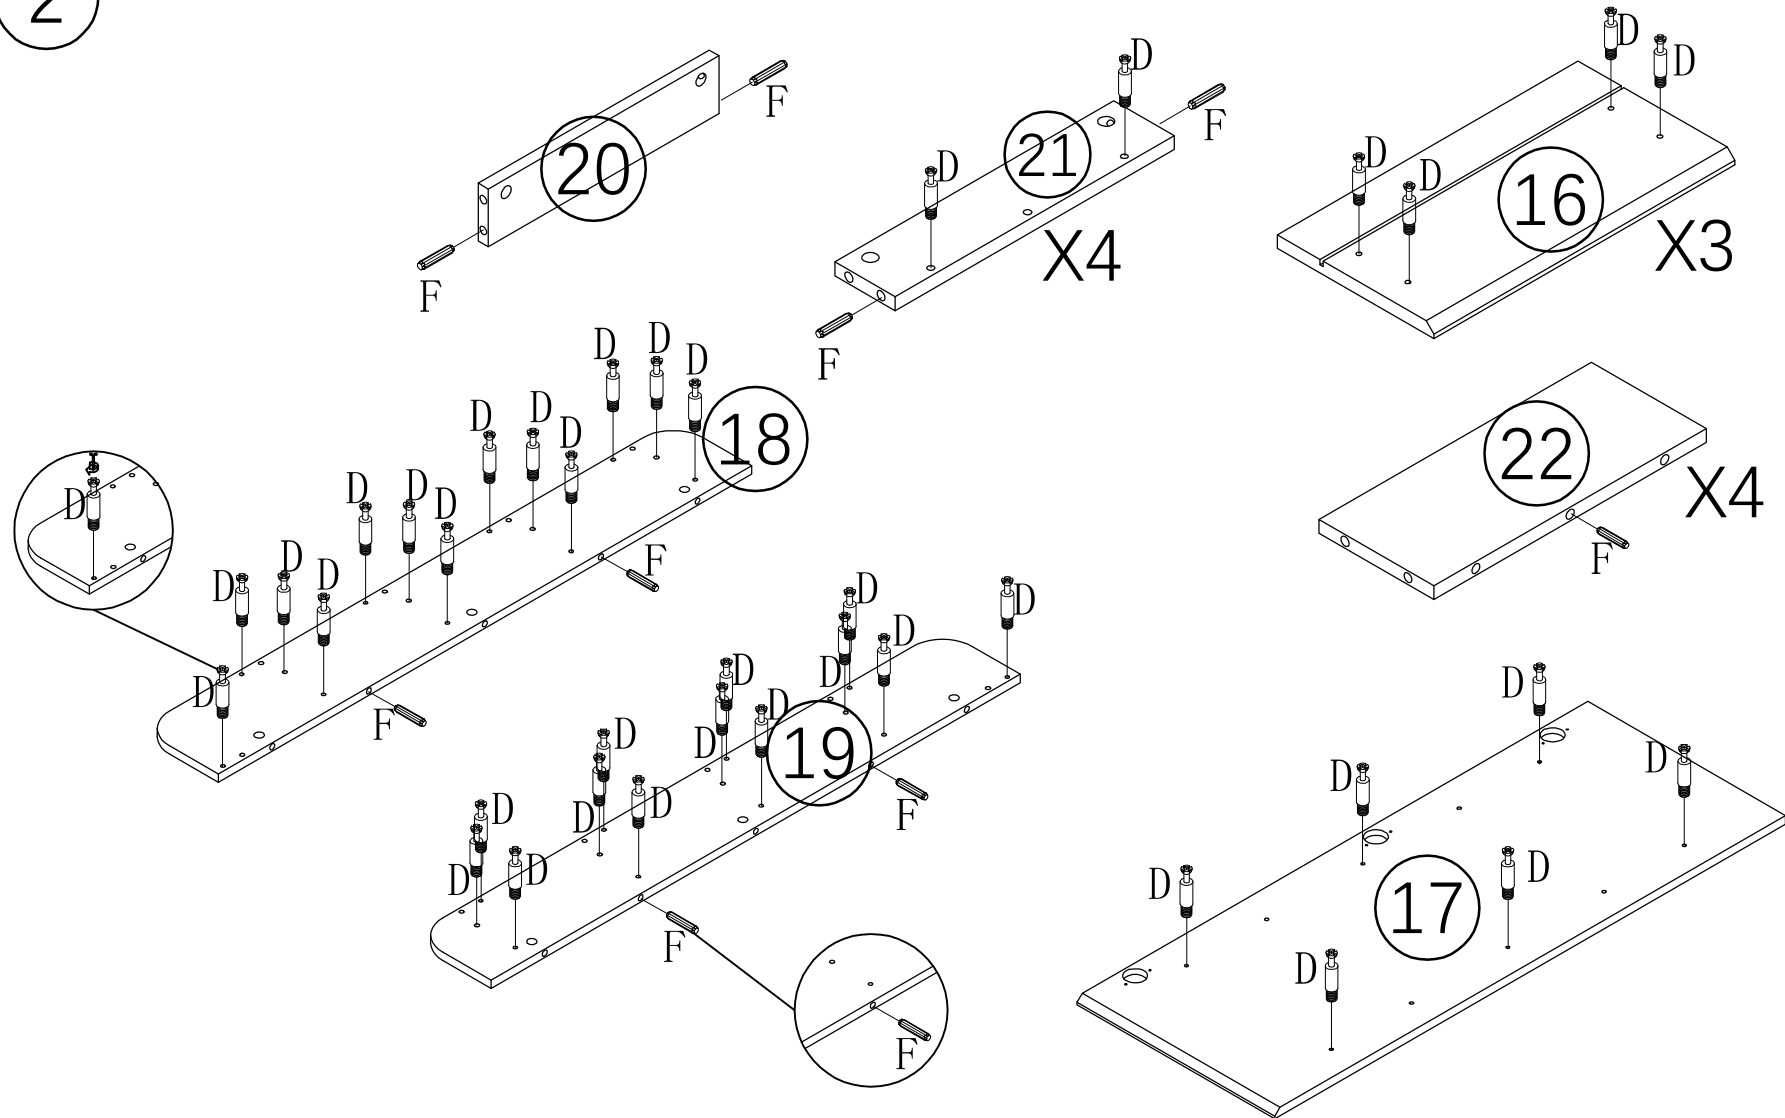

	F*18	put F on board (18)(19)(20)(21)(22)
	D*52	put D on board (16)(17)(18)(19)(21)

3

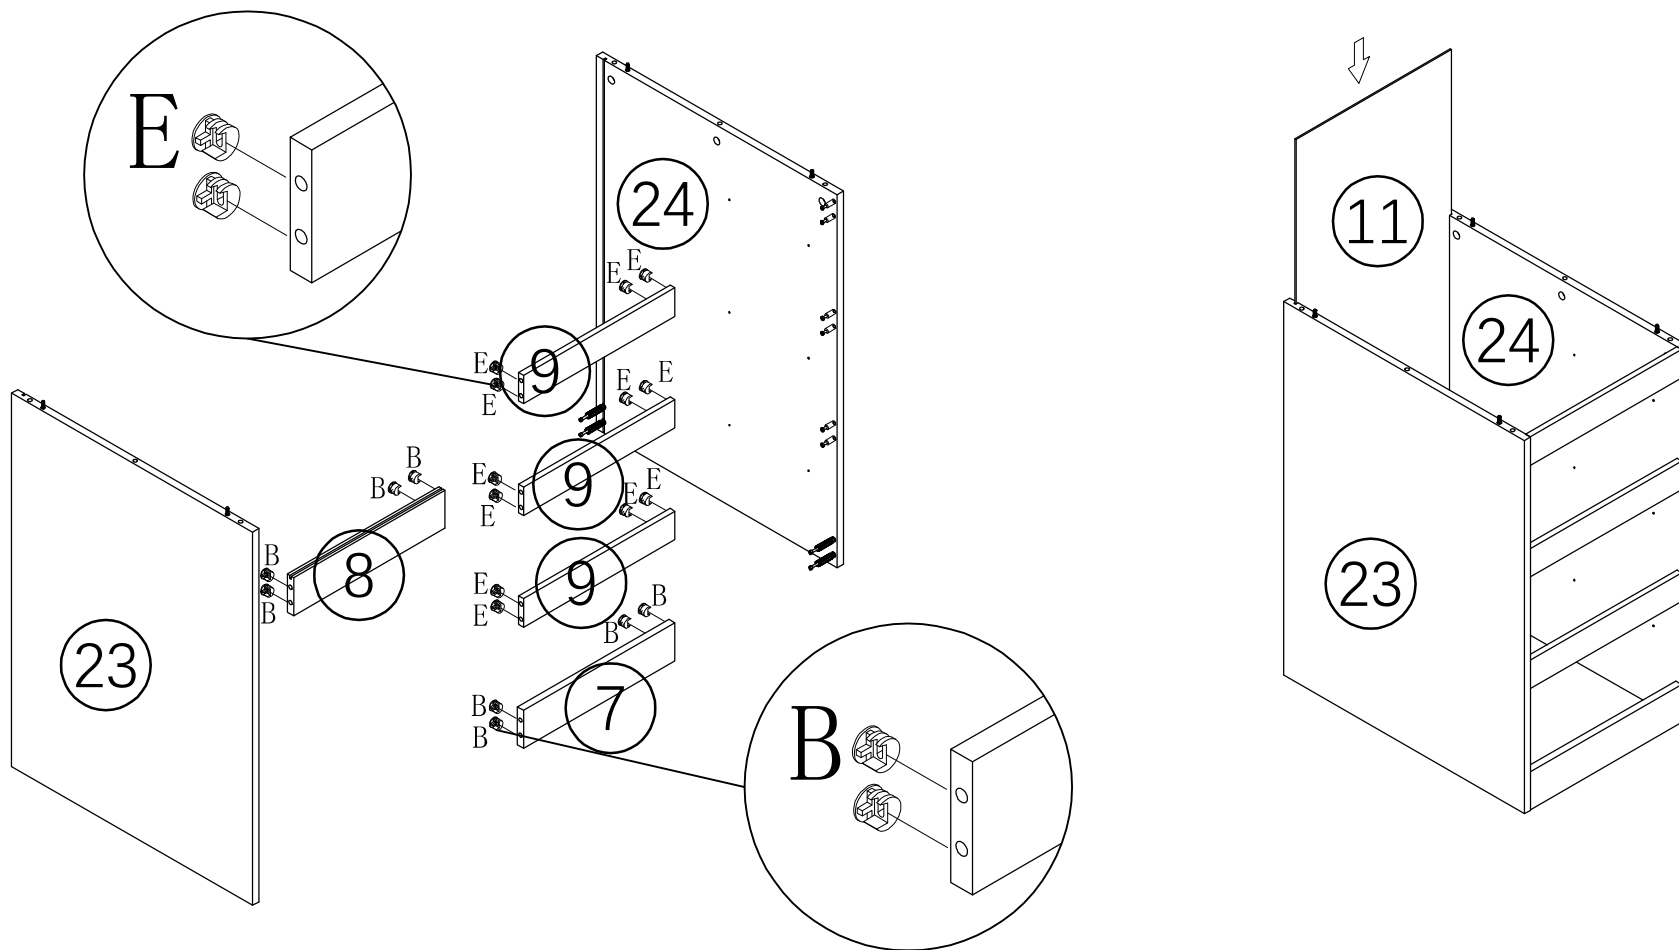

B*8







put B on board (7)(8)



E*12

put E on board (9)

4

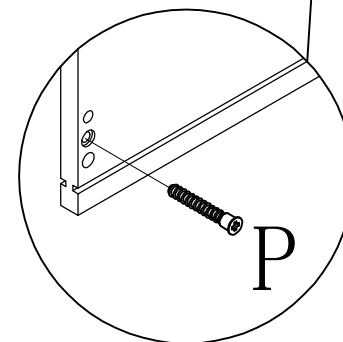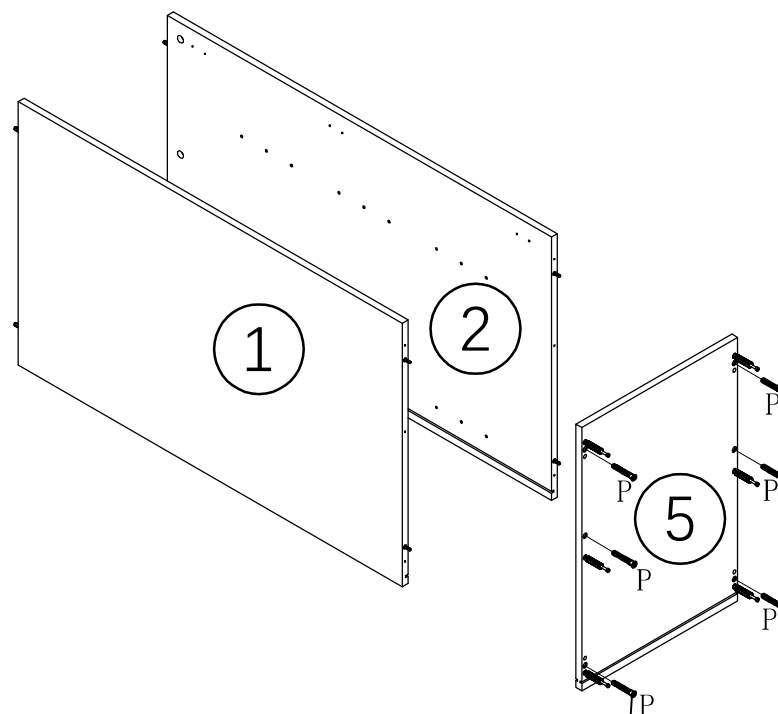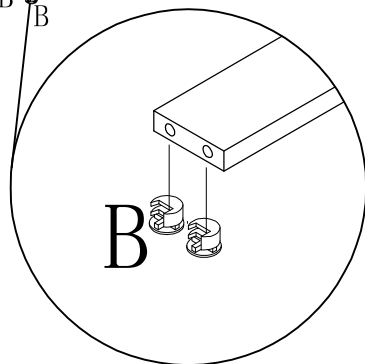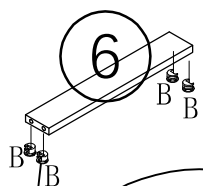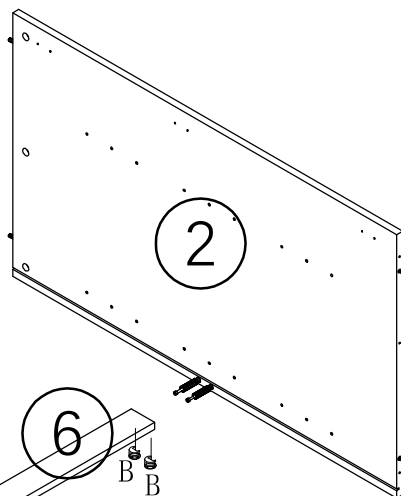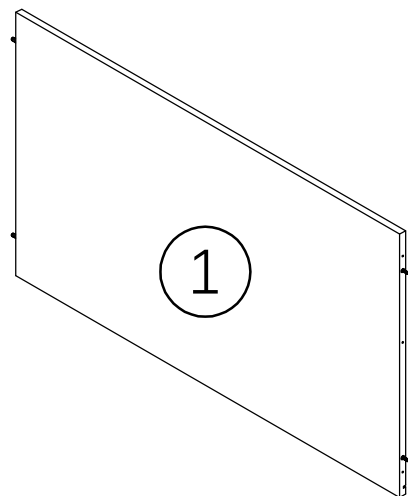

Make sure the arrow on the screw align to the hole on the side.



B*4

put B on board ⑥






P*6

put P on board ⑤

5


Make sure the arrow on the screw
align to the hole on the side.

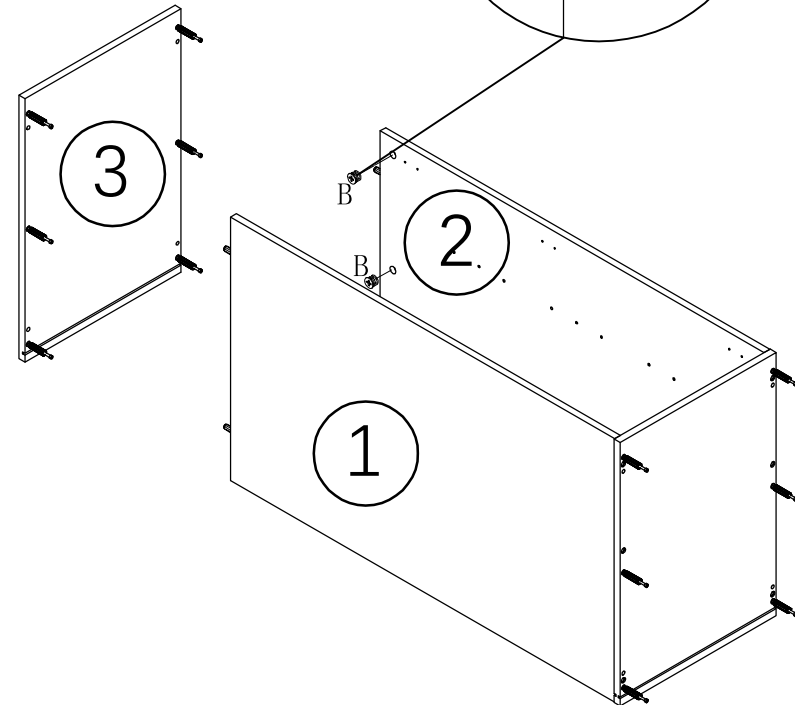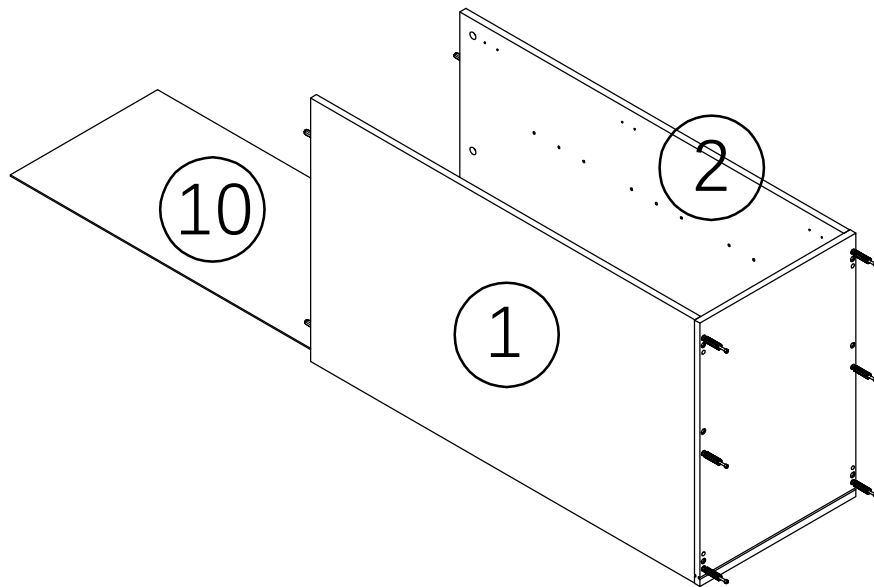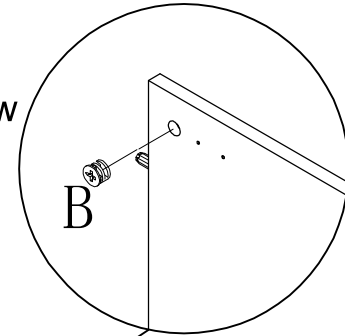

B*6

put B on board 1 2

6

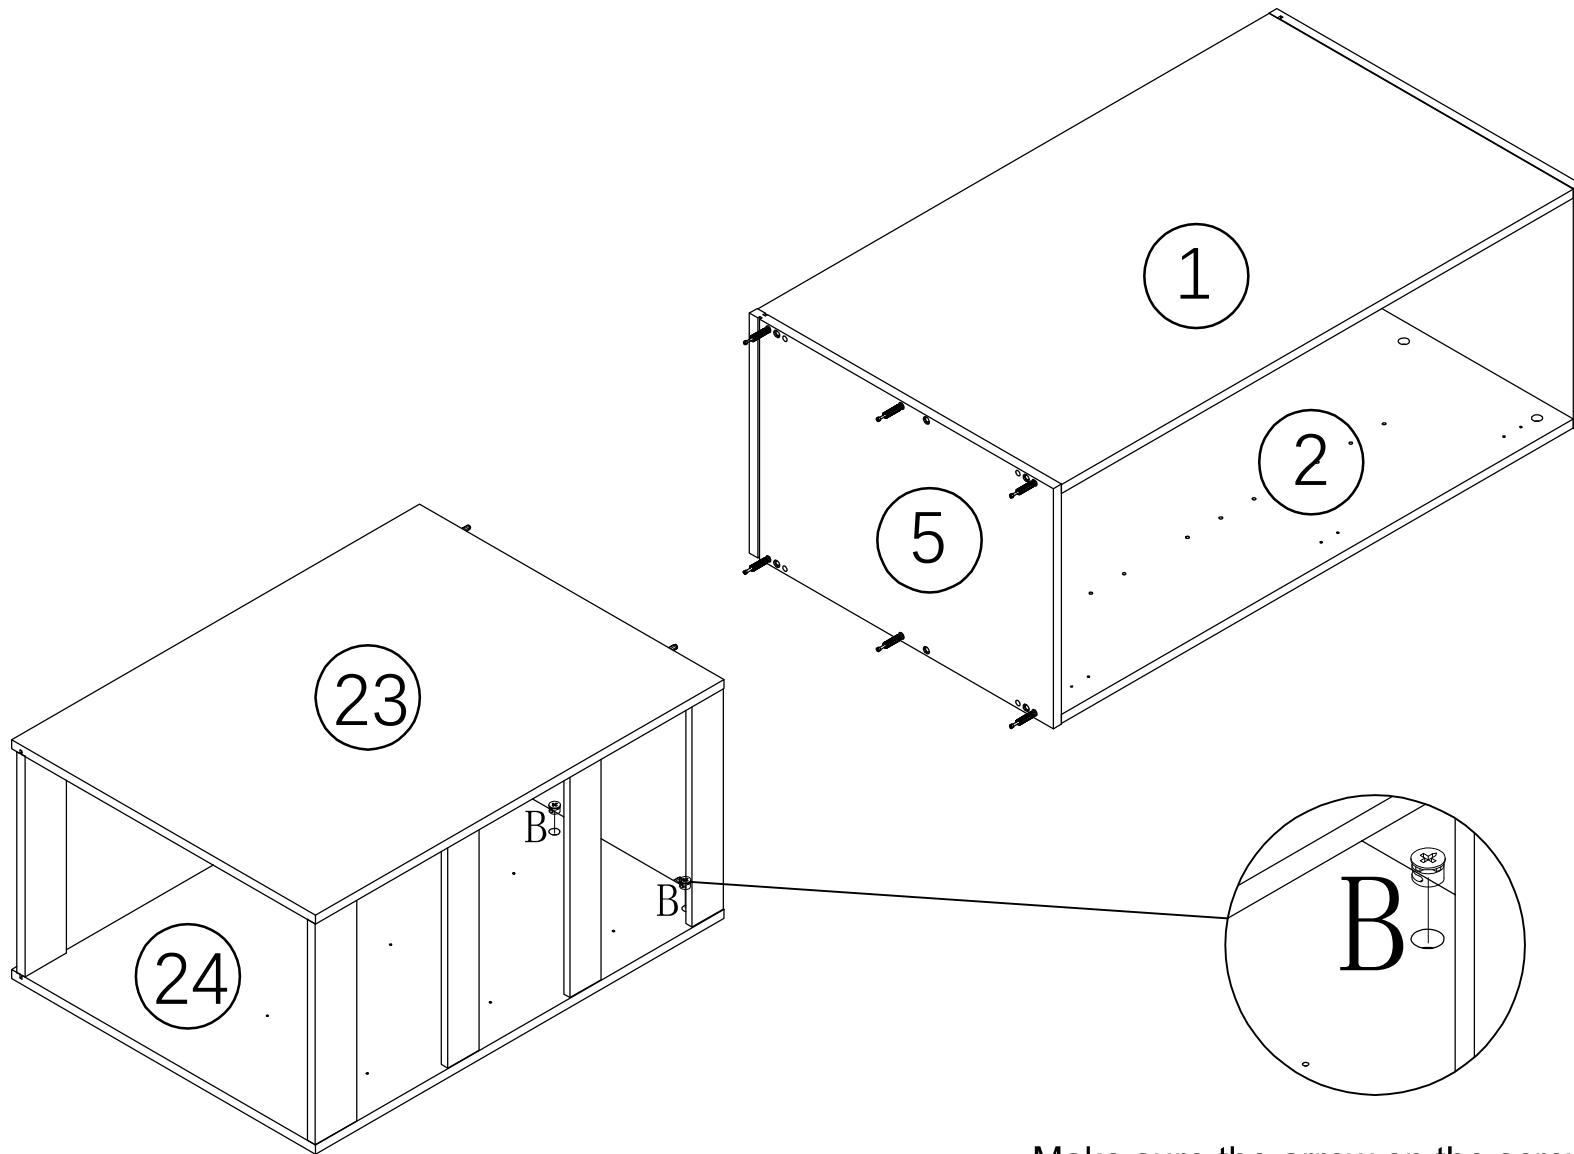



Make sure the arrow on the screw align to the hole on the side.




B*6

put B on board (23)(24)

7

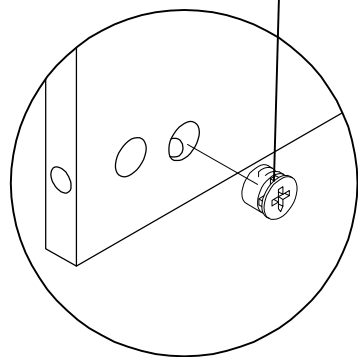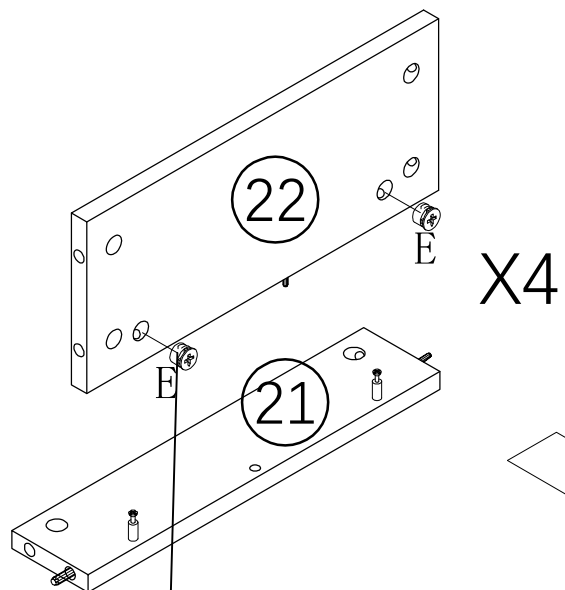


Make sure the arrow on the screw align to the hole on the side.

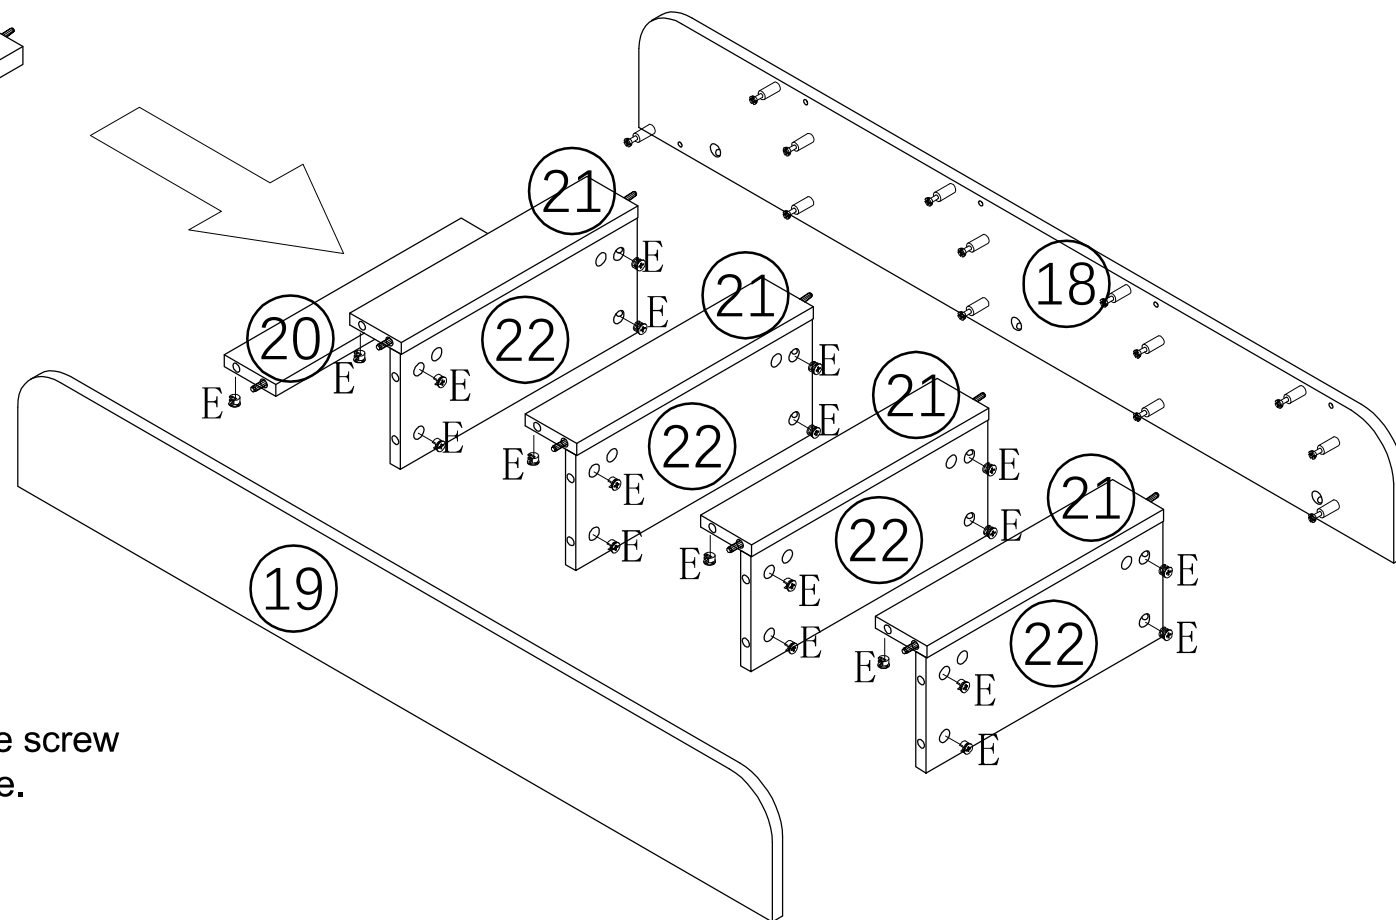


E*34 put E on board (20)(21)(22)

8

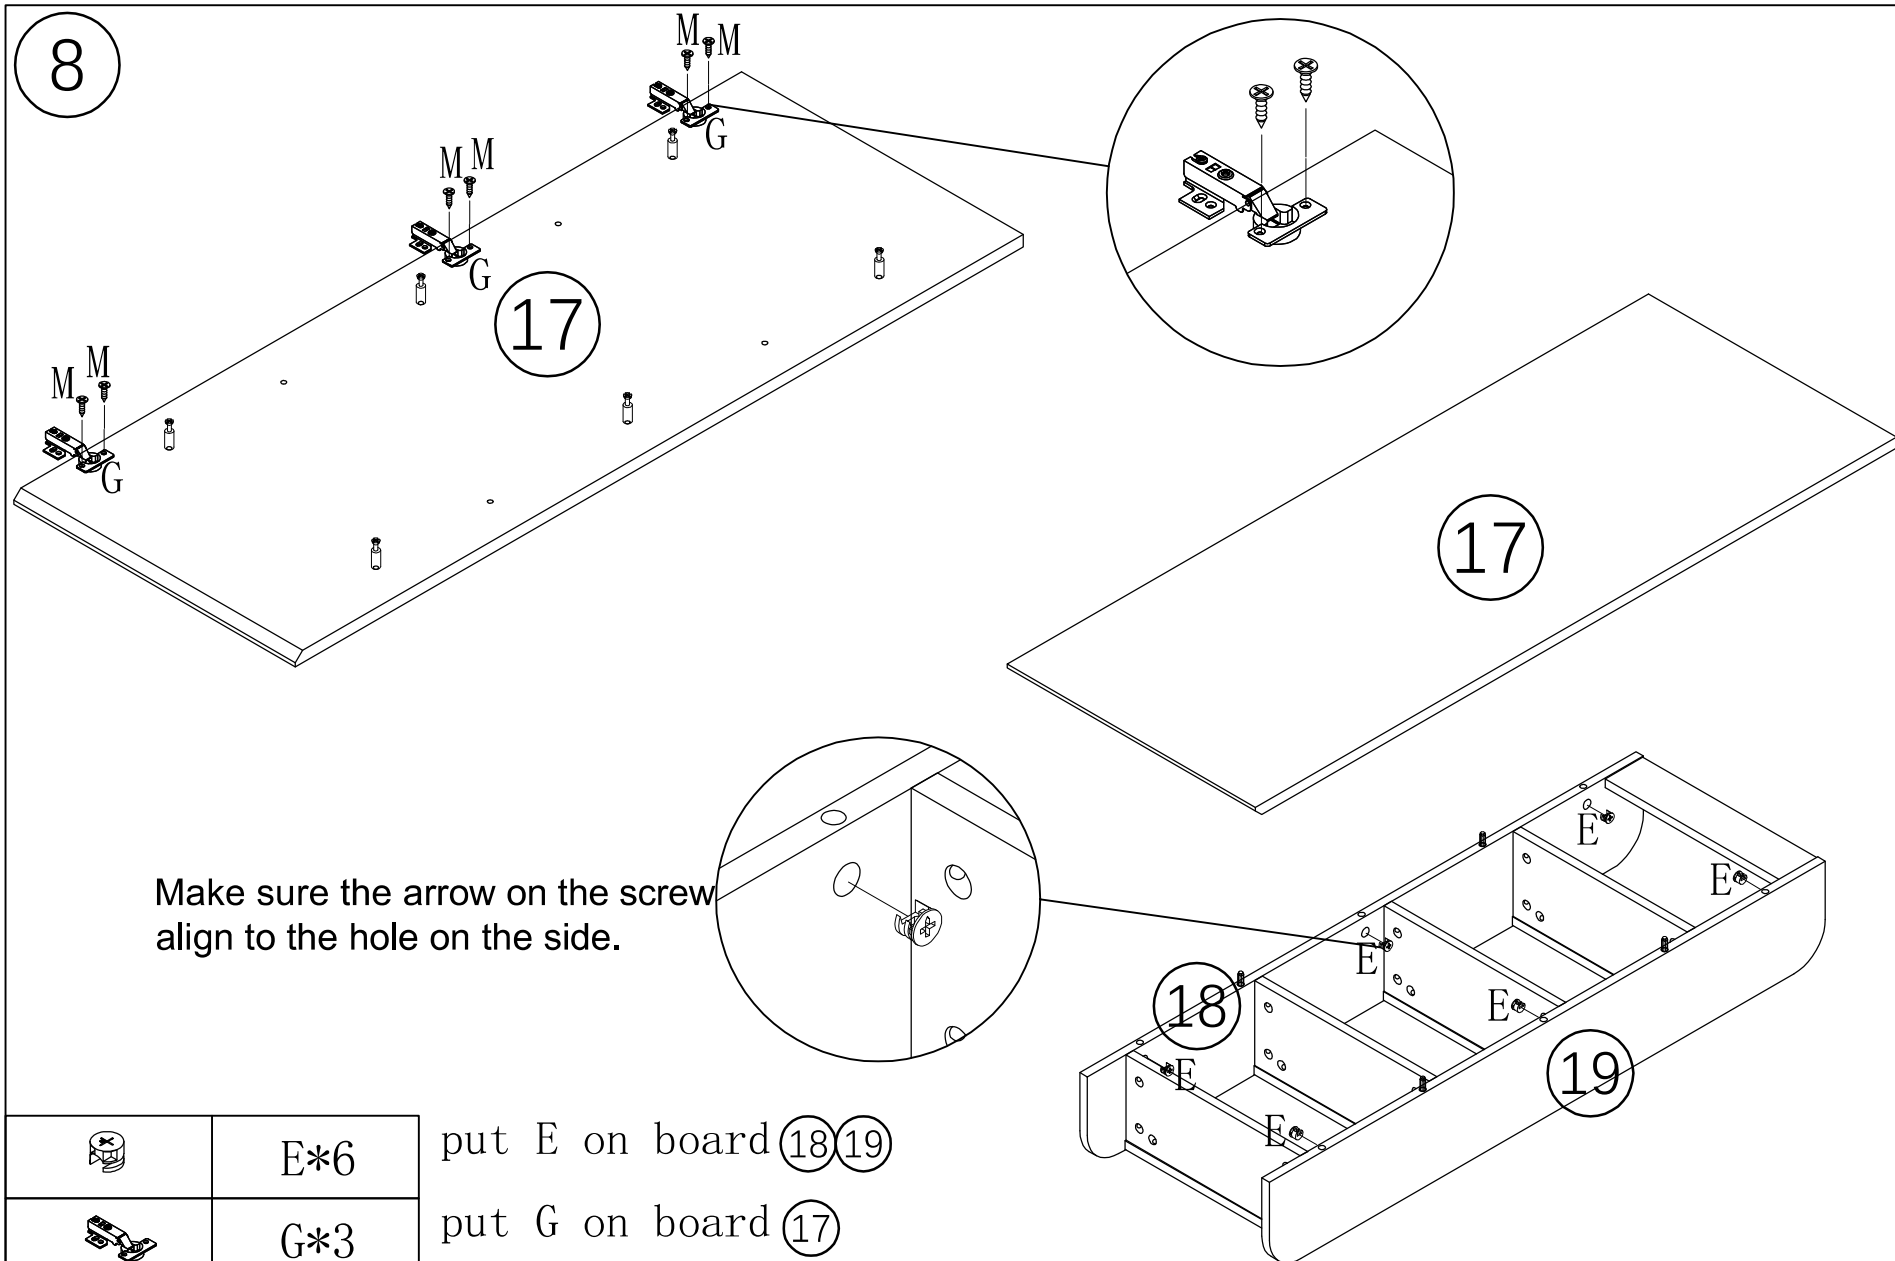


	E*6	put E on board (18)(19)
	G*3	put G on board (17)
	M*6	put M on board (17)



9

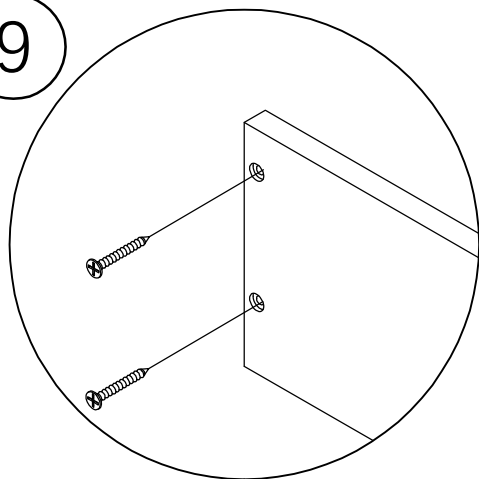

14

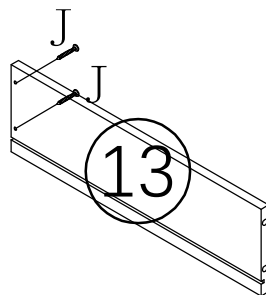

13

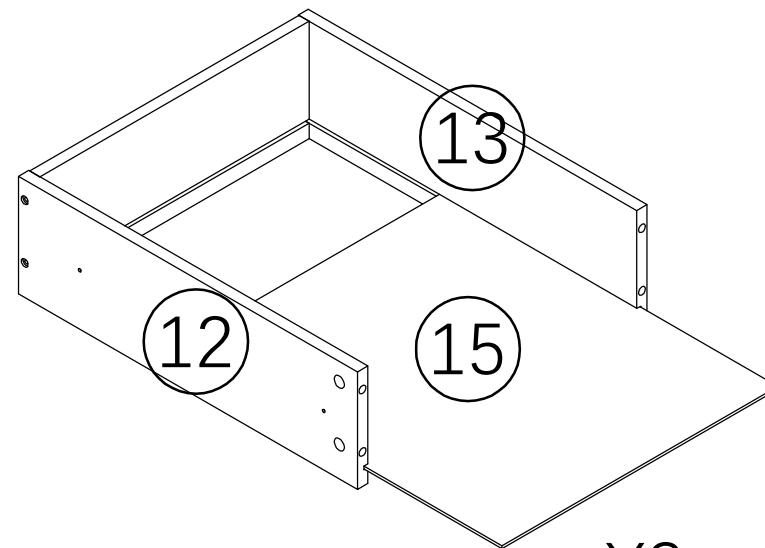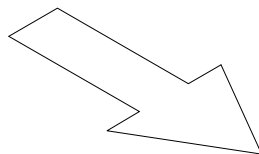

12

13

15

X3


X3



J*12

put J on board 12 13

10

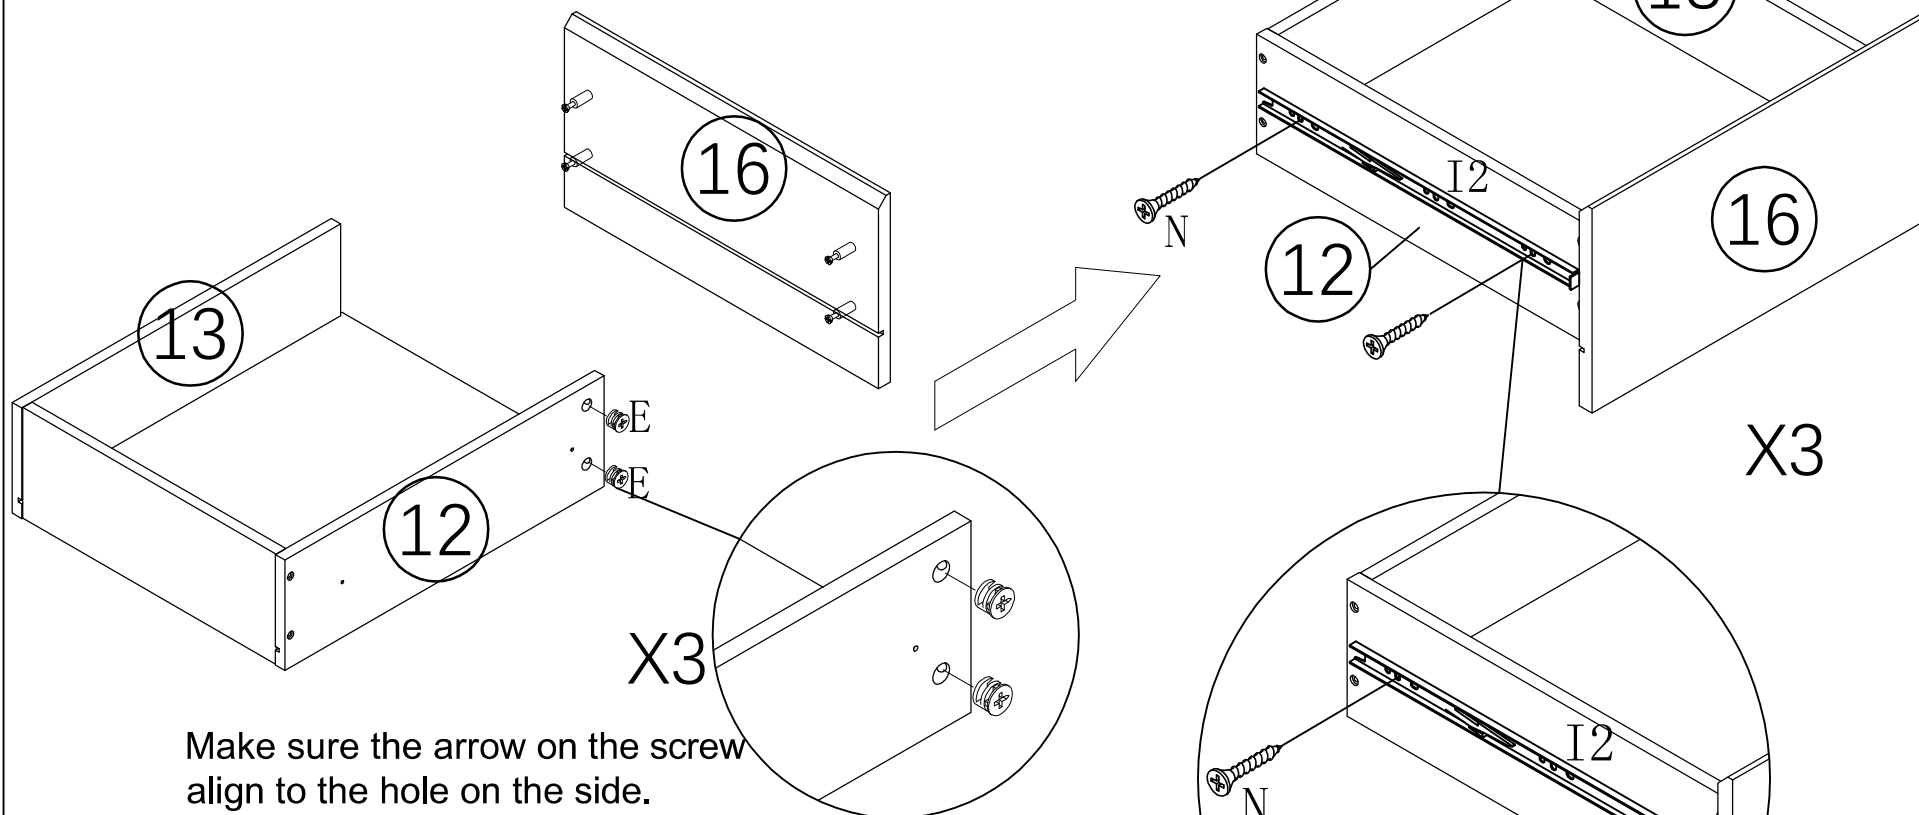



	E*12
	N*12
	I2*6

put E on board 12 13

put N on board 12 13

put I2 on board 12 13

11

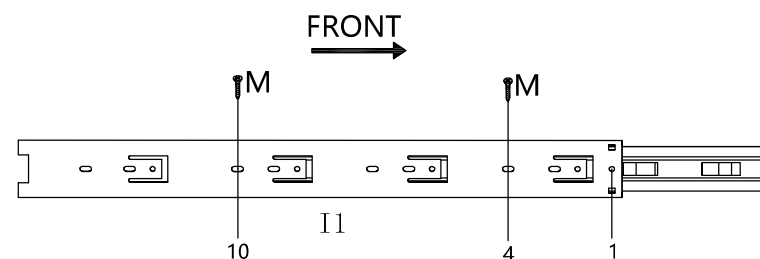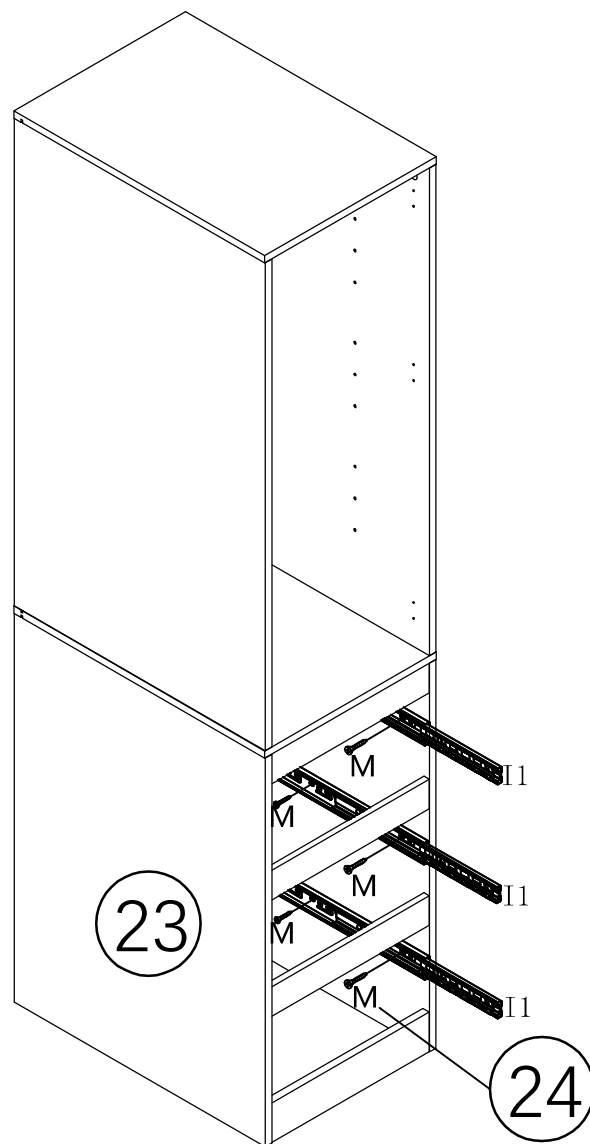


	M*12
	I1*6

put M on board 23 24

put I1 on board 23 24


12

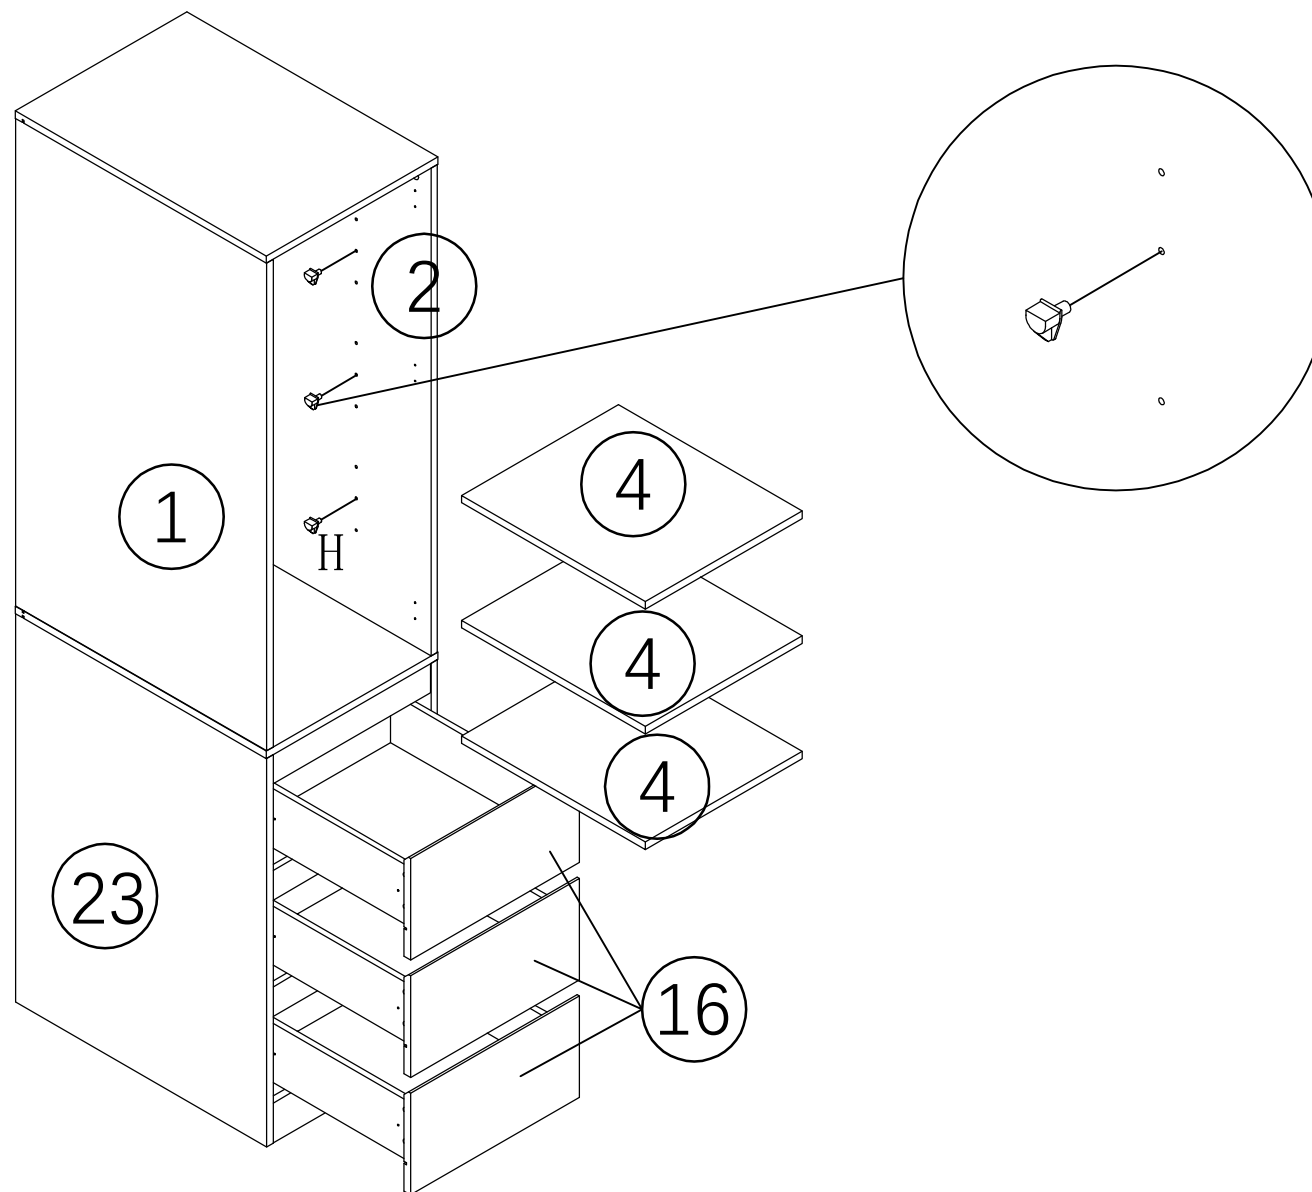

H*12



put H on board (1) (2)

13

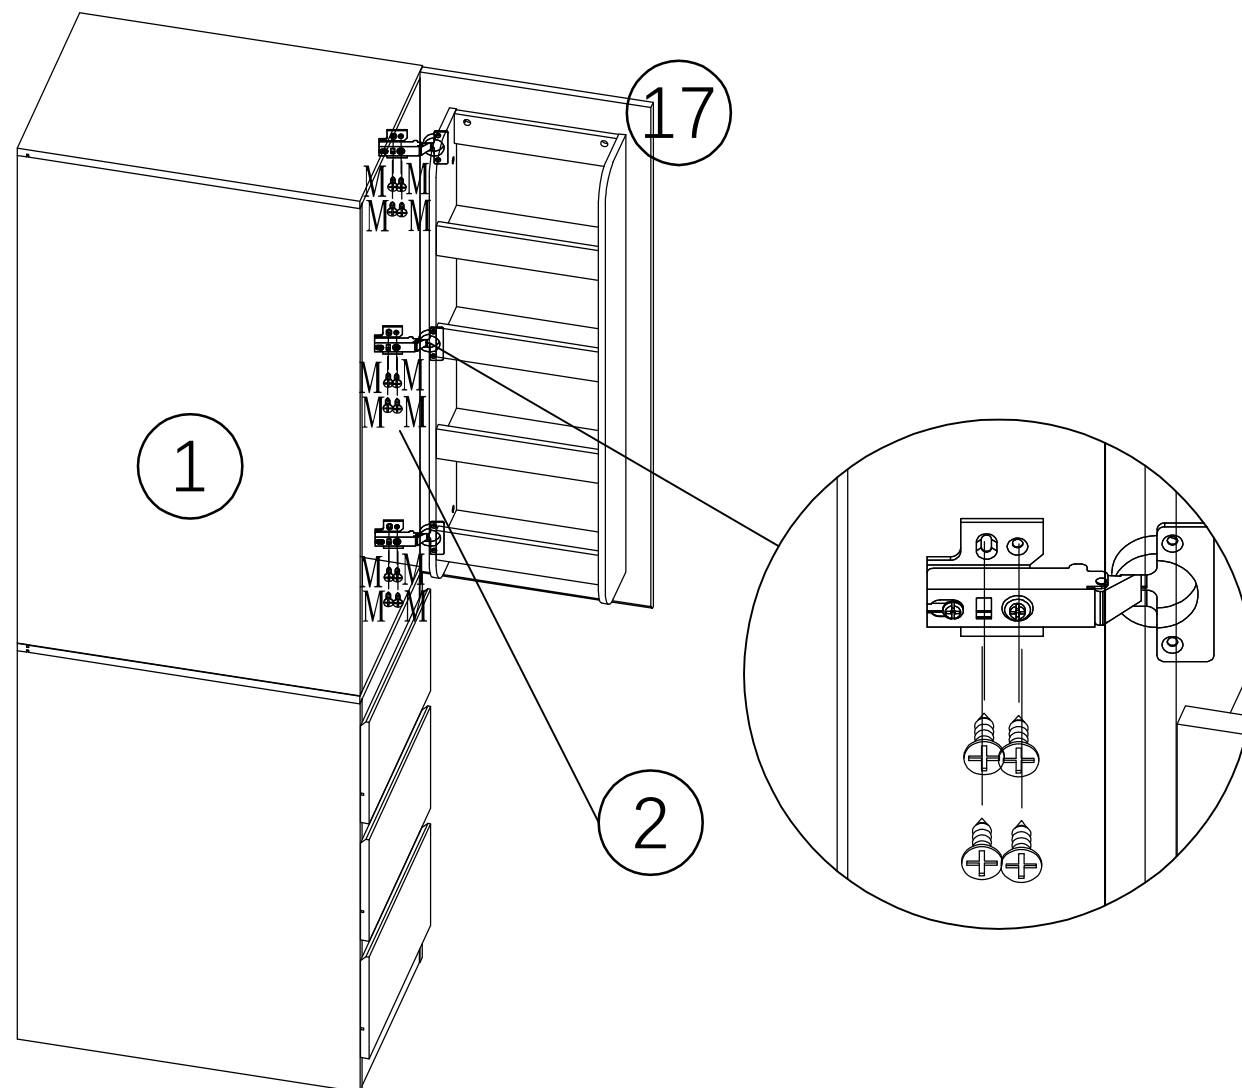





M*12 put M on board (2)

14

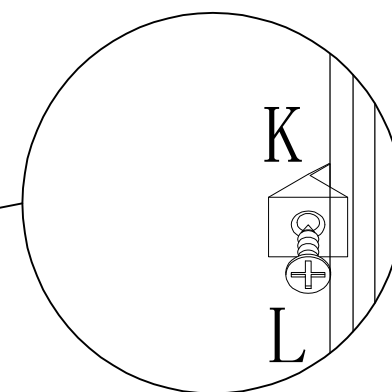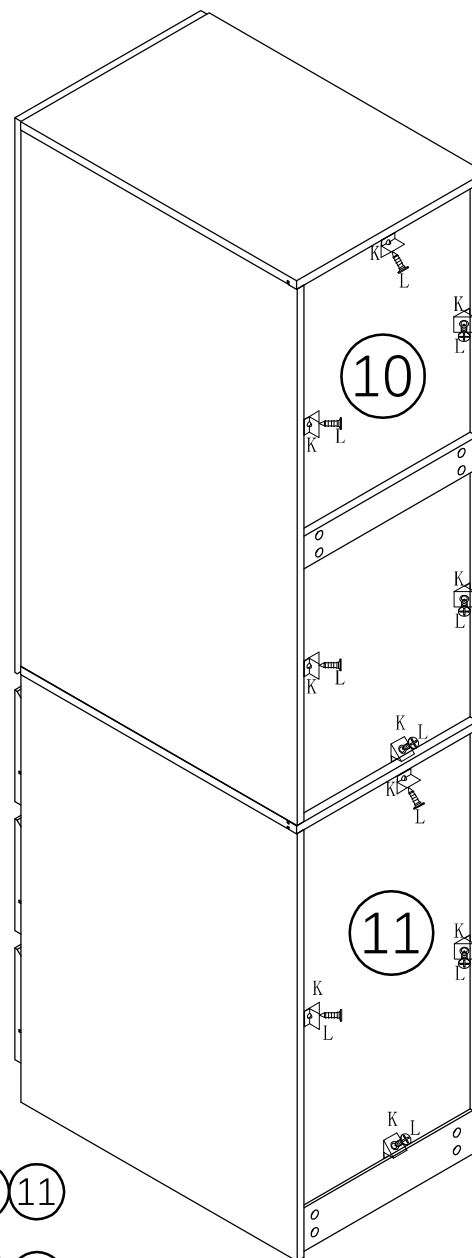

	K*10	put K on board 1011
	L*10	put L on board 1011

15

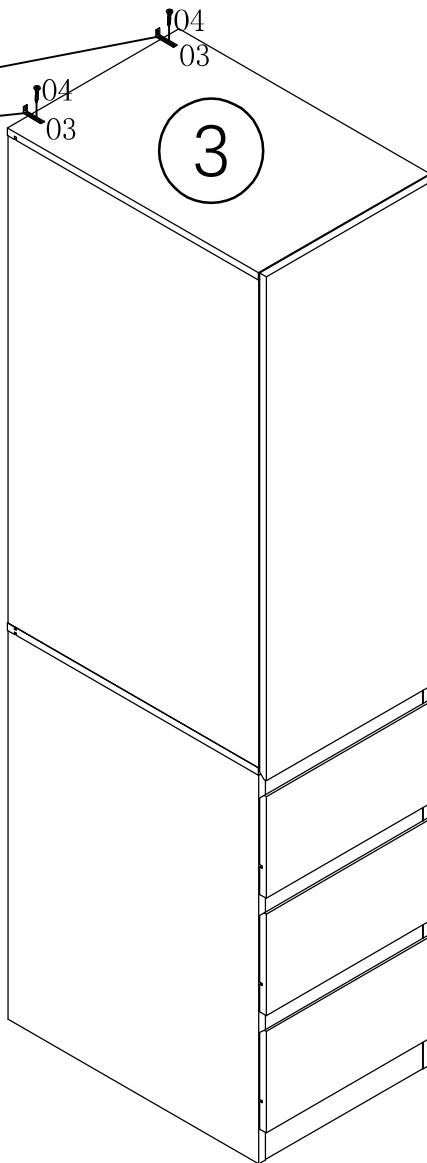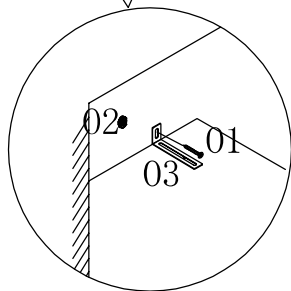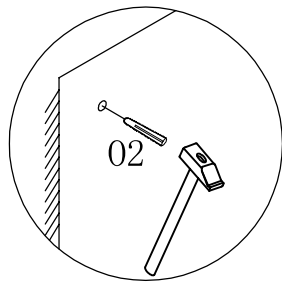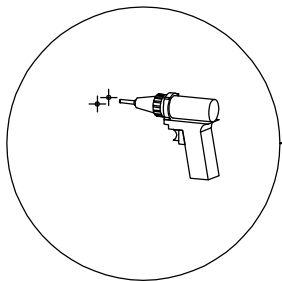

— 01
— 02

03
04

0*2