


# ASSEMBLY INSTRUCTIONS

## STORAGE BENCH

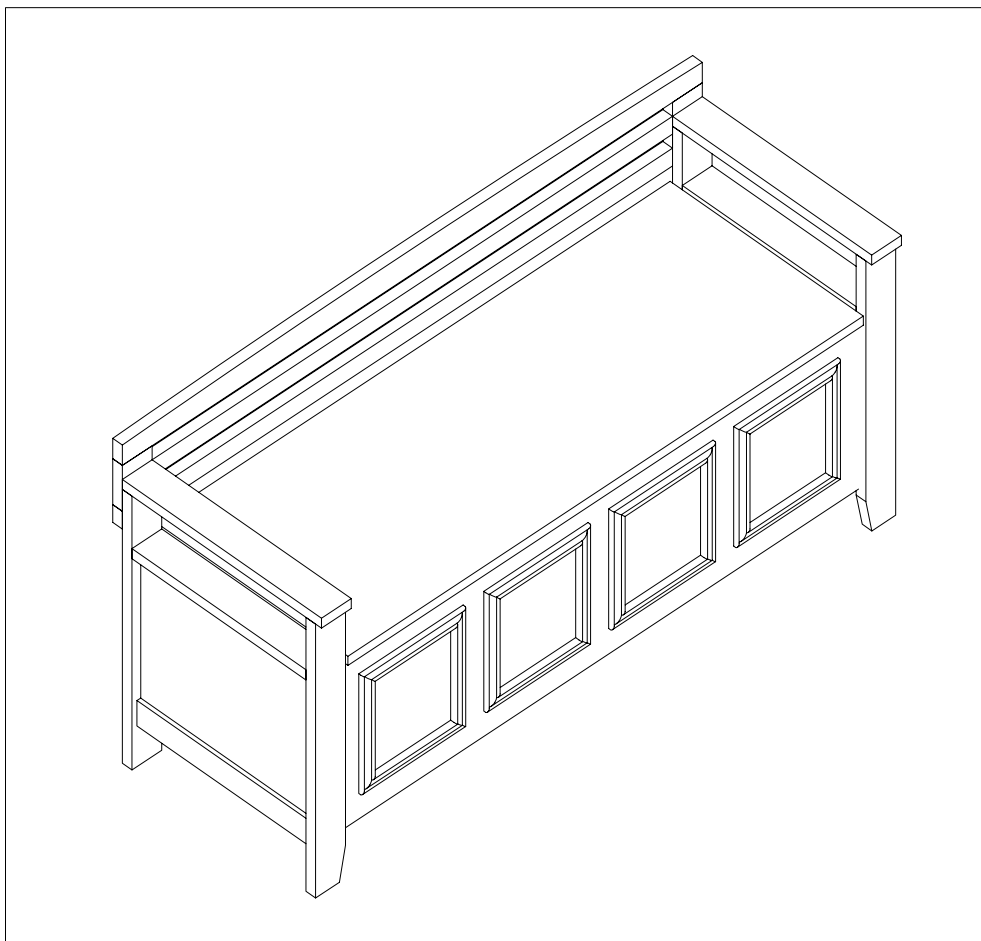


**We are here to help!**

We do our best to insure that your furniture arrives in excellent condition.

MADE IN CHINA

# PARTS IDENTIFICATION



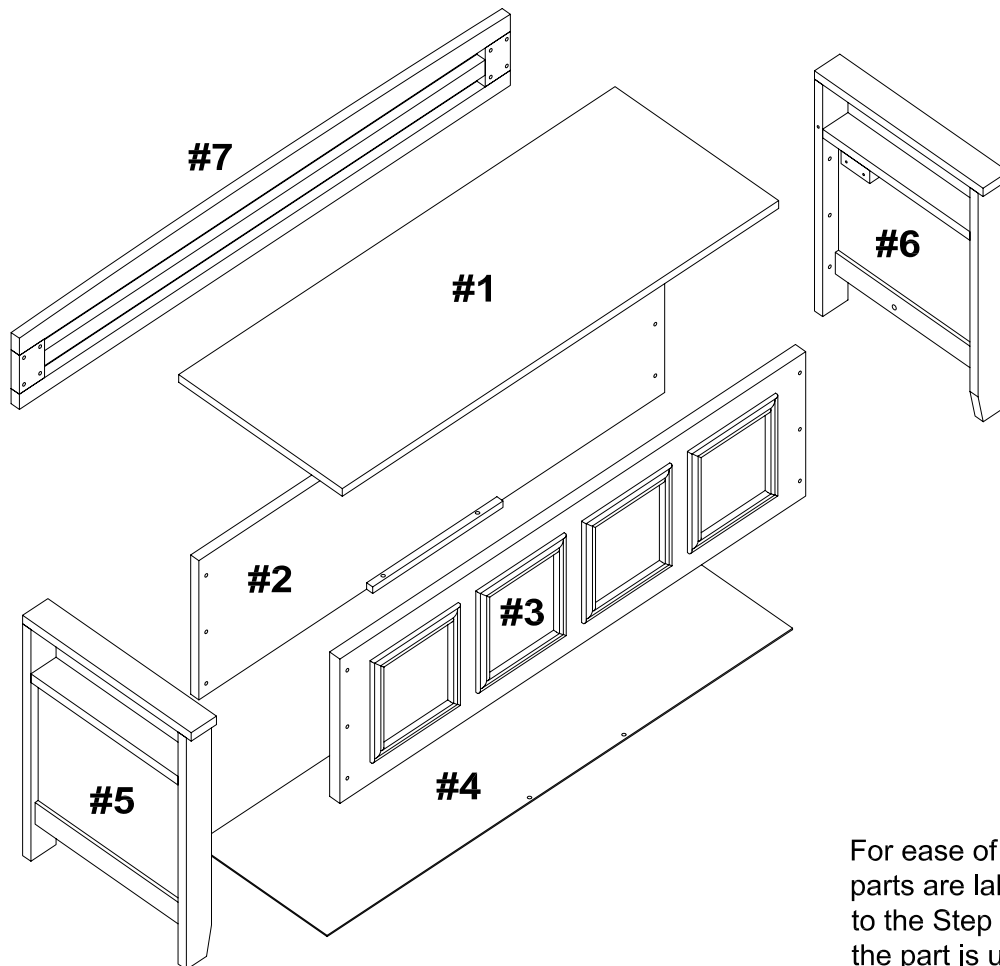


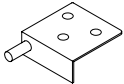
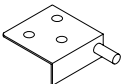

ITEM	DESCRIPTION	QTY
#1	SEAT PANEL	01
#2	BACK PANEL	01
#3	FRONT PANEL	01
#4	BOTTOM PANEL	01
#5	LEFT SIDE PANEL	01
#6	RIGHT SIDE PANEL	01
#7	BACK FRAME	01




For ease of identification all parts are labeled to correspond to the Step number in which the part is used.

## HARDWARE IDENTIFICATION


Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.

ITEM	PICTURE	DESCRIPTION	QTY
A	 (Ø3.5x12MM) Full size	WOOD SCREW	04
B	 (Ø5x35MM) Full size	WOOD SCREW	20
C	 (Ø3x15MM) Full size	WOOD SCREW	14
D	 Not to Scale	RIGHT LID STAY	01
E	 Not to Scale	LEFT LID STAY	01
F	 Not to Scale	RIGHT HINGE	01
G	 Not to Scale	LEFT HINGE	01
H	 (Ø8x30MM) Full size	WOOD DOWEL	02

## STEP 1.

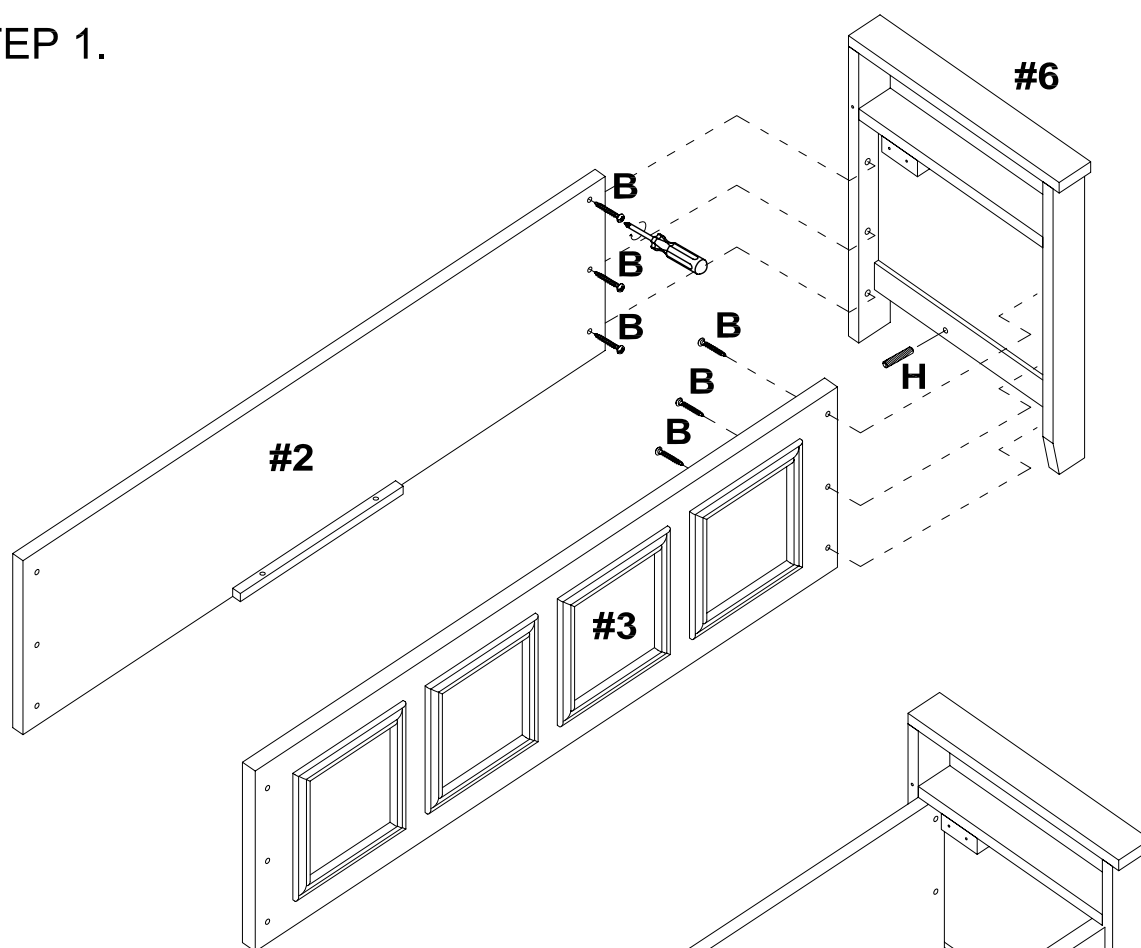


## STEP 2.

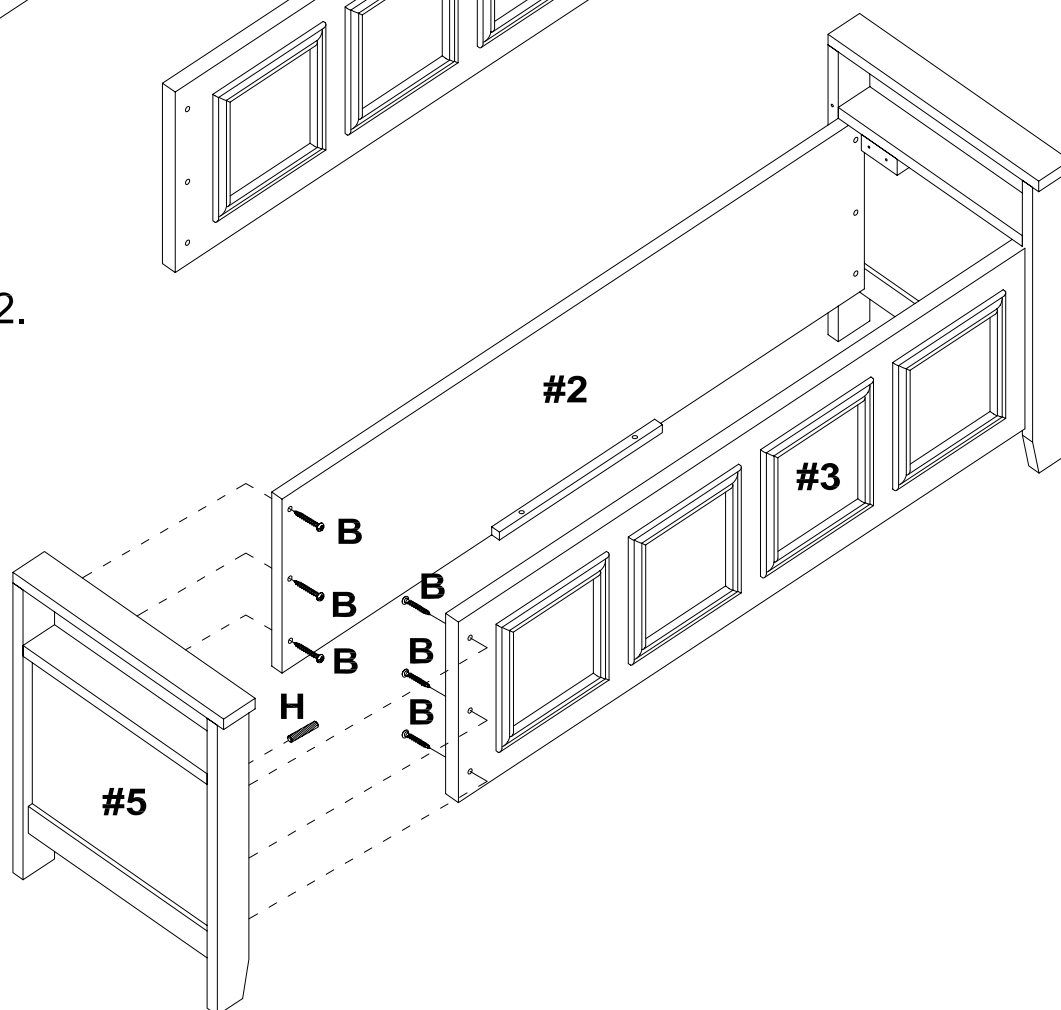


## IMPORTANT:

1. DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ALL BOLTS ARE COMPLETELY LINED UP AND INSERTED INTO HOLES / NUTS.
2. DO NOT OVER TIGHTEN SCREWS AND BOLTS TO AVOID STRIPPING.


STEP 3.

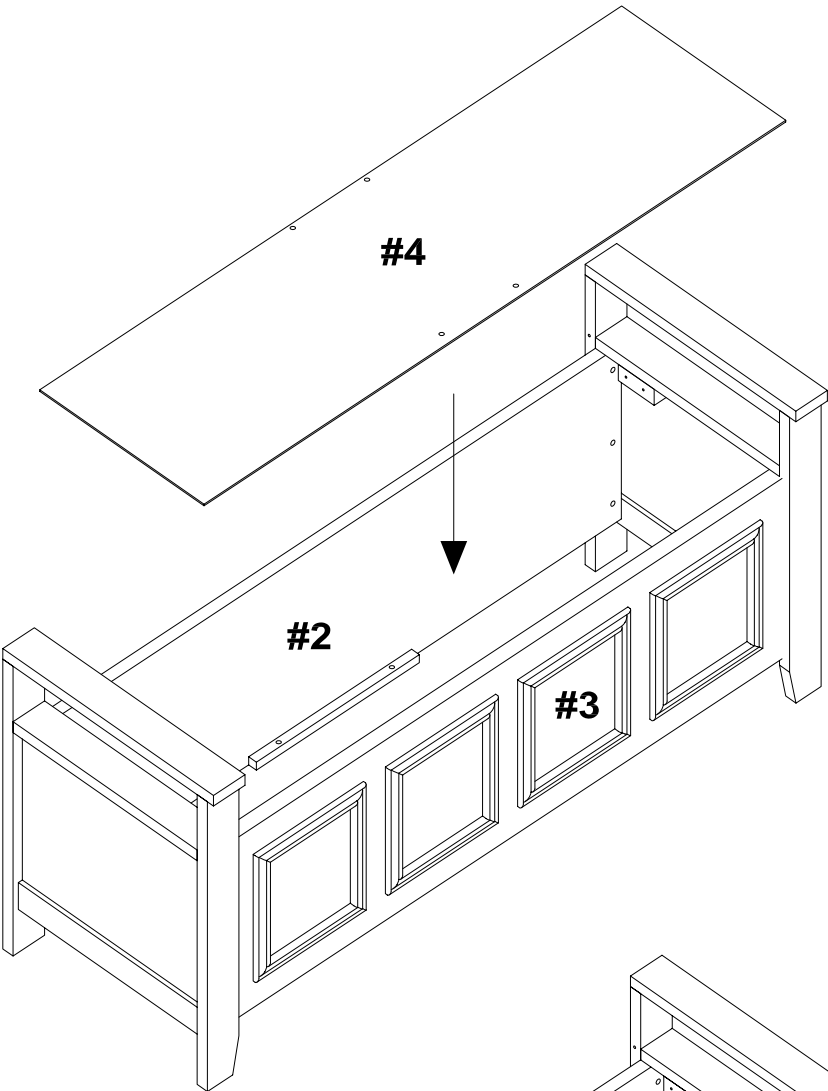


STEP 4.

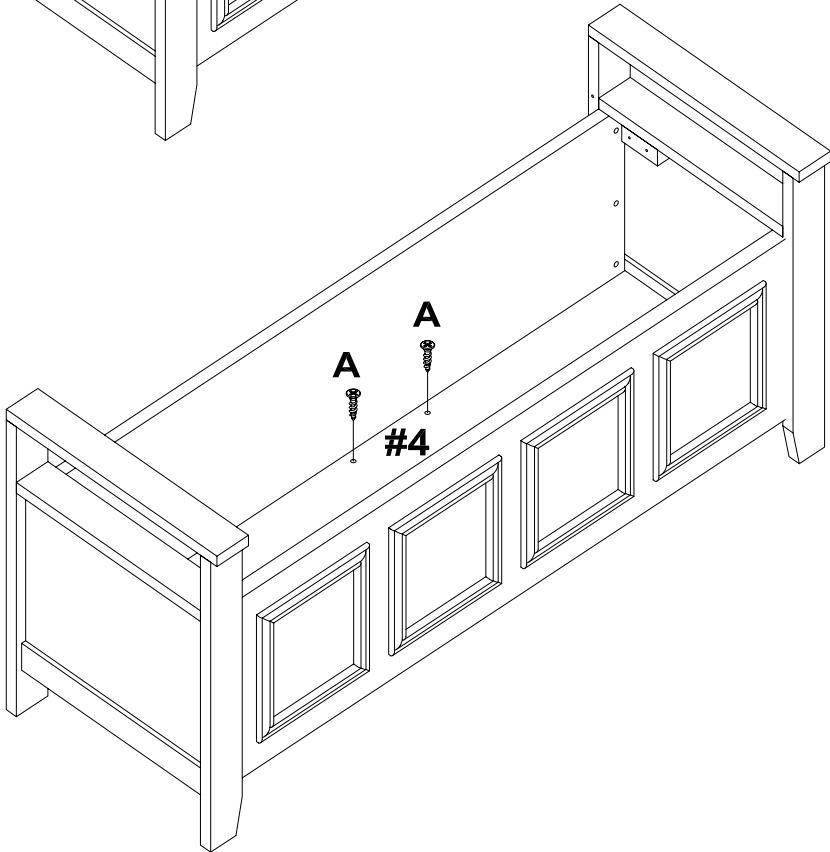


STEP 5.

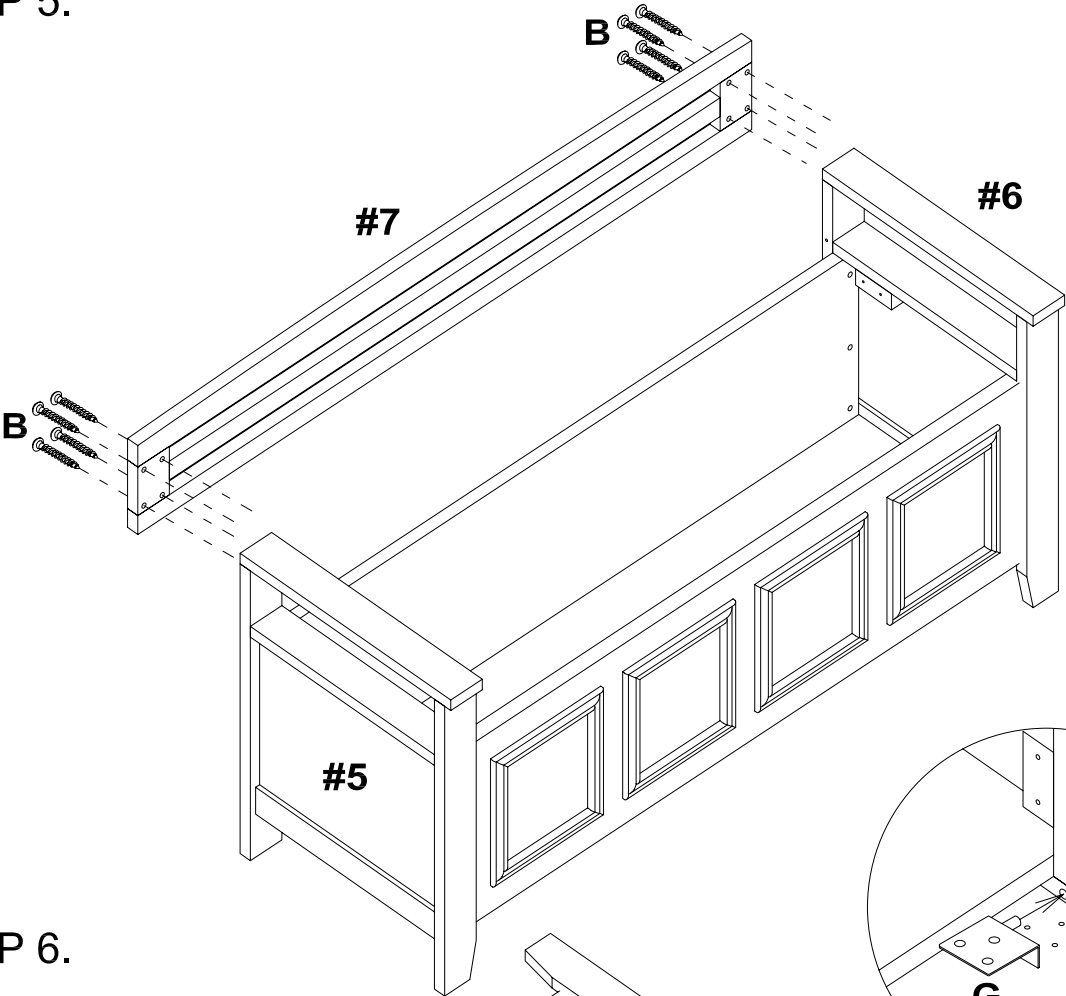

STEP 6.

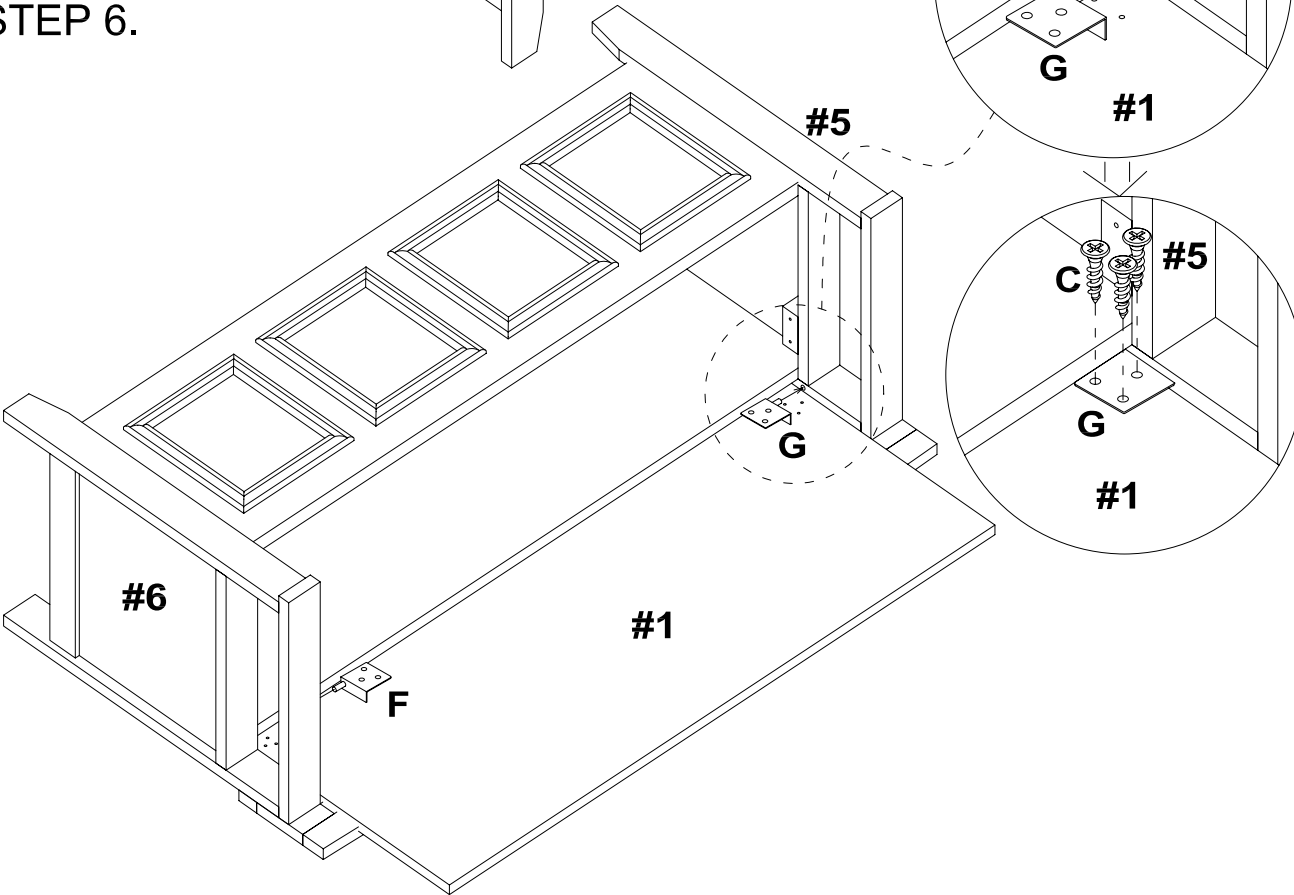

STEP 7.

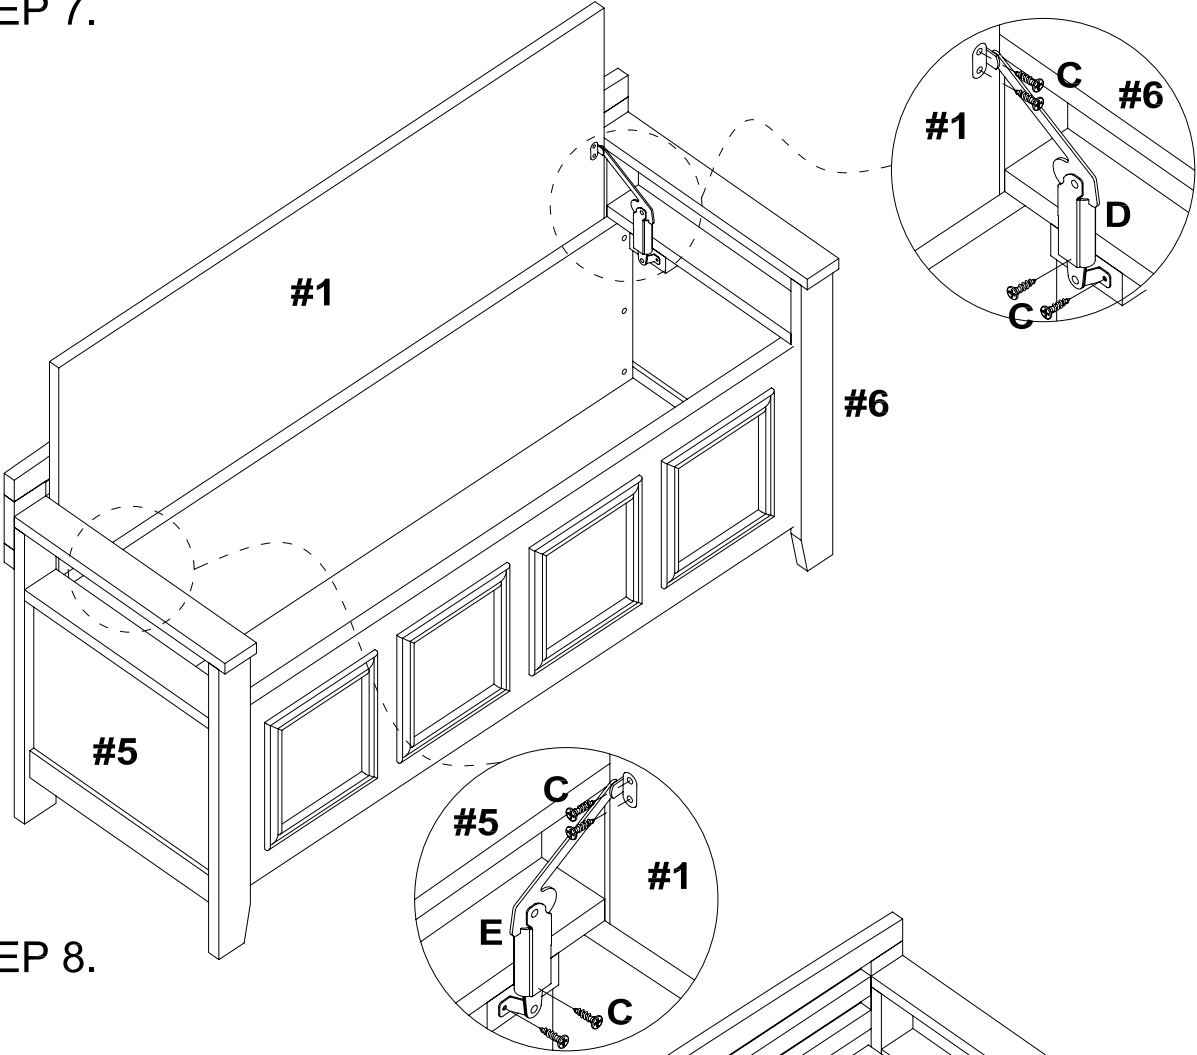

STEP 8.

