



JR-TVS0007













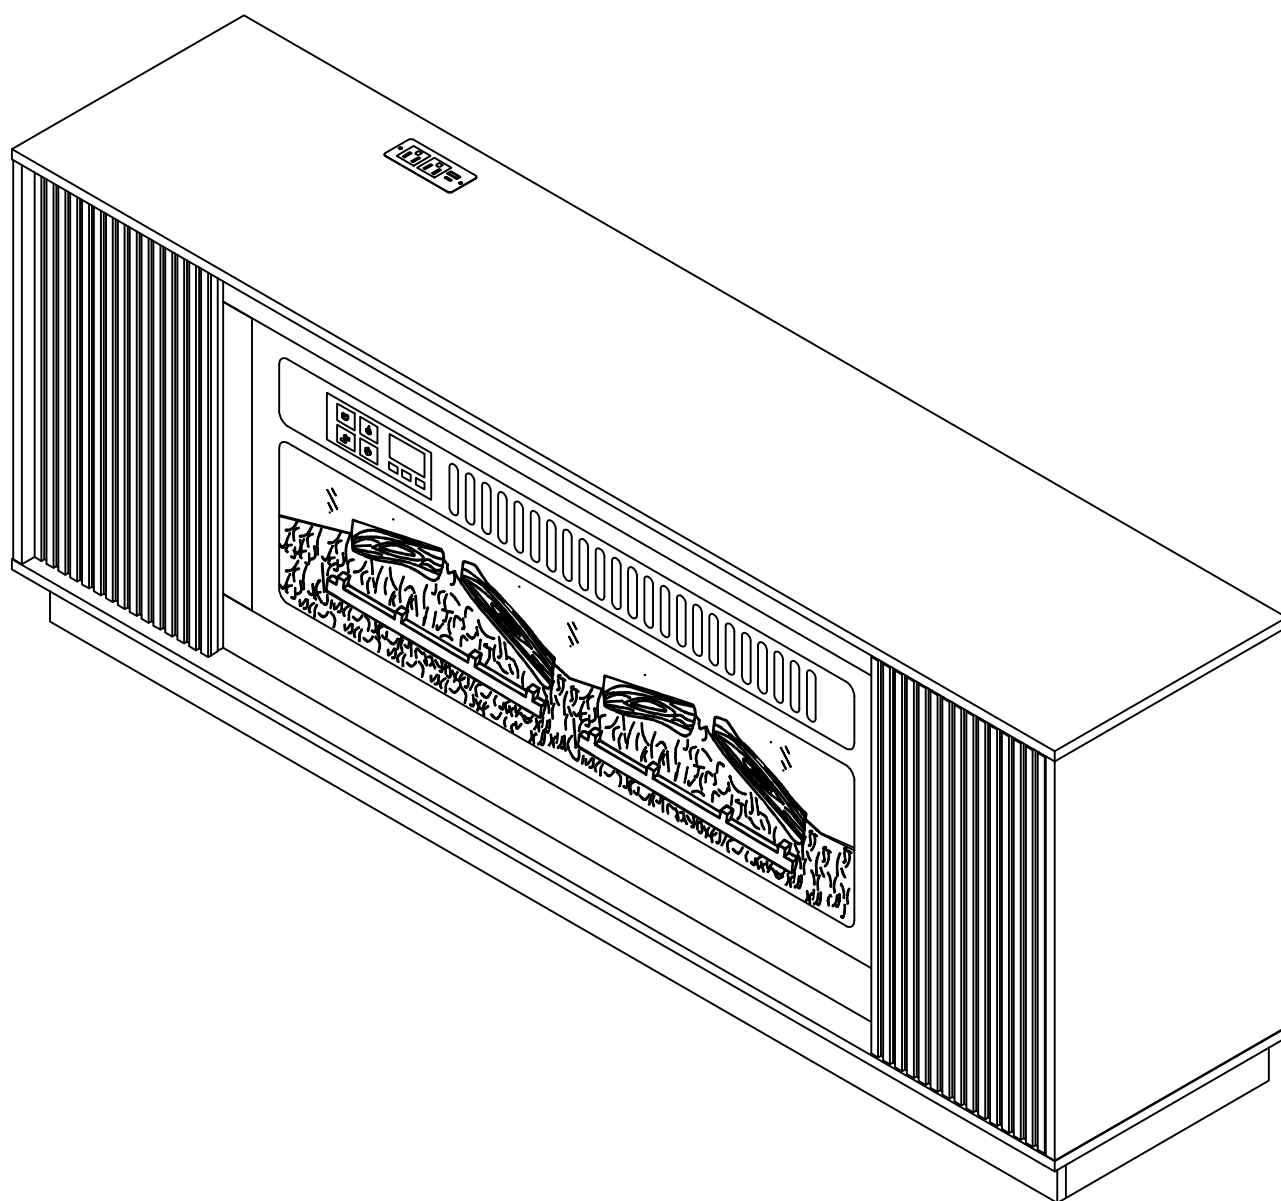


PACKAGE INCLUDE

STRUCTURE FOR REFERENCE TO ASSEMBLY

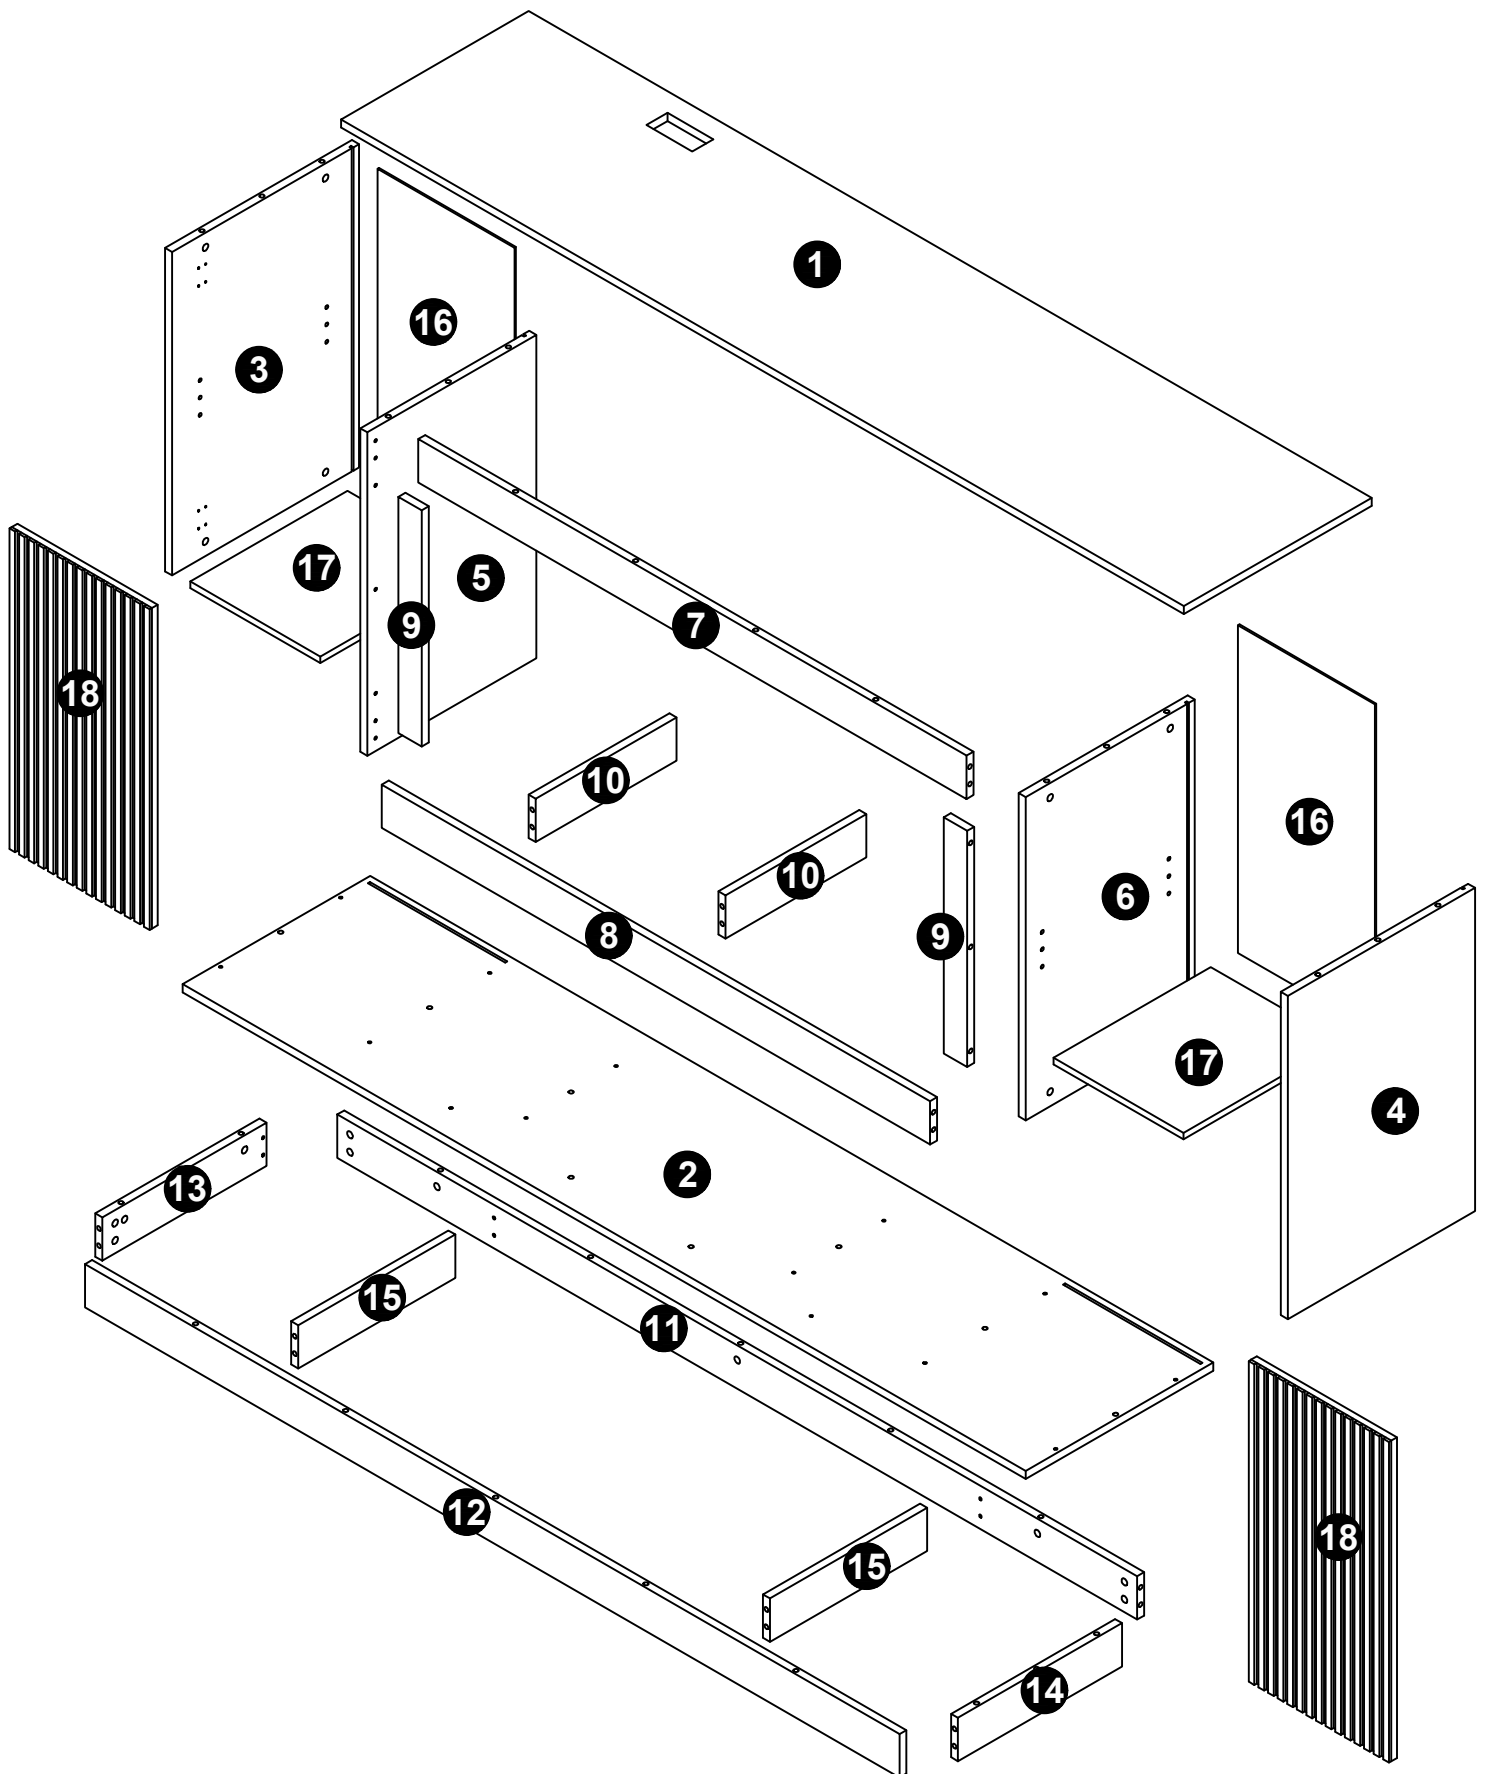

PART IDENTIFICATION

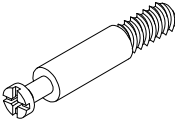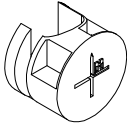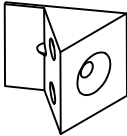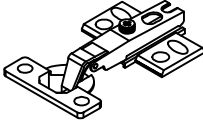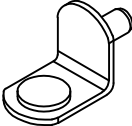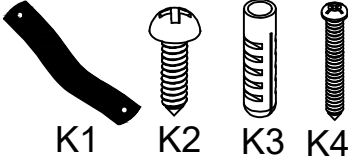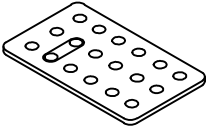
A x 66+1	B x 66+1	C x 22+1	D x 4
			
Ø6*34mm	Ø15*10mm	Ø8*30mm	
E x 8	F x 8	G x 32	H x 4
			
Ø3*15mm		Ø3.5*12mm	
I x 8	J x 1	K x 2	L x 2
			
		Ø3.5*12mm	
M x 1			
			

STEP 1

A x 14



Ø6*34mm

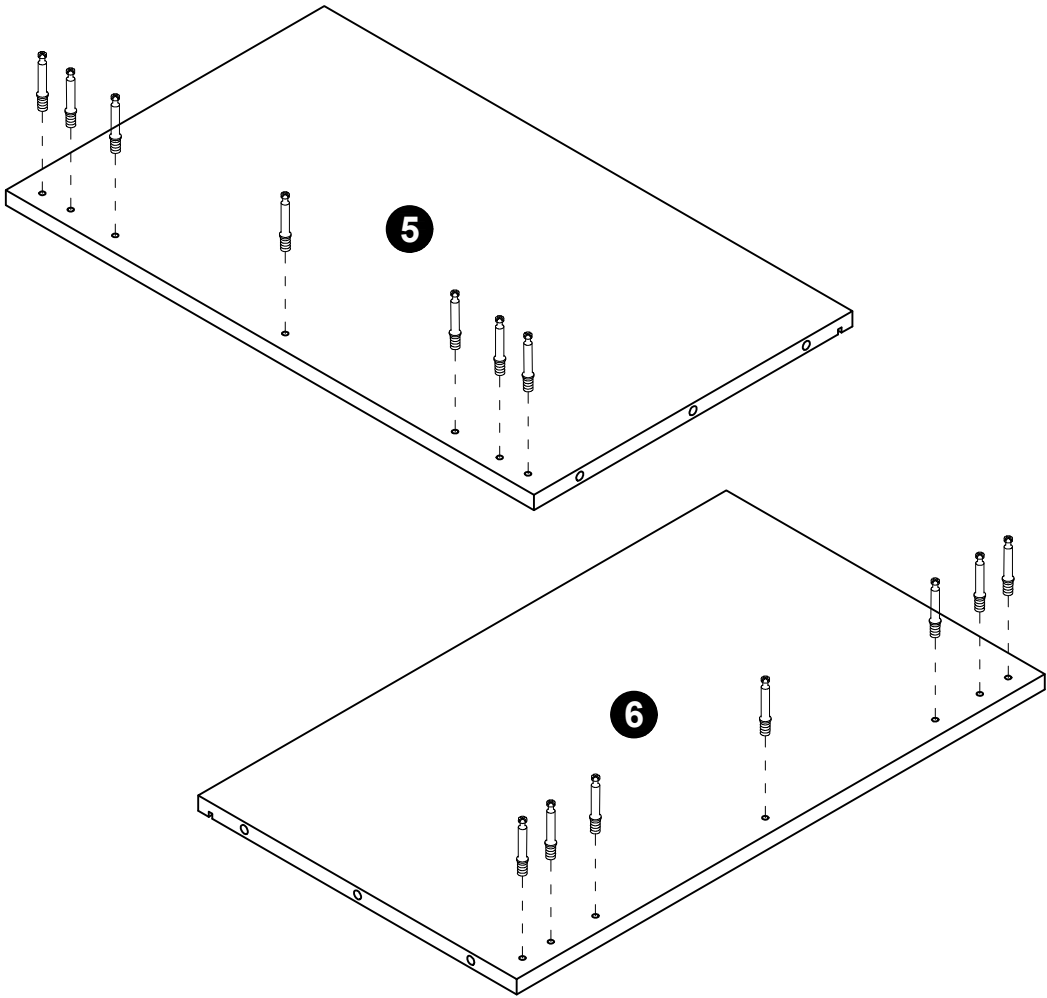


STEP 2

B x 3



Ø15*10mm

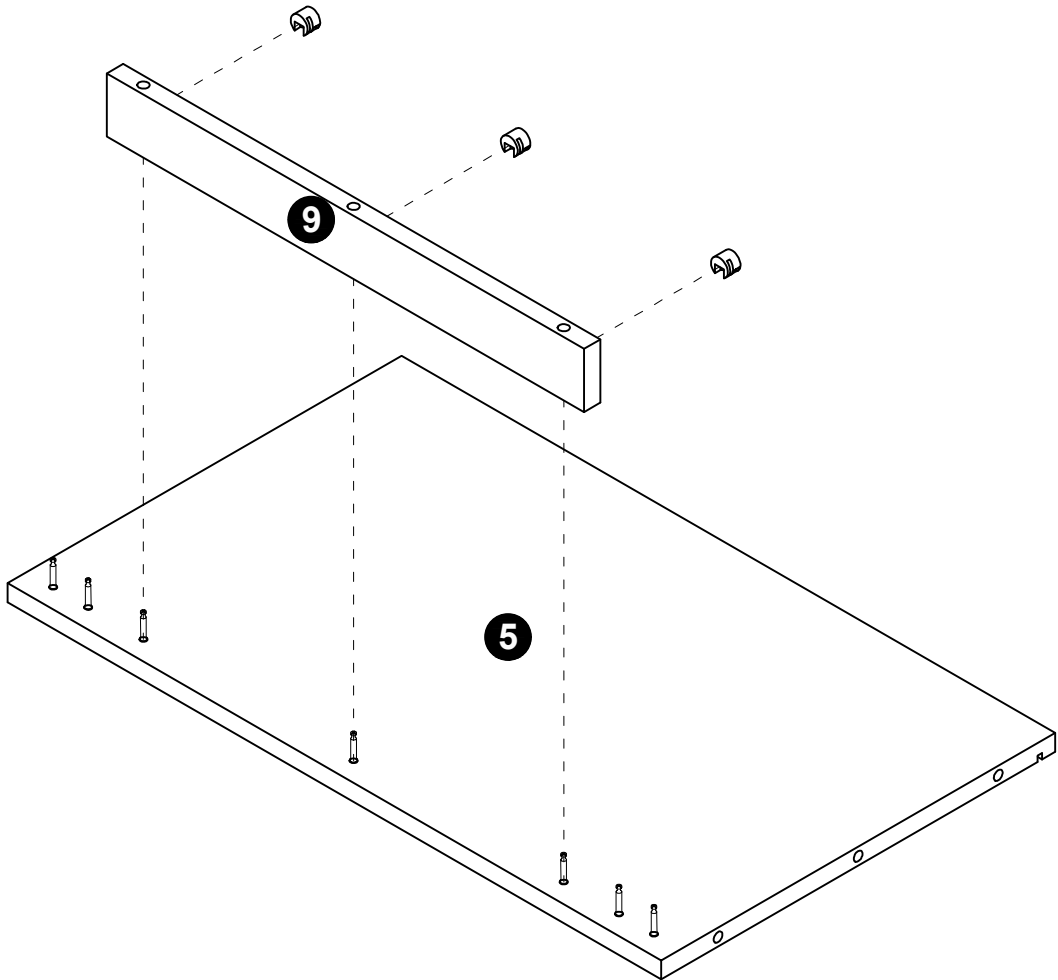


STEP 3

B x 3



Ø15*10mm

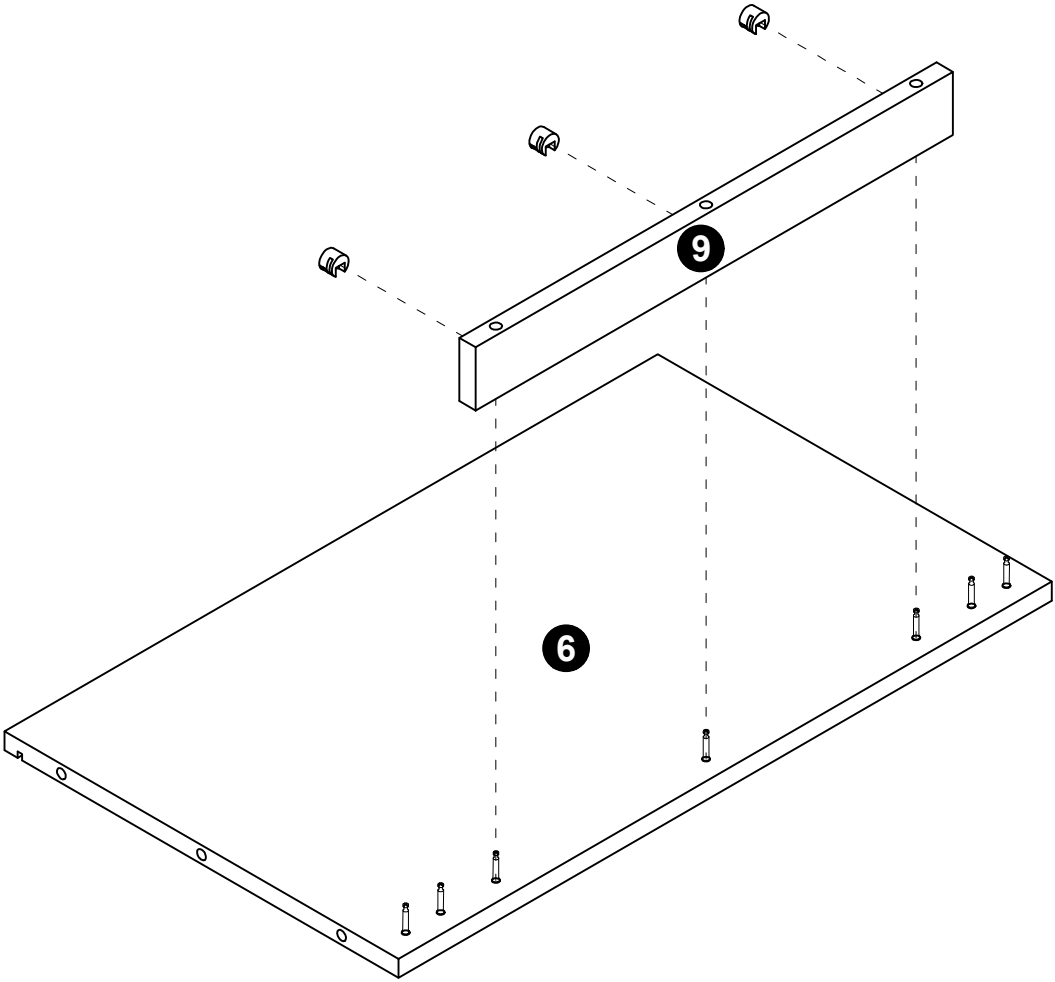

STEP 4

A x 2




Ø6*34mm

B x 8



Ø15*10mm

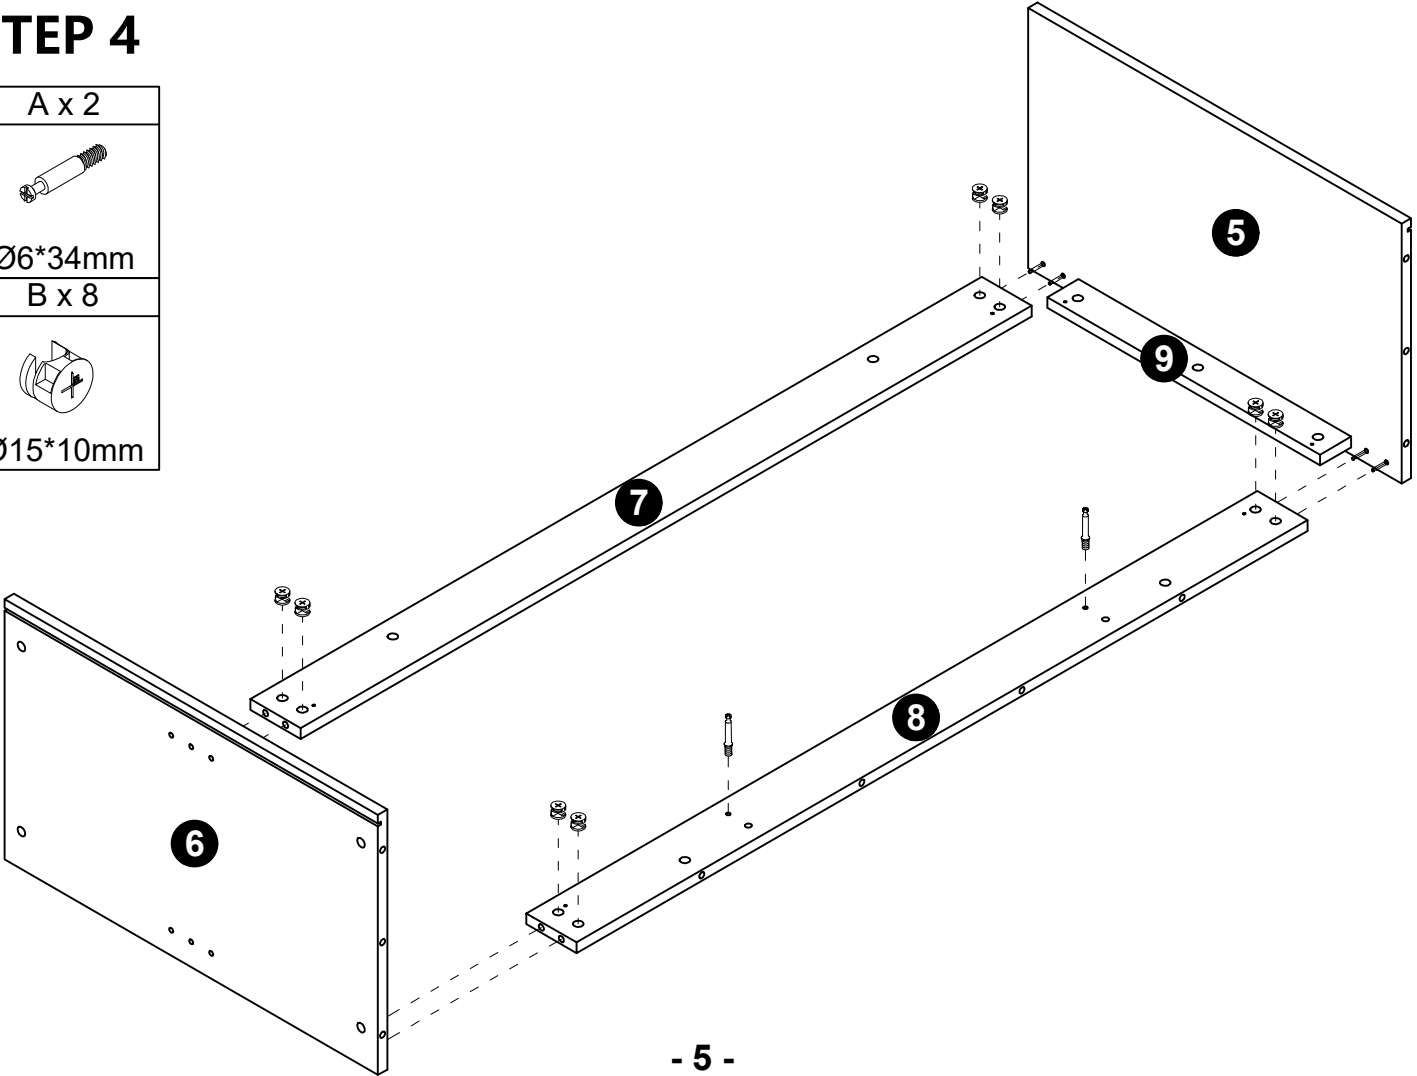

STEP 5


D x 4



G x 8



Ø3.5*12mm

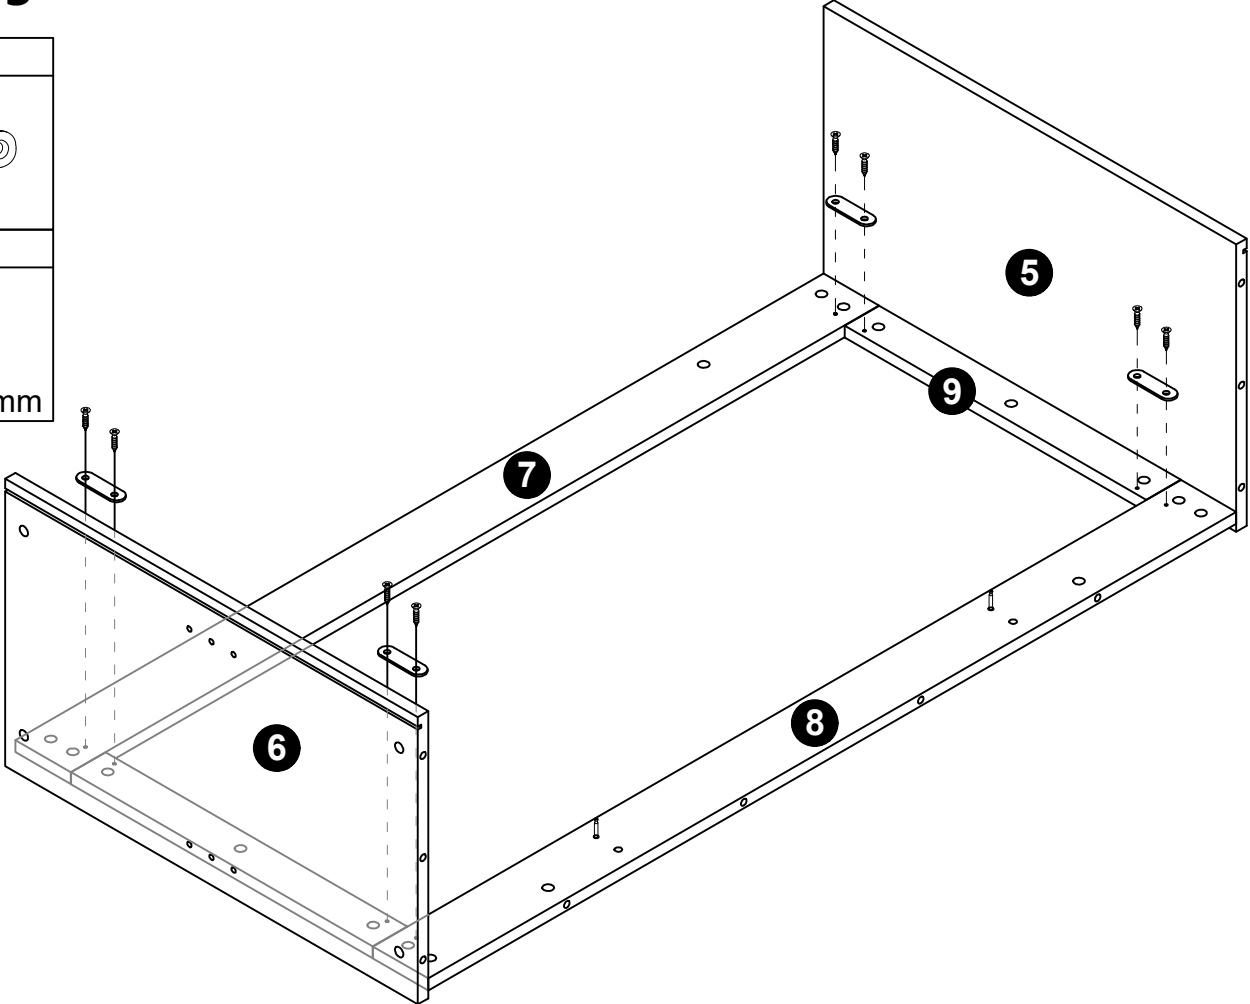


STEP 6

B x 2




Ø15*10mm

C x 2



Ø8*30mm

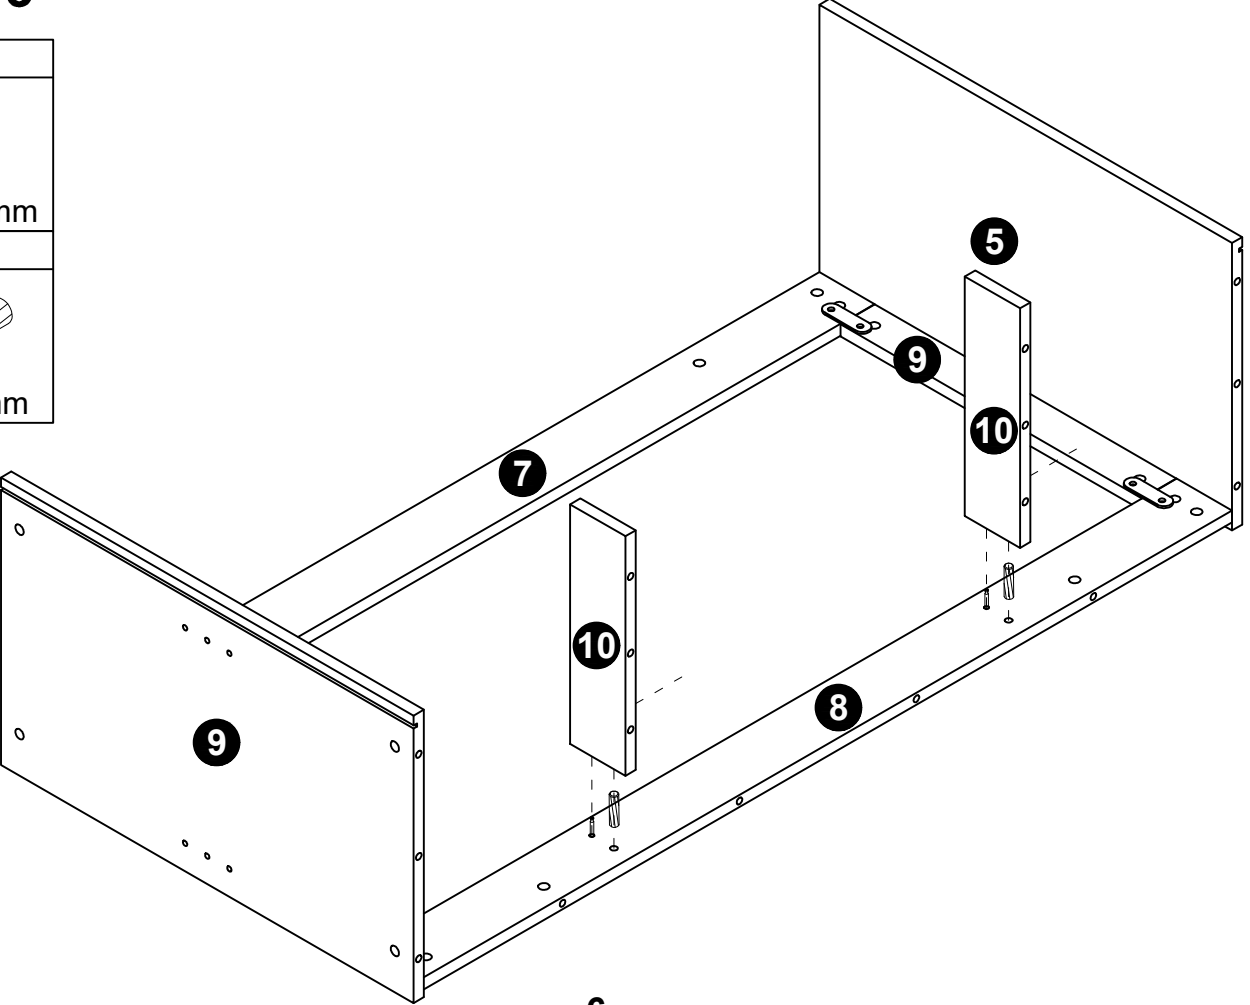


STEP 7

A x 16



Ø6*34mm

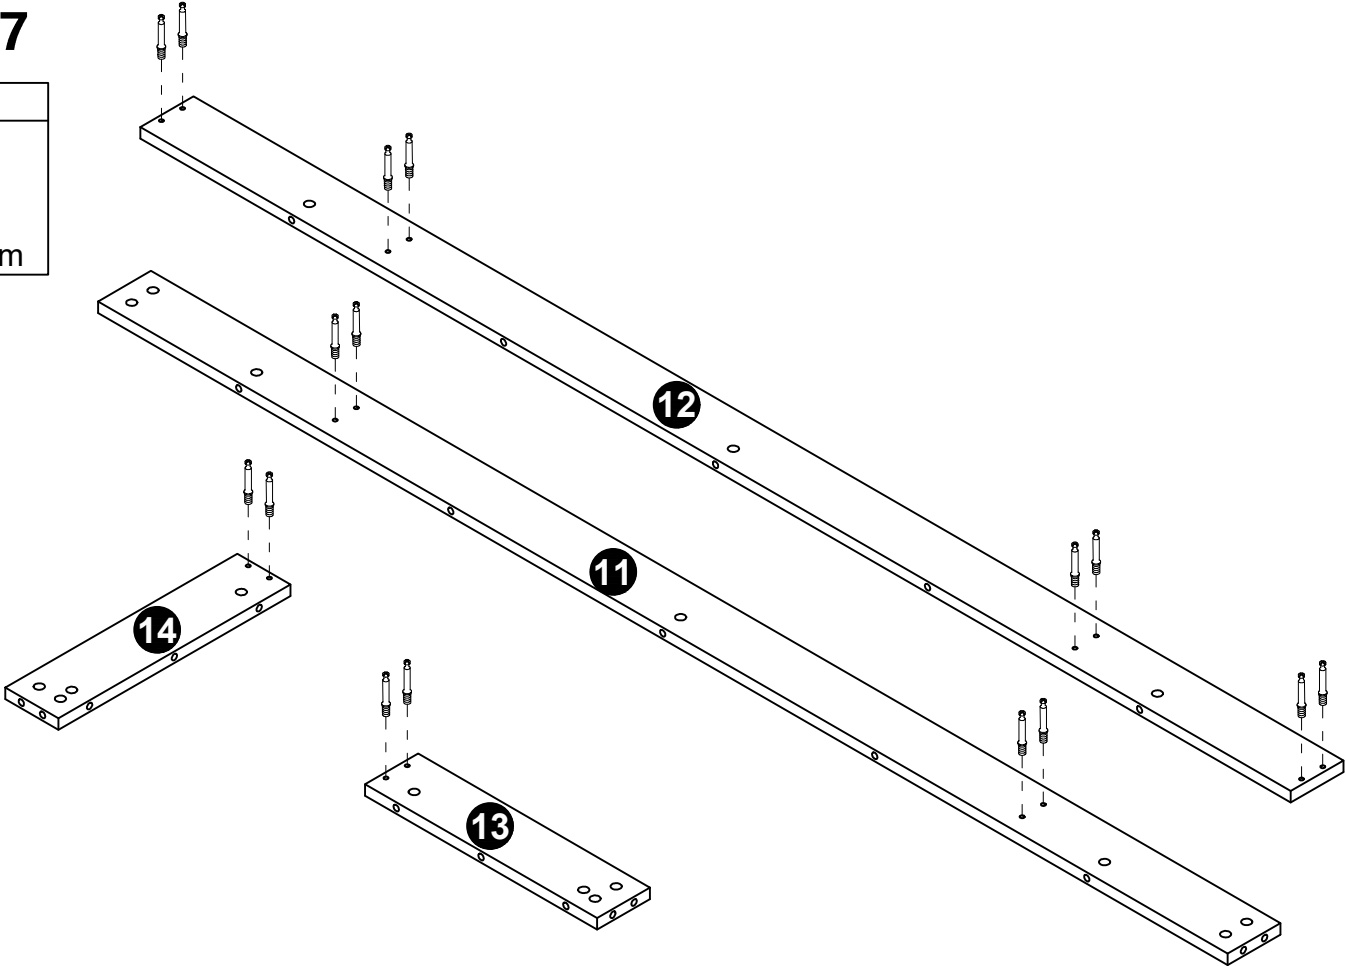


STEP 8

B x 8



Ø15*10mm

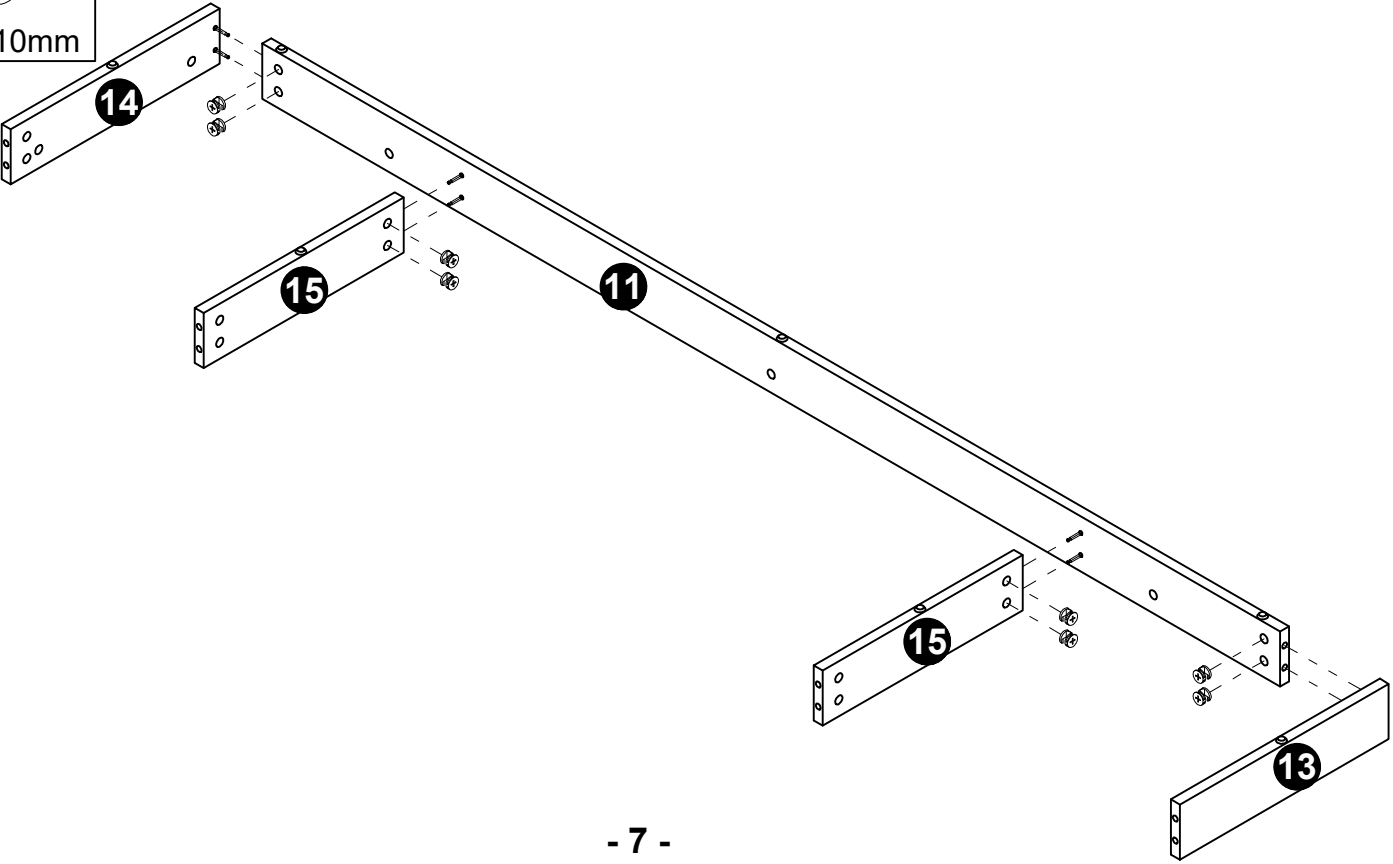


STEP 9

B x 8



Ø15*10mm

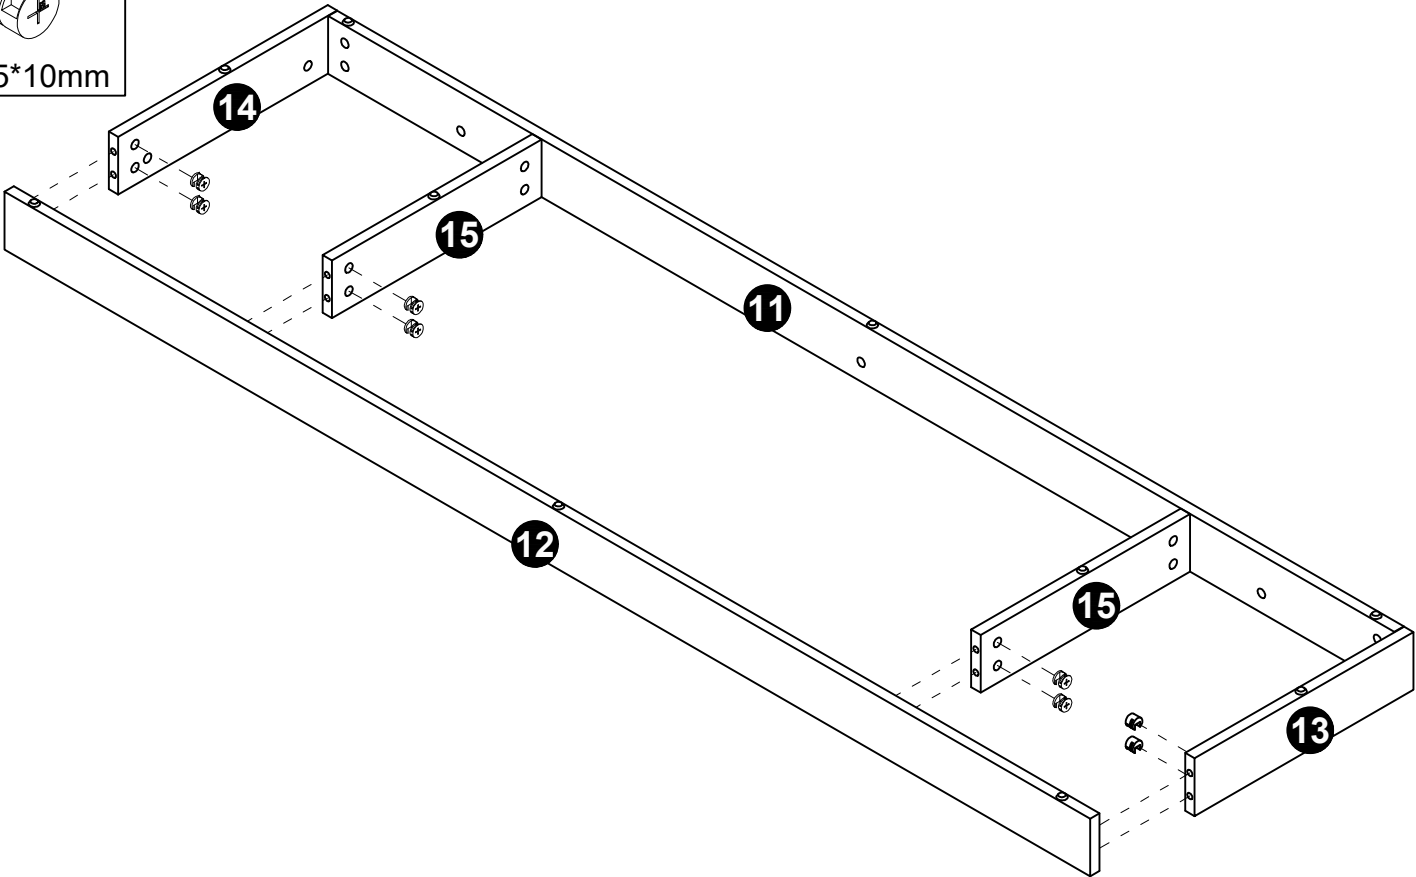


STEP 10

A x 10



Ø6*34mm

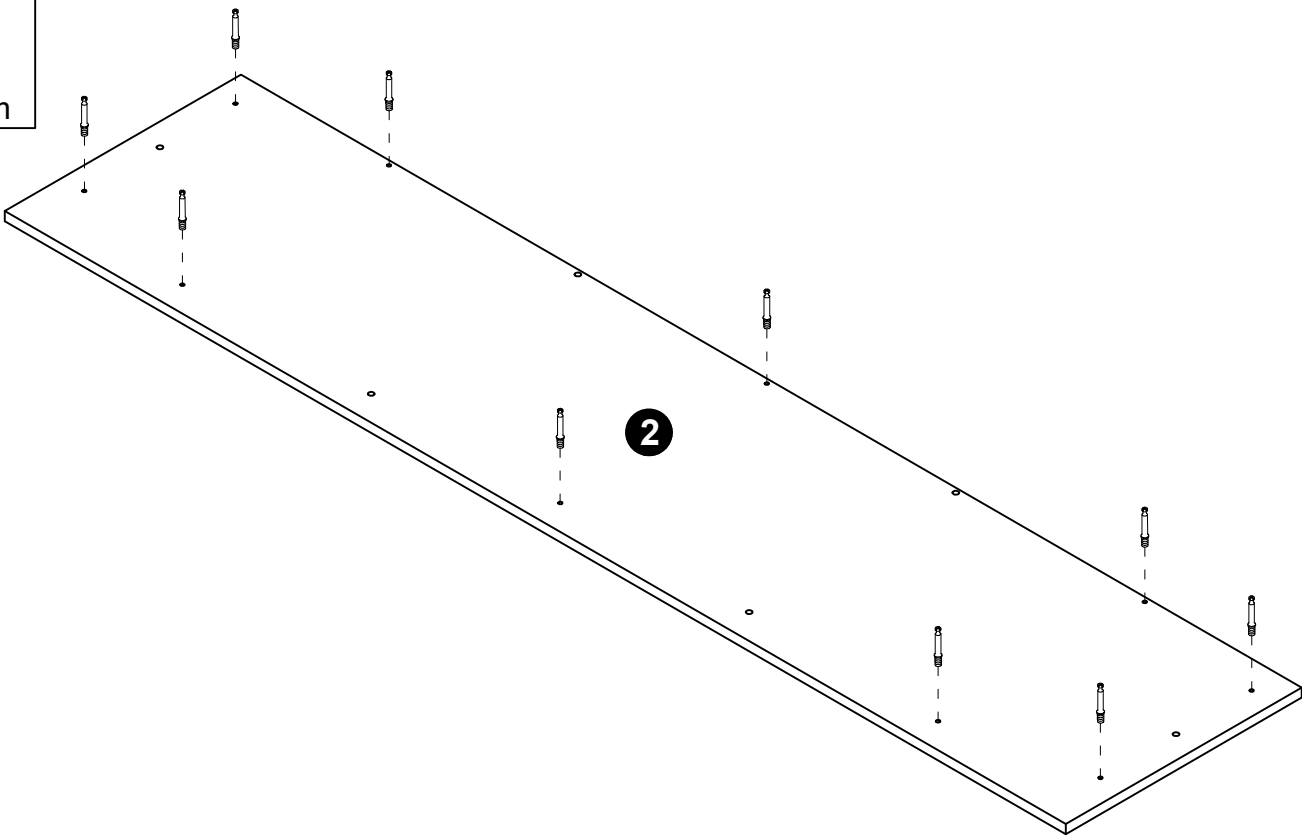


STEP 11

B x 10




Ø15*10mm

C x 6



Ø8*30mm

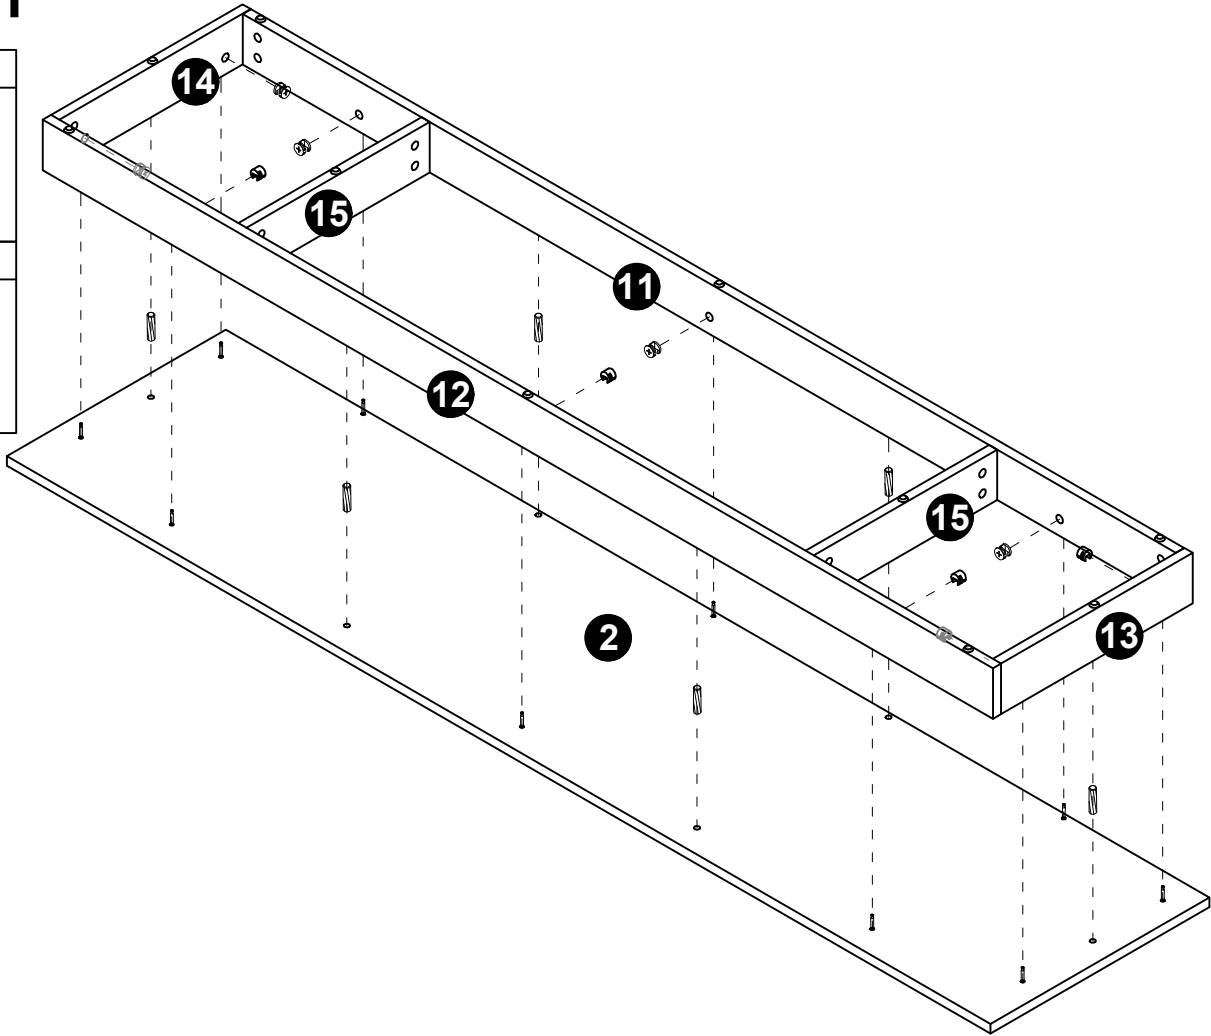


STEP 12

A x 14



Ø6*34mm

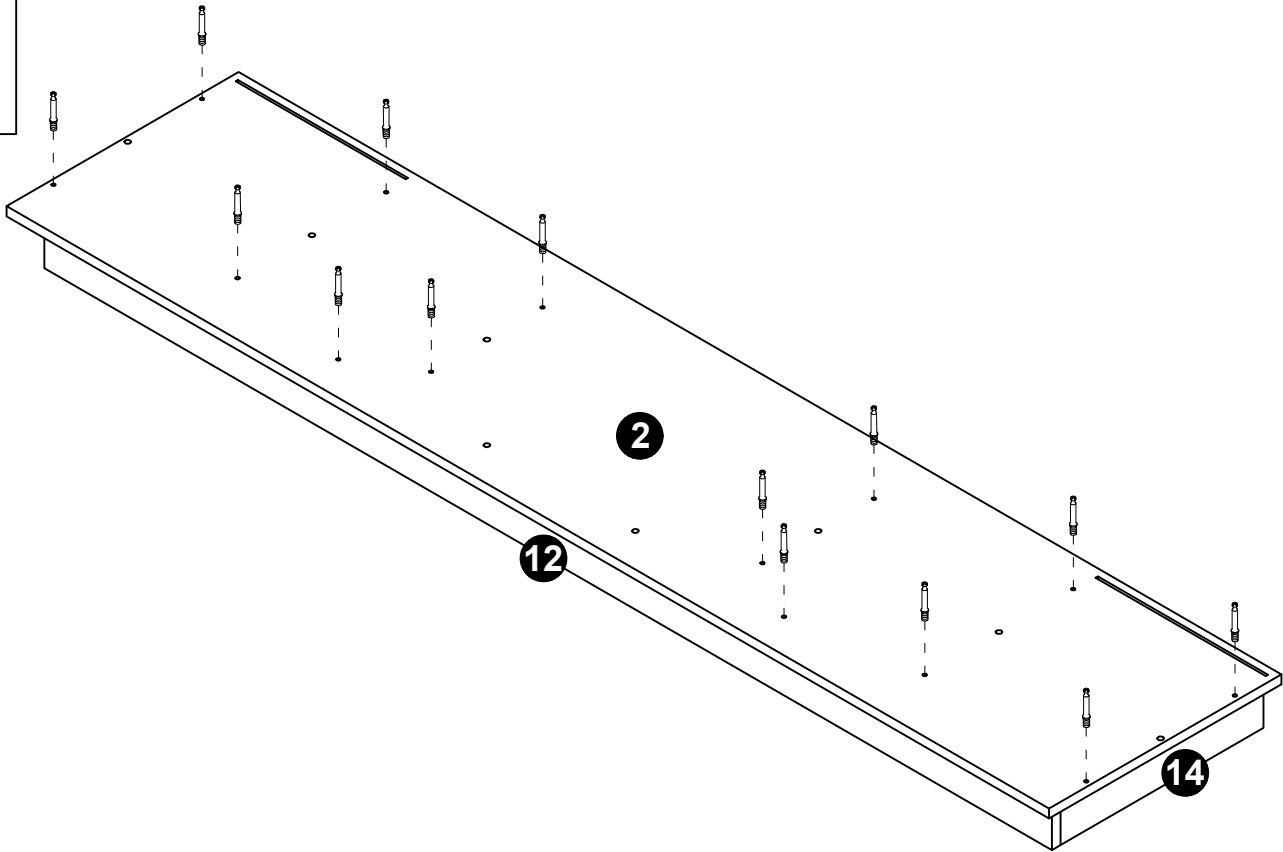


STEP 13

B x 10




Ø15*10mm

C x 6



Ø8*30mm

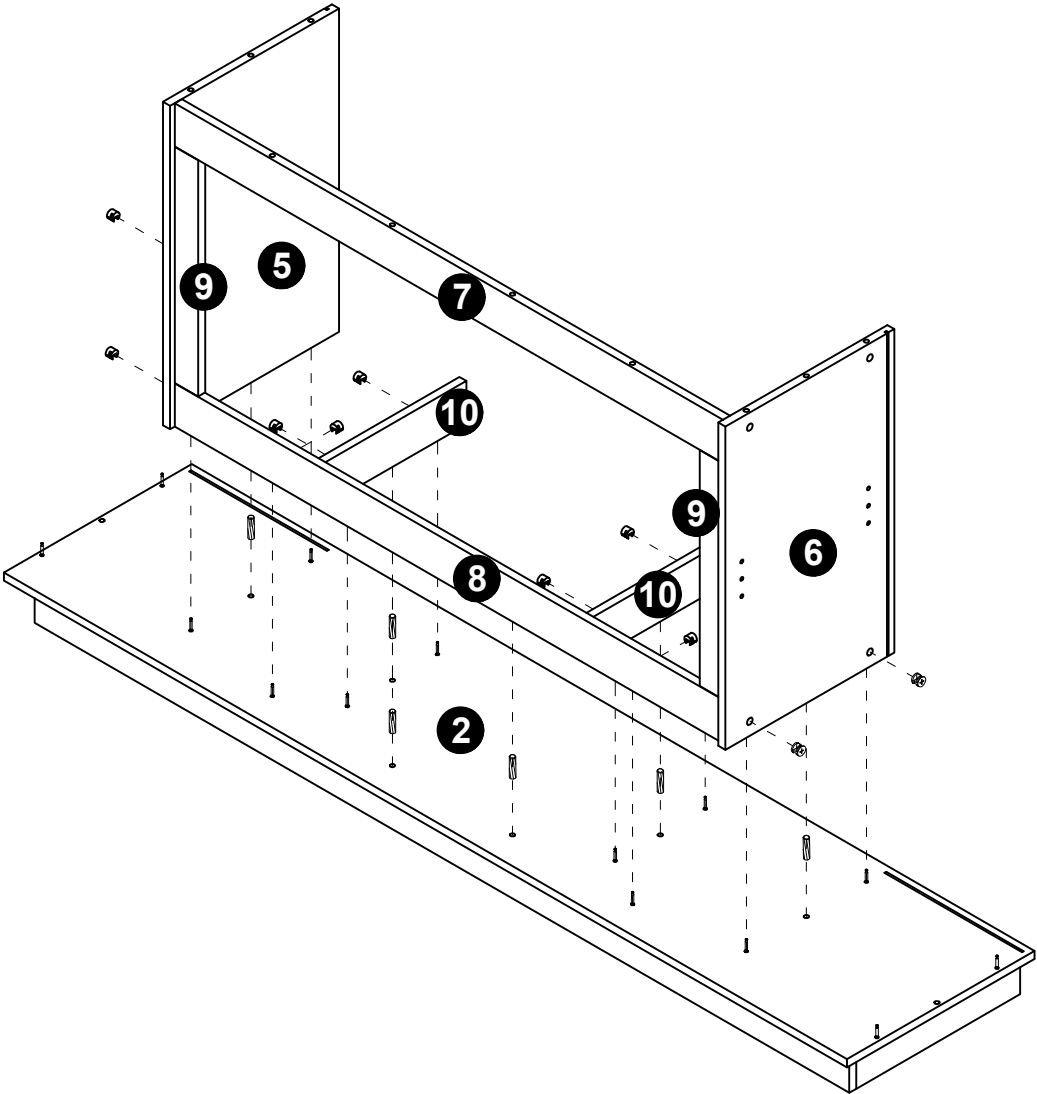


STEP 14

B x 4




Ø15*10mm


C x 2





Ø8*30mm

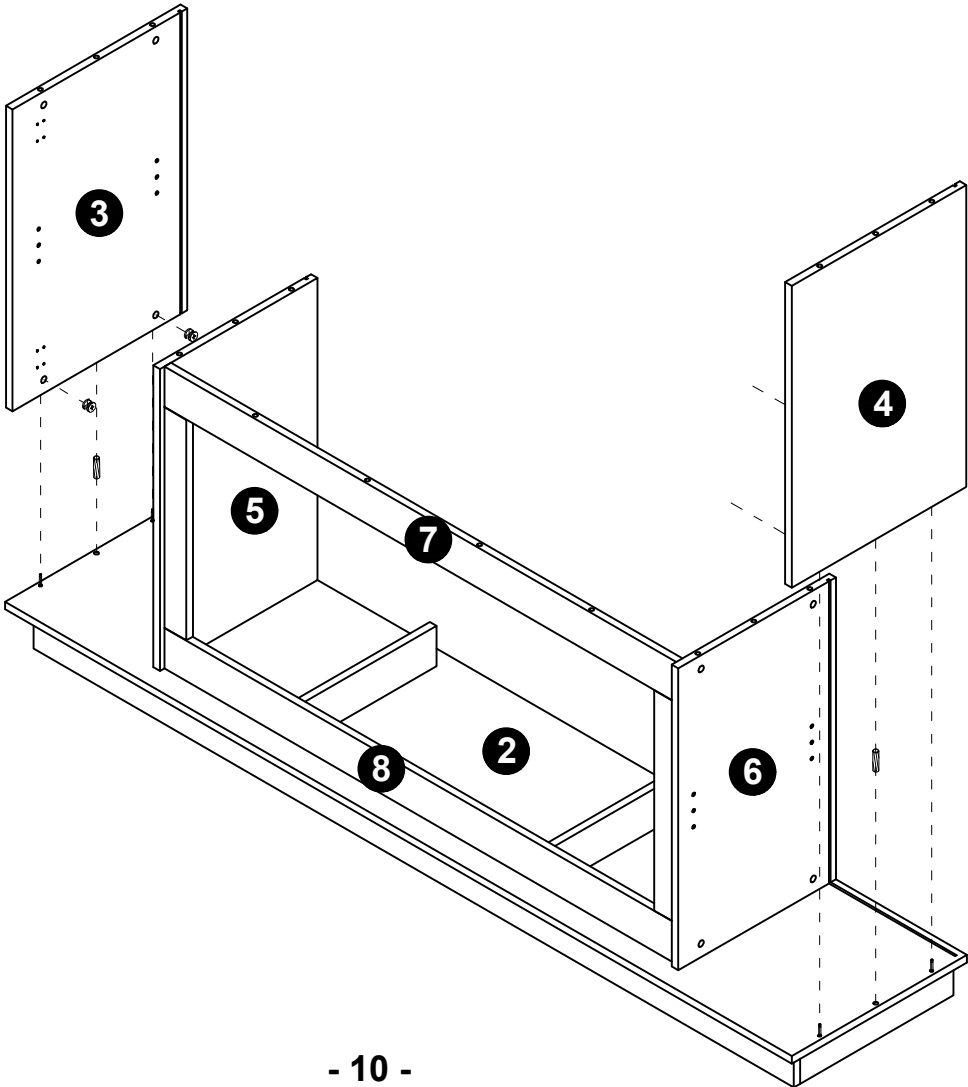

STEP 15

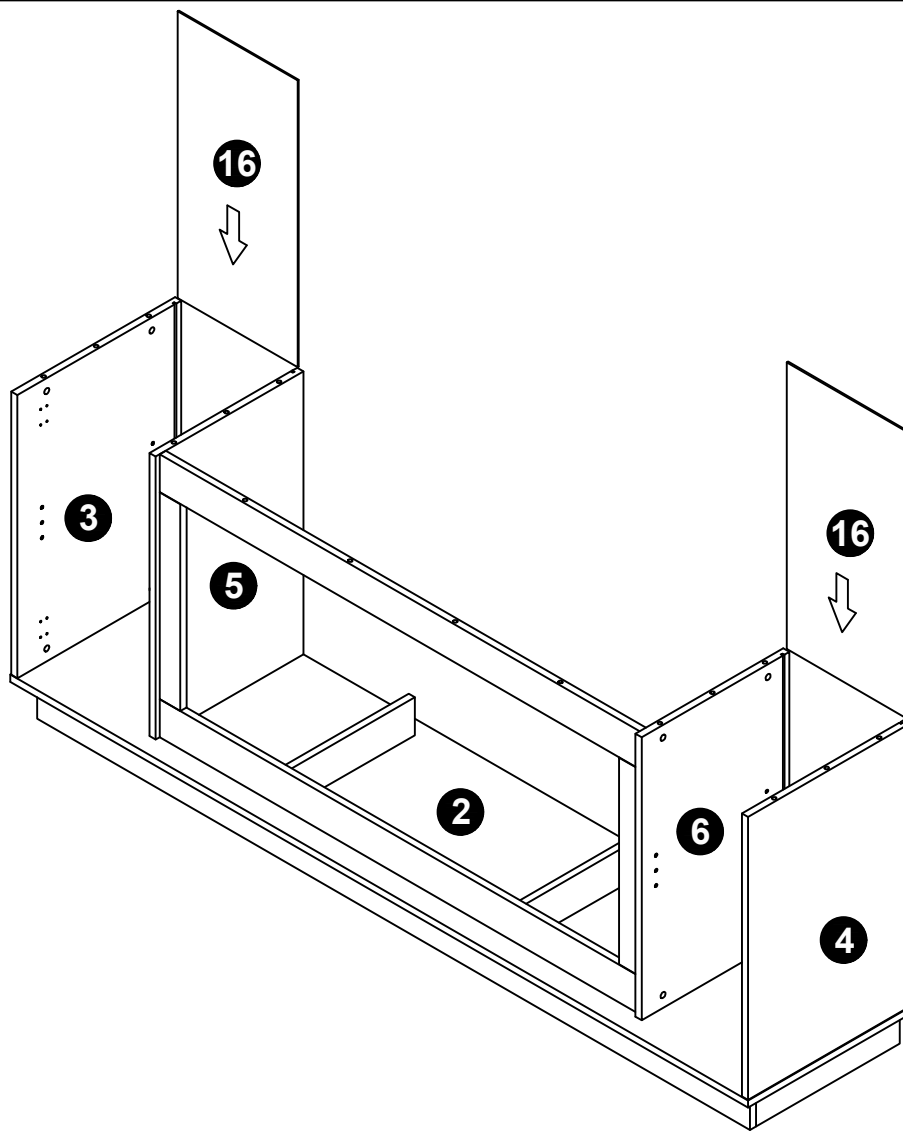

STEP 16

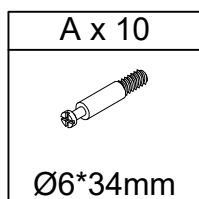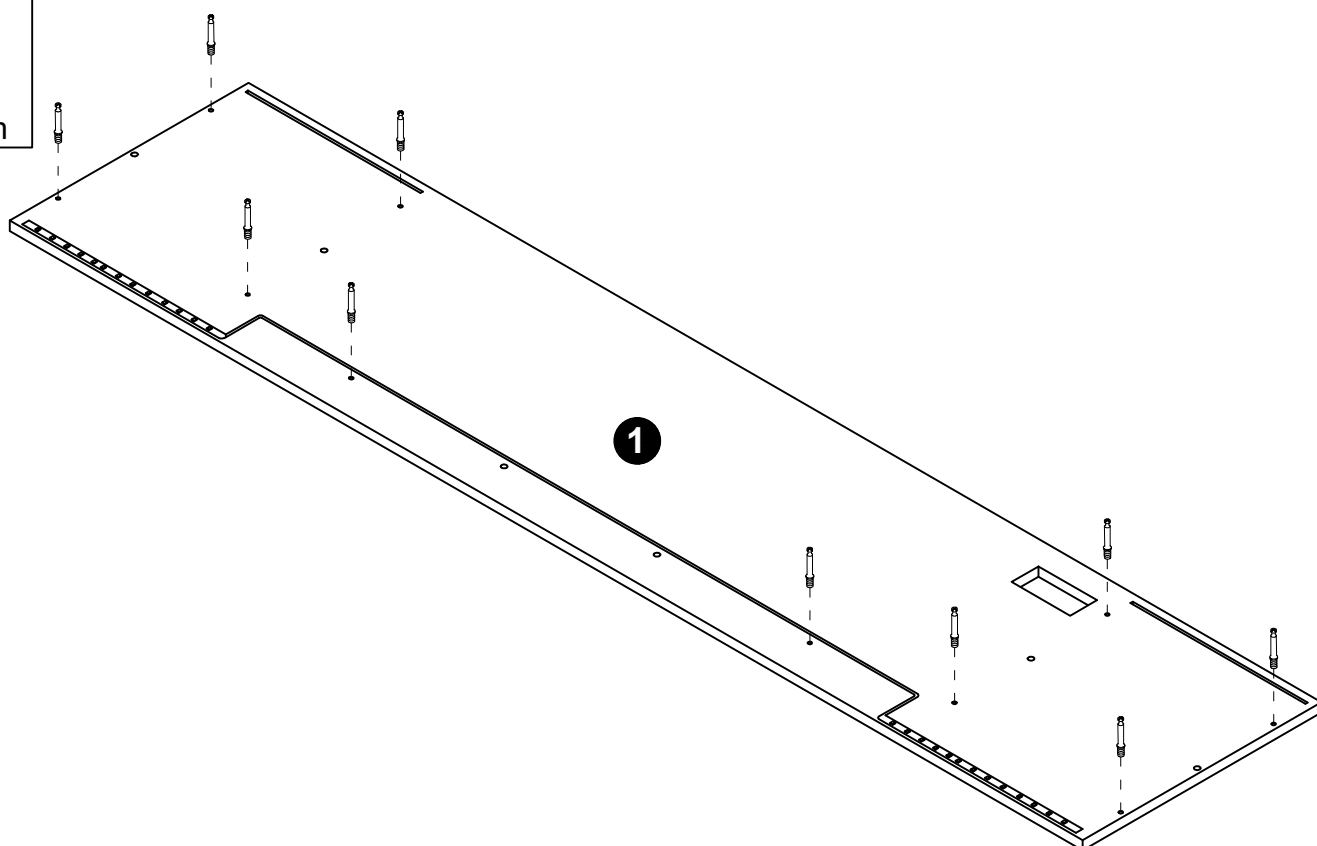


STEP 17

B x 10




Ø15*10mm

C x 6



Ø8*30mm

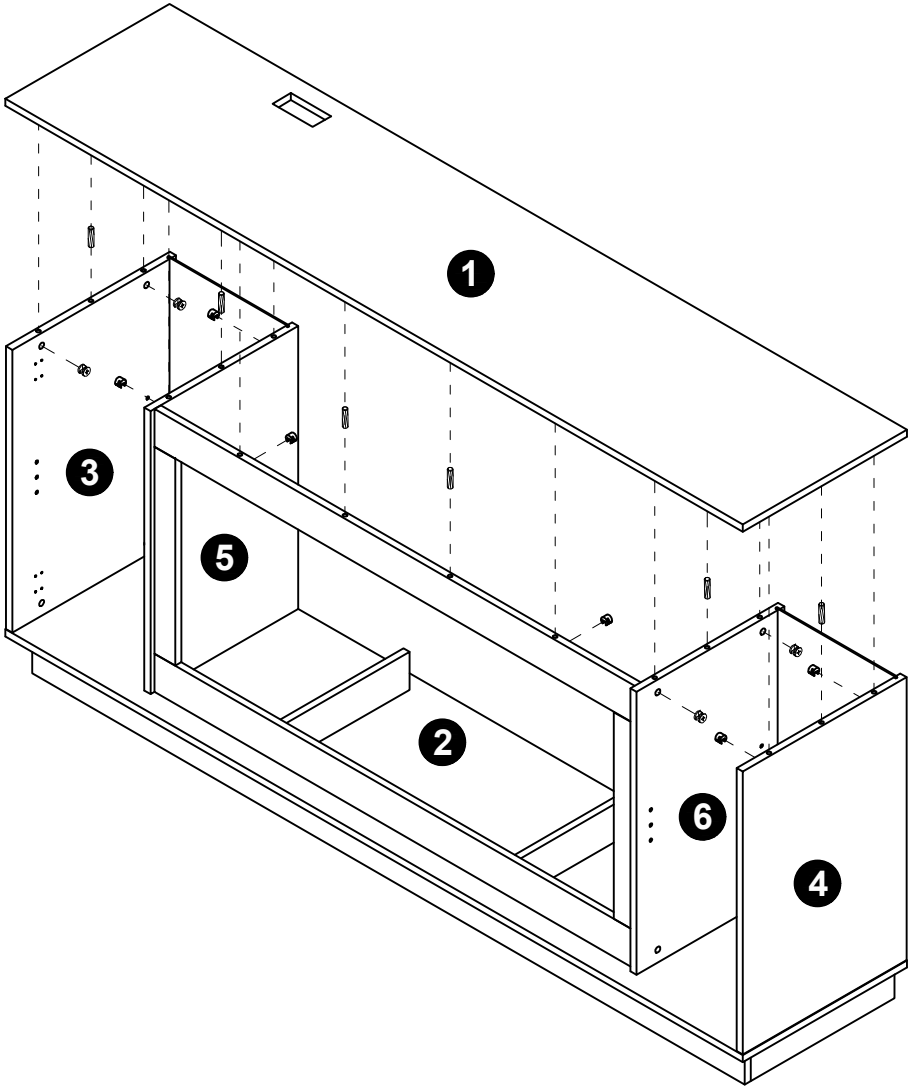

STEP 18

E x 8



Ø3*15mm

F x 8




L x 2





L1


L2

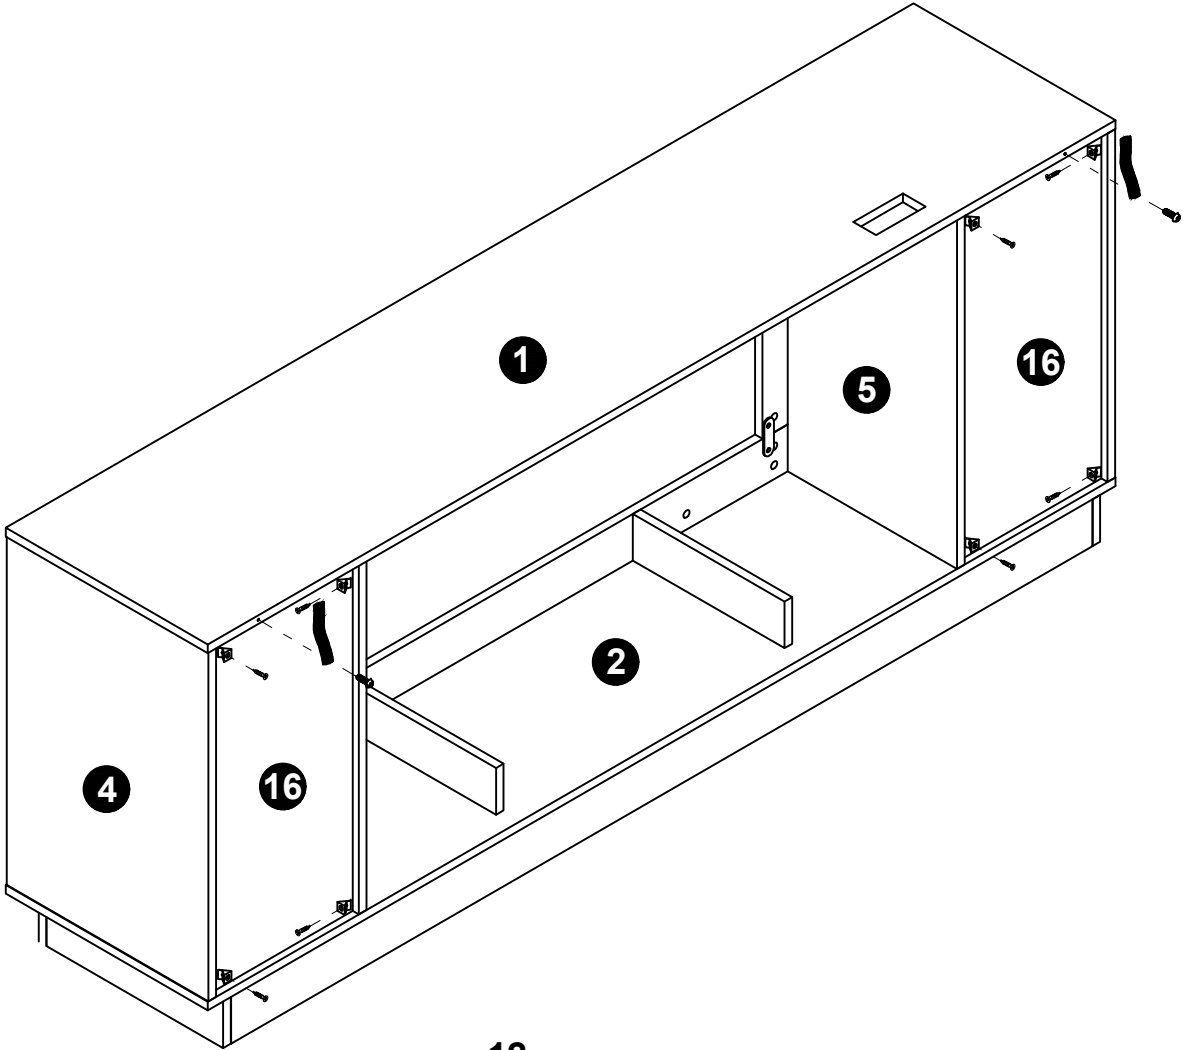

STEP 19

I x 8



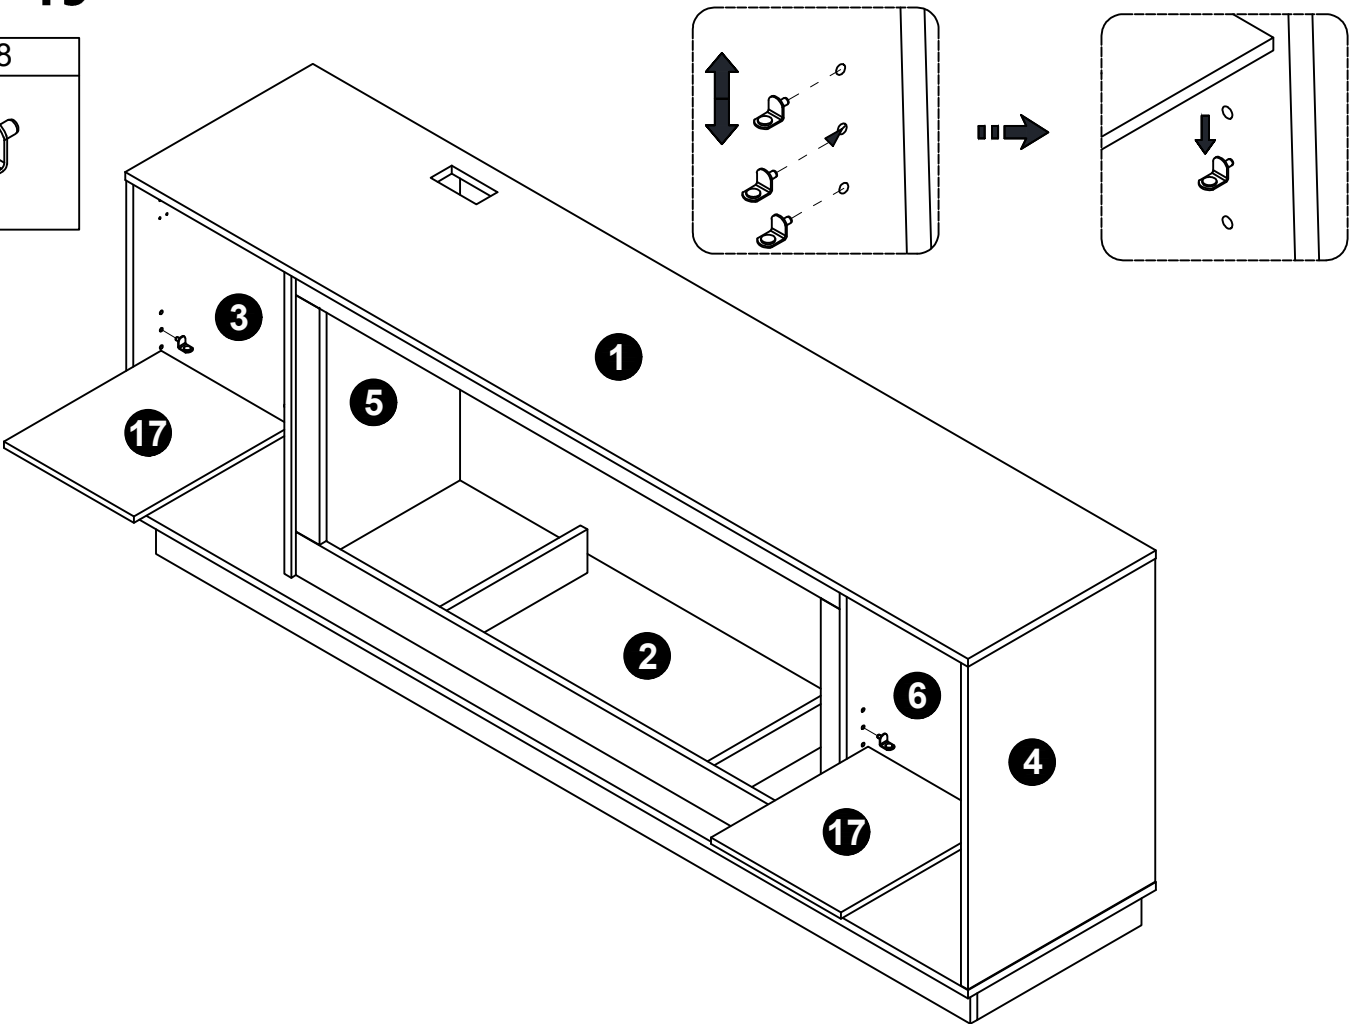


STEP 20


G x 8





Ø3.5*12mm

H x 4





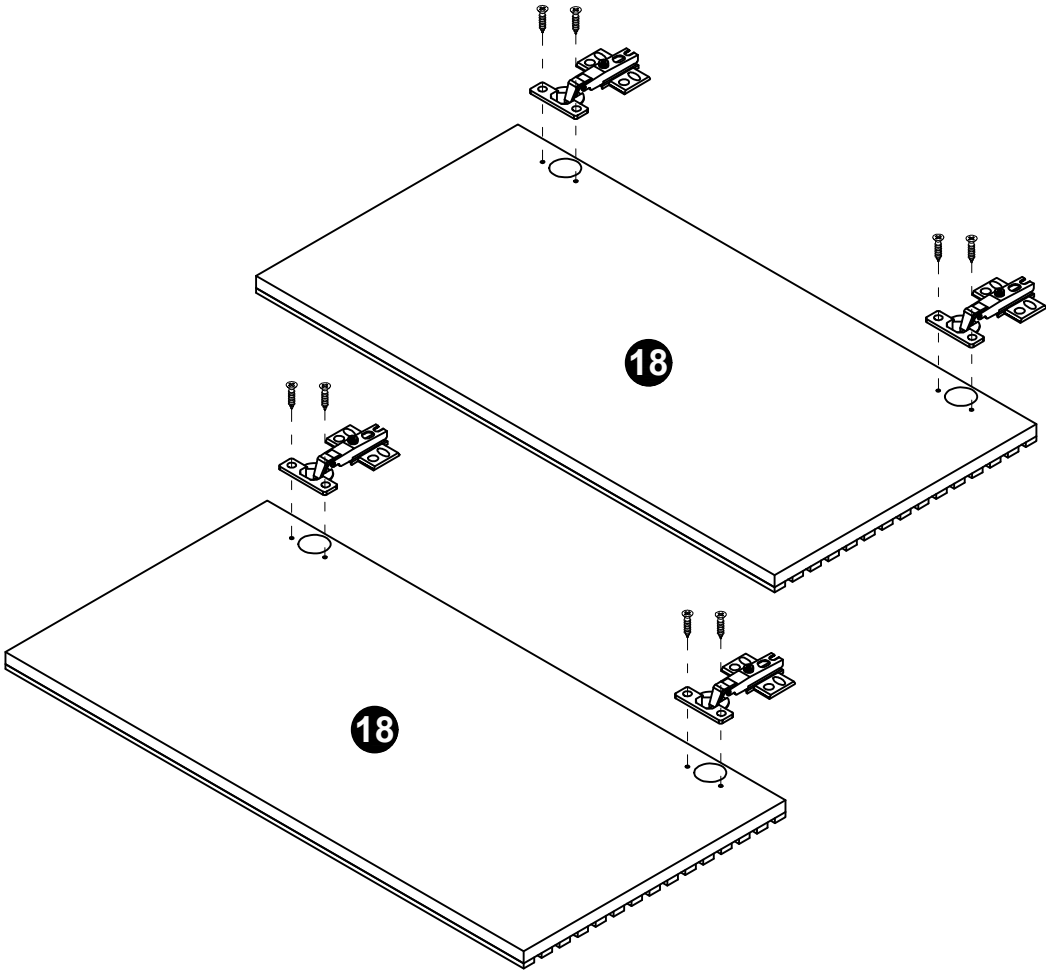







STEP 21

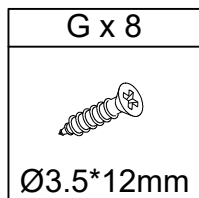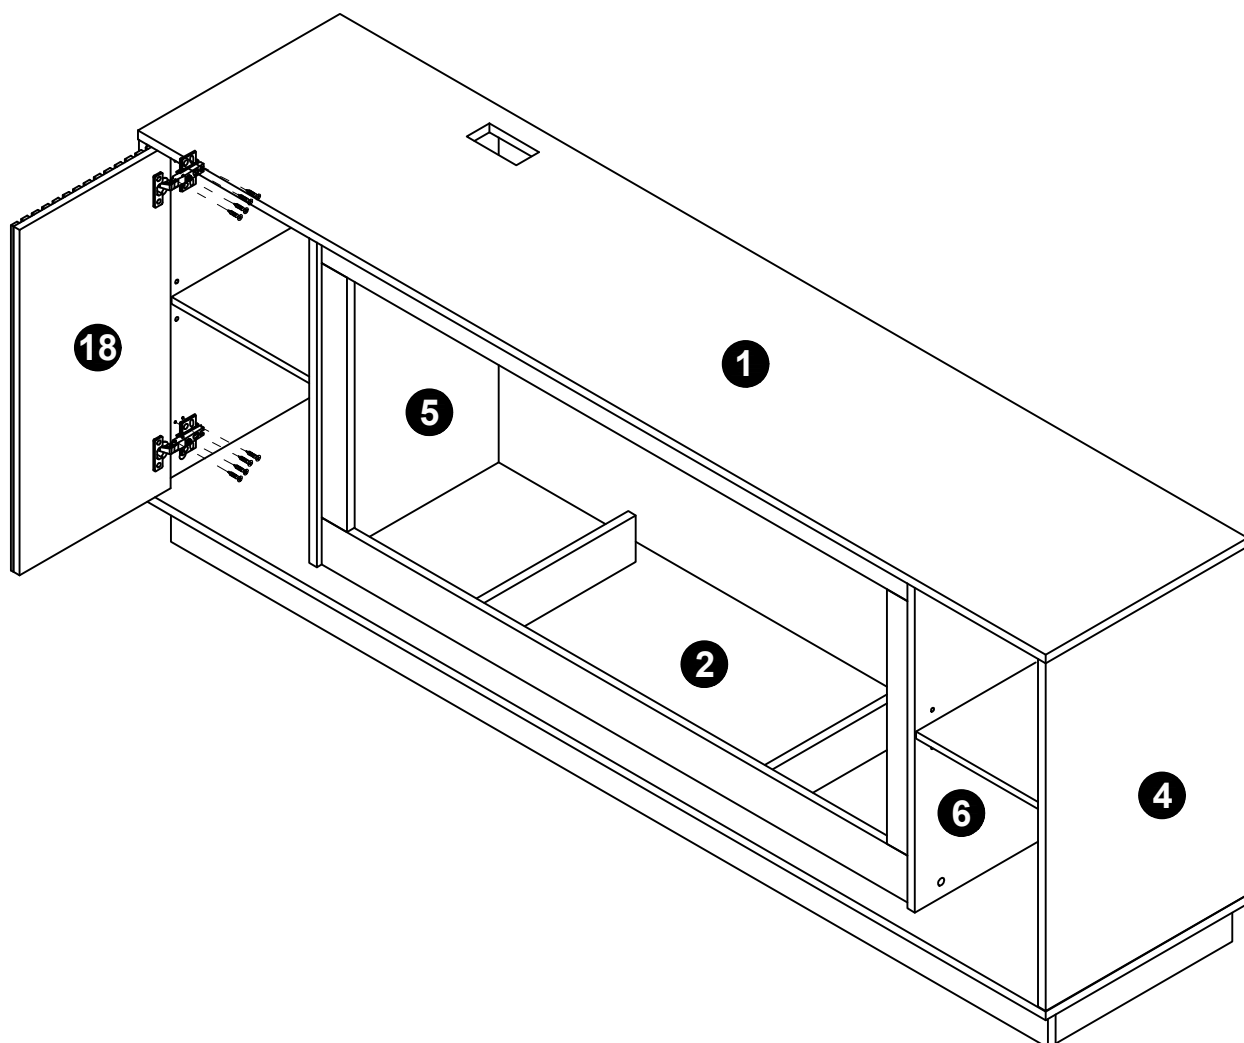

STEP 22

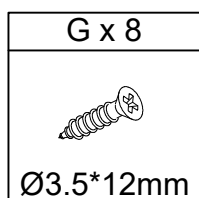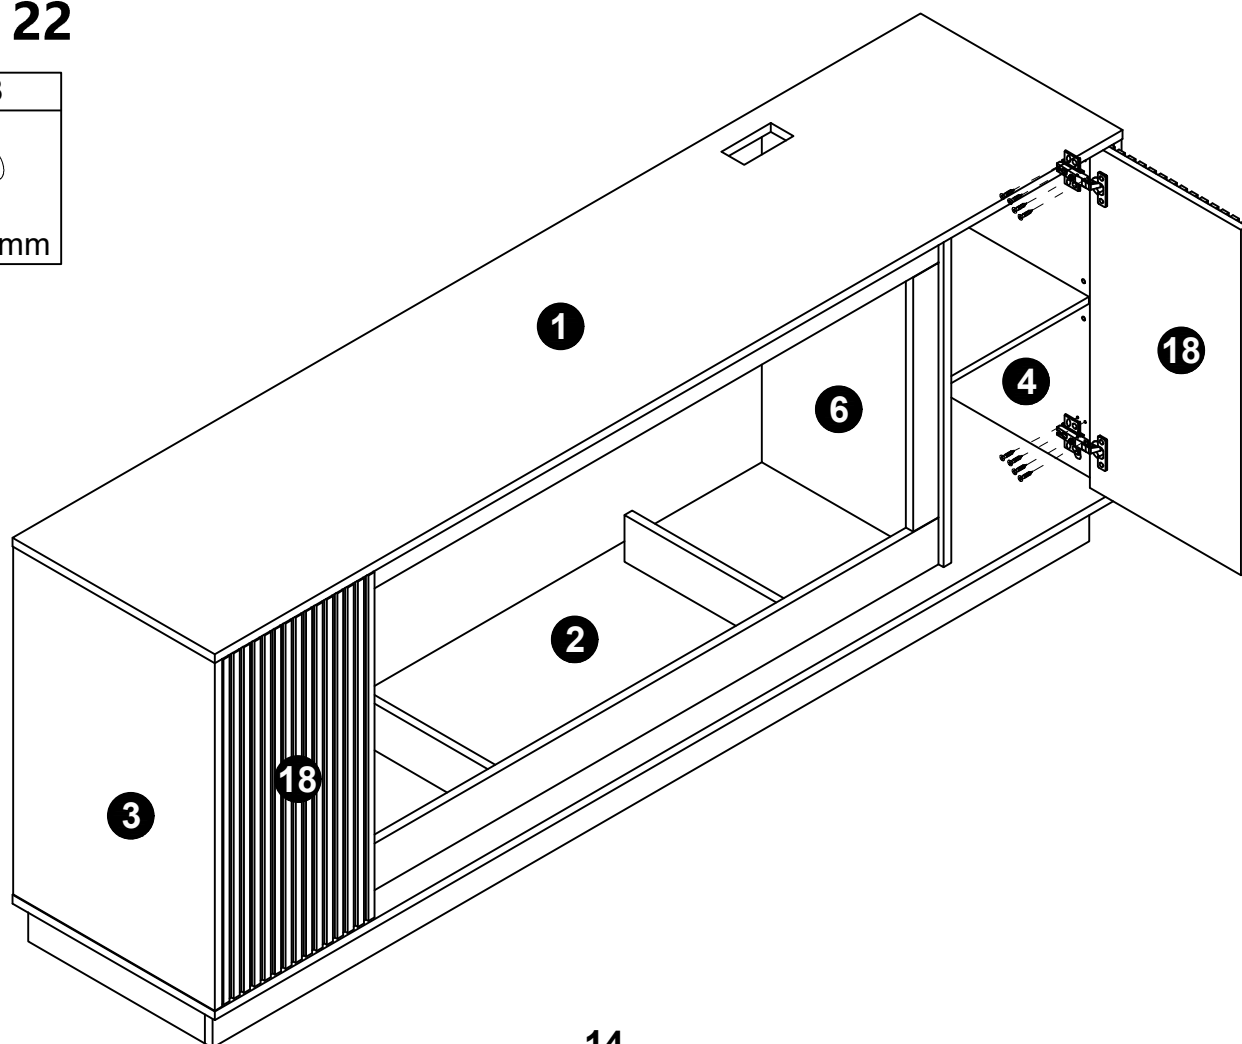

STEP 23

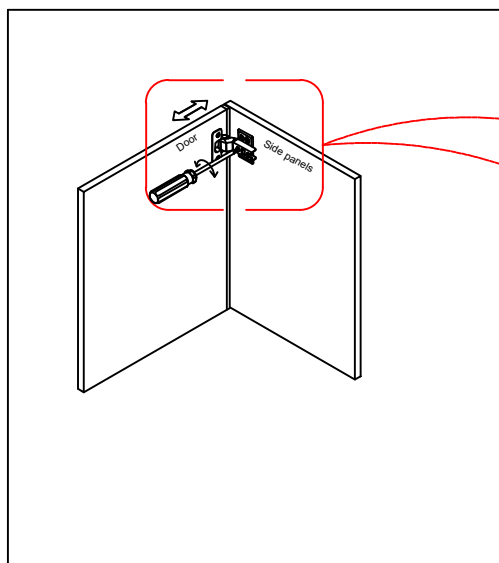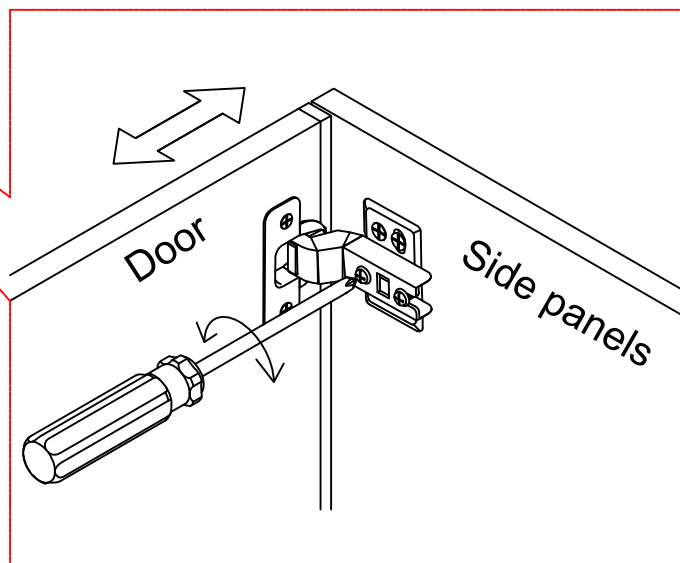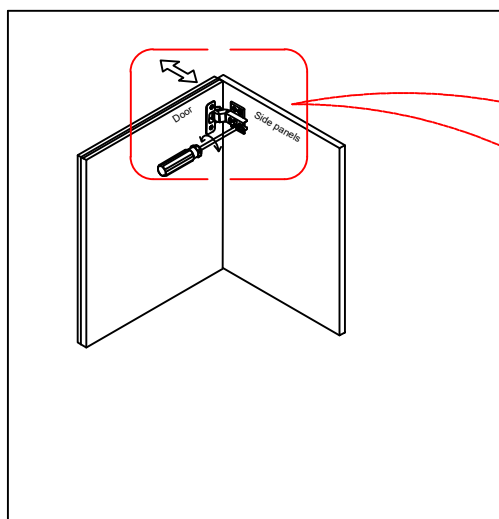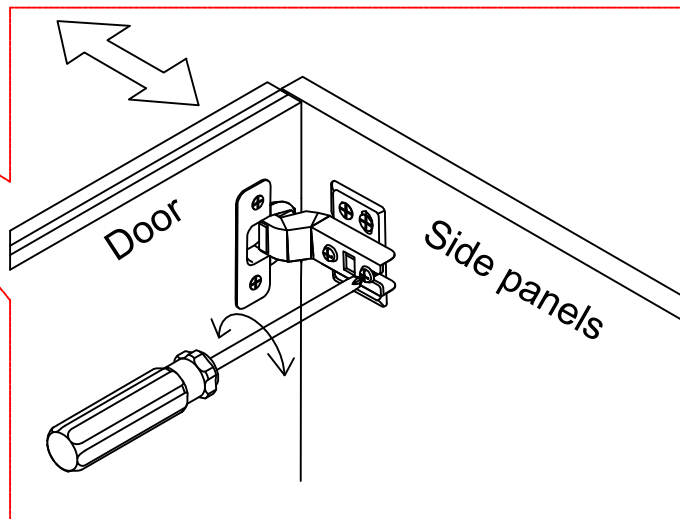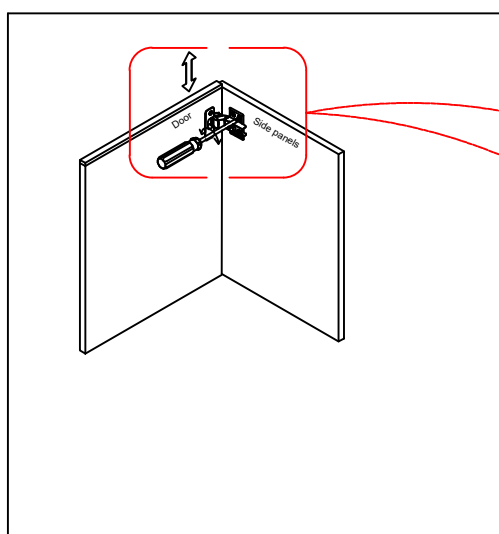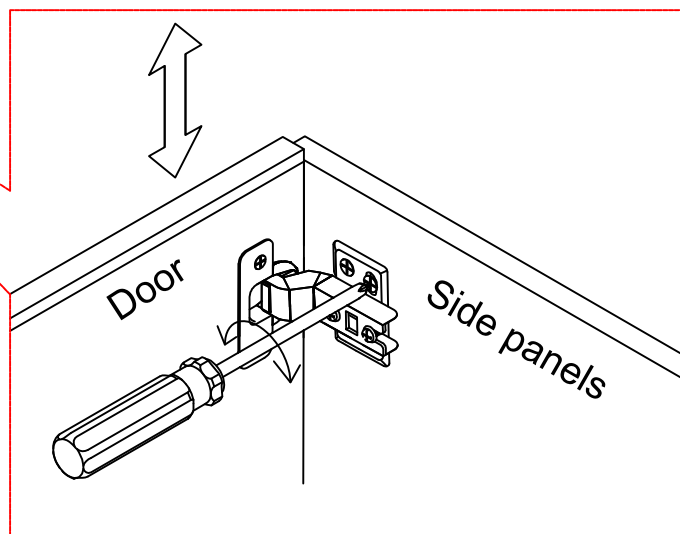

STEP 24


J x 1



K x 2



Ø3.5*12mm

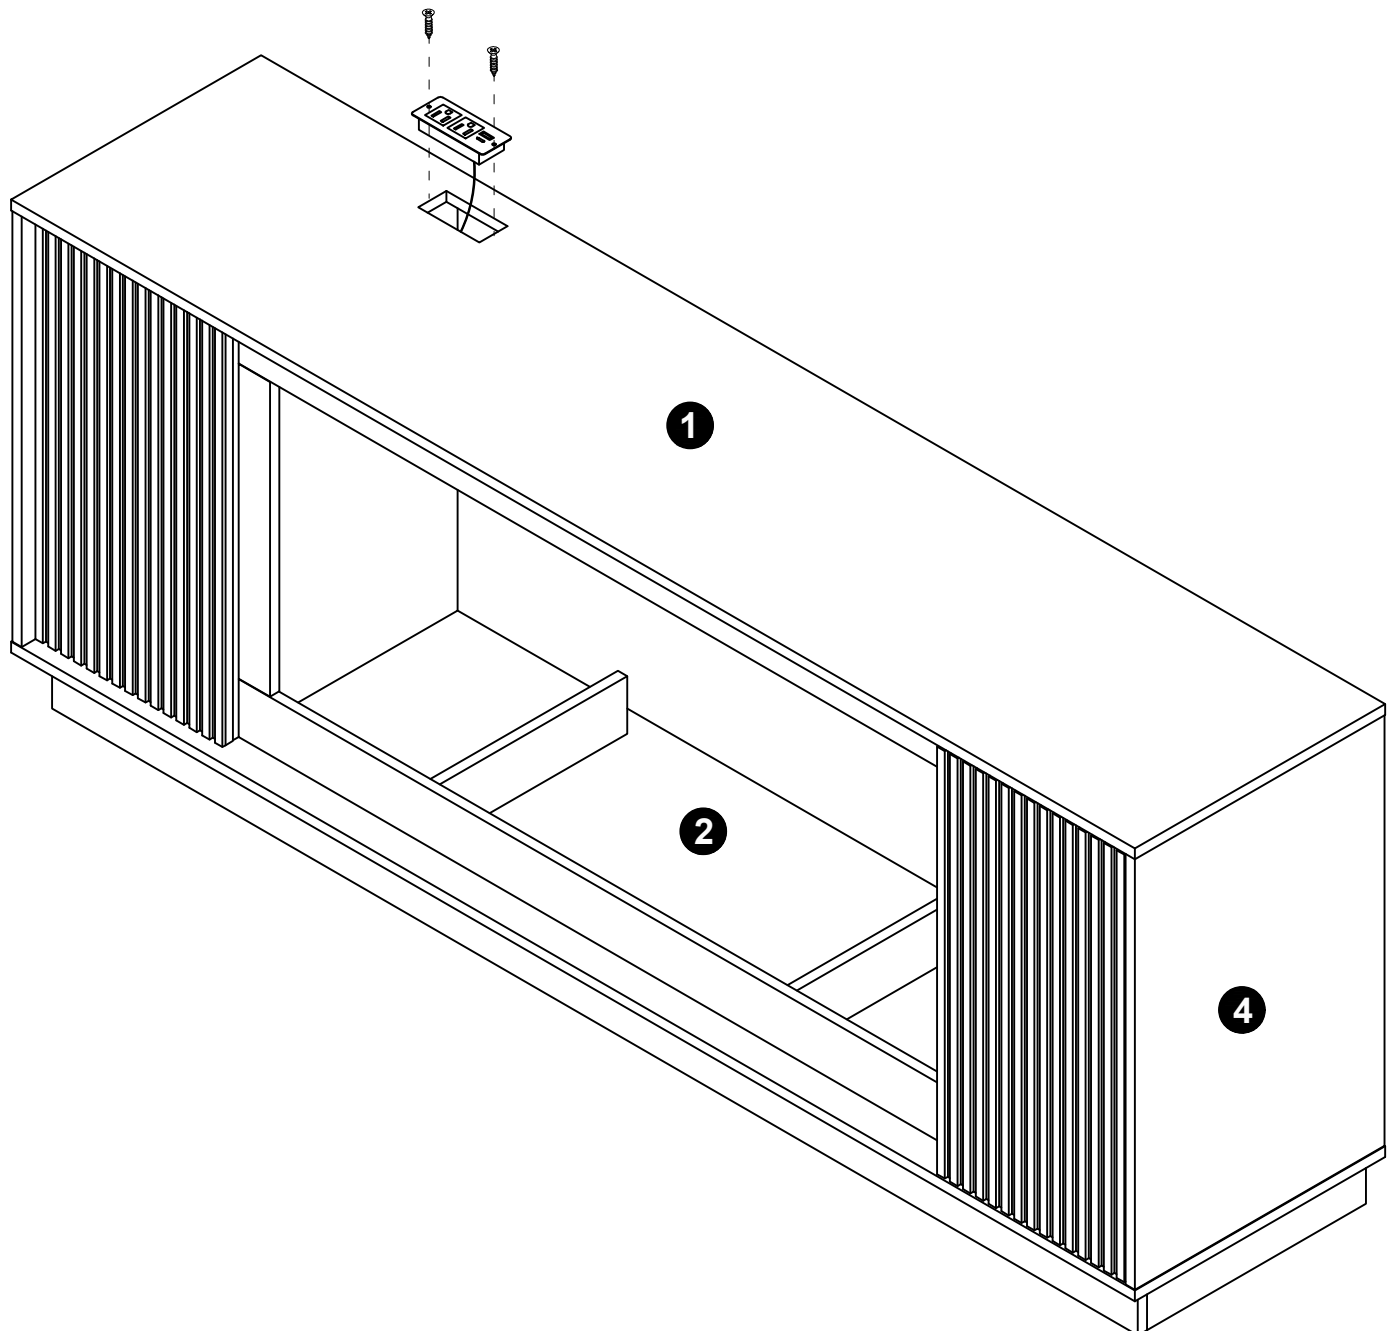

STEP 25

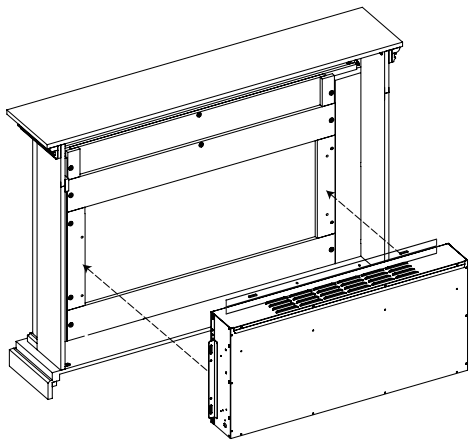


Figure 1

Step One

Figure 1

From the rear of the mantel insert the firebox into the opening.
Note: Your mantel may vary slightly from the one depicted in this illustration.

STEP 26

Step Two

Figure 2

Attach the firebox to the back of the mantel with the 6 supplied screws.

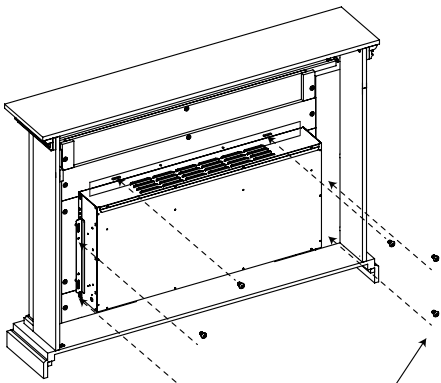


Figure 2

Screws

STEP 27

