




Assembly Instructions

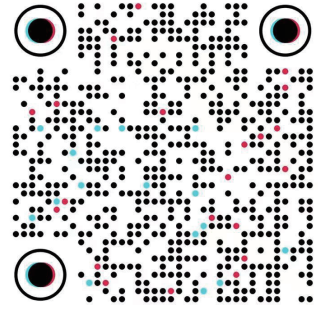

TYR8811KD-30M










View installation videos on TikTok






Your recliner comes packaged in **one box**. Carefully remove all of components from the packaging and set aside for assembly.

CAUTION

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Package Contents

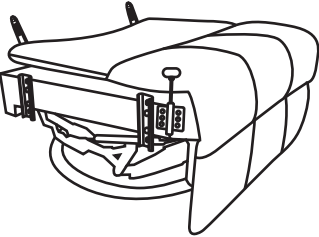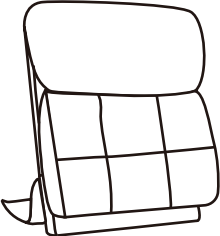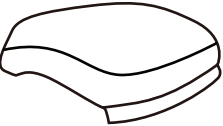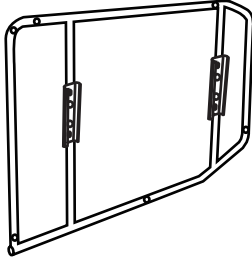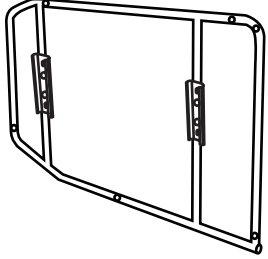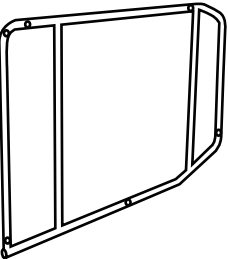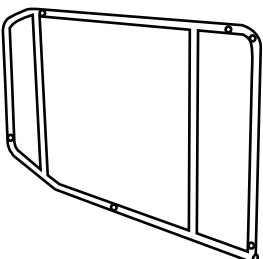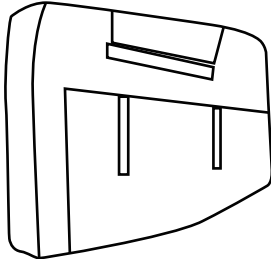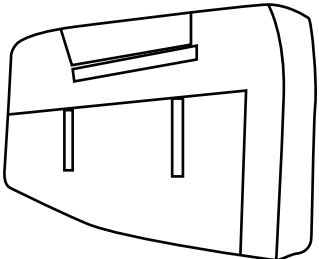
A*1 	B*1 	C*1 	D*1 
E*1 	F*1 	G*1(L) 	H*1(R) 
I*1(L) 	J*1(R) 	K*1 Armrest cover (L) 	L*1 Armrest cover (R) 

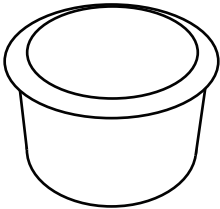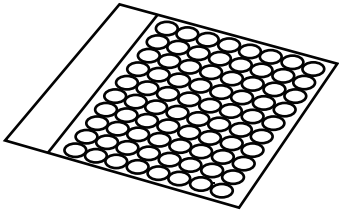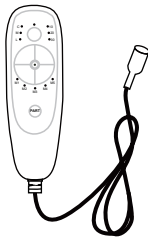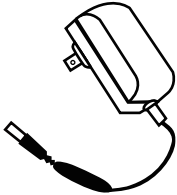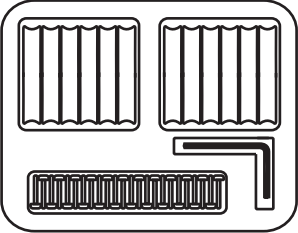N*2 	M*1(Spring bag) 	O*1(Massage Remote) 	P*1(Power Plug) 
T*1(Screw package) 			

Step 1 :

Secure the armrest iron frame with screws.


Screw package

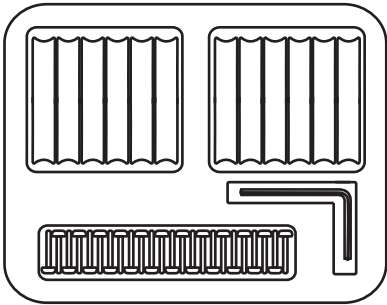


Q*24 (M6 * 25 screws)

R*12 (connecting rods)

S*1 (wrench)

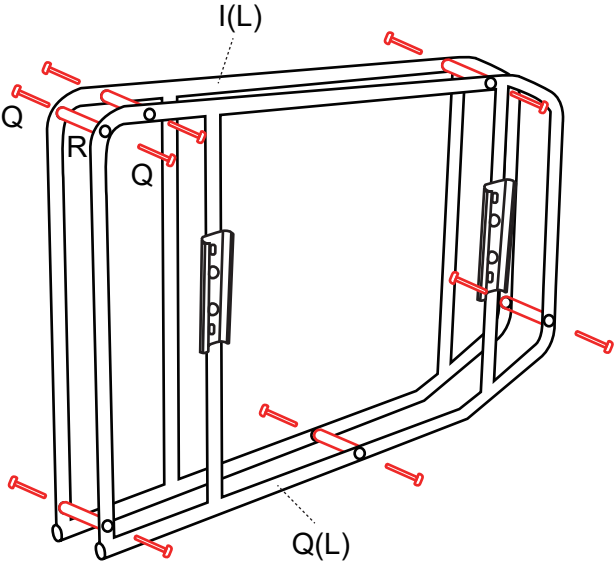


Armrest iron frame(L)	
G*1(L)	I*1(L)
Q*12	R*6

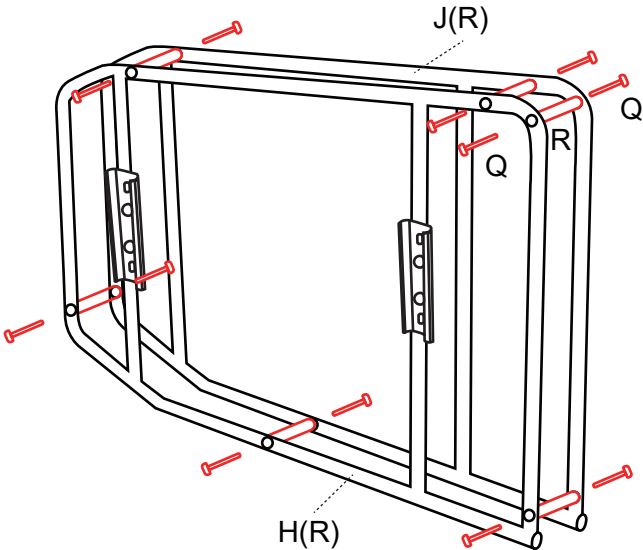




Armrest iron frame(R)	
H*1(R)	J*1(R)
Q*12	R*6

Step 2:



Place the armrest iron frame into the armrest cover.

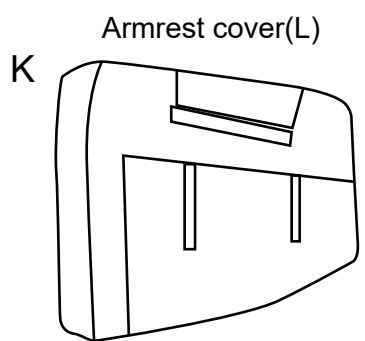

Armrest iron frame(L)

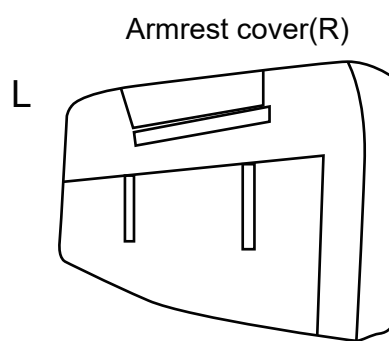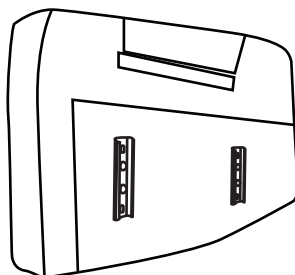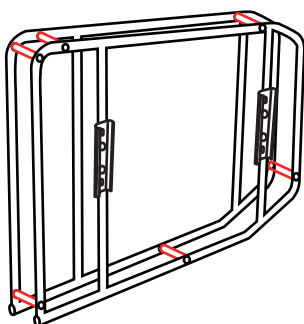


Armrest iron frame(R)

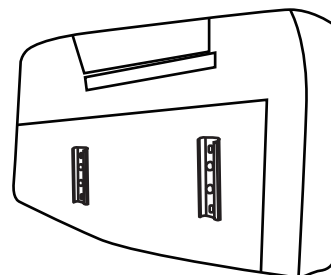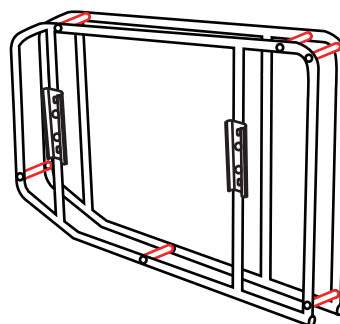


Step 3:

Insert the cup holder into the armrest.

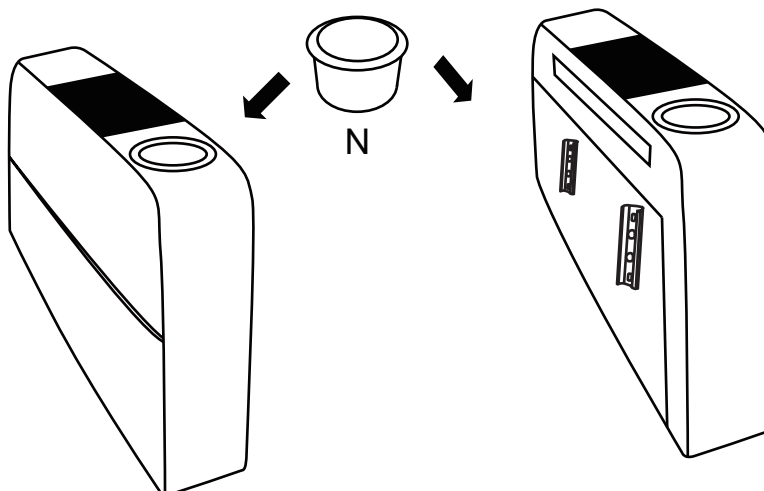

Step 4:


Unfold the sofa cushion and open the spring pack to allow it to expand and recover. Insert the expanded spring pack into the seat cushion.

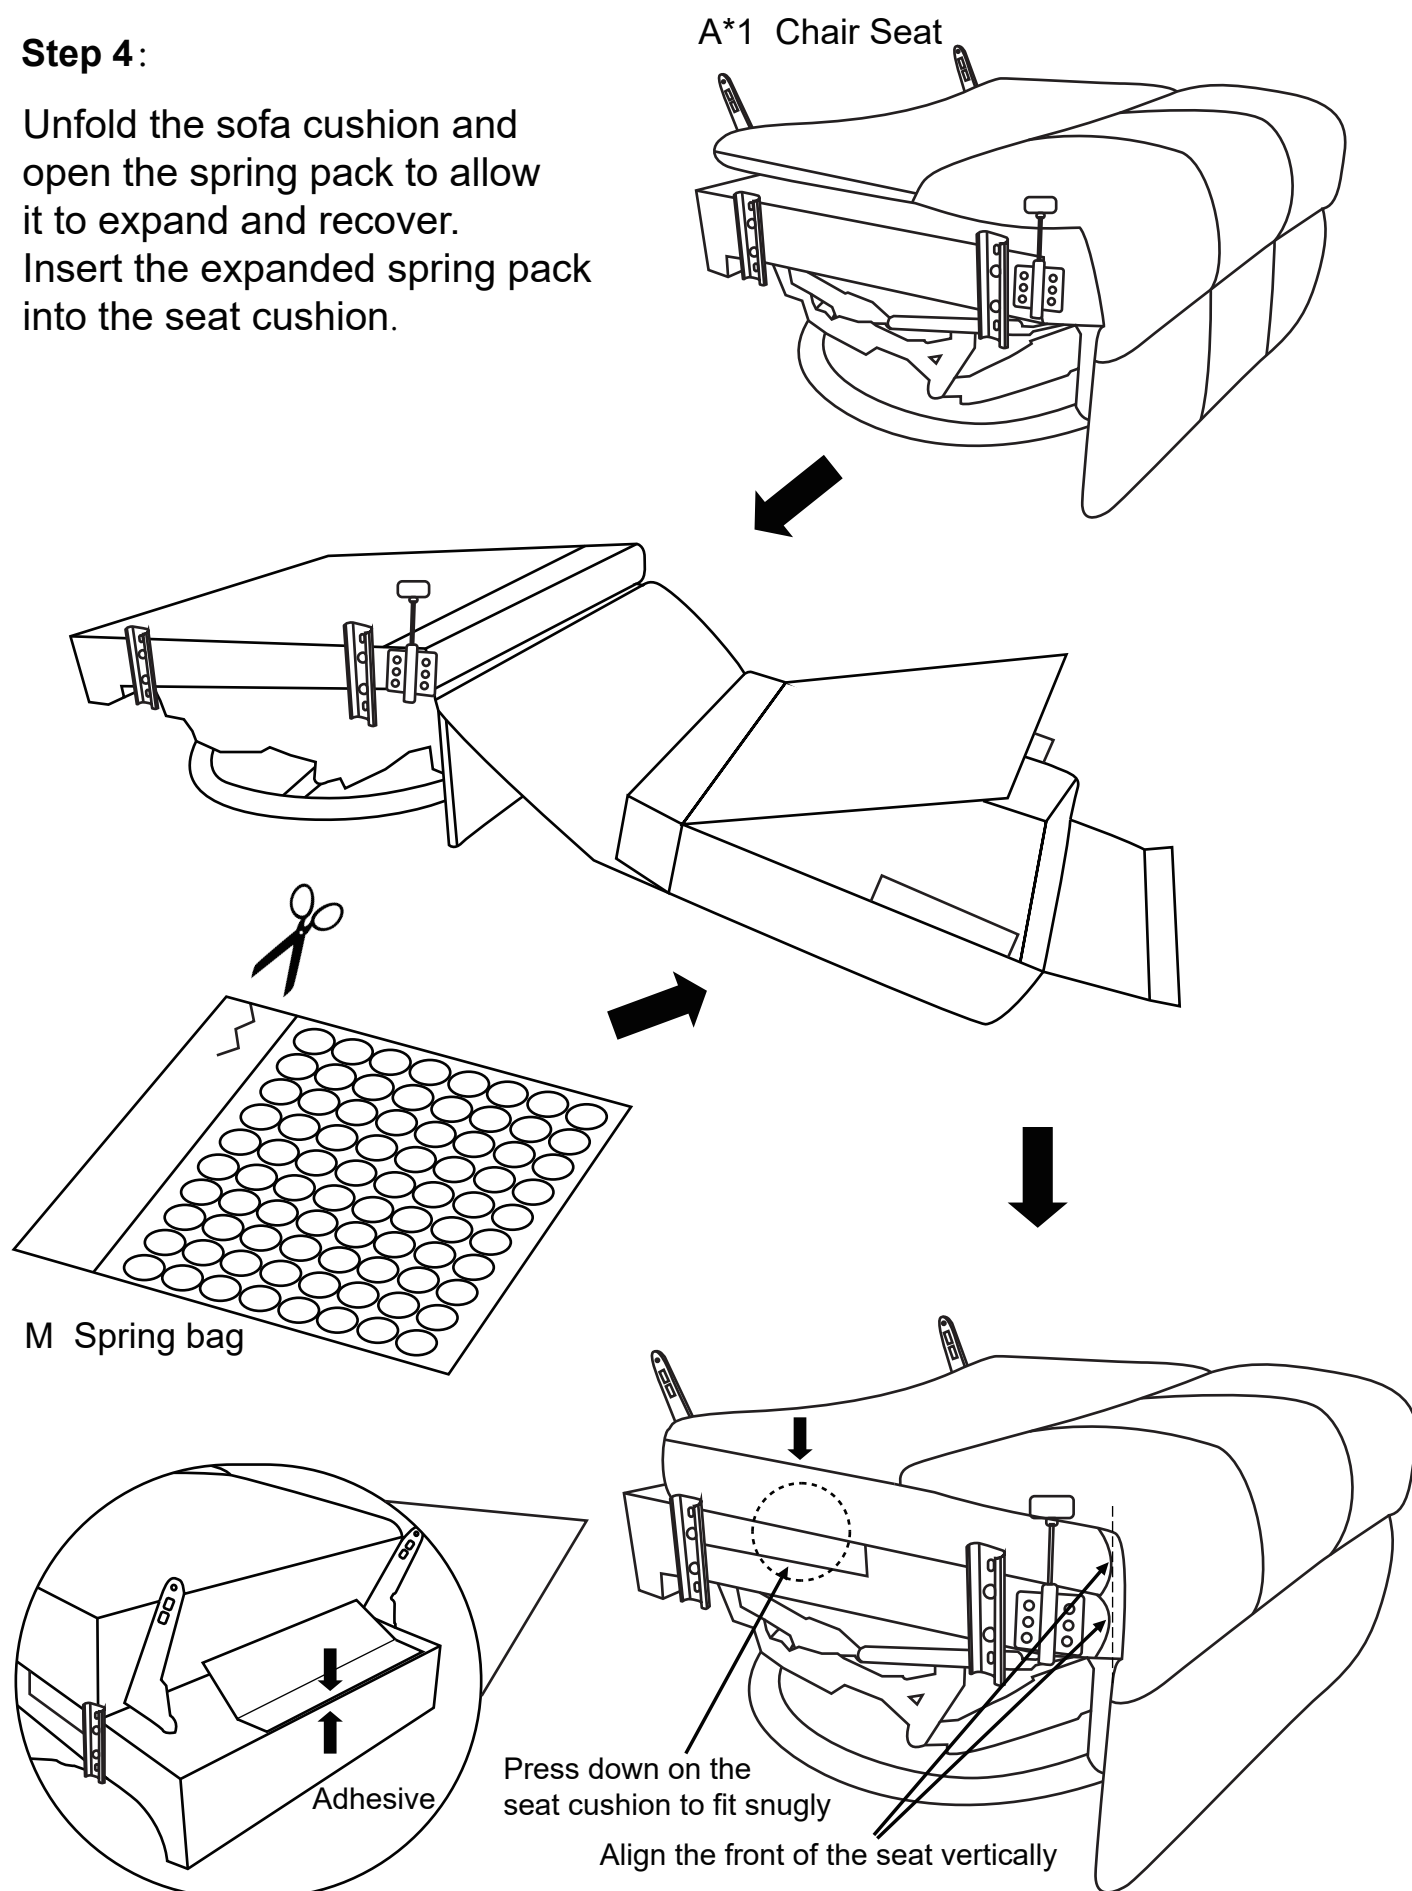

Step 5:


Insert both the left armrest and right armrest into the chair seat by aligning the metal grooves and sliding down to the bottom.

Fix the armrest pad onto the armrest.

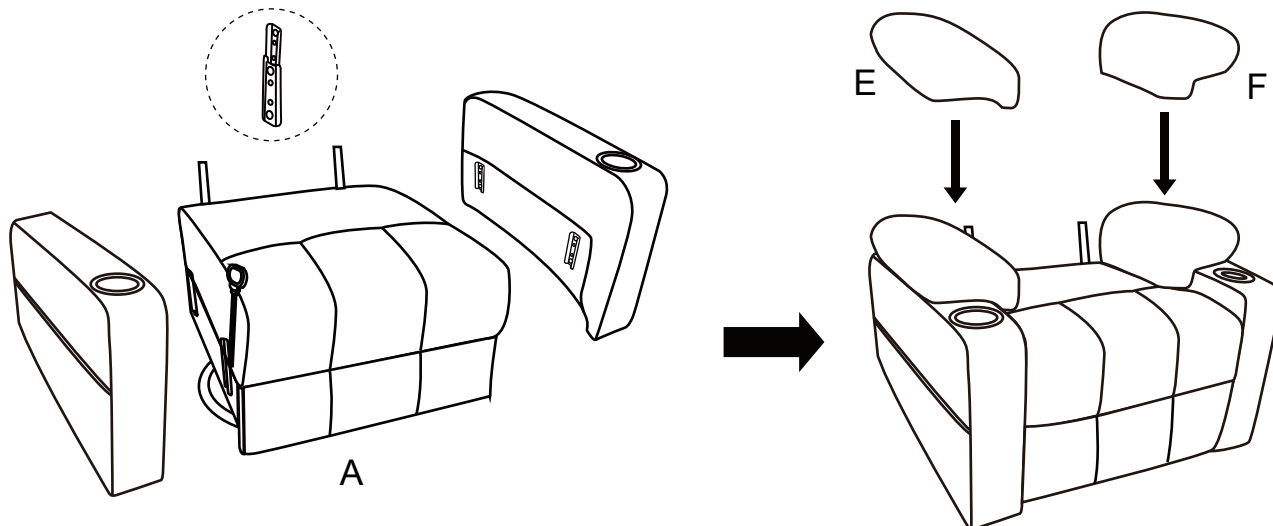

Step 6:


Insert the chair back into the chair seat by aligning the metal grooves and sliding down to the bottom; Insert both the left ear and right ear into the chair Back.

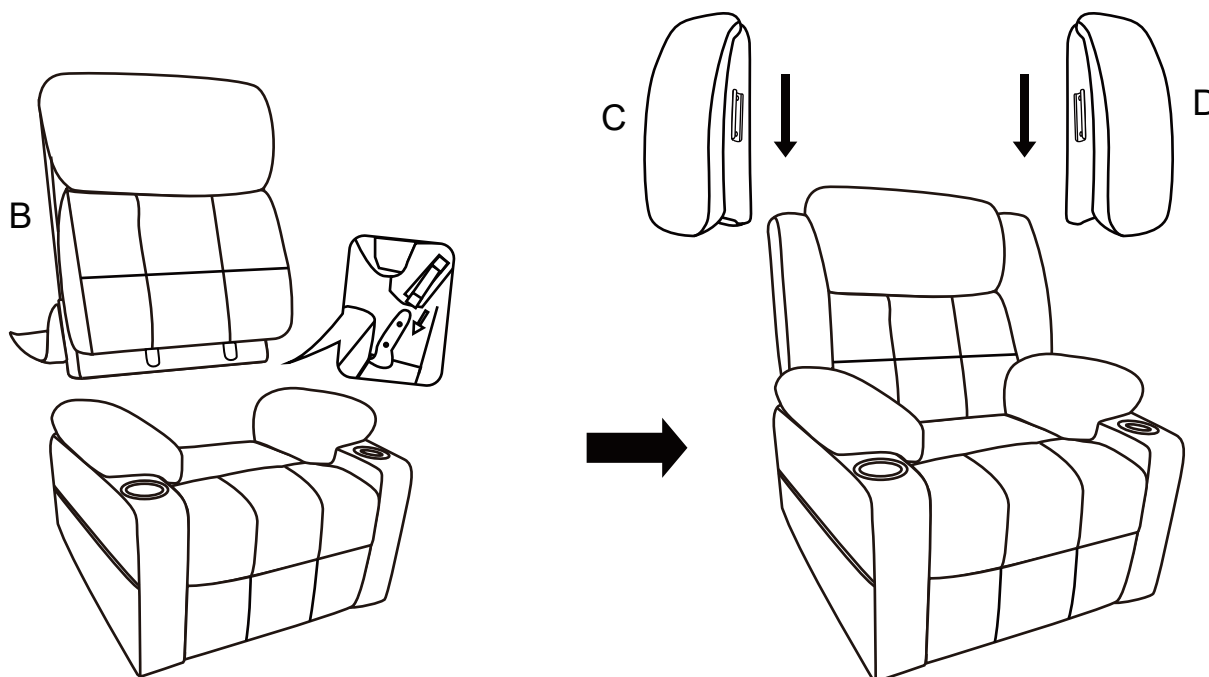

ATTENTION!!

Ensure the slots of armrests and backrest are fully assembled to the bottom to avoid tilting or moving. And please not sit on the armrests for the user's safety.

Tips of Connecting Power Cords:

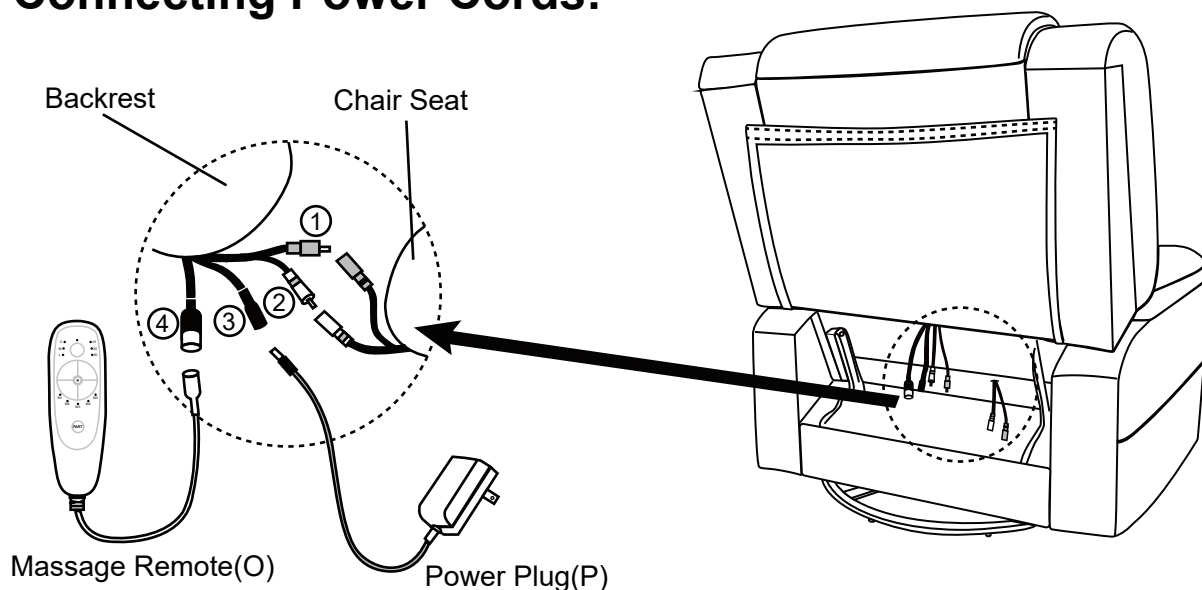

No.1 and No.2 wires connect the backrest


to the chair seat.(White to White/Red to Red)

No.3 wire connects the backrest to the powerplug (P).

No.4 wire connects up the backrest and massage remote(O).



Plug the power source (P)into outlet to get the massaging and heating function working.

Remote Operation Instruction

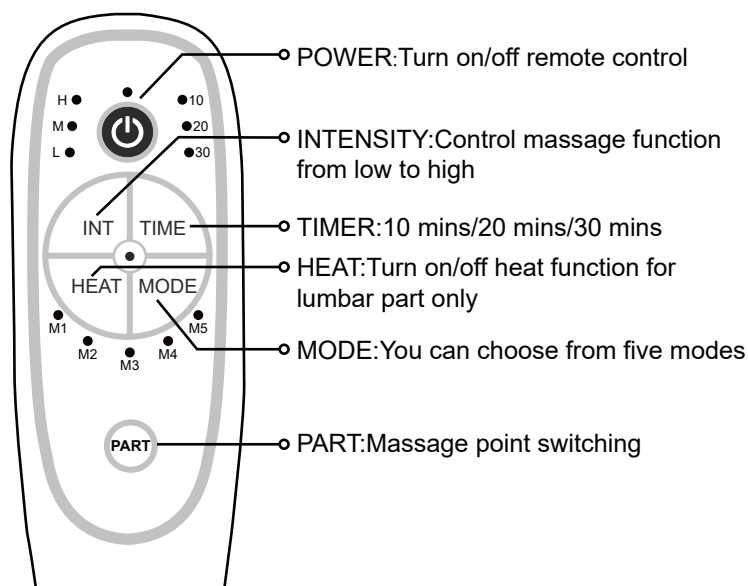

Requires Manual Foot Pedal Closure

(Closing the foot pedal will encounter resistance,
so it is not recommended for post-surgical recovery)

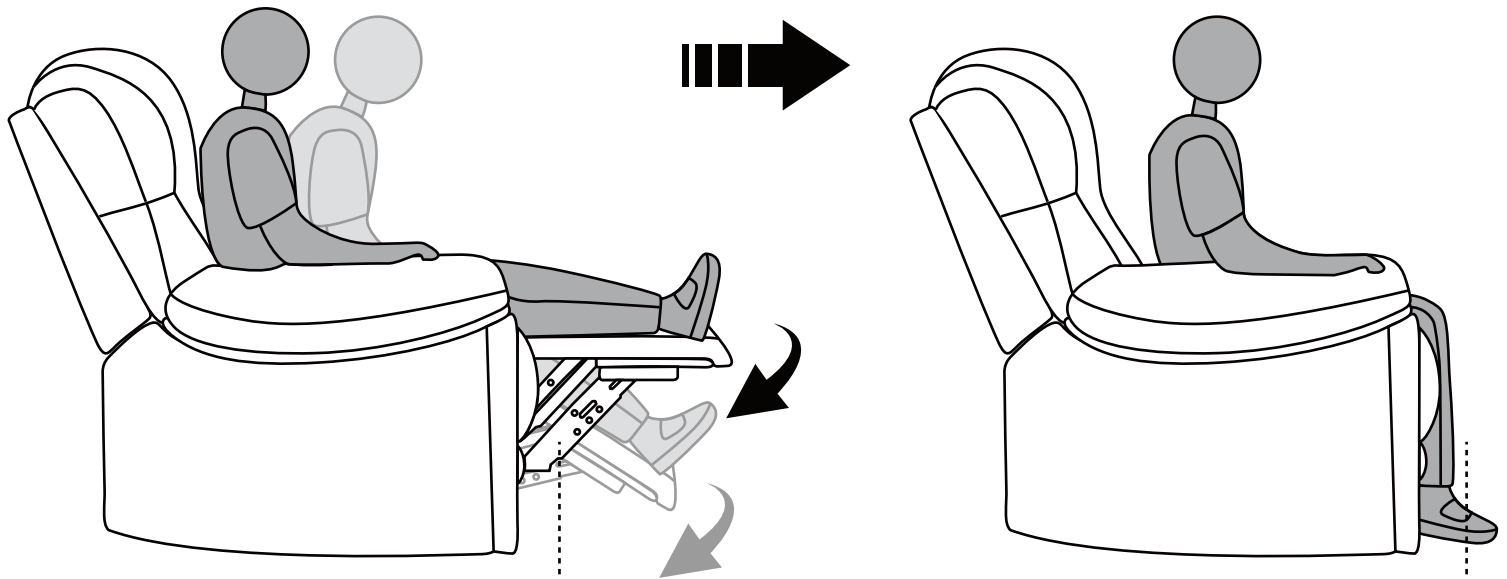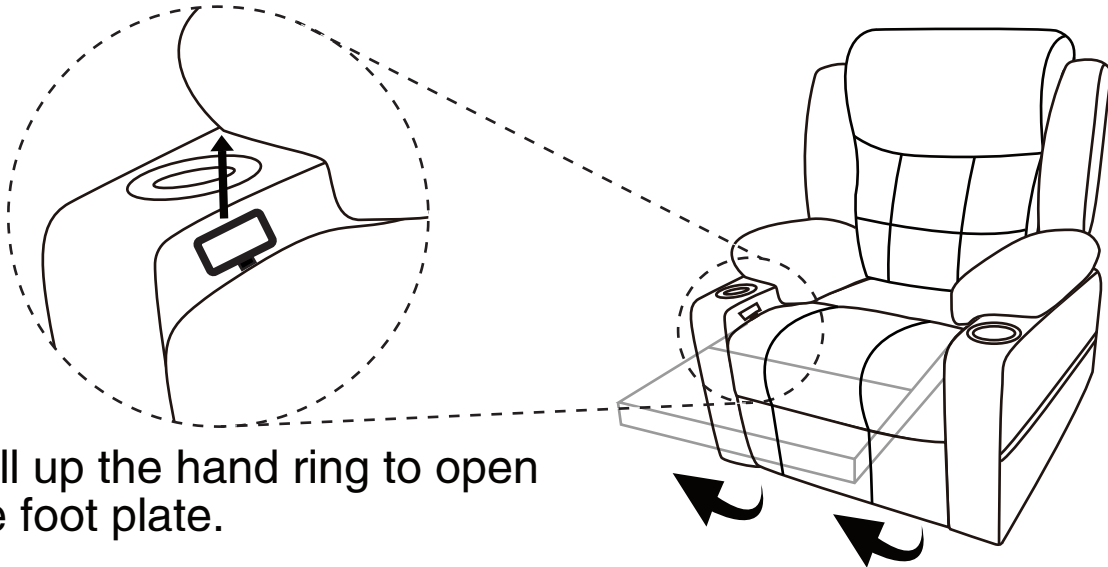

Manual Foot Pedal Closure

it takes force on the legs to
close the pedals

Close Pedal

Stand up
Only after closing the pedals