

ASSEMBLY INSTRUCTION

MODEL NUMBER: 2-86F

NOTES:

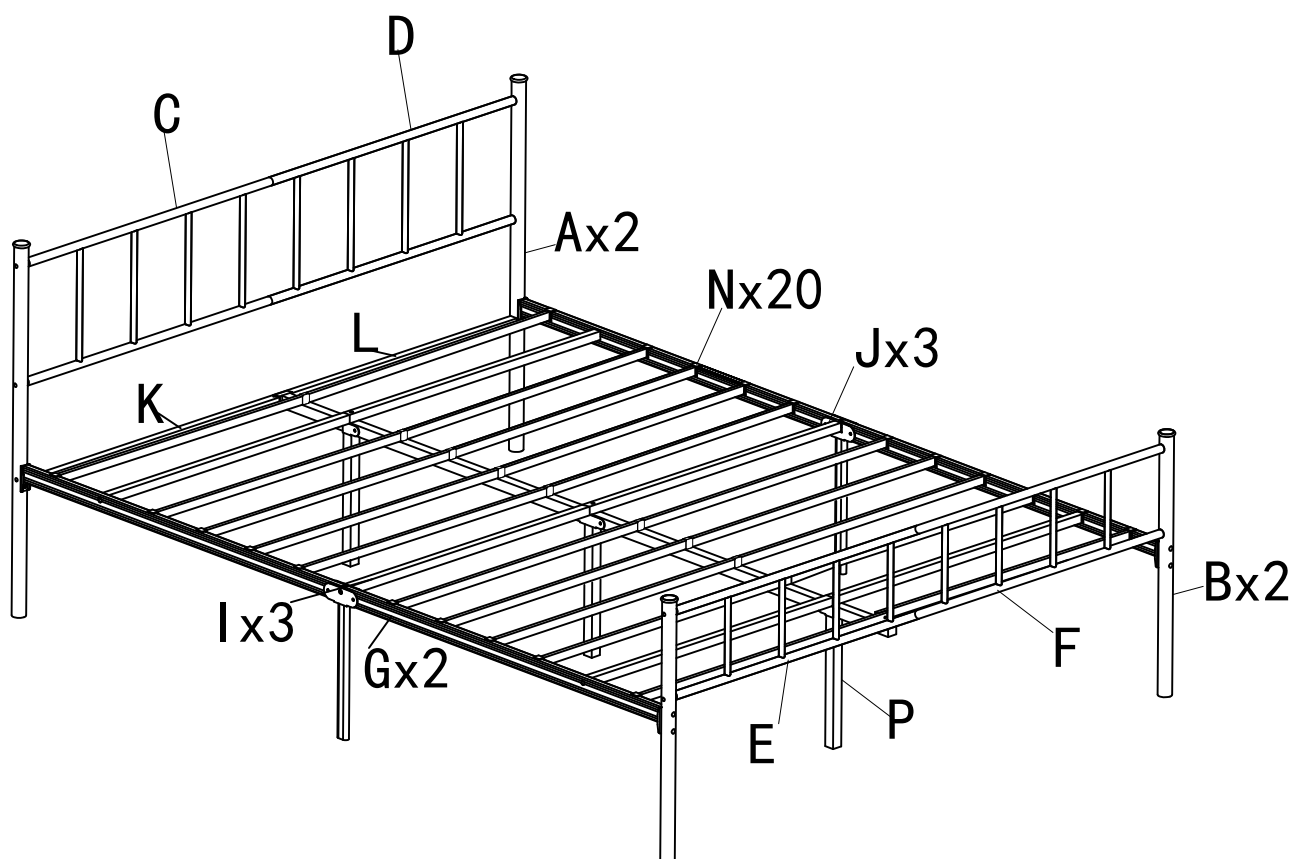
- Do not skip any step.
- Do not fully tight screws until all the bed parts are assembled.




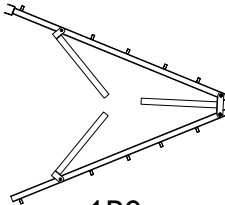
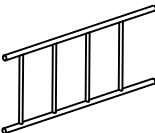


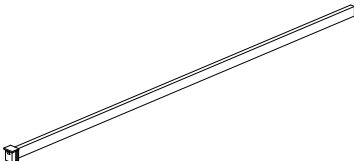







WARNING:

- WARNIND FOR YOUNG CHILDREN-This product contains small components,please ensure that they are kept away from small children while assembling.

Warranty Information:

- We warran ty th is product to be free from defects in materials.If u have any query about bed , pls contact our after-salesupportemail:
Pakkahome@outlook.com




A	G	aa  M6×55mm			20
 2PCS	 2PCS	bb  M8×50mm			8
		cc  M6×12mm			8
		dd  4×4mm			1
		ee 			18
B	P				
 2PCS	 1PC				
C	J				
 1PC	 3PCS				
D	N				
 1PC	 20PCS	SPARE	aa 	1	
E	K		bb 	1	
 1PC	 1PC		cc 	1	
I	L		ee 	1	
 3PCS	 1PC		gg 	2	
F					
 1PC					

2/8

cc		M6×12mm	4
dd		4×4mm	1


Note: For easy setup intention, do not tighten screws during the installation process

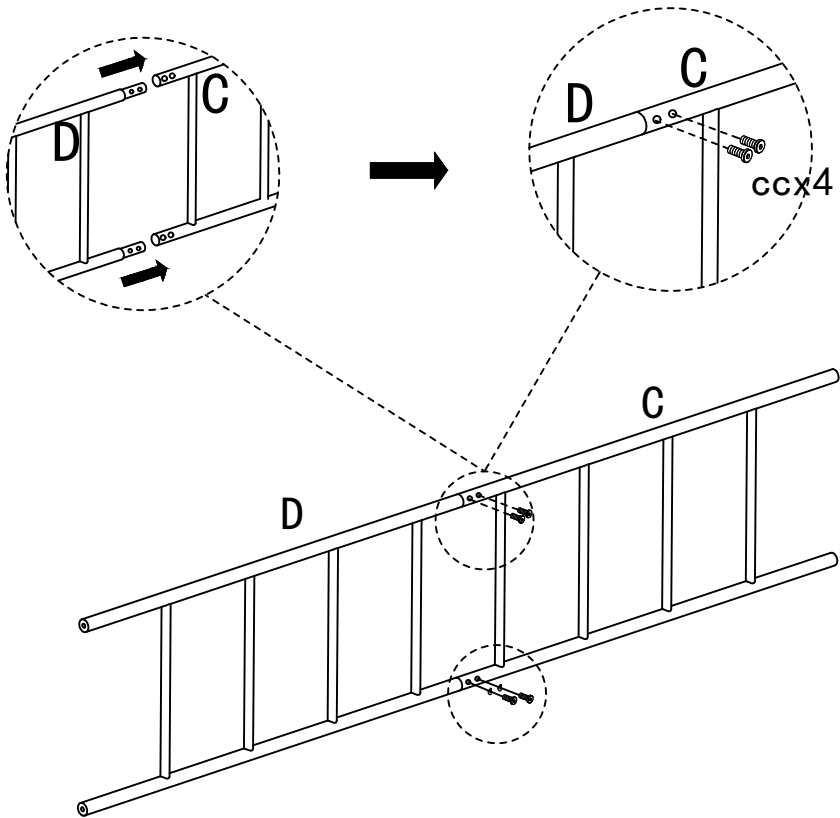
Step 1





cc		M6×12mm	4
dd		4×4mm	1

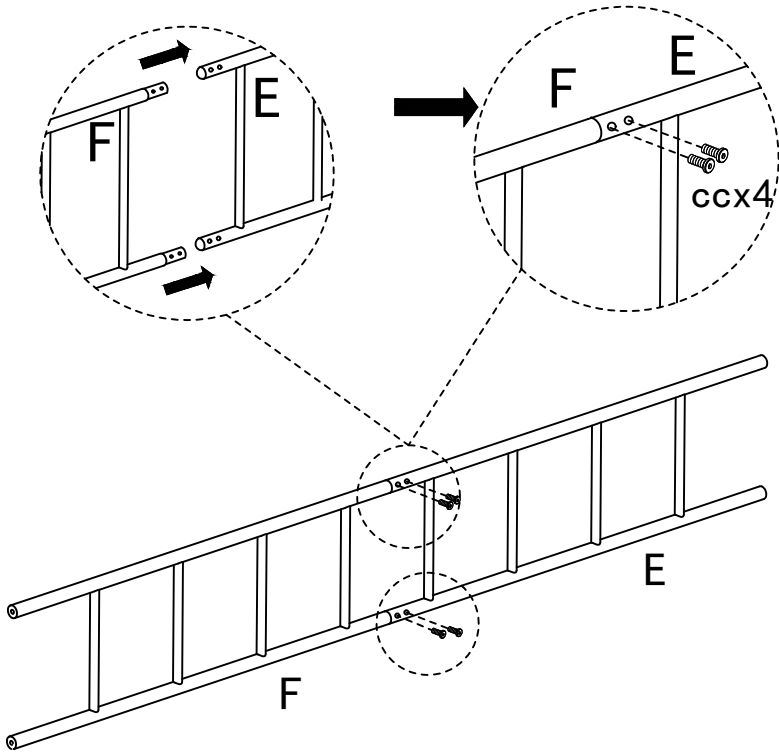
Step 2




aa	 M6×55mm	4
ee		4
dd	 4×4mm	1

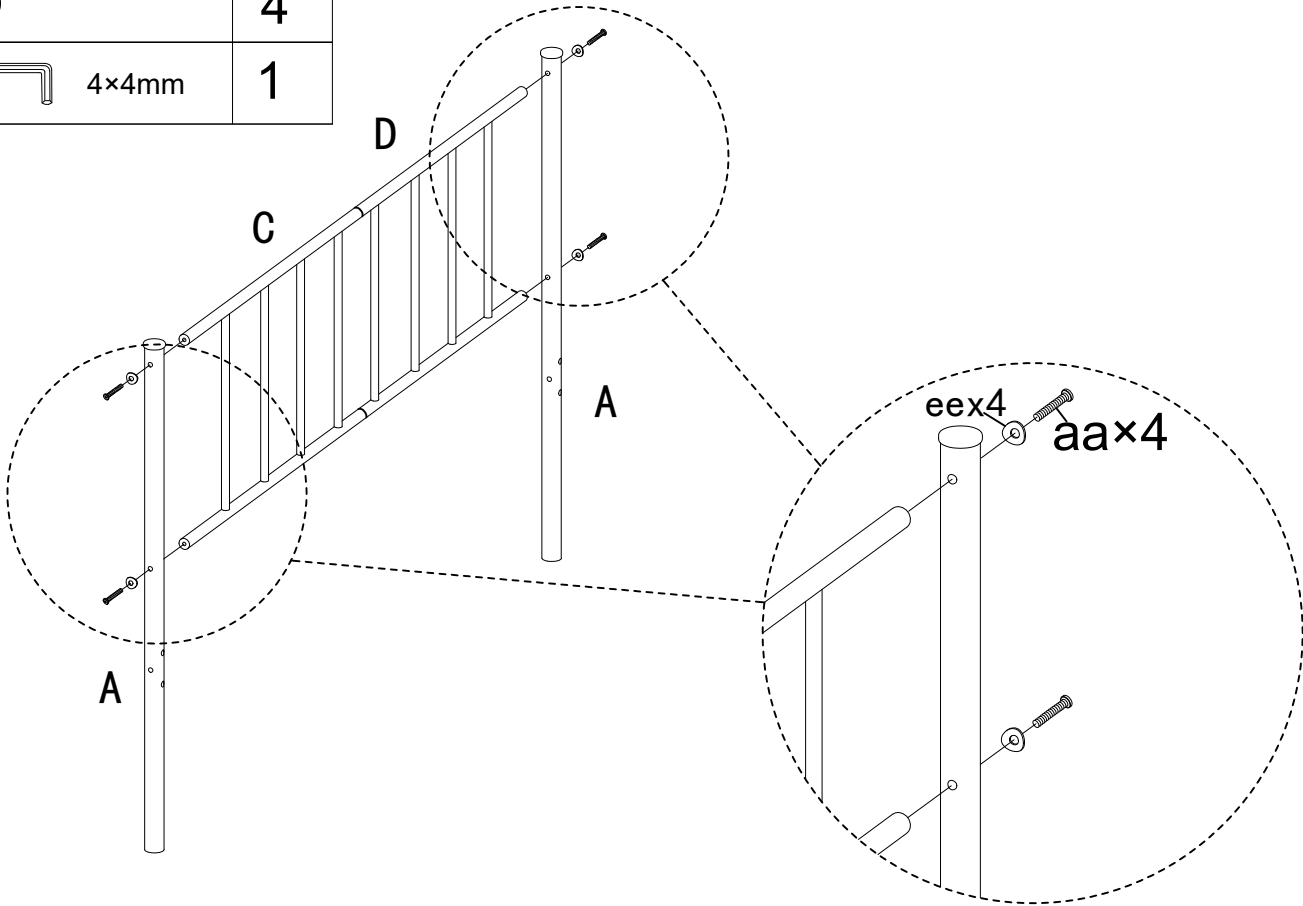



aa	 M6×55mm	4
ee		4
dd	 4×4mm	1

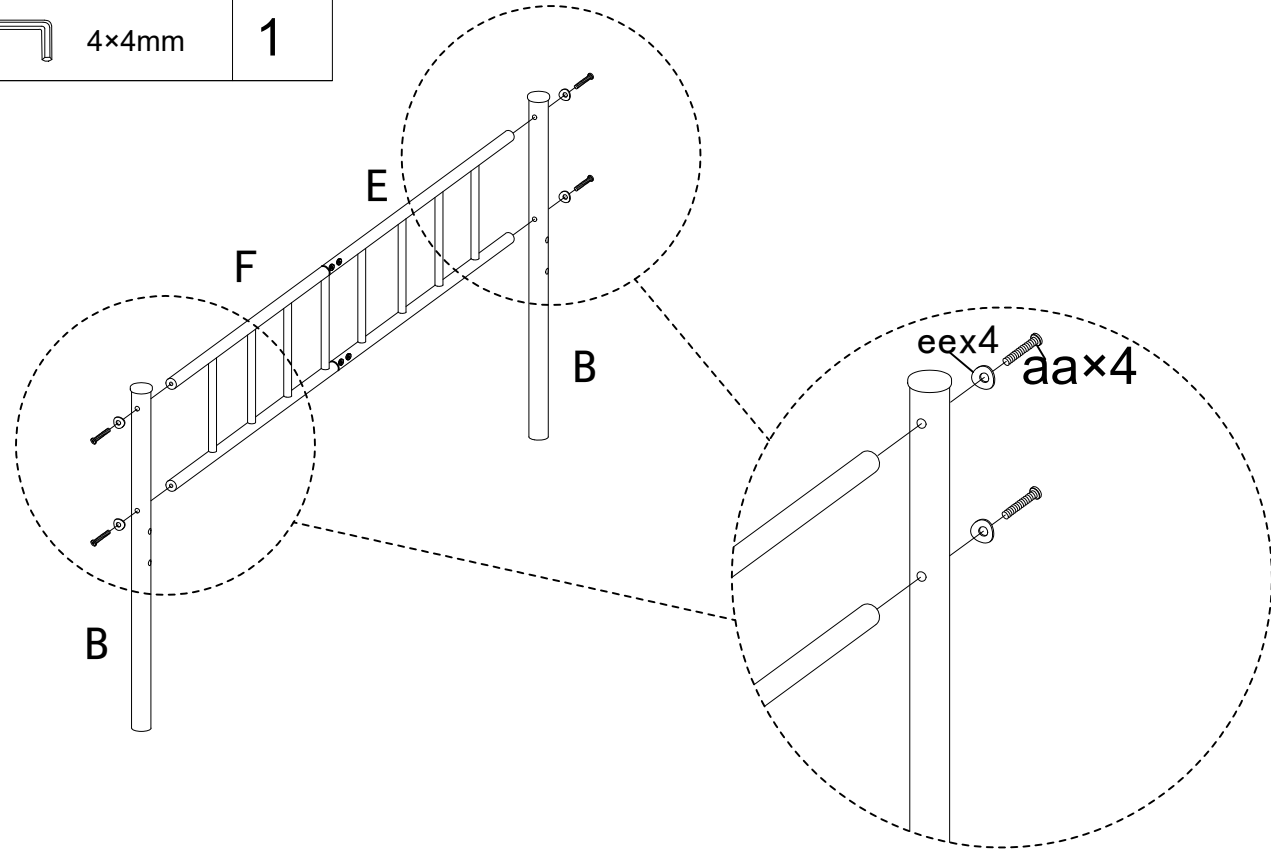

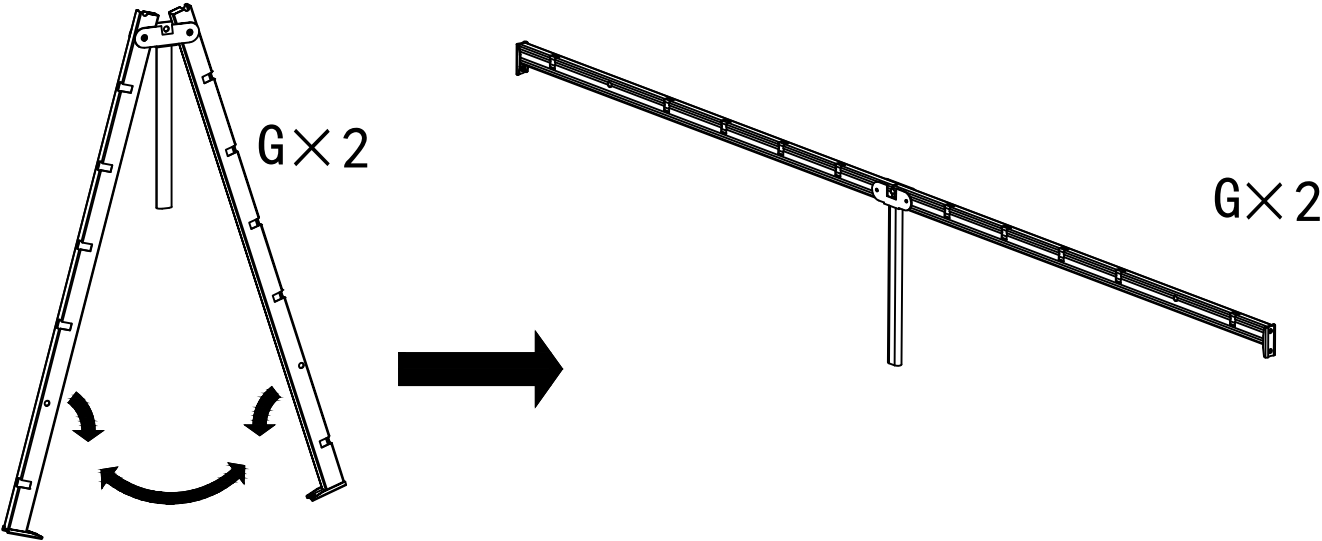



bb	 M8×50mm	8
ee		8
dd	 4×4mm	1

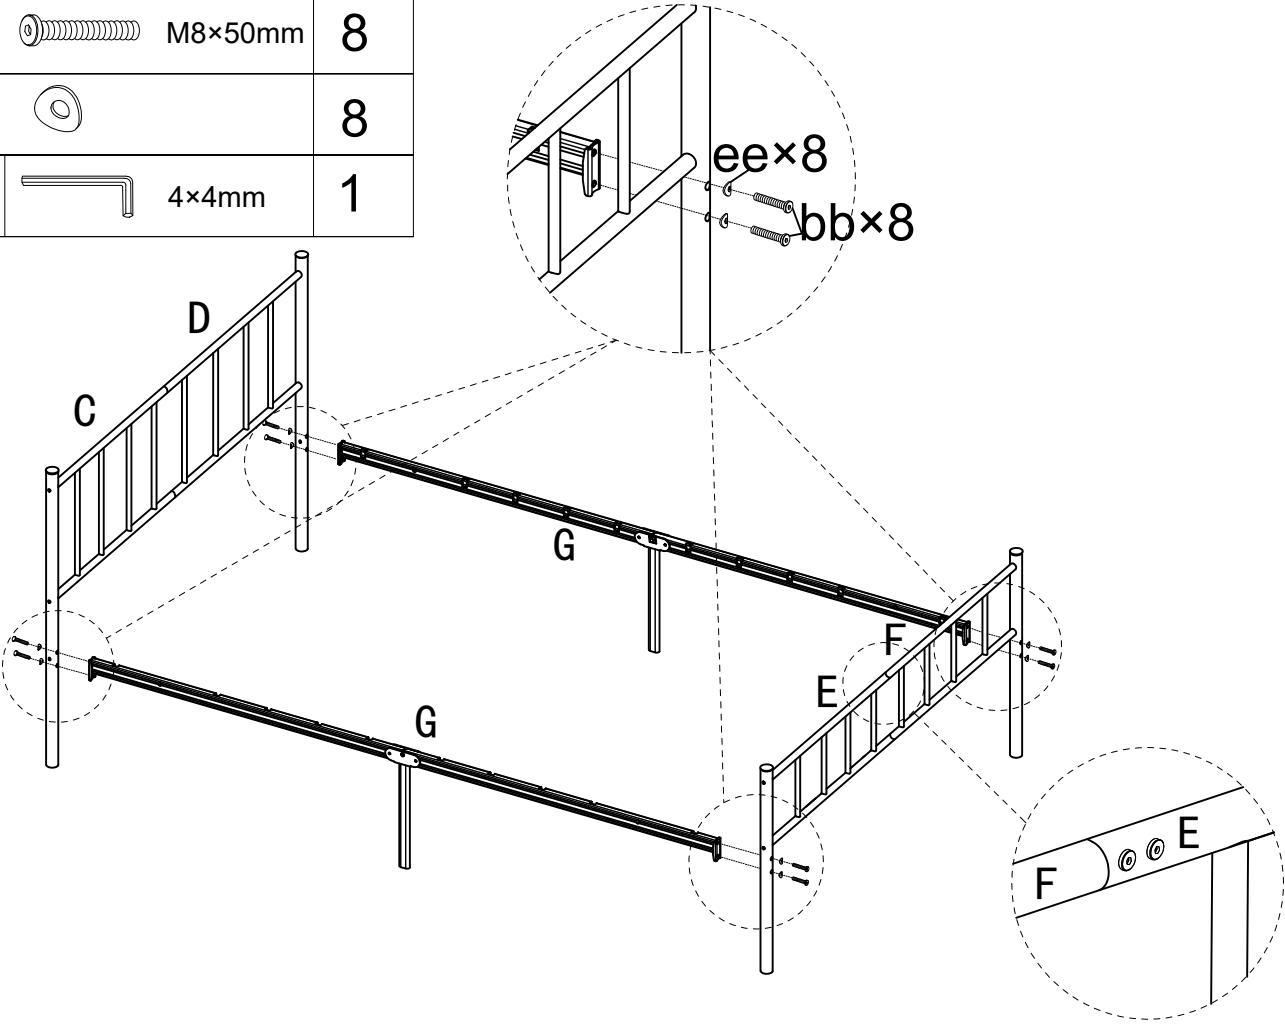

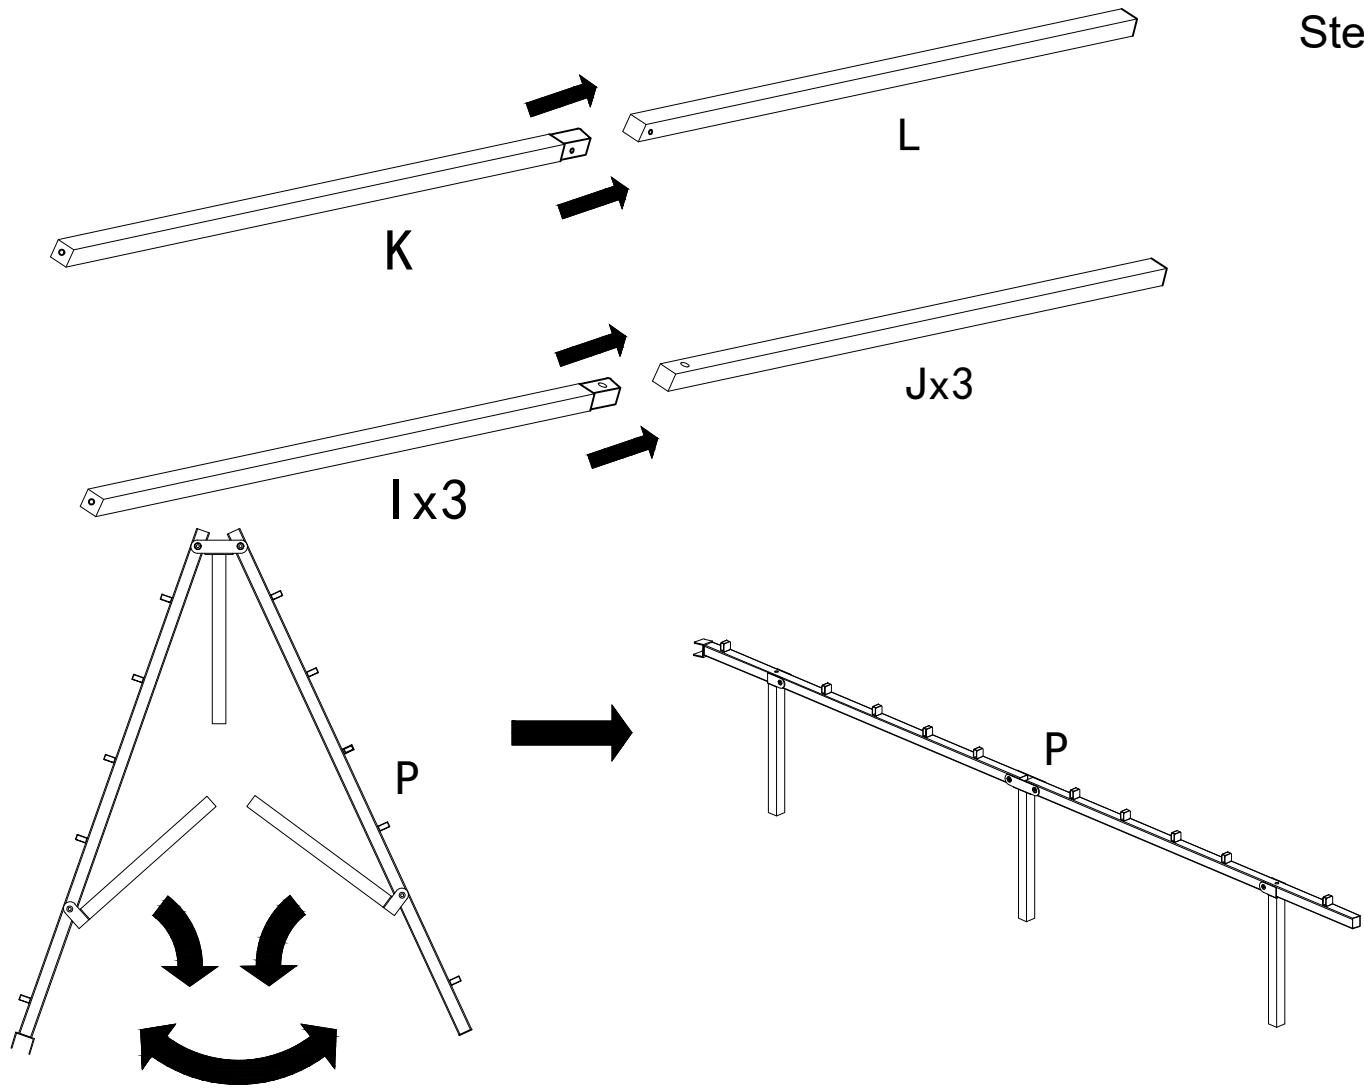

aa		M6×55mm	8	ee		2
dd		4×4mm	1			

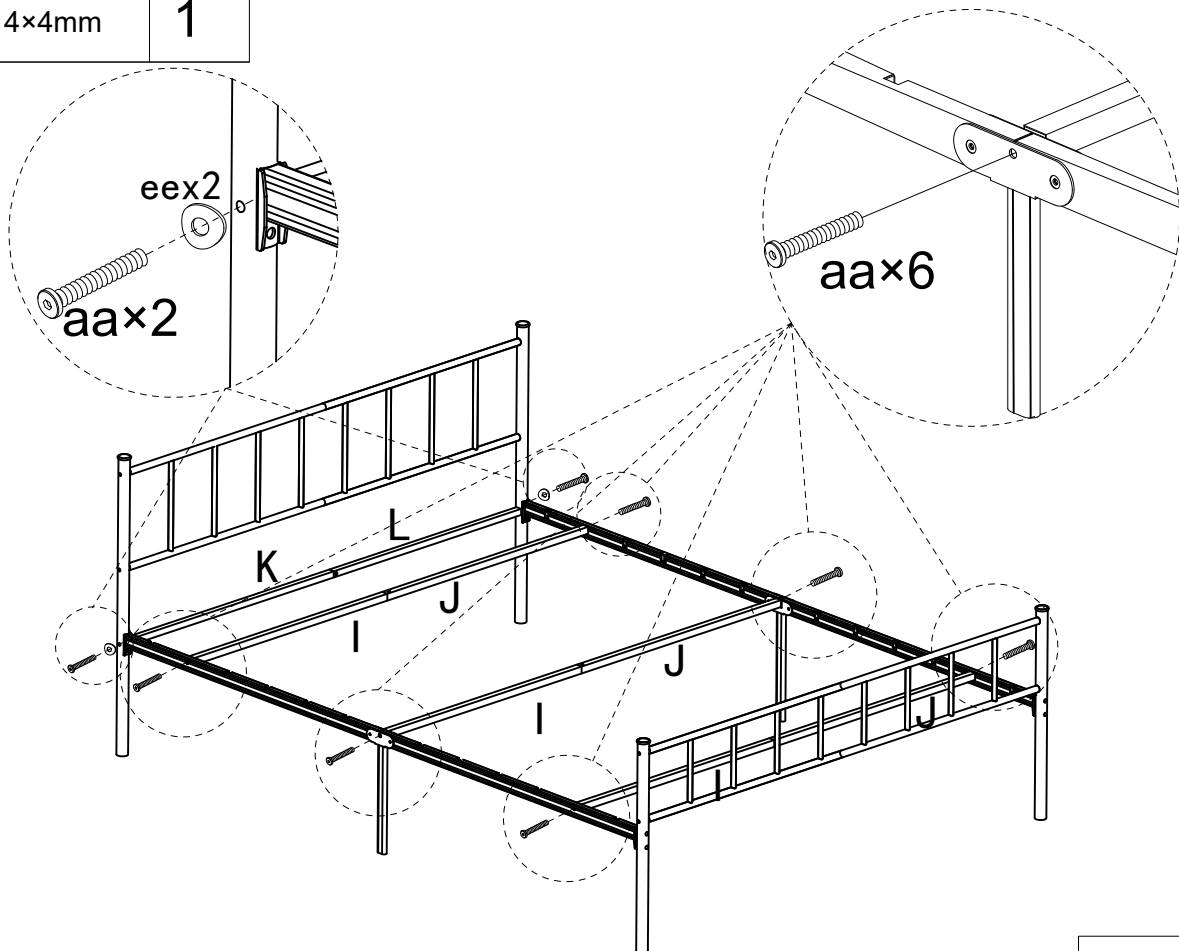

aa	 M6×55mm	4
dd	 4×4mm	1

