


ASSEMBLY INSTRUCTION


OUTDOOR SUNBED

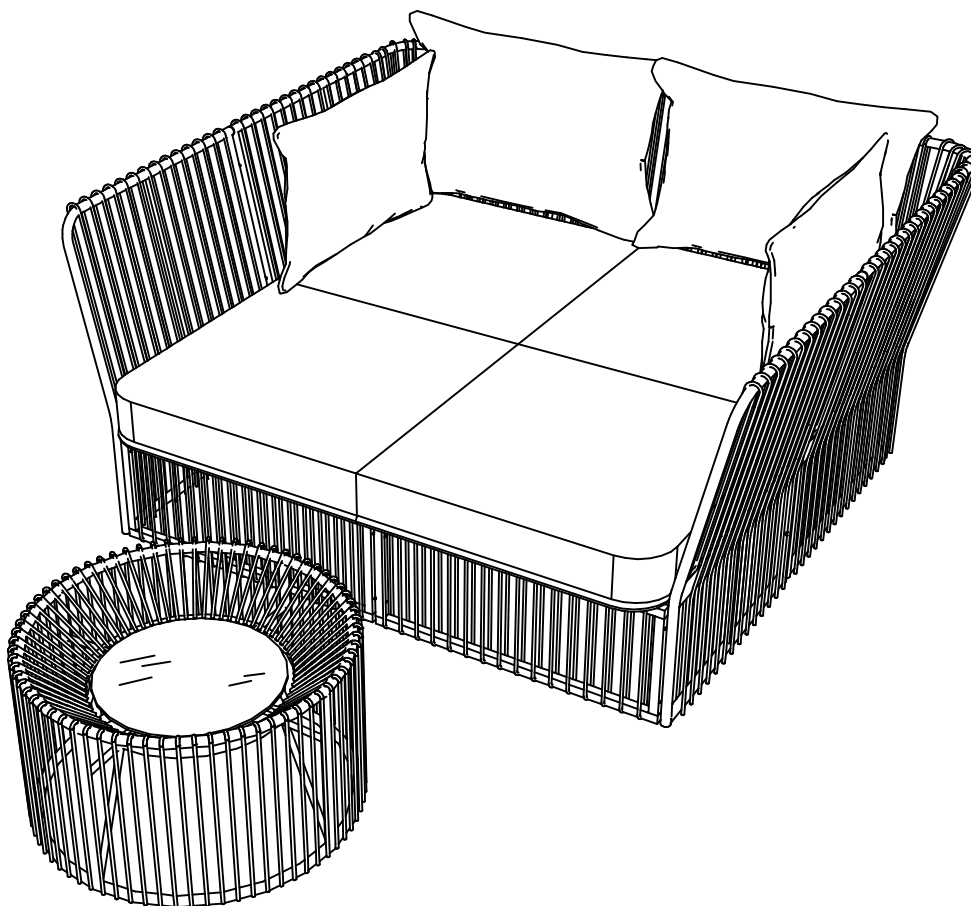












WF318600 WF318601 WF318602

Please read all instructions carefully:







- 1. Have 2 adults on hand for assembly.**
- 2. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.**
- 3. Place the item on a flat ground to adjust and make sure it remains stable.**
- 4. Tighten up all screws with tools gradually.**
- 5. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.**
- 6. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.**
- 7. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.**

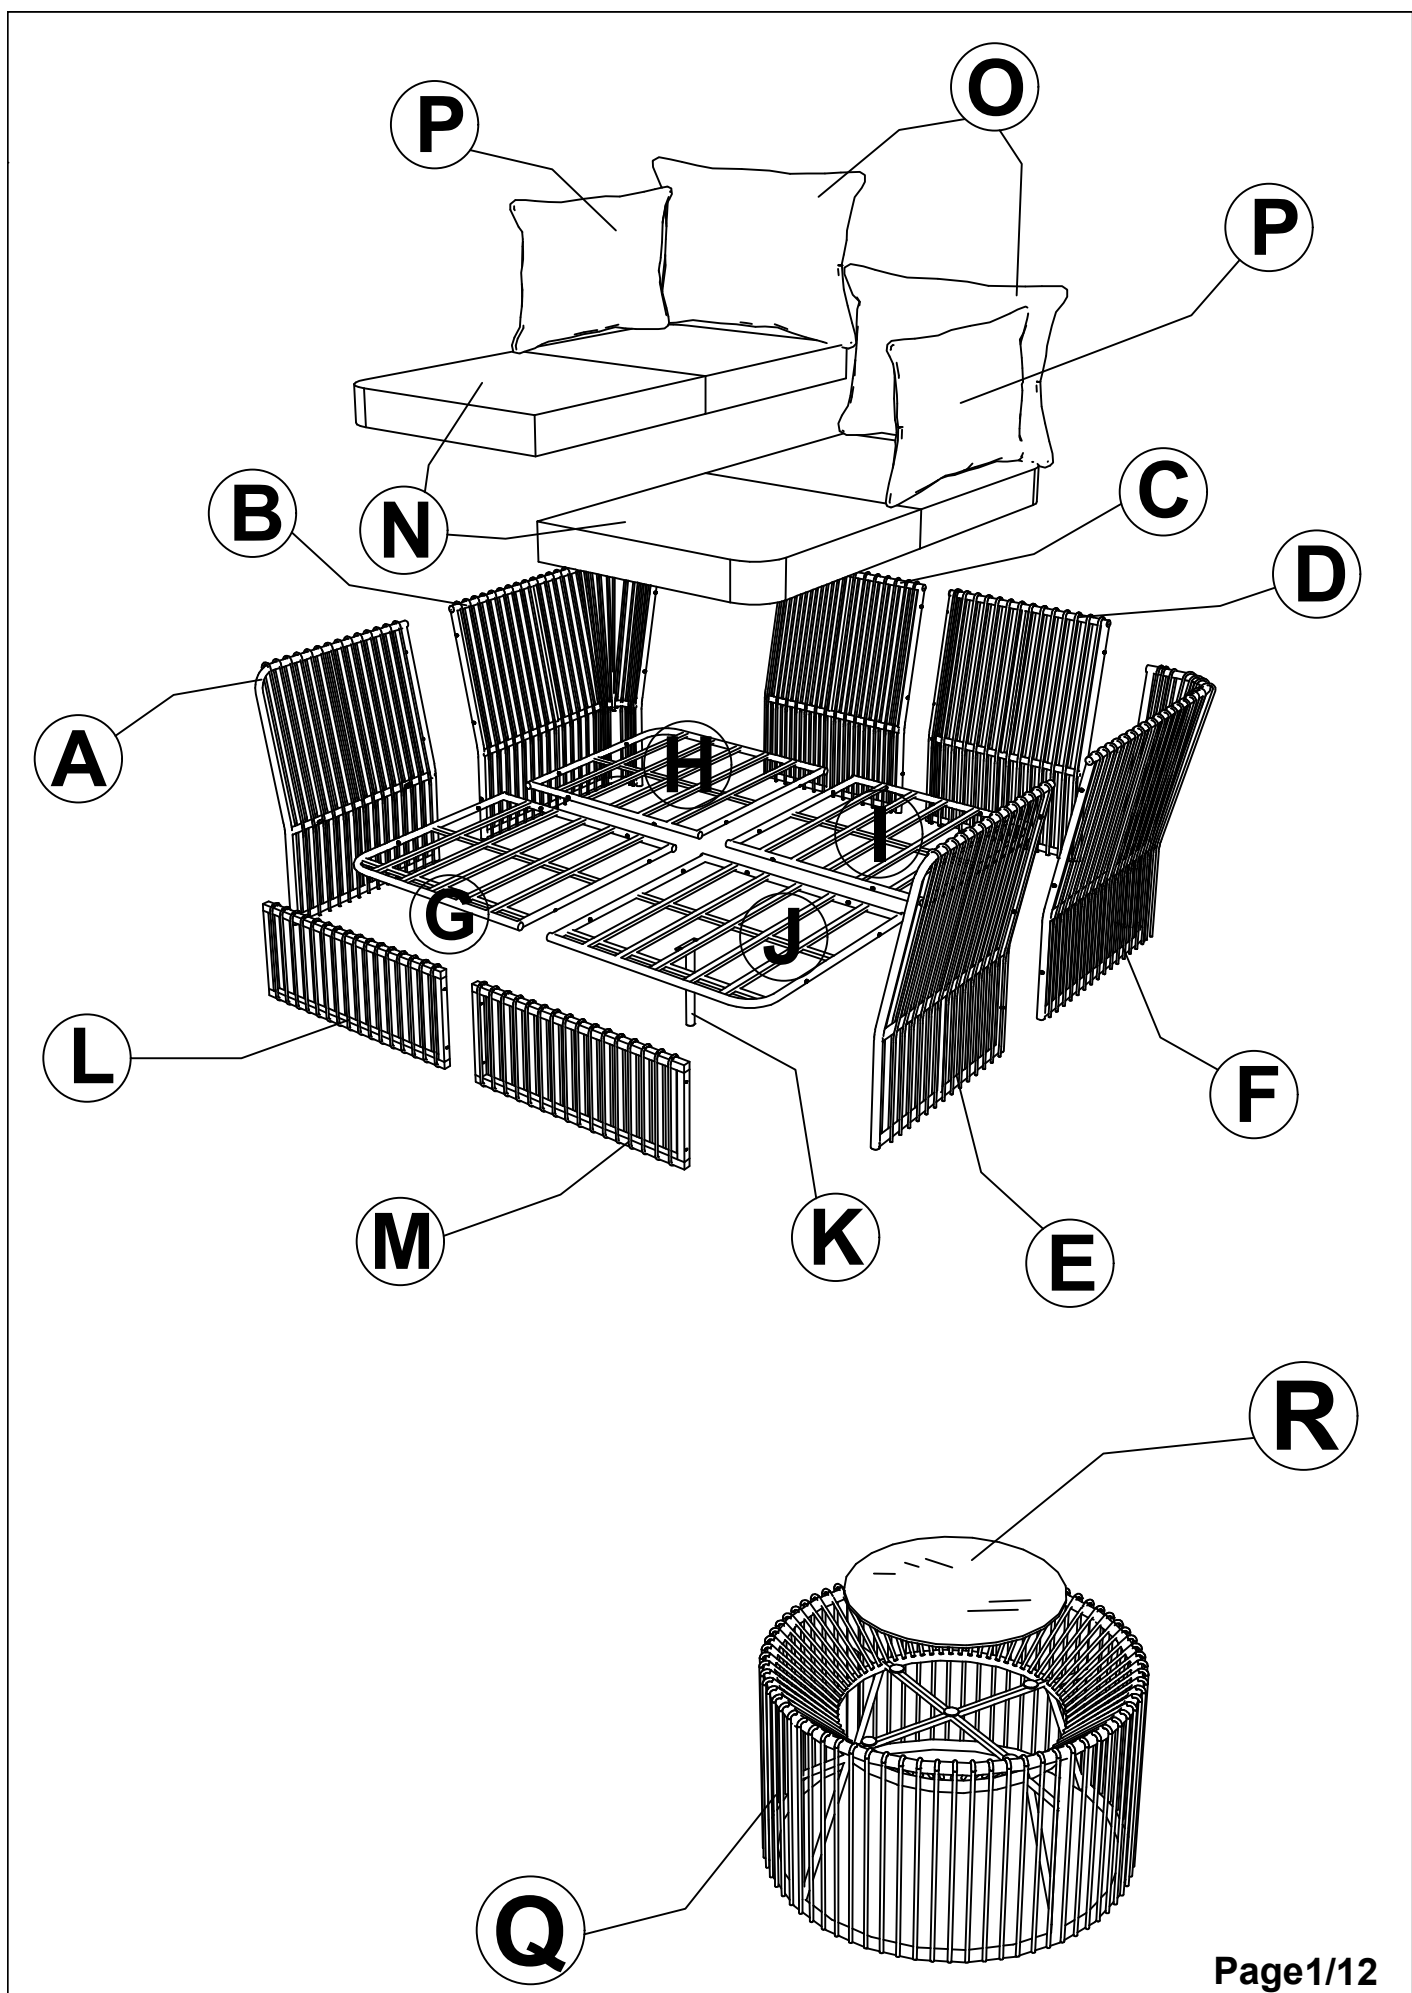

PART LIST

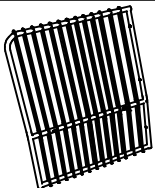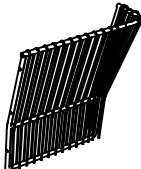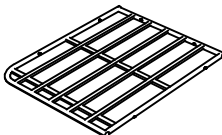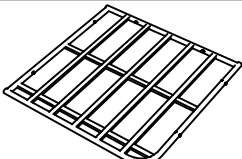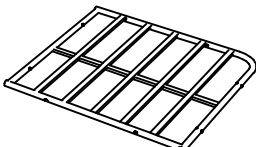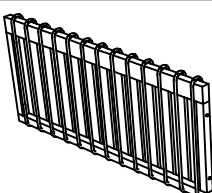
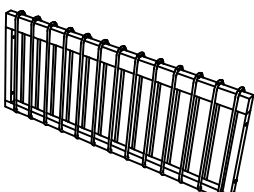
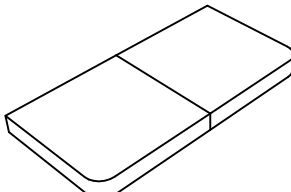
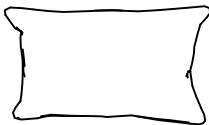
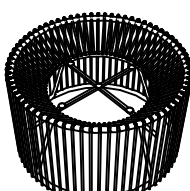
			
Ax1 Right front frame	Bx1 Right back frame	Cx1 Back right frame	Dx1 Back left frame
			
Ex1 Left front frame	Fx1 Left back frame	Gx1 Right front seat frame	Hx1 Right back seat frame
			
Ix1 Left front seat frame	Jx1 Left back seat frame	Kx1 Leg	Lx1 Right frame
			
Mx1 Left frame	Nx2 Seat cushion	Ox2 Big pillow	Px2 Small pillow
			
Qx1 Table	Rx1 Glass		

HARDWARE LIST





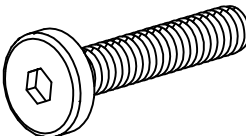

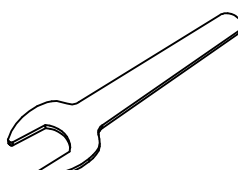
			
1- Washer : 57 pcs Extra : 2 pcs	2-Bolt 6x15 : 4 pcs Extra : 1 pcs	3-Bolt 6x35:22 pcs Extra : 2 pcs	4-Bolt 6x40:15 pcs Extra : 2 pcs
			
5-Bolt 6x45 : 8 pcs Extra : 1 pcs	6-Nut : 8 pcs Extra : 1 pcs	7- Allen key : 2 pcs	8- Key : 1 pcs

CARTON CONTENT :






WF318600 :

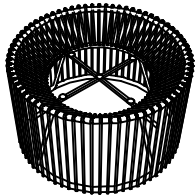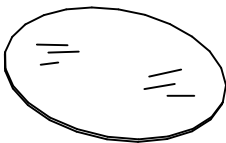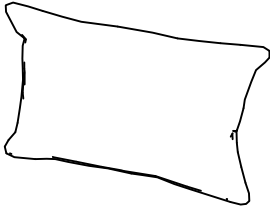 Qx1 Table	 Rx1 Glass	 Ox1 Big pillow
 Px2 Small pillow	 Kx1 Leg	 Hardware



WF318601:

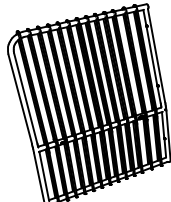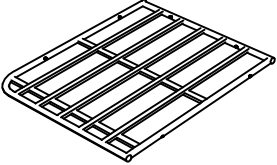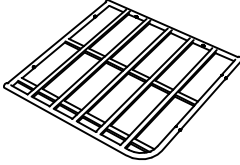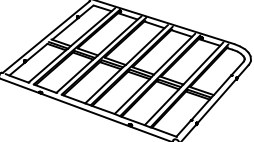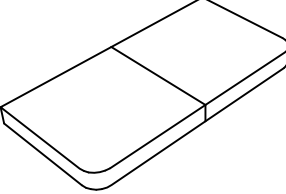 Ax1 Right front frame	 Cx1 Back right frame	 Dx1 Back left frame
 Ex1 Left front frame	 Gx1 Right front seat frame	 Hx1 Right back seat frame
 Ix1 Left front seat frame	 Jx1 Left back seat frame	 Nx1 Seat cushion

WF318602:

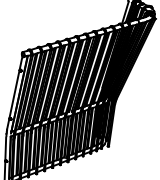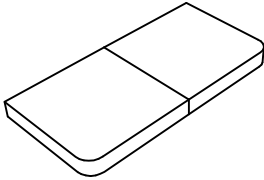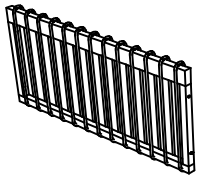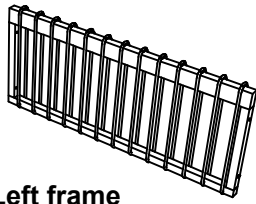
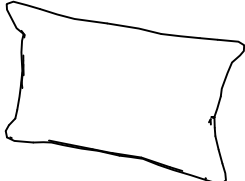
 Bx1 Right back frame	 Fx1 Left back frame	 Nx1 Seat cushion
 Lx1 Right frame	 Mx1 Left frame	 Ox1 Big pillow

Step 1

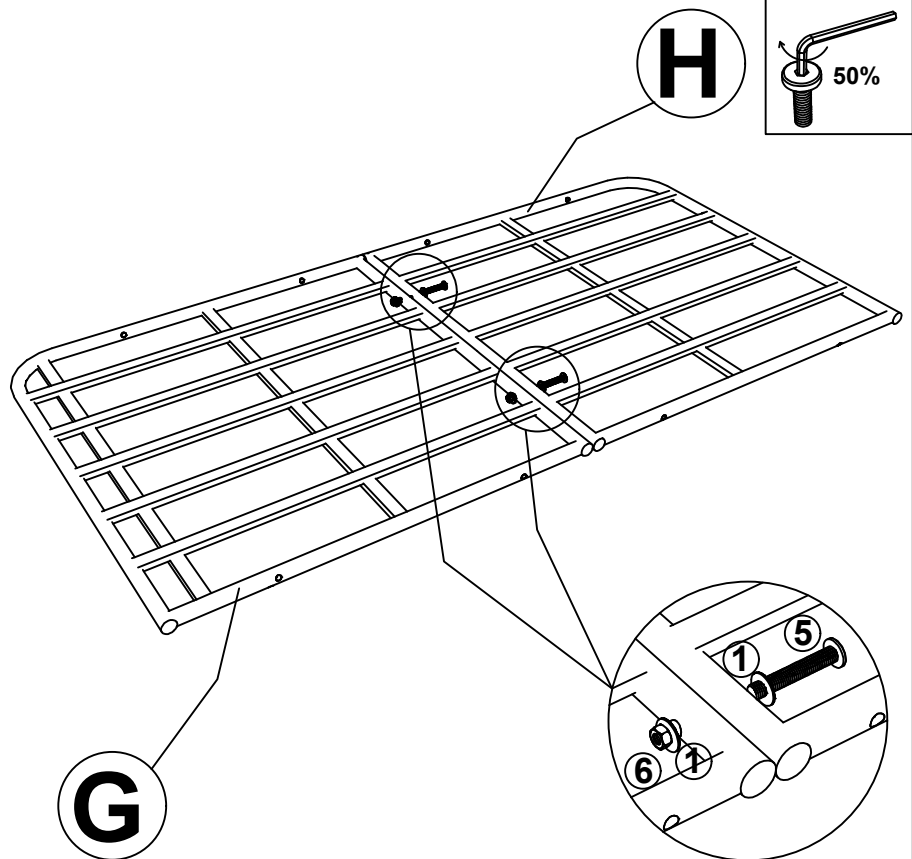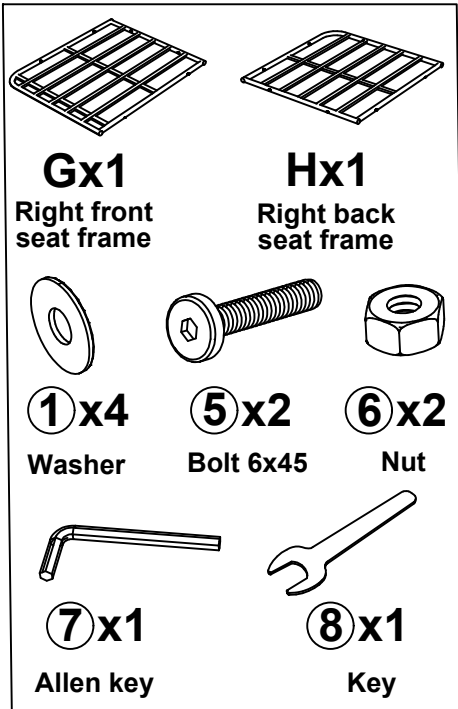

Connect The Right front seat frame (G) & Right back seat frame (H), tighten Bolt (5), Nut (6), Flat Washer (1) With Allen key (7), Key (8)

Step 2

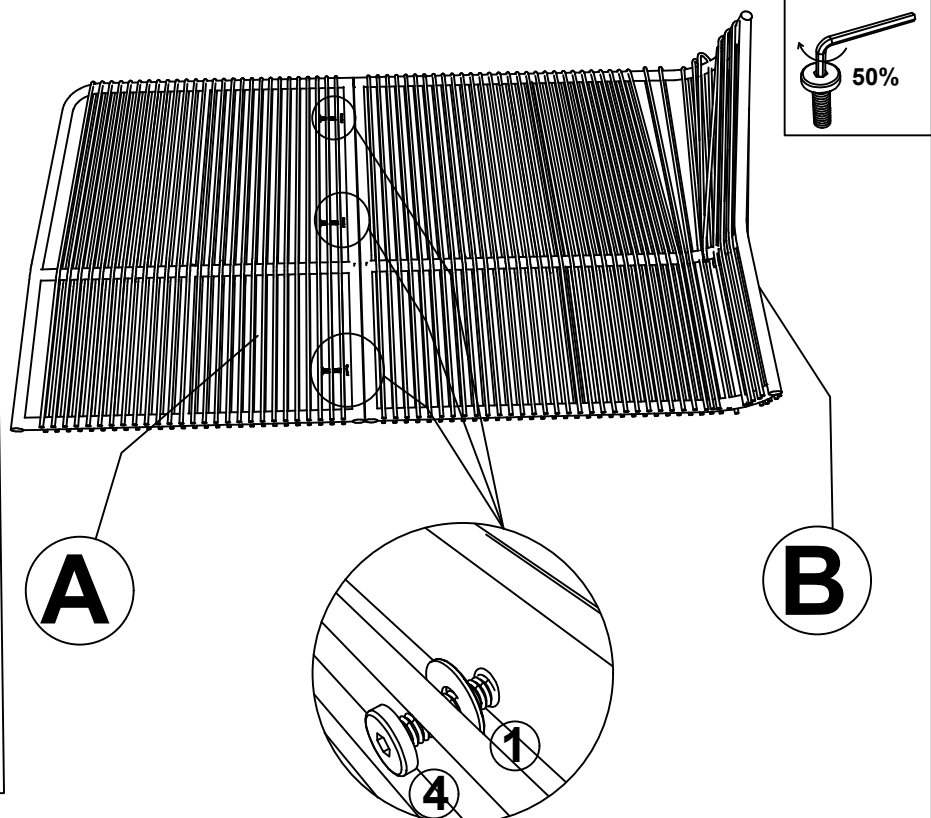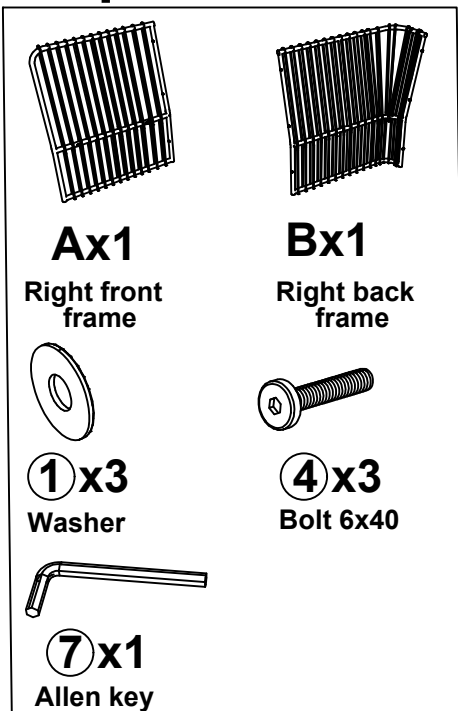


Connect The Right front frame (A) & Right back frame (B), tighten Bolt (4), Flat Washer (1) With Allen key (7)

Step 3





①x4
Washer



③x4
Bolt 6x35



⑦x1
Allen key

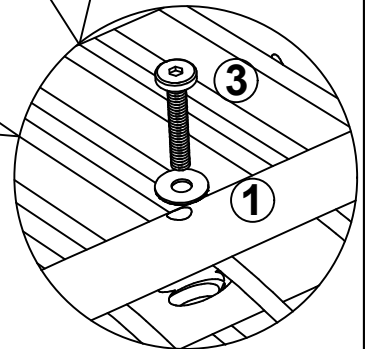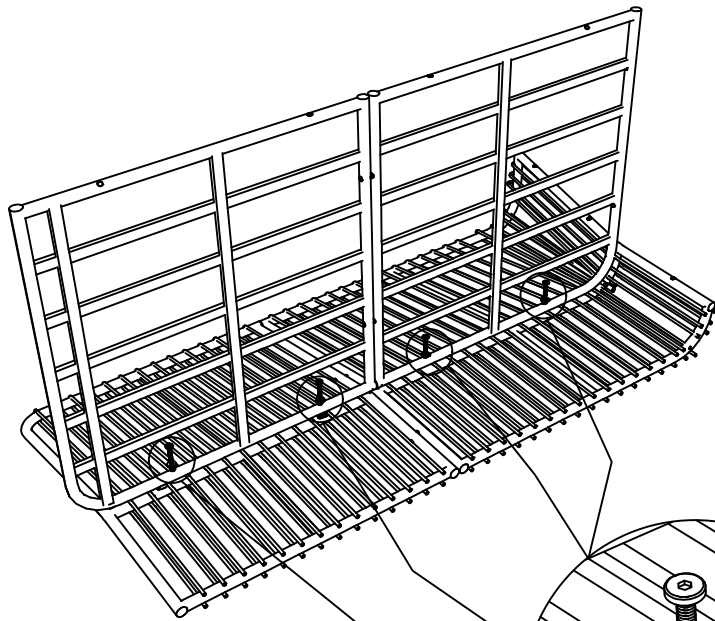

Connect The part from Step (1) & part from Step (2), tighten Bolt (3), Flat Washer (1) With Allen key (7)

Step 4



Cx1
Back right frame





①x2
Washer



③x2
Bolt 6x35



⑦x1
Allen key

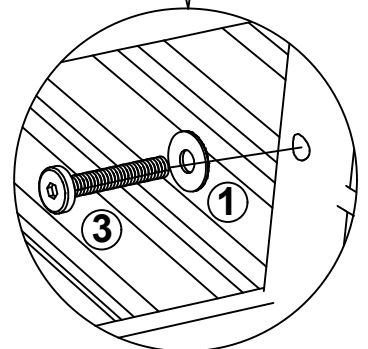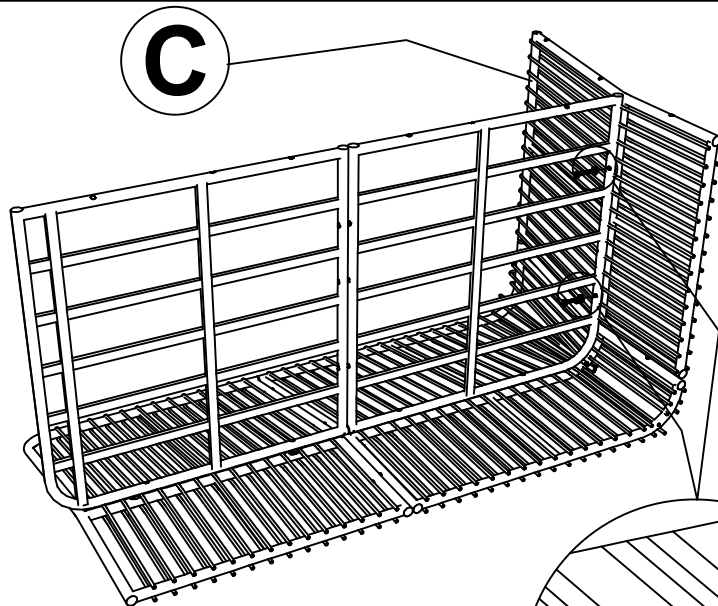


Connect The part from Step (3) & Back right frame (C), tighten Bolt (3), Flat Washer (1) With Allen key (7)

Step 5





①x3
Washer



④x3
Bolt 6x40



⑦x1
Allen key

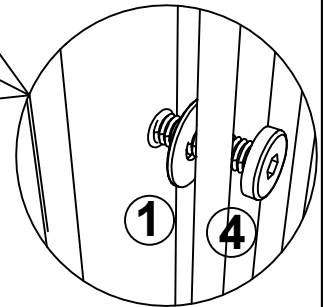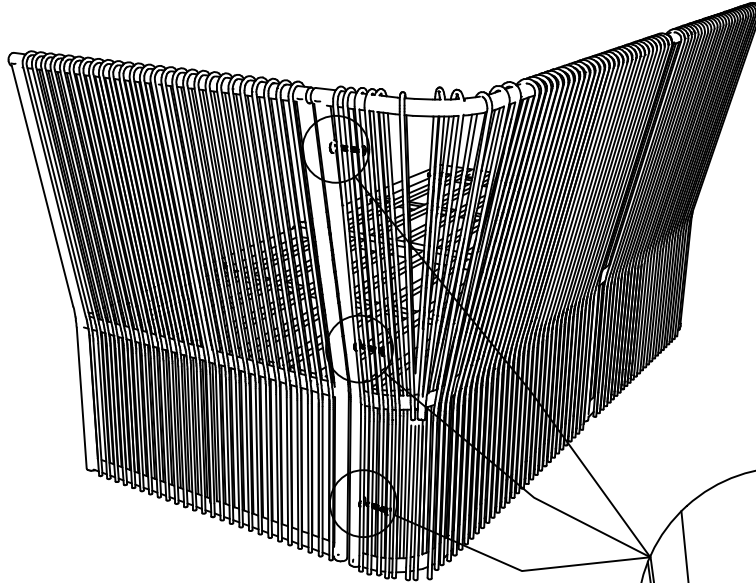


Tighten Bolt (4), Flat Washer (1) With Allen key (7)

Step 6




Ix1
Left front
seat frame



Jx1
Left back
seat frame



①x4
Washer




⑤x2
Bolt 6x45




⑥x2
Nut



⑦x1
Allen key






⑧x1
Key

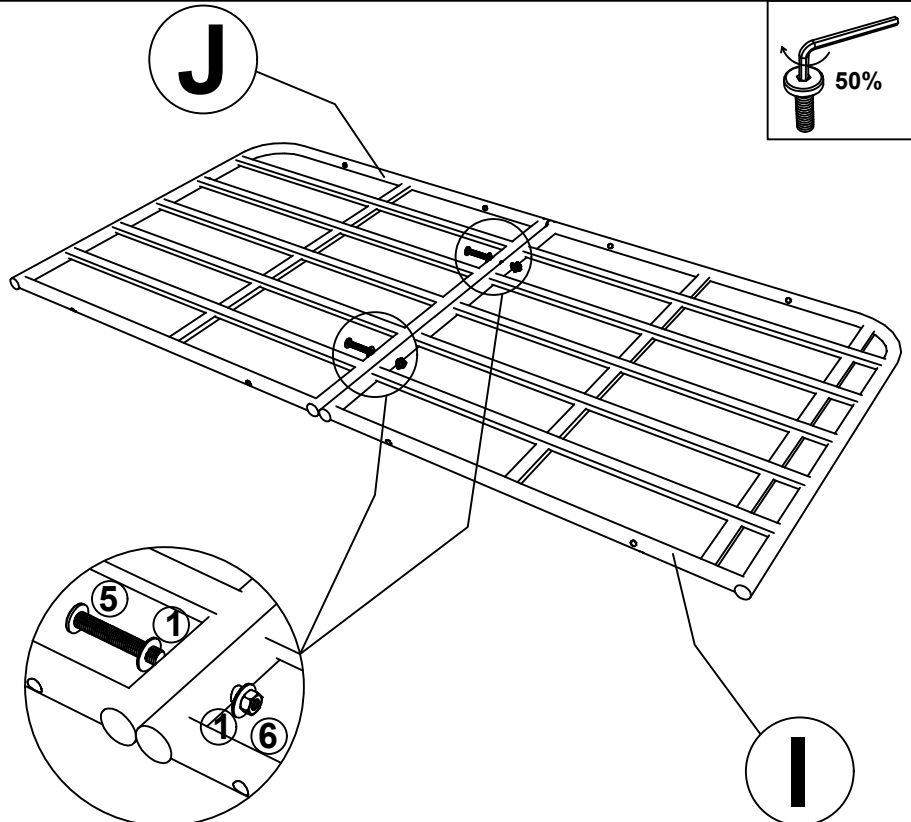




Connect The Left front seat frame (I) & Left back seat frame (J), tighten Bolt (5), Nut (6), Flat Washer (1) With Allen key (7), Key (8)

Step 7

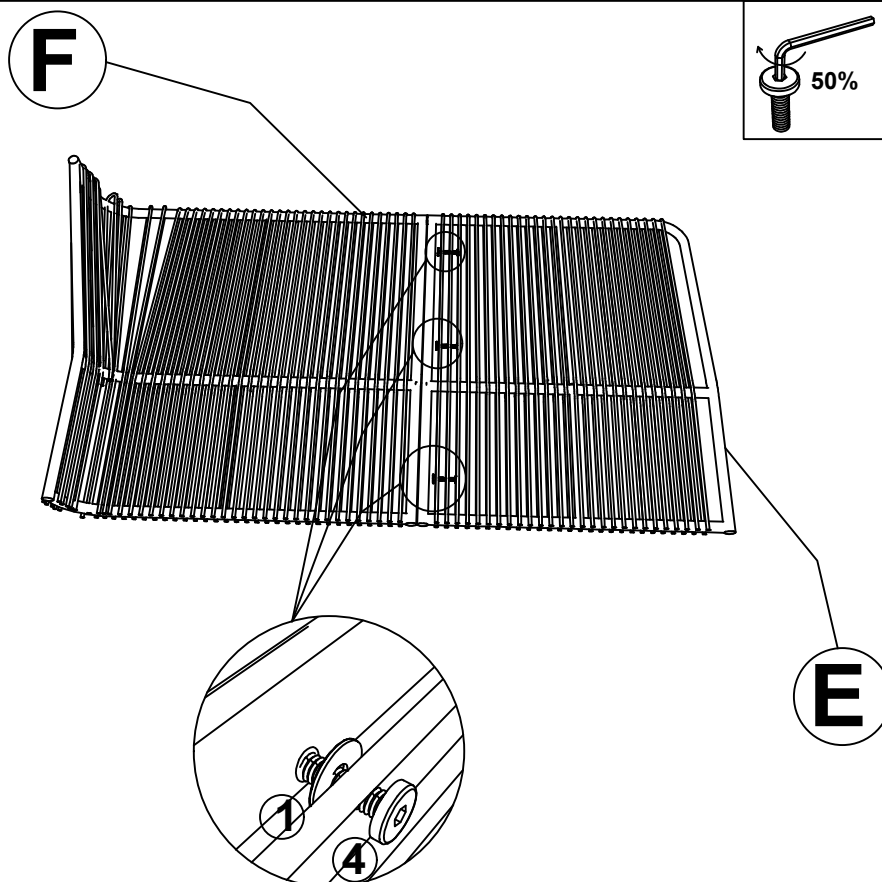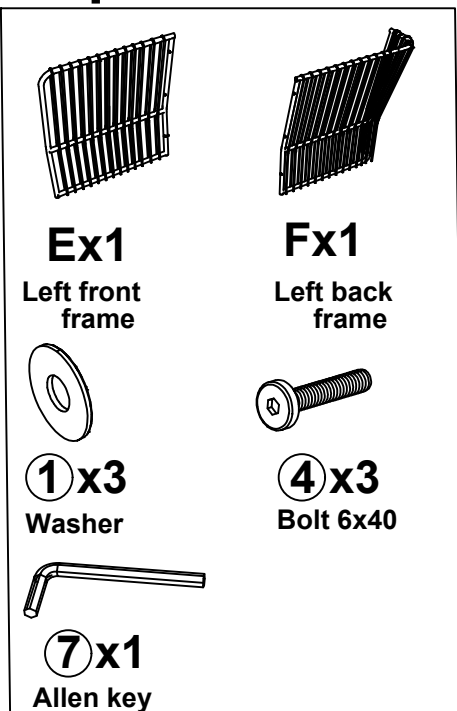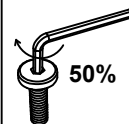



Connect The Left front frame (E) & Left back frame (F), tighten Bolt (4), Flat Washer (1) With Allen key (7)

Step 8

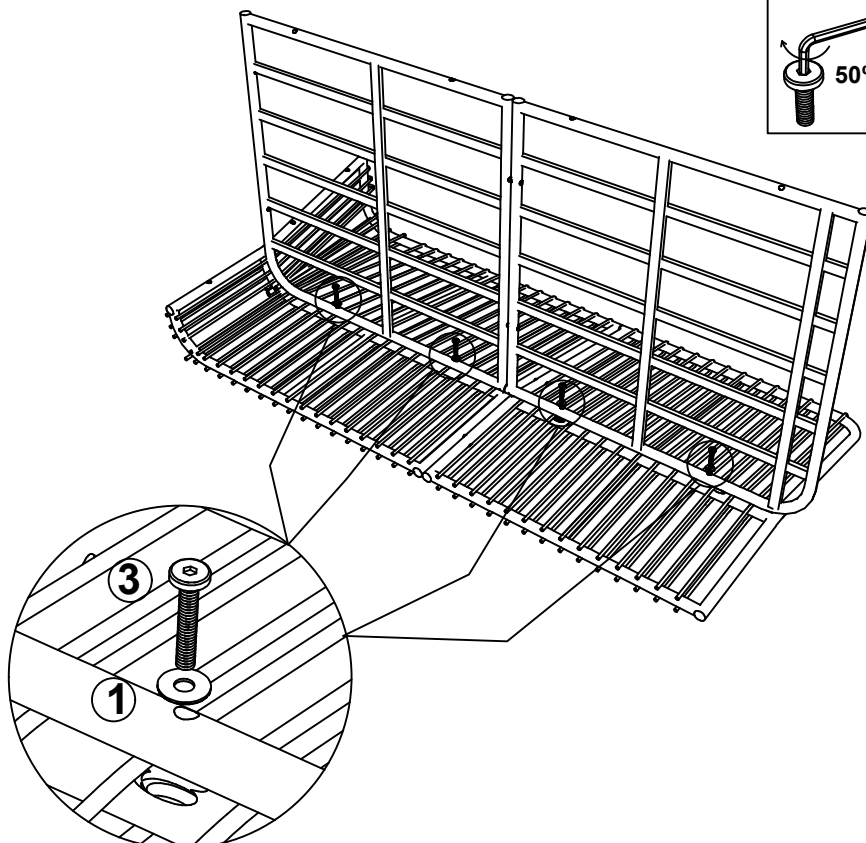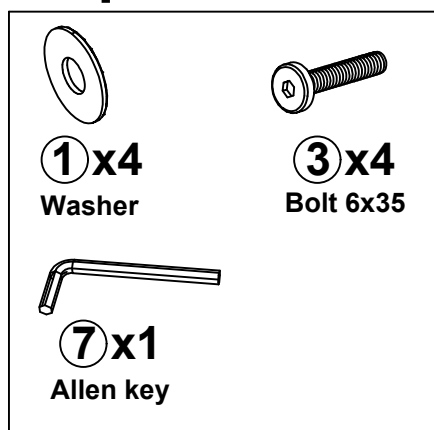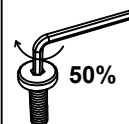



Connect The part from Step (6) & part from Step (7), tighten Bolt (3), Flat Washer (1) With Allen key (7)

Step 9

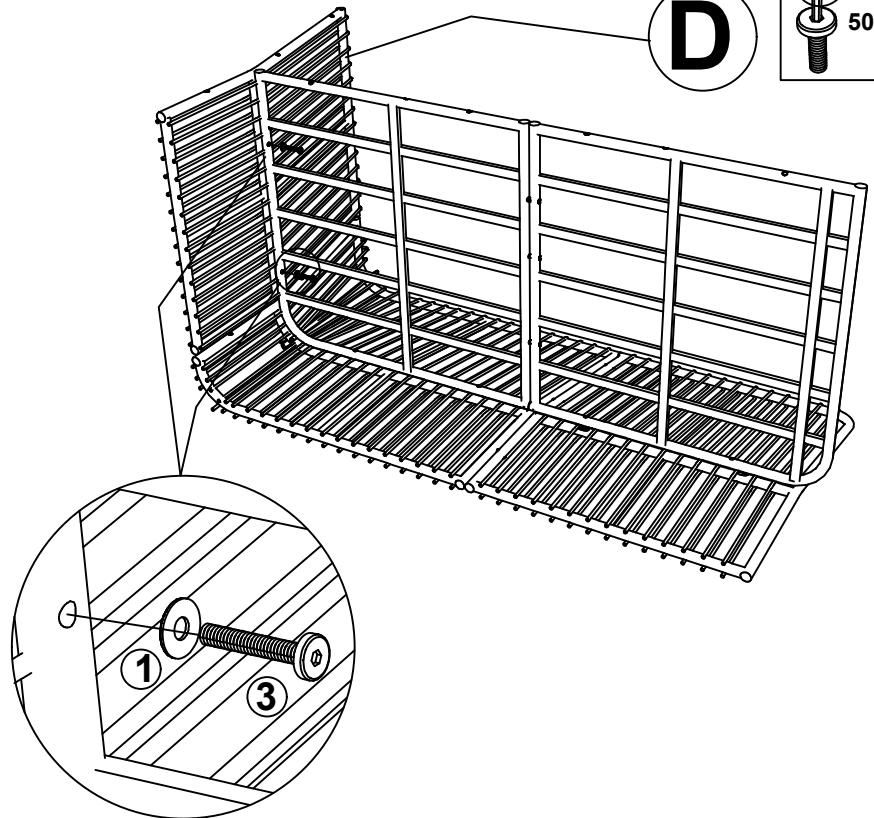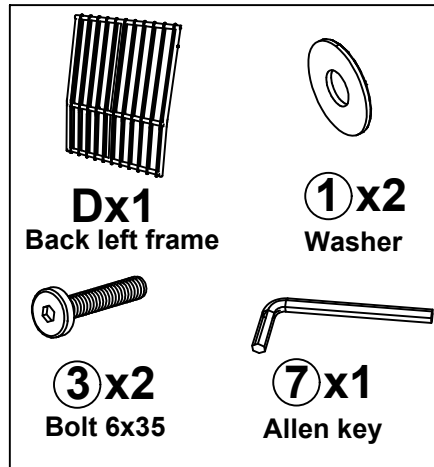



Connect The part from Step (8) & Back left frame (D), tighten Bolt (3), Flat Washer (1) With Allen key (7)

Step 10

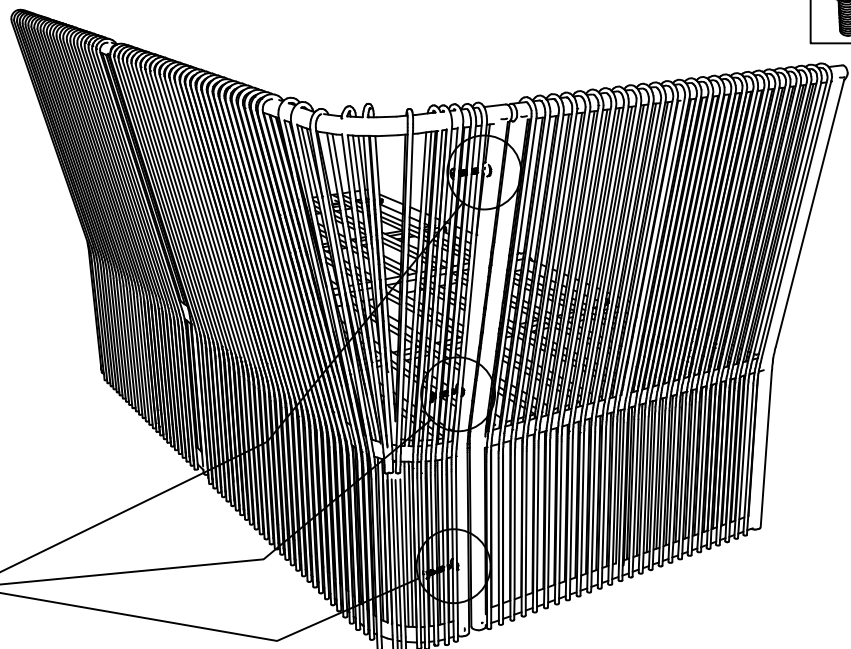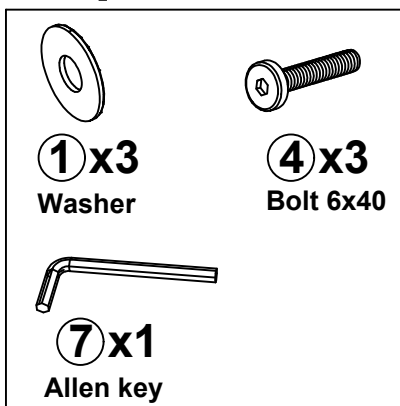



Tighten Bolt (4), Flat Washer (1) With Allen key (7)

Step 11

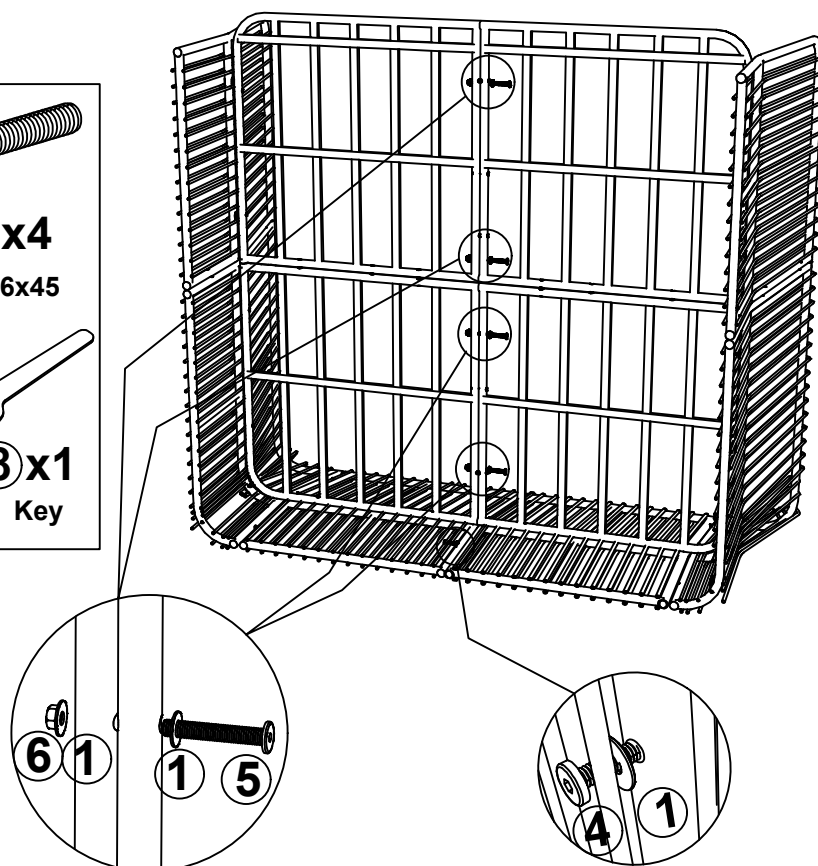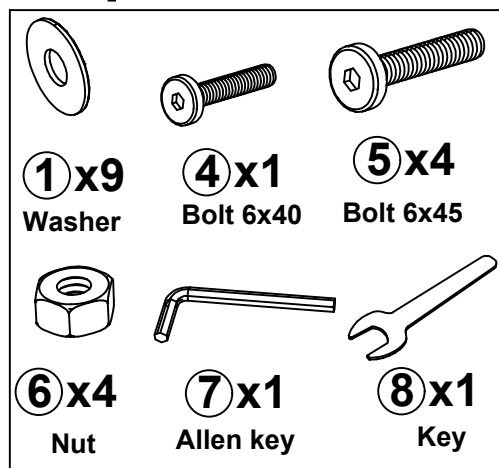




Connect The part from Step (5) & part from Step (10), tighten Bolt (4), Bolt (5), Nut (6), Flat Washer (1) With Allen key (7), Key (8)

Step 12

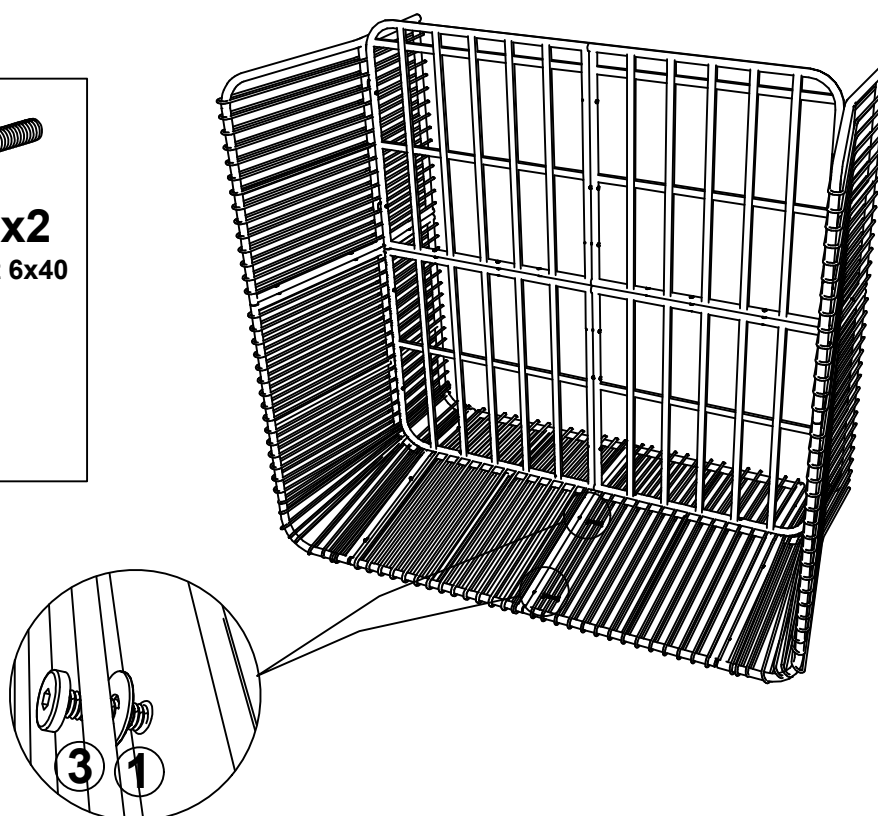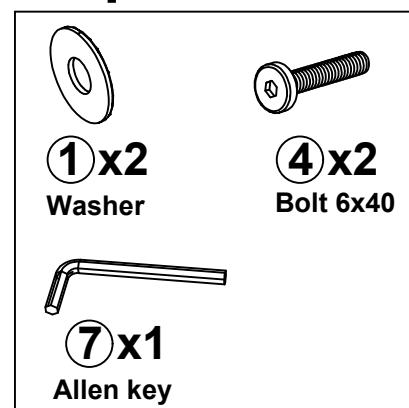



Tighten Bolt (4), Flat Washer (1) With Allen key (7)

Step 13

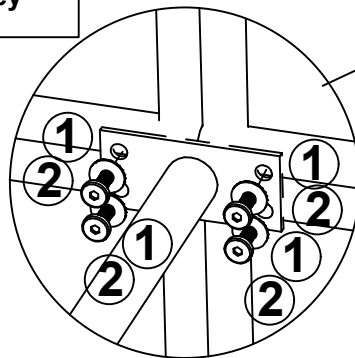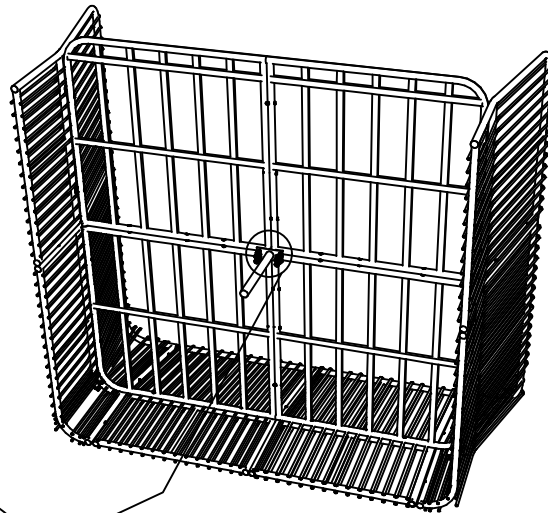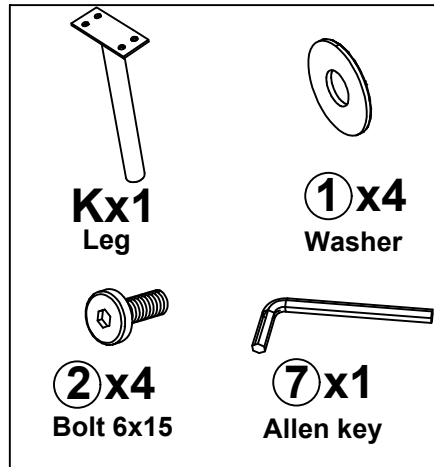


Connect The part from Step (12) & Leg (K), tighten Bolt (2), Flat Washer (1) With Allen key (7)

Step 14

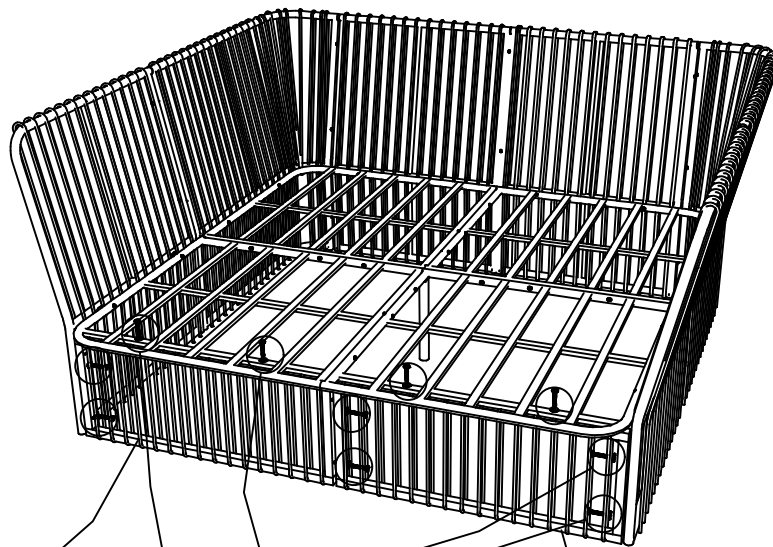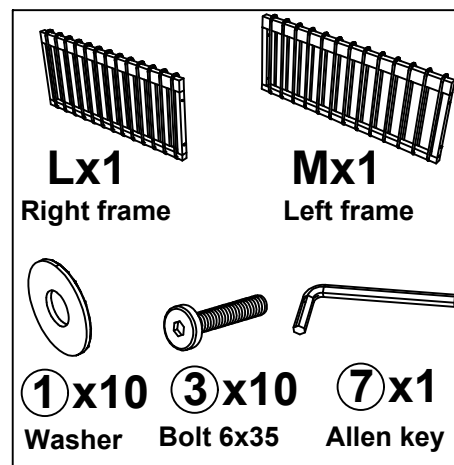



L

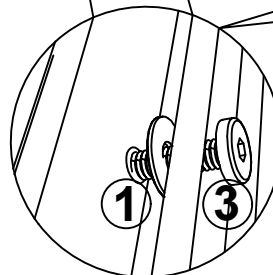

M


Connect The part from Step (13) & Right frame (L) & Left frame (M), tighten Bolt (3), Flat Washer (1) With Allen key (7)

Step 15

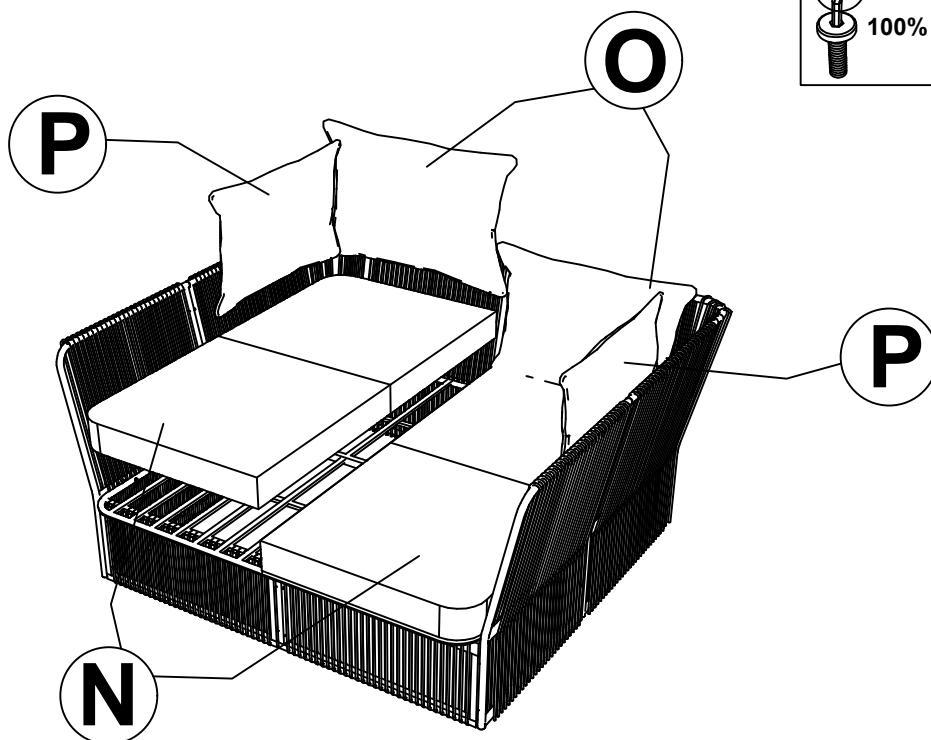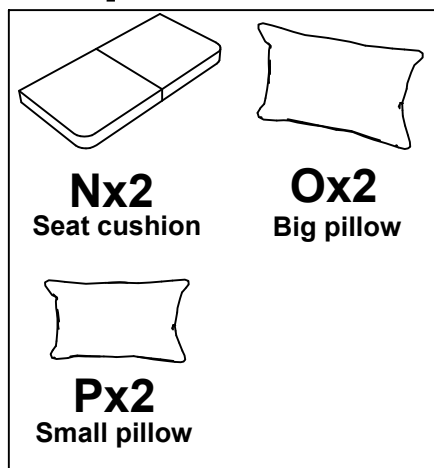



Put on Seat cushion (N), Big pillow (O), Small pillow (P), to bed to finish bed

Step 16

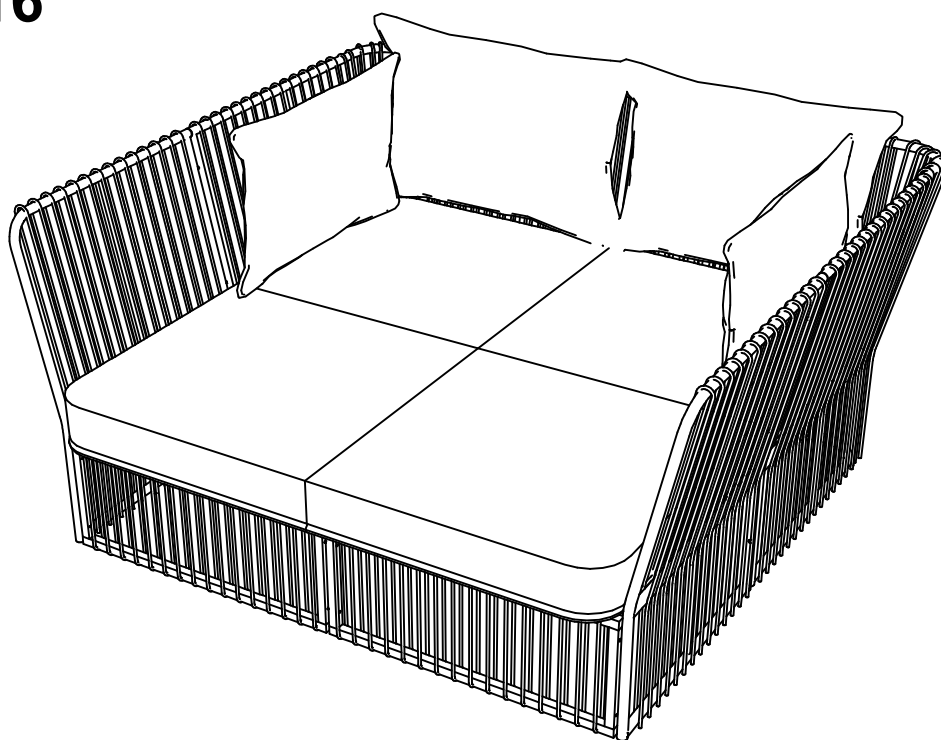


Finish Sunbed

Step 17

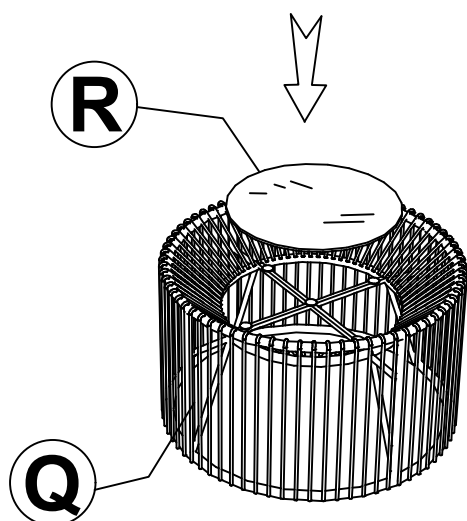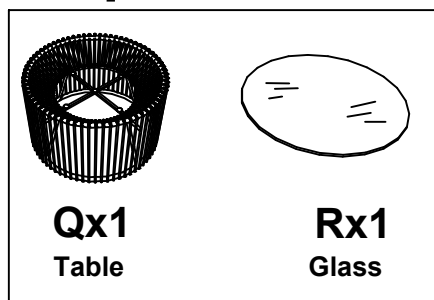


Put on Glass (R) to Table (Q) to finish

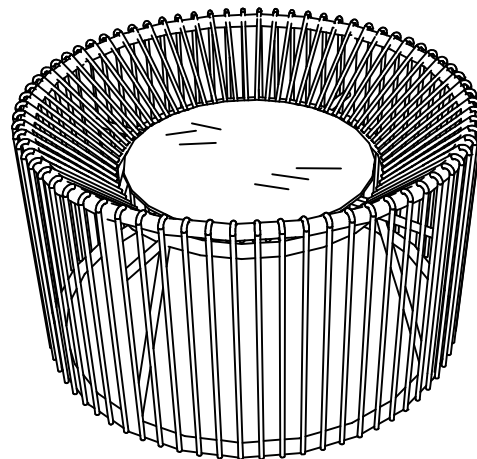

Finish Table

Step 18

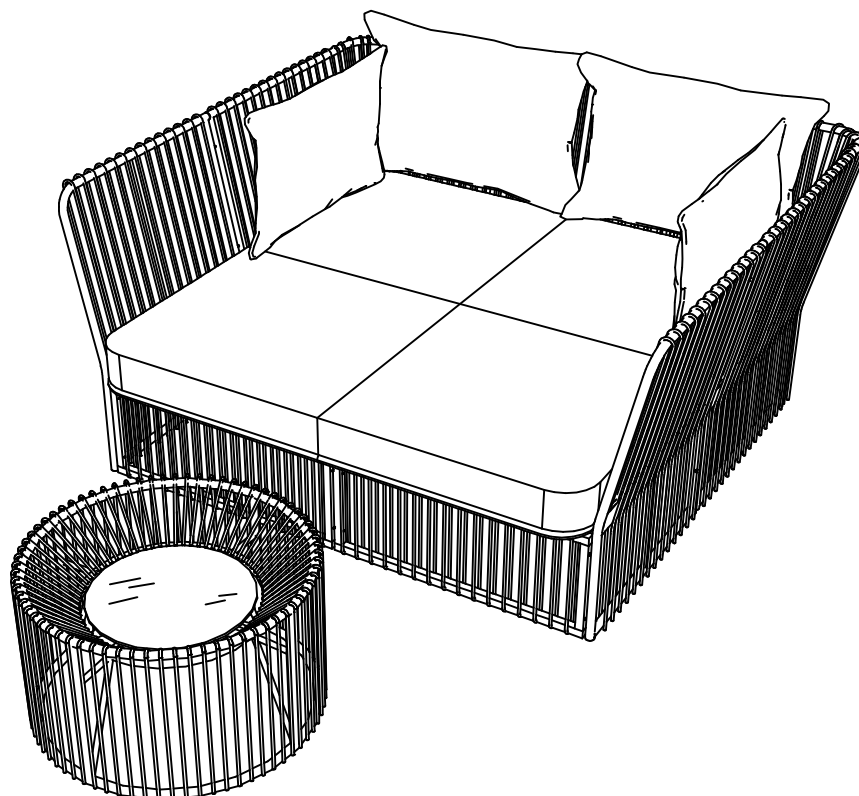

Finish Outdoor Sunbed