


Assembly Instructions

SKU:YWSLBXG-001

COFFEE BAR CABINET

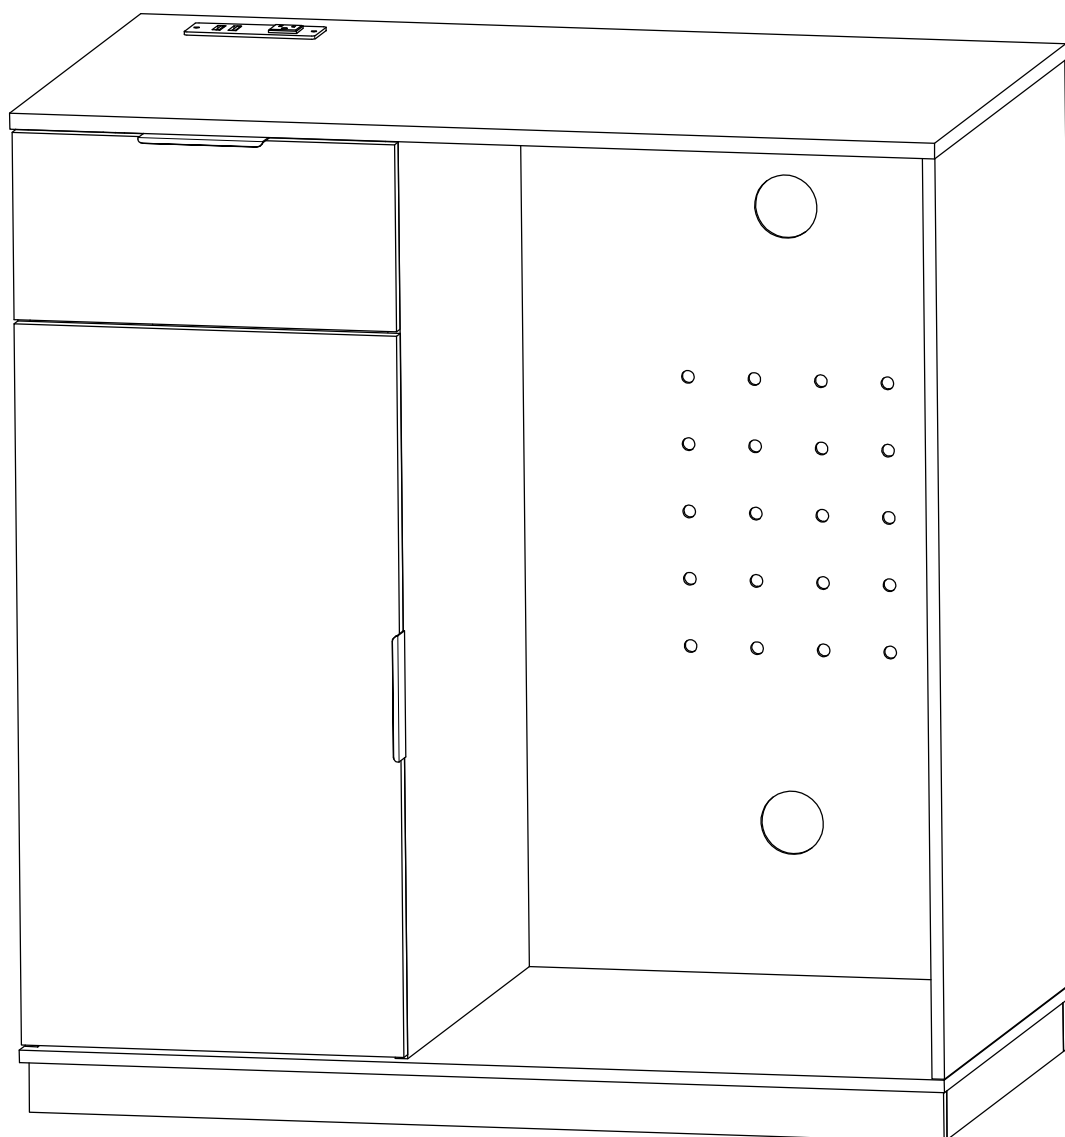


**IMPORTANT: RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**





For parts and customer service, please send E-mail to
customerservice@nagabahna.com.cn

Monday to Friday, from 8:30 AM to 4:30 PM, EST.


PARTS

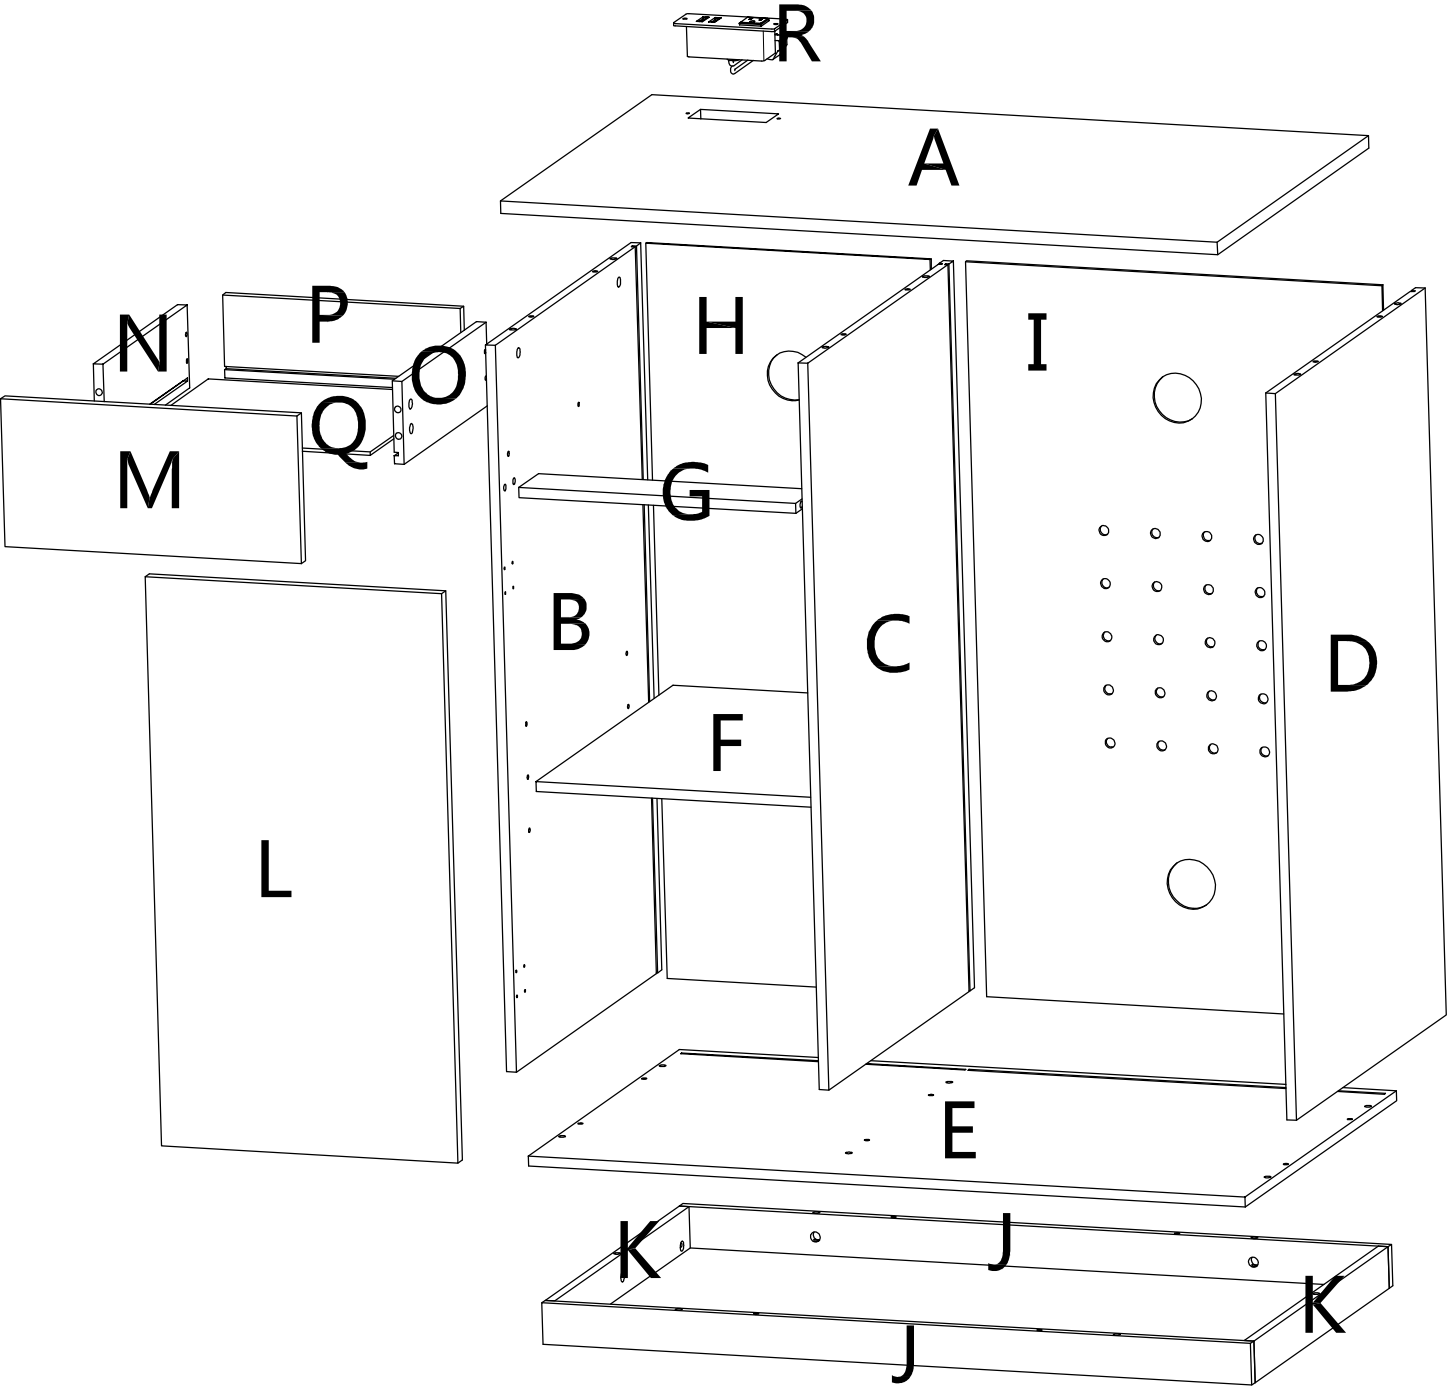


HARDWARE LIST

①	 M4X12*26	②	 M4X30*4
③	 *24	④	 *24
⑤	 *20	⑥	 *1
⑦	 *2	⑧	 *4
⑨	 *6	⑩	 M4.5X40*6
⑪	 *2	⑫	 M4X14 *8


How To Use The Cam Lock System

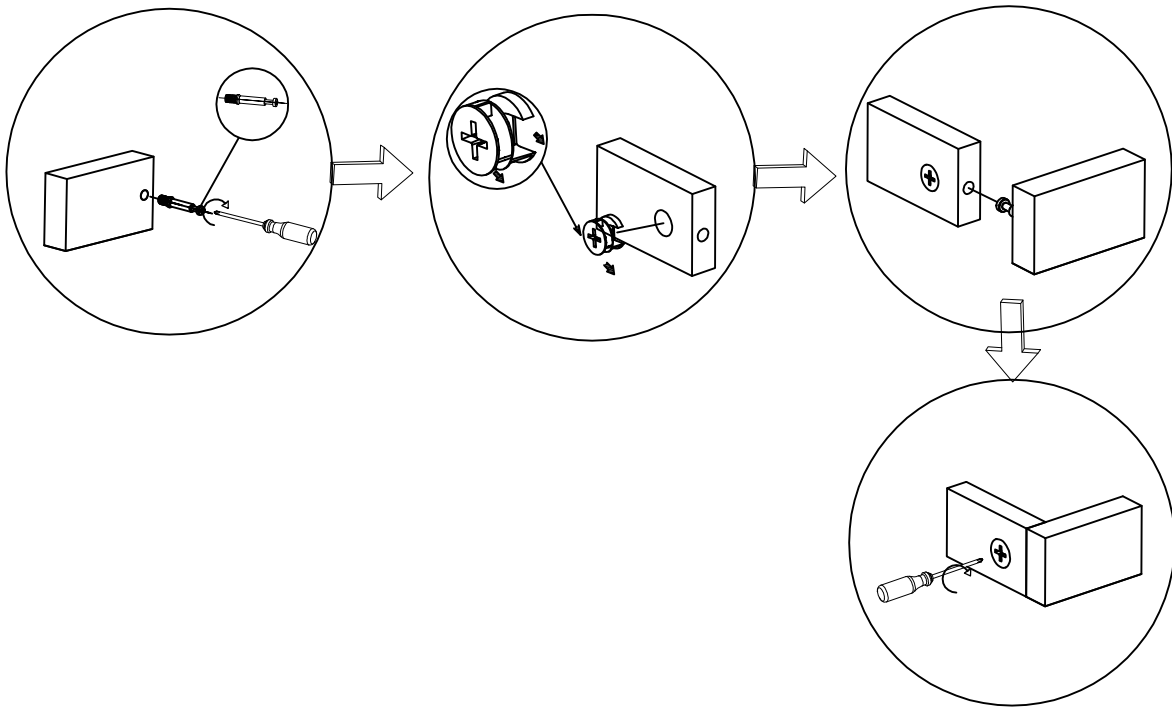


How To Use The Wooden Dowel

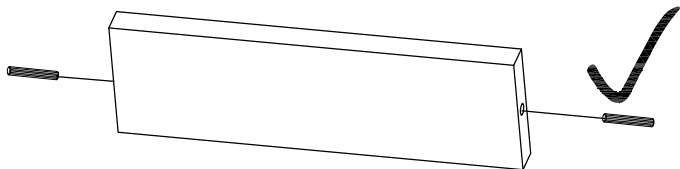

Must be installed in the vertical side

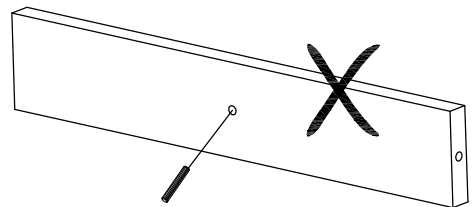


Step 1

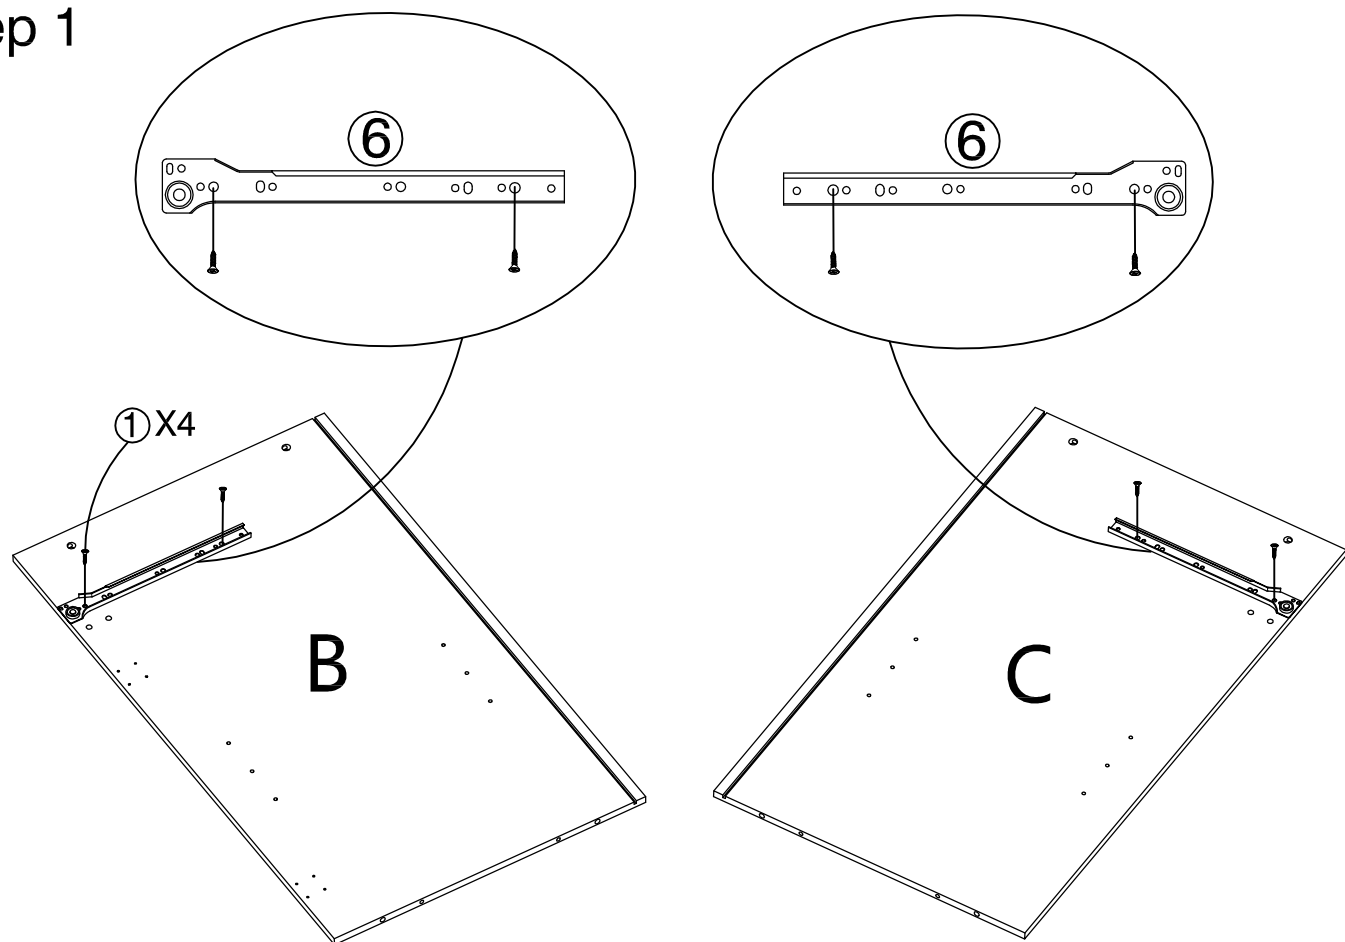


① X4
⑥ X1

Step 2

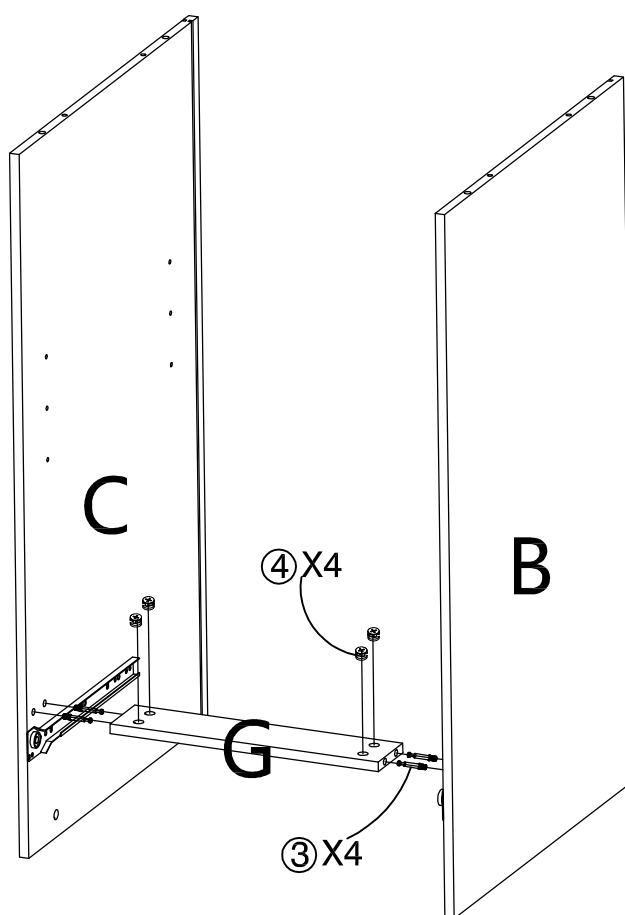


③ X4
④ X4


Step 3

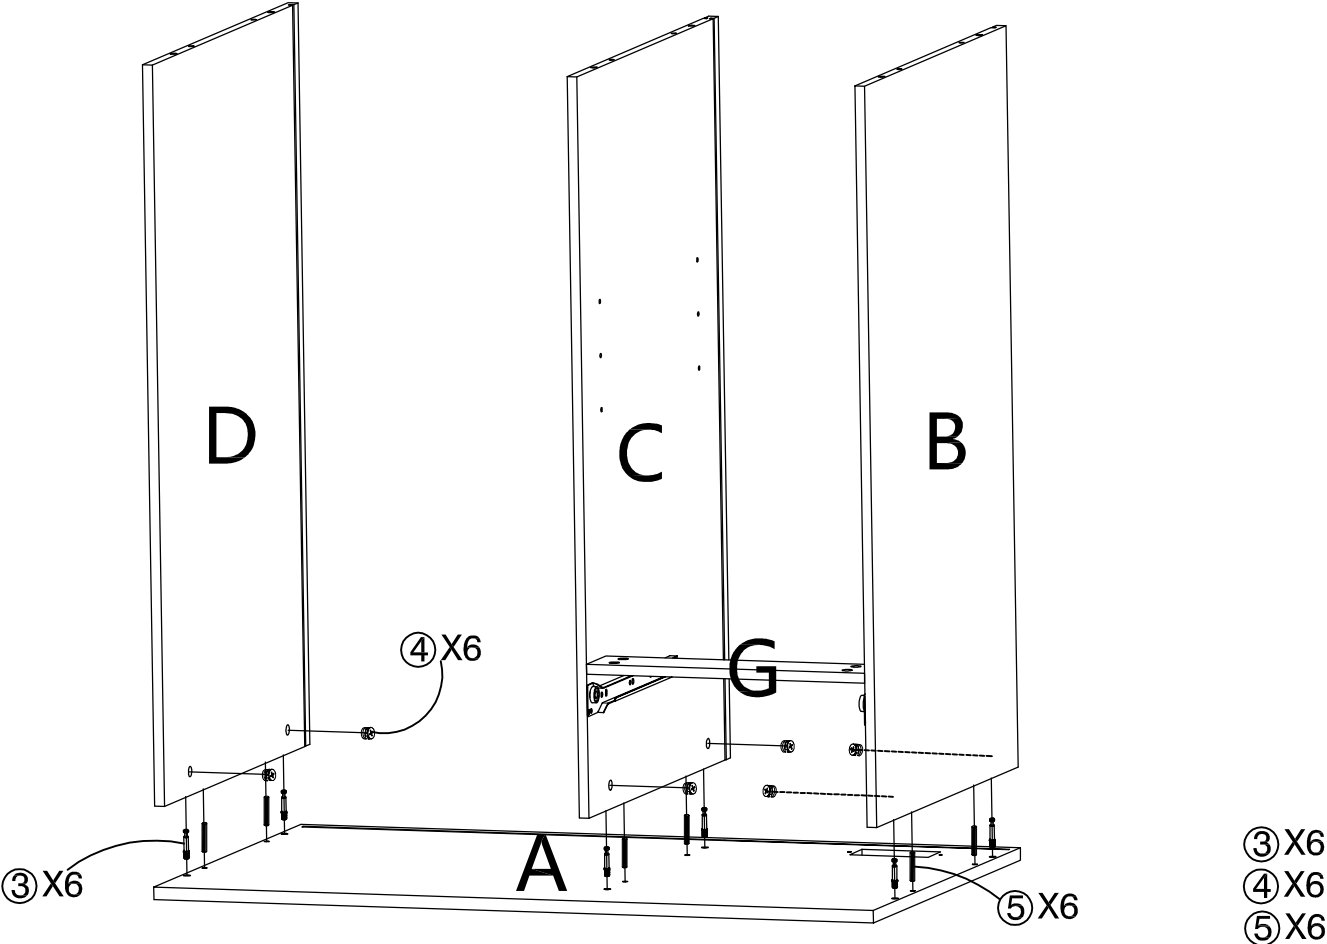

Step 4

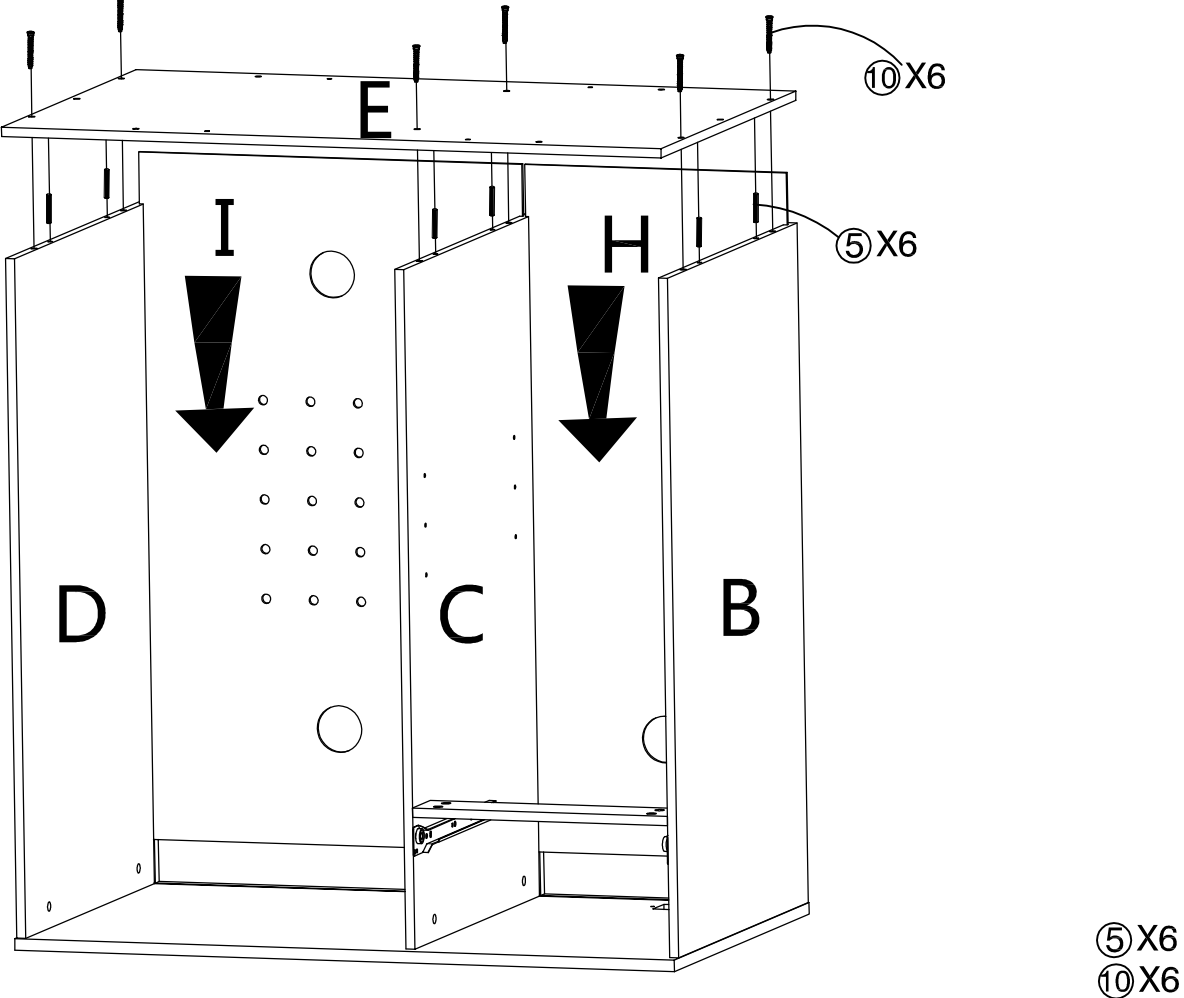


Step 5

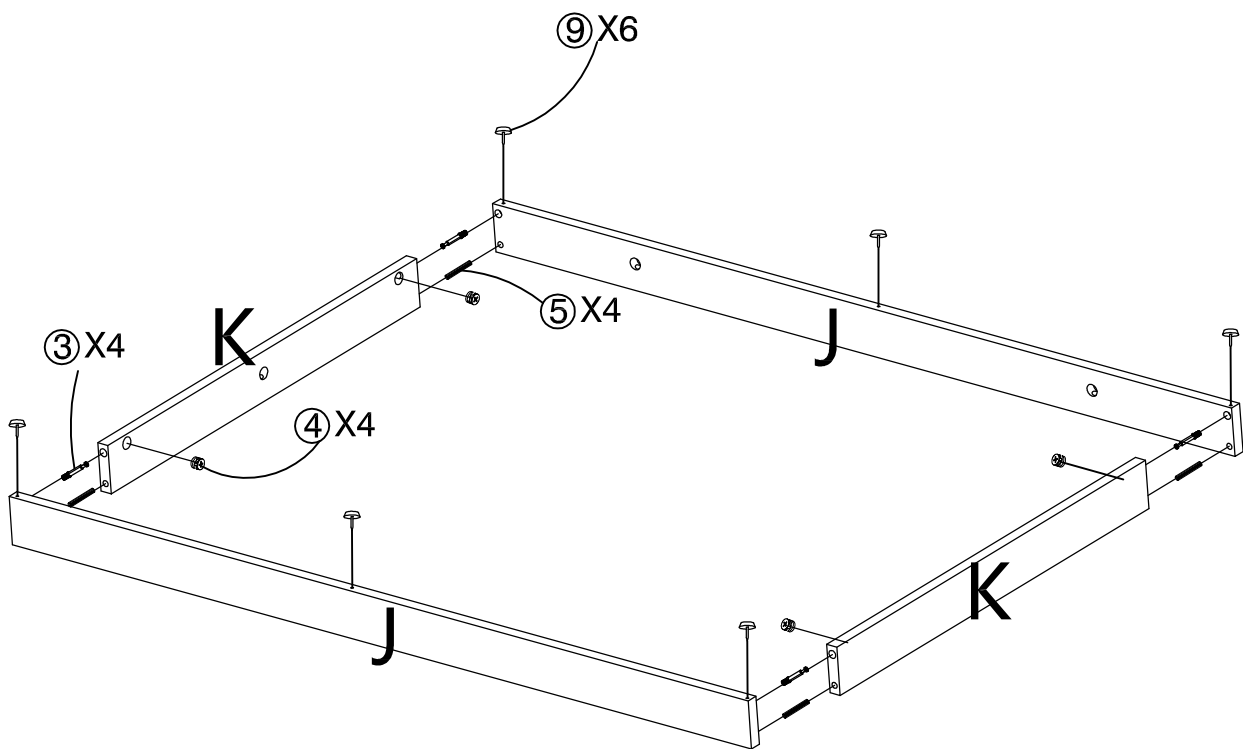


- ③ X4
- ④ X4
- ⑤ X4
- ⑨ X6

Step 6

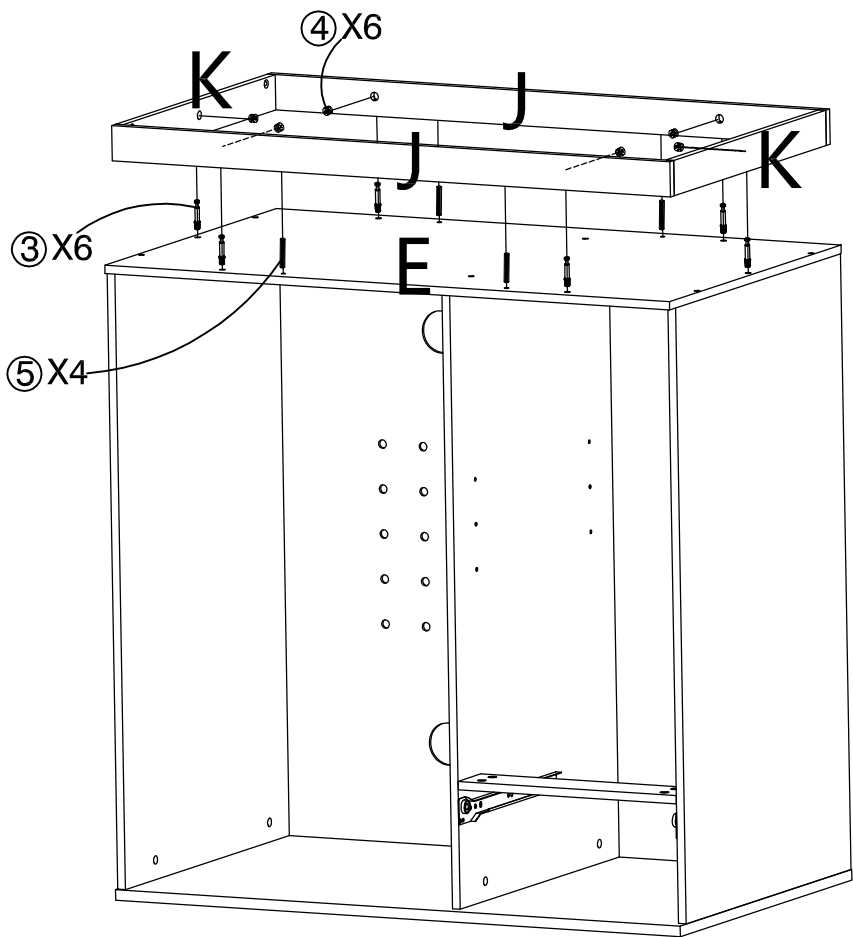

- ③ X6
- ④ X6
- ⑤ X4



Step 7

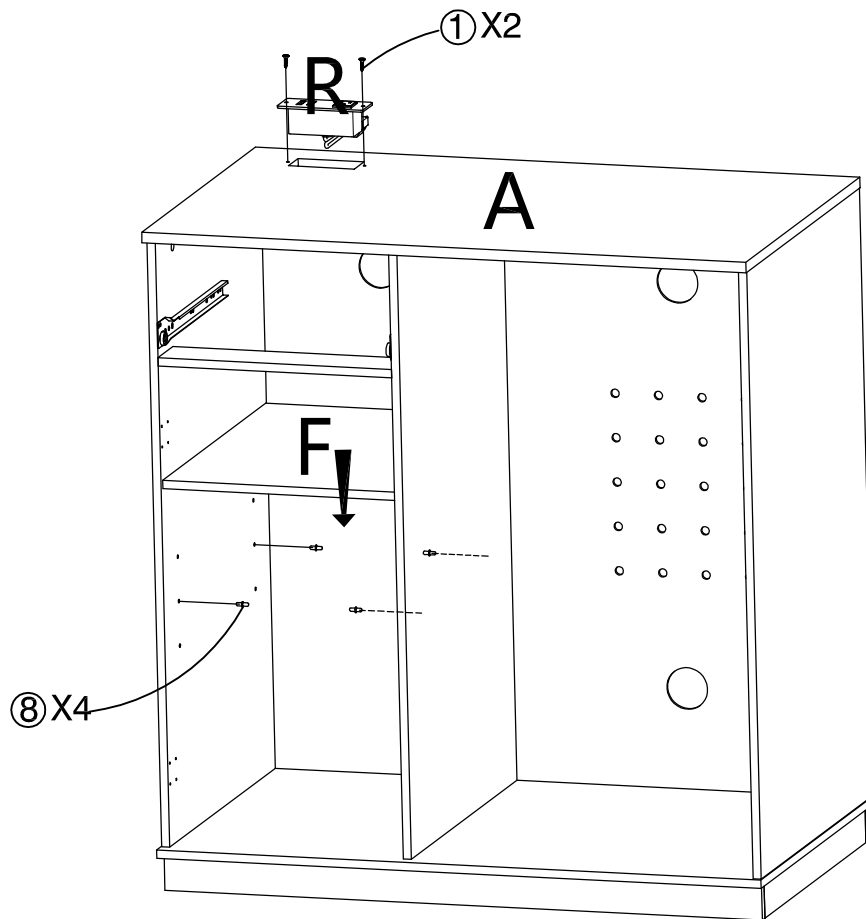


① X2

⑧ X4


Step 8

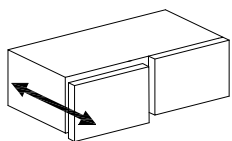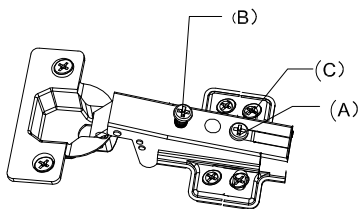


① Rotating screw A

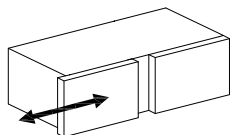

② Slightly loosen screw A ,
and rotate screw B

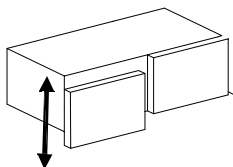

③ Adjust screw C

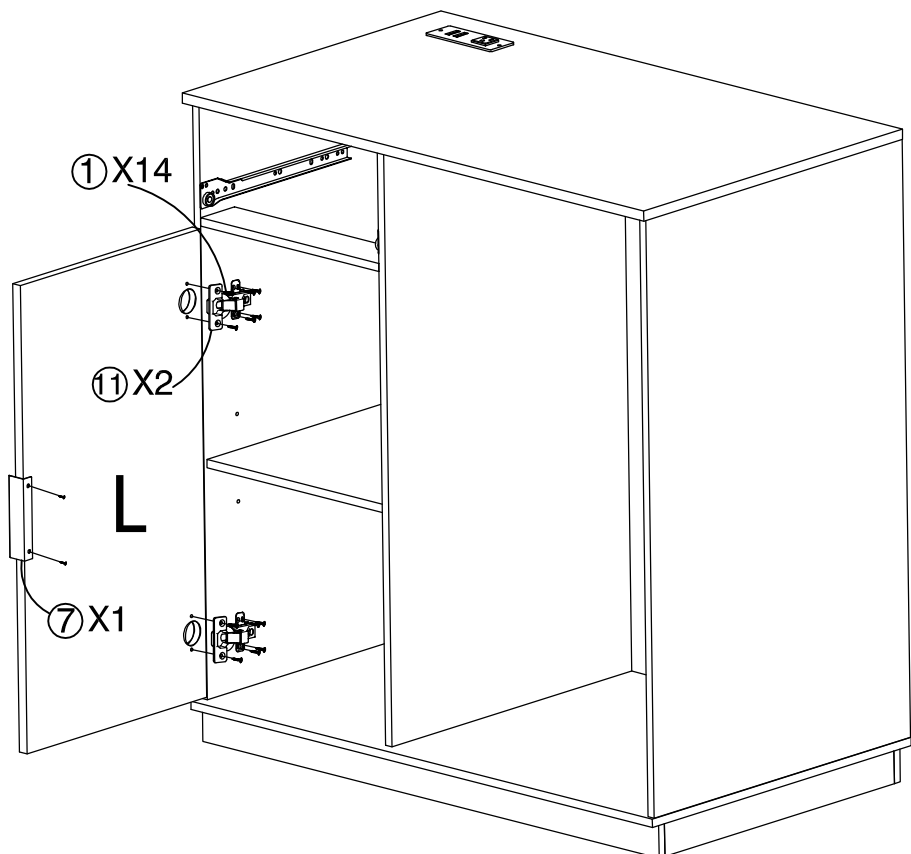





① X14

⑦ X1

⑪ X2


Step 9

(2)

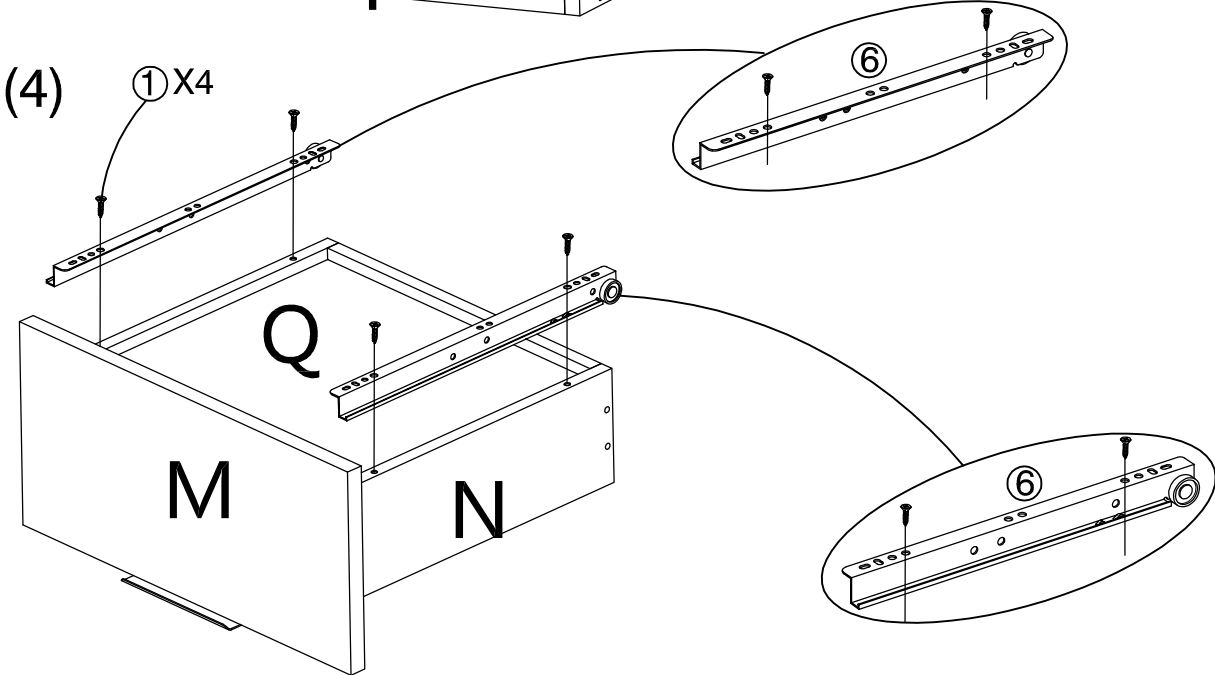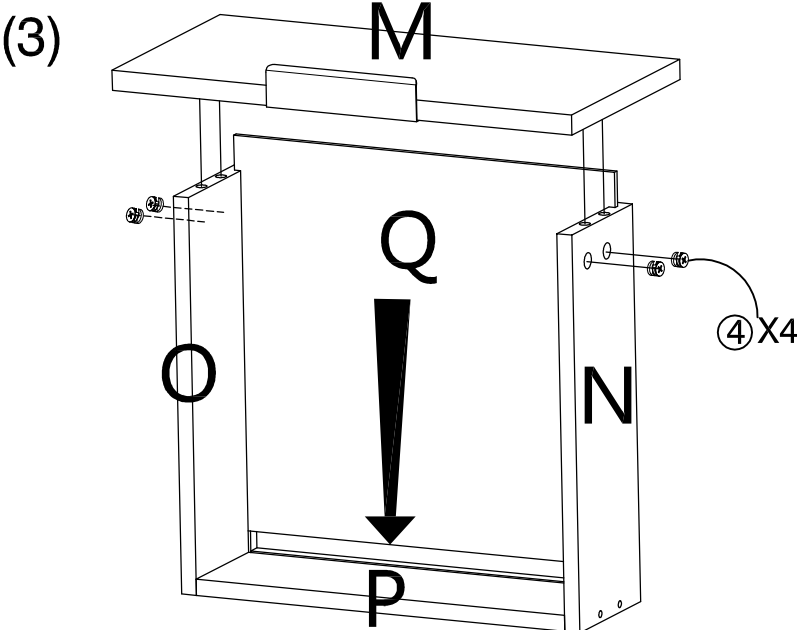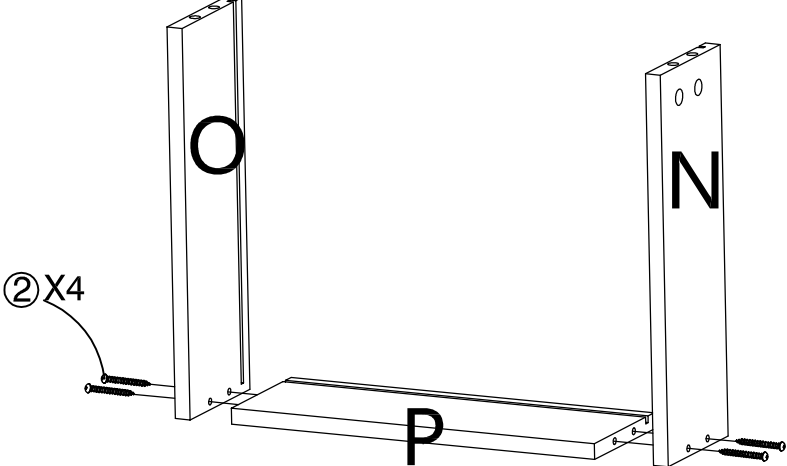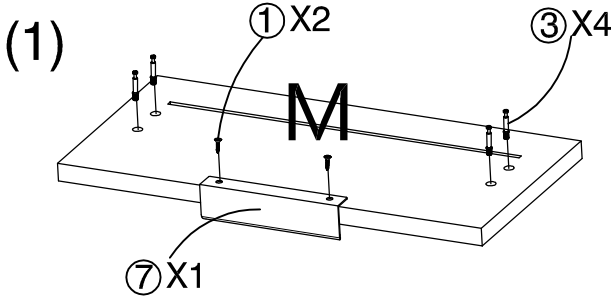

- ① X6
- ② X4
- ③ X4
- ④ X4
- ⑦ X1
- ⑥ X1

Step 10

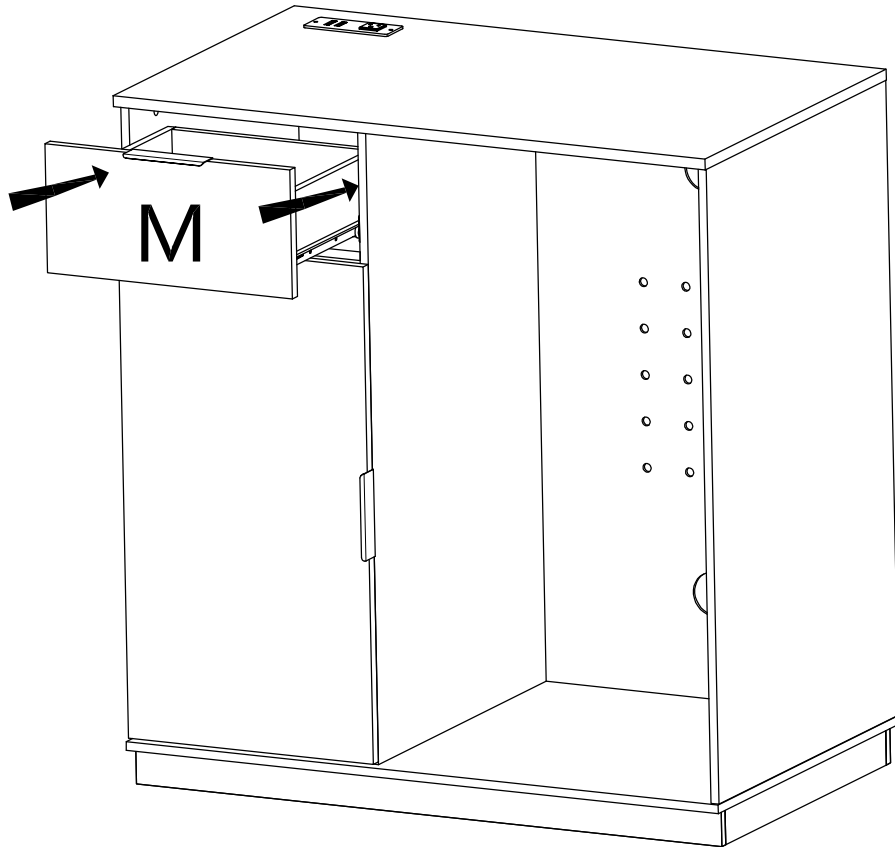

Step 11

