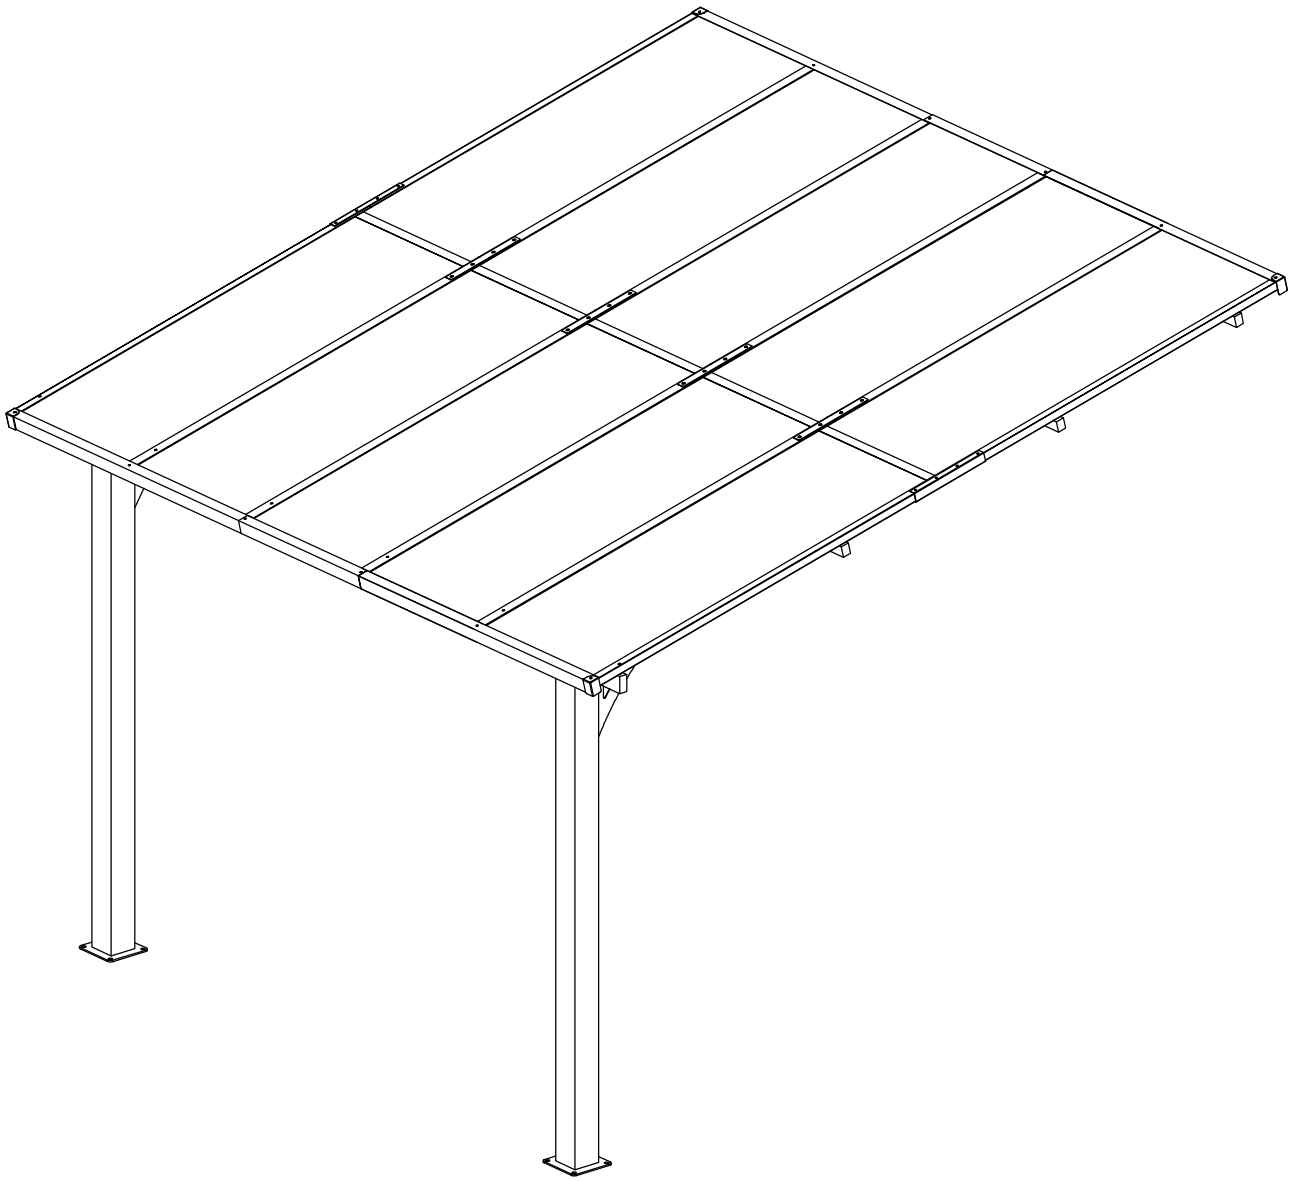
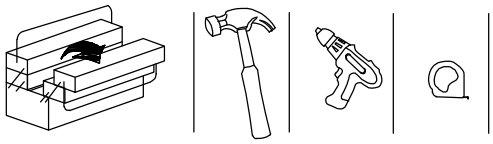


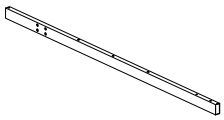
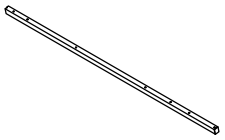
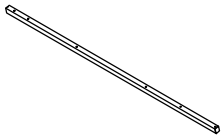
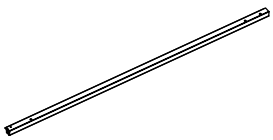
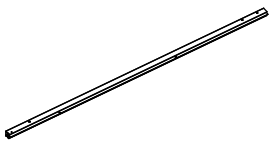
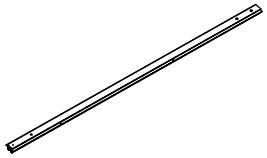

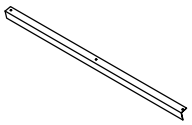
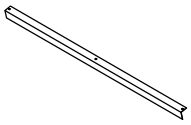


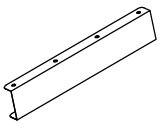
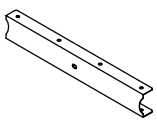











ERX-XB1010









BOX A

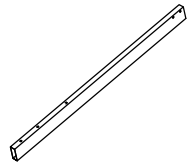
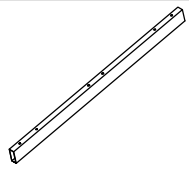
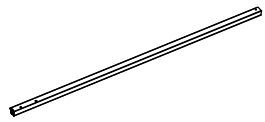
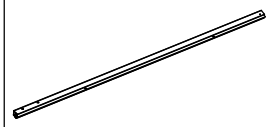
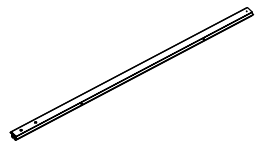
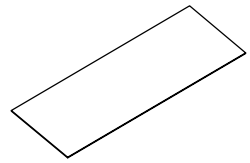
No	Picture	Qty
A		x2
C		x1
C1		x1
D		x2
D1		x4
E		x2
F1		x1
F3		x1
G1		x4
H		x5

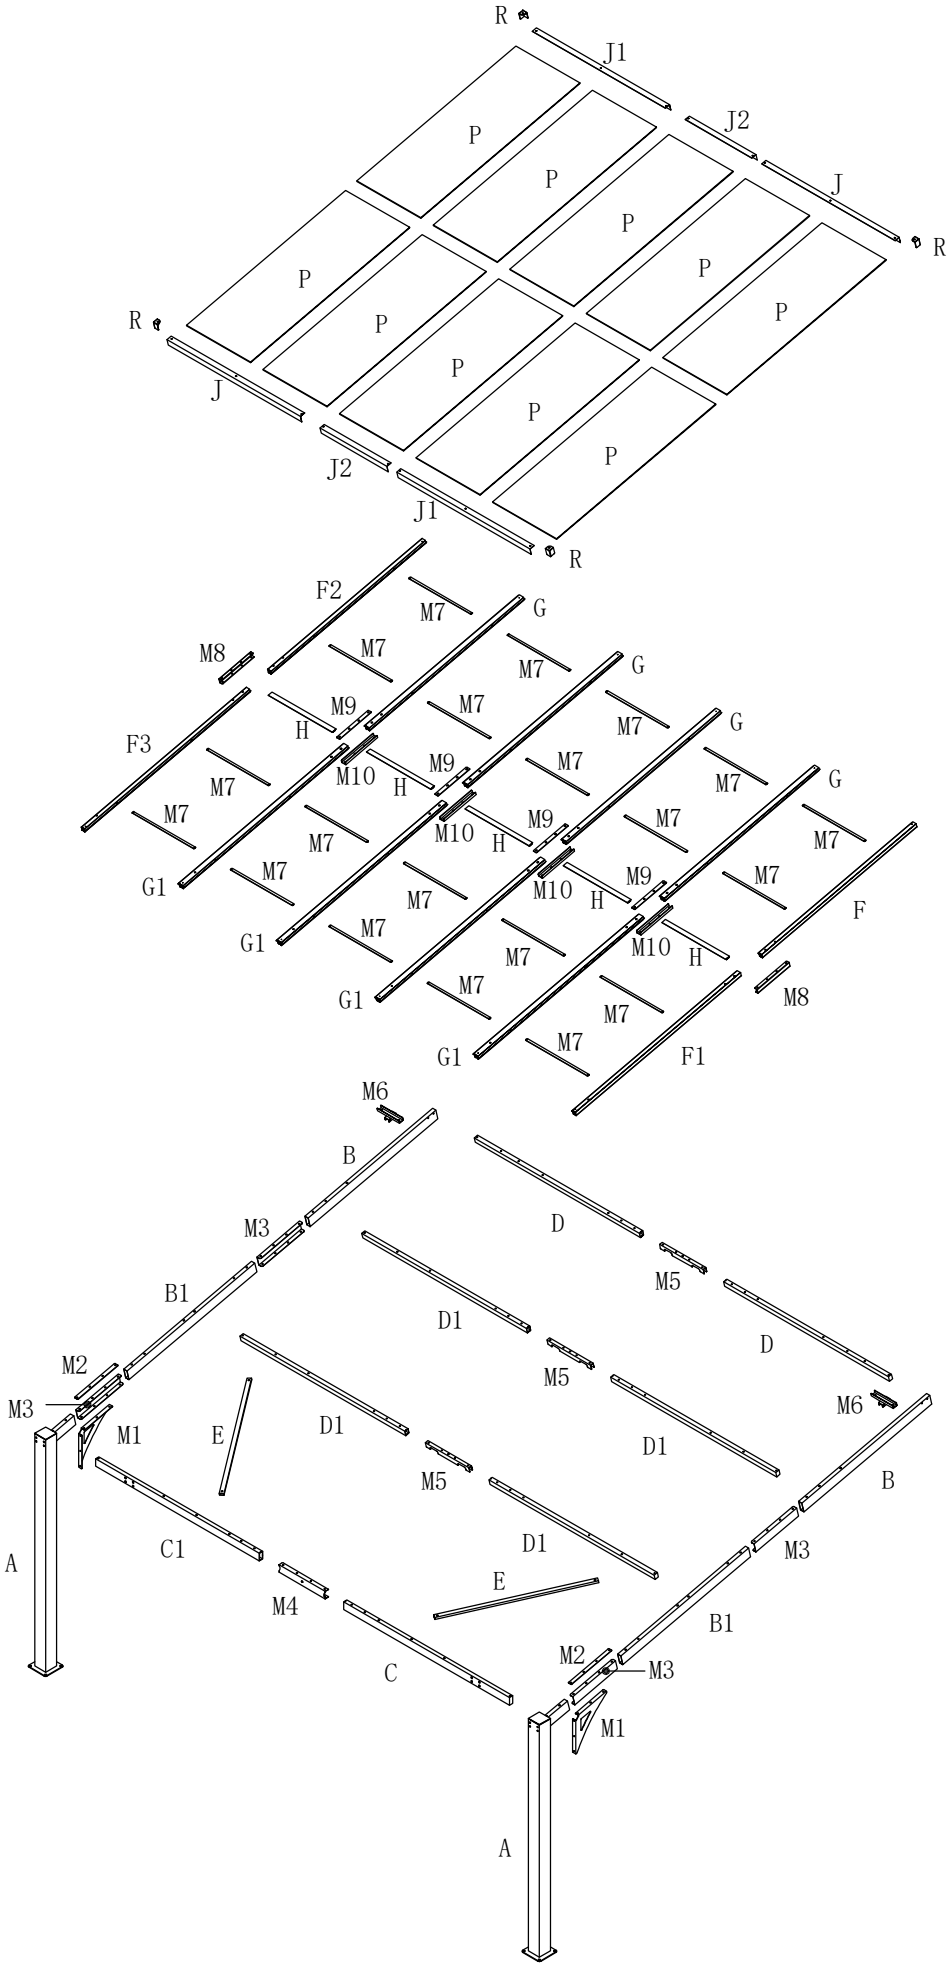
No	Picture	Qty
J		x2
J1		x2
J2		x2
MT		x1
M1		x2
M2		x2
M3		x4
M4		x1
M5		x3
M6		x2




No	Picture	Qty
M7		x20
M8		x2
M9		x4
M10		x4
R		x4
T1	 ¢ 12×30	x8
T2	 M6*12	x58
T3	 M6*30	x4
T4	 M6*45	x34
T5	 M6*55	x26
T6	 M6	x32

No	Picture	Qty
T7	 M4*12	x12
T8	 M4*6	x40
T9		x12
T10		x24
		x1
		x1
	 M8	x1
	 M6	x1
	 M6	x1
		x2

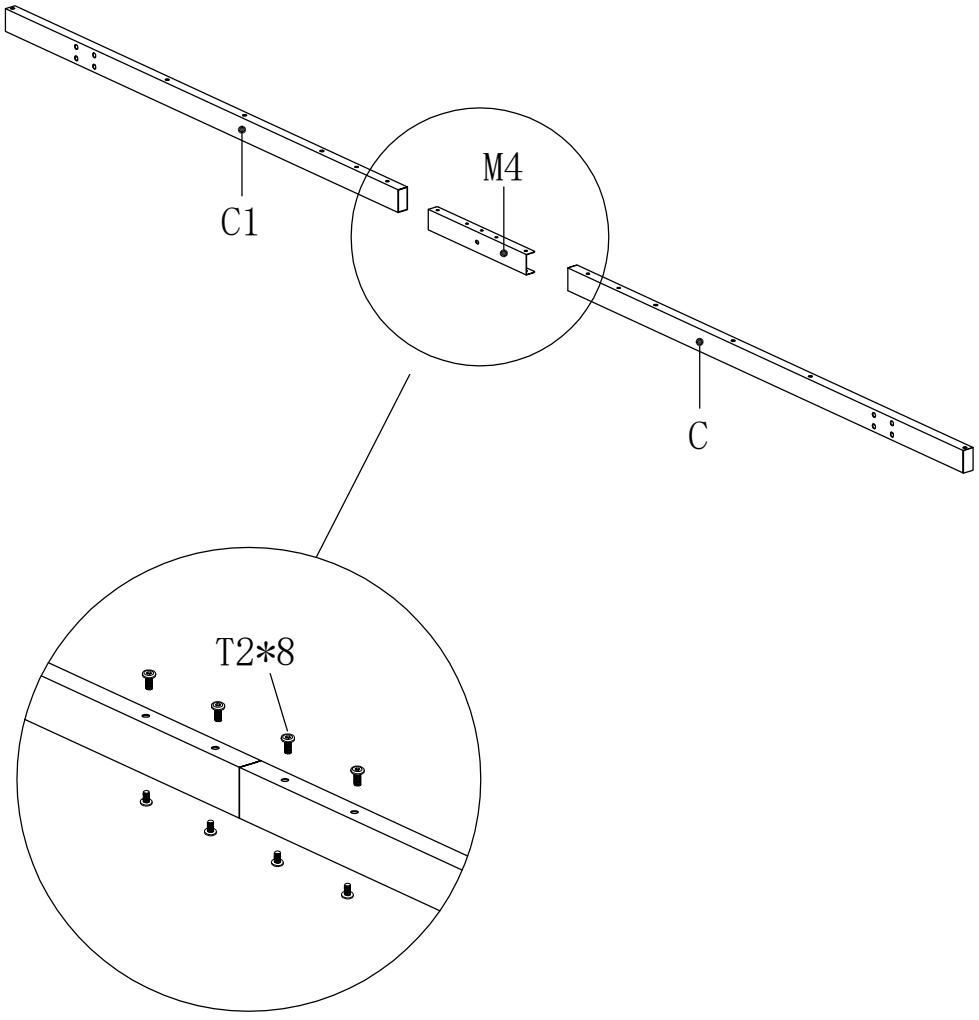
BOX B


No	Picture	Qty
B		x2
B1		x2
F		x1
F2		x1
G		x4
P		x10


R
J1
J2
J
R
P
R
J
J2
J1
R
F2
M7
G
M8
M9
H
M10
F3
G1
F
F1
M6
B
M3
B1
M2
M1
E
A
D
D1
M5
C1
M4
C
M8

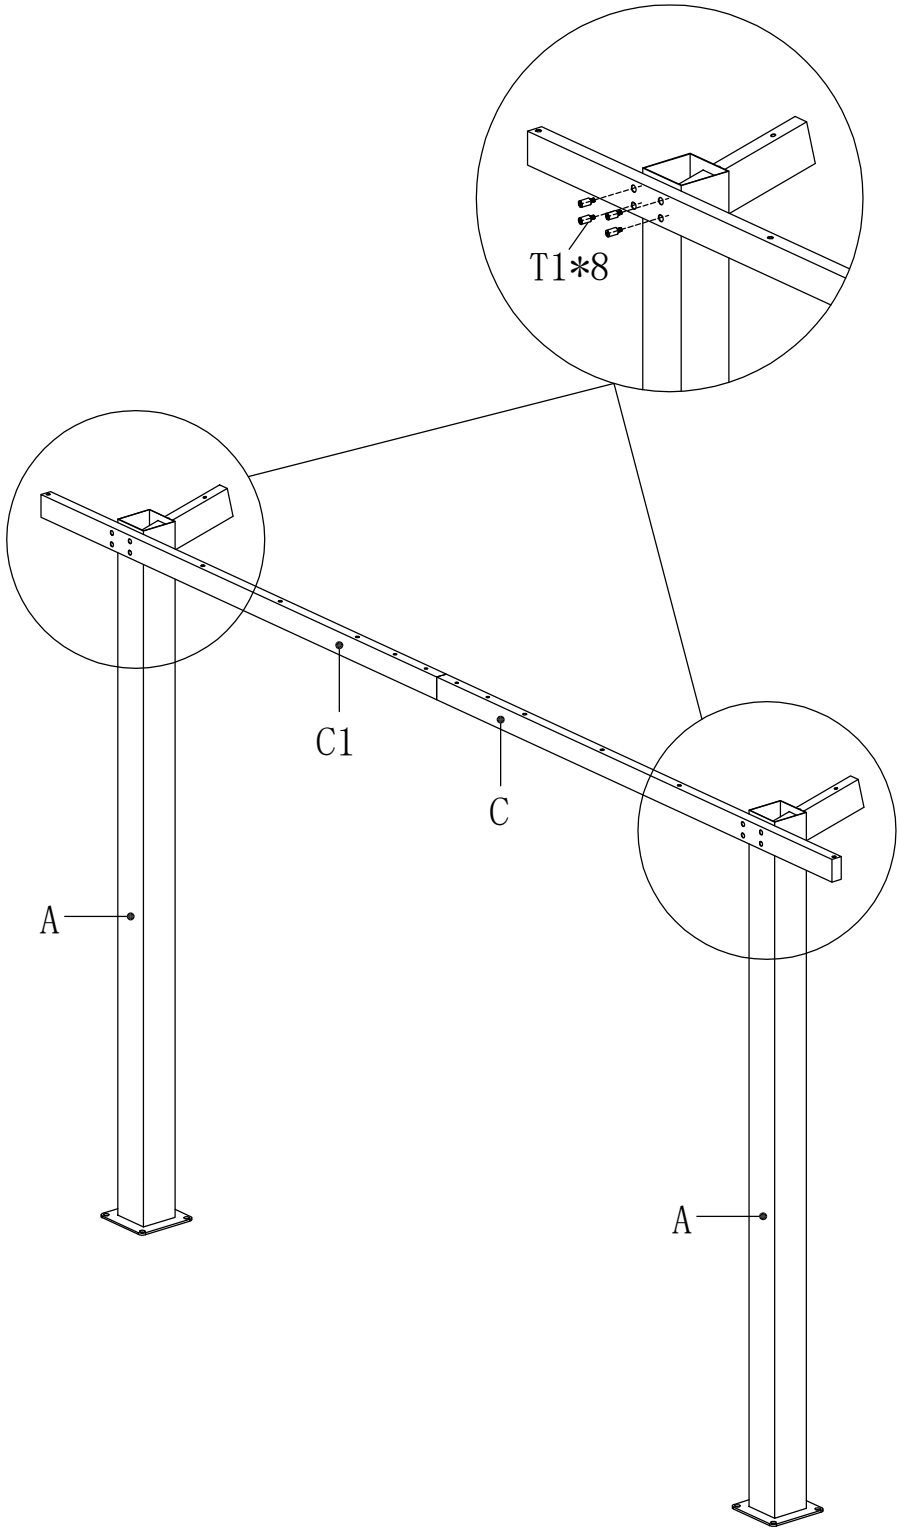
C		x1
C1		x1
M4		x1
T2	 M6*12	x8


STEP 1



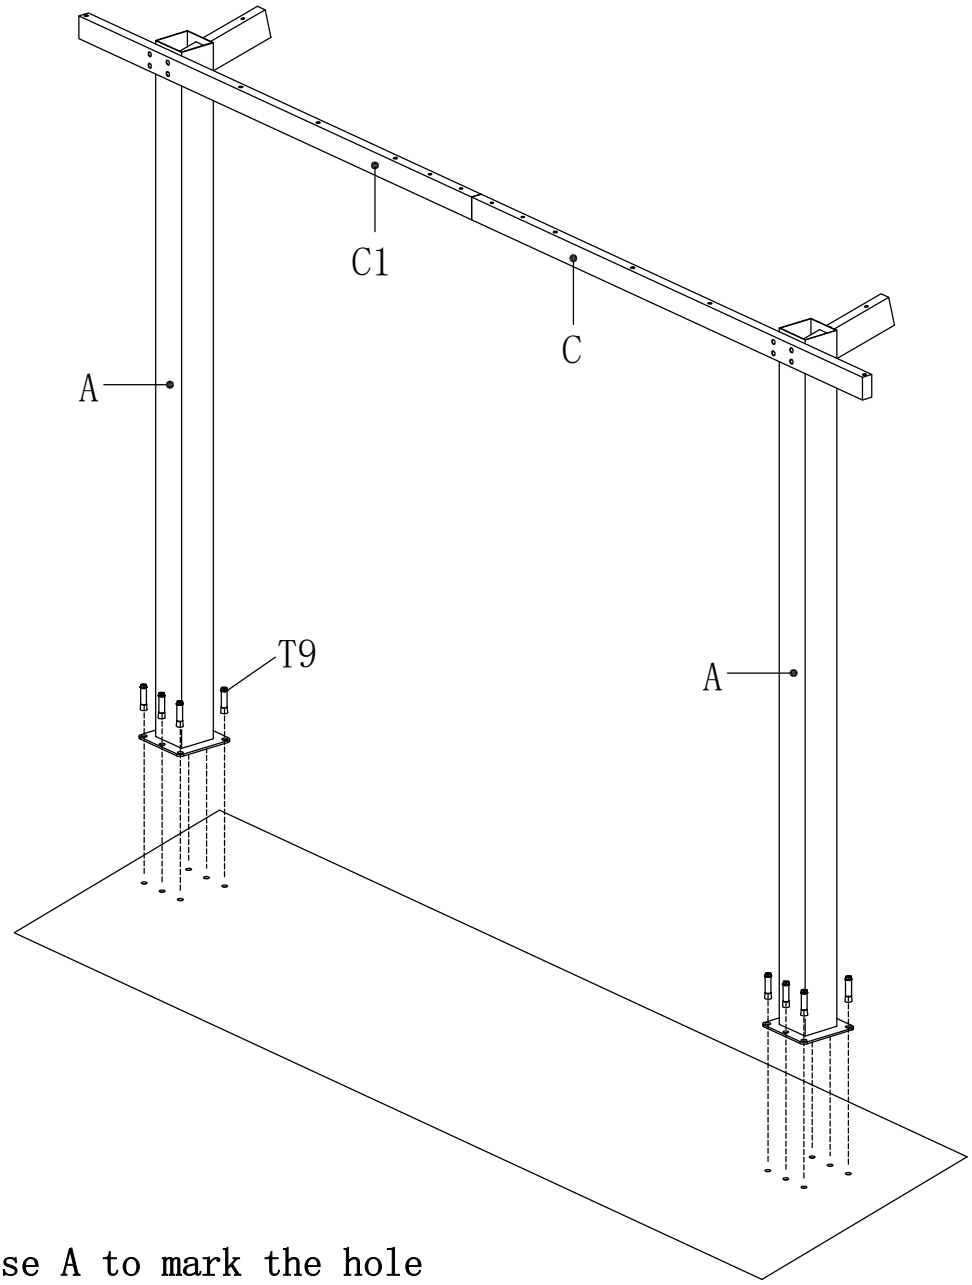
A		x2
T1	 ¢12×30	x8

STEP 2

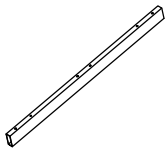



T9		x12


STEP 3



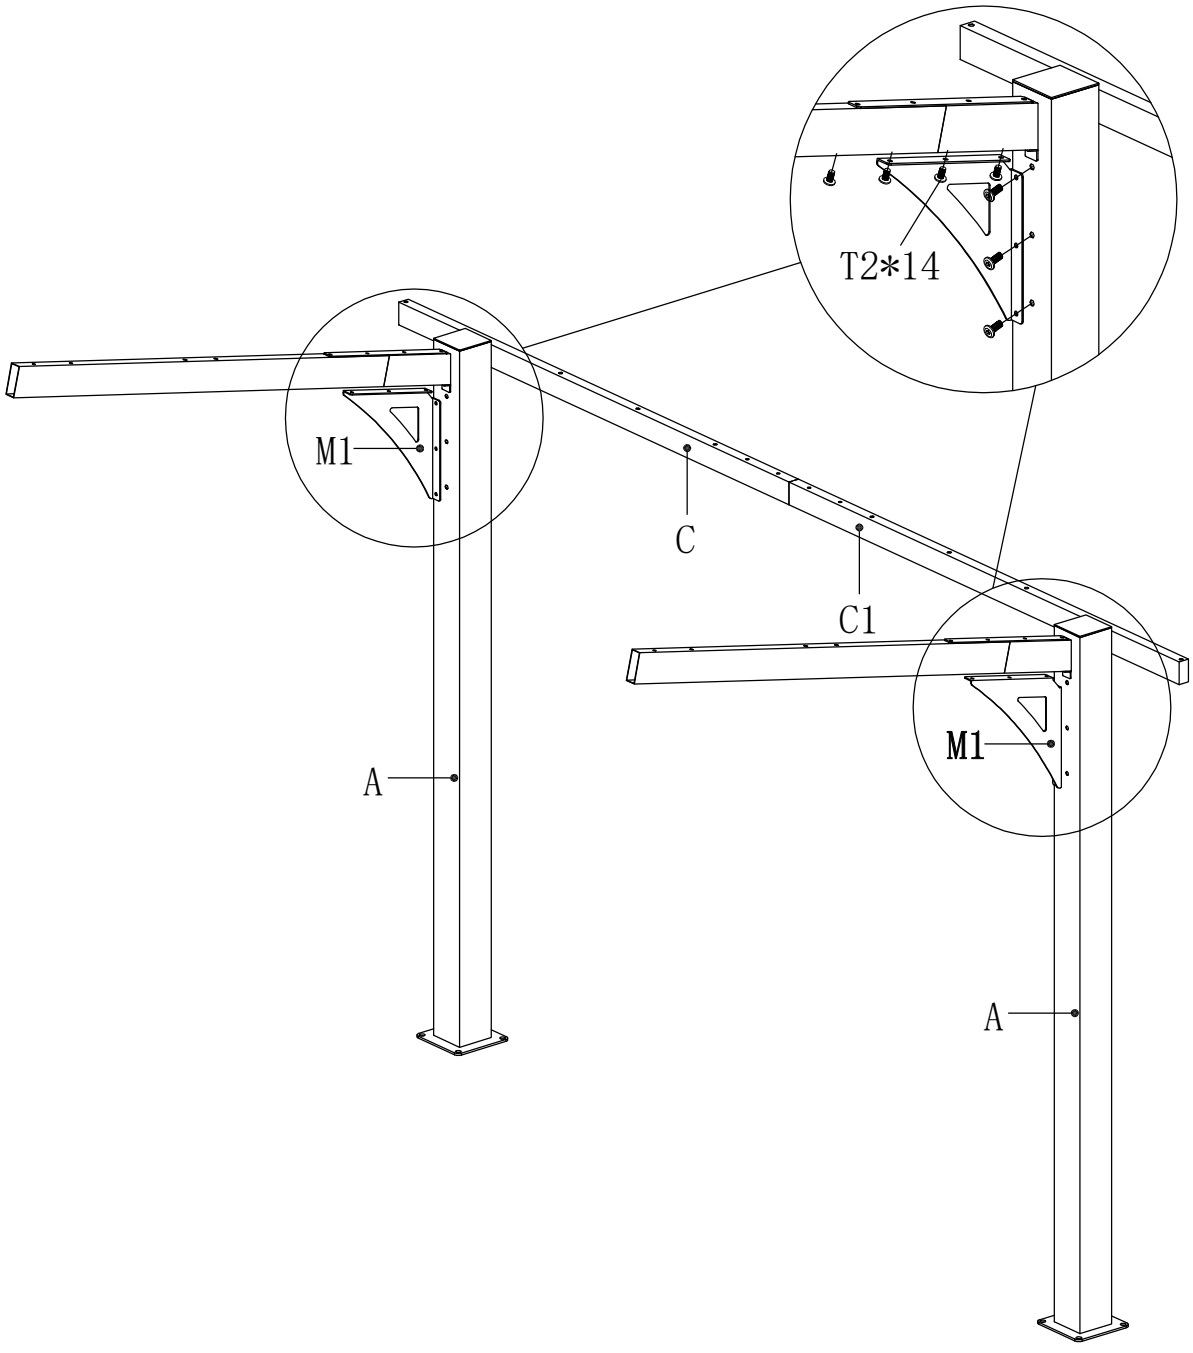
First, use A to mark the hole positions on the high-hardness concrete floor, then move A away to drill; otherwise, there will be interference duri.

B1		x2
M2		x2
M3		x2
T2	 M6*12	x8

STEP 4

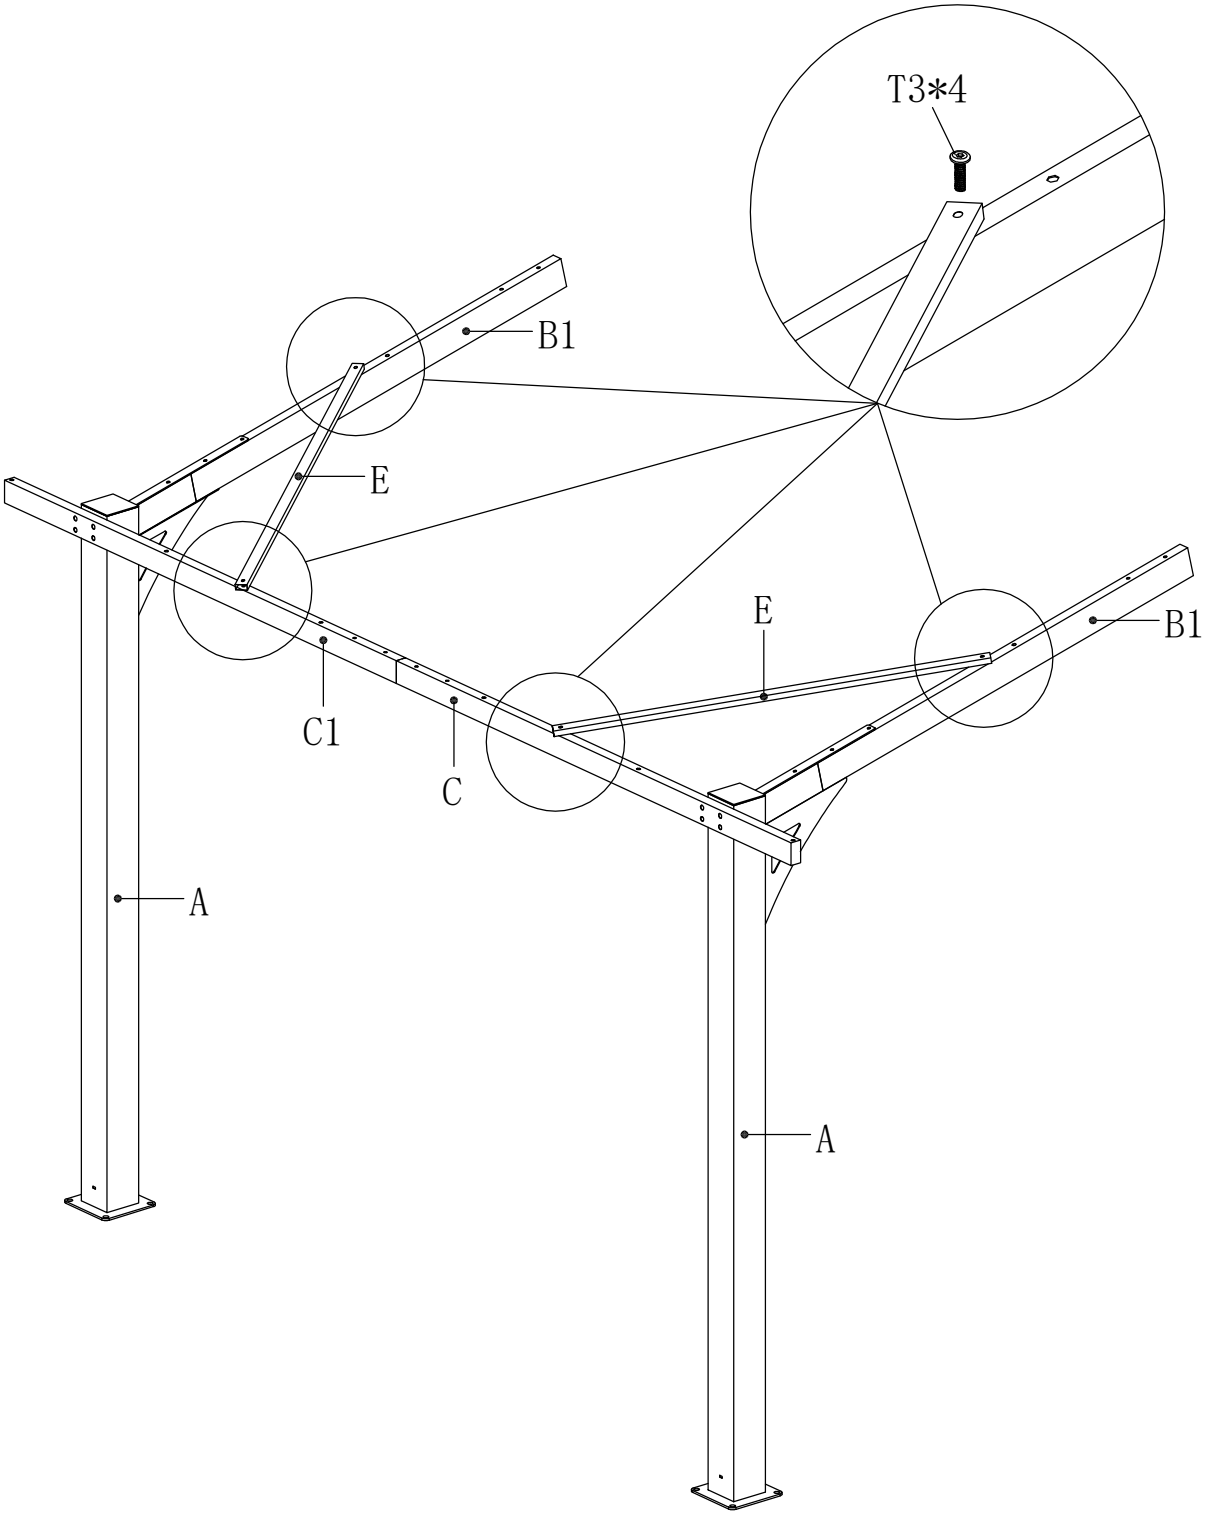
M1		x2
T2	 M6*12	x14

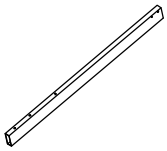

STEP 5



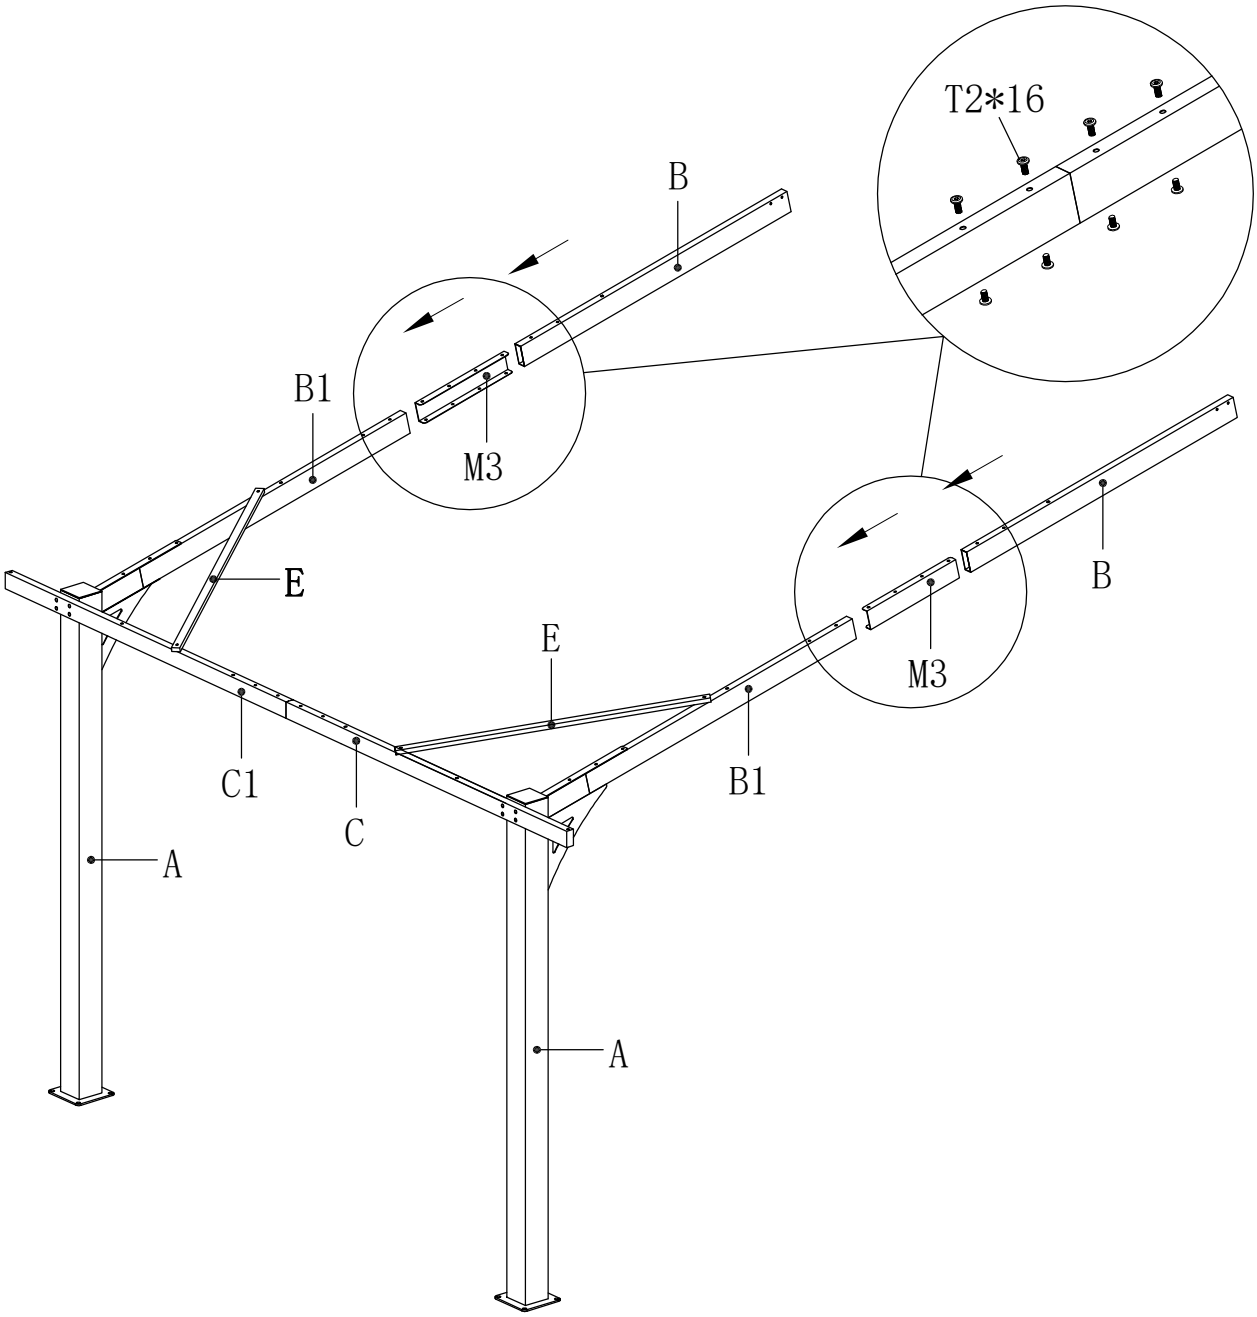
E		x2
T3	 M6*30	x4



STEP 6



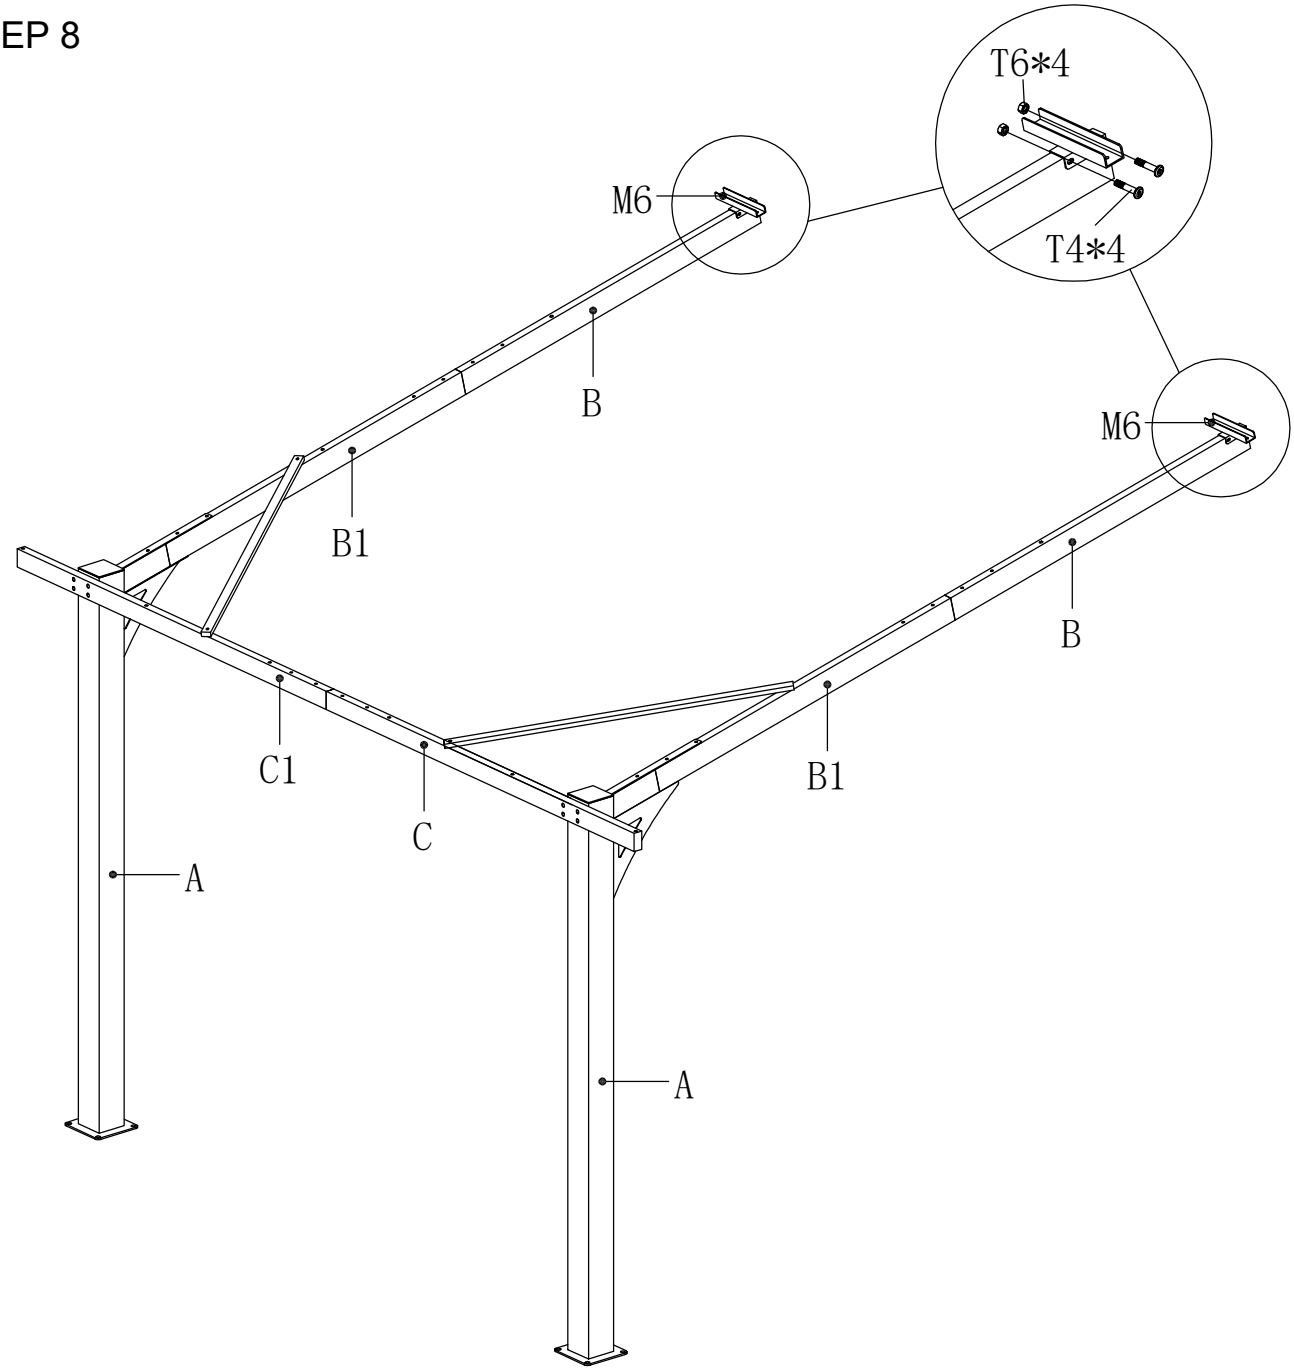
B		x2
M3		x2
T2	 M6*12	x16




STEP 7



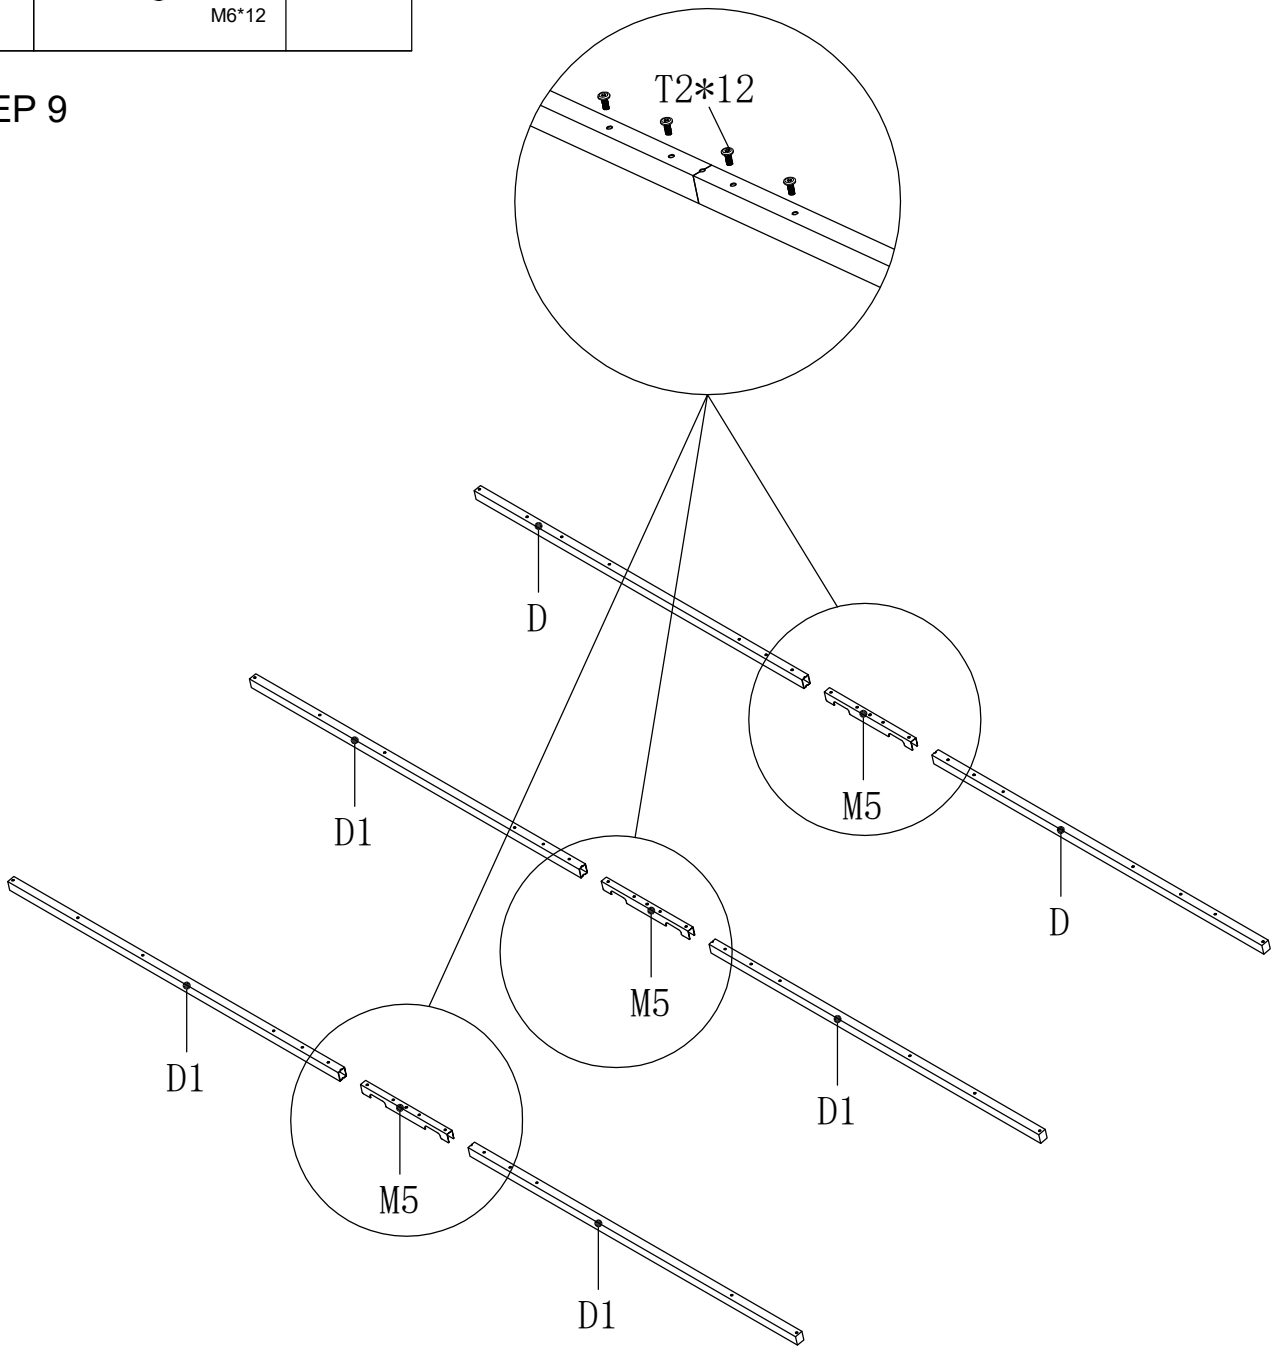
M6		x2
T4	 M6*45	x4
T6	 M6	x4


STEP 8



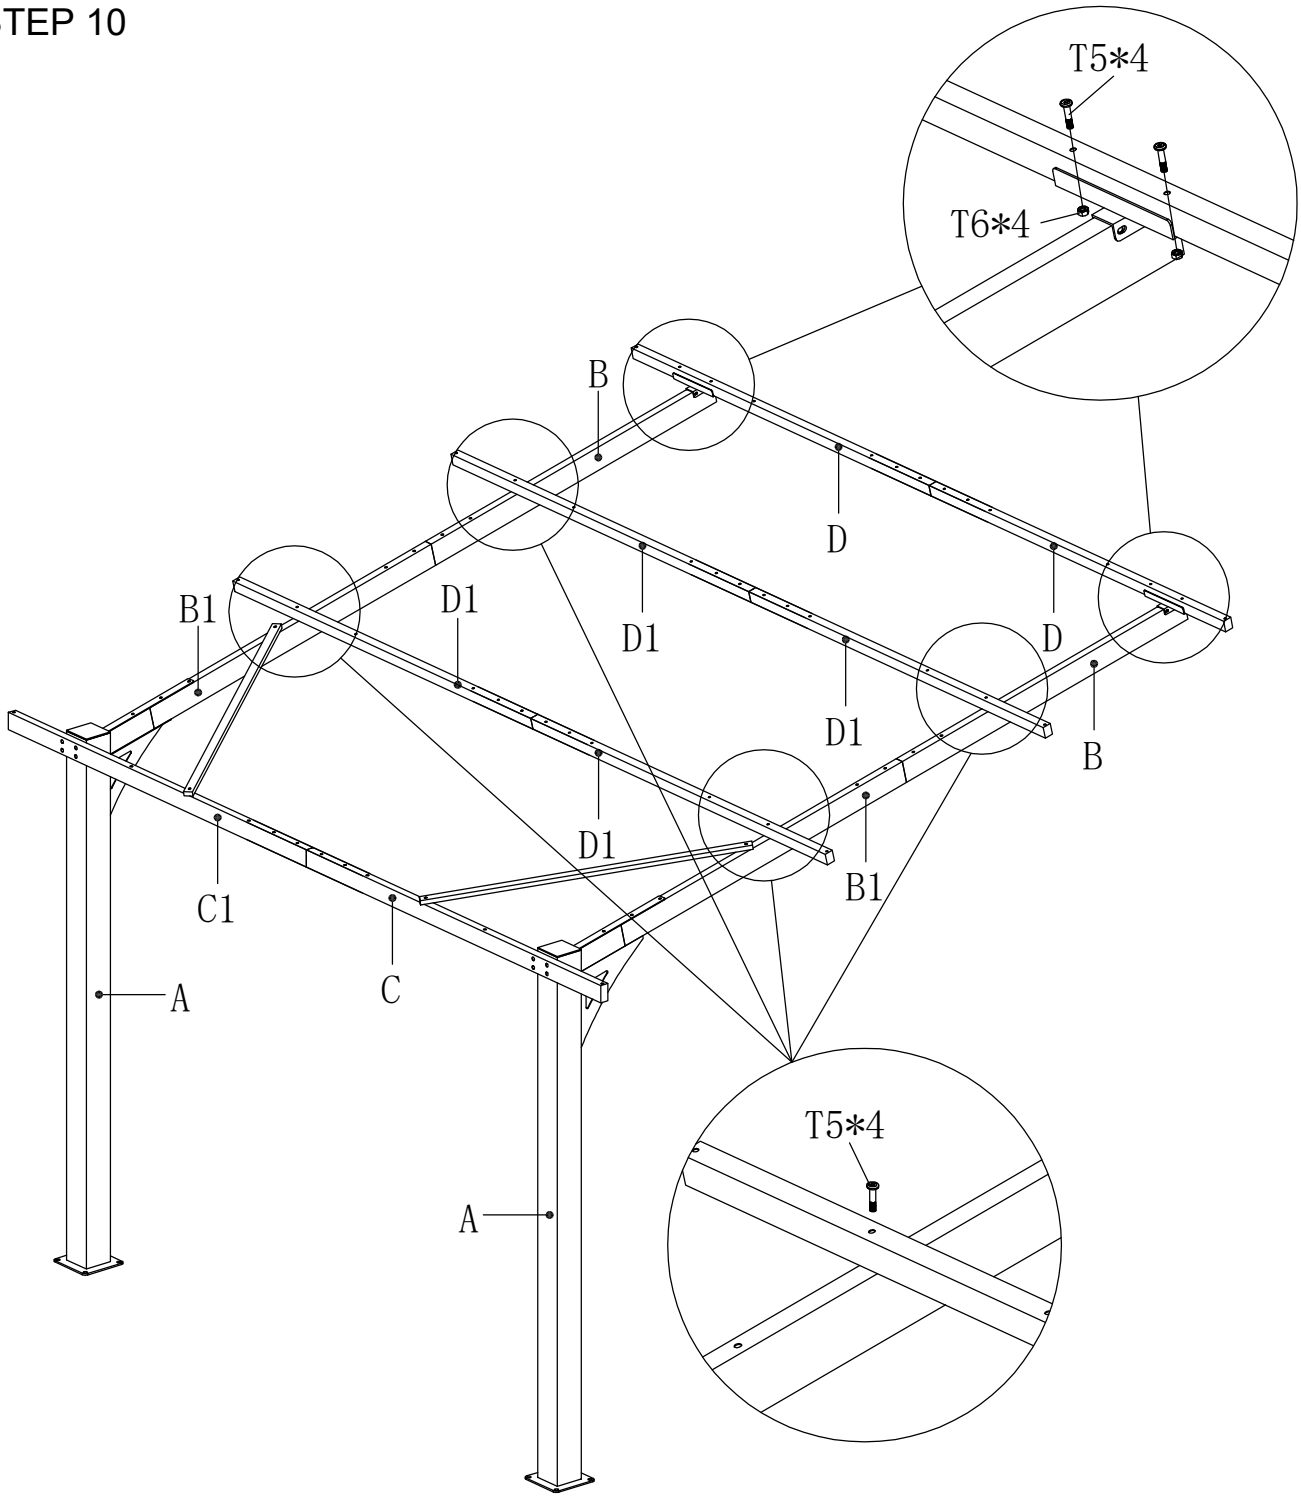
D		x2
D1		x4
M5		x3
T2	 M6*12	x12

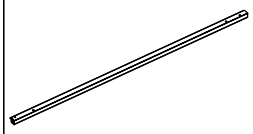
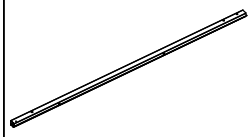
STEP 9





T5	 M6*55	x8
T6	 M6	x4

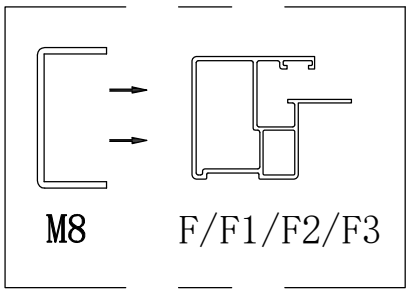
STEP 10

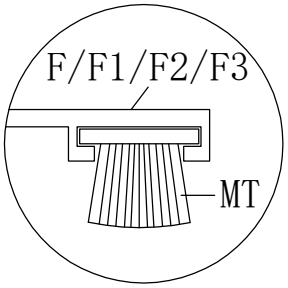


F		x1
F1		x1
F2		x1
F3		x1
MT		x1

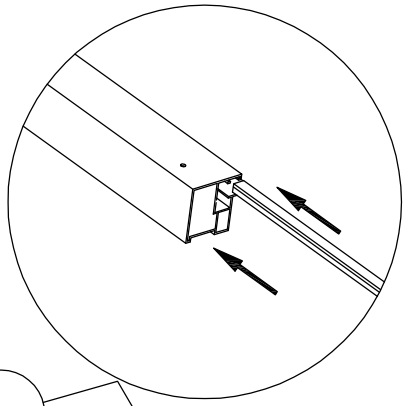
M8		x2
T4	 M6*45	x8
T6	 M6	x8
T10		x8

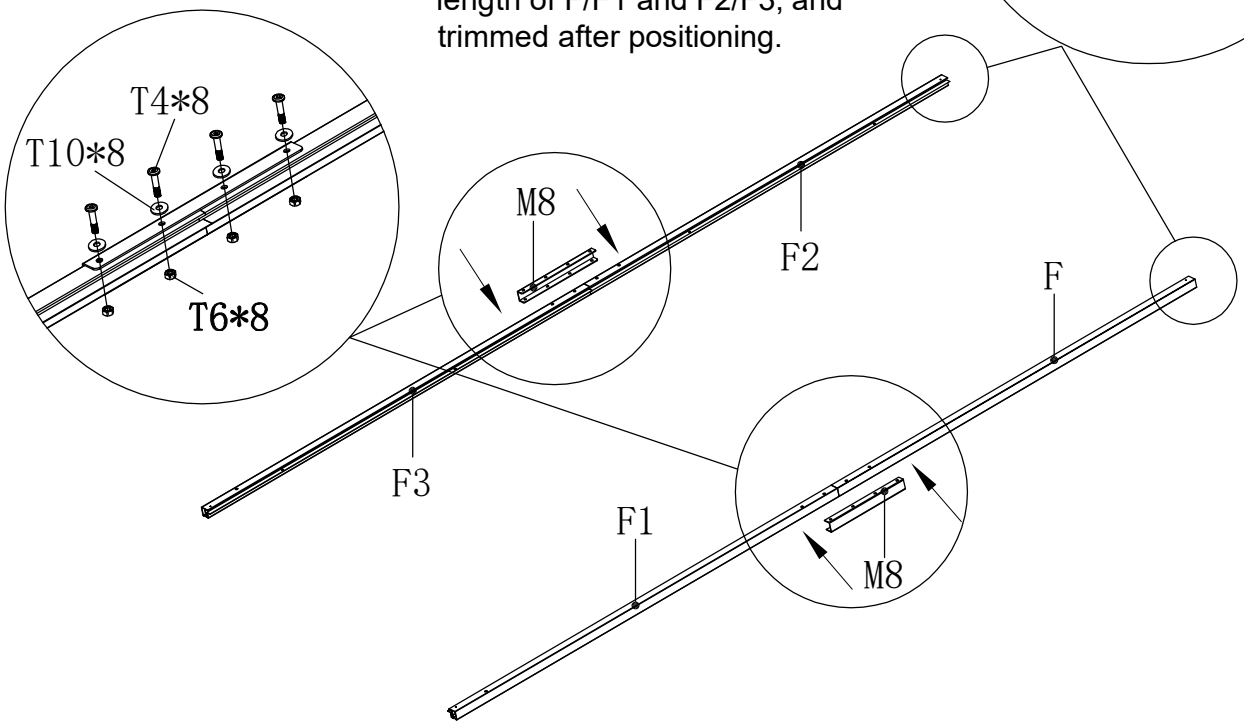
STEP 11

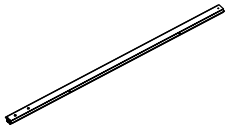
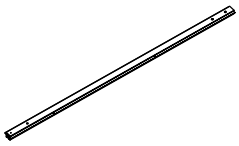







MT is used for waterproofing, in order to make P more compact, the part with fluff is placed downwards, inserted into the groove, and the length is the same as the assembly length of F/F1 and F2/F3, and trimmed after positioning.

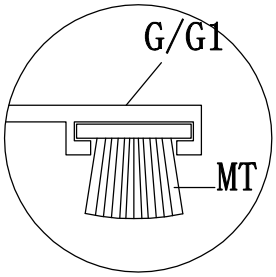


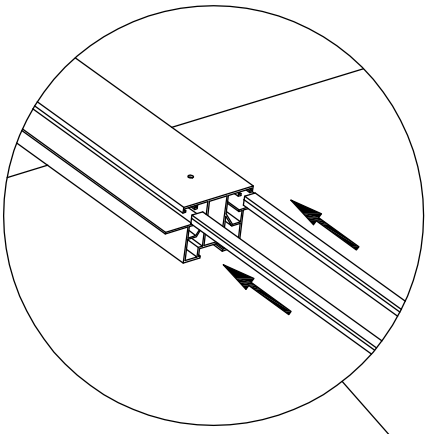


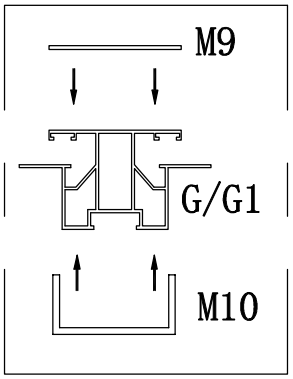
G		x4
G1		x4
M9		x4
M10		x4

MT		x1
T4	 M6*45	x16
T6	 M6	x16
T10		x16

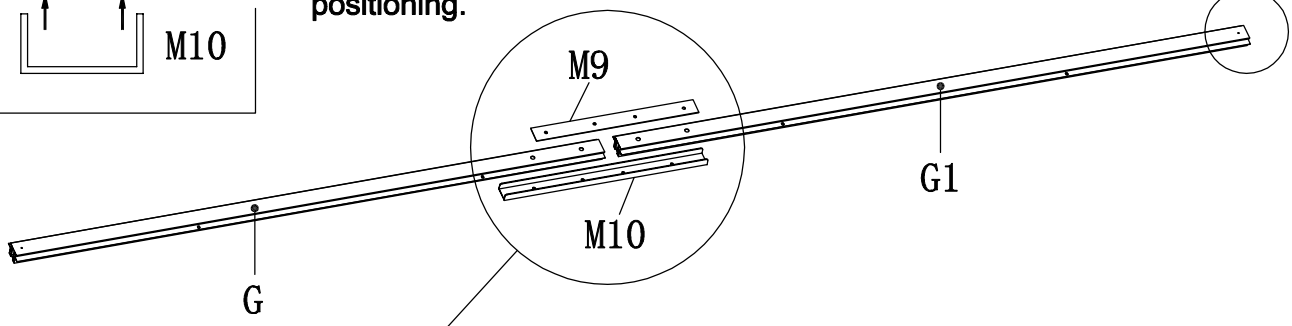
STEP 12

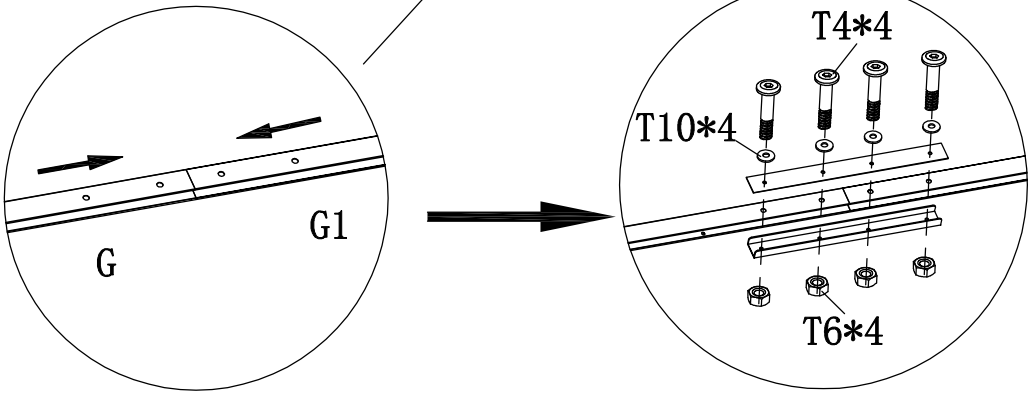








MT is used for waterproofing, in order to make P more compact, the part with fluff is placed downwards, inserted into the groove, and the length is the same as the assembly length of G/G1, and trimmed after positioning.

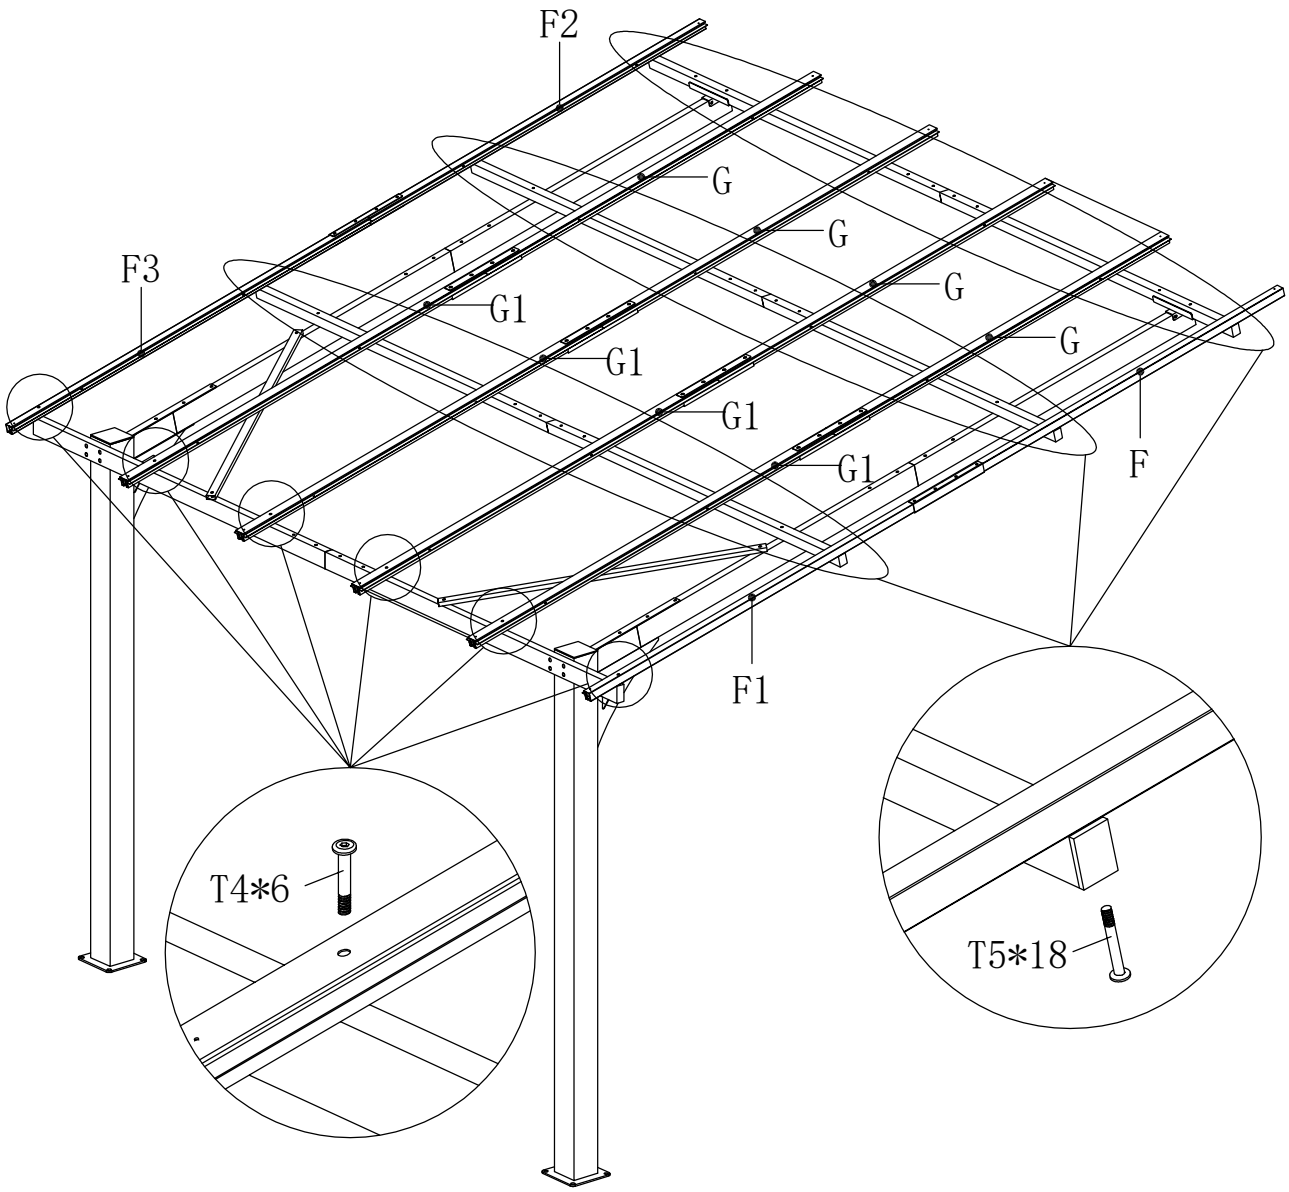


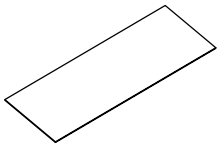


X4

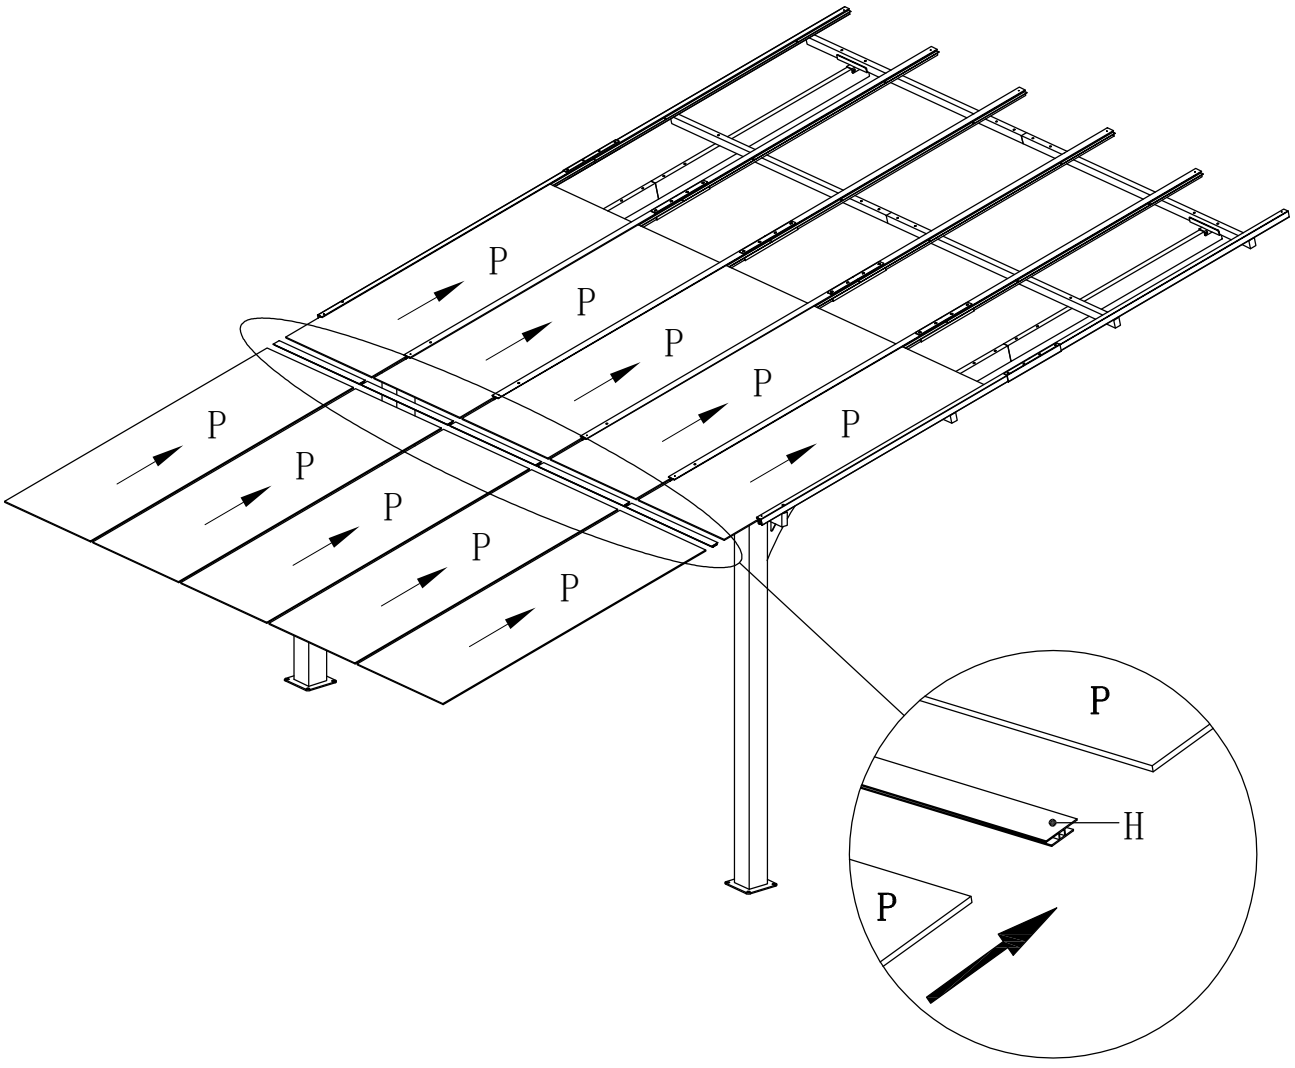
T4	 M6*45	x6
T5	 M6*55	x18




STEP 13




P		x10
H		x5

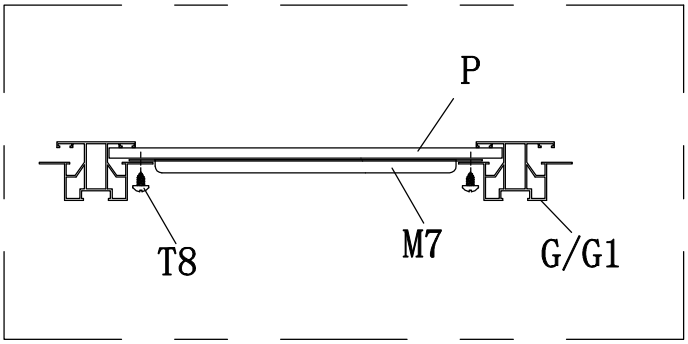
STEP 14



J		x2
J1		x2
J2		x2
R		x4
T7	 M4 x 12	x12

STEP 15

M7		x20
T8	 M4 * 6	x40



STEP 16

