


# ASSEMBLY INSTRUCTIONS

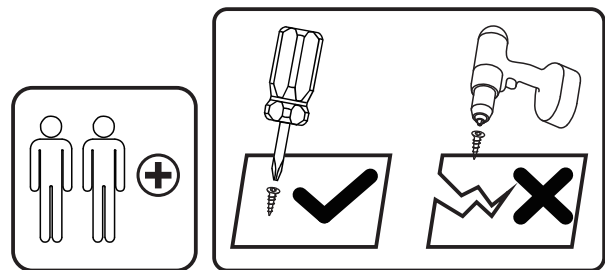

## Tools Recommended

THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

*Need Parts or Assistance? Email us at [cs@nbrehome.com](mailto:cs@nbrehome.com)*

# IMPORTANT NOTICE

- This product contains small components, please ensure that they are kept away from small children.
- THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.
- Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included. Most parts are labelled or stamped on the raw edge.
- Work in spacious area, preferably on a carpet, near the place the unit will be used.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or pull your furniture (especially on carpet)




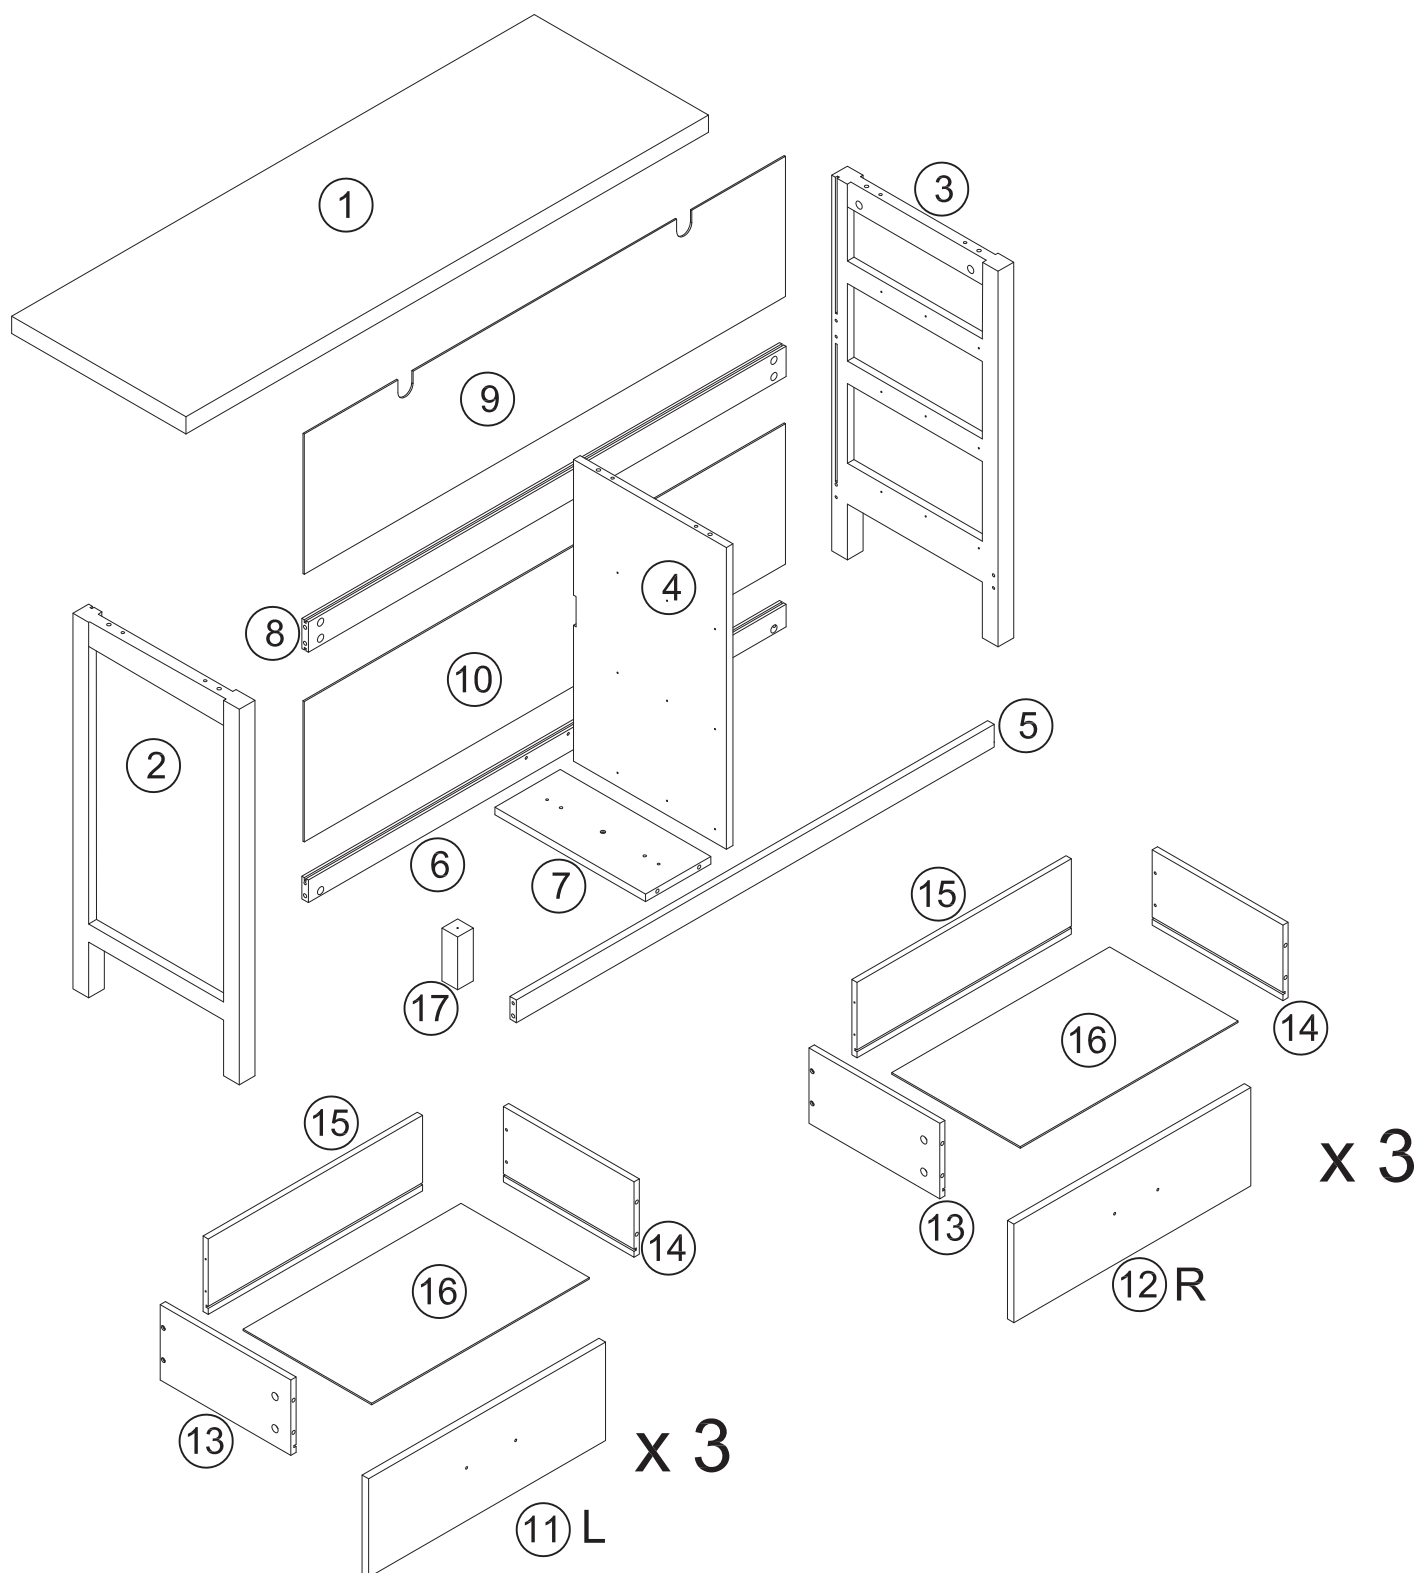
## PLEASE DO NOT RETURE PRODUCT TO US IMMEDIATELY





















If a part is missing or damaged, email our customer service.  
We will gladly ship your replacement parts FREE of charge.

Need Parts or Assistance? Email us at [cs@nbrehome.com](mailto:cs@nbrehome.com)


For Prompt, reliable service, please have your assemble instruction ready.

 <b>WARNING</b>	
	<p><b>Children have died from furniture tipover. To reduce the risk of furniture tipover:</b></p> <ul style="list-style-type: none"><li>• ALWAYS install tipover restraint provided.</li><li>• NEVER put a TV on this product.</li><li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li><li>• NEVER open more than one drawer at a time.</li><li>• Place heaviest items in the lowest drawers.</li></ul>
	




<b>A</b> x42	<b>B</b> x42	<b>C</b> x12	<b>D</b> x72	<b>E</b> x4	<b>F</b> x24	<b>G</b> x12
 Ø6x35mm	 4x16mm	 6x30mm	 3.5x12mm	 5x40mm	 4x30mm	 3x14mm
<b>H</b> x12	<b>I</b> x12	<b>J</b> x6	<b>K</b> x2	<b>L</b> x2	<b>M</b> x2	<b>N</b> x2
 4x16mm	 4x16mm	 4x16mm	 4x12mm	 4x12mm	 4x35mm	 4x35mm
<b>O</b> x4	<b>P</b> x1	<b>CL</b> x6	<b>CR</b> x6	<b>DL</b> x6	<b>DR</b> x6	
 4x16mm	 4x16mm	 4x16mm	 4x16mm	 4x16mm	 4x16mm	


# STEP 1

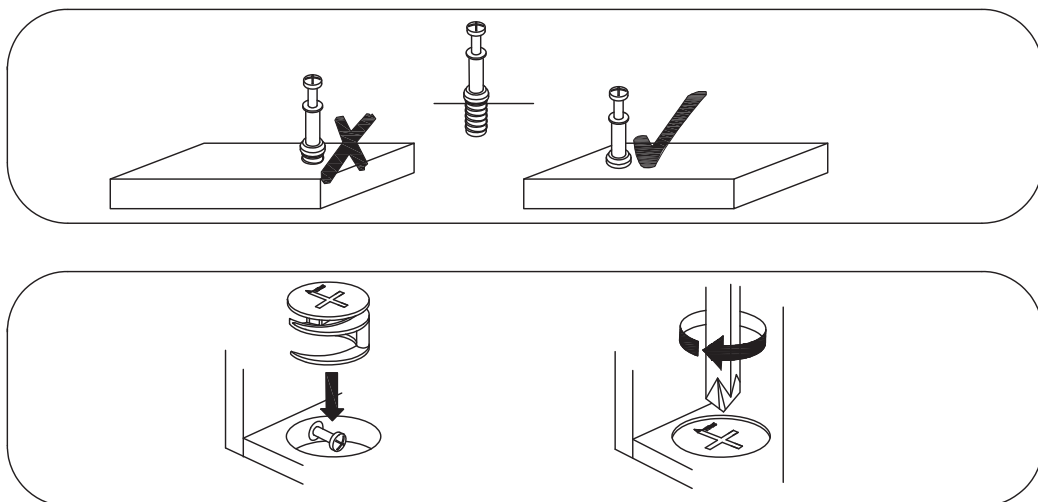

First Lock the guide rail CL to the right side of the part 4 with screw D, then turn it 180 degrees and lock the guide rail CR to the left side of the part 4 with the screw D, the installation position is as shown below.

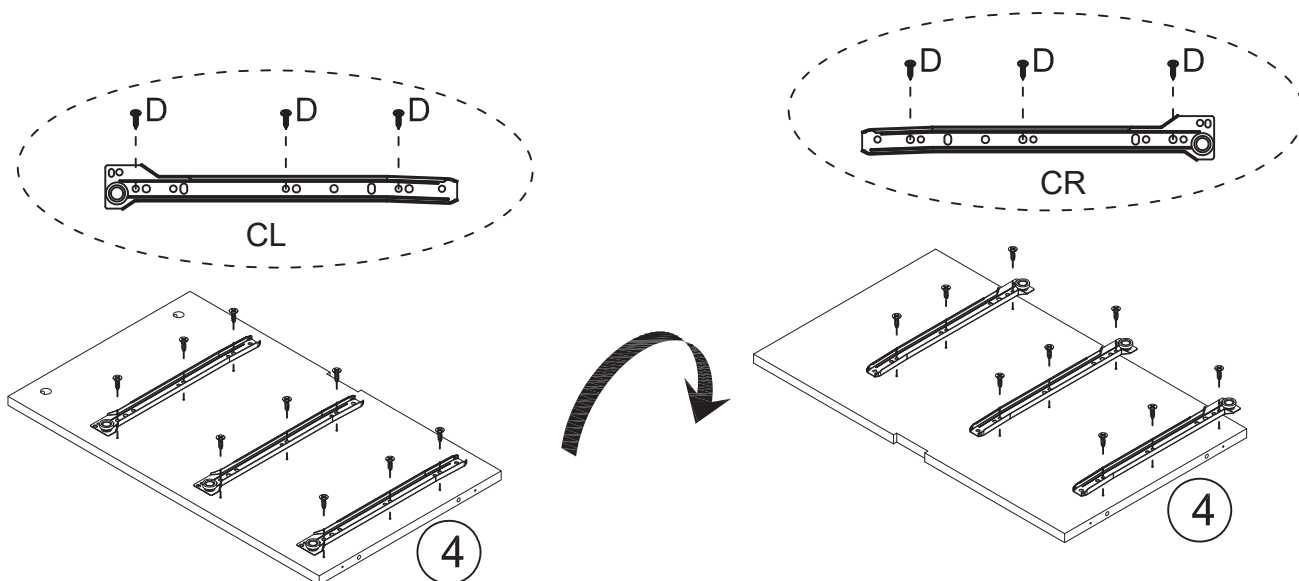


Insert screw A into corresponding holes in part 2 & part 3 as shown, then attach mat O to the legs bottom as shown.

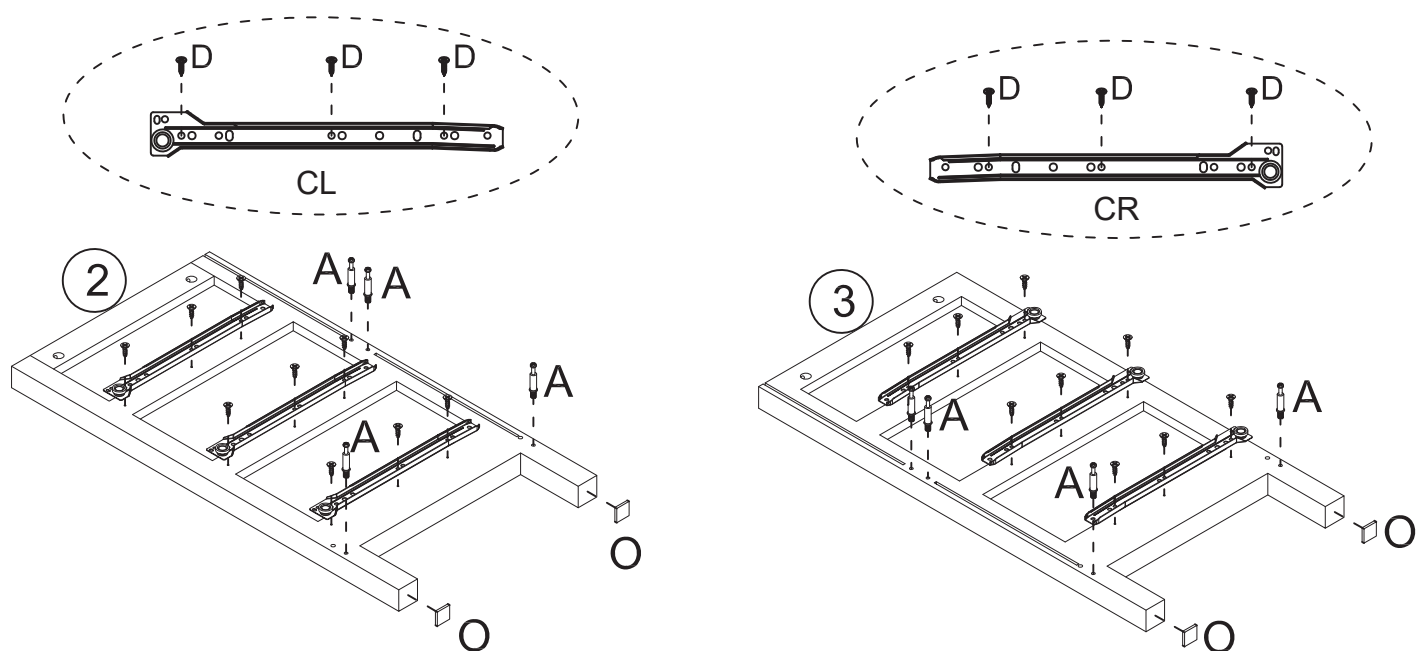

O x4	D x36	CL x6	CR x6	A x8


## STEP 2

Install the screw A on the part 6,5  
and then put the eccentric B into the corresponding holds and use a screwdriver to turn it  
clockwise to tighten, the installation position is as shown below.

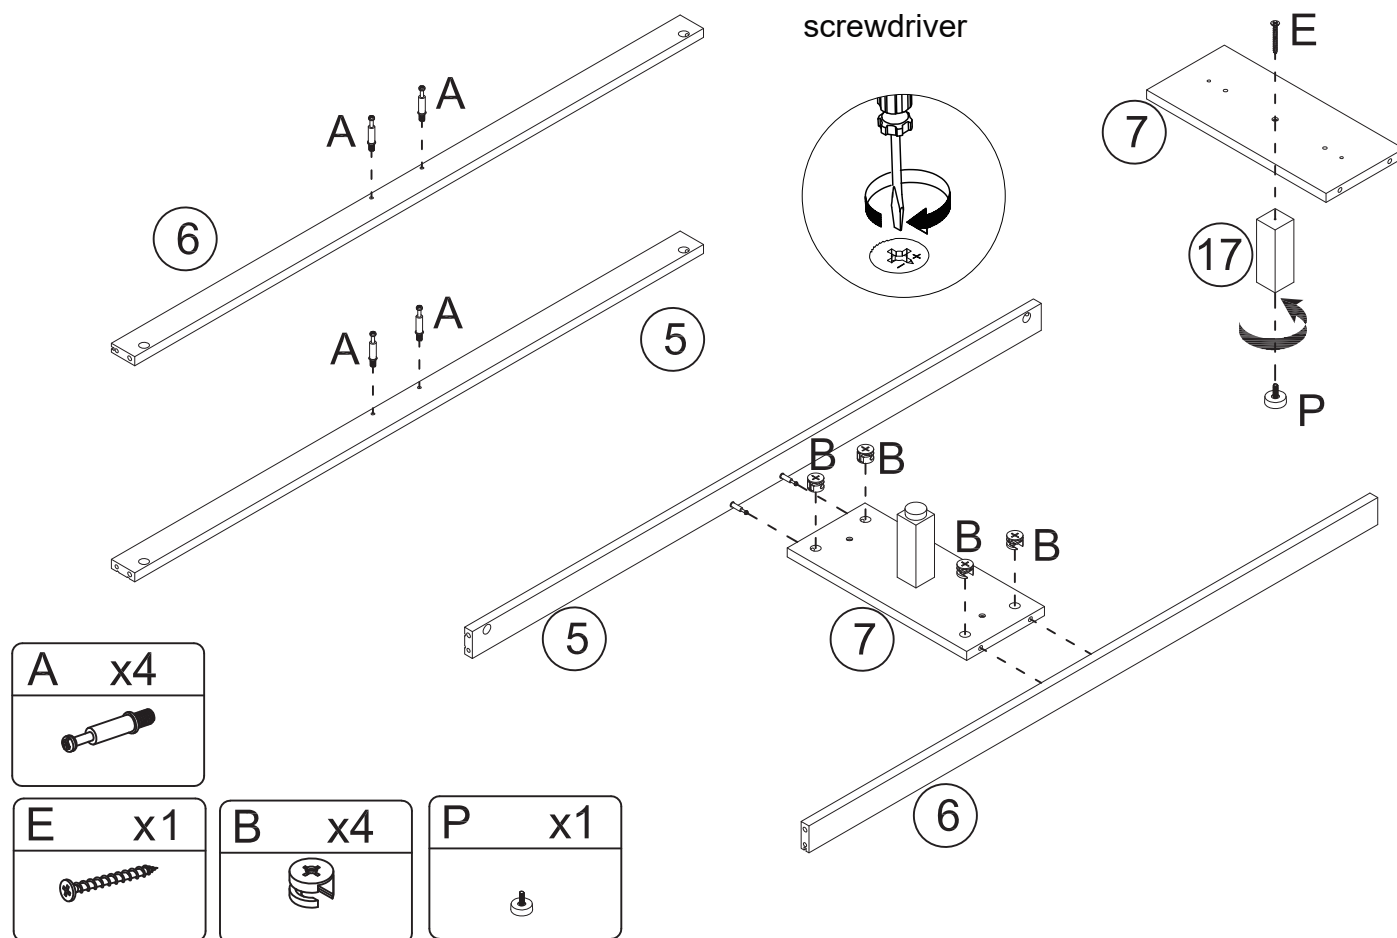


## STEP 3

Insert the dowel C into part 4 first, then  
assemble parts 8,6,5 and part 4 with  
screw E, the installation position is as  
shown below.



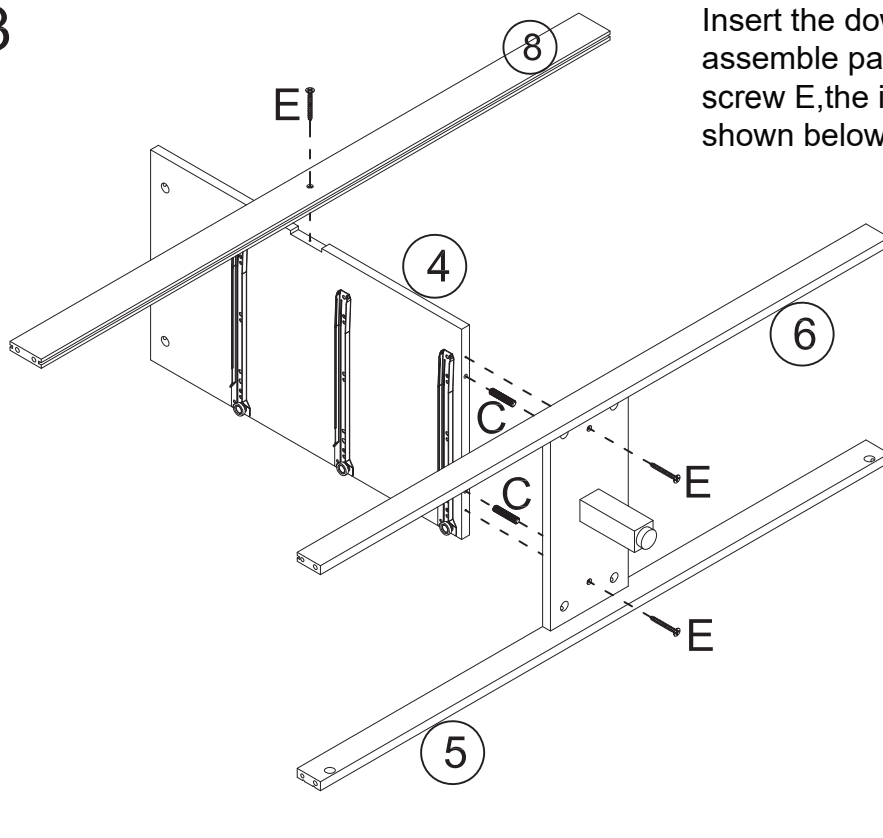


## STEP 4

Insert the dowel C into part 2 first, then assemble parts 8, 6, 5 and part 2, put the eccentric B into the corresponding holes and use a screwdriver to turn it clockwise to tighten, the installation position is as shown below.

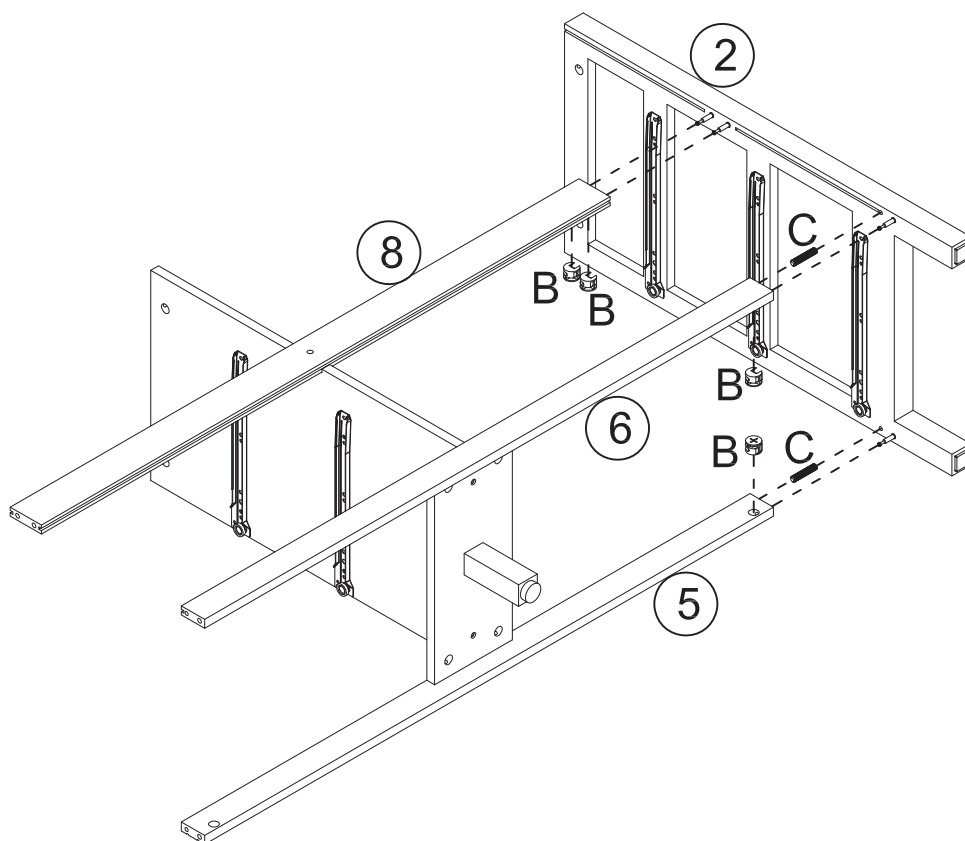


screwdriver

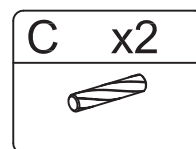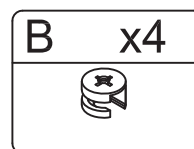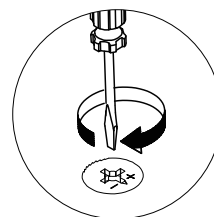


## STEP 5

Insert part 10 along the slot, the position is as shown below.

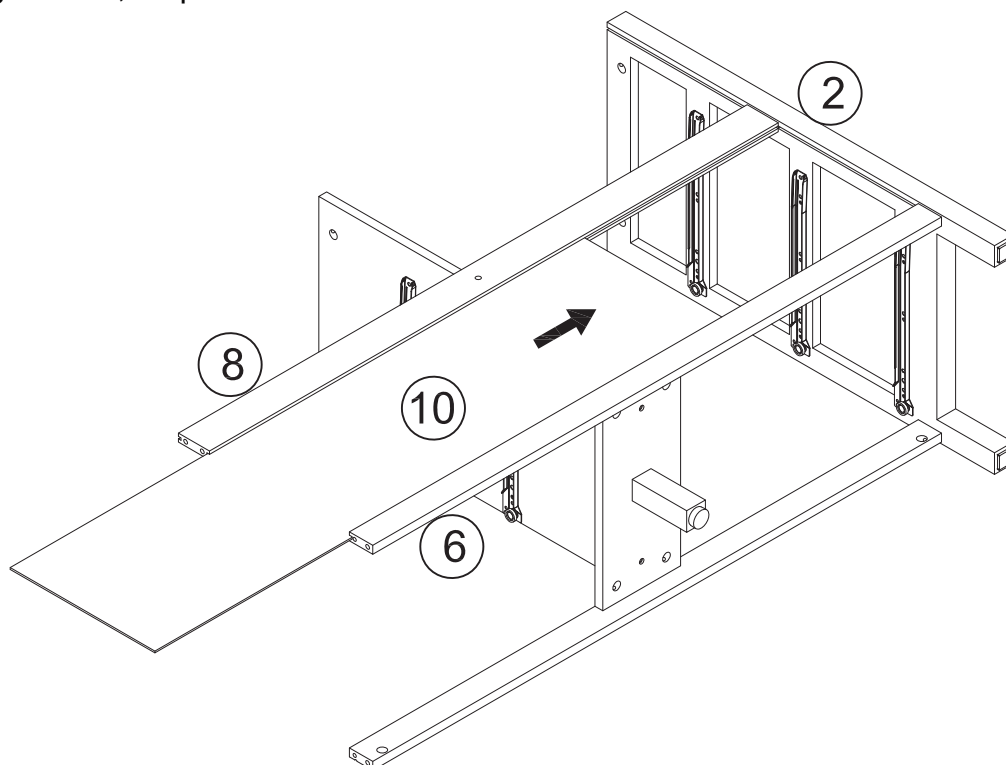


## STEP 6

Insert the dowel C into part 3 first, then assemble parts 8, 6, 5 and part 3, put the eccentric B into the corresponding holes and use a screwdriver to turn it clockwise to tighten, the installation position is as shown below.

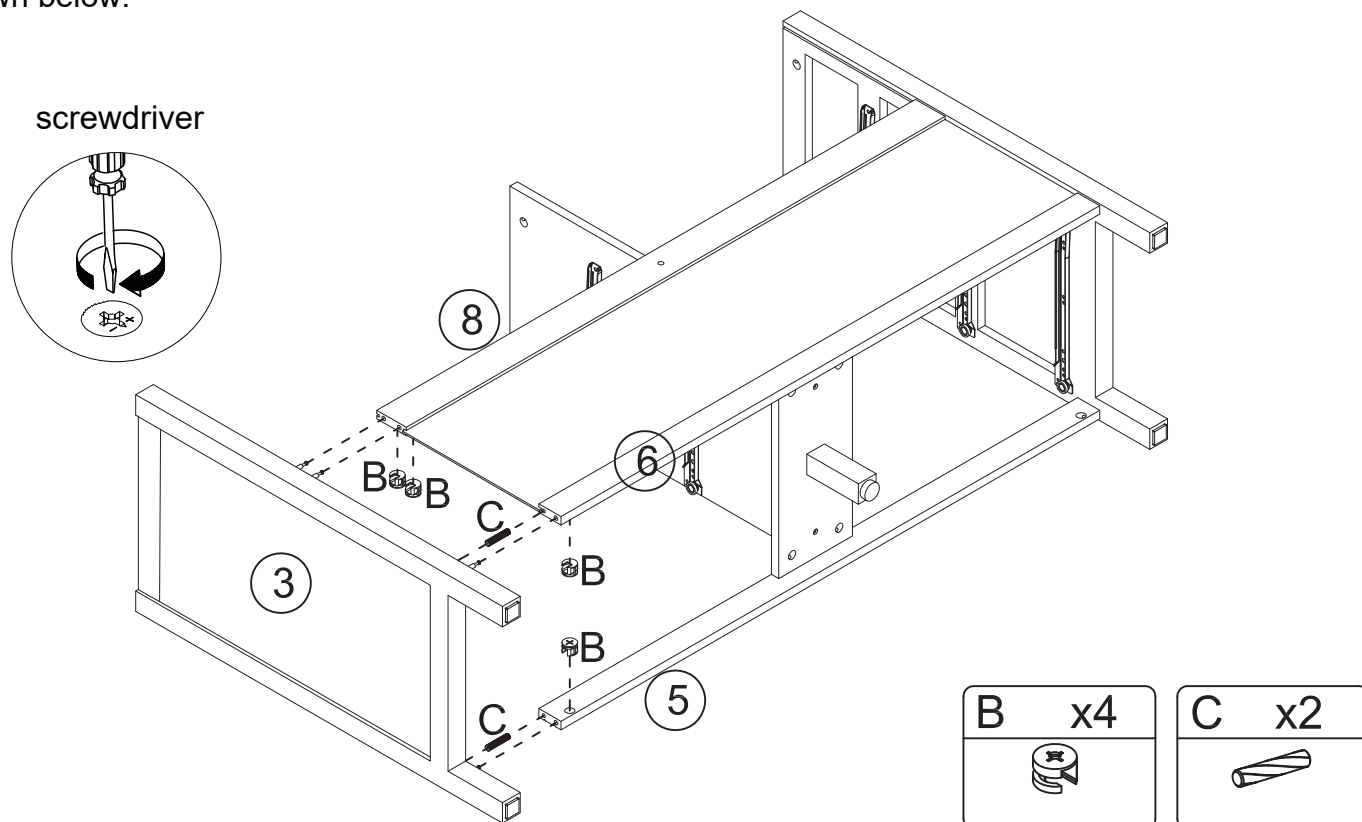


## STEP 7

Insert part 9 along the slot, the position is as shown below


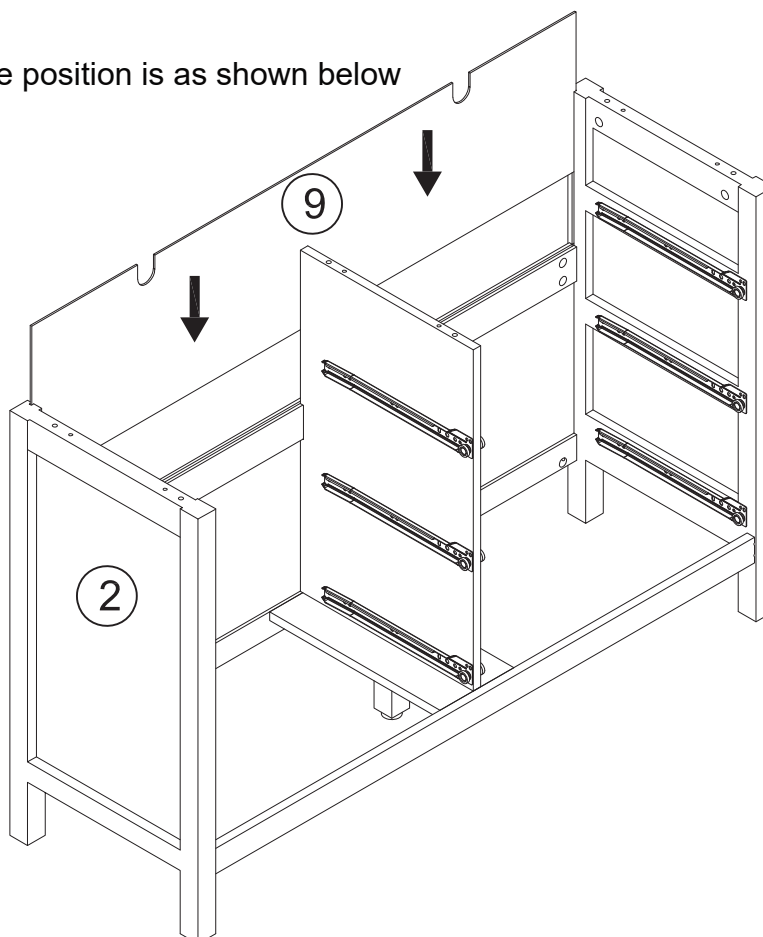




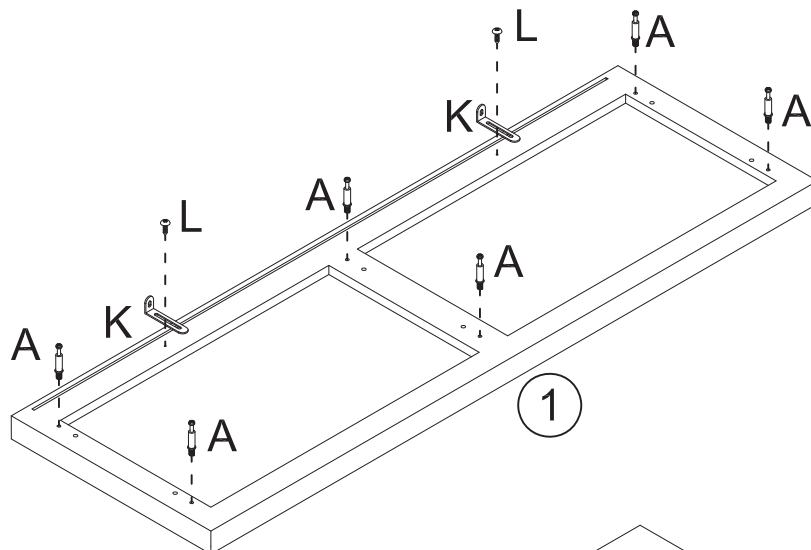


# STEP 8

Install the screw A on the part 1,fasten the L-shaped iron piece K with screw L;  
Insert the dowel C into part 2,3,4,then assemble parts 2,3,4 and part 1,put the  
eccentric B into the corresponding holes and use a screwdriver to turn it clockwise to tighten, the  
installation position is as shown below.

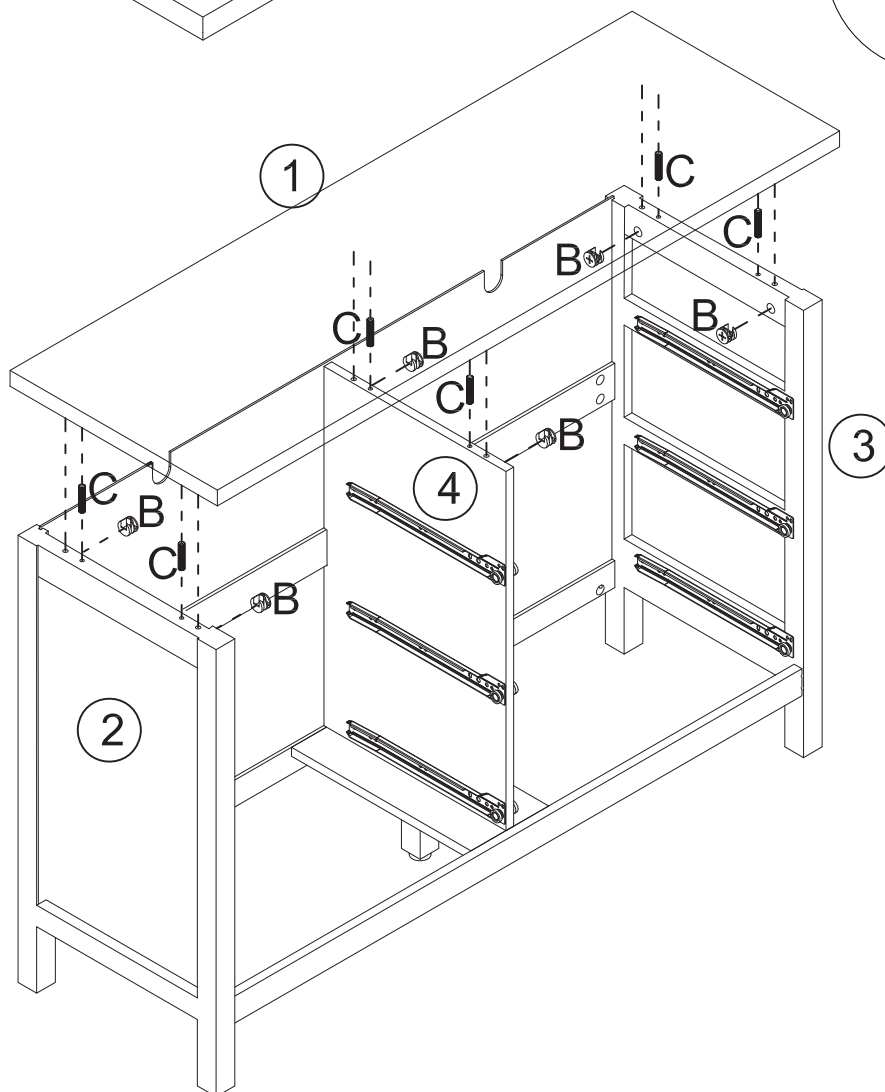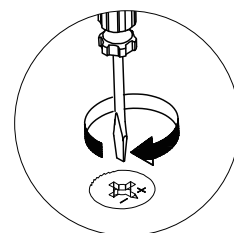

screwdriver




A x6	K x2	L x2	B x6	C x6
				




STEP 9

Use the screws in component G&H to fasten the back plate buckle.  
The installation position is as shown in the figure below.

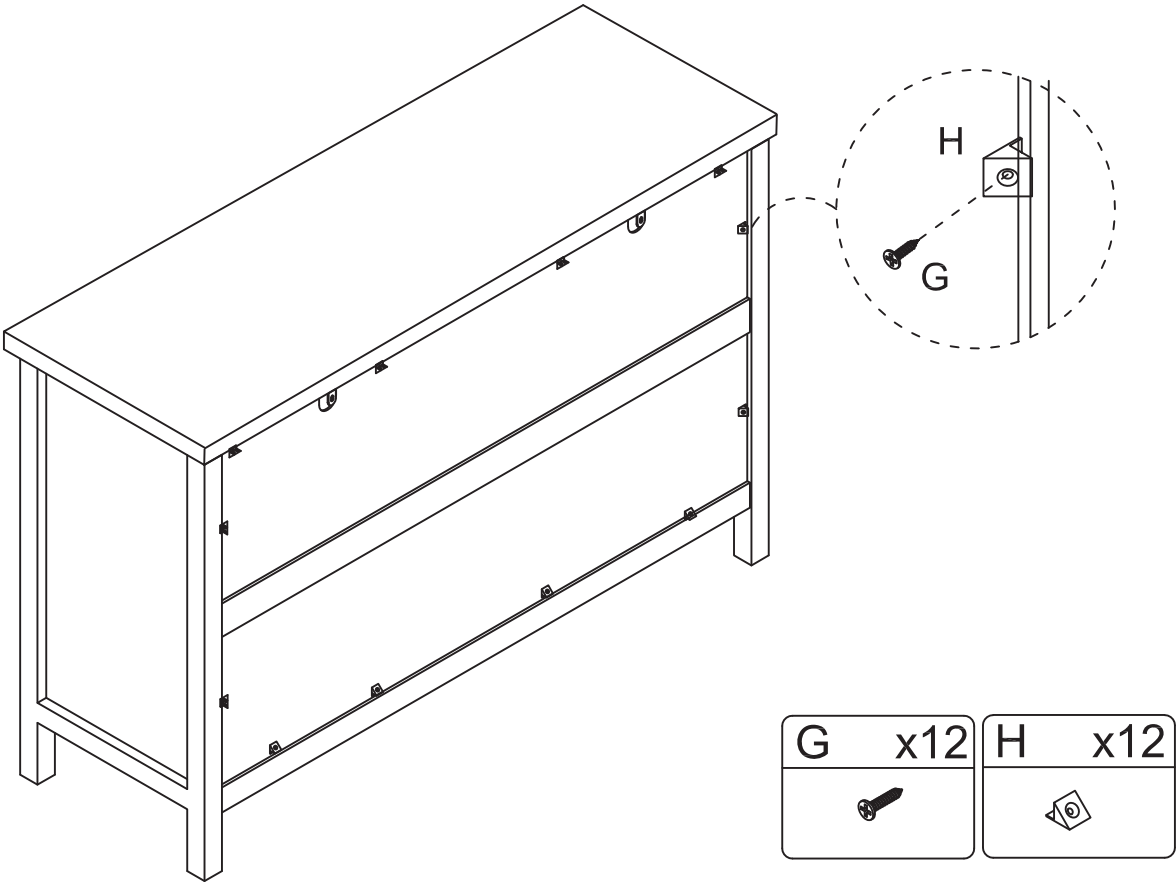


STEP 10

First drill holes on the wall where it is placed, and then use the long screw and expansion screw M to fix the cabinet with screw N.  
The installation location is as shown in the figure below.

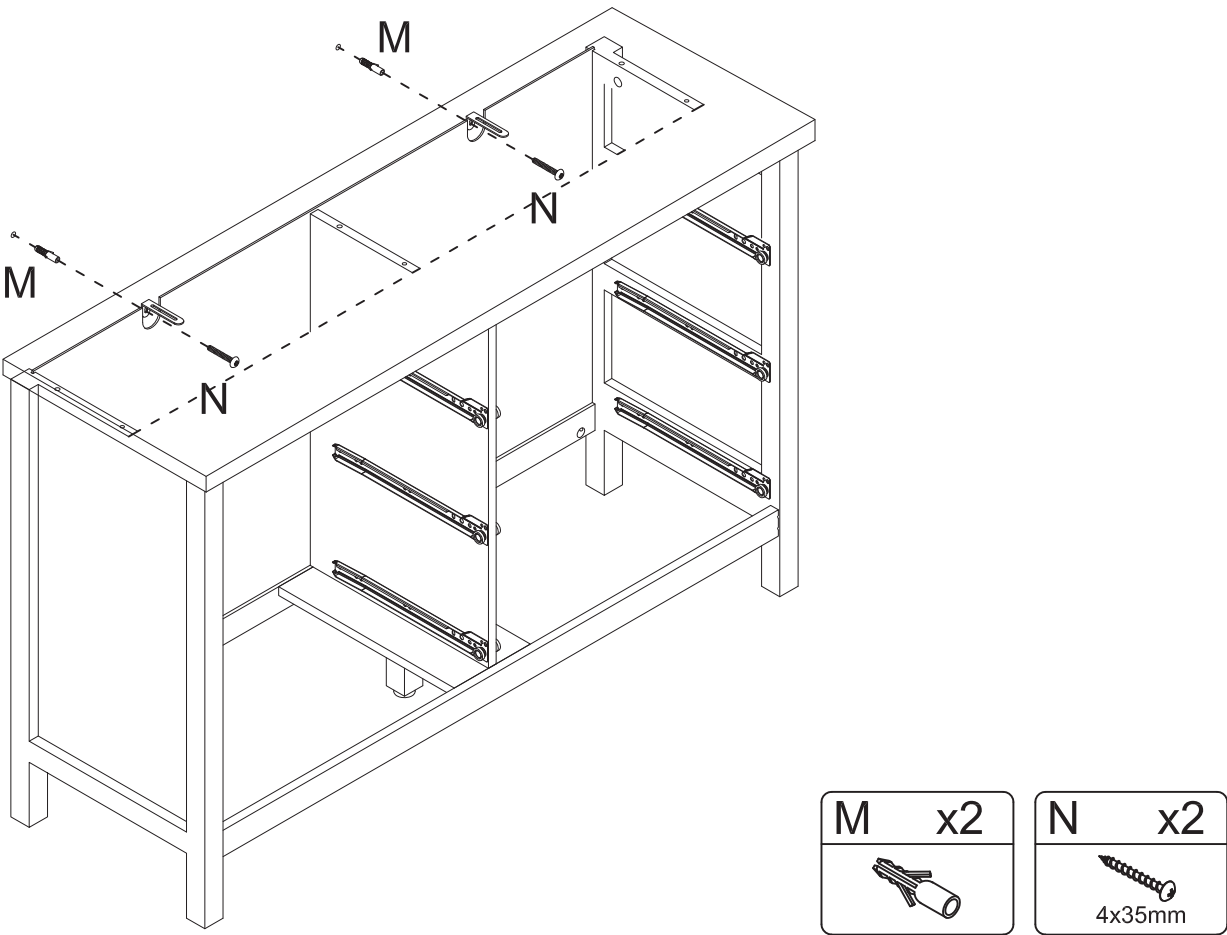


# STEP 11

**x 3** Install the screw A on the drawer panels 11 first, and then use the screw I to lock the handle J on the drawer left panels 11.


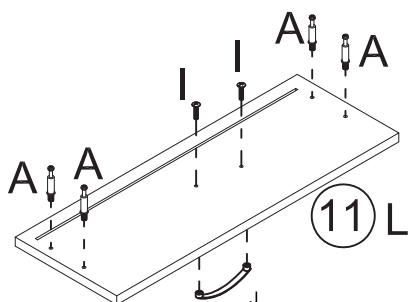


Use the screw F to assemble the side panels 13, 14 and the back panel 15.

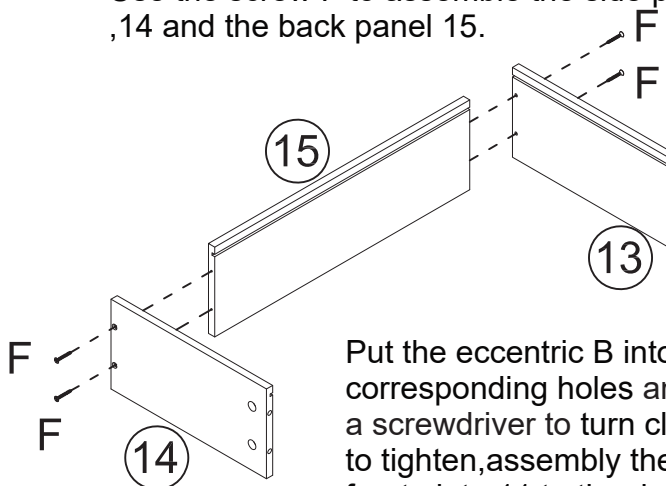


Put the eccentric B into the corresponding holes and use a screwdriver to turn clockwise to tighten, assembly the drawer front plate 11 to the drawer.












Insert the bottom plate 16 according to the slot of side plate.

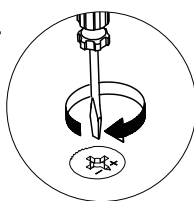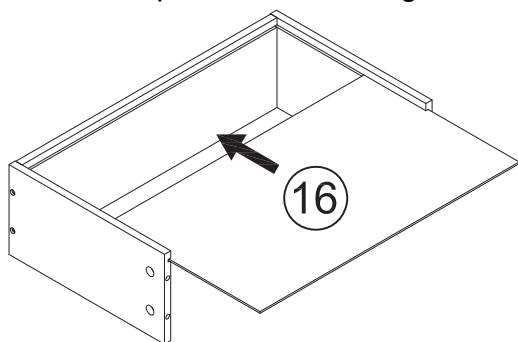

screwdriver

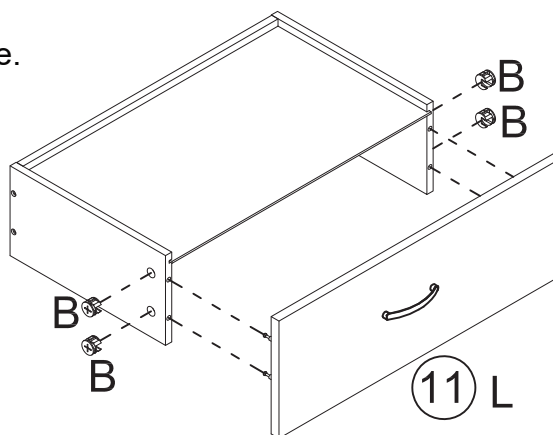


Use the screw D to install the guide rail DR on the side panel 14, and install the guide rail DL on the side panel 13. the installation position is as shown in the figure below.

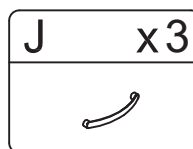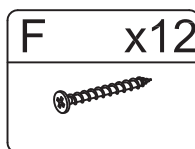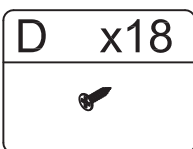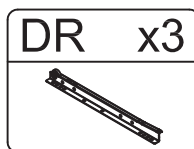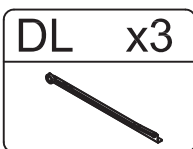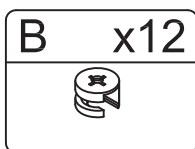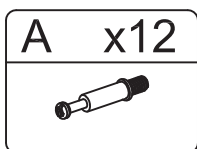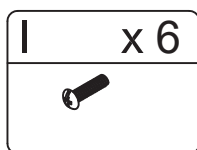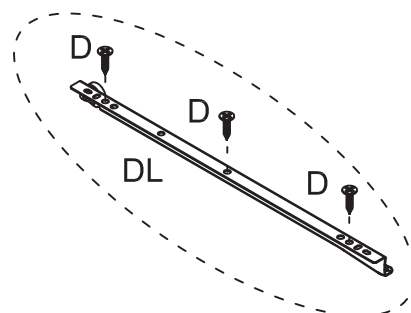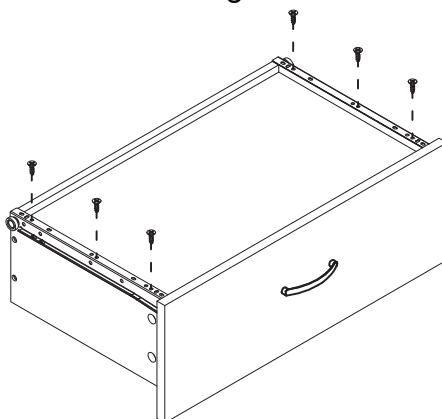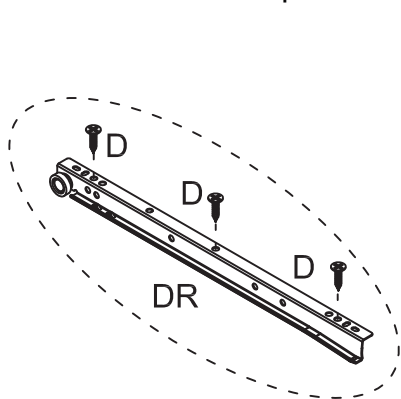


# STEP 12

x 3

Install the screw A on the drawer panels 12 first, and then use the screw I to lock the handle J on the drawer right panels 12.


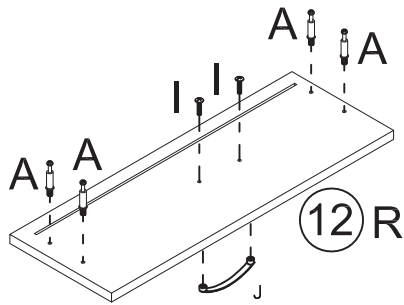


Use the screw F to assemble the side panels 13, 14 and the back panel 15.

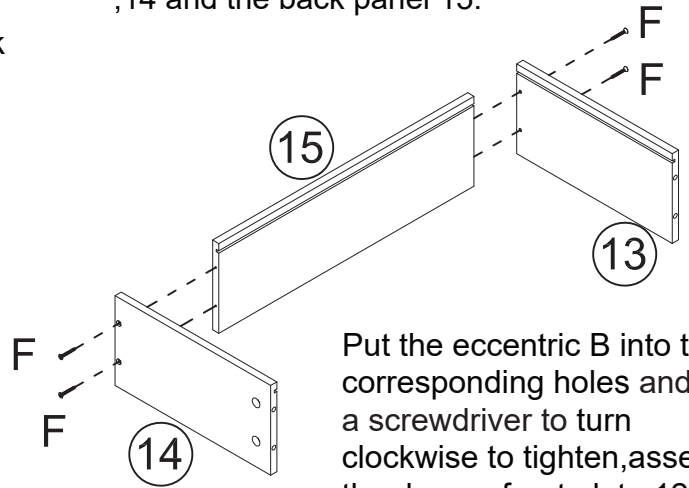


Put the eccentric B into the corresponding holes and use a screwdriver to turn clockwise to tighten, assembly the drawer front plate 12 to the drawer.












Insert the bottom plate 16 according to the slot of side plate

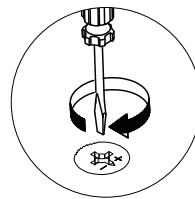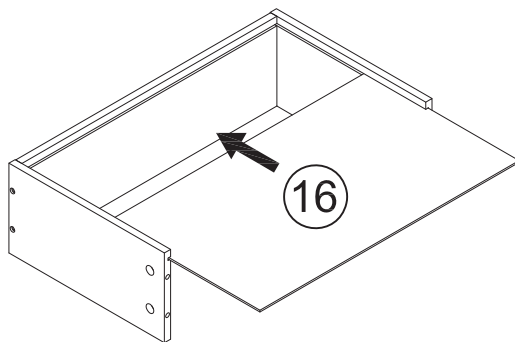

screwdriver

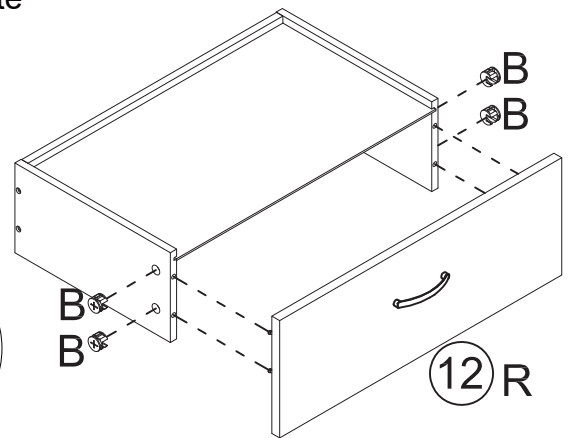

Use the screw D to install the guide rail DR on the side panel 14, and install the guide rail DL on the side panel 13. the installation position is as shown in the figure below.

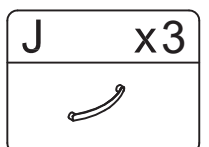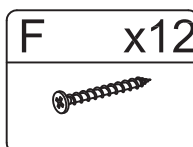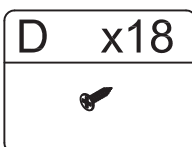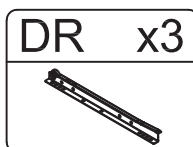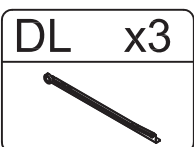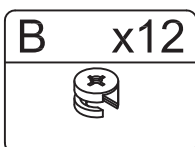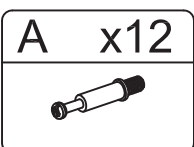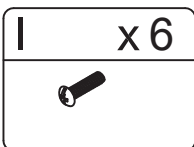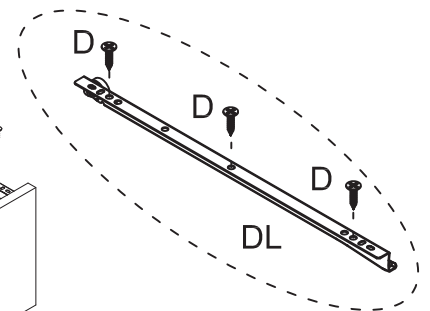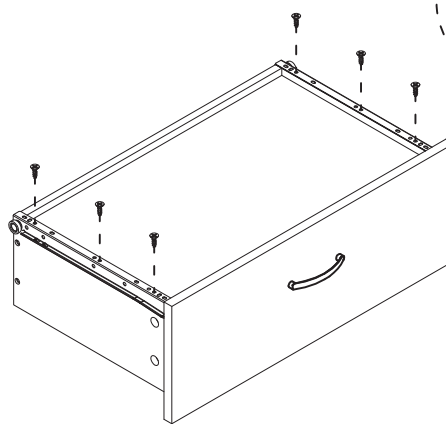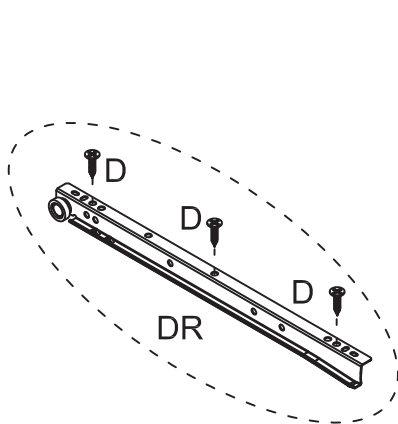

## STEP 13

Install the No.11 drawer into the left 3 drawer space, and the No.12 drawer into the right 3 drawer space, the installation position is as shown in the figure below.

