


ASSEMBLY INSTRUCTION

ITEM NUMBER: BH020


SIZE: Full/Queen

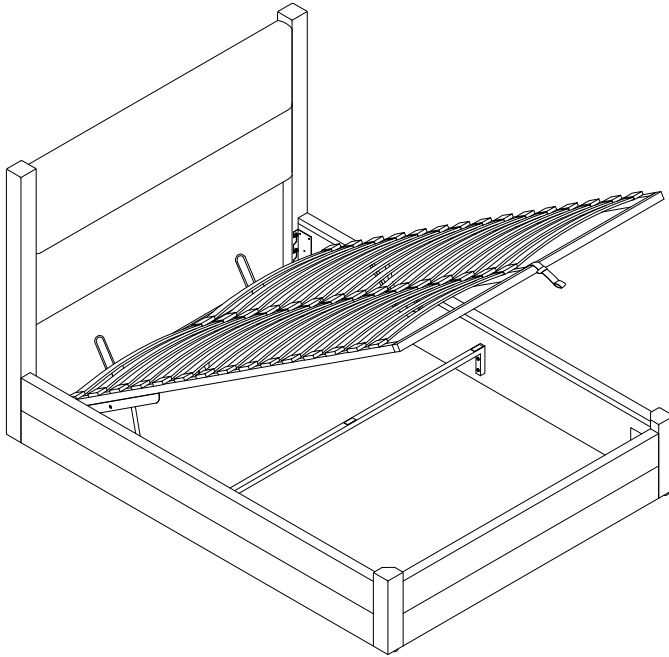


Please **TEAR OFF** this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE


1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed, it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email at support@velocavabed.com

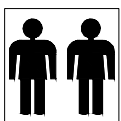














Minimum two
person assembly

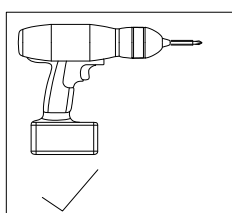








PART LIST

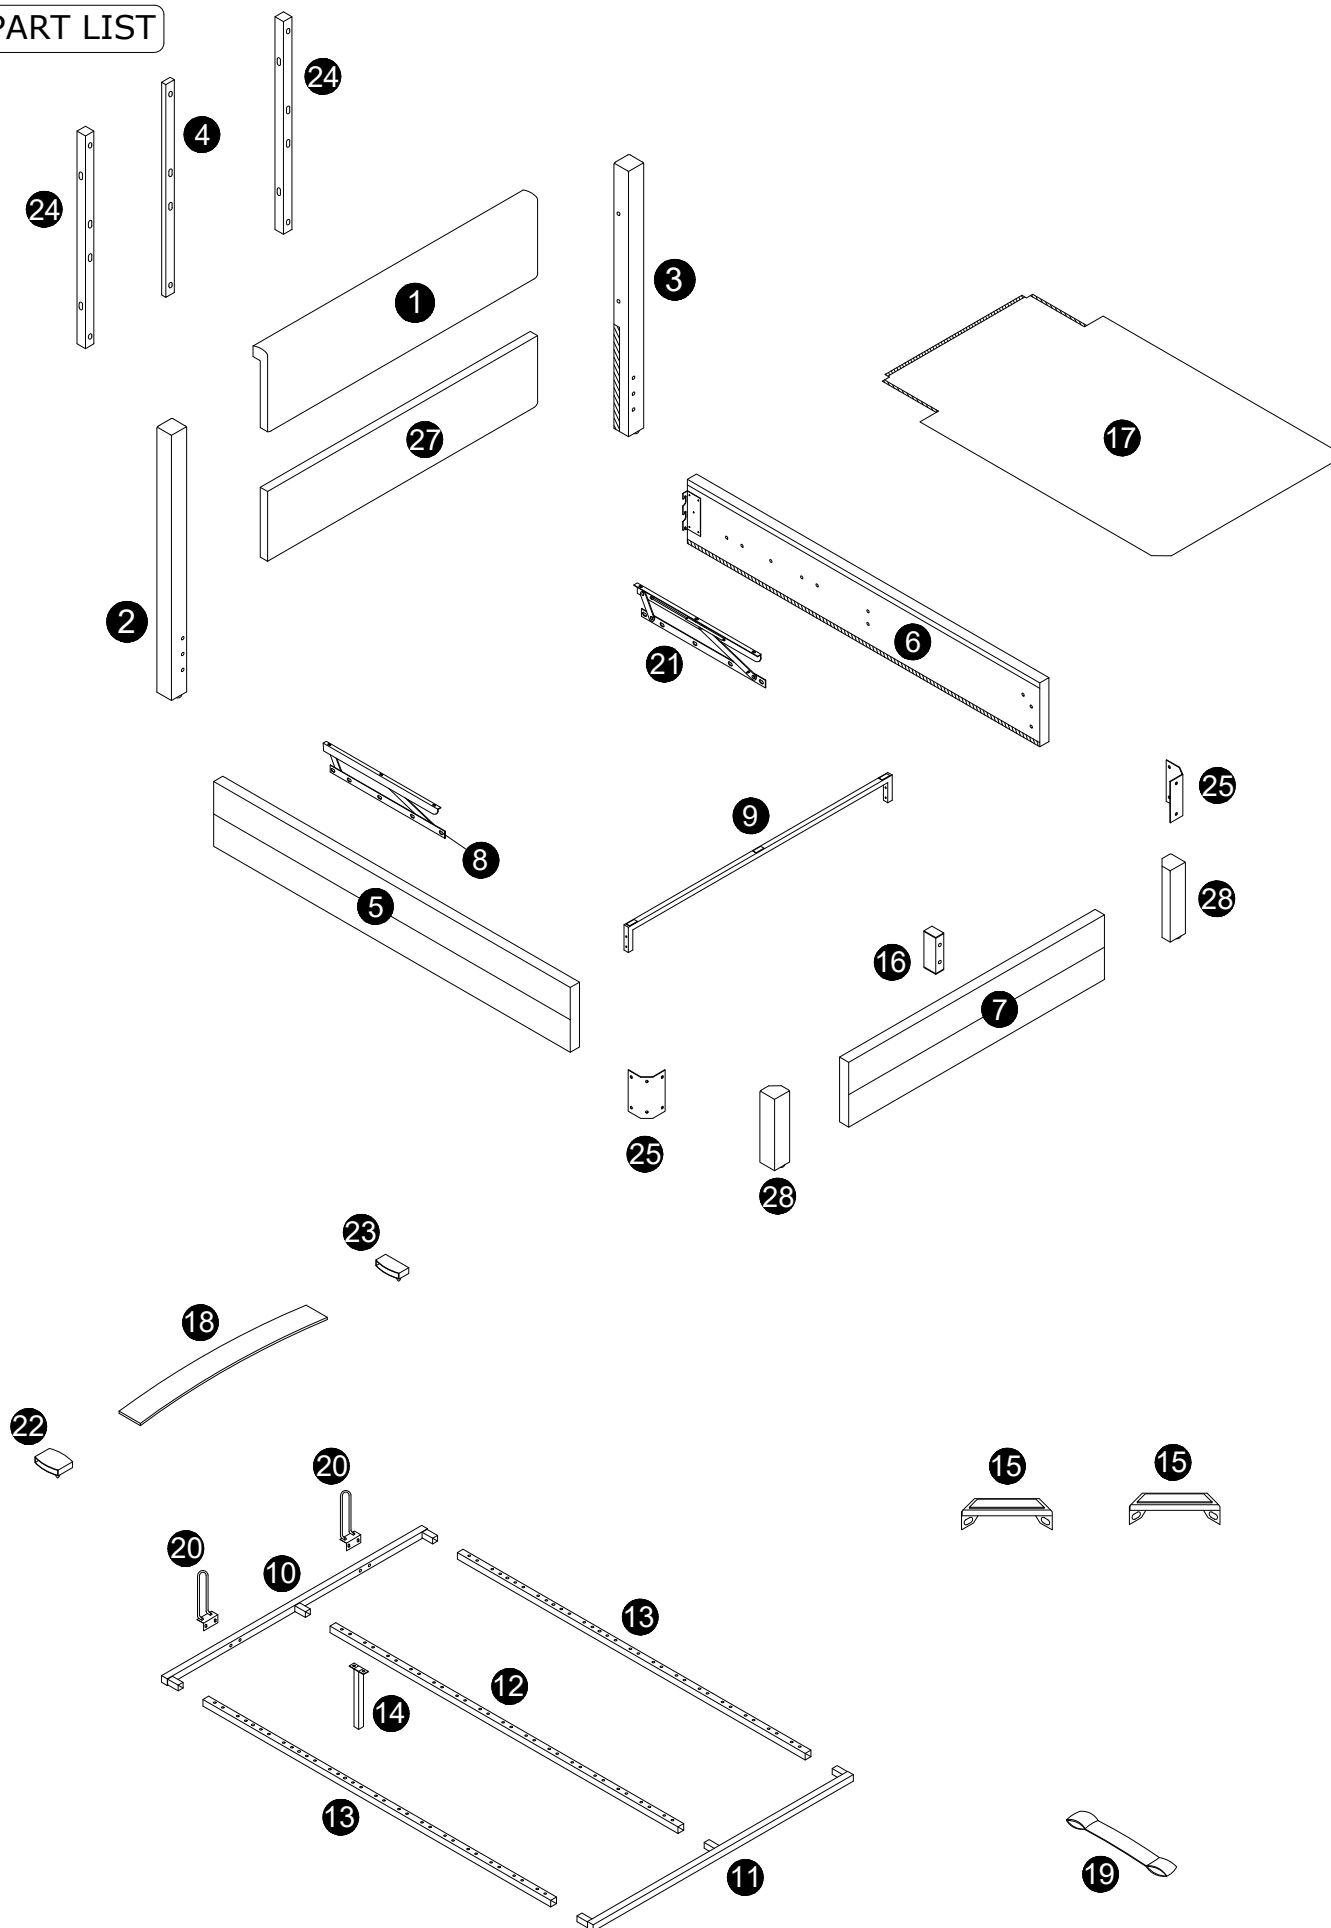

Components of Carton A

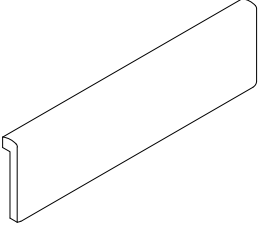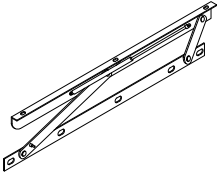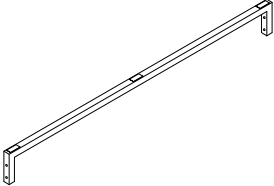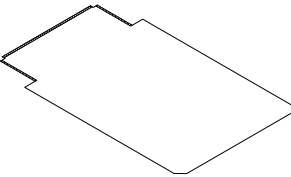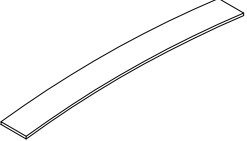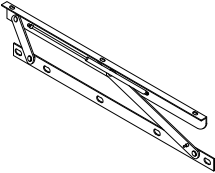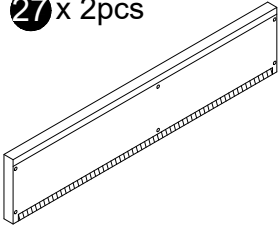1 x 1pc 	2 x 1pc 	3 x 1pc 	8 x 1pc 	9 x 1pc 
14 x 1pc (25 x 220mm) 	15 x 2pcs 	16 x 1pc 	17 x 1pc 	18 Full Size x 28pcs Queen Size x 30pcs 
19 x 1pc 	20 x 2pcs 	21 x 1pc 	22 Full Size x 14pcs Queen Size x 15pcs 	23 Full Size x 28pcs Queen Size x 30pcs 
25 x 2pcs 	27 x 2pcs 	28 x 2pcs 		

Components of Carton B

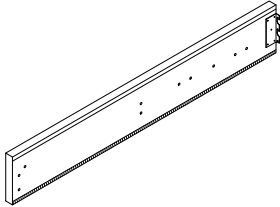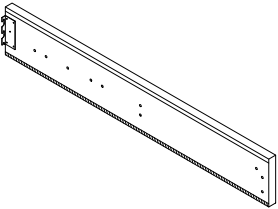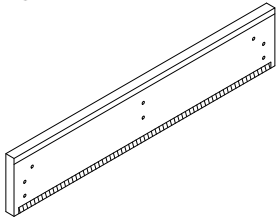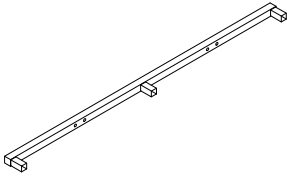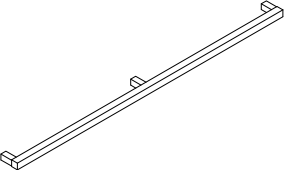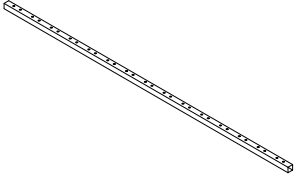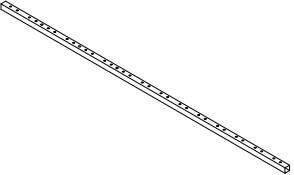4 x 1pc 	5 x 1pc 	6 x 1pc 	7 x 1pc 	10 x 1pc 
11 x 1pc 	12 x 1pc 	13 x 2pcs 	24 x 2pcs (30x595mm) 	

Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.


HARDWARE LIST

Components of Carton A

 H1 M5 x 1pc	 H2 M8x25mm x 46pcs	 H3 M8x35mm x 8pcs	 H4 M8x50mm x 18pcs
 H5 M8 x 14pcs	 H6 M8x22mm x 26pcs	 H7 M8 x 6pcs	 H8 M14 x 1pc
			 H9 M8x60mm x 6pcs


1

As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

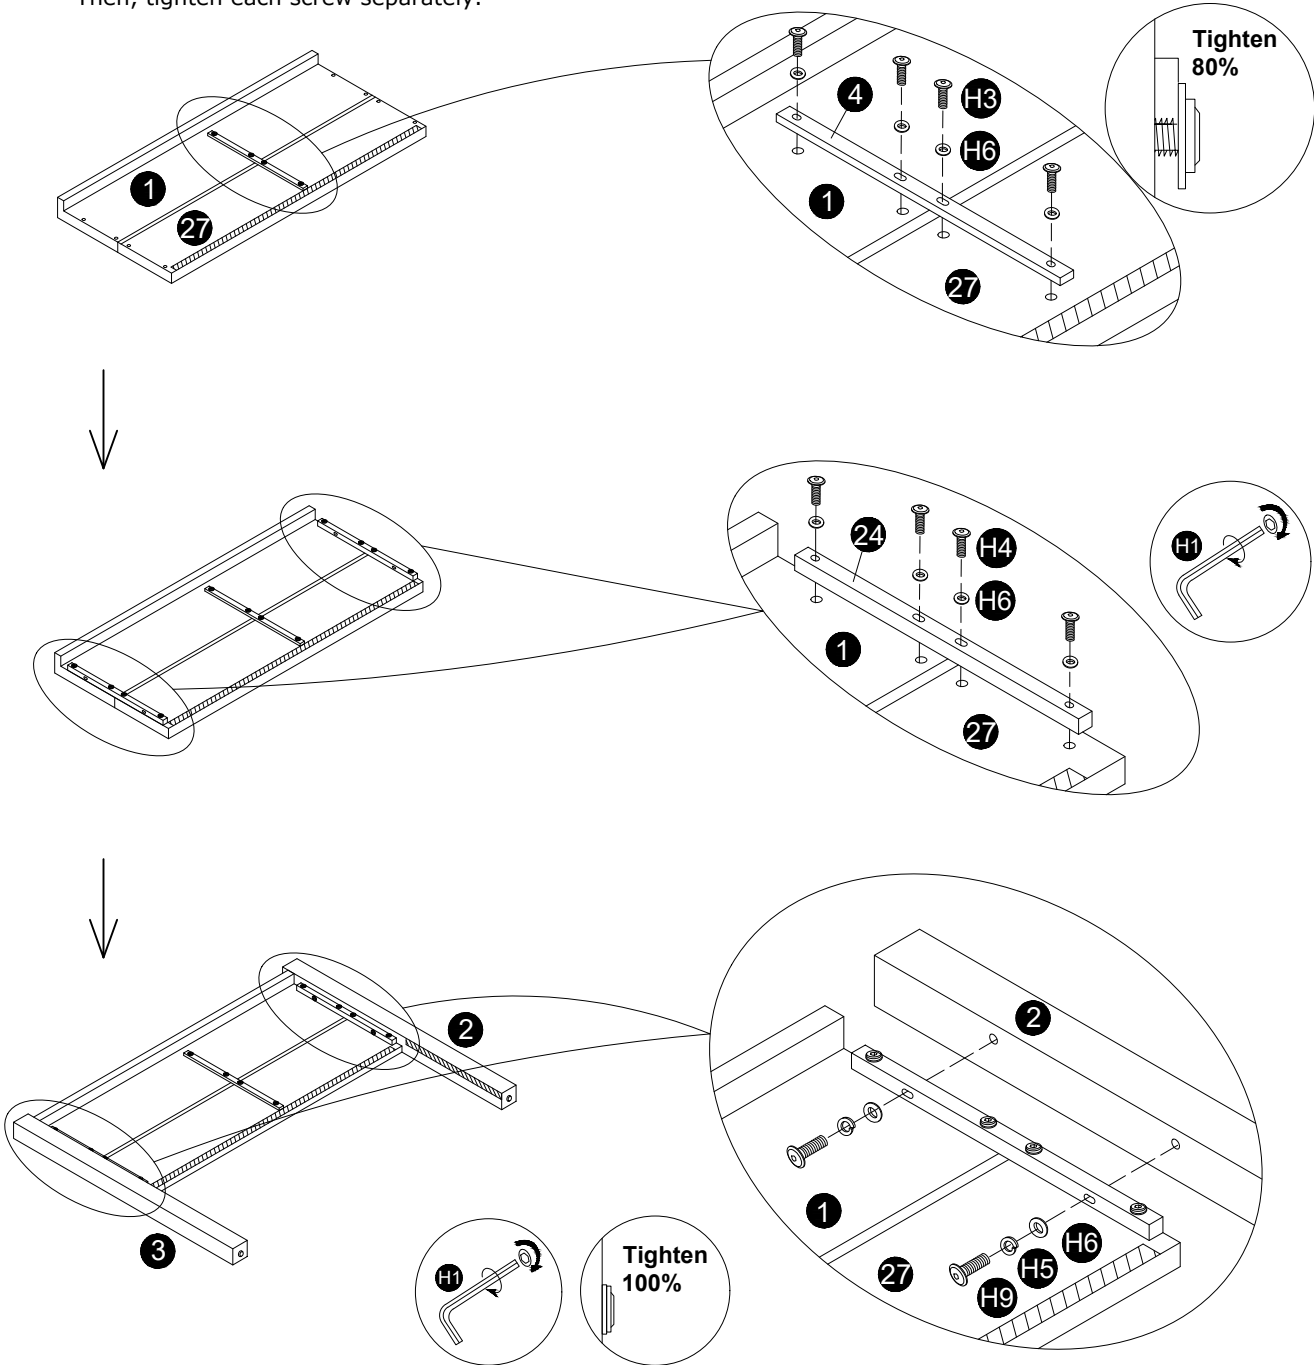


Fully tighten all fixings.


2

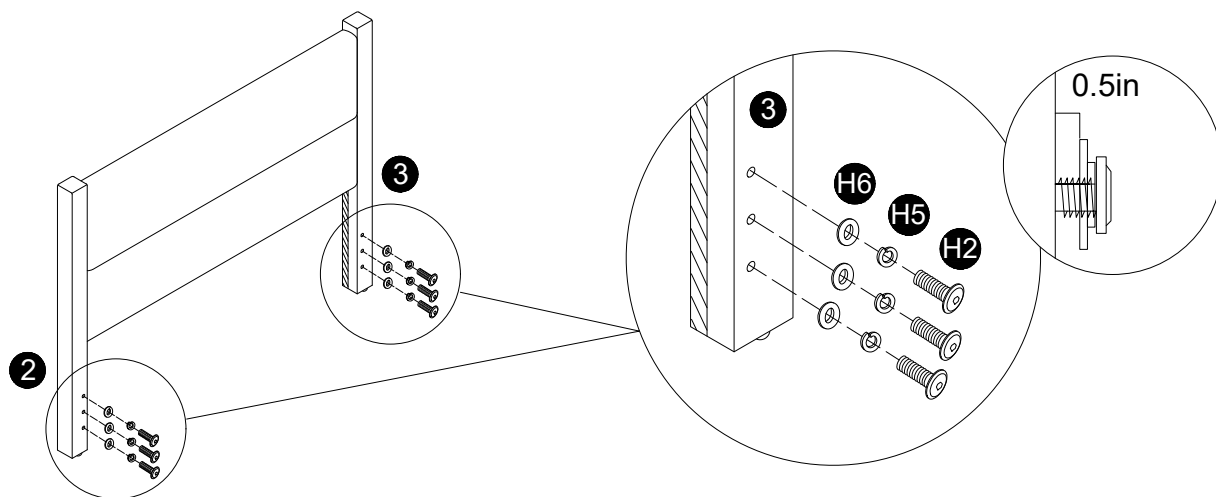

3

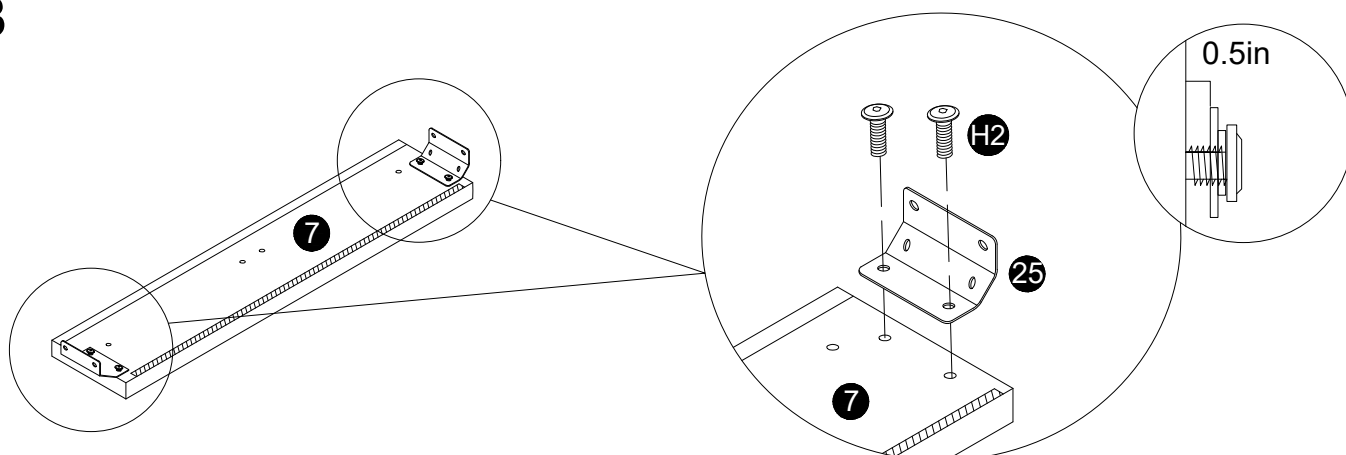


4

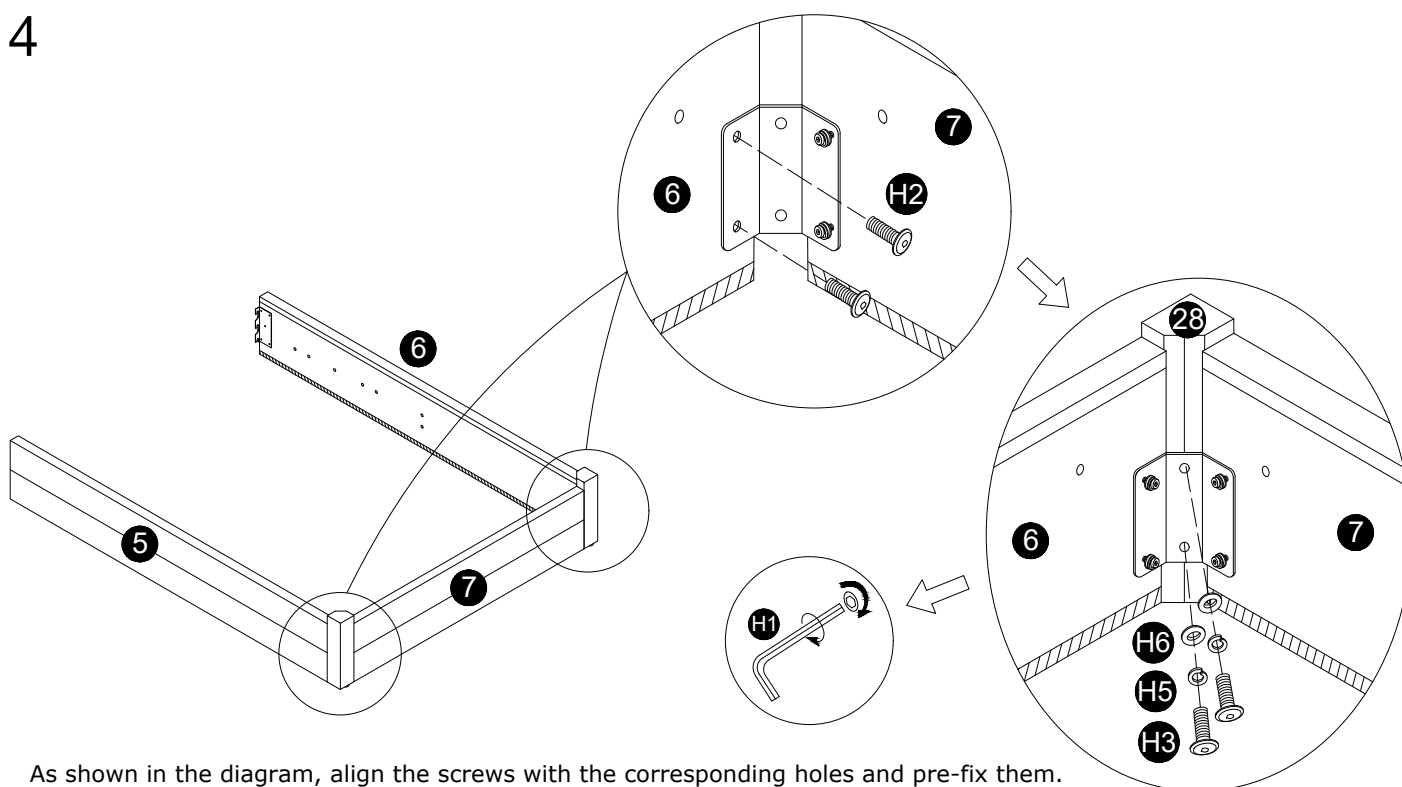


As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

5

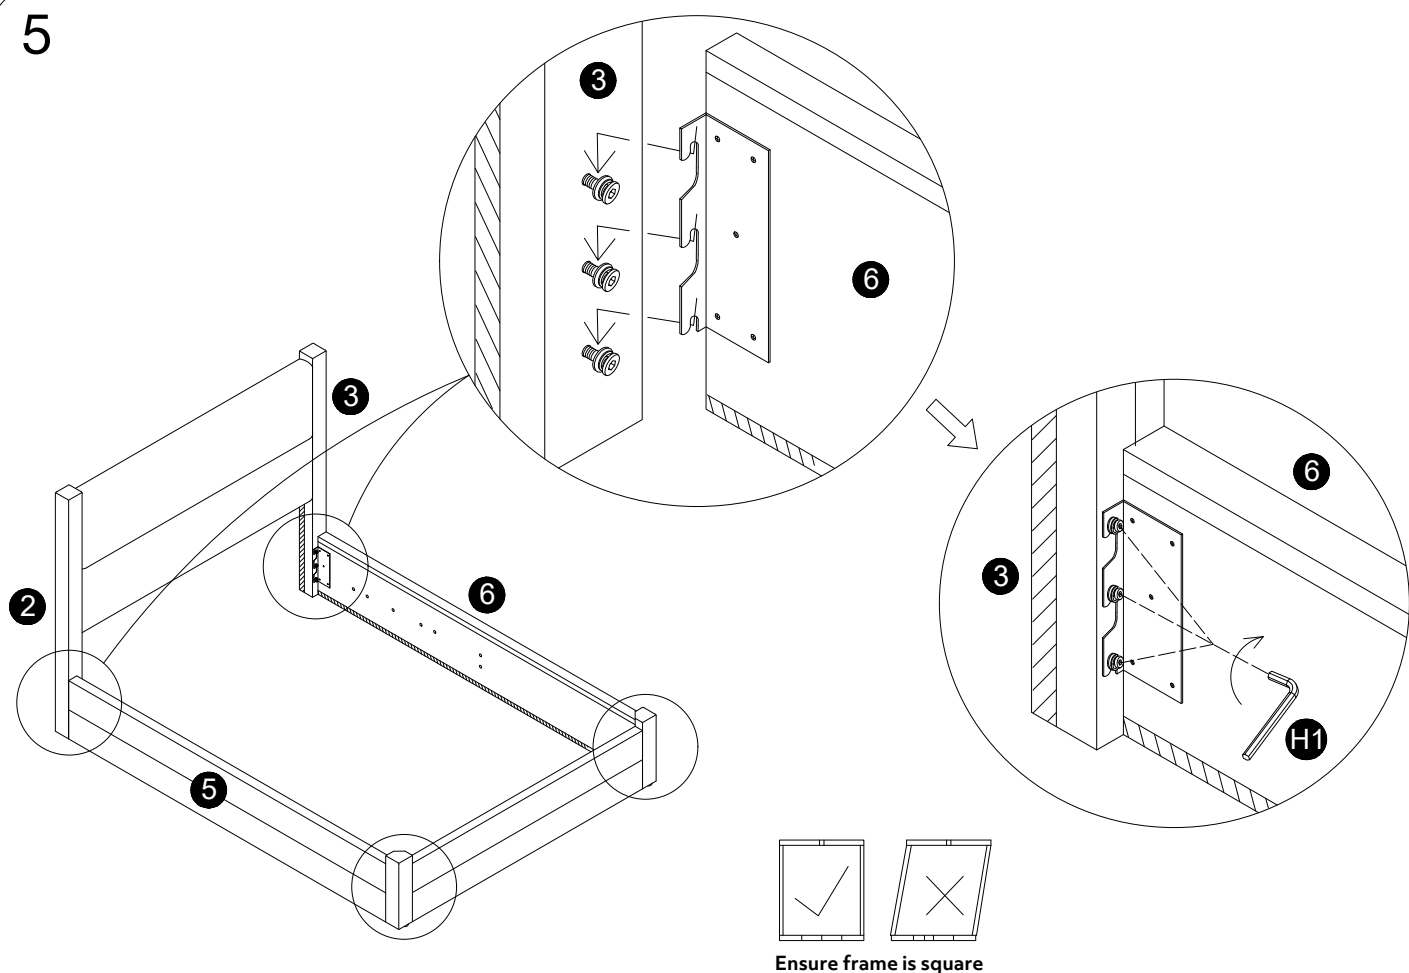


6

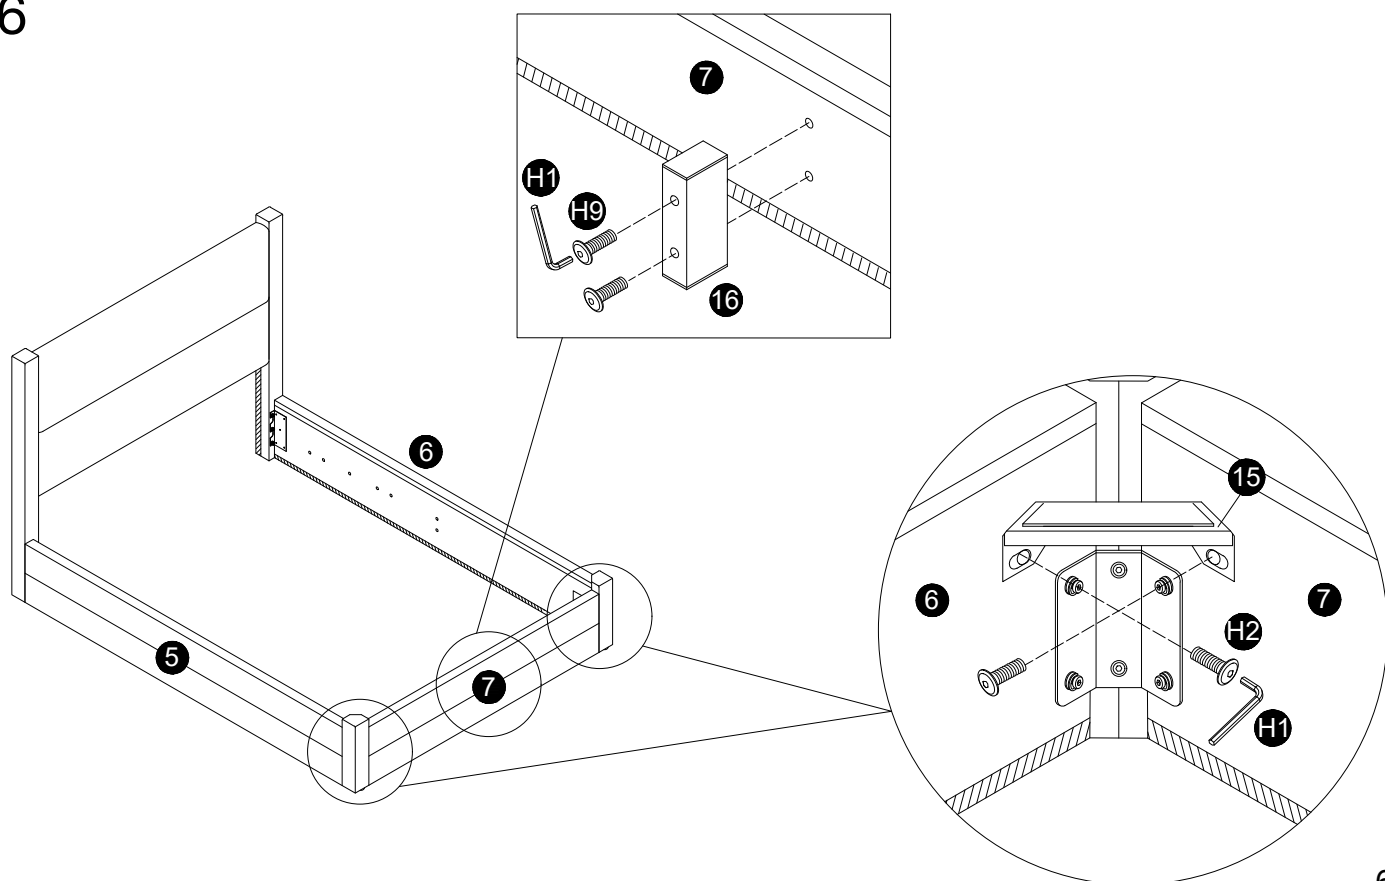


7

As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.



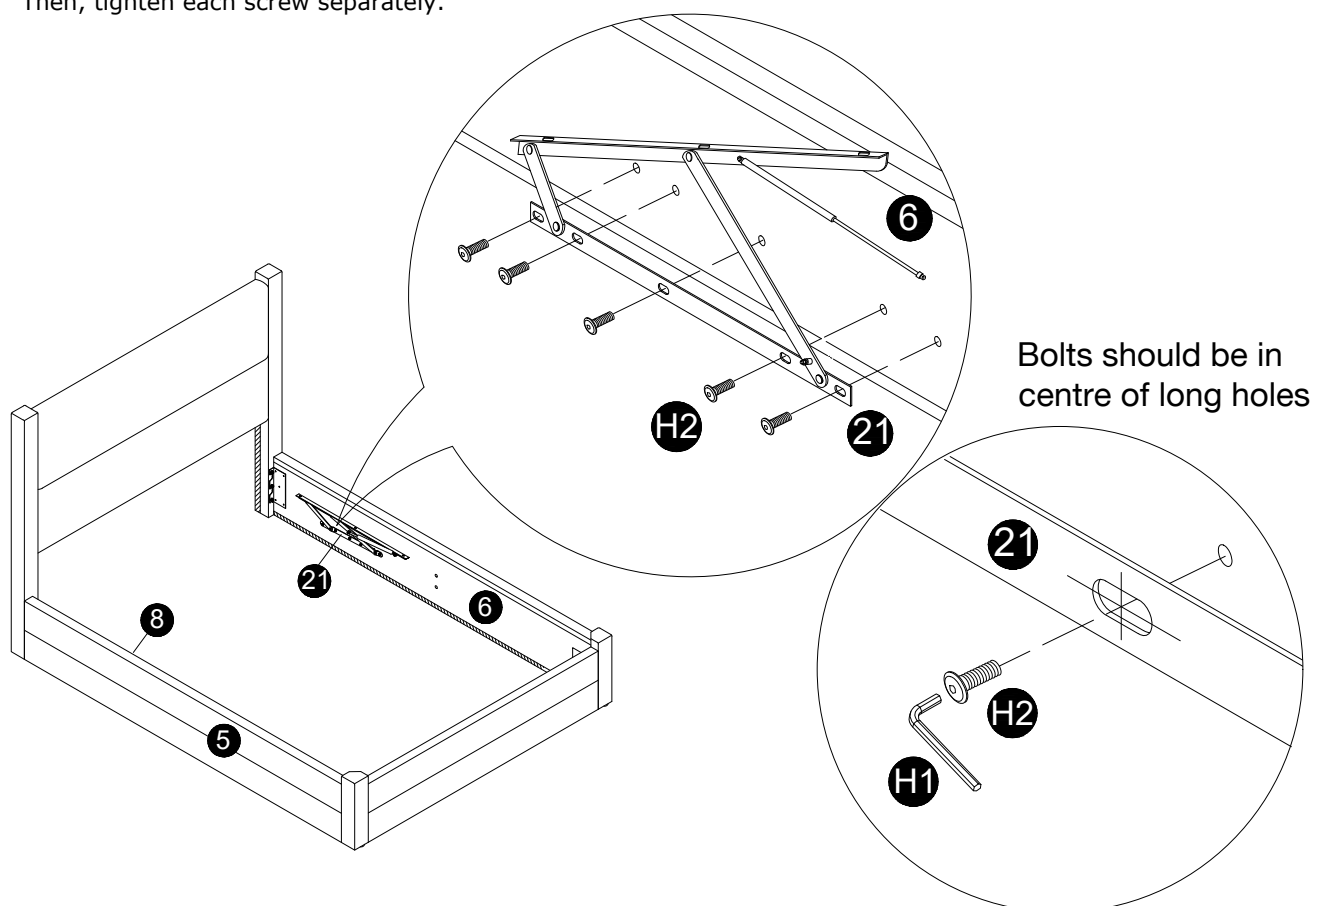


8

Locate fabric base into position using the hook and loop strips around the inside of the frame.

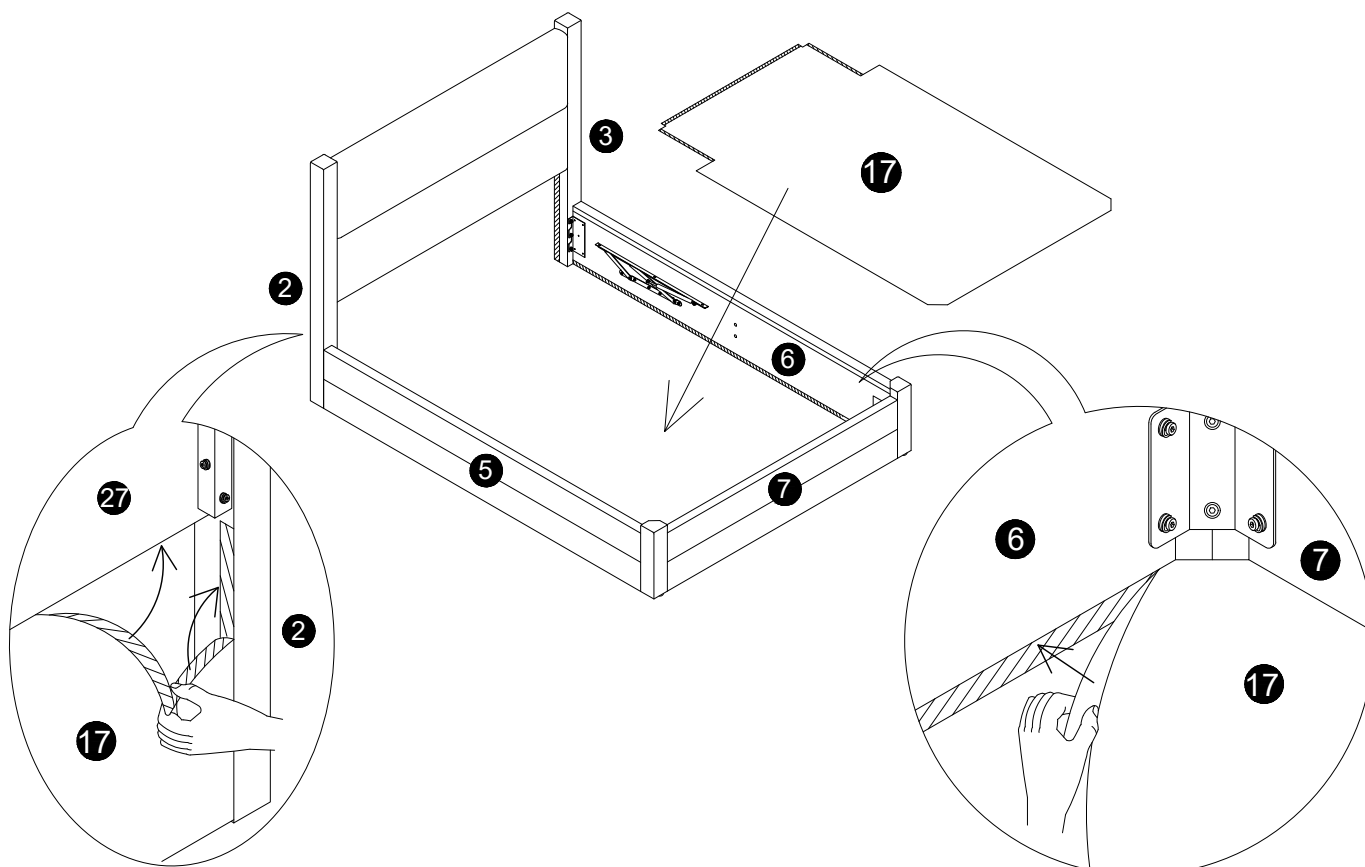

9

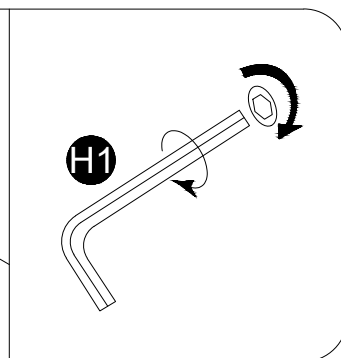
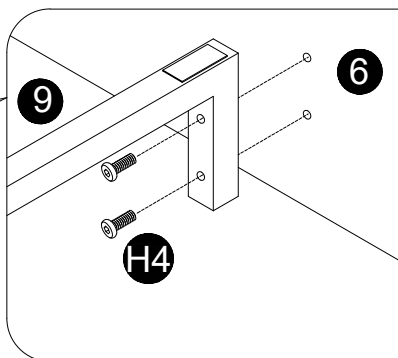
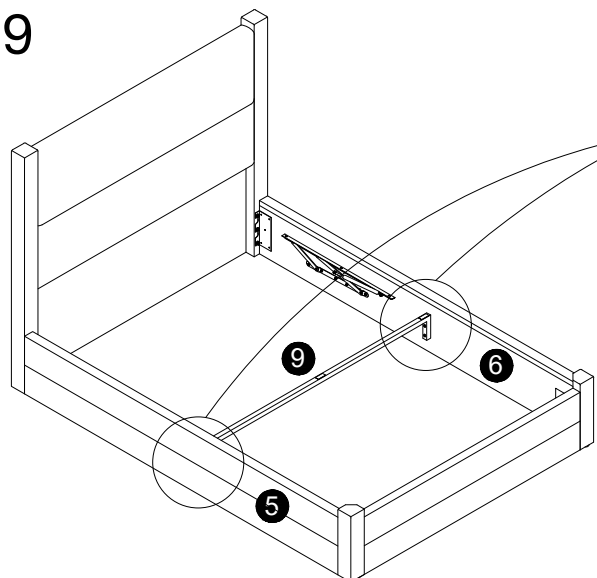


10

Holes on underside

12

Shown upside down

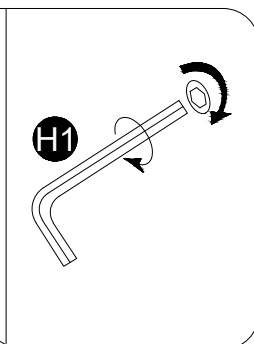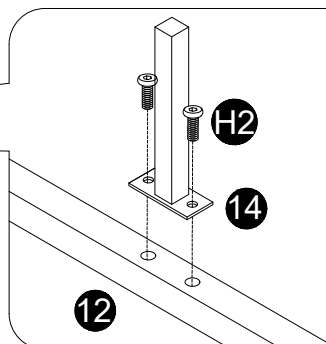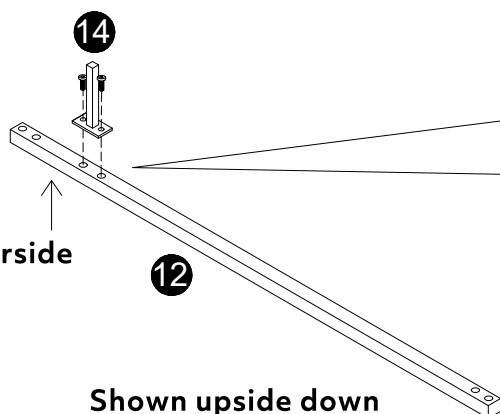

11




Headboard end
Extra holes

Holes at headboard end


Legs this
end

Shown upside down


Footboard end

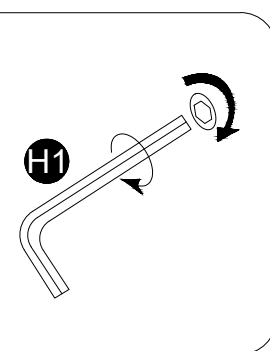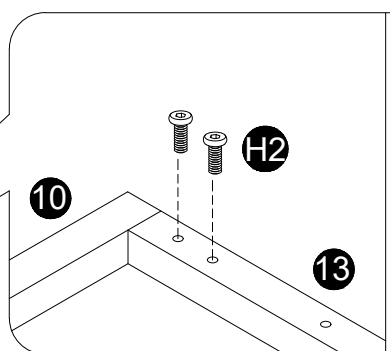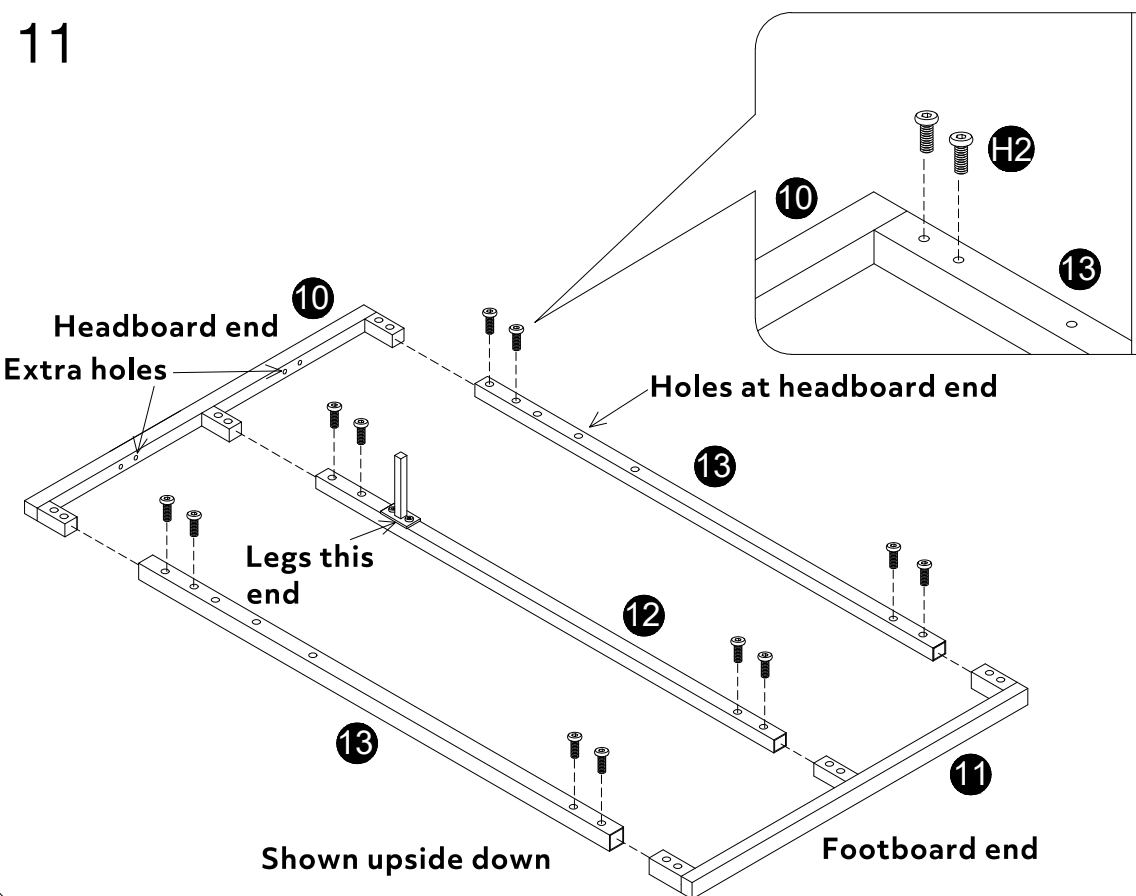


12

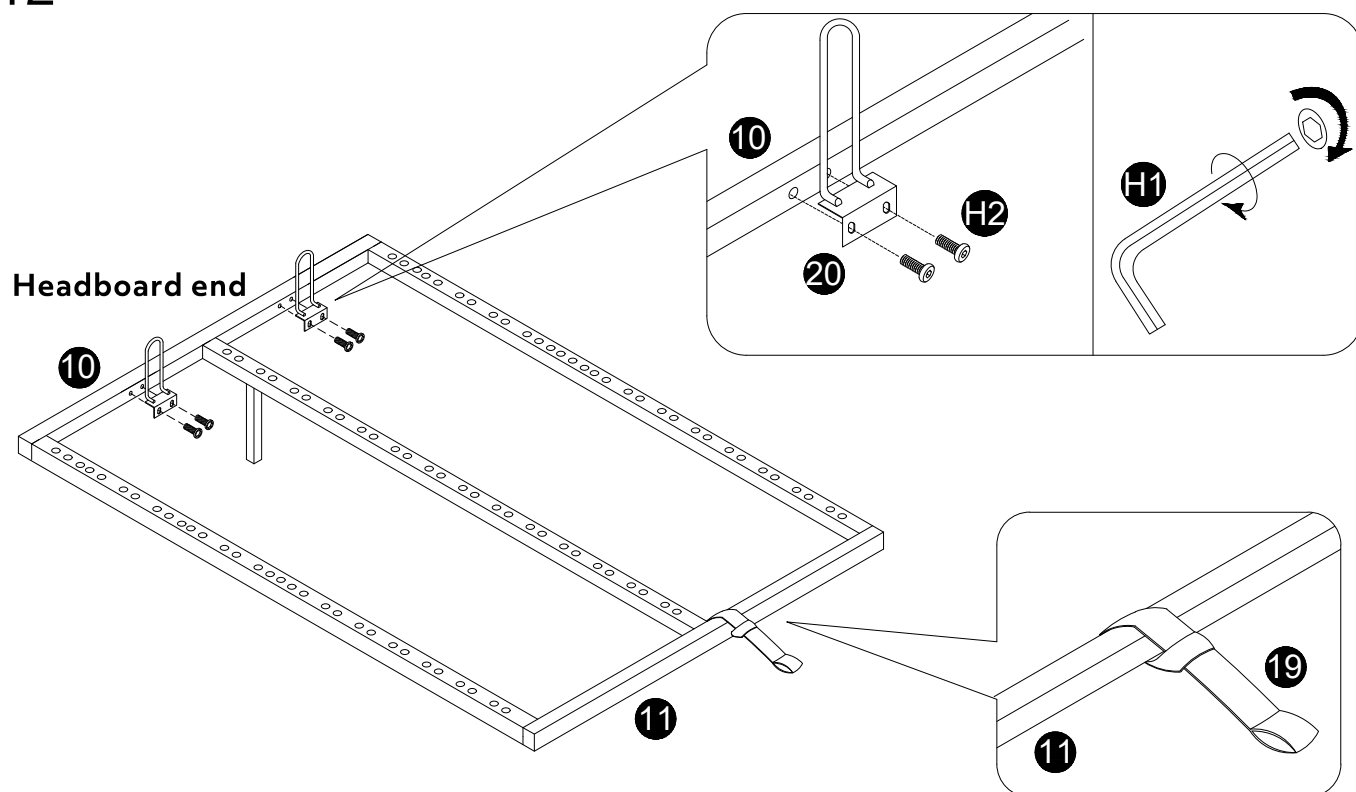

13


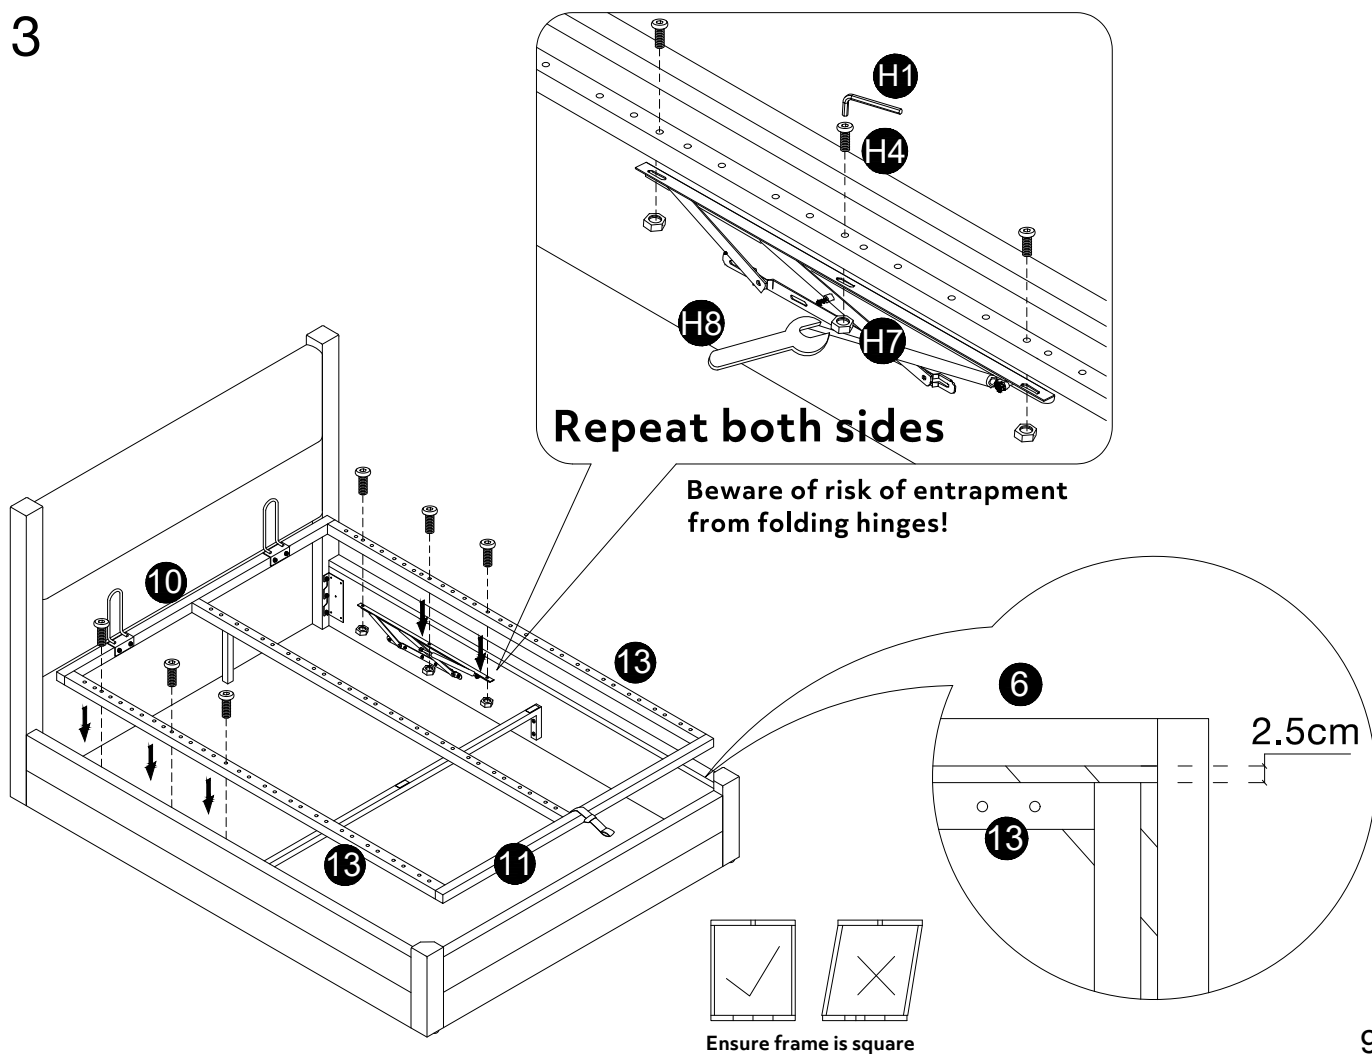


14

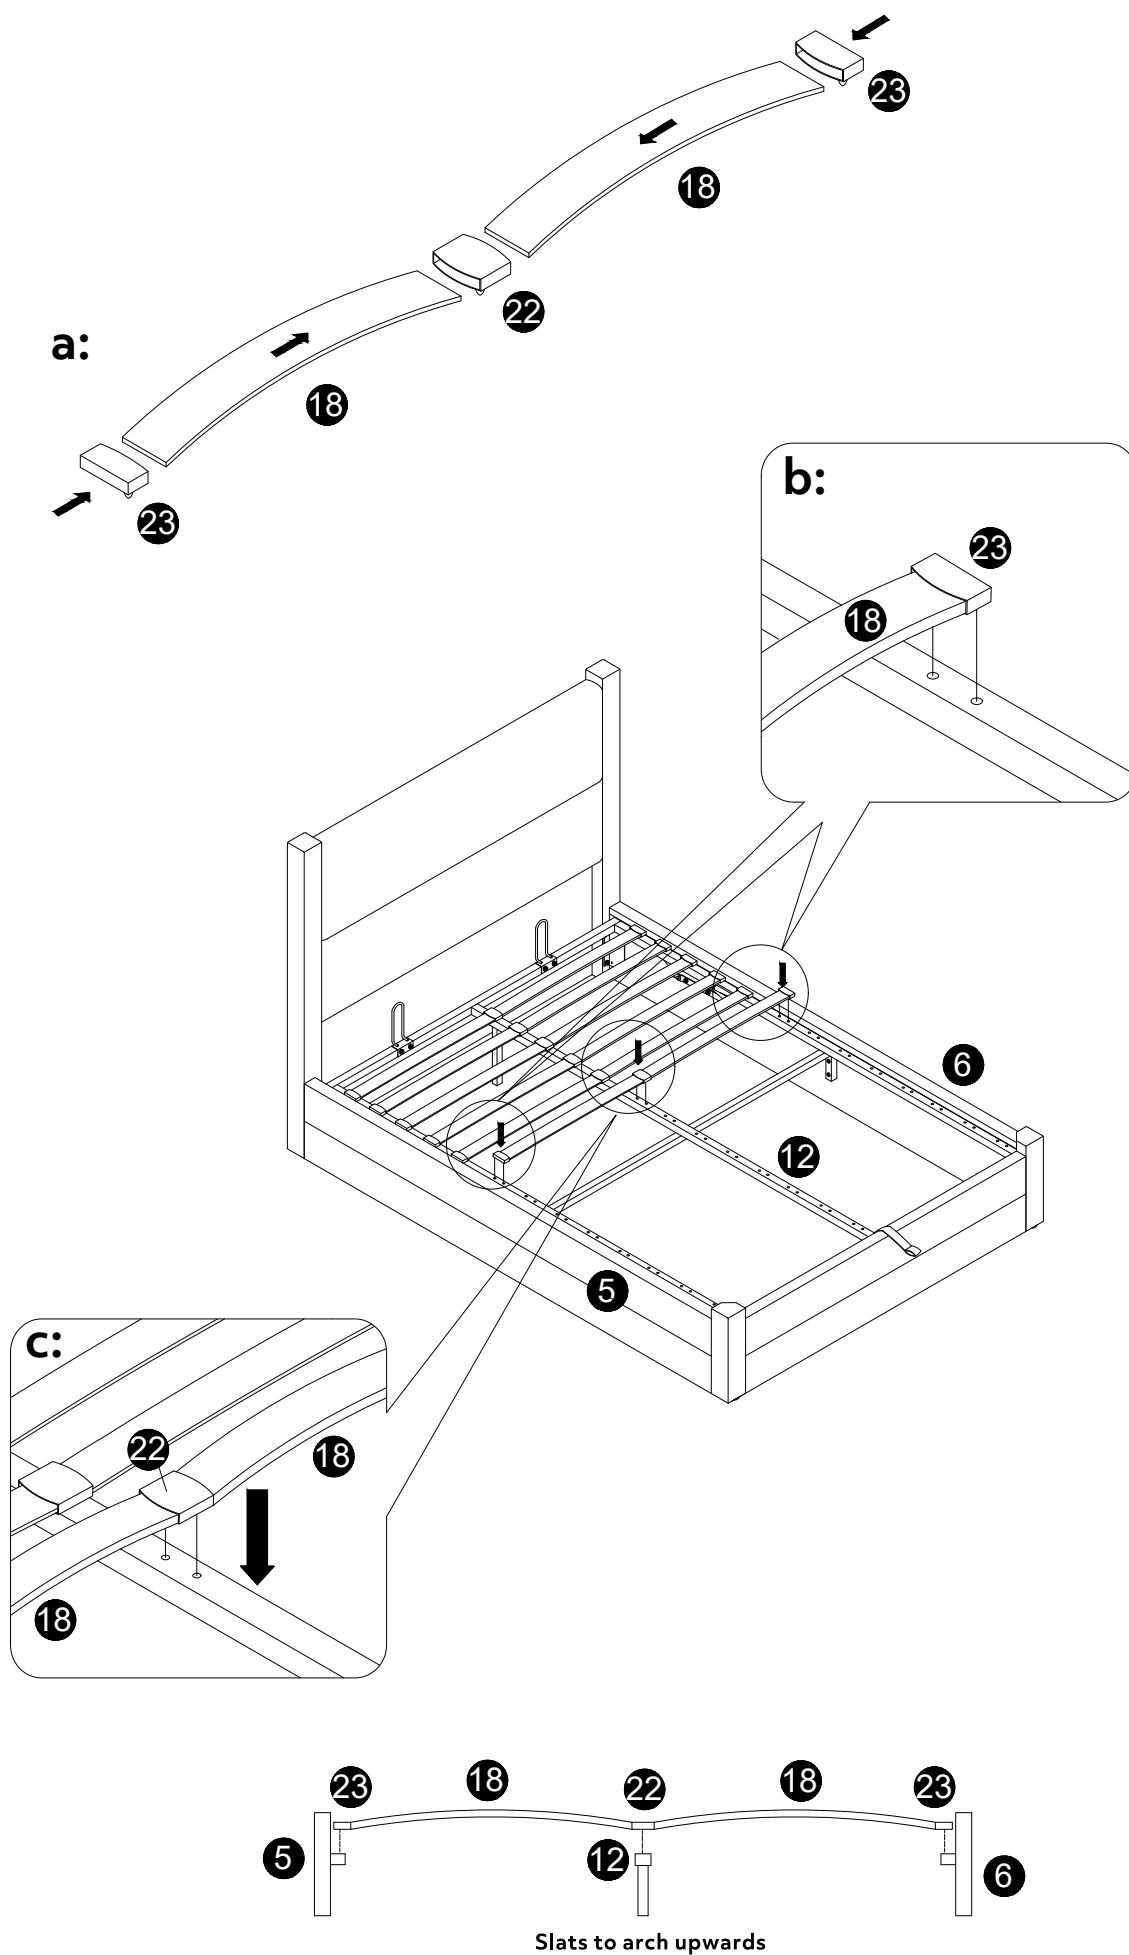

15



**Warning: Two people required.
Frame to be fully supported at all times!**

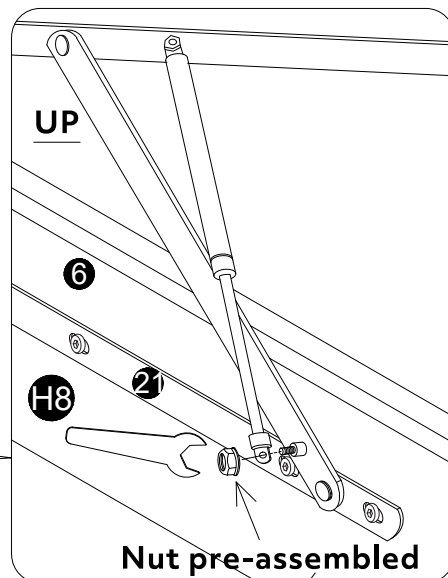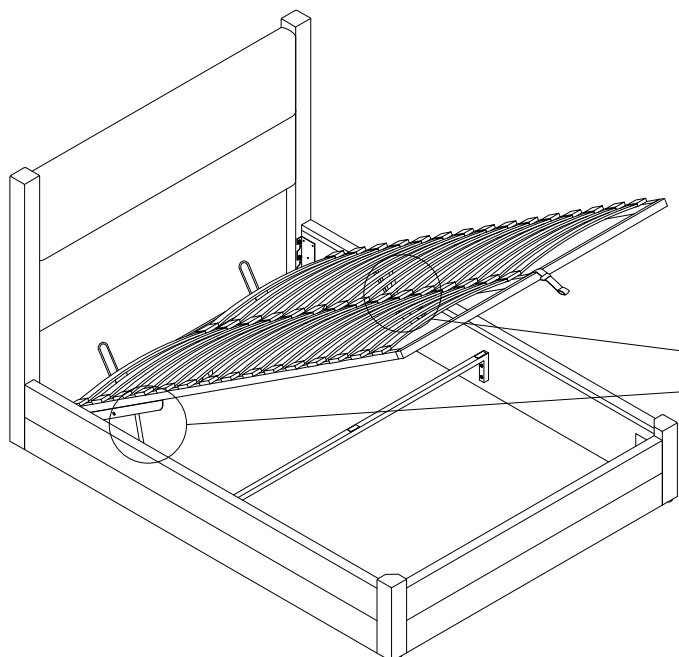

Repeat both sides

Important: Before proceeding, check and ensure all screws and fixings are fully tightened.

16

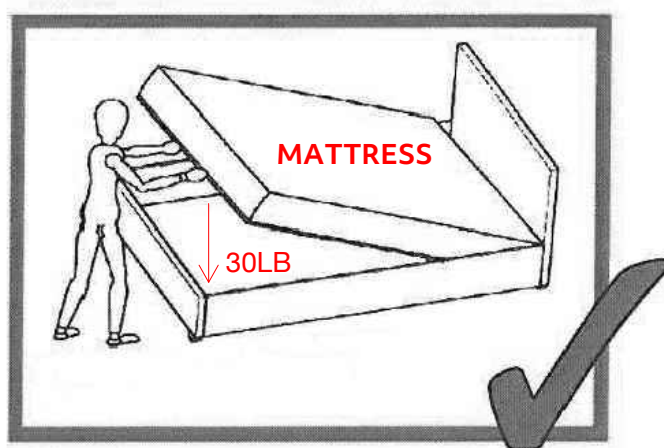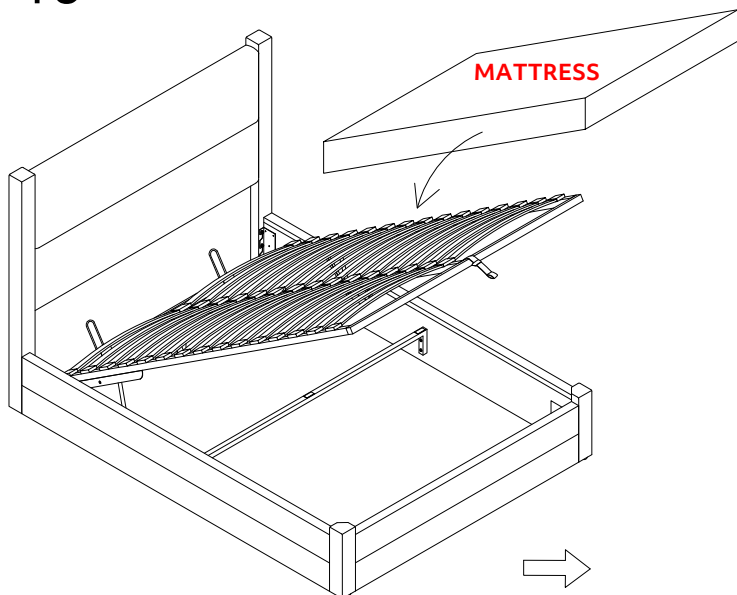

Place the mattress on frame & Carefully lower the frame down.
Keep objects/body part & children away from moving parts.

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.