

LM146

Scan for help

Item # : LM146-52

Assembly Instructions

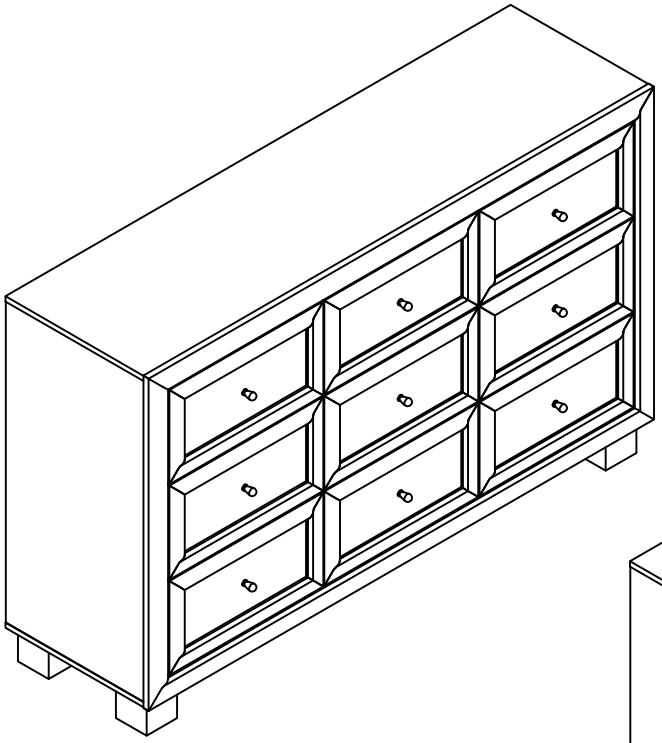

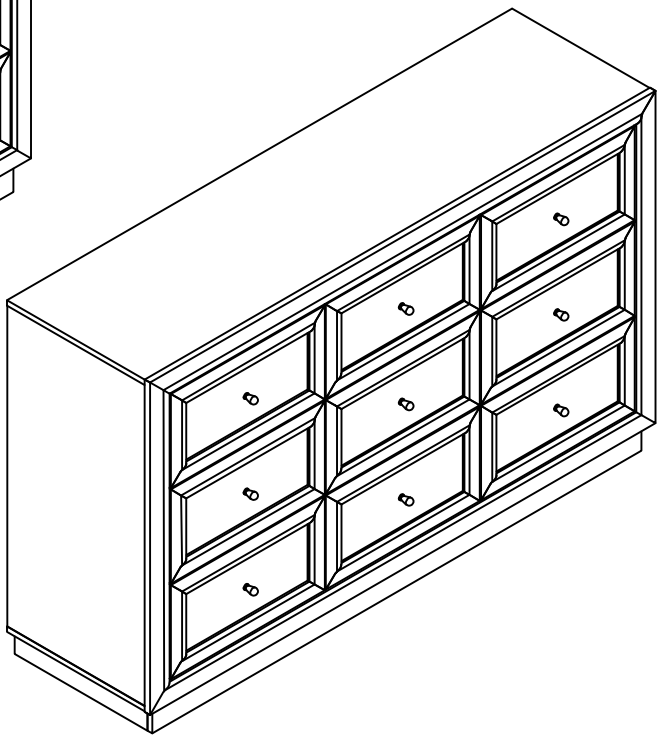

If you have any questions, please follow these steps(“Find Your Orders”- “Problem with the Order” - “Contact Seller”) to contact our customer service. Thanks !

Revised 31/03/2026

General Assembly Guidelines


I. Ensure that all parts and hardware are available before beginning assembly.

II. Follow each step carefully to ensure the proper assembly of this product.


III. Two people are recommended for ease in the assembly of this product.

IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.


V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

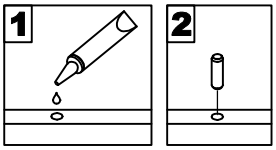


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

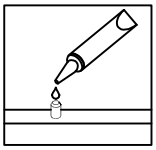


VI. A Phillips head screwdriver is required for the assembly of this product .

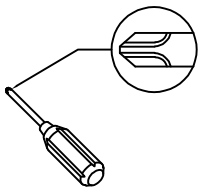


VII. Power tools should not be used to assemble this product .

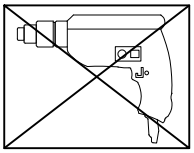



Parts List 1

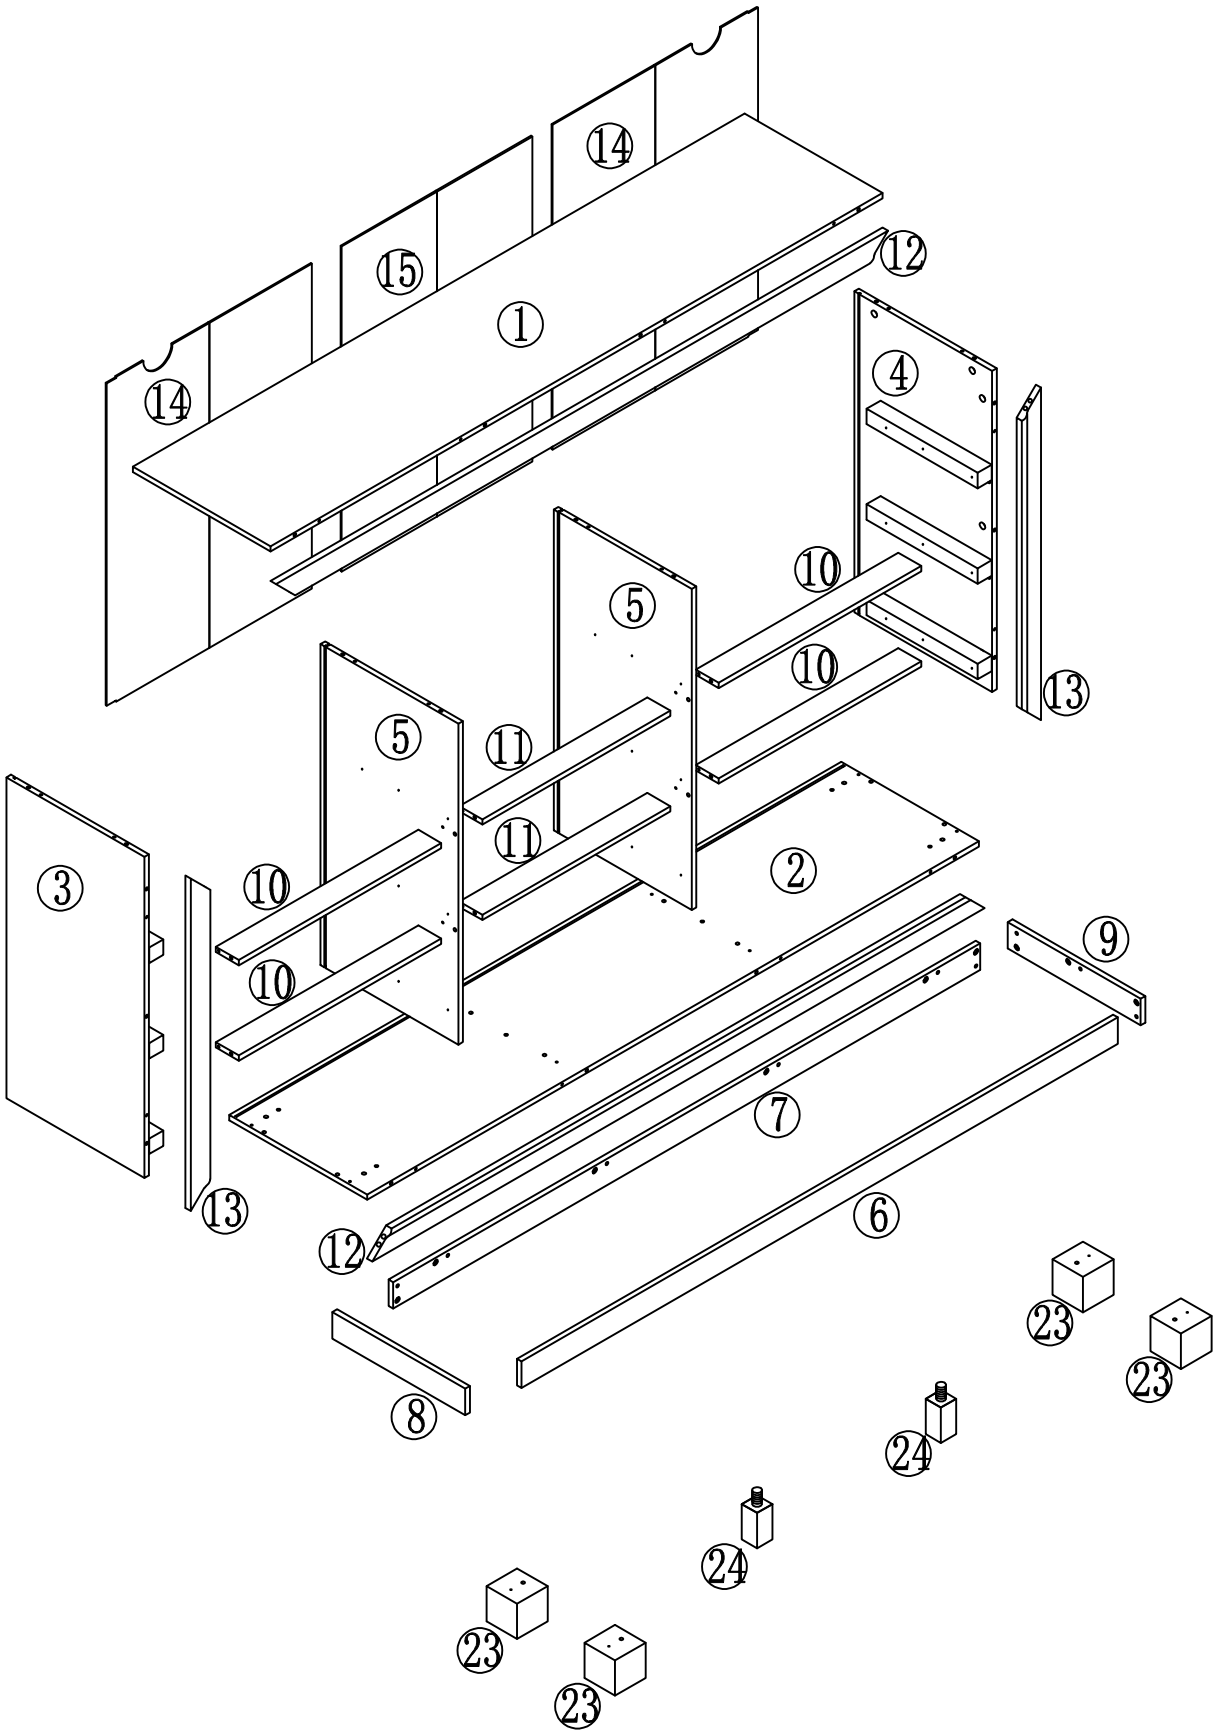



Parts List 2

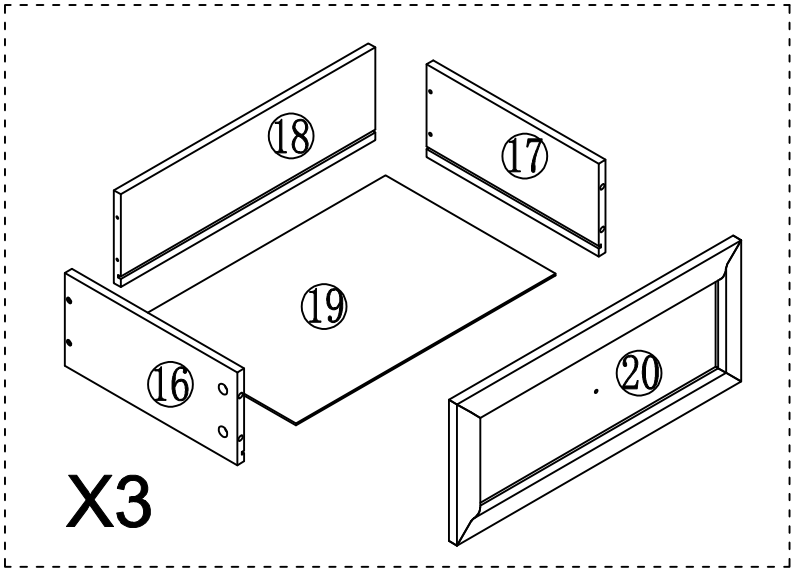


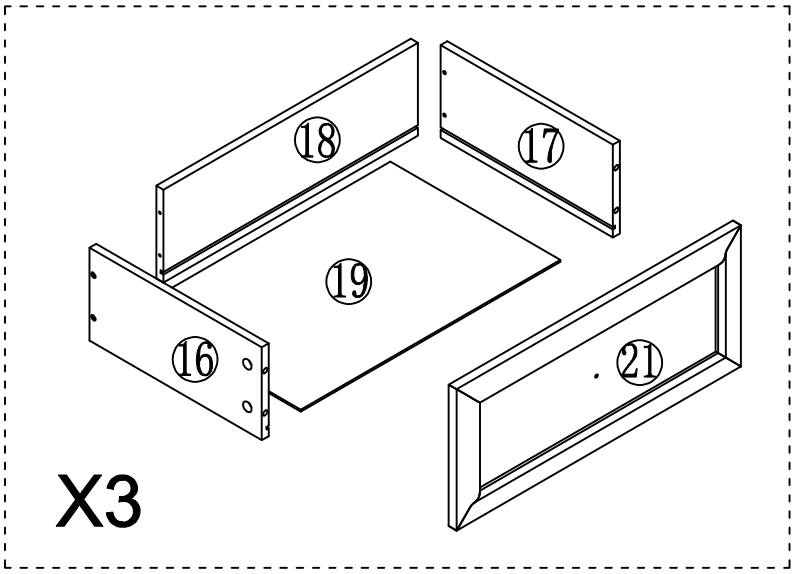

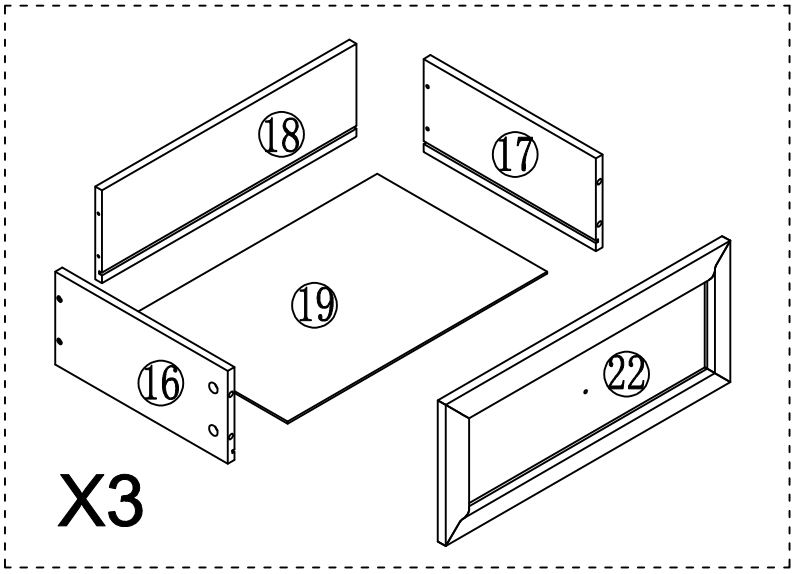

Hardware List


A		Ø6x32mm	Cam bolt	70	pcs
B		Ø15x9mm	Cam lock	70	pcs
C		Ø30mm	Sticker	70	pcs
D		Ø6x30mm	Wooden dowel	48	pcs
E		M3	Hex Key	1	pc
F		Ø5x50mm	Screw	8	pcs
G		Ø4x9mm	Bolt	9	pcs
H			Knob	9	pcs
I		Ø4x32mm	Screw	36	pcs
J		12"	Drawer slides	9	sets
K		Ø3x12mm	Screw	108	pcs
L		M4	Hex Key	1	pc
M		57*20*20mm	Plastic wedge	14	pcs
N		M6X10mm	Bolt	28	pcs
O		M6X80mm	Bolt	8	pcs
P			Plastic wedge	24	pcs
Q		Ø3X17	Screw	24	pcs

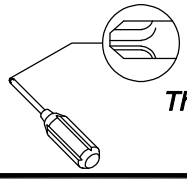


Philips head screwdriver required for assembly
(not included)

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.

Hardware List

R		Ø4X10mm	Screw	2	pcs
S		72X25*15mm	Anti-inversion piece	2	pcs
T		Ø4X40mm	Screw	2	pcs
U		Ø6x40mm	plastic anchor	2	pcs
W		Ø4X12mm	Screw	8	pcs
X		45x15x2mm	Matel plate	4	pcs
Y			Glue tube	2	pcs




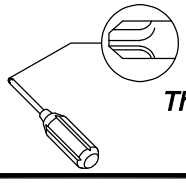


Philips head screwdriver required for assembly
(not included)

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.

CAM LOCK/BOLT FASTENING INTRODUCTION

(You will use it during assembly)

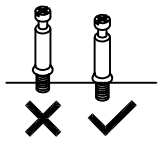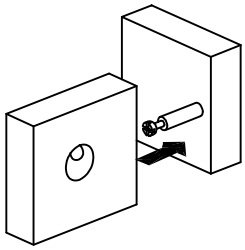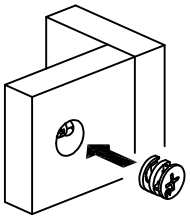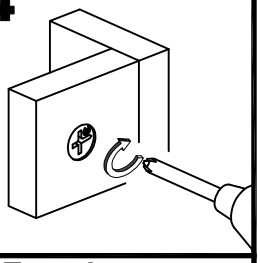1	2	3	4
			
1.Screw cam bolt into the threaded anchor gently. (Attention:don't screw cam bolt too deep or too shallow.)	2.Please connect the 2 boards you want connect by inserting cam bolt.	3.Insert the cam lock into the round hole of the board. (Attention:point the arrow on the top of the cam lock to the outer edge.)	4.Turn the cam lock clockwise until it is firmly tightened.


STEP1

TWO ASSEMBLY OPTIONS

Option A

(Bottom panel assembly use apron)


To build this option follow steps 1-26, then follow step 27A-29A, then follow step 30-31, then follow step 32-33, Finally follow step 34.

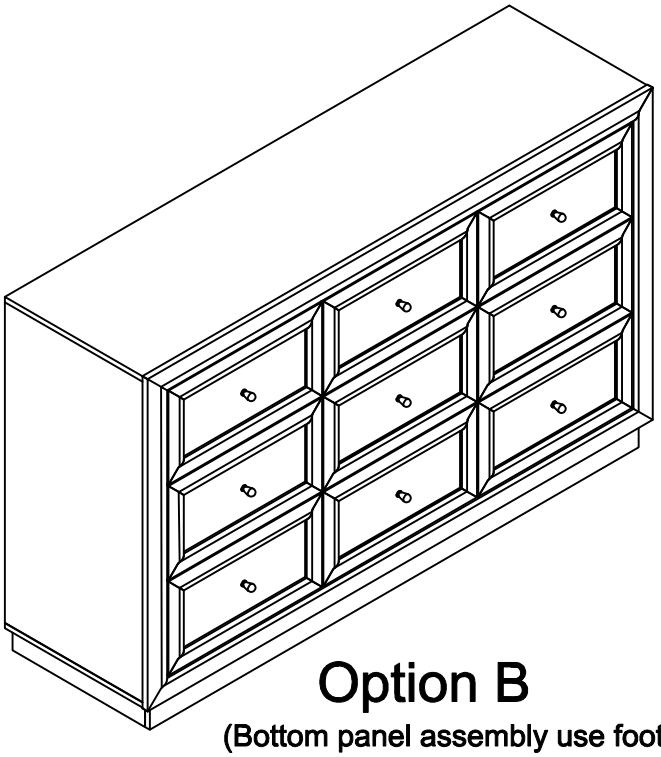


Option B


(Bottom panel assembly use foot)

To build this option follow steps 1-26, then follow step 27B-28B, then follow step 30-31, then follow step 32B-33B, Finally follow step 34.

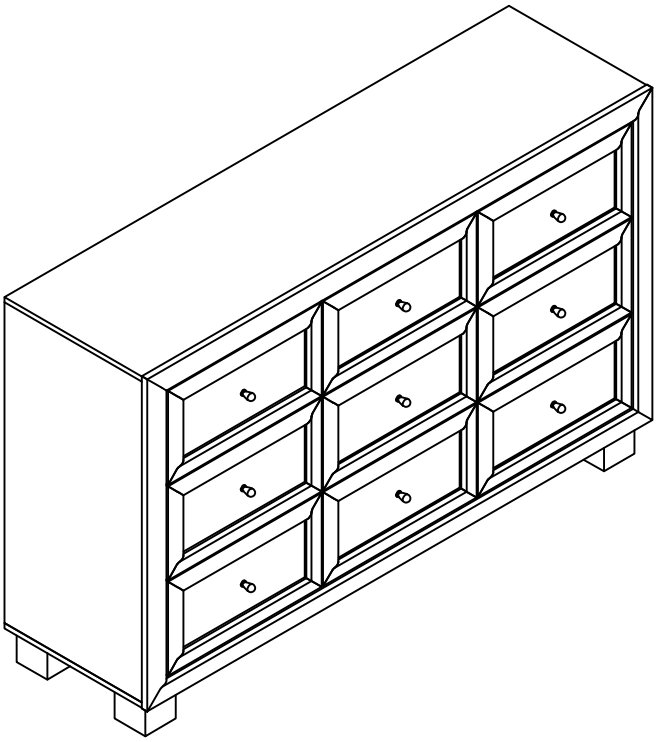


Step 1

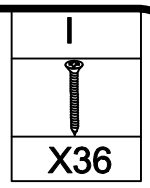


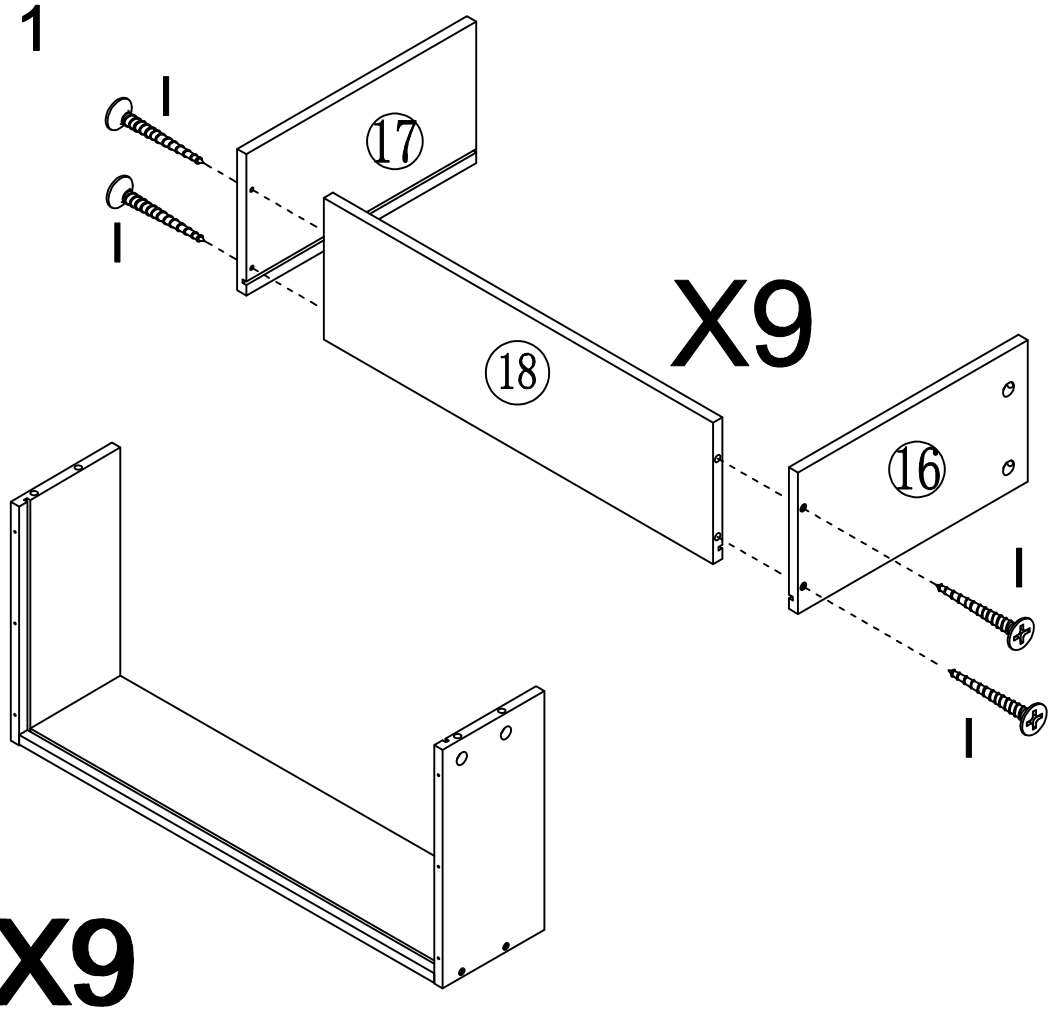



Step 2

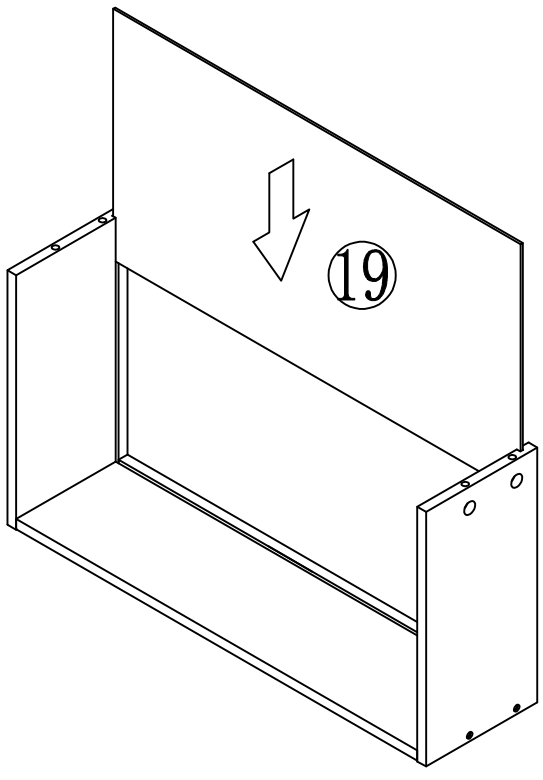



Step 3

A	B	C
		
X12	X12	X12

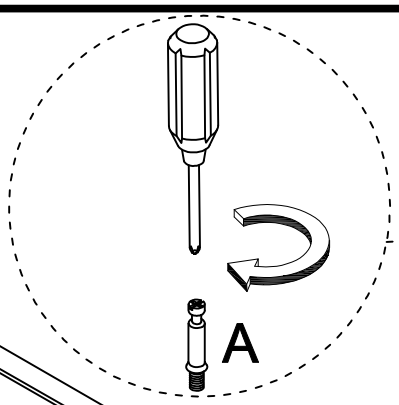

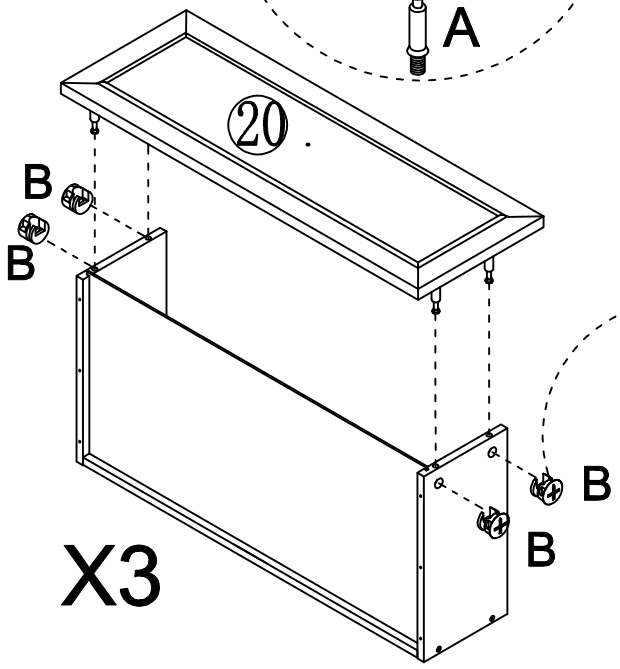

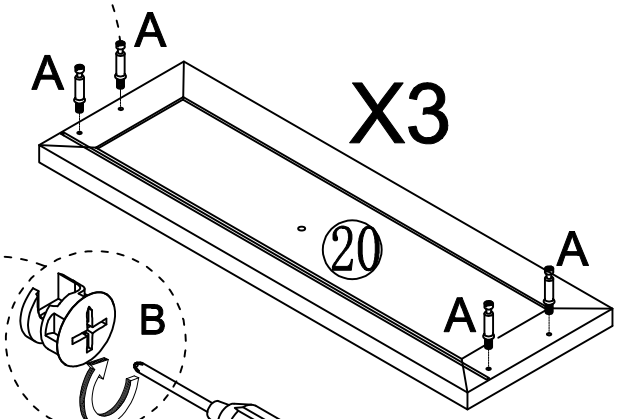


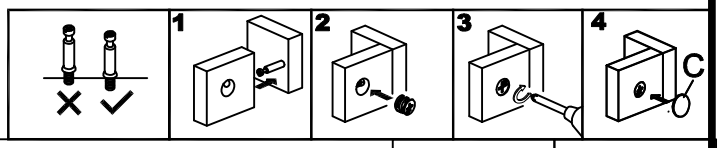


Step 4


G	H
	
X3	X3


X3

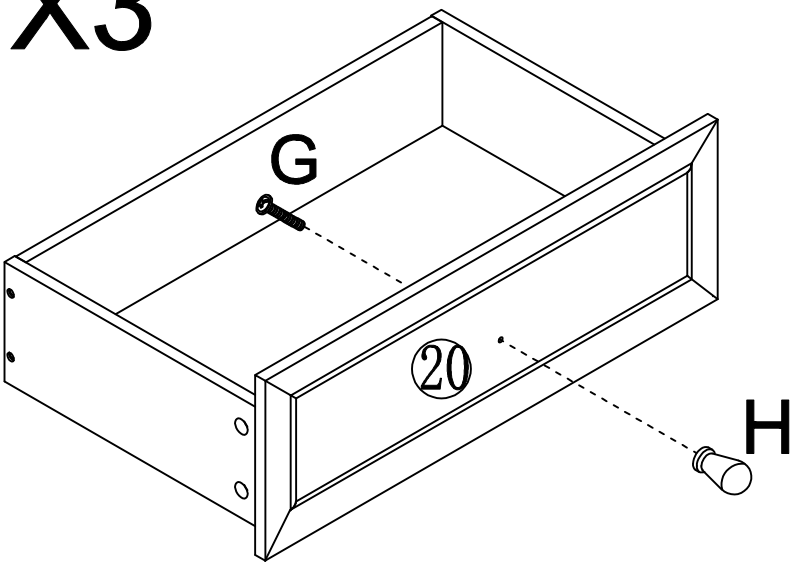



Step 5

A	B	C
		
X12	X12	X12

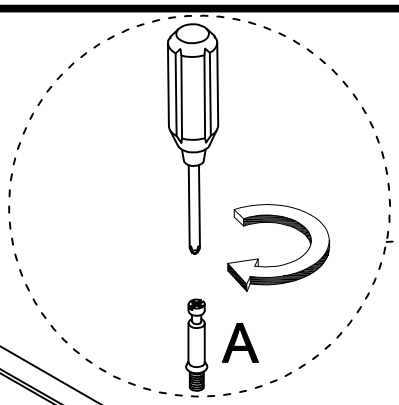

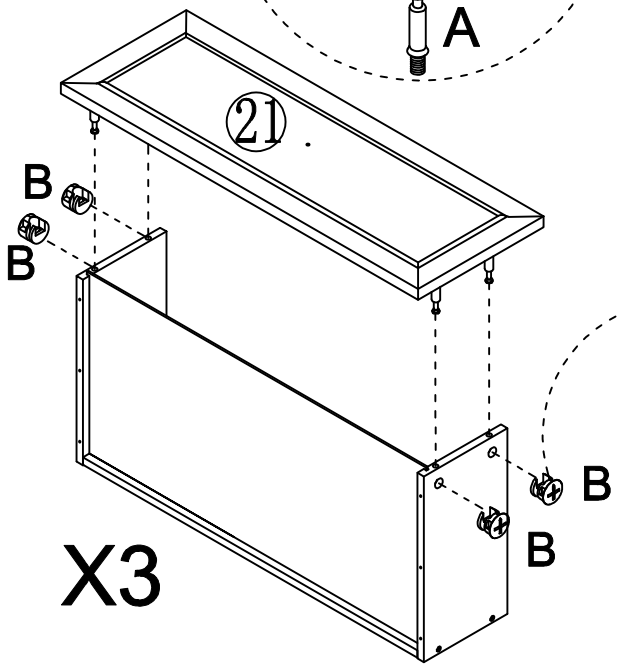


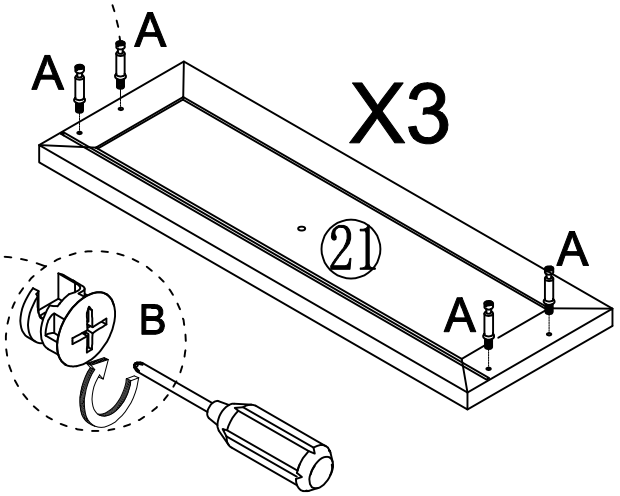

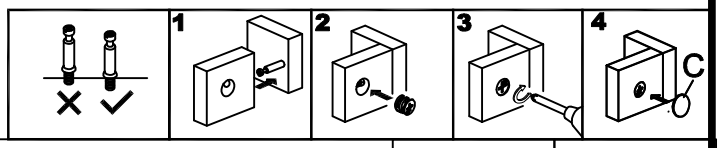



Step 6


G	H
	
X3	X3

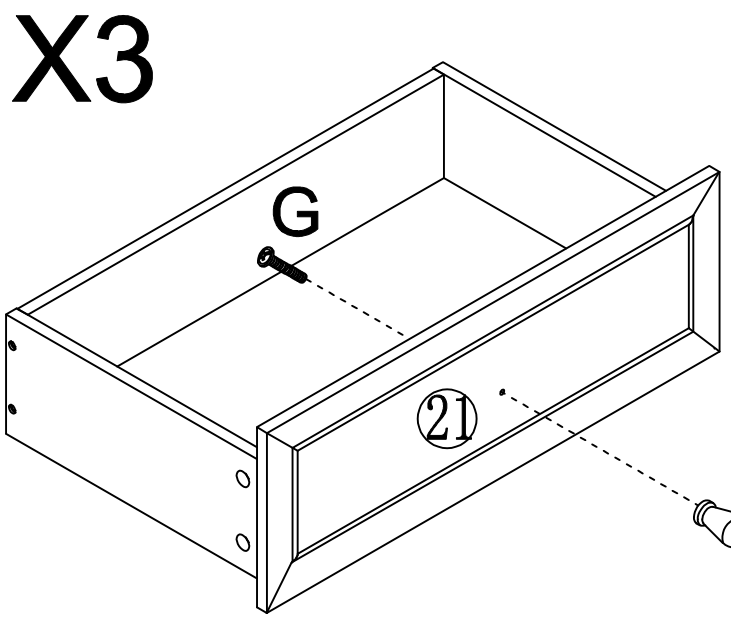



Step 7

A	B	C
		
X12	X12	X12

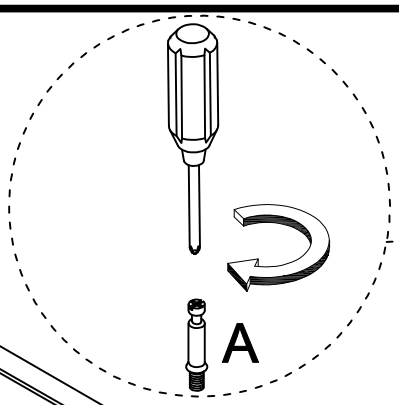

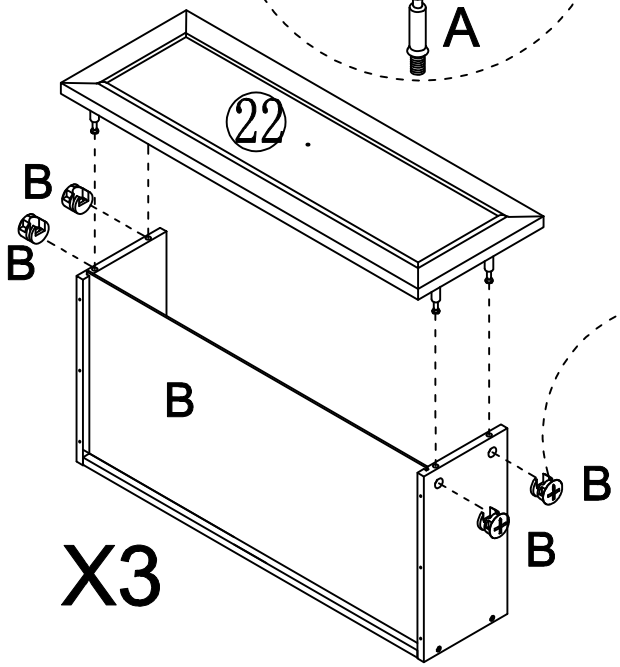

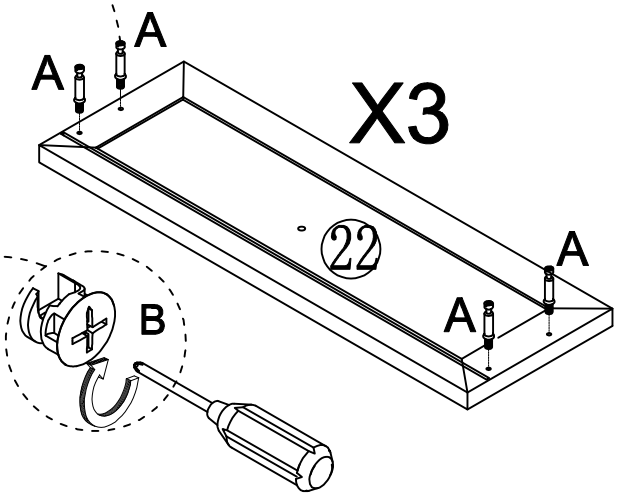


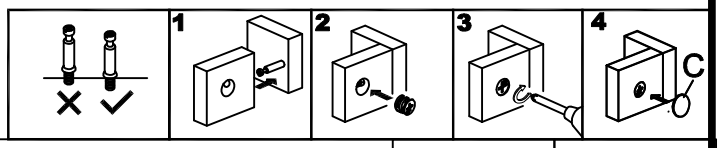

Step 8


G	H
	
X3	X3

X3

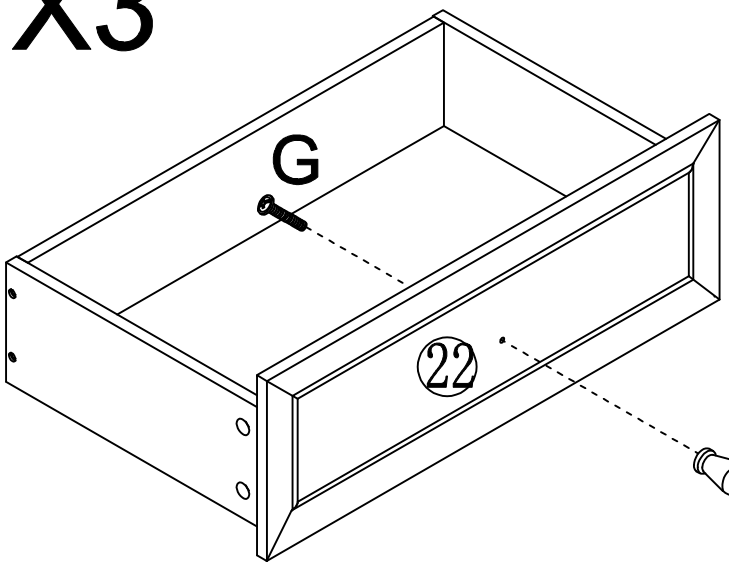



step 9

J-CL




J-CR



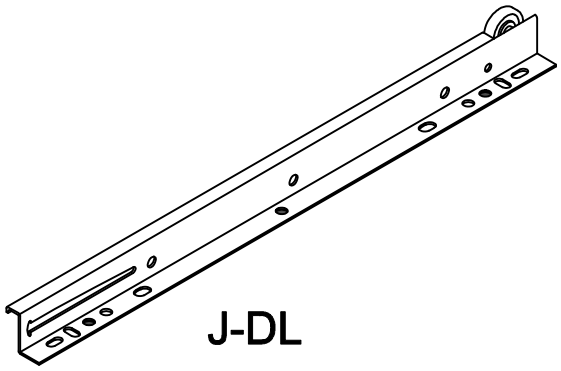


J-DL

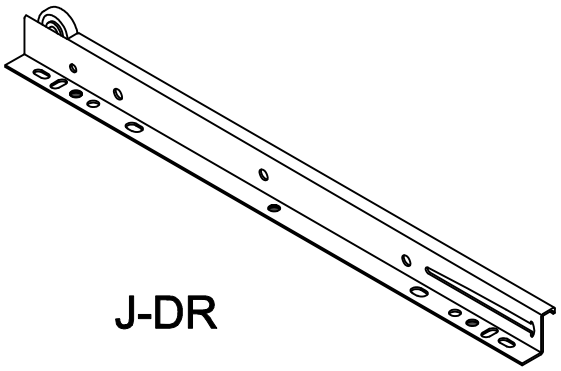


J-DR

Step 10

K	J
	
X54	X9


Refer to the images to identify J-DL (left) and J-DR (right). Attach J-DL to #16 panel and J-DR to #17 panel. [K] screws must go in the exact spots shown.

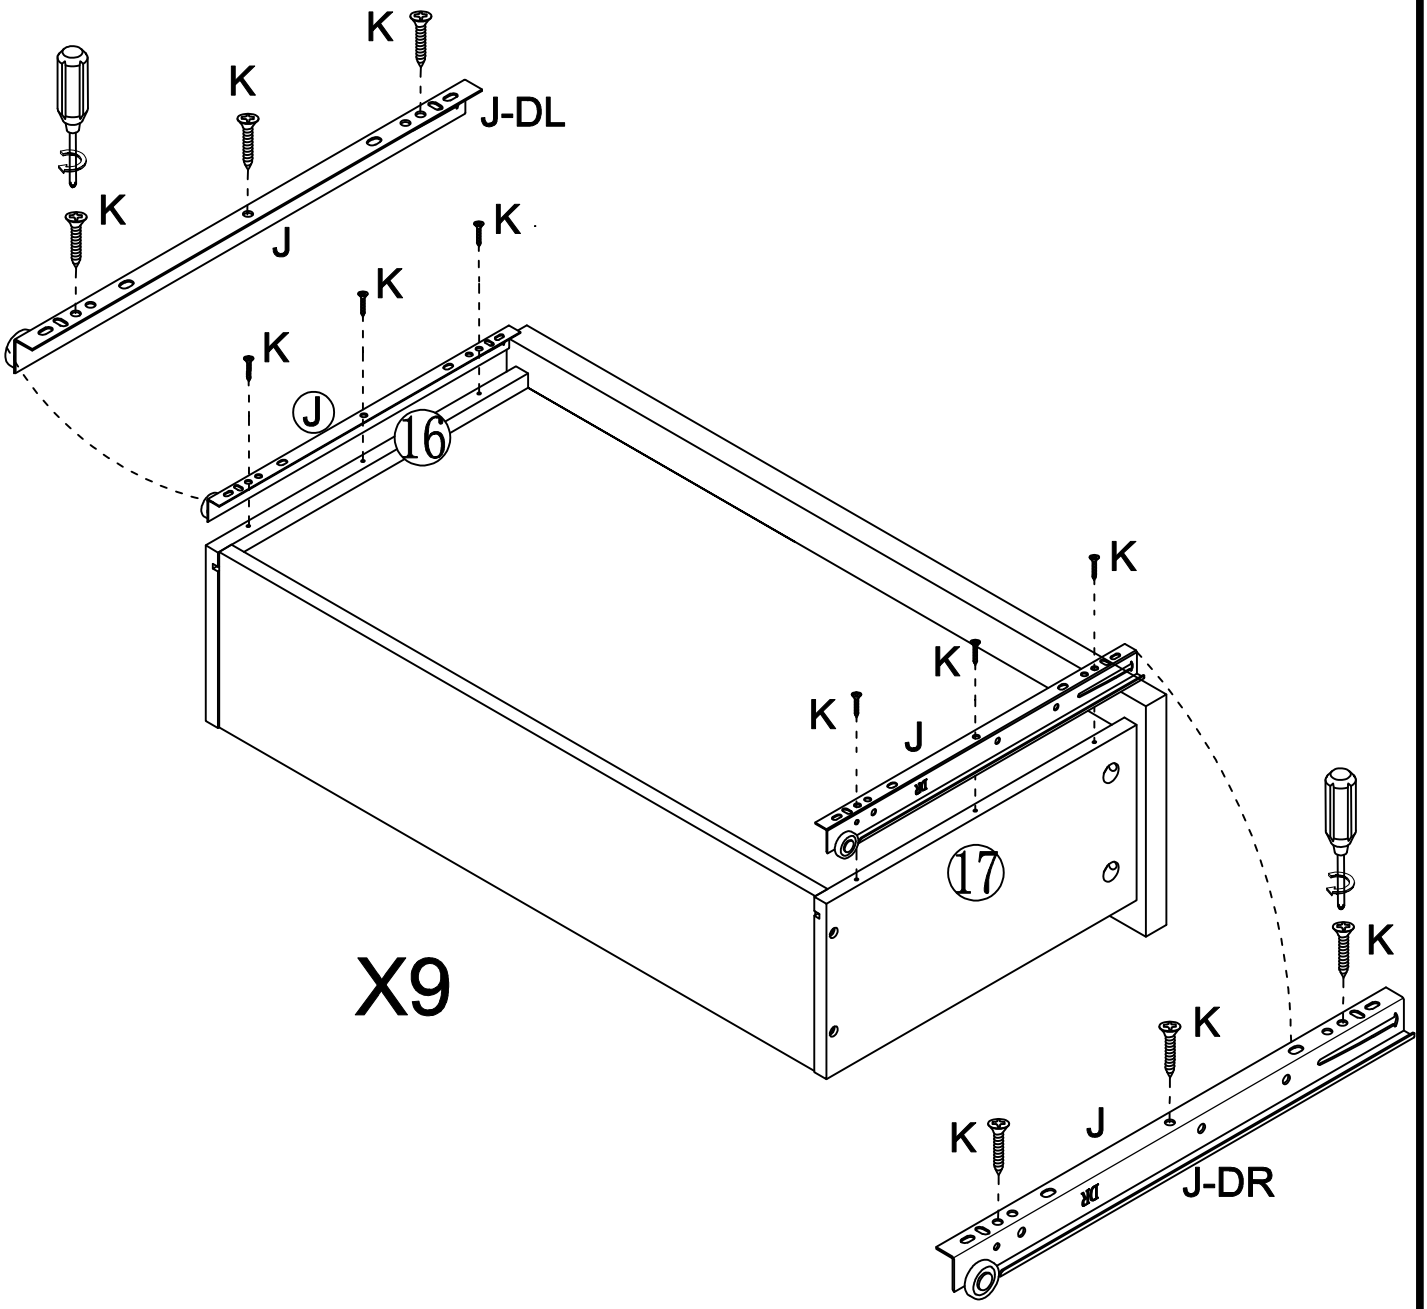



step 11


NOTE:


Refer to the images to identify J-CL (left) and J-CR (right). Attach J-CL to #3 panel and J-CR to #4 panel. [K] screws must go in the exact spots shown.

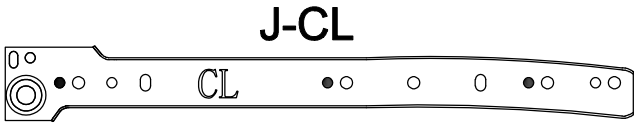

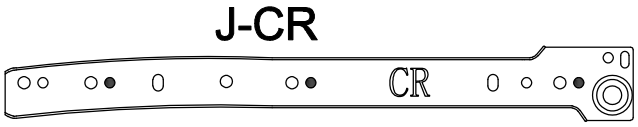

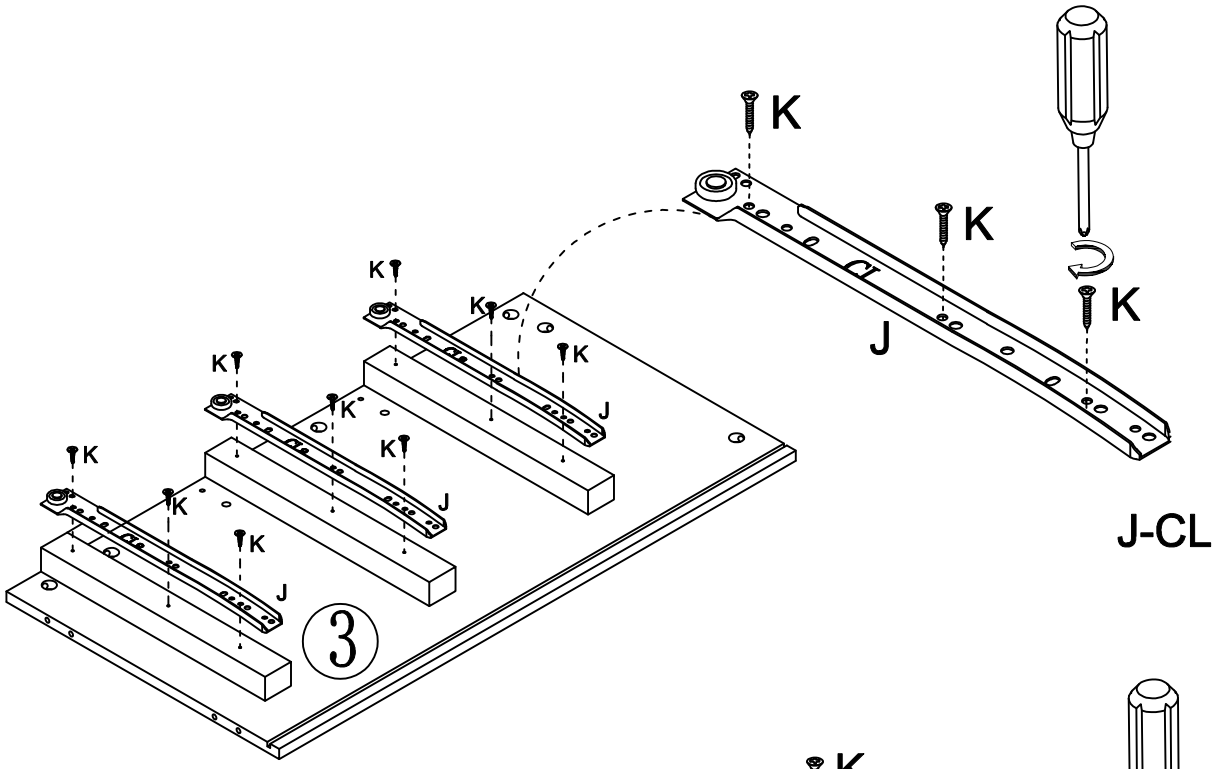

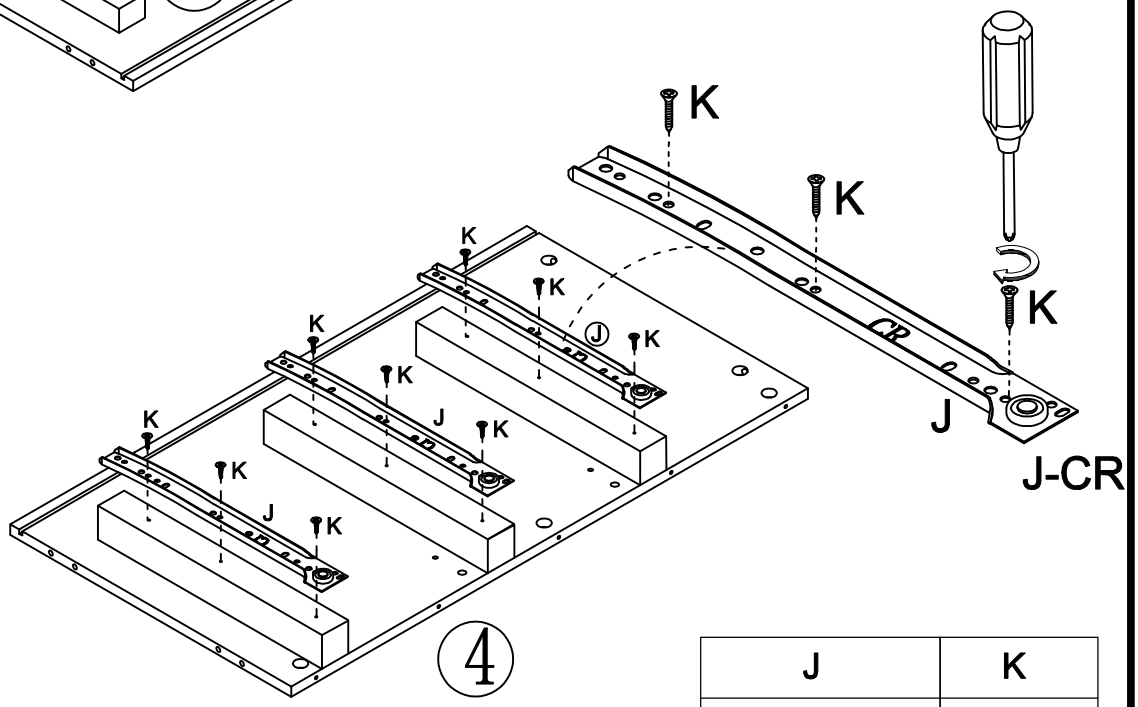



J	K
	
X3	X18

Step 12


NOTE:

Refer to the images to identify J-CL (left) and J-CR (right). Attach J-CL to #5 panel and J-CR to #5 panel. [K] screws must go in the exact spots shown.

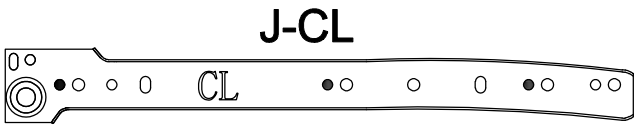

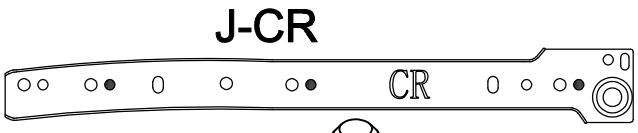

Notice:Both sides of part#5 required to assemble the slides.

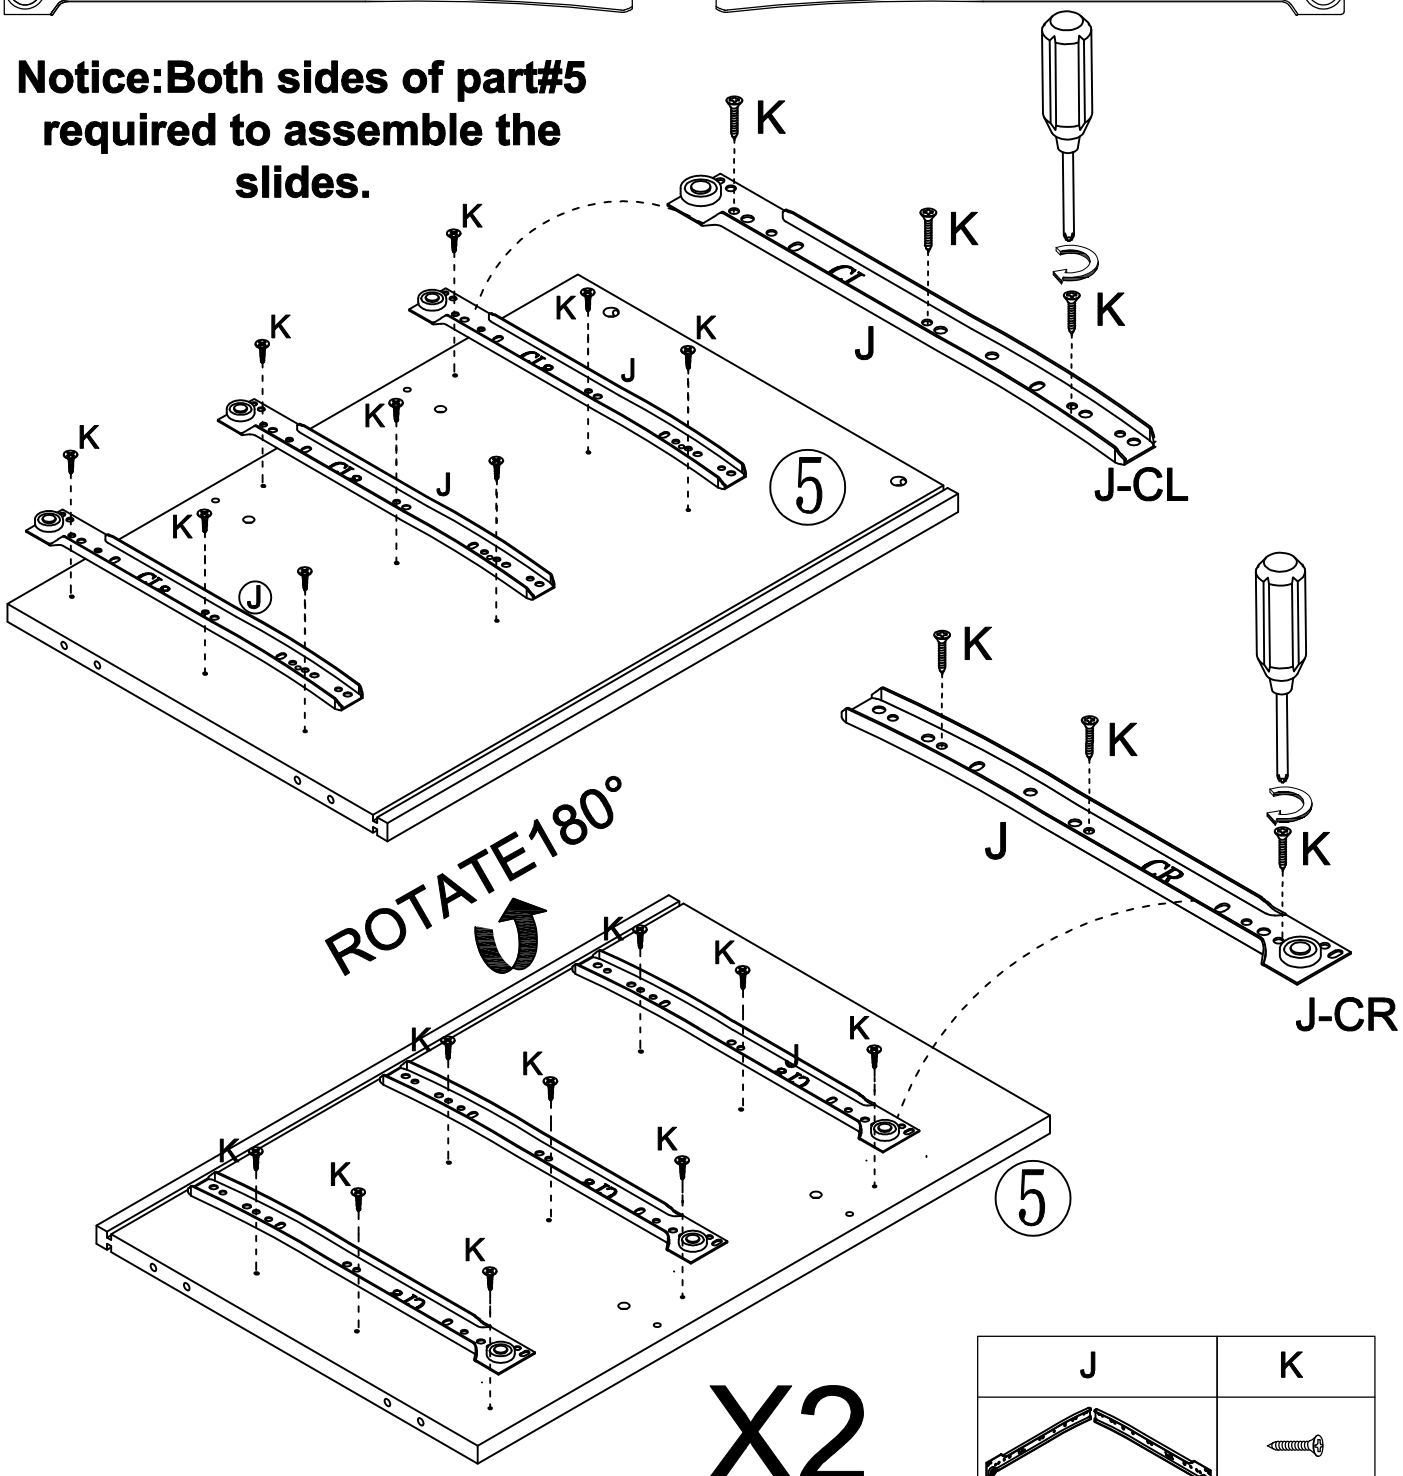



X2

J	K
X6	X36


Step 13

Notice:Both sides of part#5 required to assemble the slides.

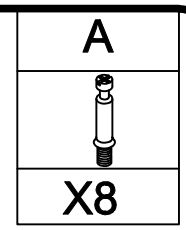


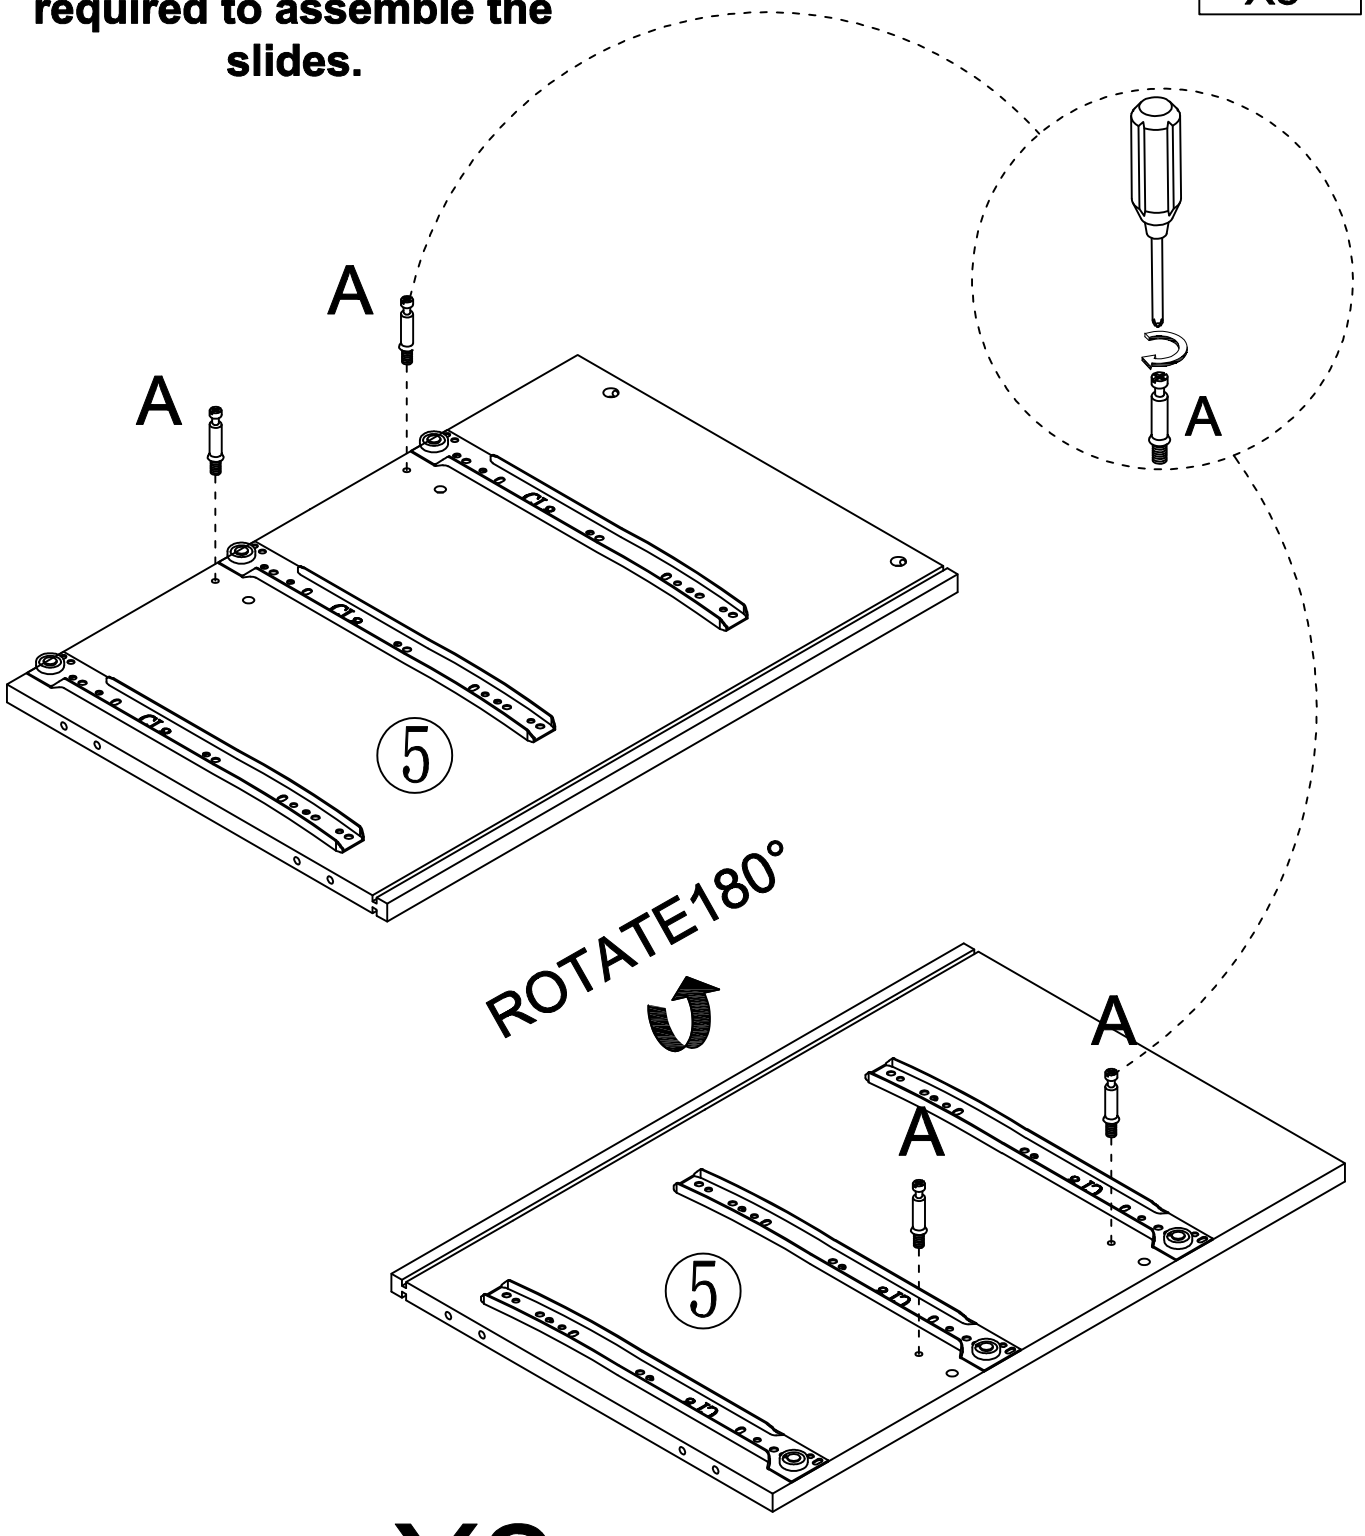



X2

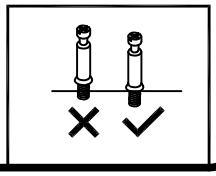

step 14

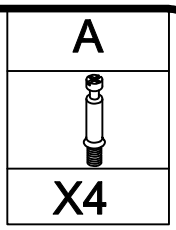

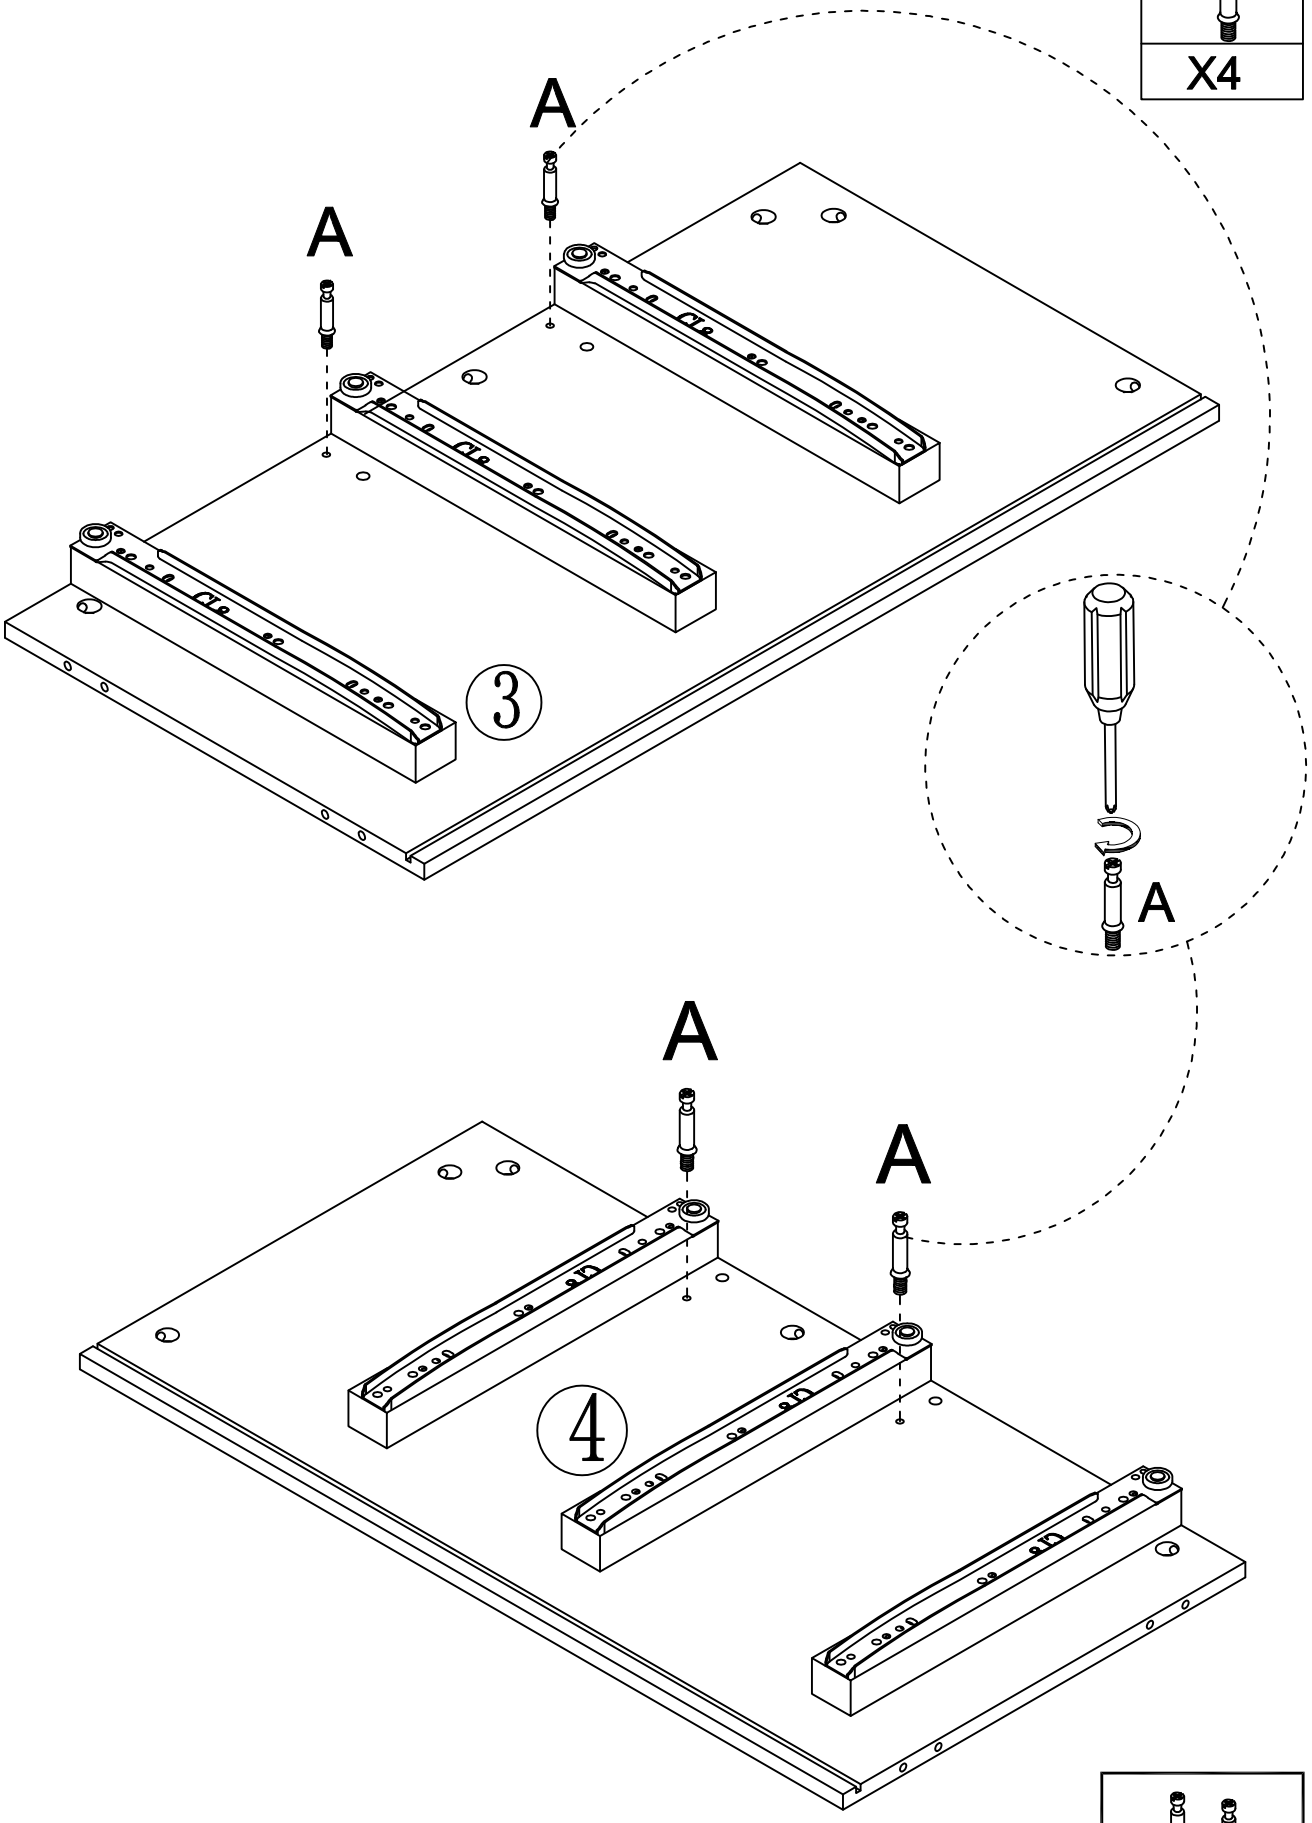


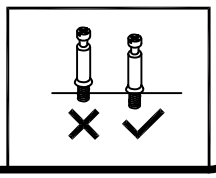


step 15

B	C	D
		
X4	X4	X4

Notice:
More than 2 people to assemble this item.

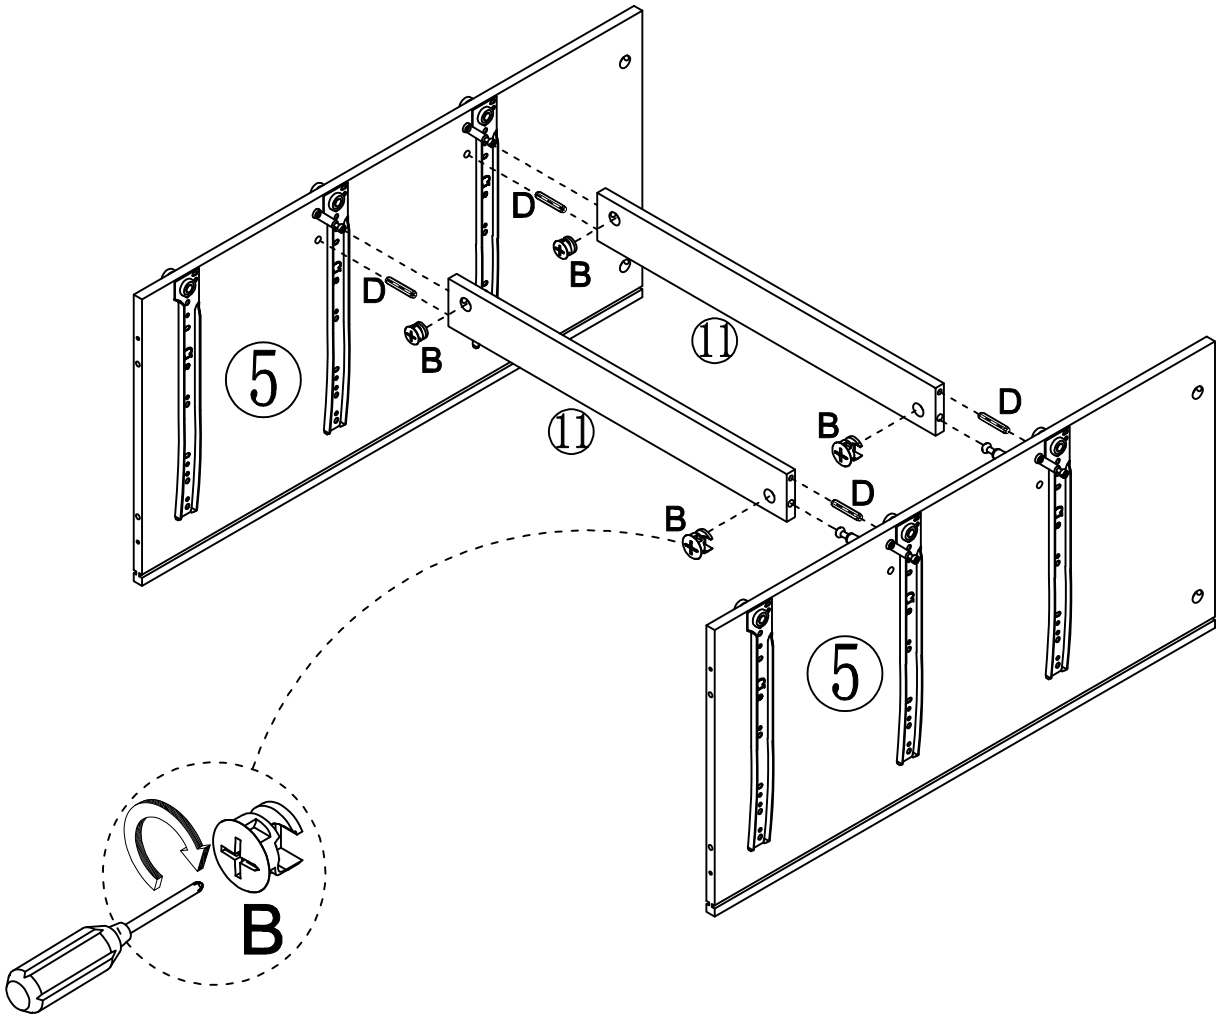


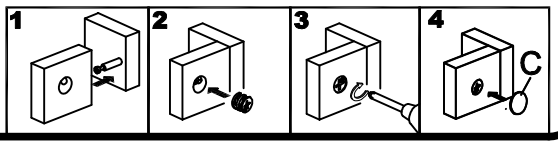


step 16

B	C	D
		
X4	X4	X4

Notice:
More than 2 people to assemble this item.

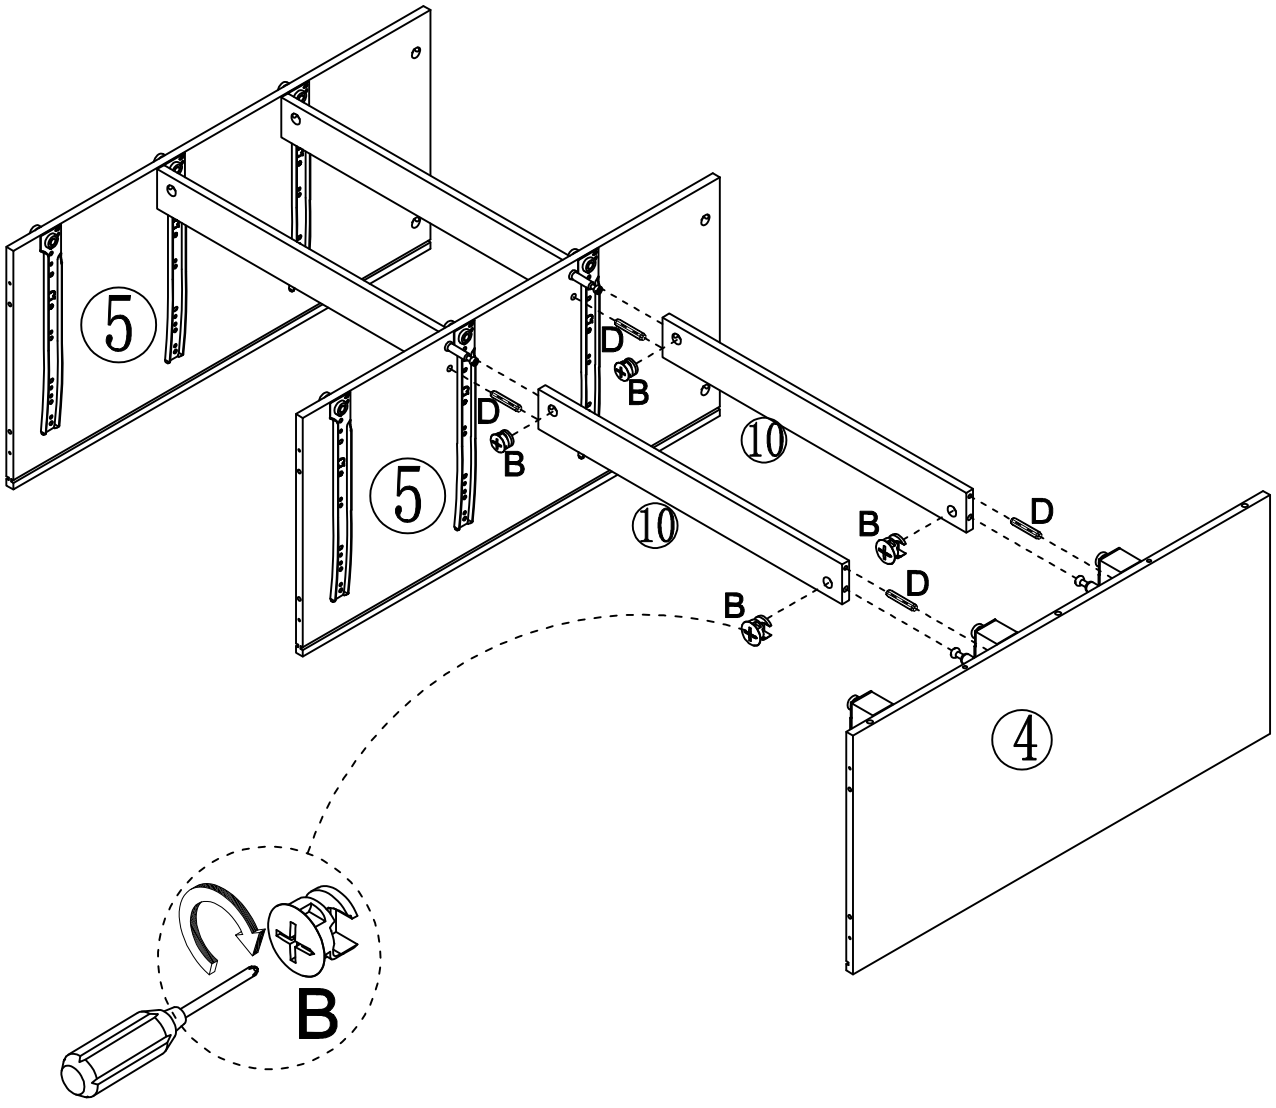


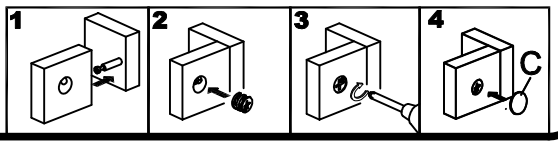


step 17

B	C	D
		
X4	X4	X4


Notice:
More than 2 people to assemble this item.

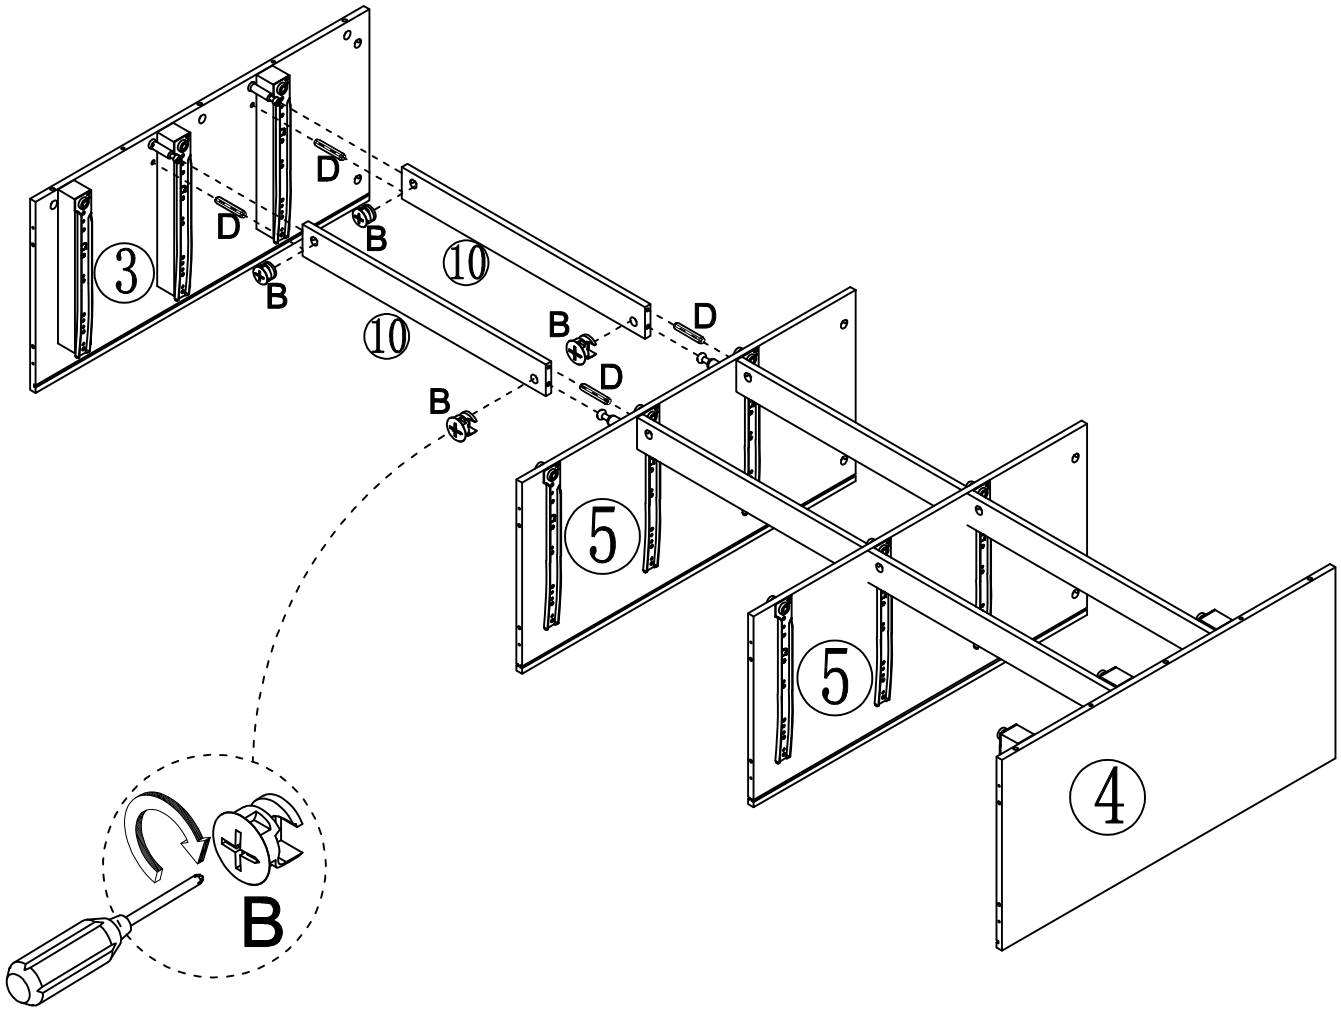


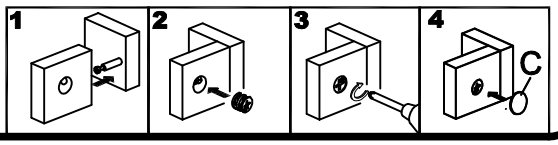

Step 18


R	S	A
		
X2	X2	X8

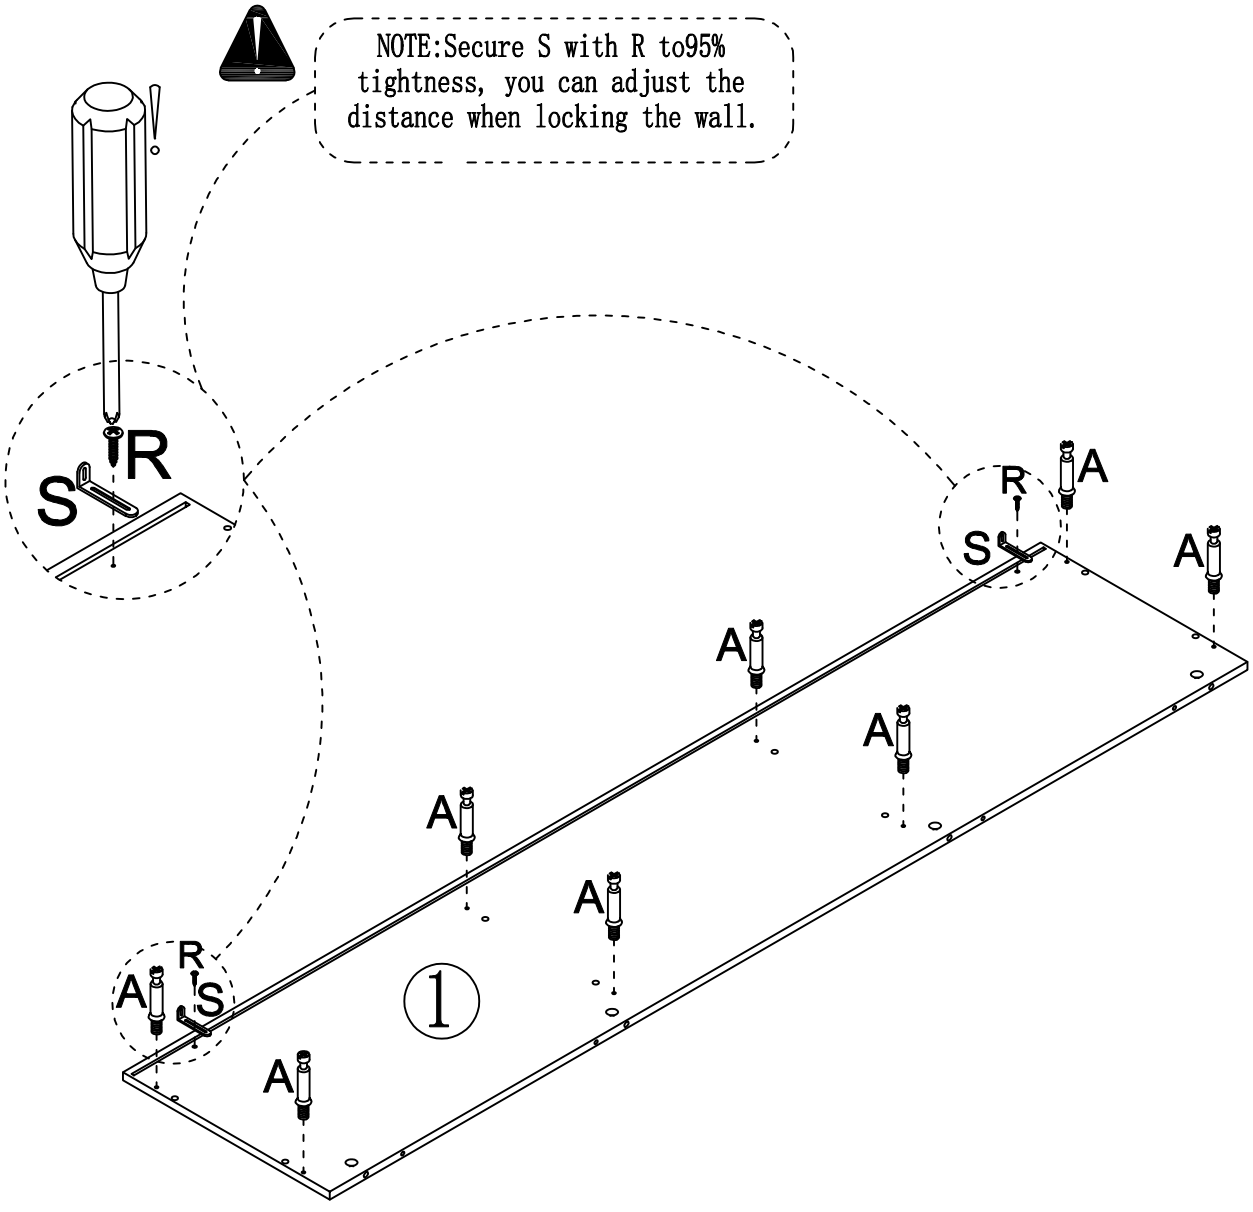

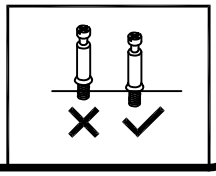


Step 19


B	C	D
		
X8	X8	X8

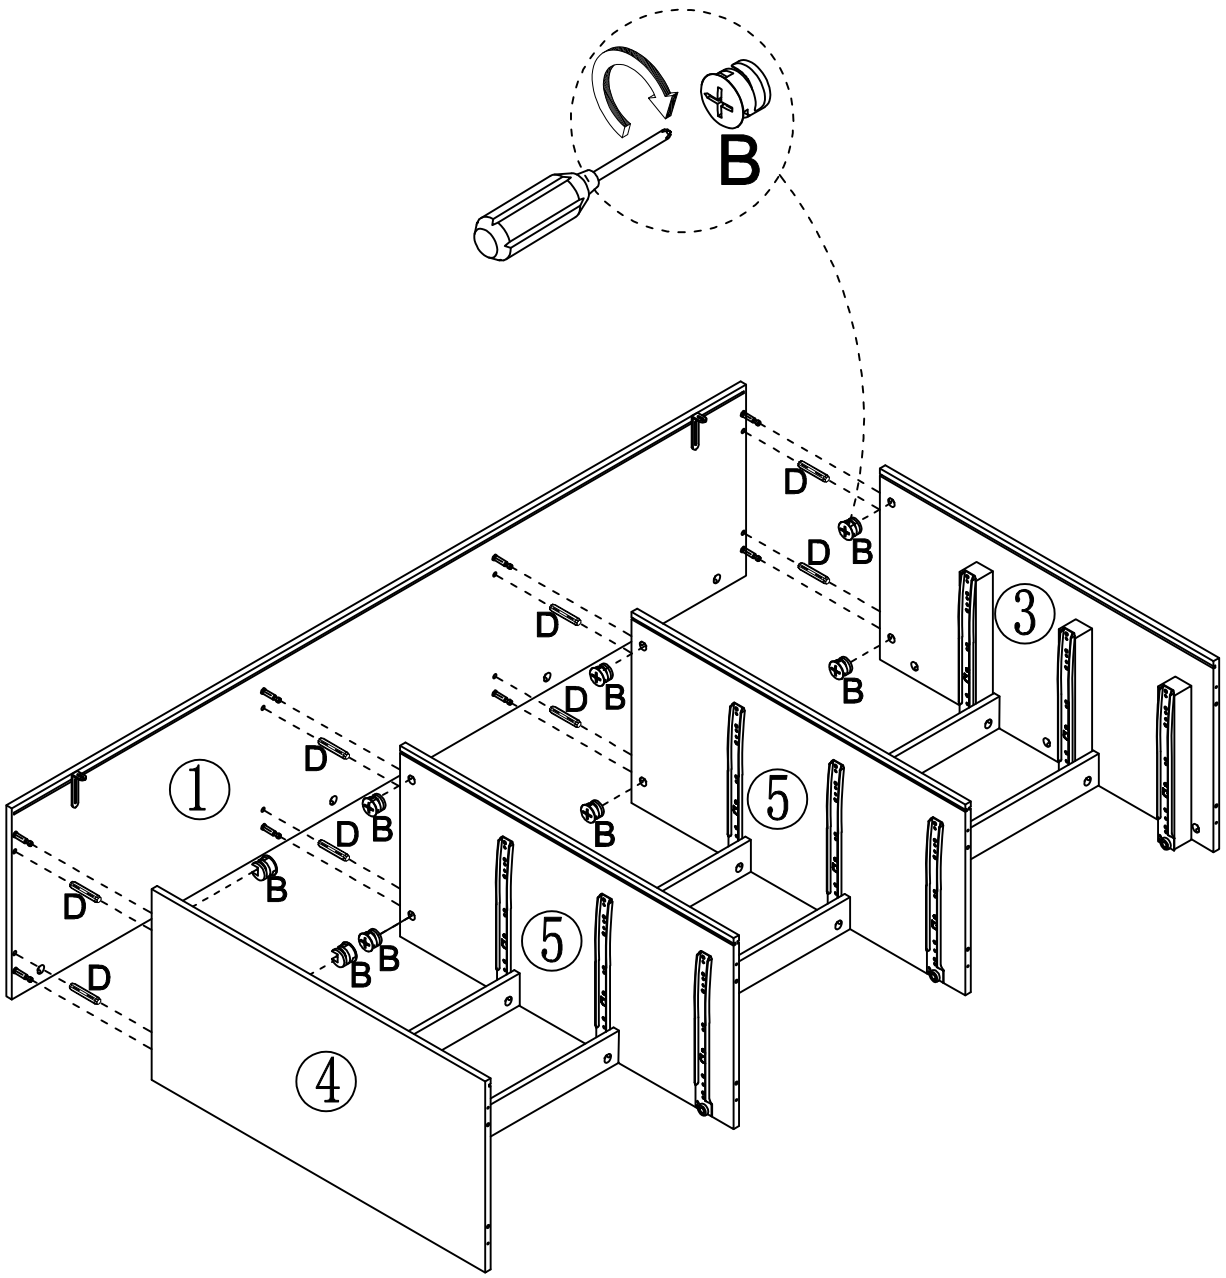

Notice:
More than 2 people to assemble this item.

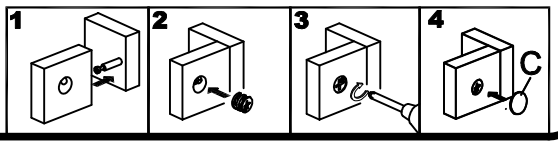



Step 20

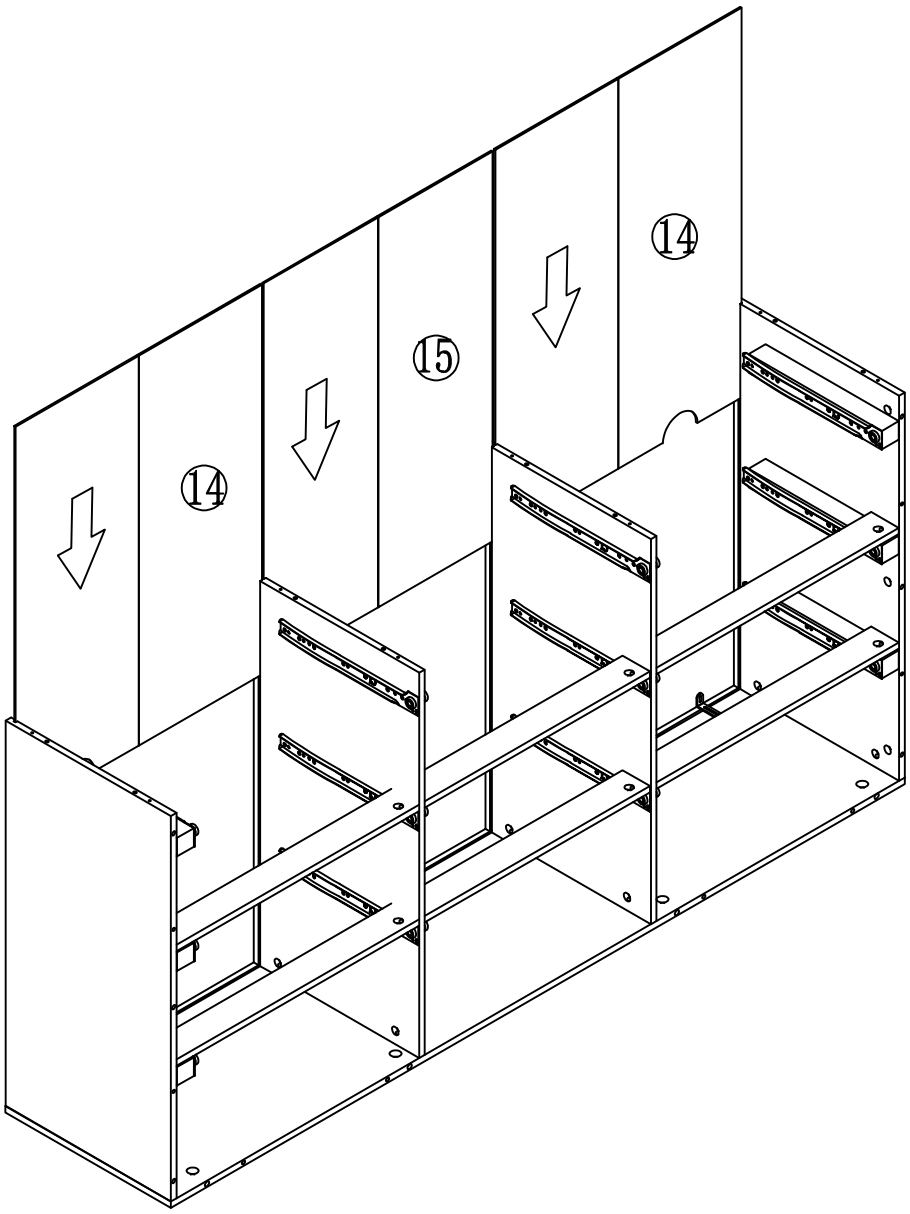

Step 21

D	E	F
		
X8	X1	X8

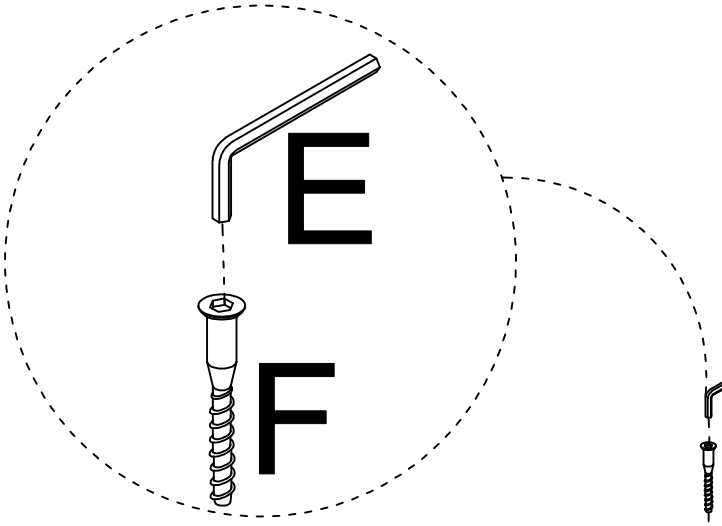


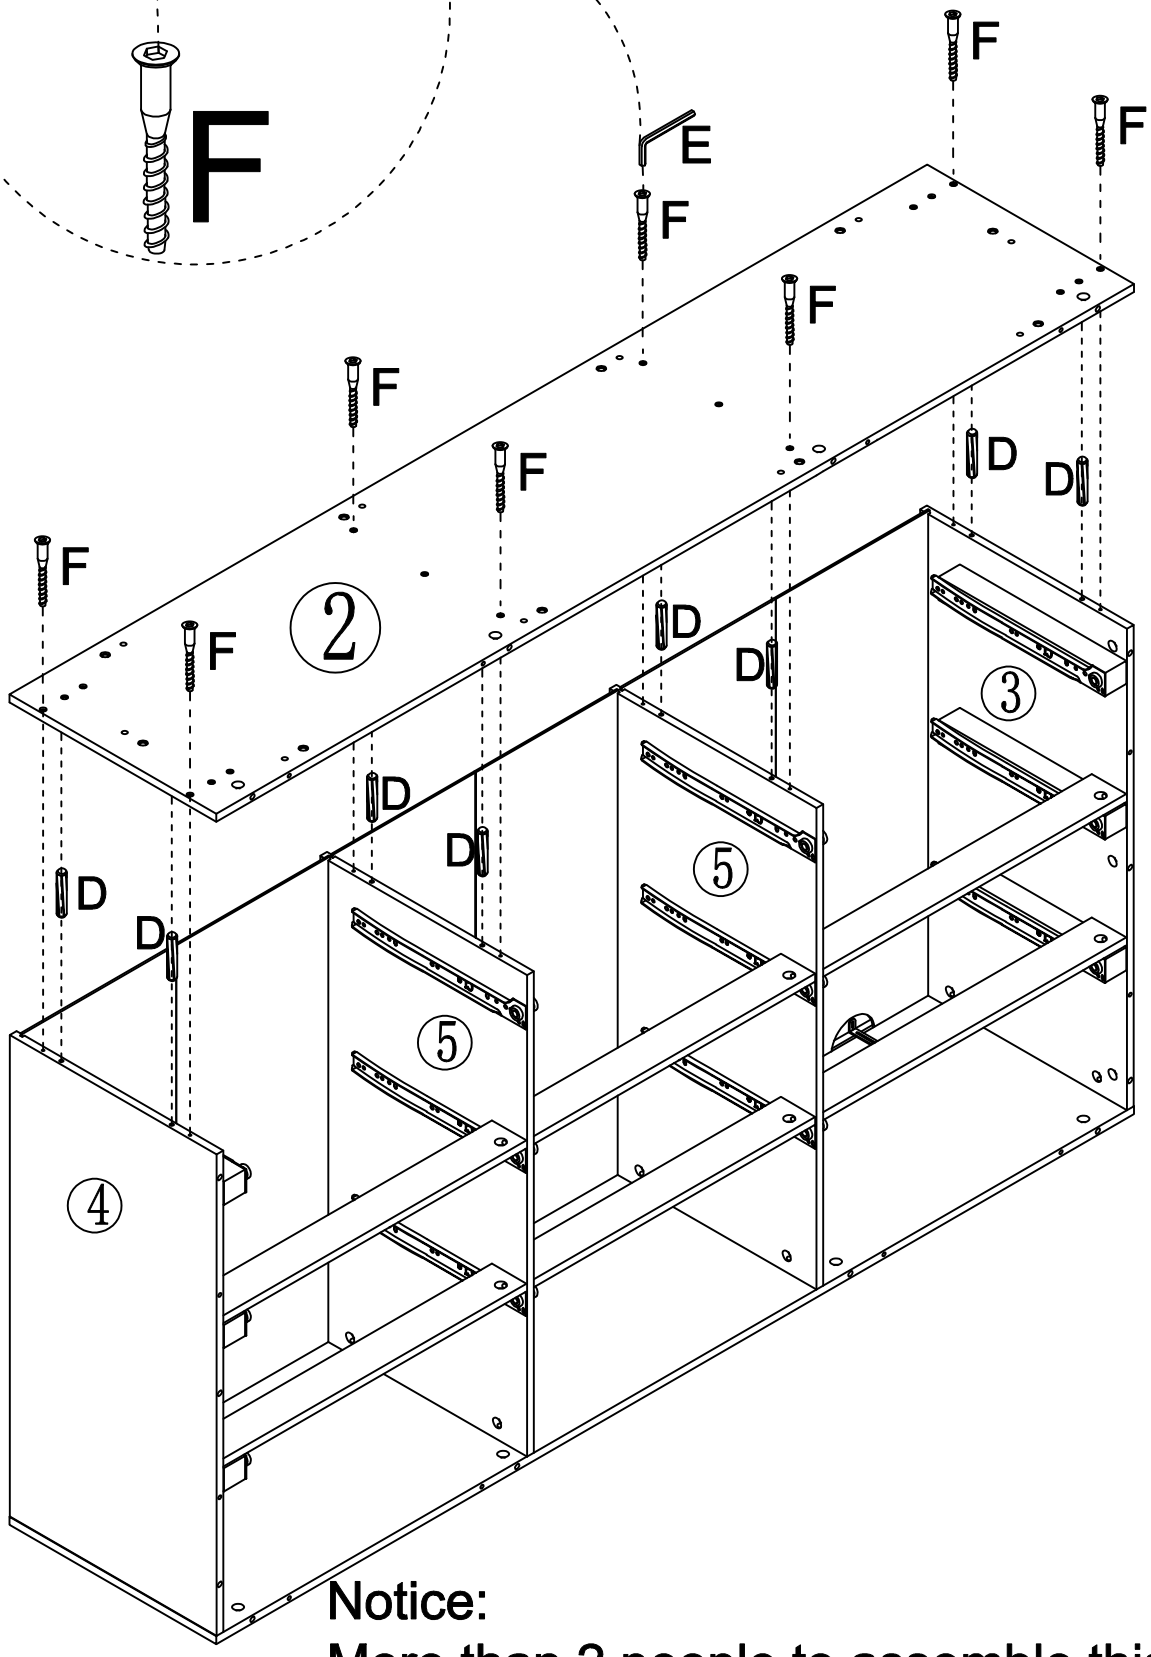

Notice:
More than 2 people to assemble this item.


Step 22


Q	P
	
X24	X24

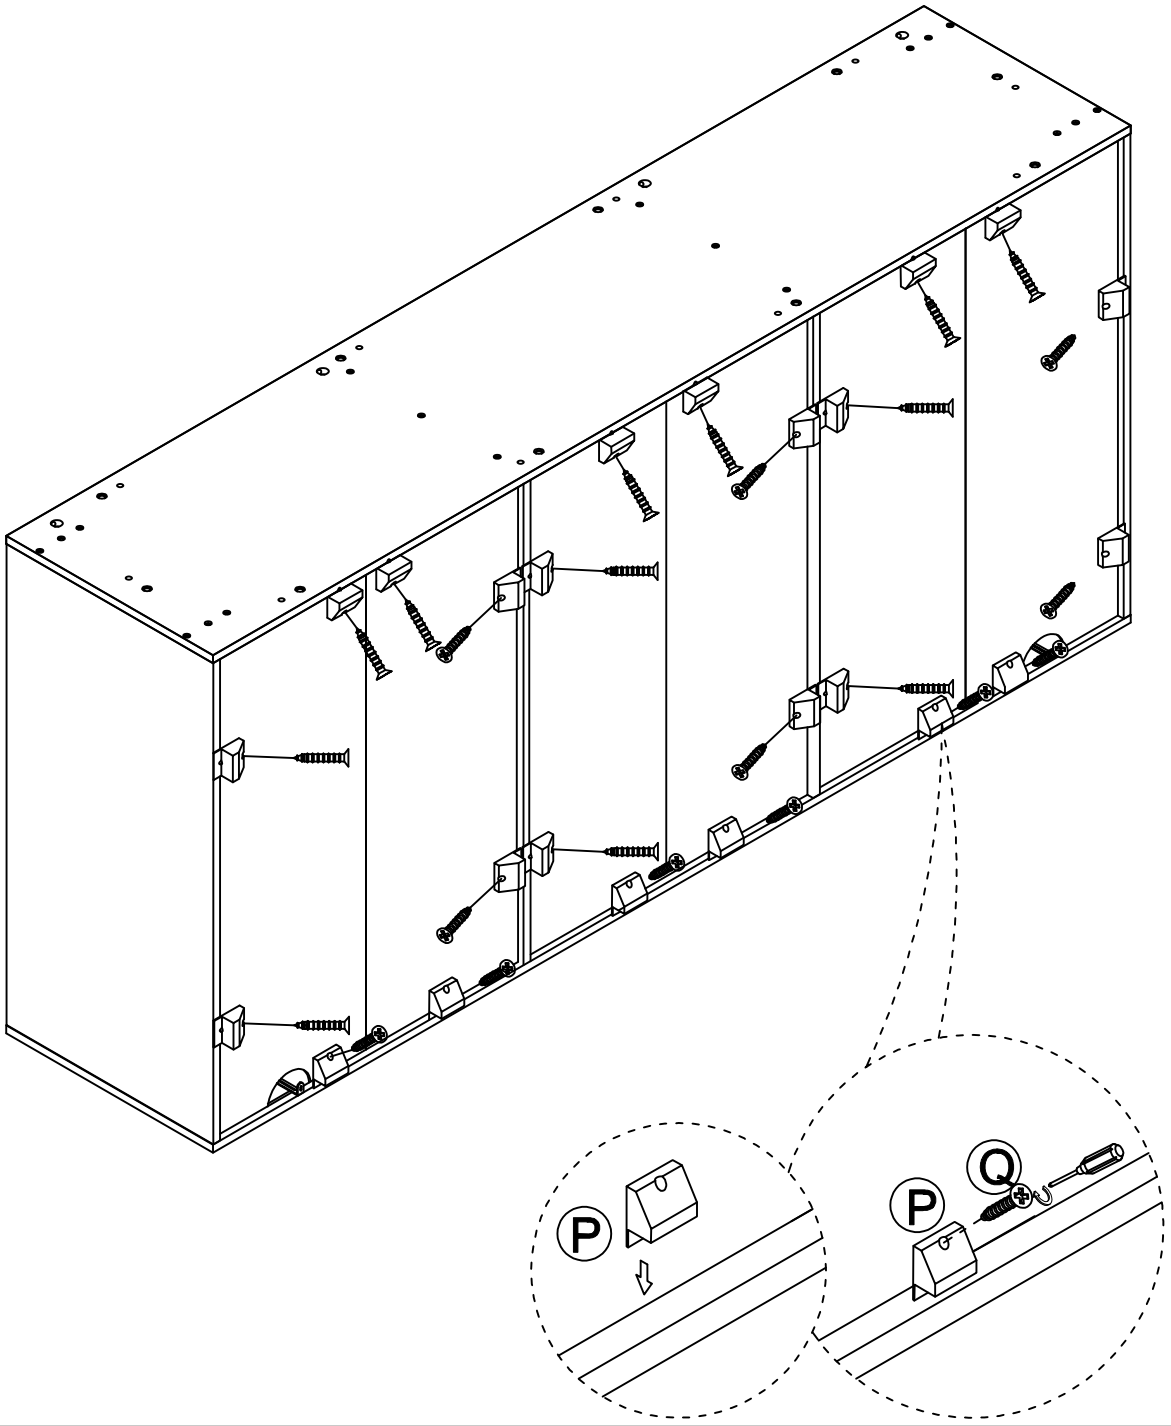


Step 23

D	A
	
X8	X14

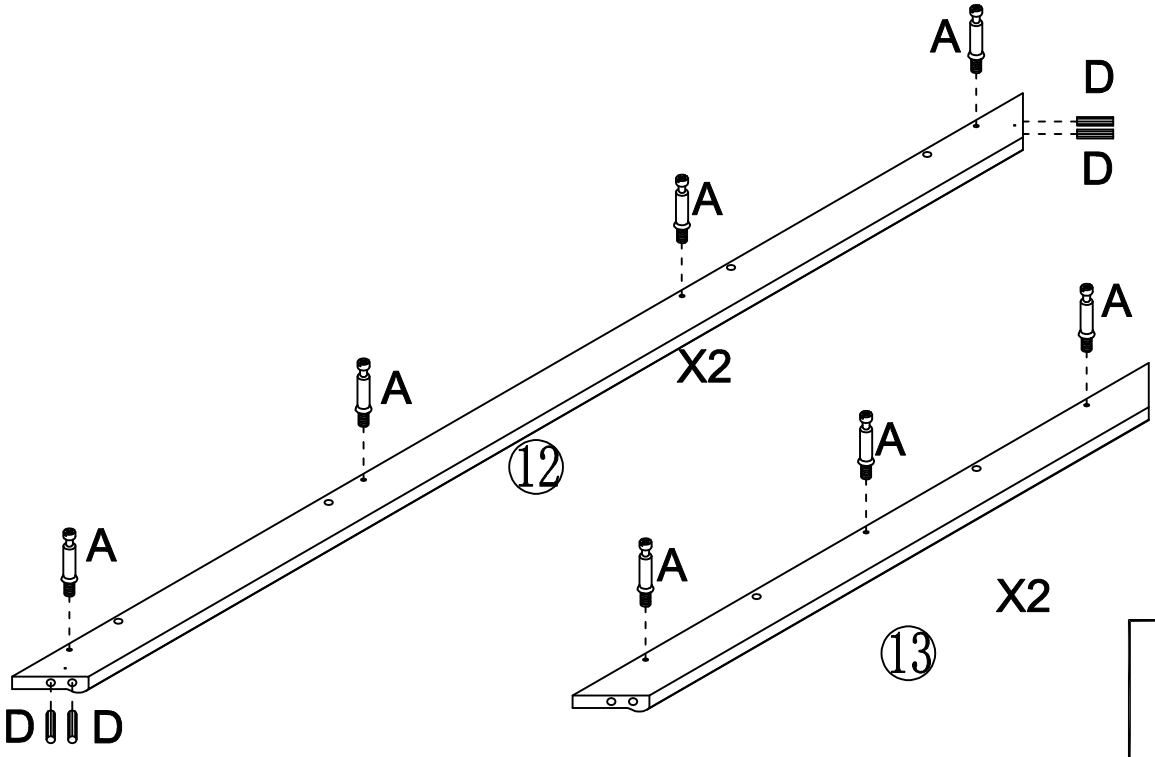

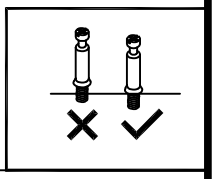


Step 24

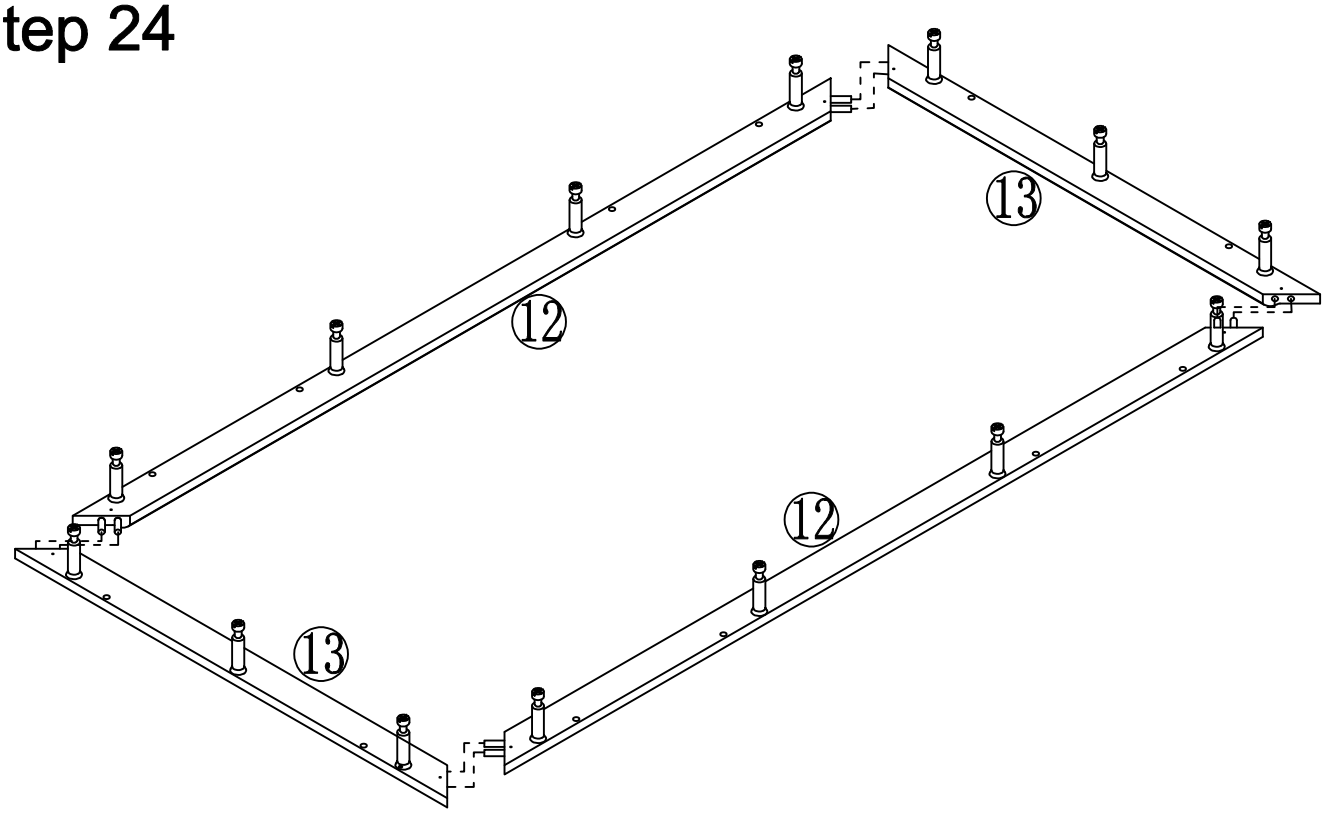


Step 25

X	W
	
X4	X8

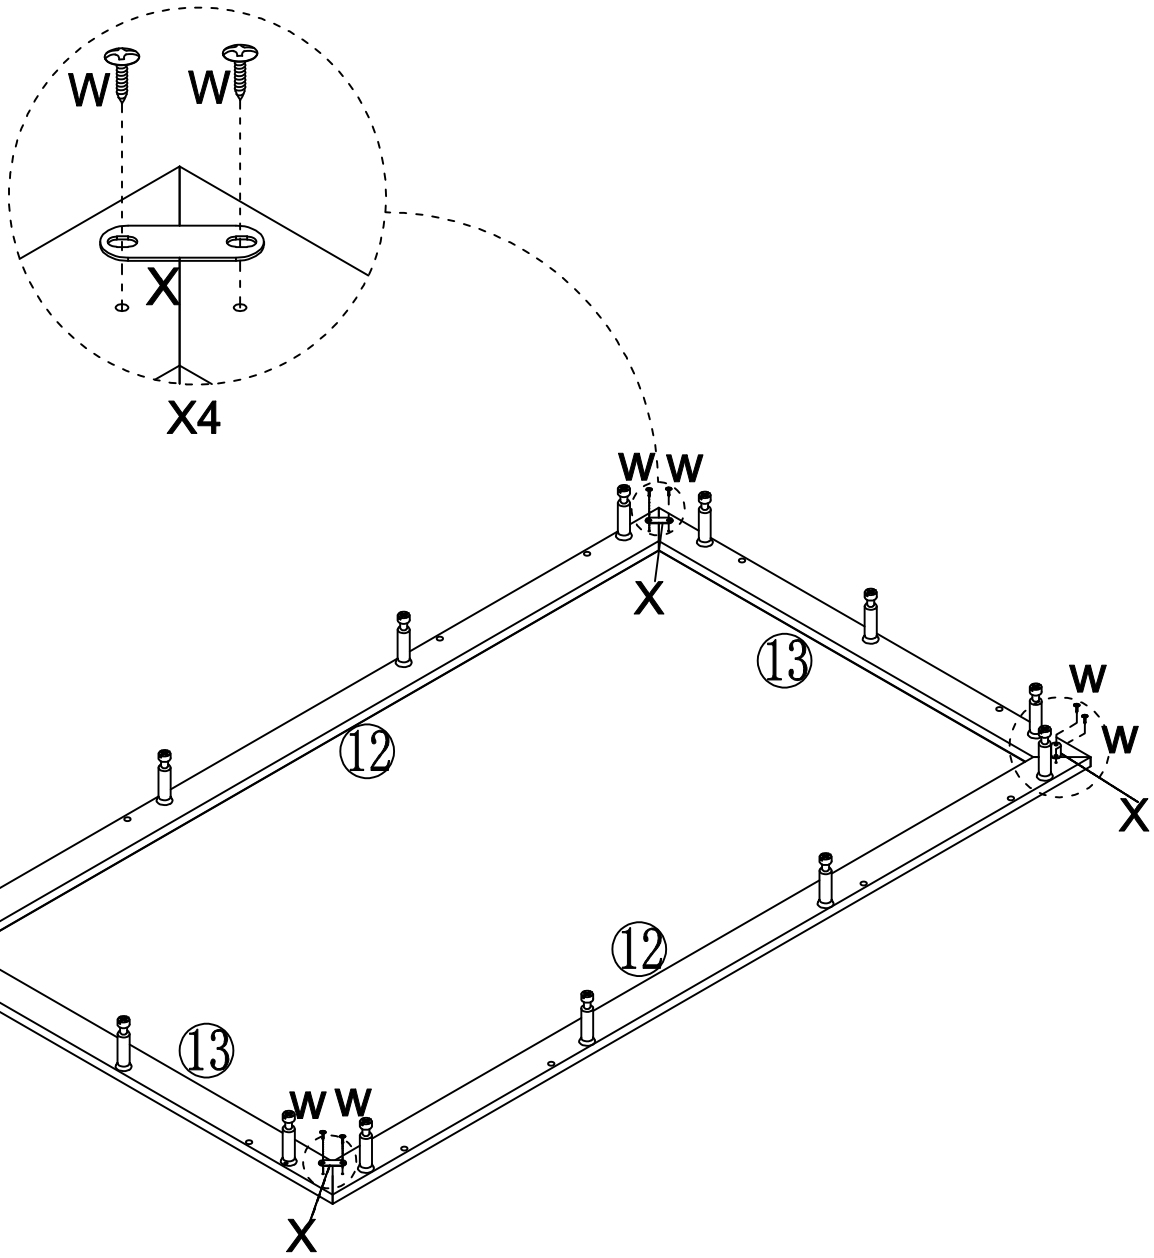


Step 26

B	C	D
		
X14	X14	X12

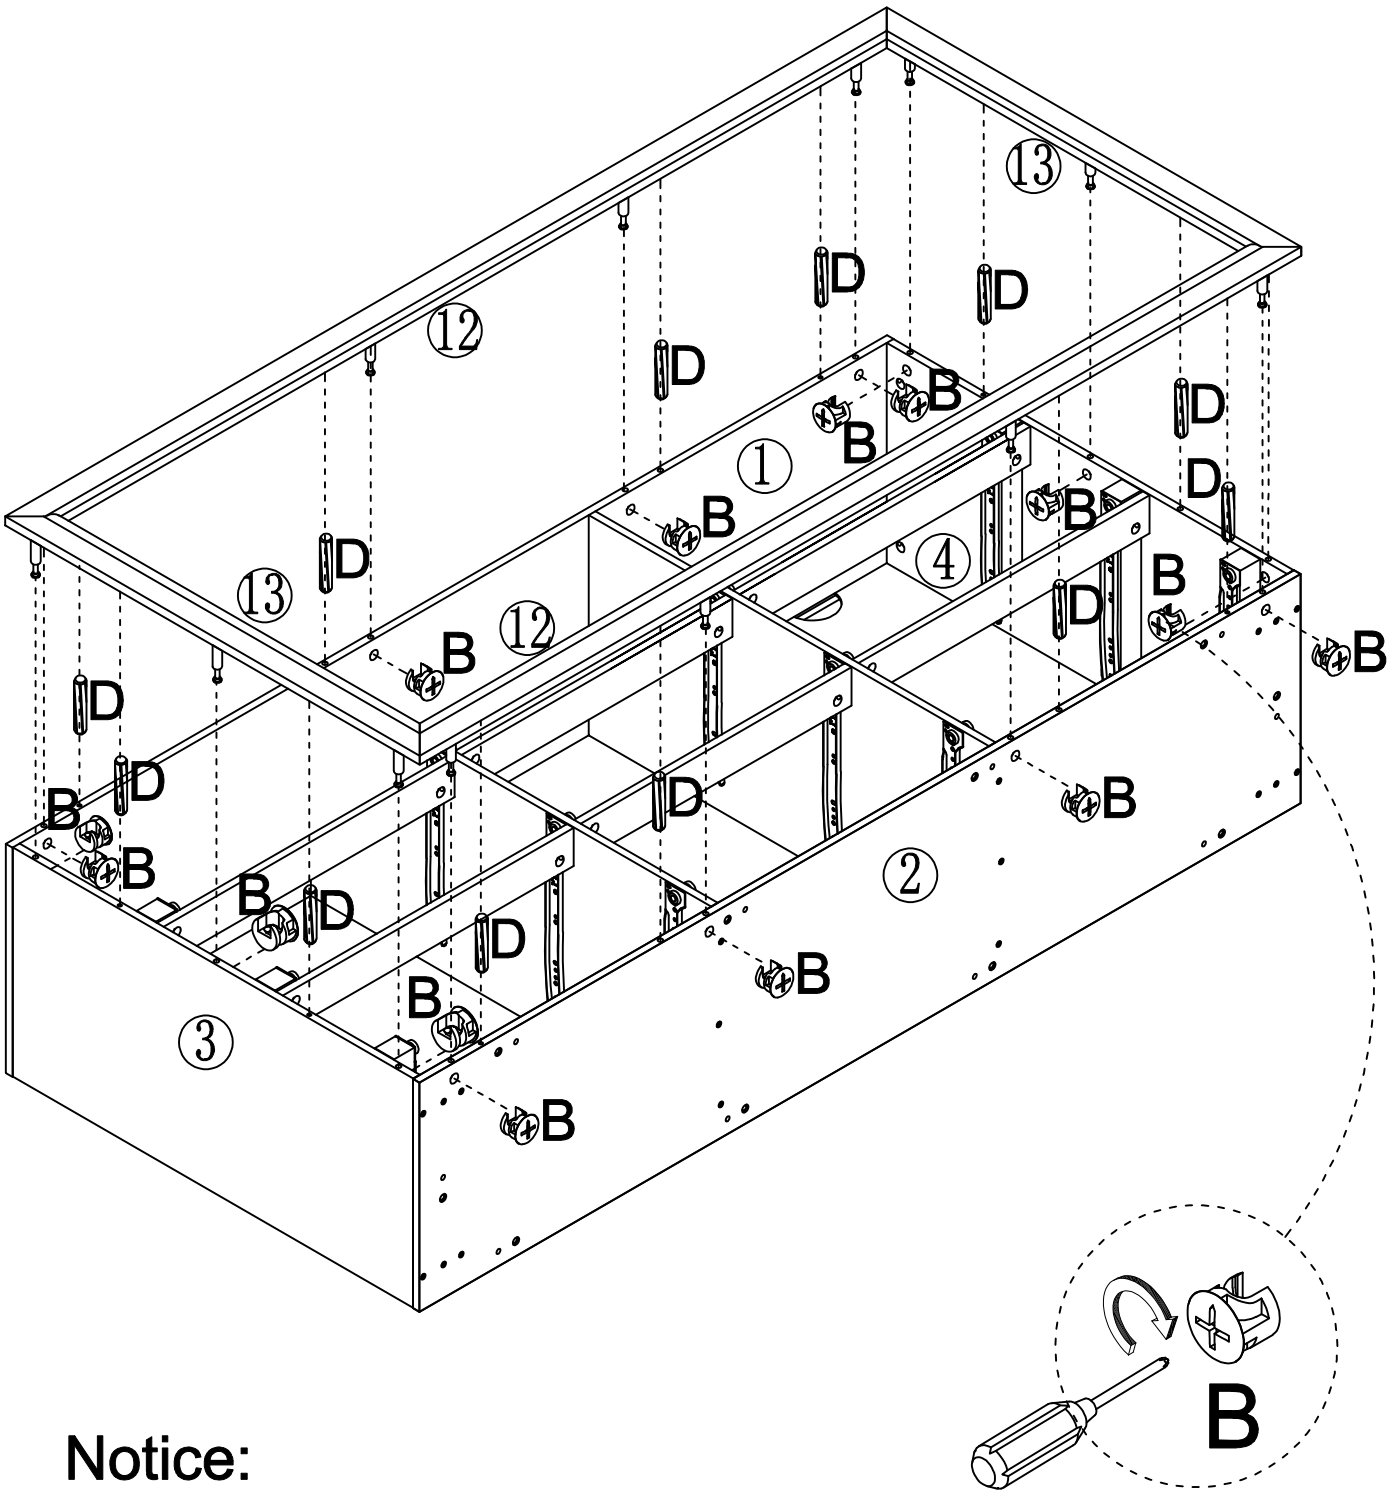



Notice:


More than 2 people to assemble this item.

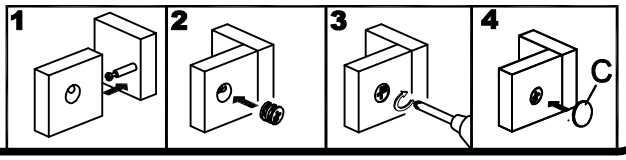

Step 27A


M	L	N
		
X14	X1	X14

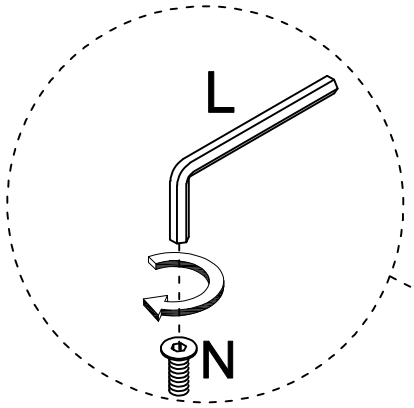

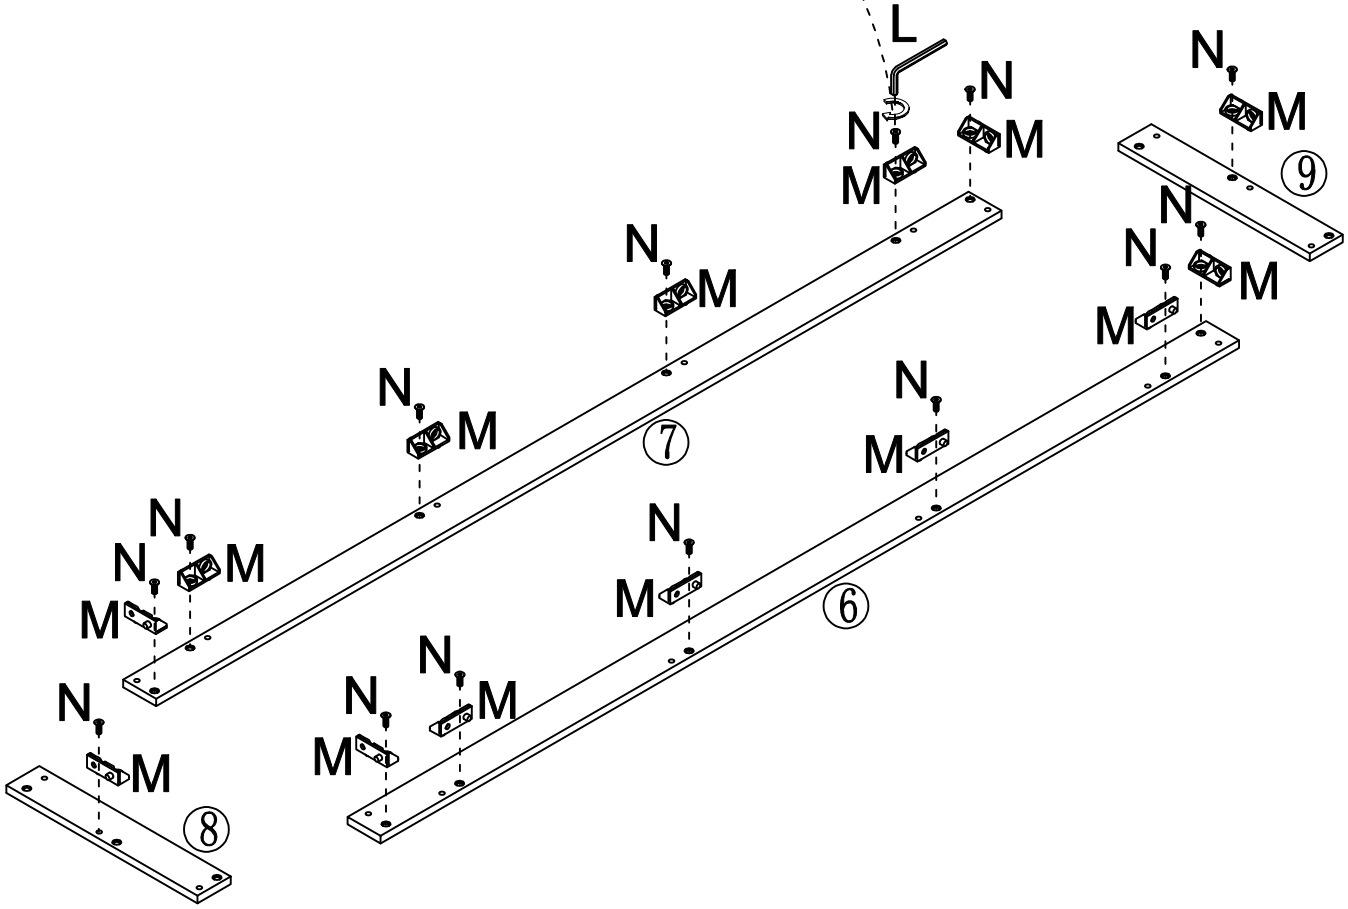


Step 27B

L	O
	
X1	X8

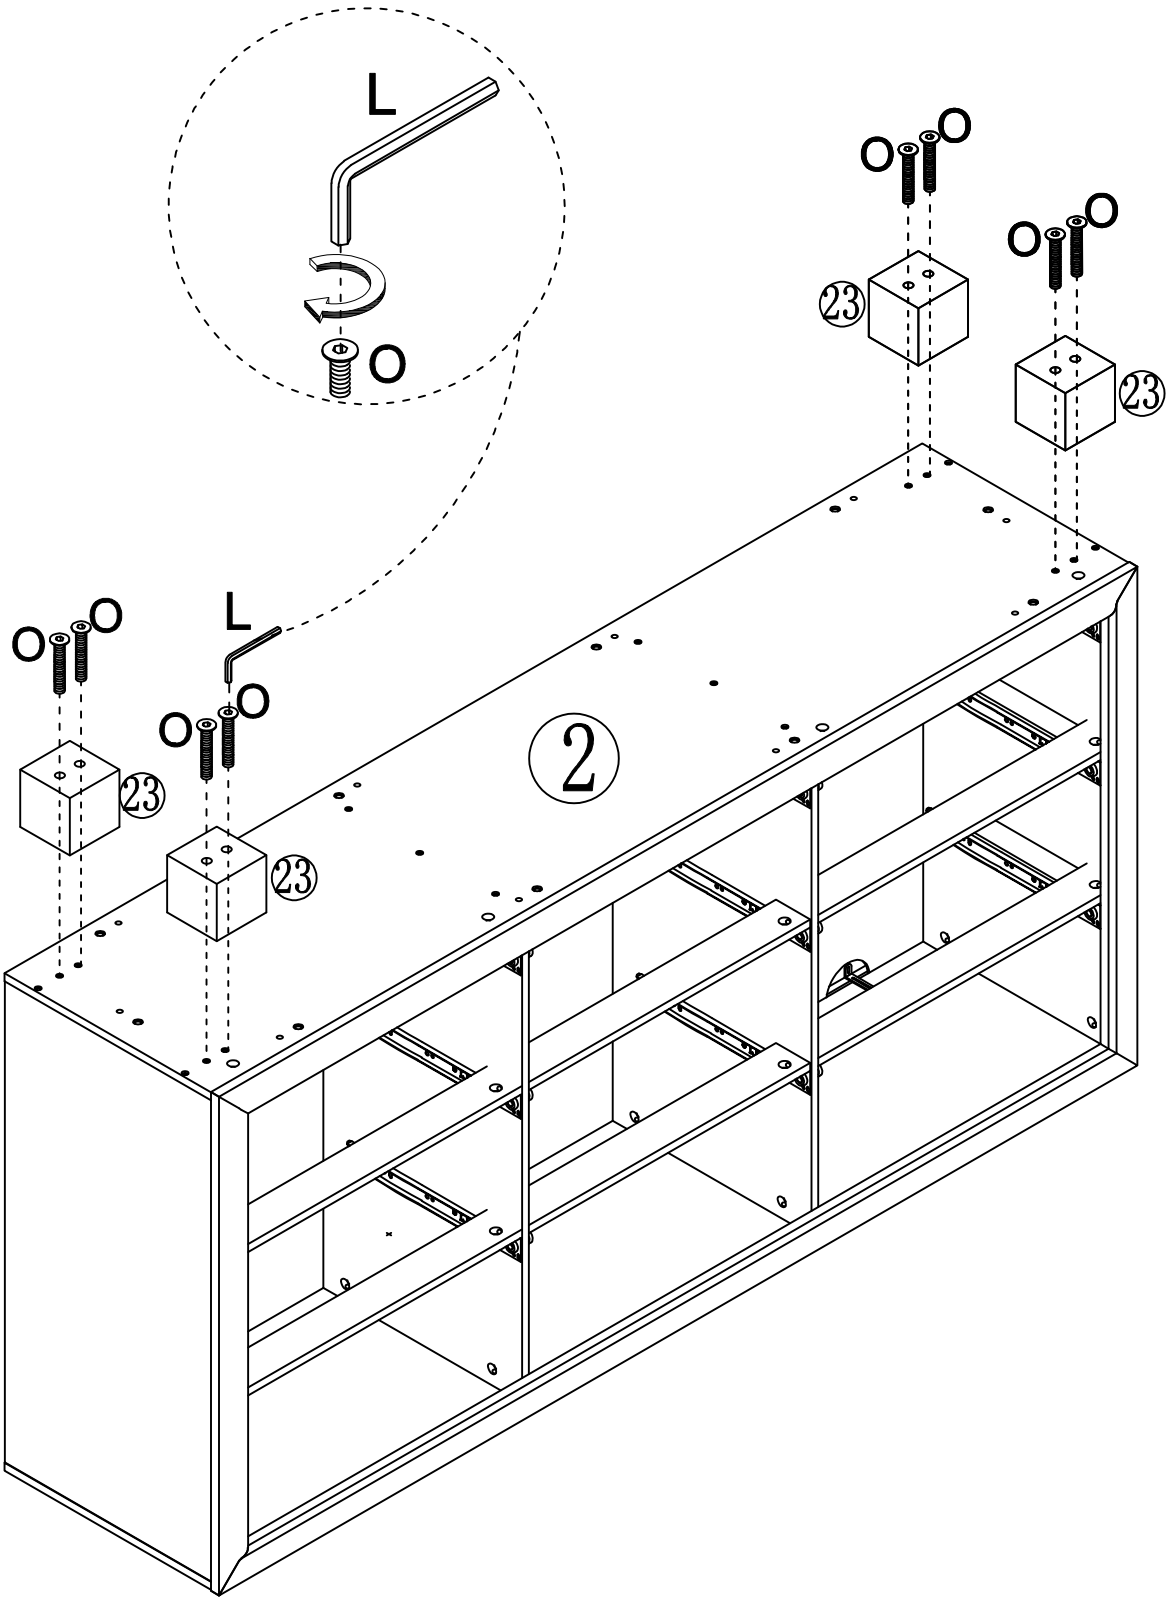


Step 28A

L	N
	
X1	X4

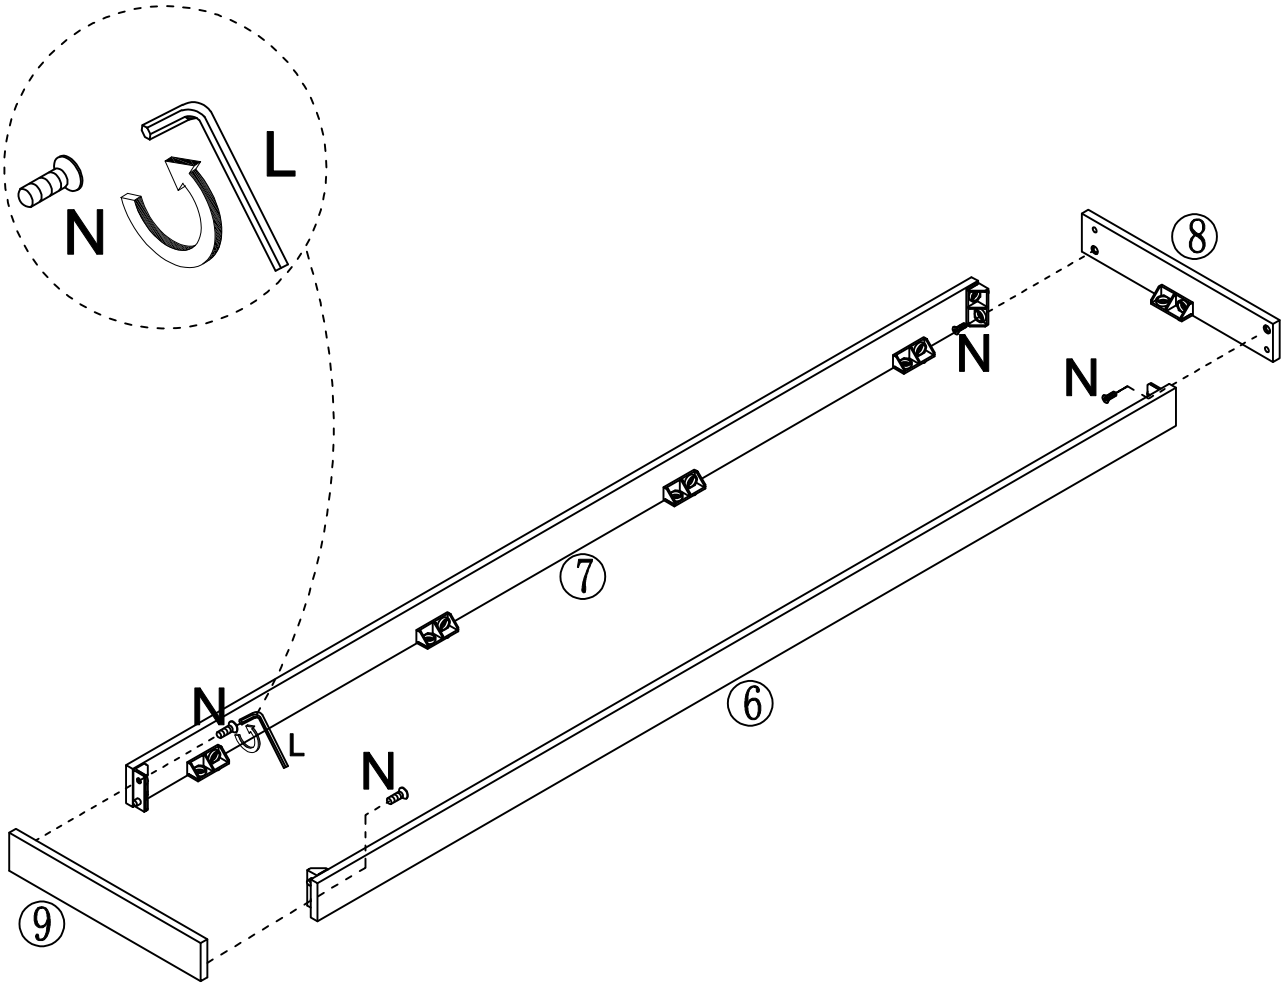


Step 28B

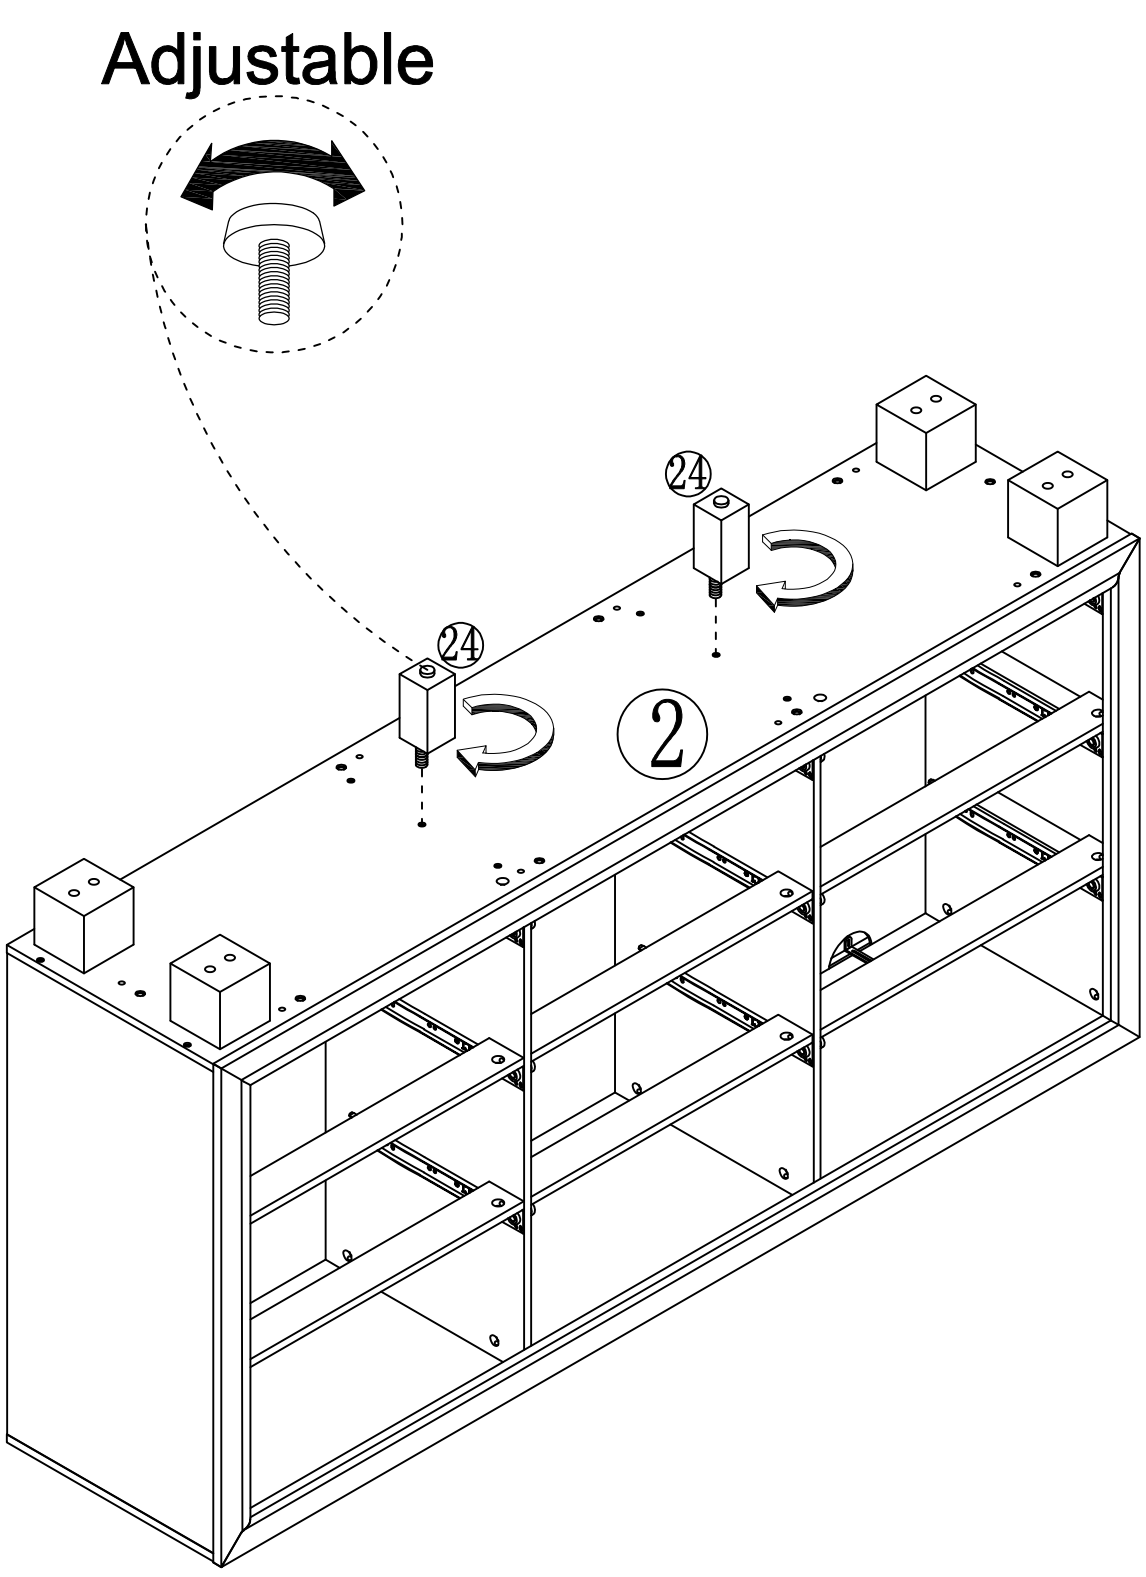

Step 29A


L	N
	
X1	X10

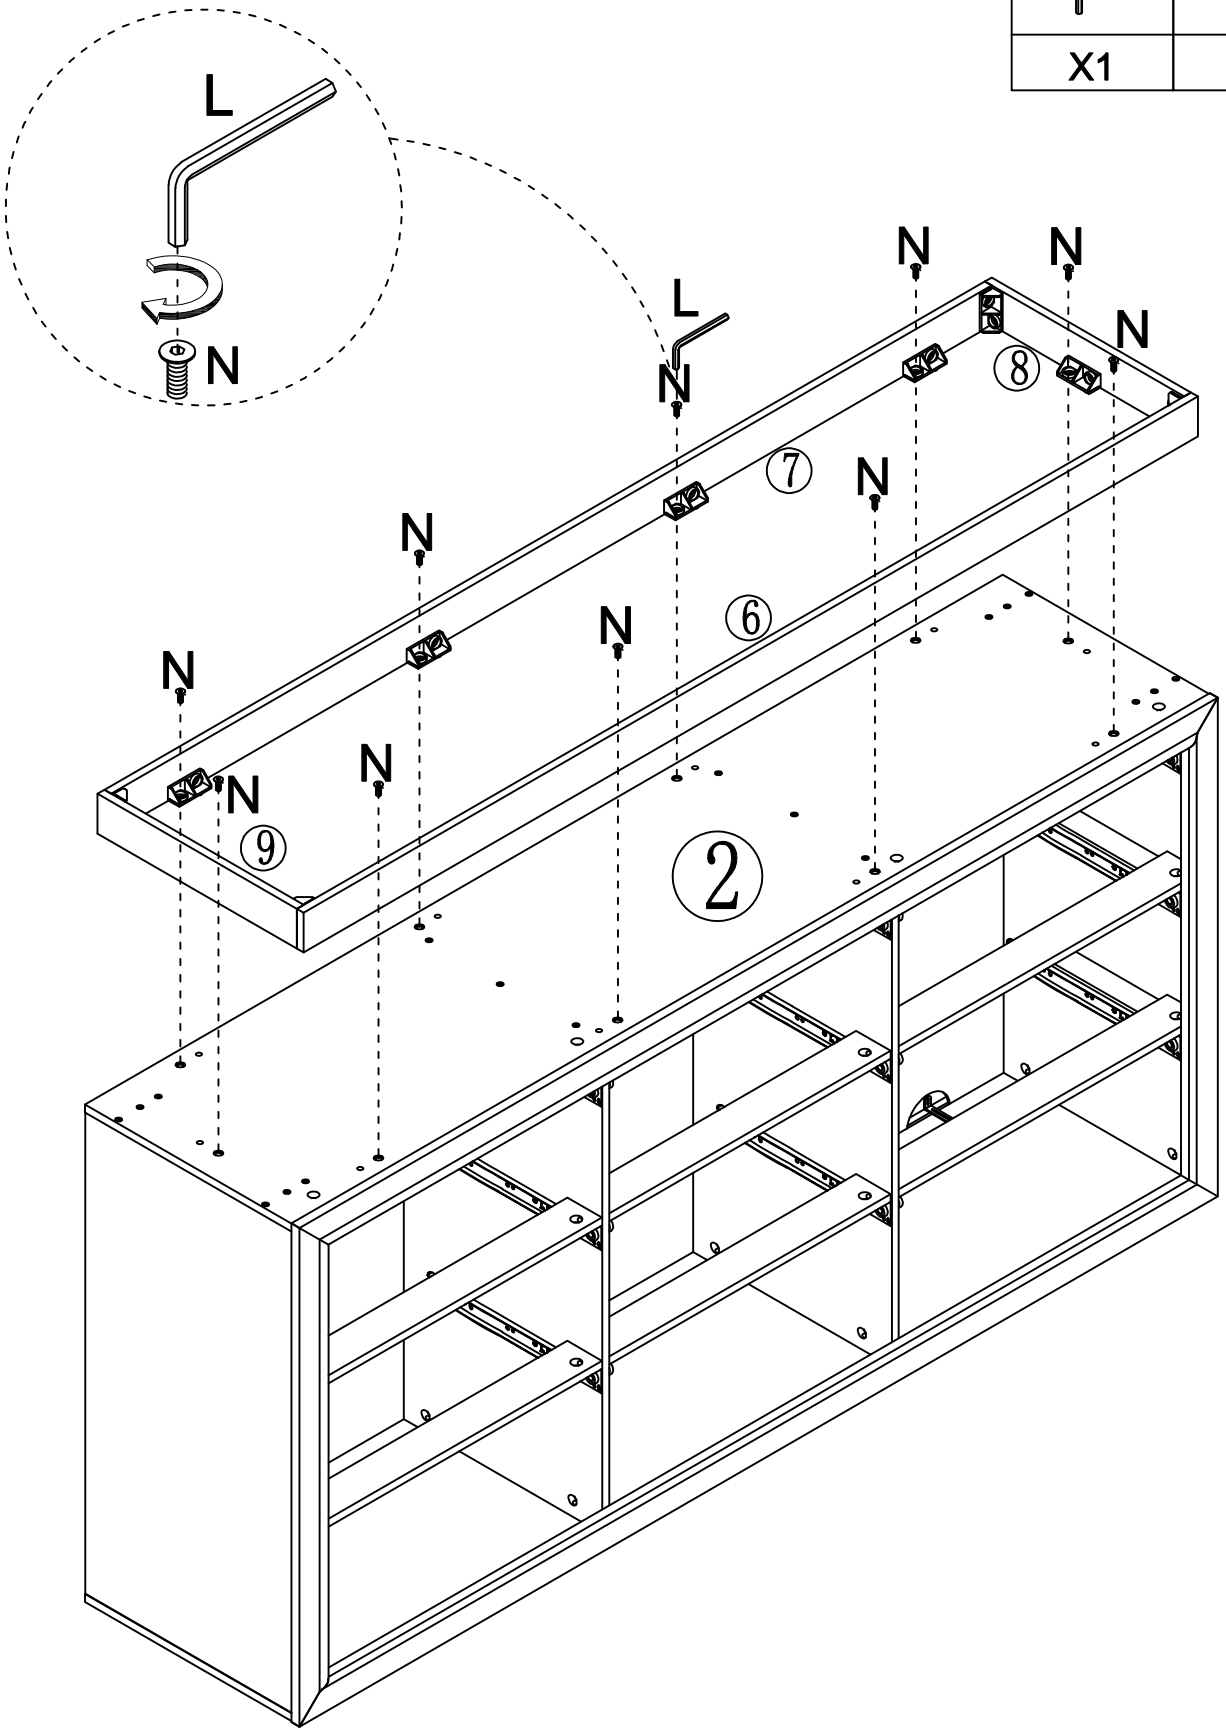


Notice:
More than 2 people to assemble this item.


Step 30

Make TWO holes 45MM deep

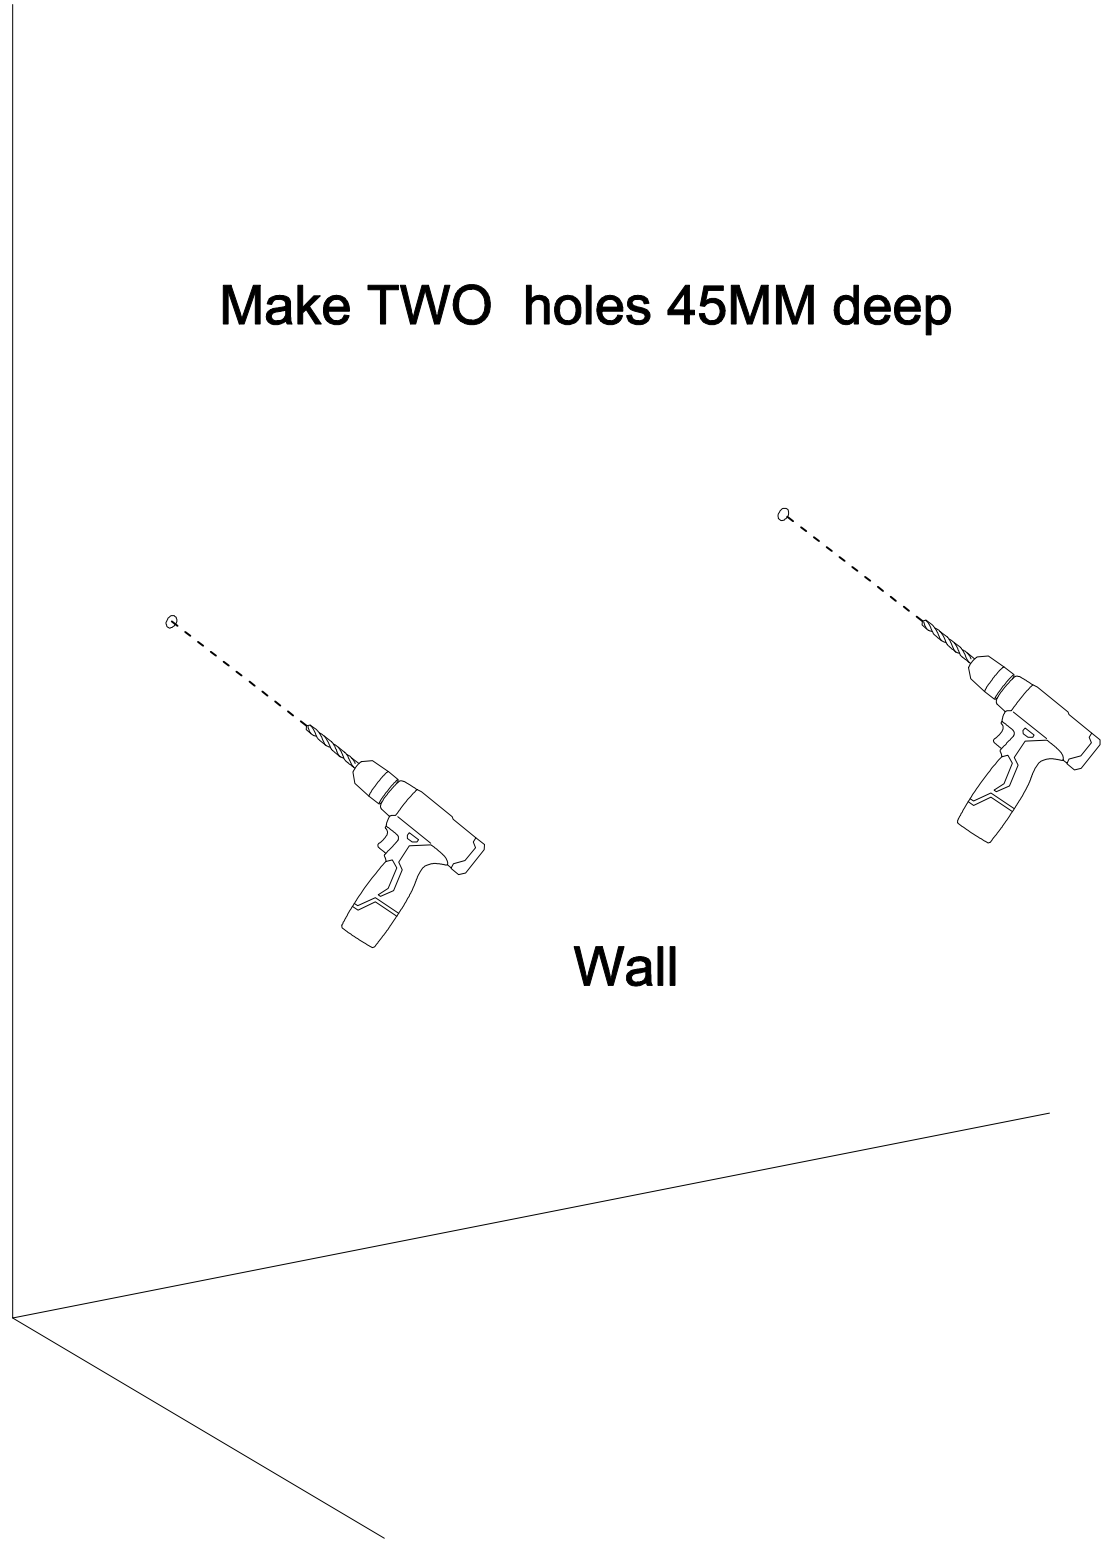

Step 31


U

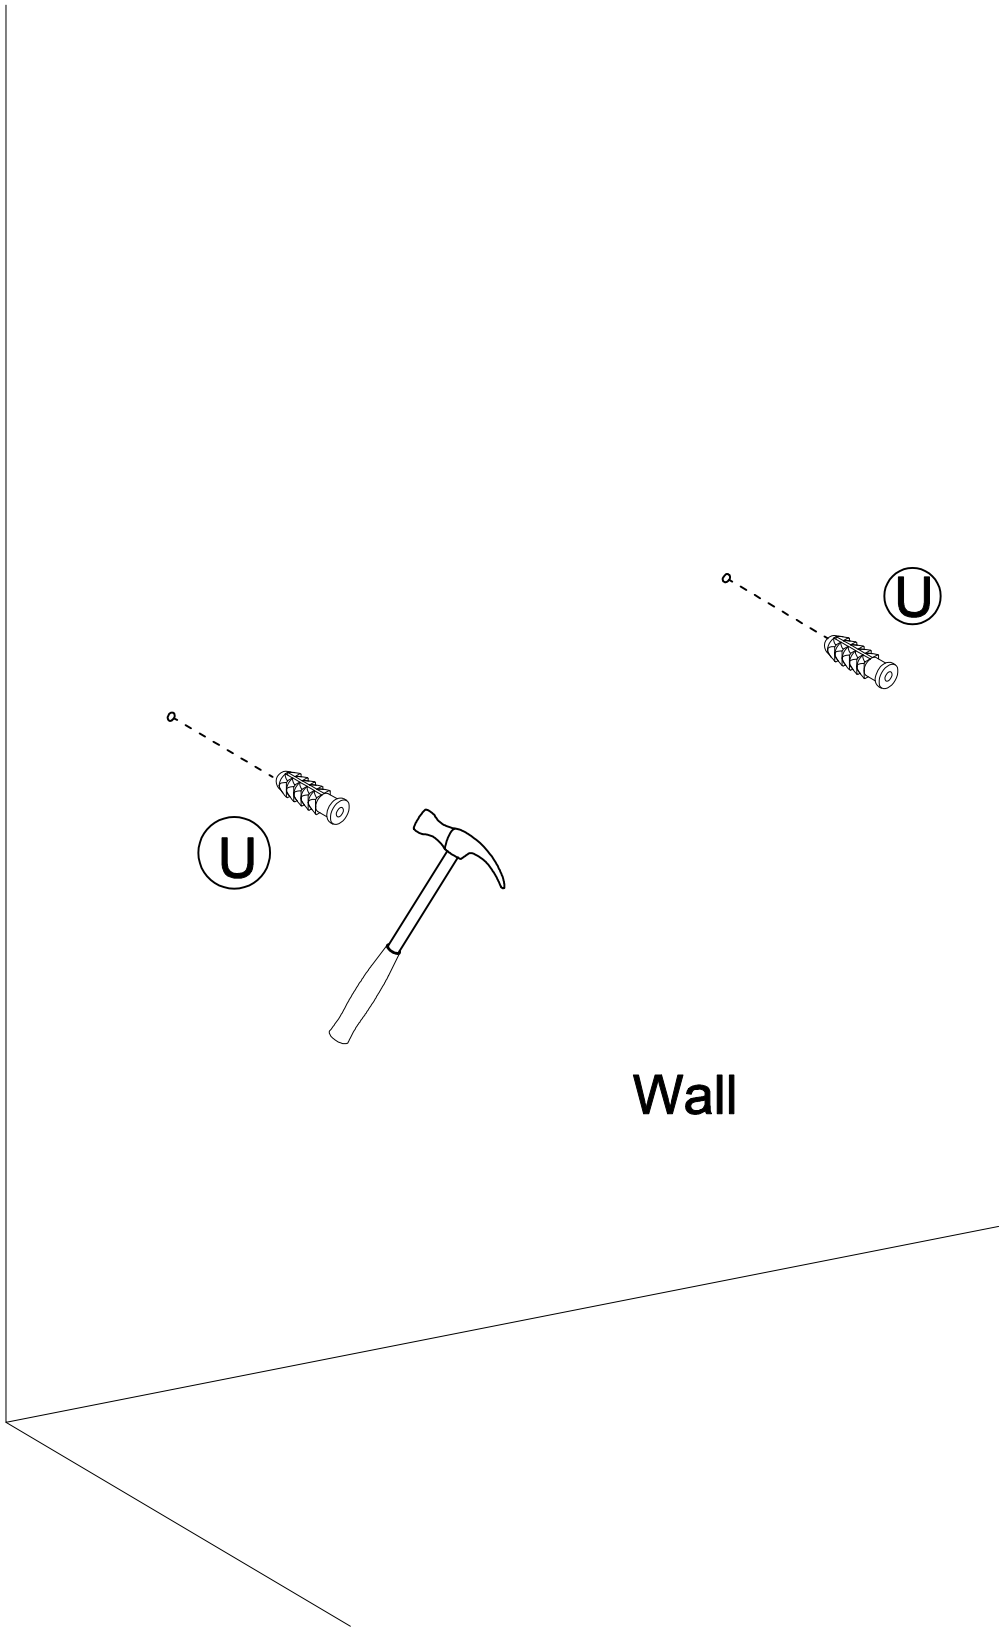X2



Step 32A

NOTE:

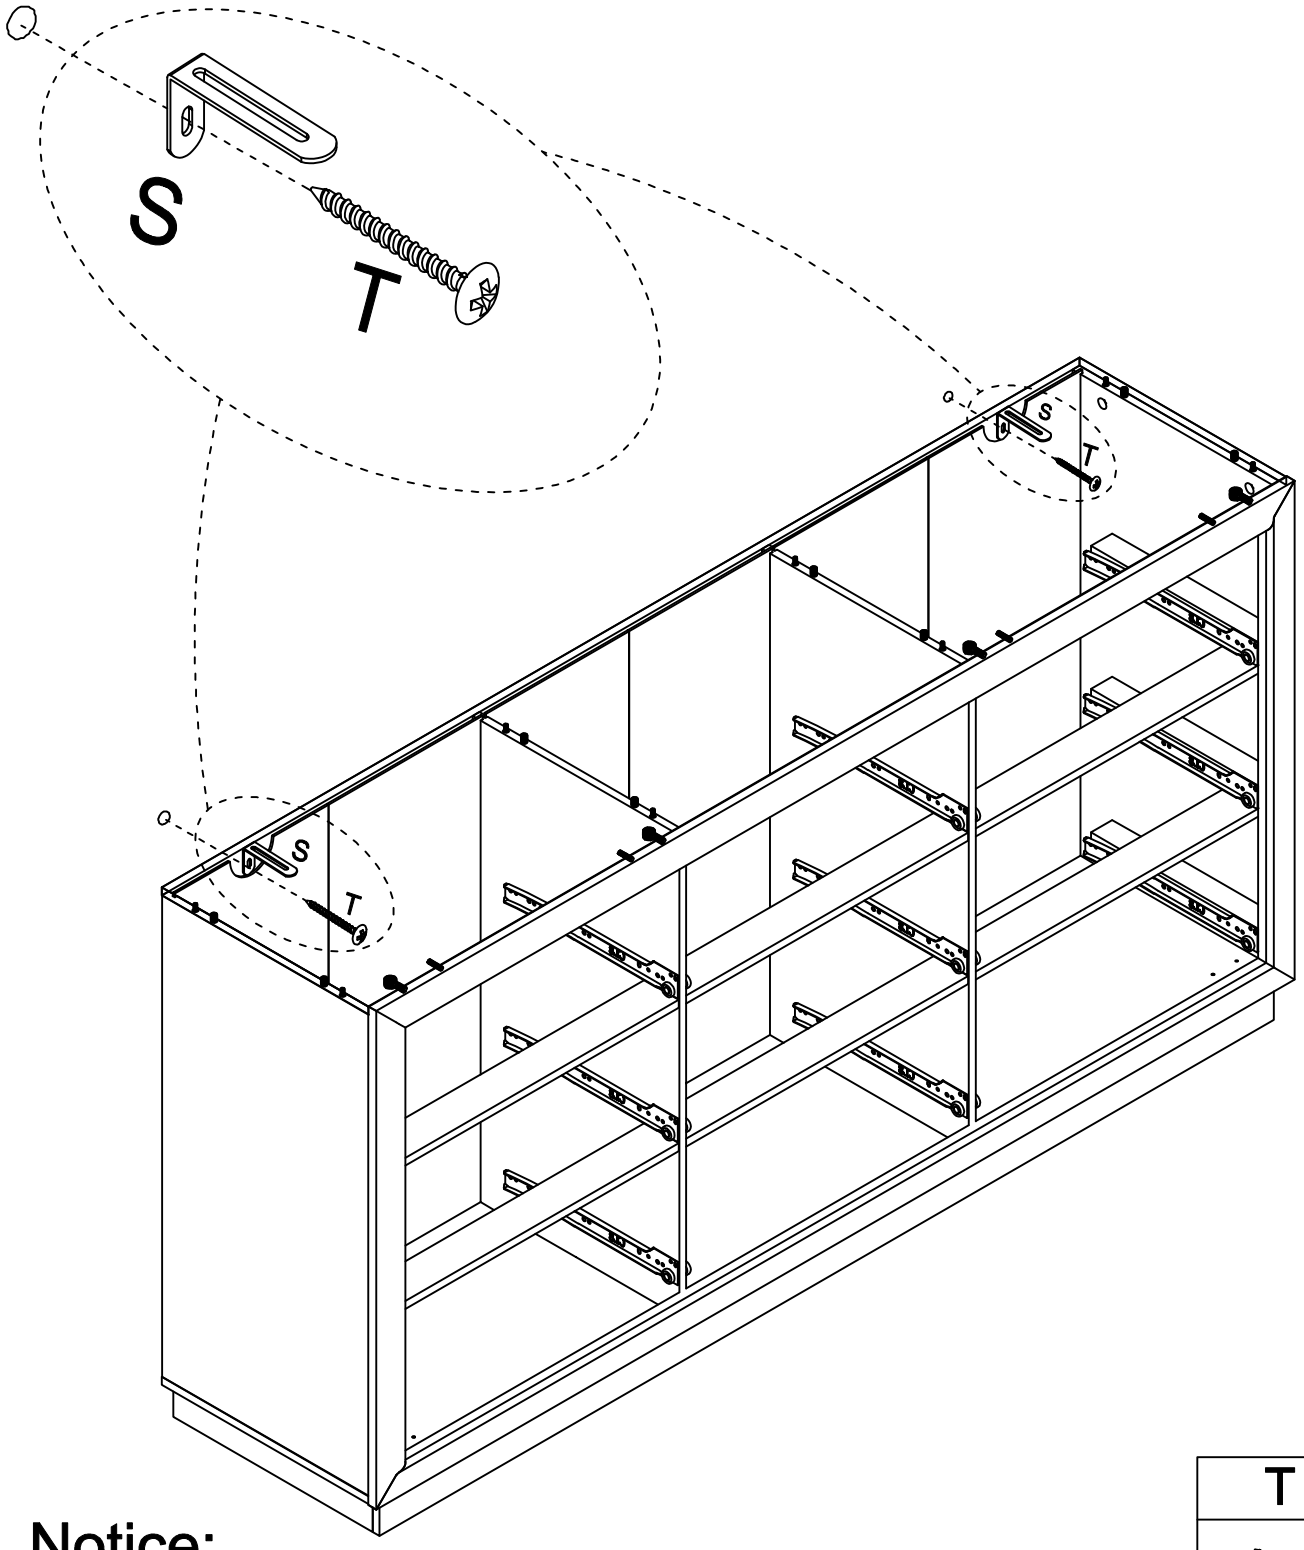According to the distance between the cabinet and the wall, adjust the #S fitting to the appropriate position , and then tighten all the screw on the #S fitting.



Notice:


More than 2 people to assemble this item.

T

X2

Step 32B

NOTE:
According to the distance between the cabinet and the wall, adjust the #S fitting to the appropriate position , and then tighten all the screw on the #S fitting.

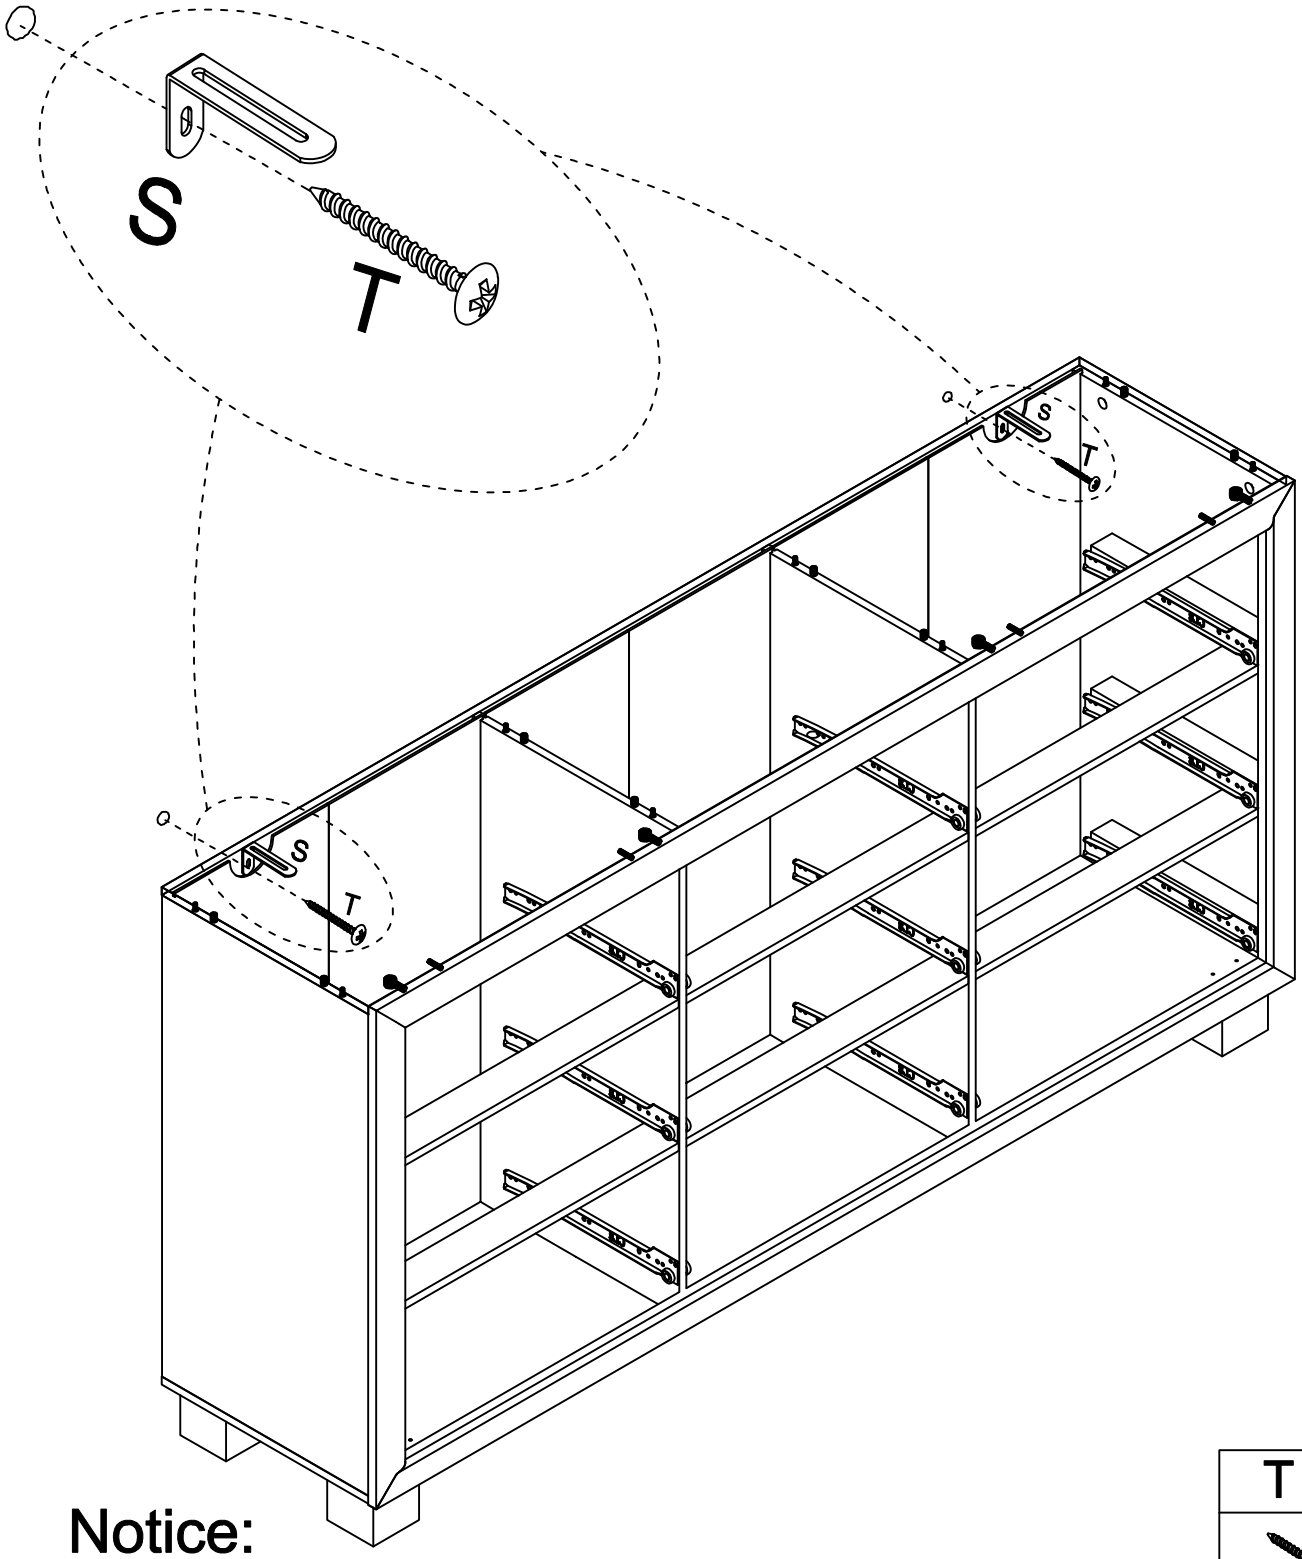


Notice:
More than 2 people to assemble this item.


T

X2

Step 33A

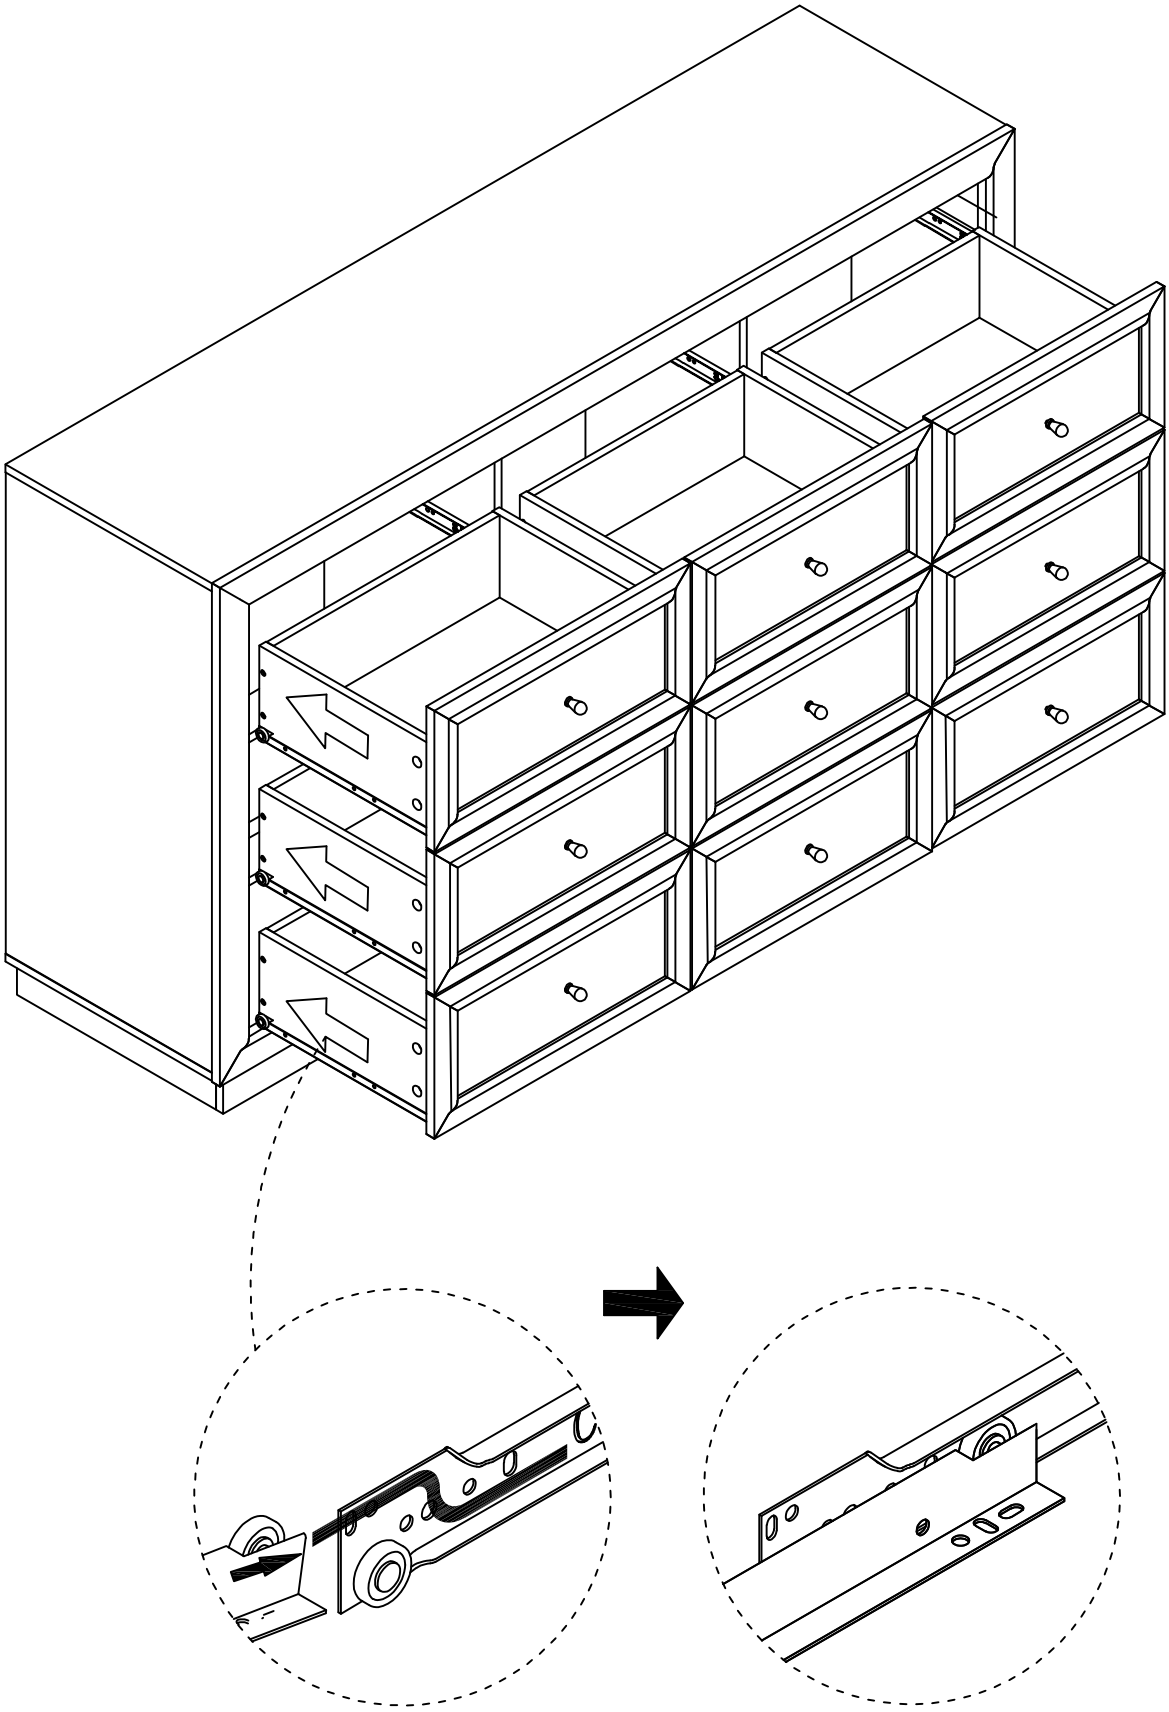


Step 33B

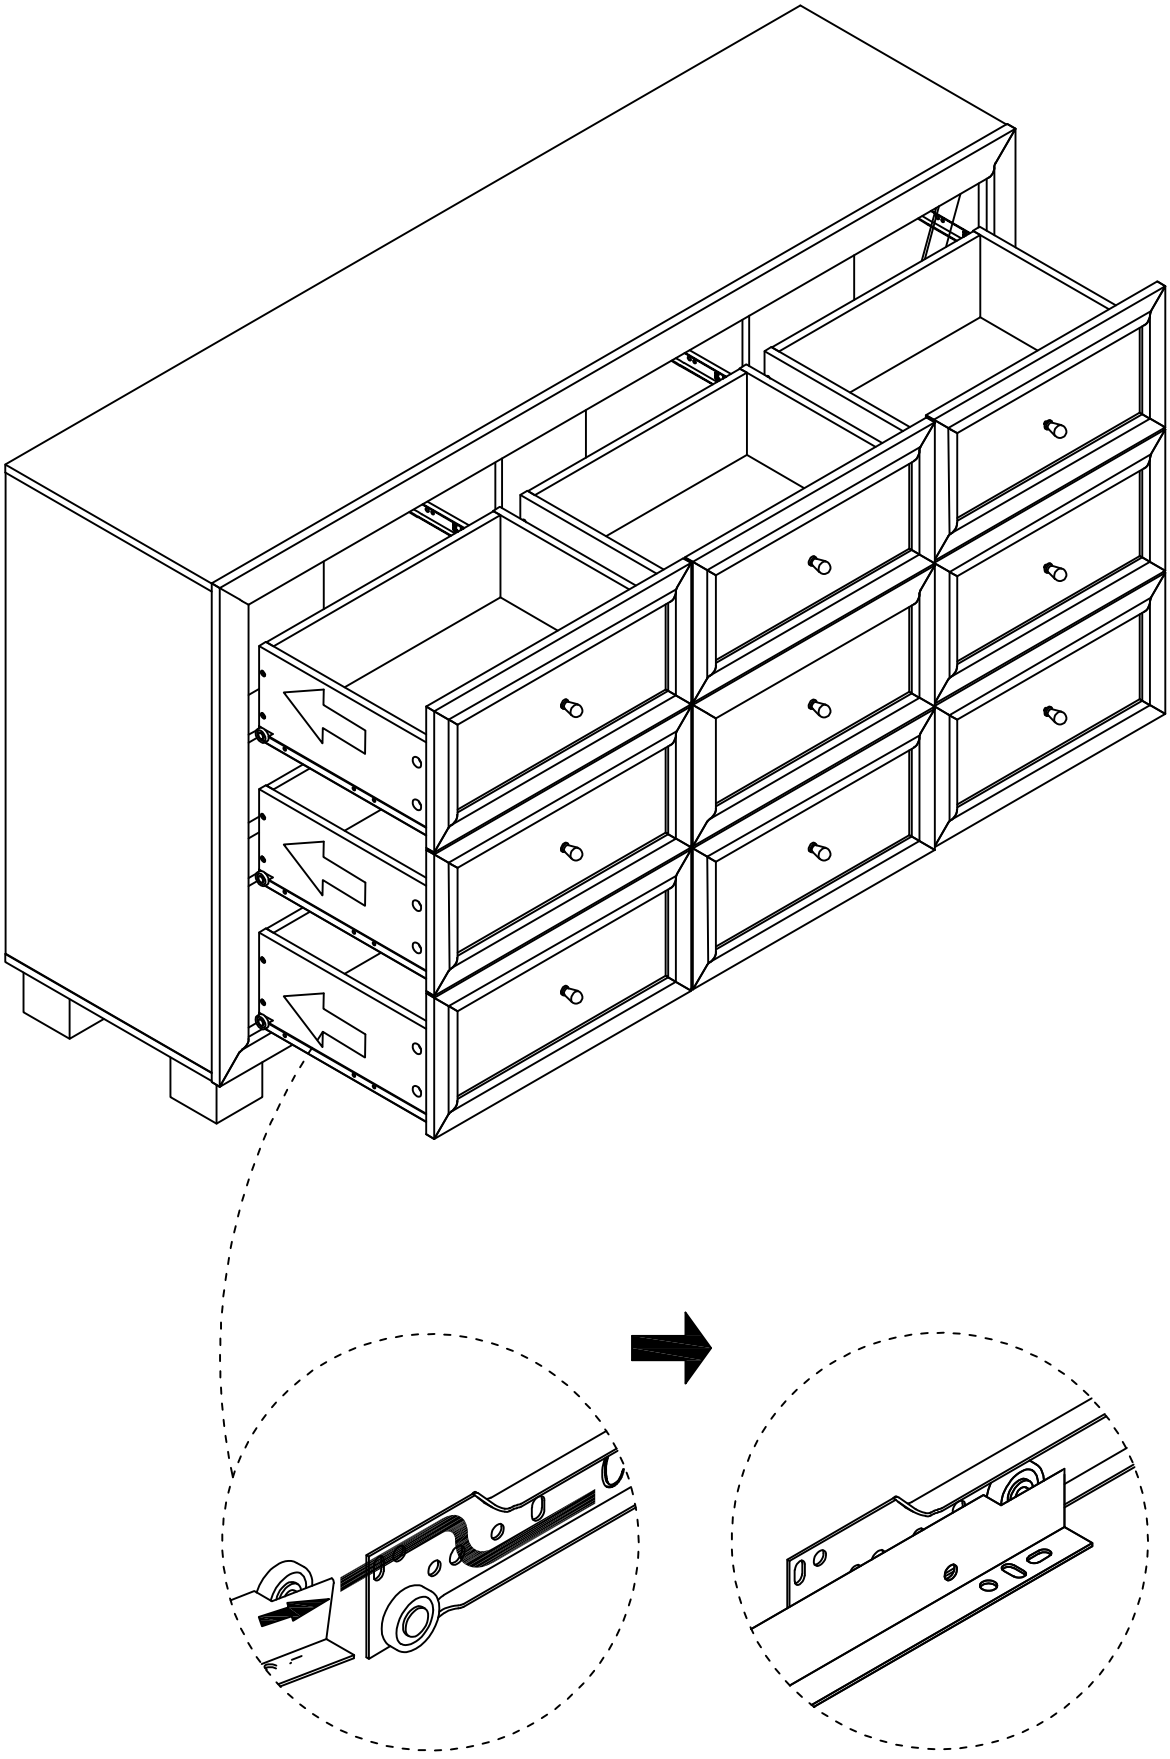


Step 34 Final Assembly

Option A

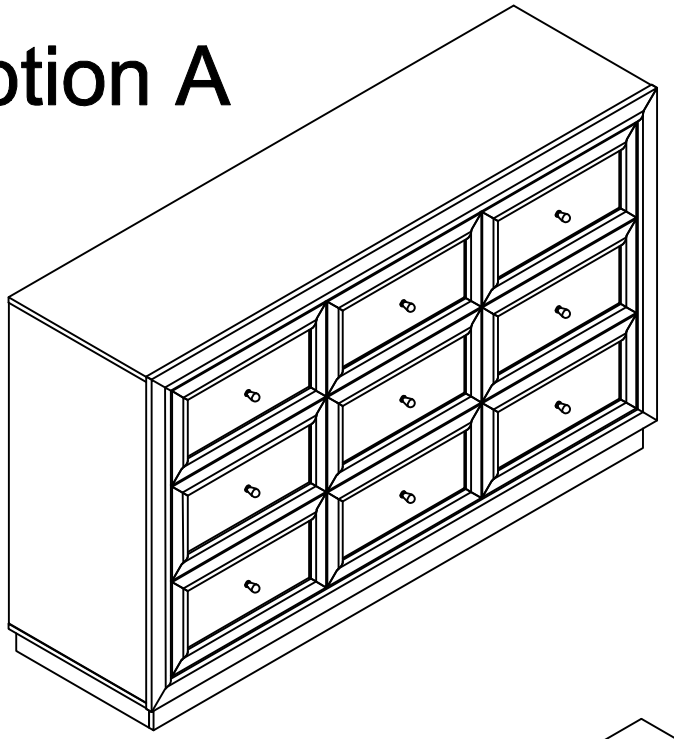

Option B

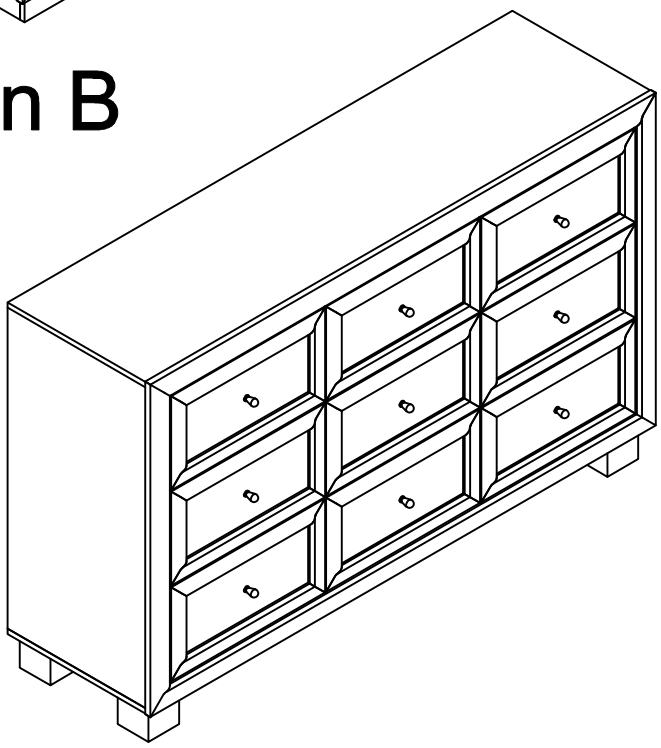

⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.