


WQSG259BK---->10X12FT

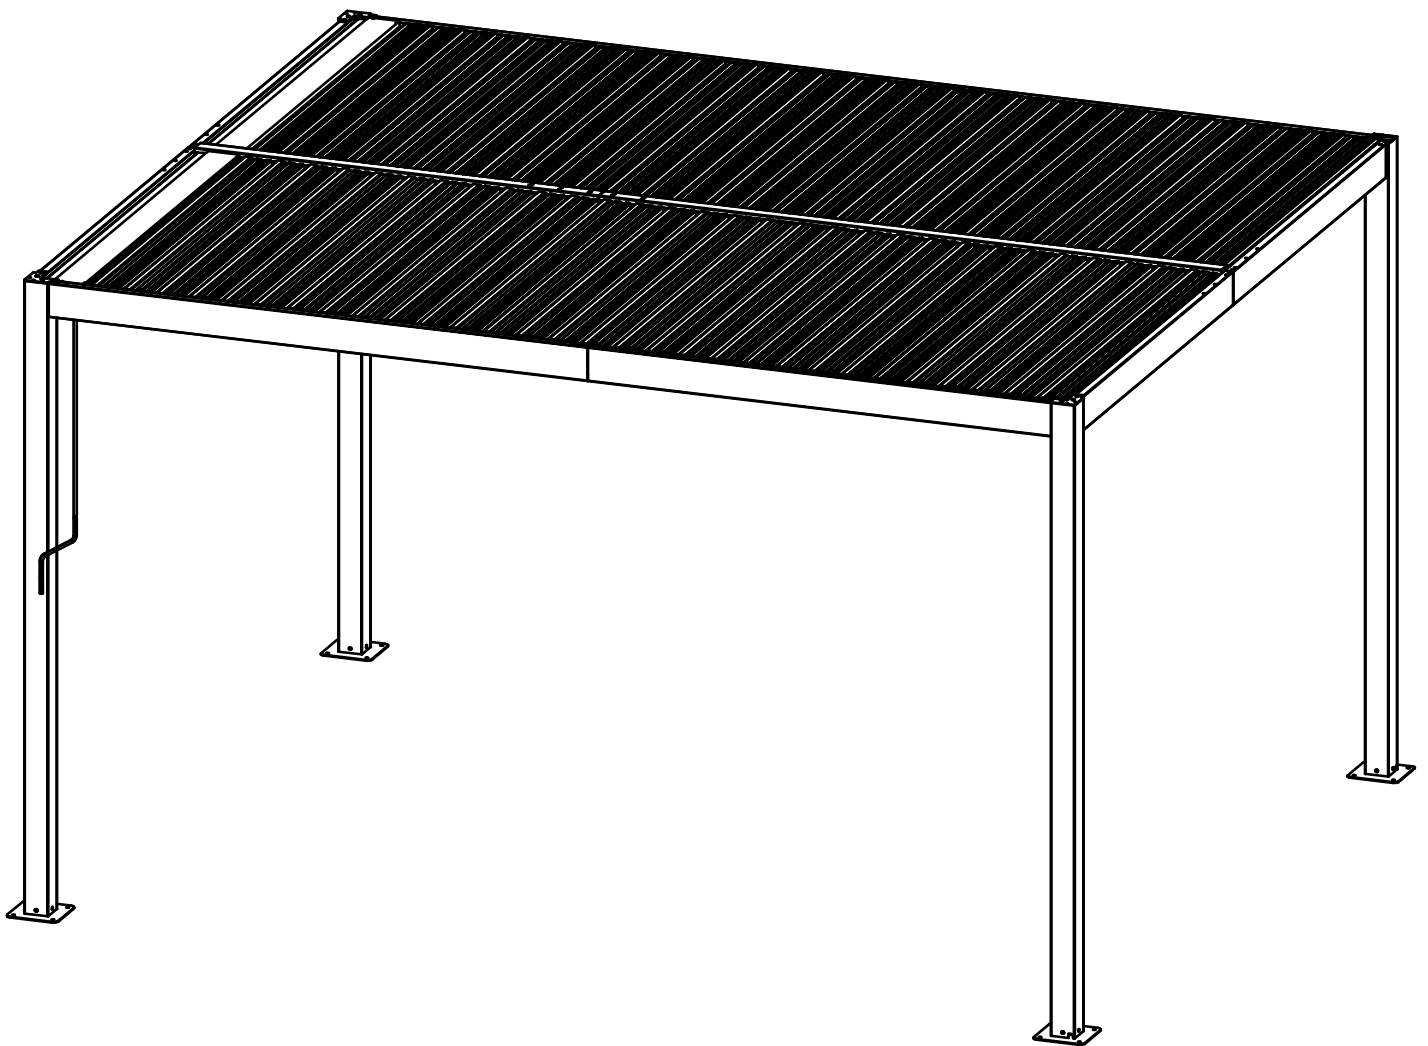

10X12FT Louvered Pergoloa

Installation instructions

PRODUCT INSTRUCTION

i Remember that the assembly might take (2) hours and requires (3) people.

Before You Begin

Before starting assembly, please carefully inspect all parts in the package. If you notice any damage, missing parts, or discrepancies, please contact us for assistance.

Please note that we are not responsible for parts lost or damaged due to improper handling during assembly.

Preparation Is Key

Confirm that your site preparation and foundation are fully ready before unpacking. Review all steps in this manual thoroughly before beginning. Consult local authorities regarding permits and building regulations.

Safety First

Some parts have sharp metal edges — handle with care.
Wear gloves, eye protection, and long sleeves during assembly or maintenance.
Do not assemble in strong winds or extreme cold.
Once installed, place heavier items near the bottom when filling.
Do not allow children to play in the unit, and do not stand, sit, or store items on the roof.

Our Promise to You

Inspired by the idea of “ Closer to life, ” we strive to provide well-designed, reliable products that enhance your outdoor living. Our goal is to help you connect with nature and enrich your lifestyle. Here ’ s to creating your own outdoor sanctuary !


Need Help ?

If you have any questions during assembly, please reach out to our customer service team.



SEVERAL ATTEMPTS


- When you install this product, please refer to the following diagram.
- These following tools are not included and needed for assembly

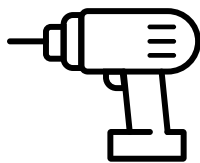

Power Drill



Tape Measure



Hammer




Screwdriver




Ladder




Scissors

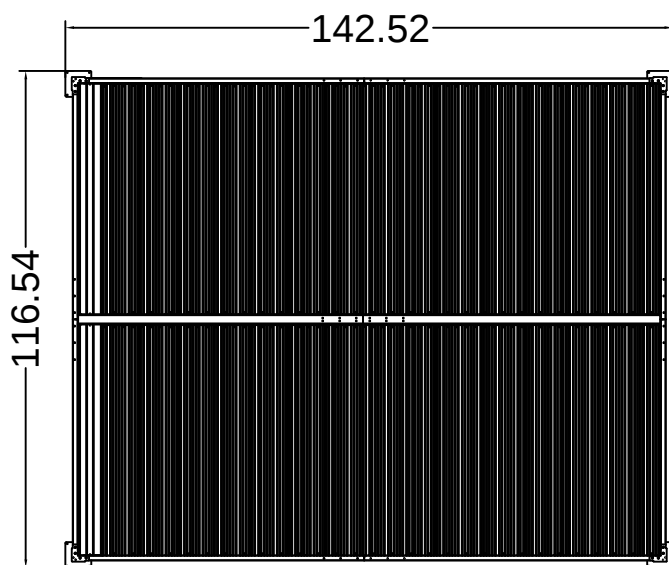

Top

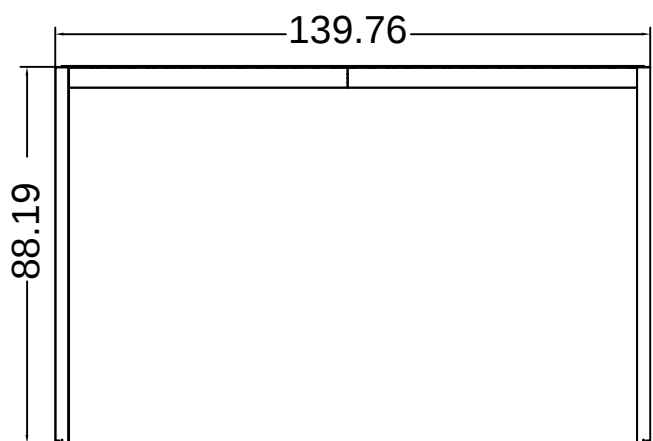

Front

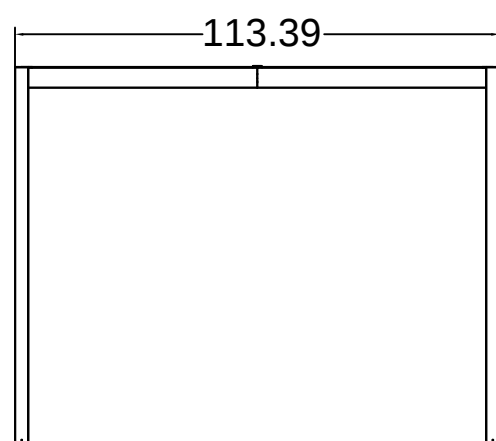

Left

ACCESSORIES LIST**Serial number****Box A**

Part name	A	I-2	Q	Q1	J	I-1	K
Qty	4	2	1	4	1	2	2
Part name	L	M1	M2	N	N1	O	P
Qty	2	2	2	2	4	4	4
Part name	R	R1	R2	1#	2#	3#	4#
Qty	1	2	1	54	24	246	6
Part name	5#	6#	7#	8#	9#		
Qty	8	4	20	82	16		

Box B











Part name	B	B1	C	C1	D	D1	E
Qty	1	1	1	1	1	1	1
Part name	E1	F	F1				
Qty	1	1	1				

Box C

Part name	H	G	
Qty	60	2	








ACCESSORIES LIST

Figure style


		
A×4	B×1	B1×1
		
C×1	C1×1	D×1
		
D1×1	E×1	E1×1
		
F×1	F1×1	G×2
		
H×60	I-1×2	I-2×2
		
J×1	K×2	L×2
		
M1×2	M2×2	N×2

ACCESSORIES LIST

Figure style

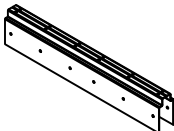 N1×4	 O×4	 Q×1
 Q1×4	 P×4	 R×1
 R1×1+1	 R2×1	 M6*15 1#×52+2
 M8*38 2#×24	 M5*16 3#×240+6	 M4*12 4#×4+2
 M6 5#×8	 M6*40 6#×4	 M6*15 7#×20
 M6*10 8#×80+2	 M8 9#×16	 6mm
 4mm	 4mm	


ASSEMBLY STEP 1






A x4



O x4



1# x16

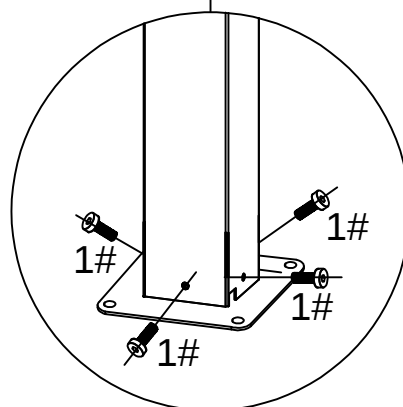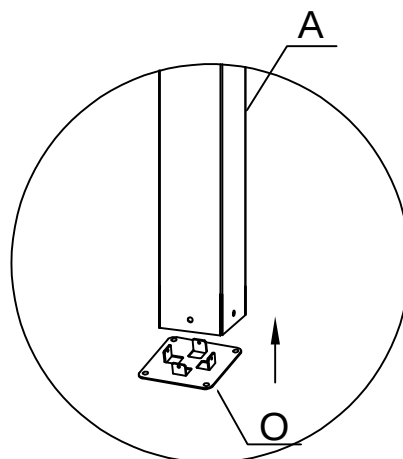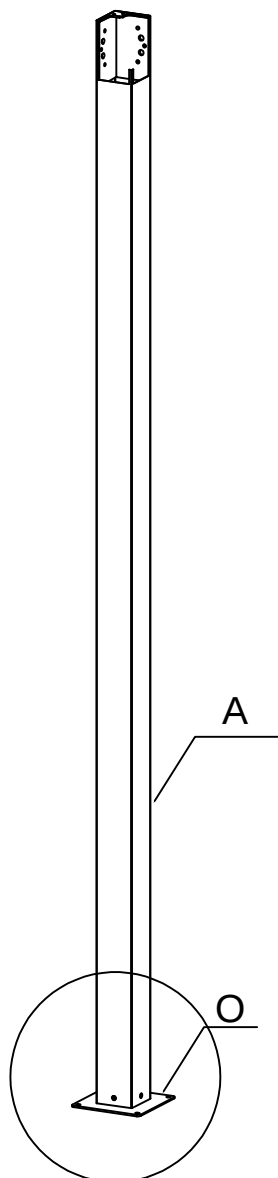

ASSEMBLY STEP 2



(B x1)

(B1 x1)

(Q1 x1)


(P x1)

(8# x14)

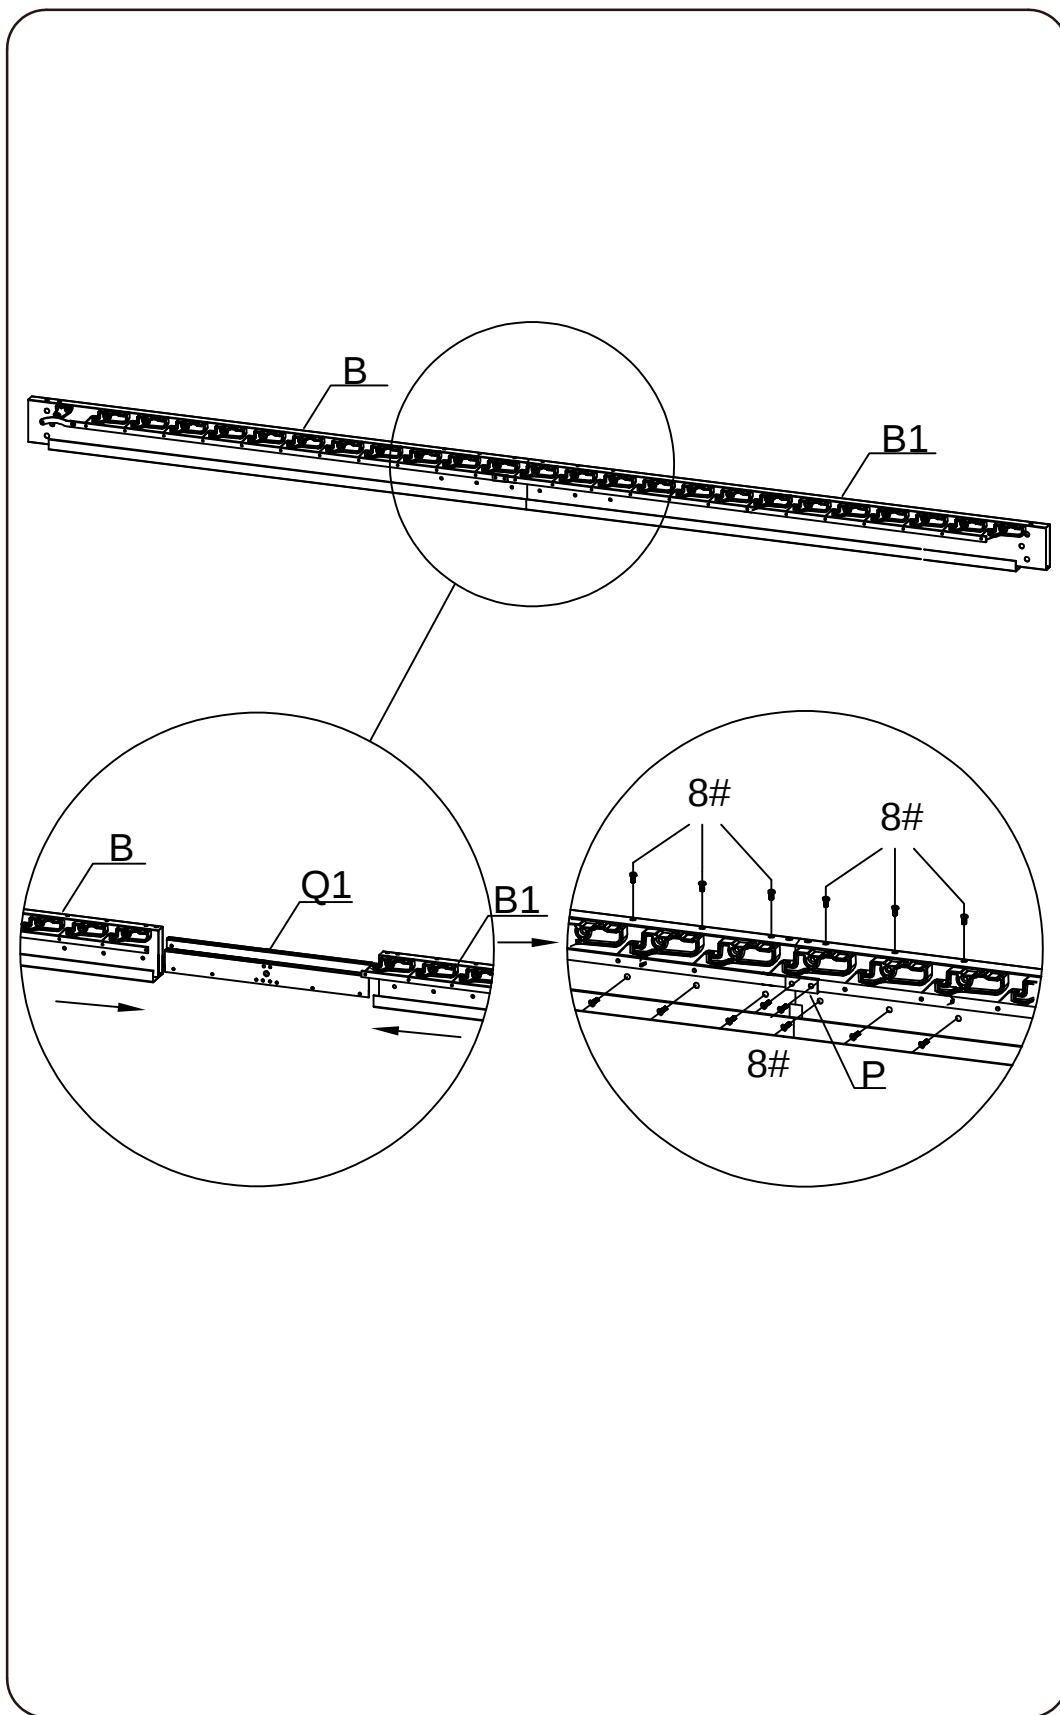


ASSEMBLY STEP 3


C x1

C1 x1

Q1 x1


P x1

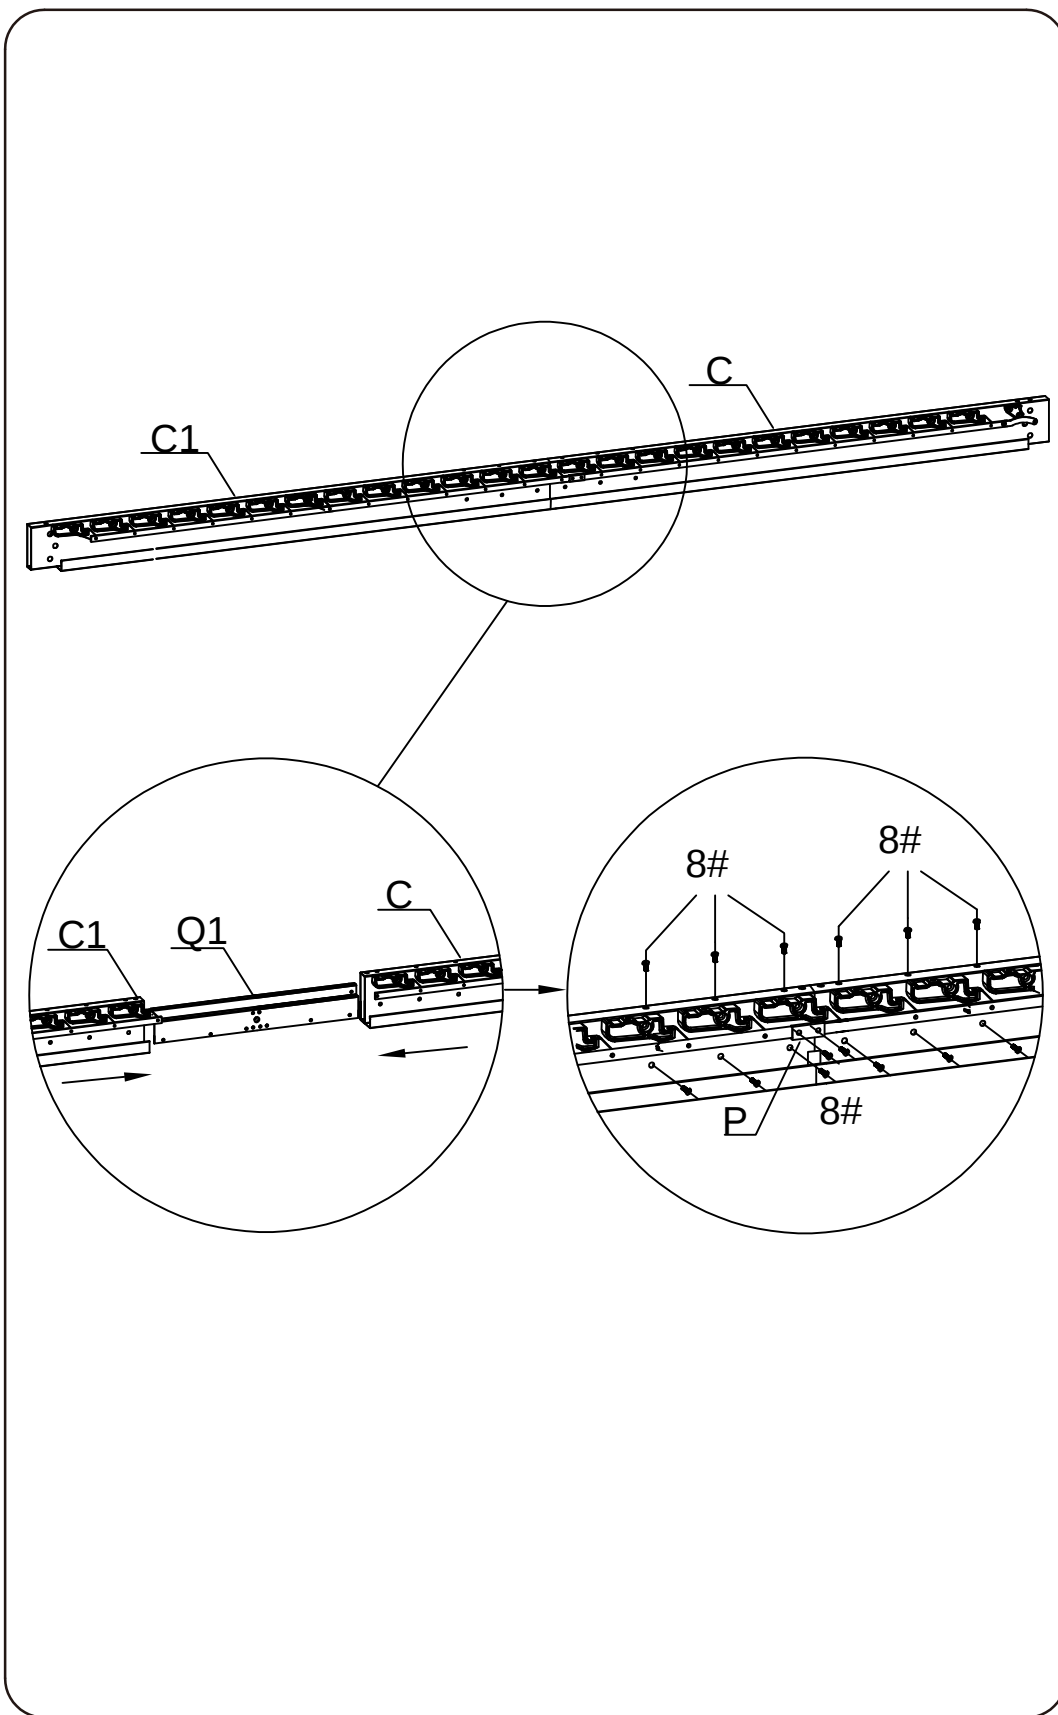8# x14




ASSEMBLY STEP 4

E x1
E1 x1
Q1 x1
N x1
7# x4
8# x12

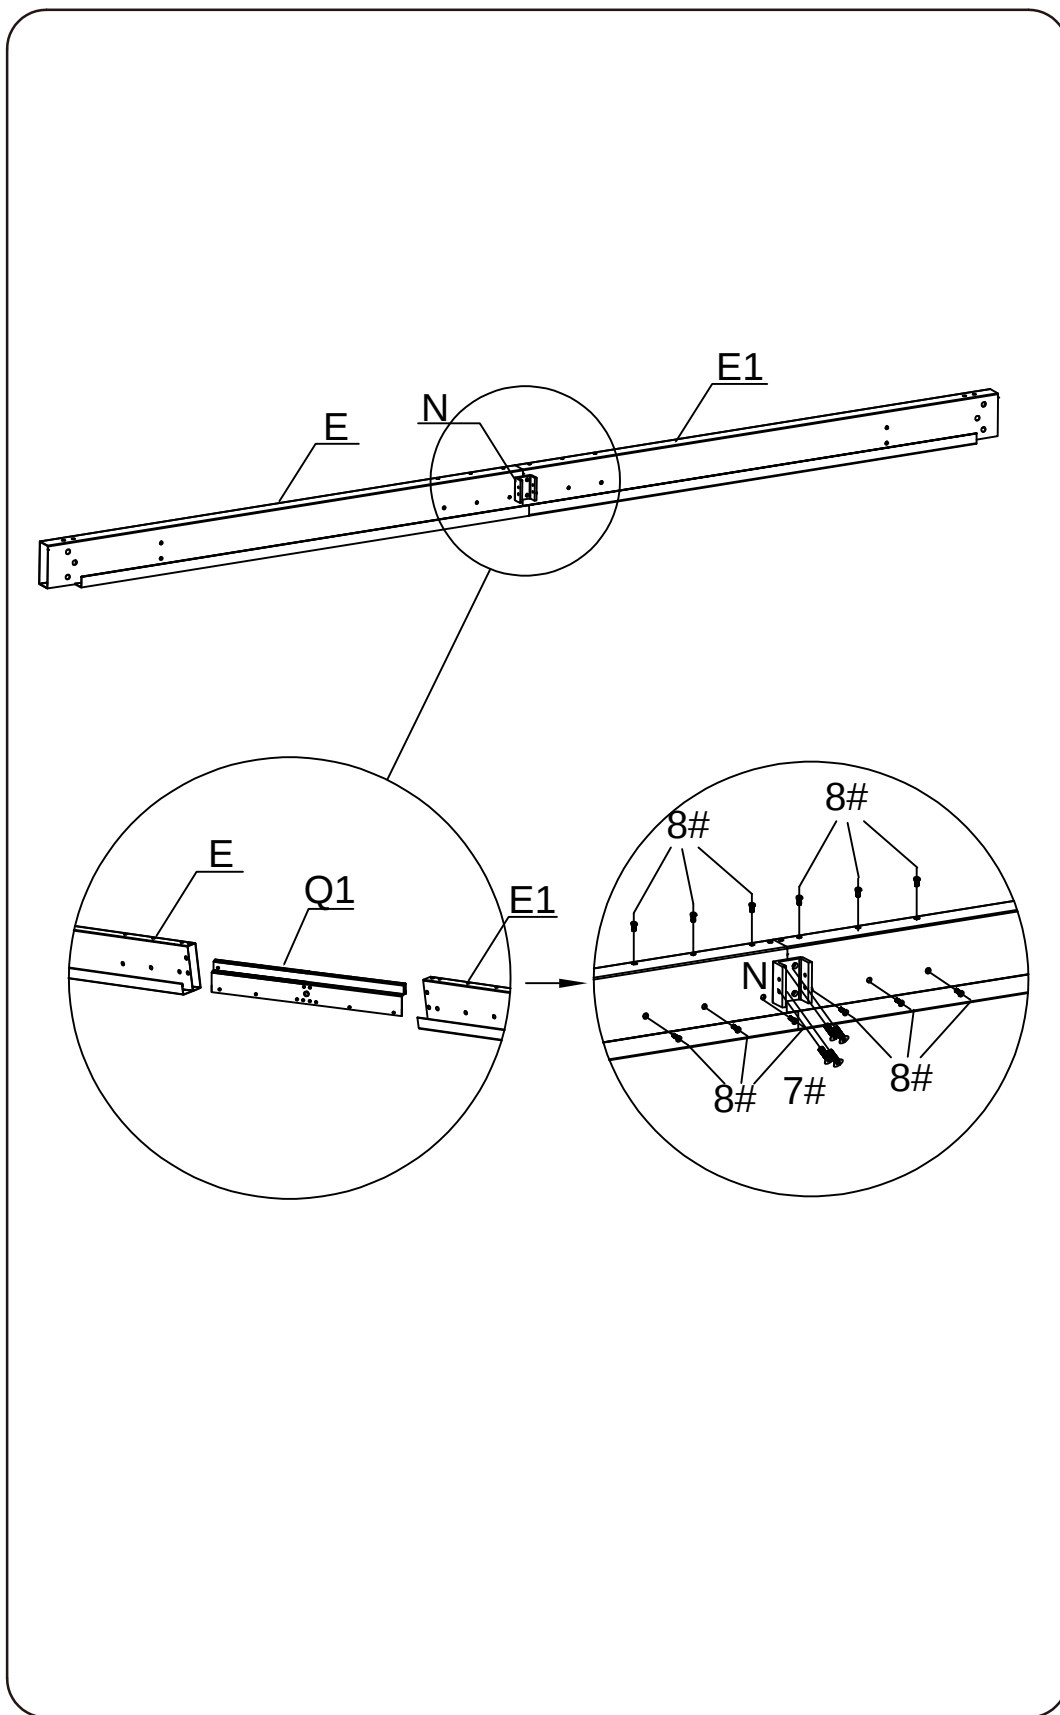

ASSEMBLY STEP 5


F x1
F1 x1
Q1 x1
N x1
7# x4
8# x12

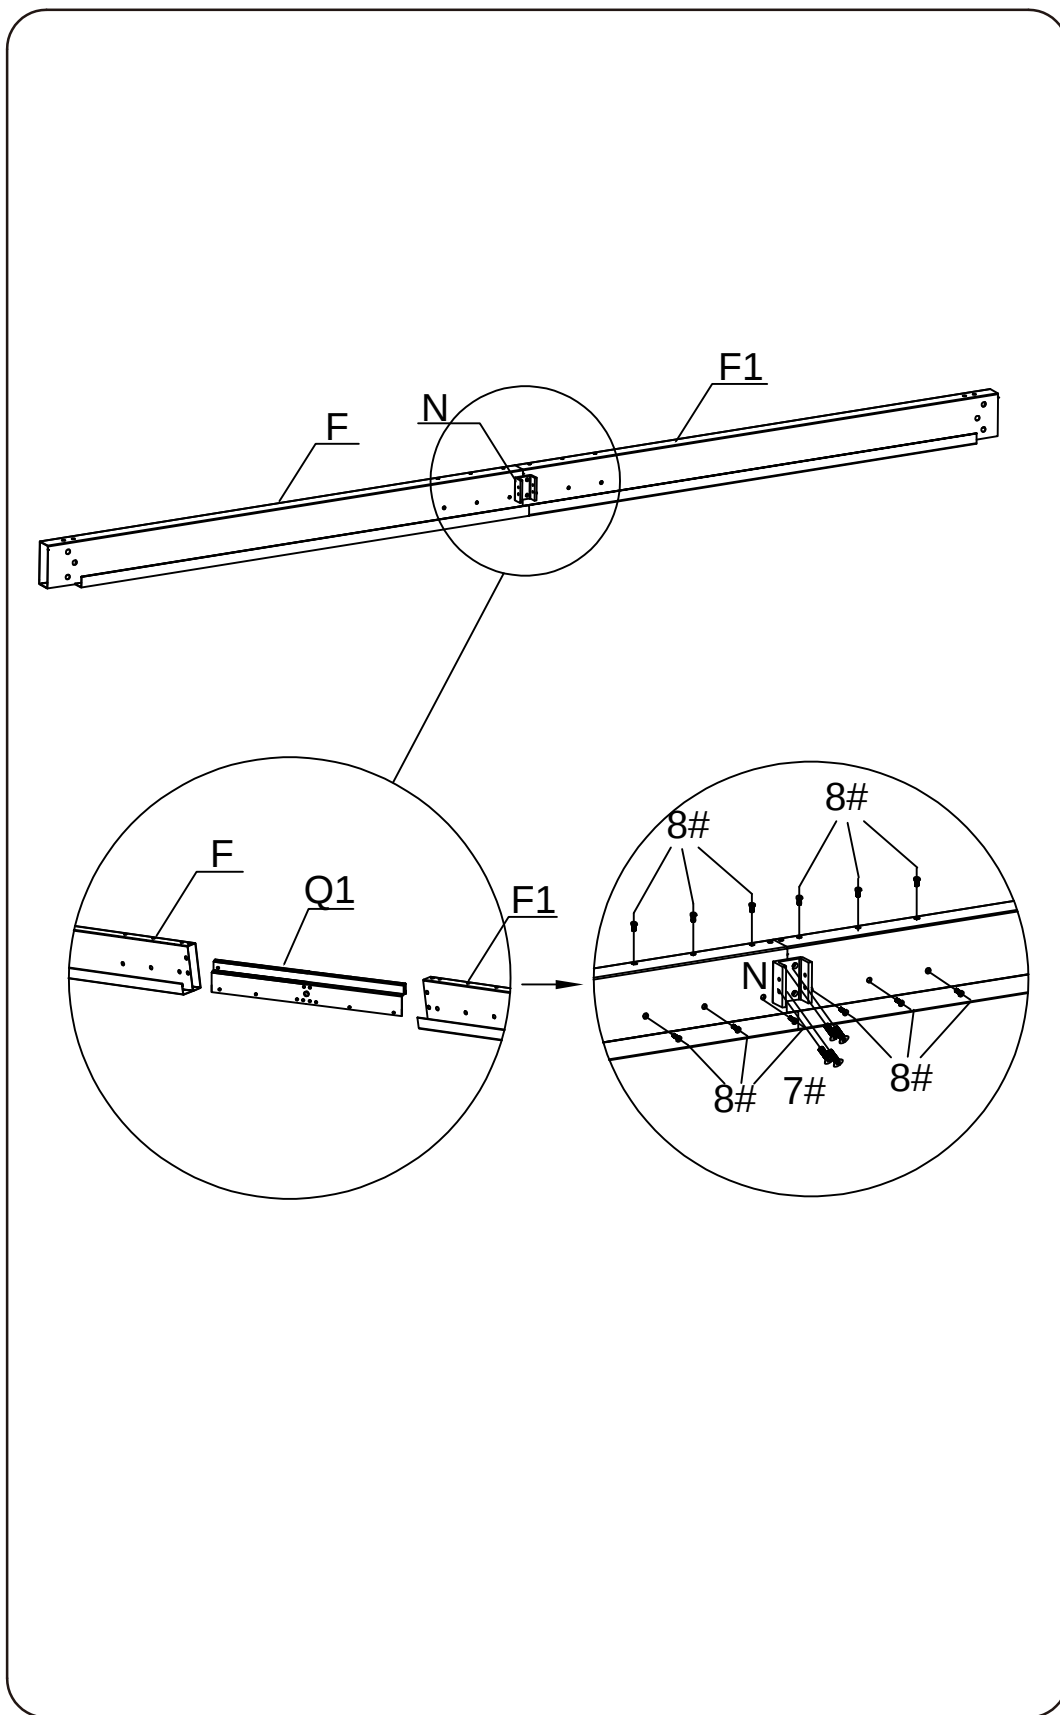


ASSEMBLY STEP 6


(D x1)


(D1 x1)

(P x2)

(Q x1)



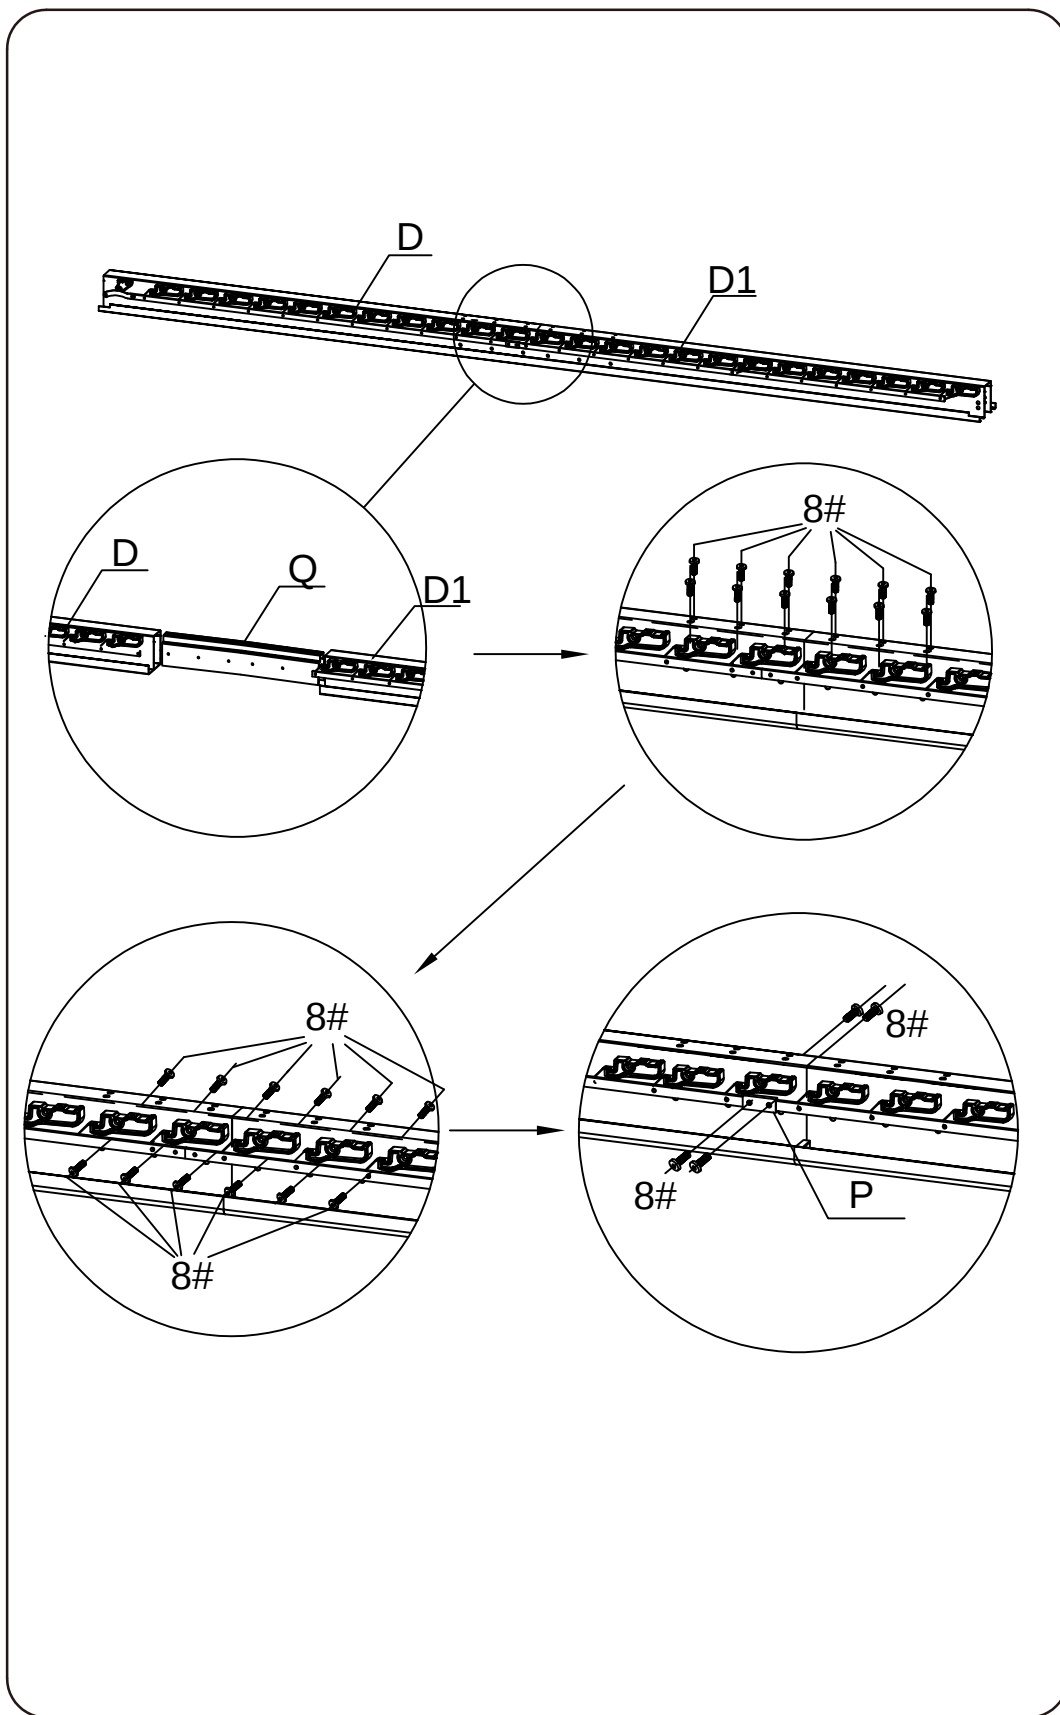
(8# x28)




ASSEMBLY STEP 7




2# x12

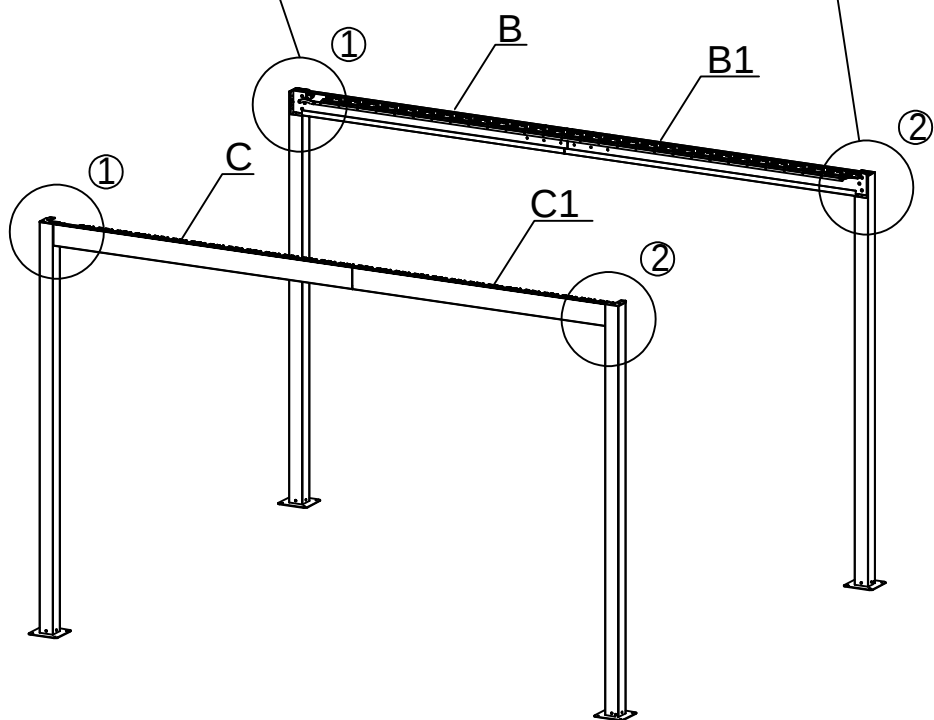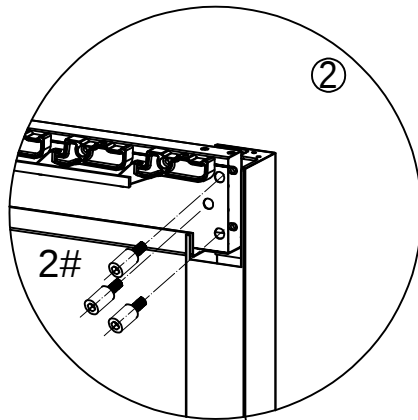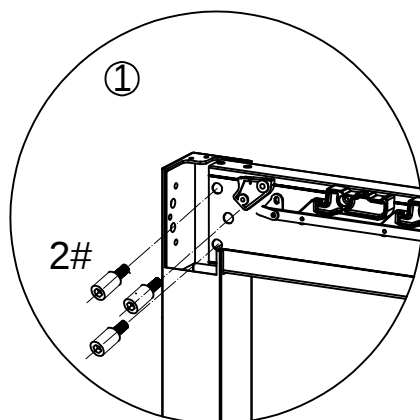


ASSEMBLY STEP 8




2# x12

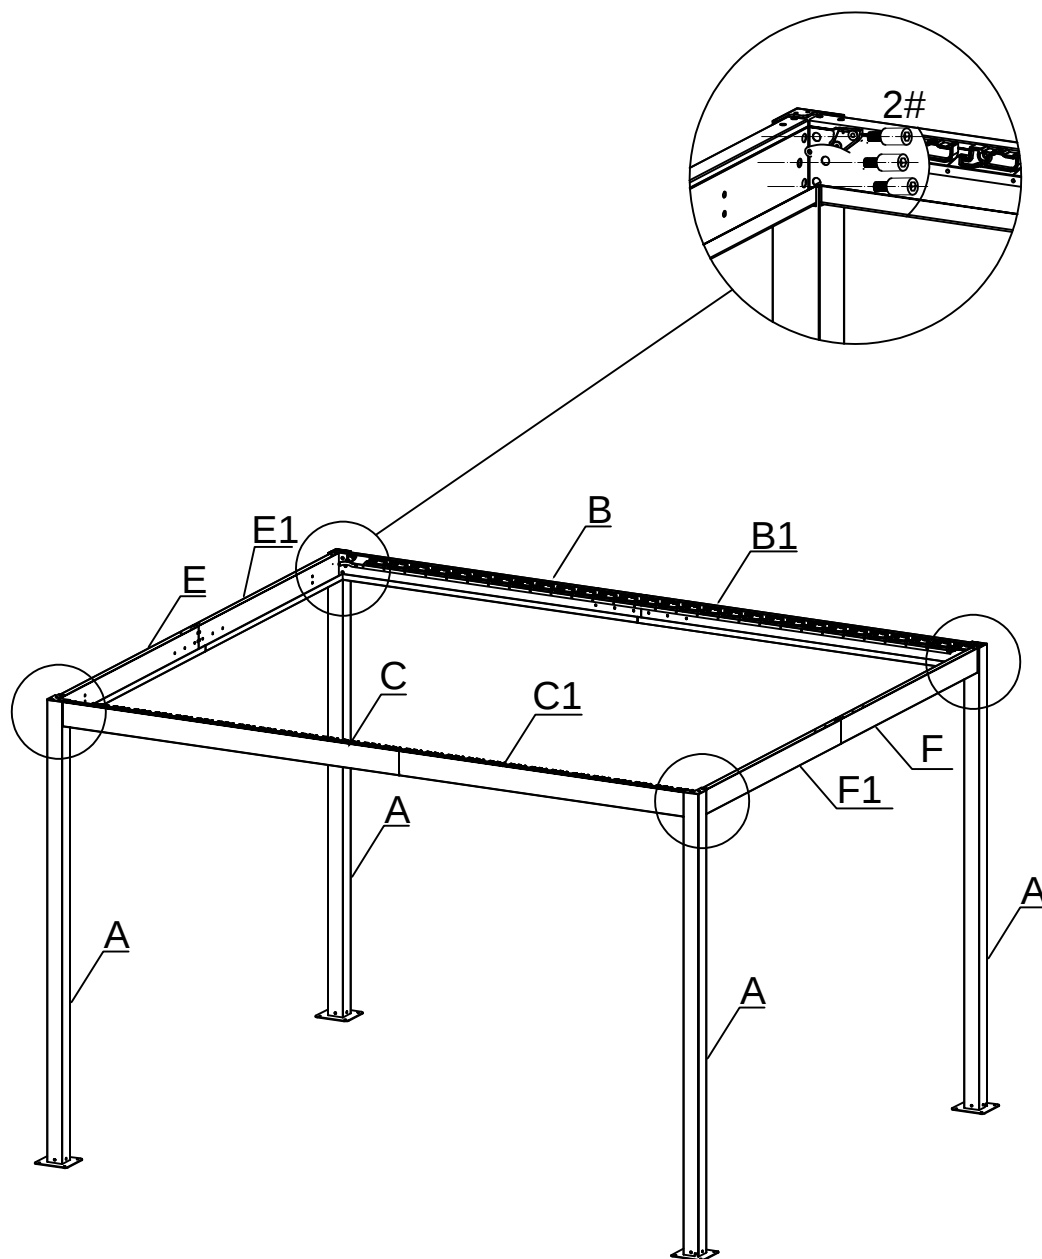

ASSEMBLY STEP 9




R x1



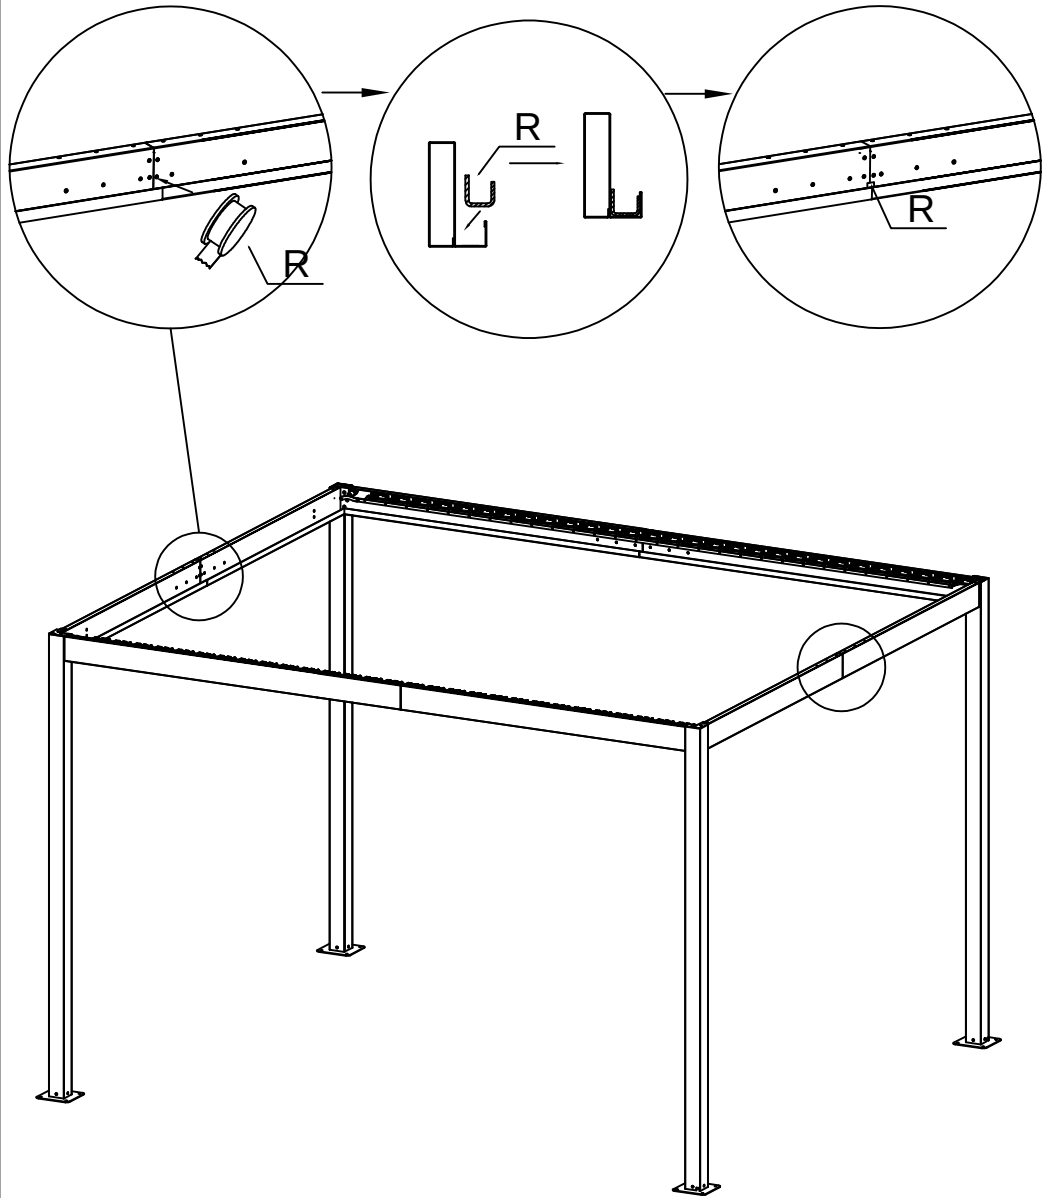


Tips : Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.


ASSEMBLY STEP 10




1# x8

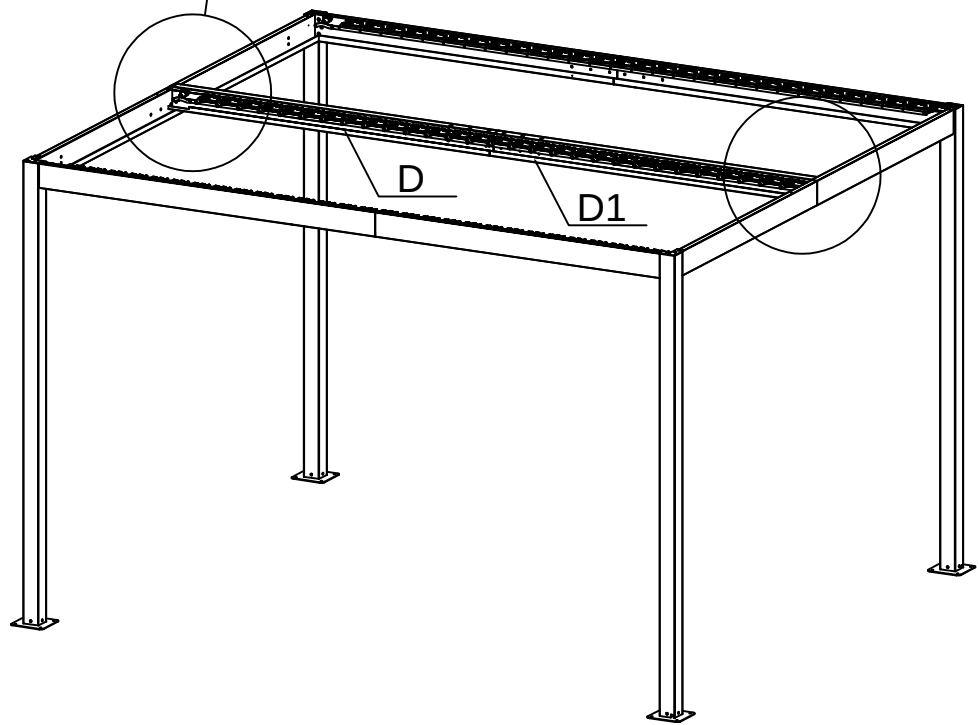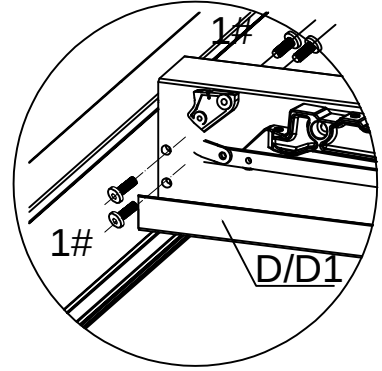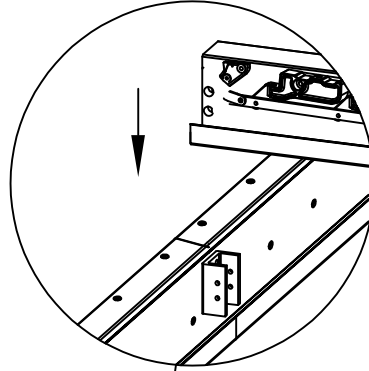

ASSEMBLY STEP 11




R x1

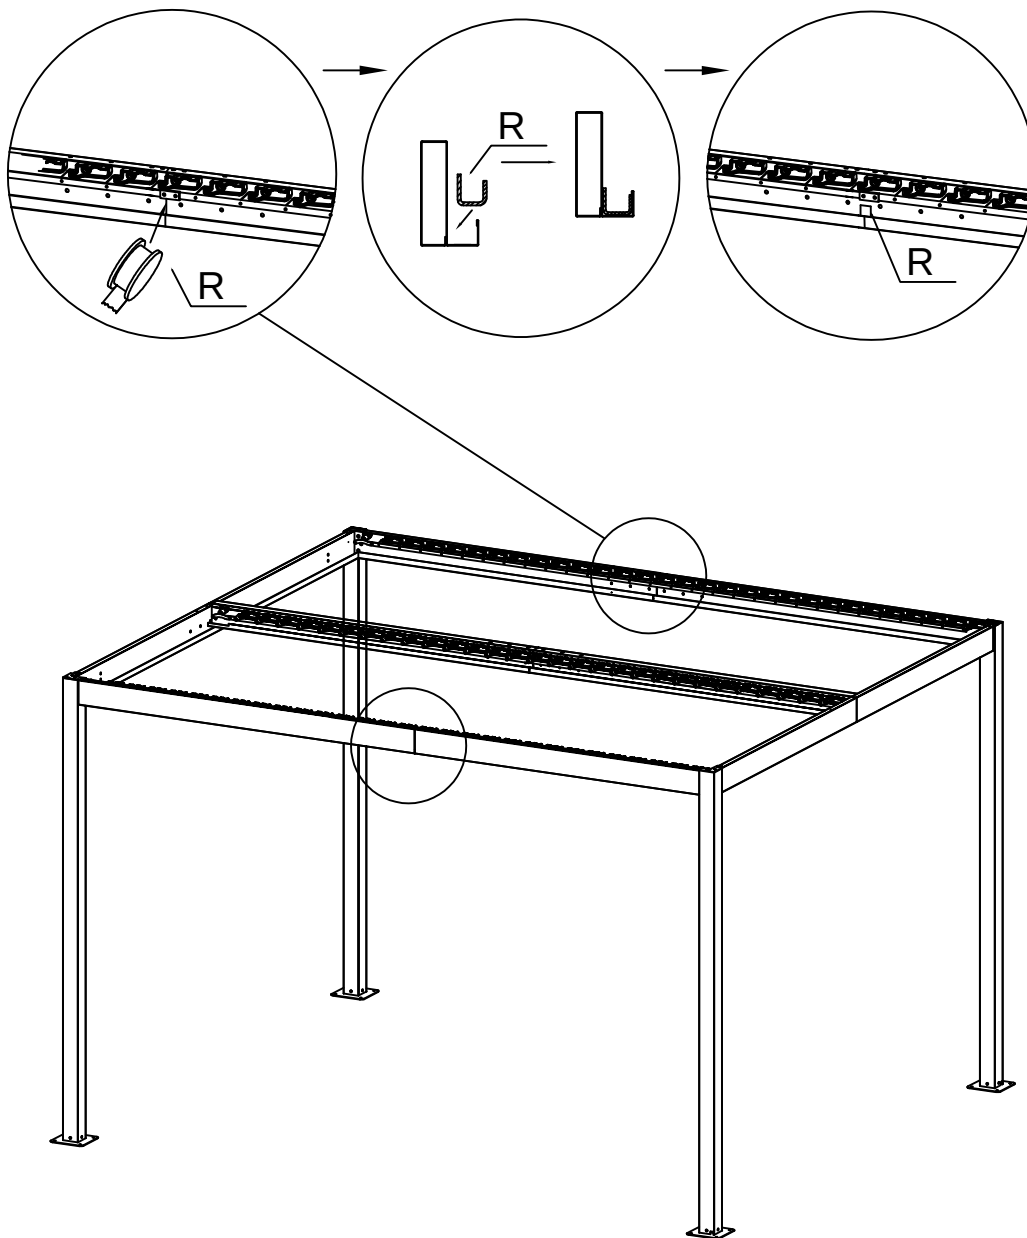


Tips : Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.

ASSEMBLY STEP 12





(R x1)



(R1 x1)




(R2 x1)

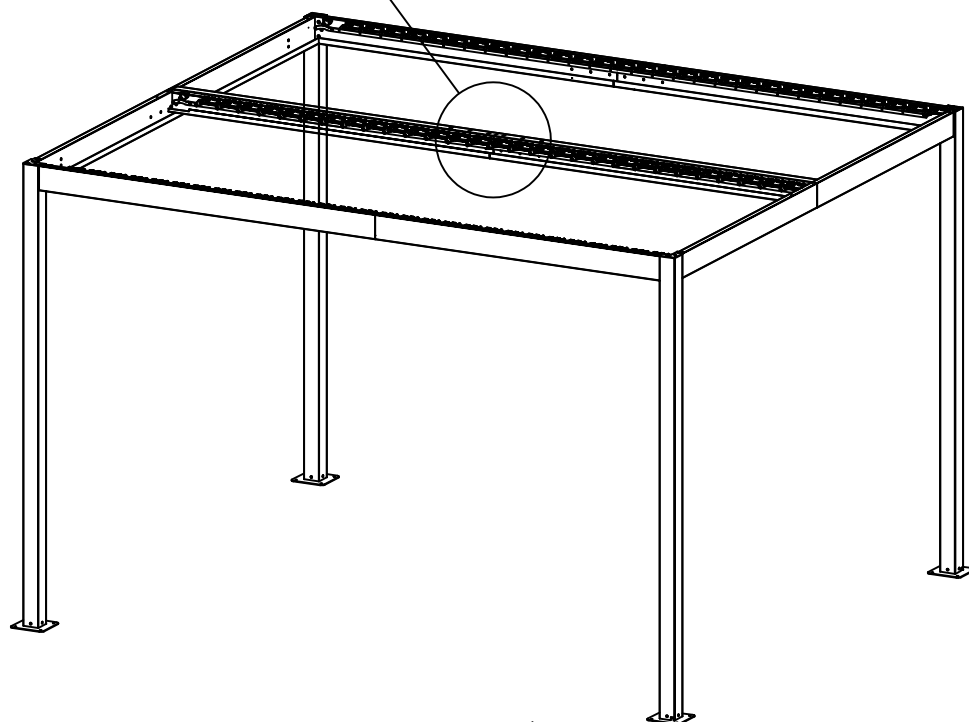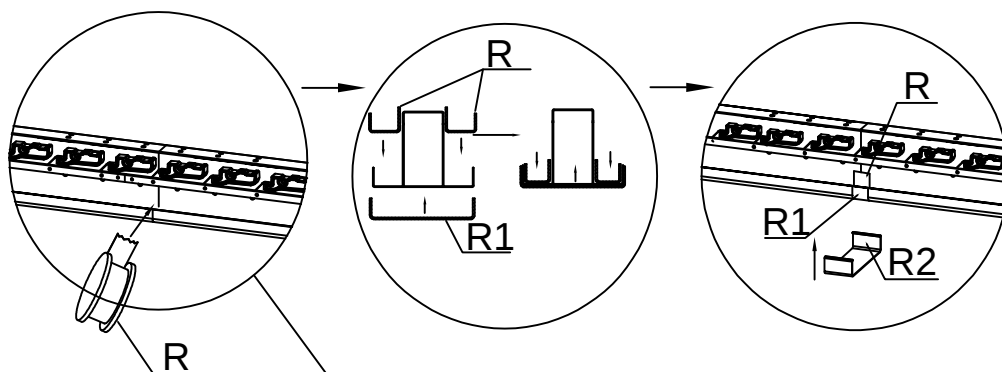


Tips : Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.


ASSEMBLY STEP 13



N1 x4



1# x24

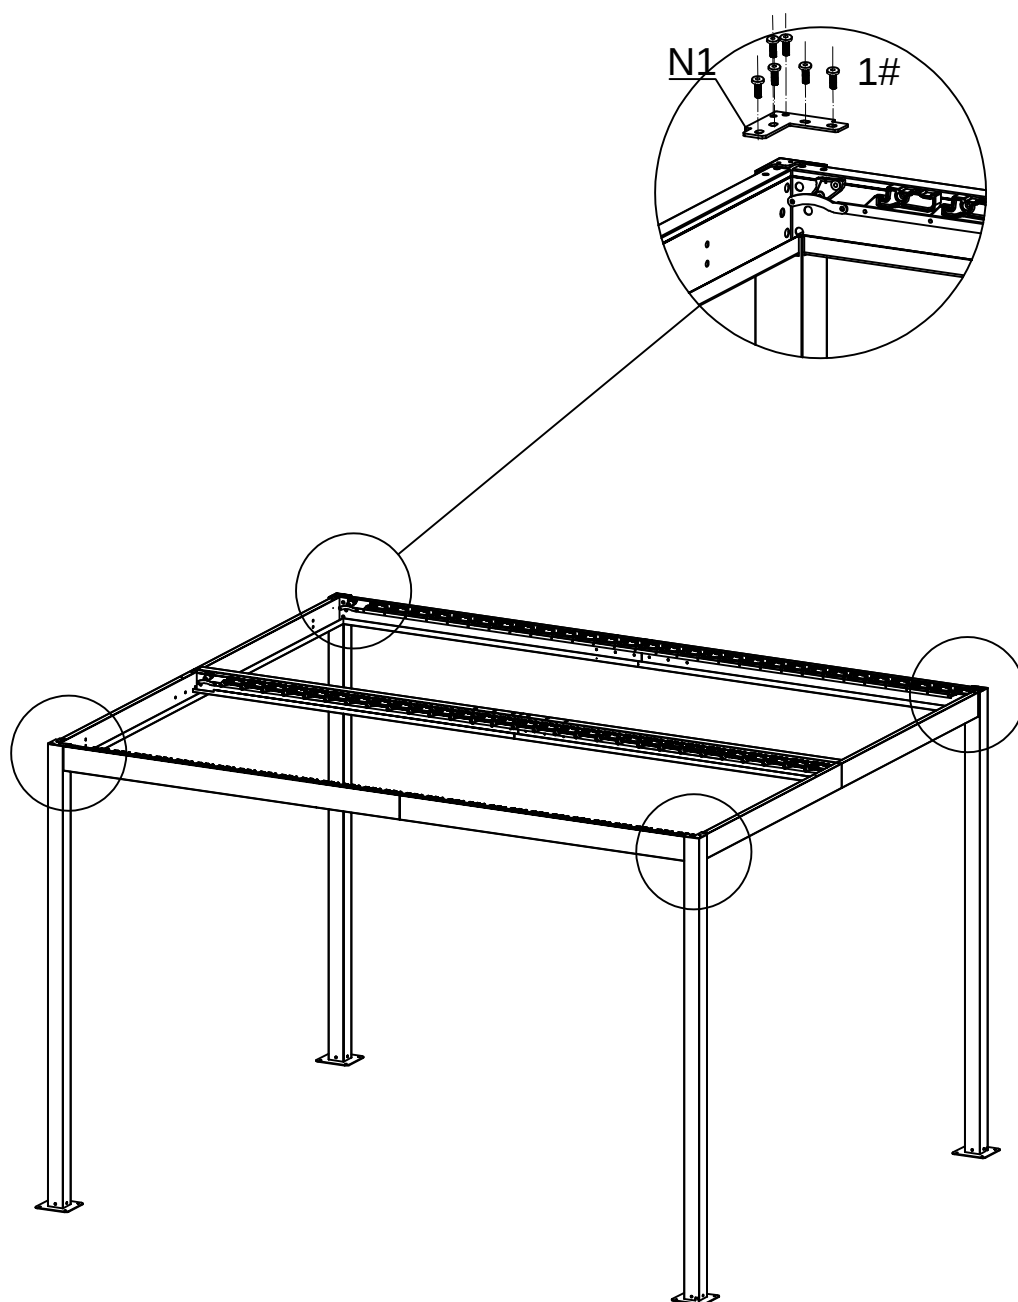

ASSEMBLY STEP 14



(M1 x2)




(M2 x2)



(K x2)



(L x2)




(I-1 x2)




(I-2 x2)




(5# x4)




(6# x4)

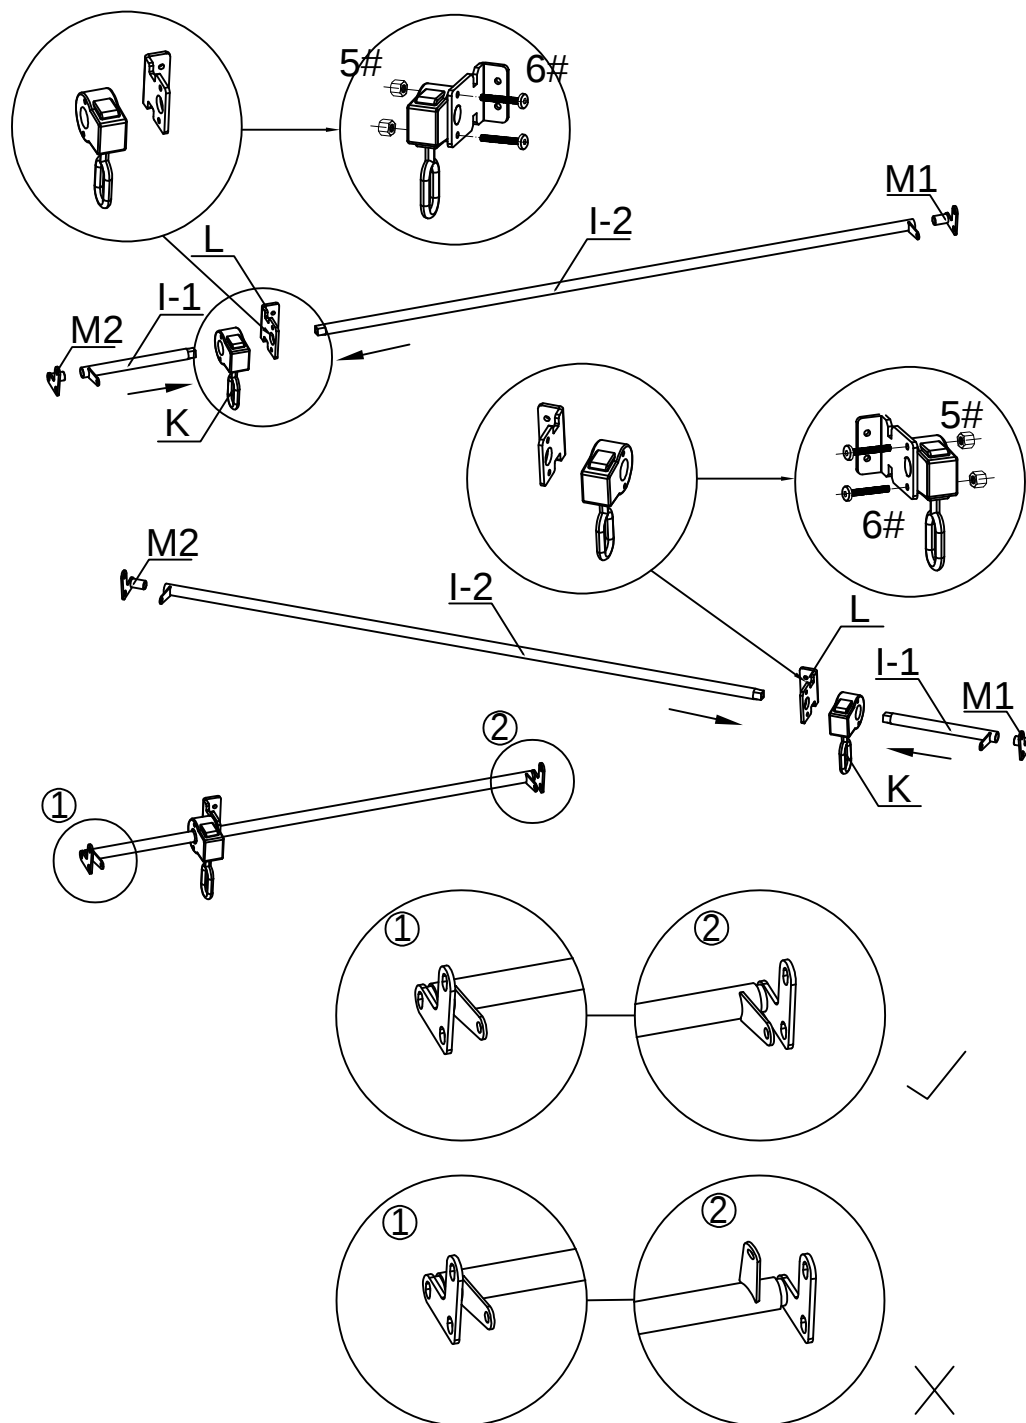

ASSEMBLY STEP 15



1# x4

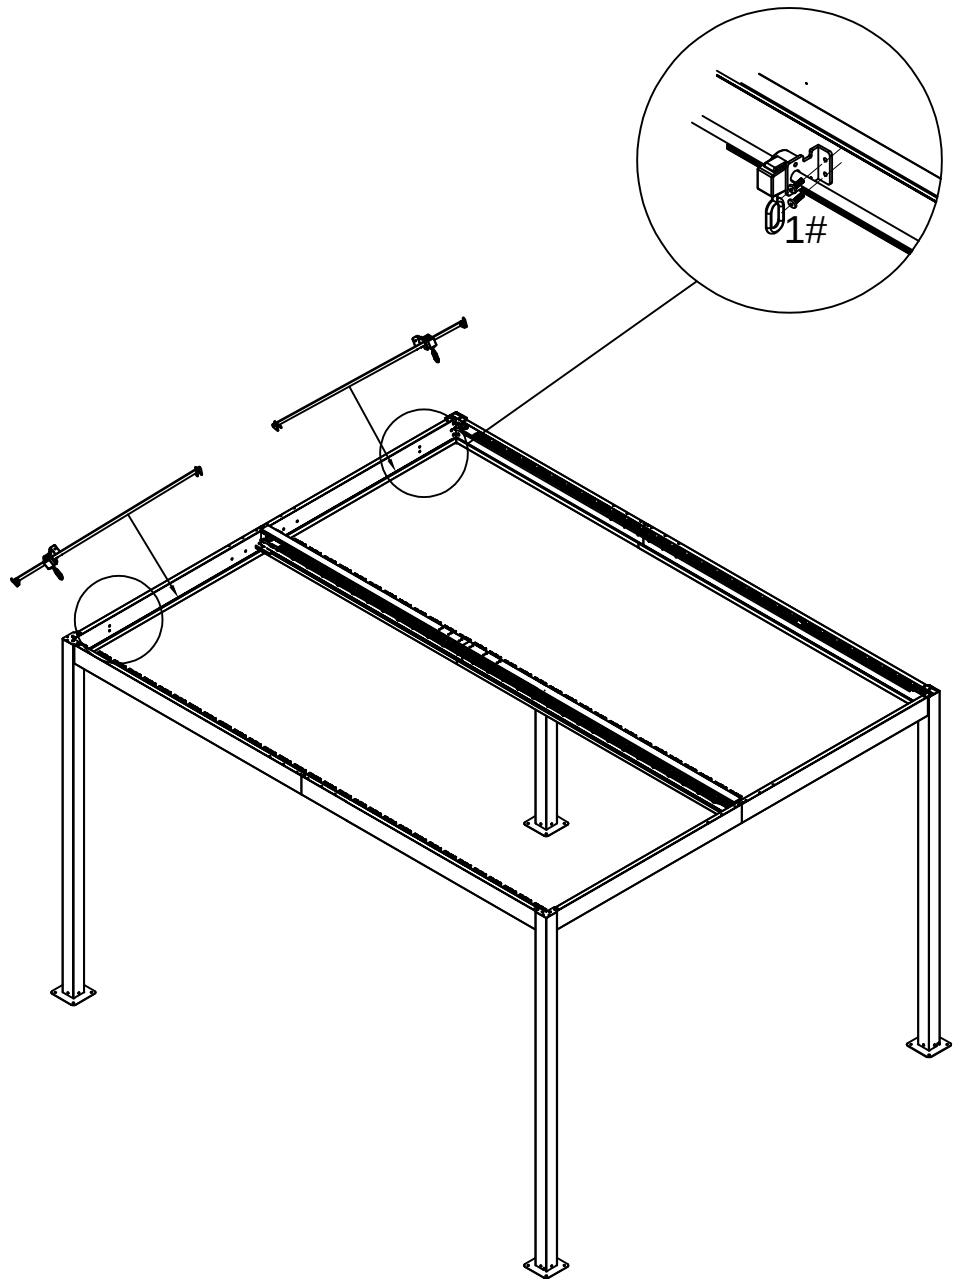


ASSEMBLY STEP 16




7# x12




5# x4

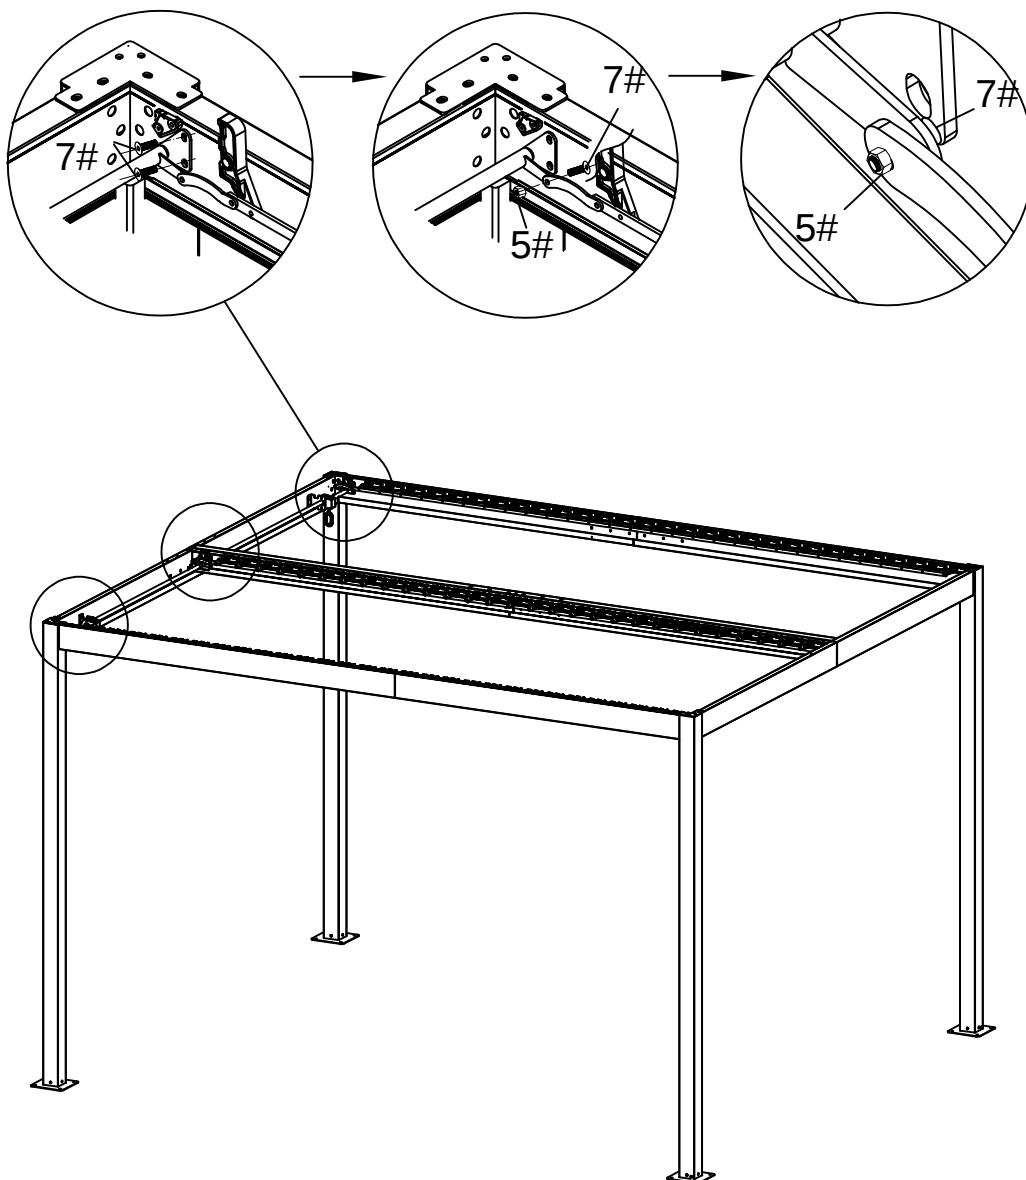

ASSEMBLY STEP 17

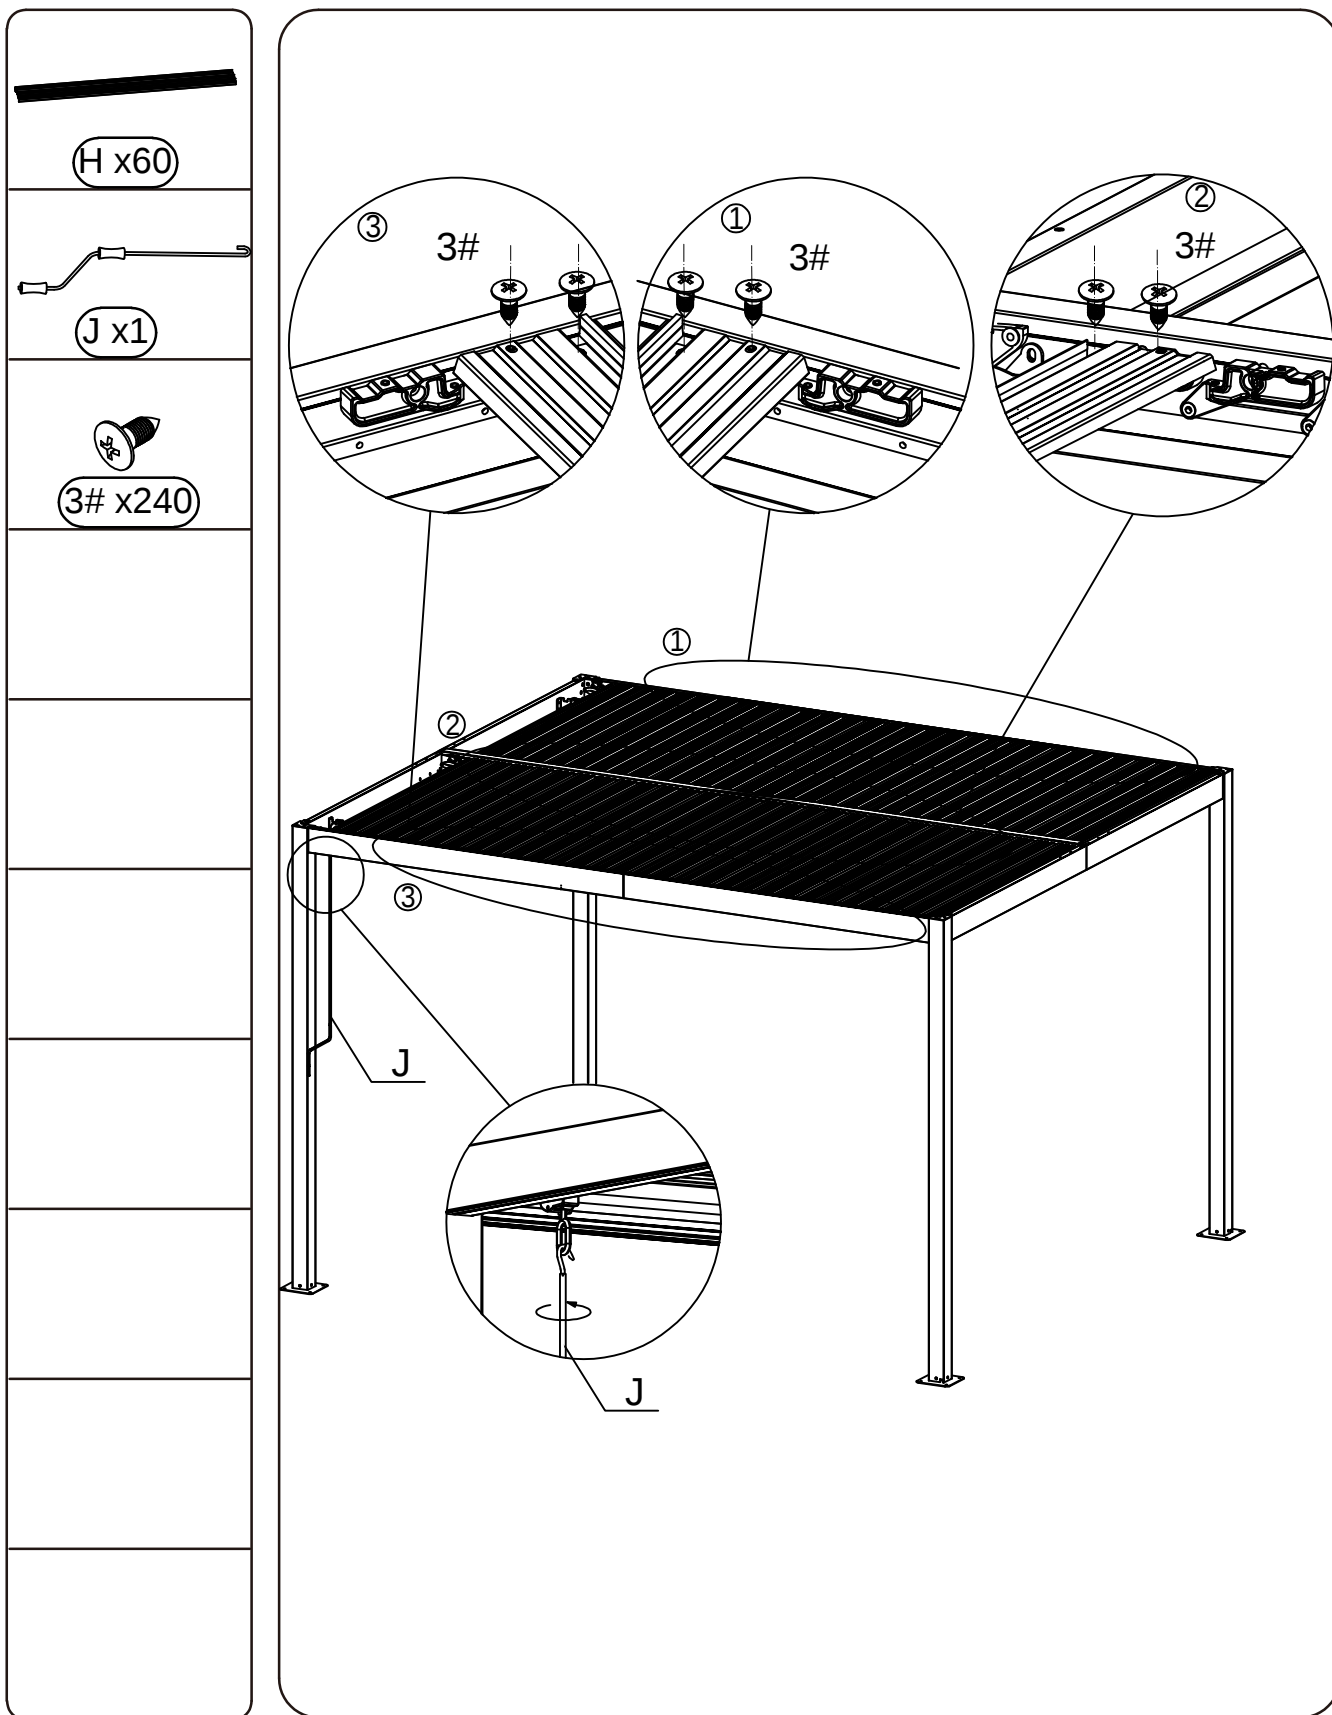


ASSEMBLY STEP 18




G x2



4# x4



9# x16

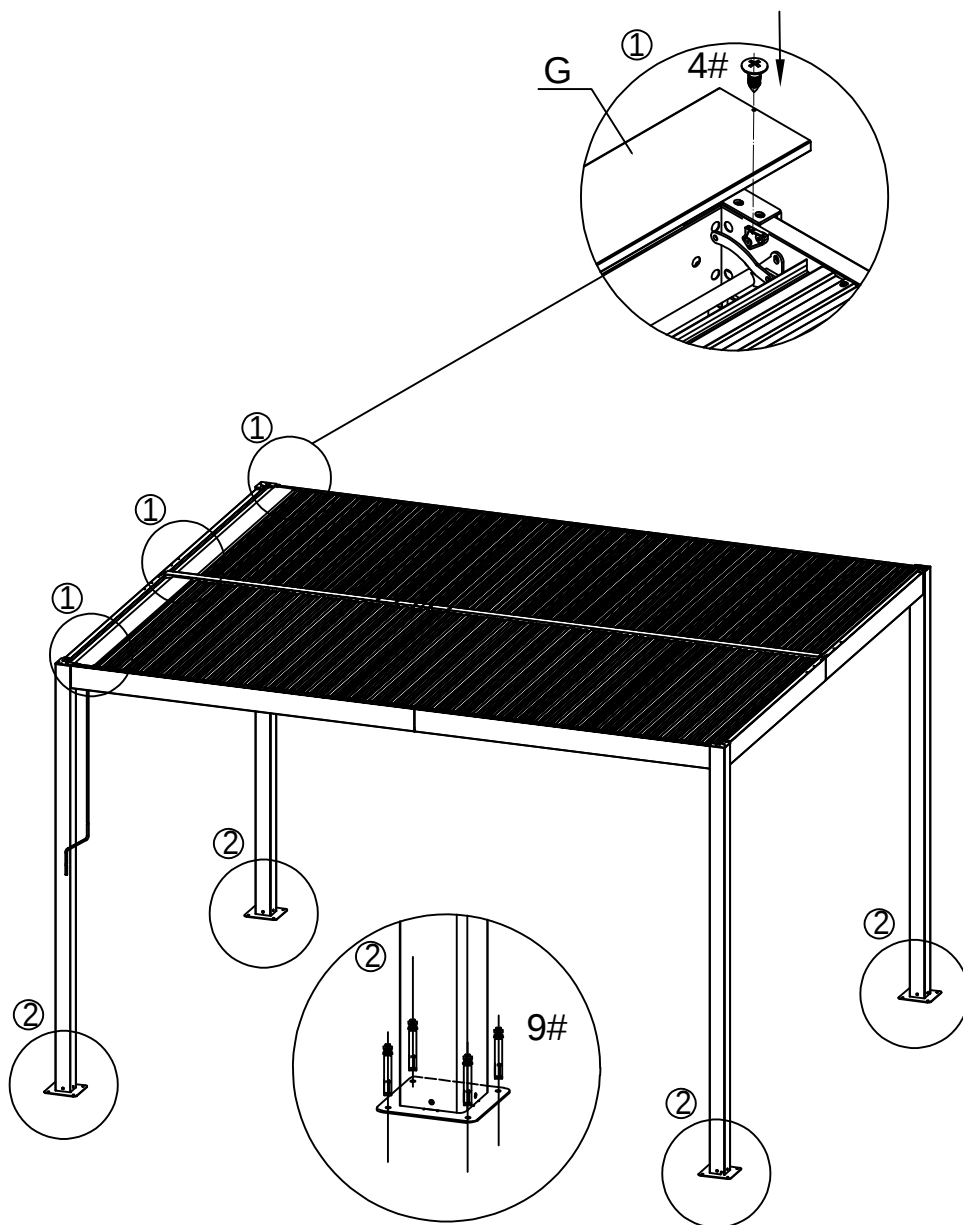

INSTALLATION SUCCESSFUL

