
# Installation Manual















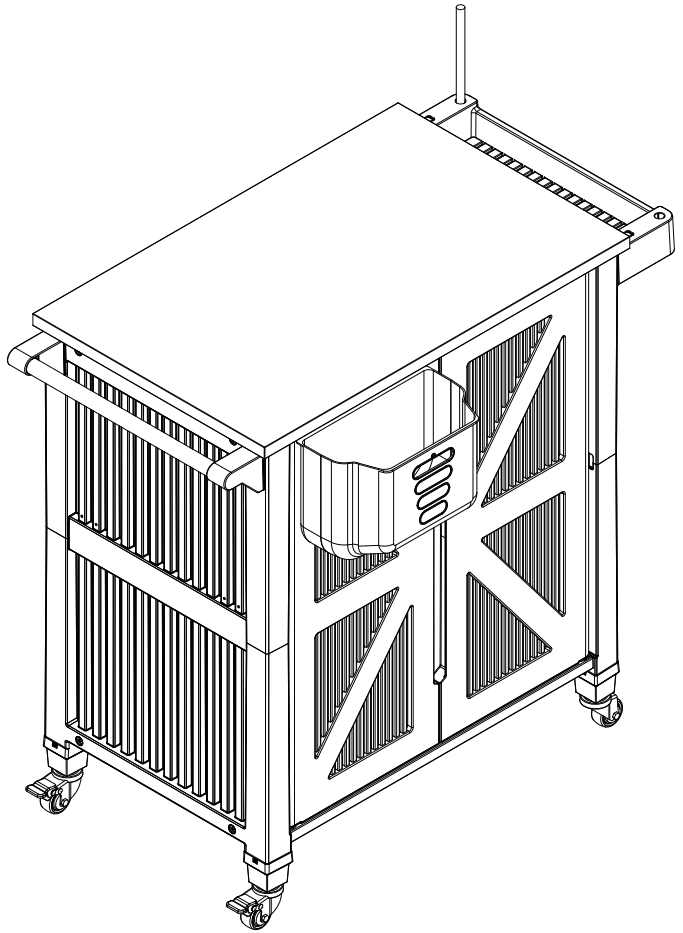


# Outdoor Grill Cart

Thanks to choose our product. Missing parts, Quality, Installation Questions, please contact with us.

# Part List














## Note identification
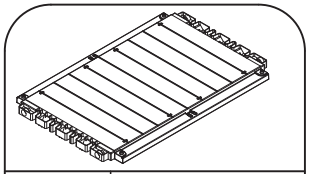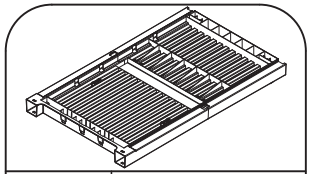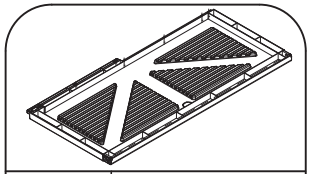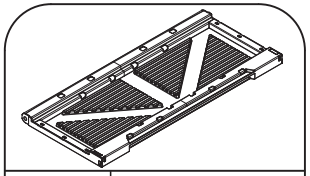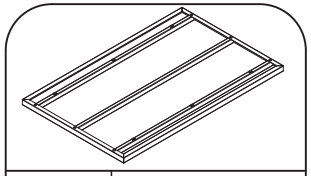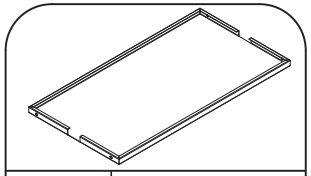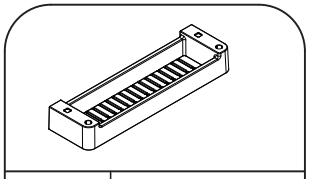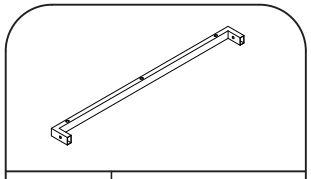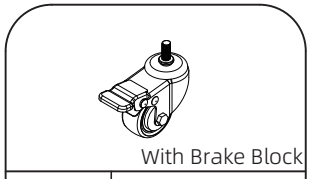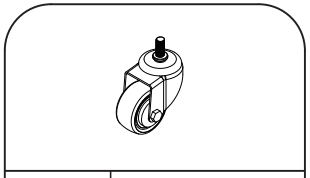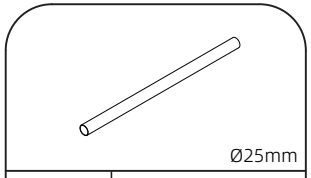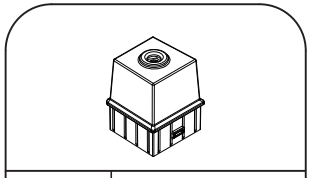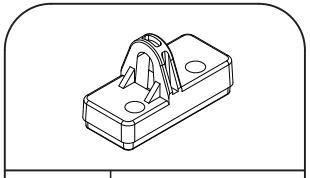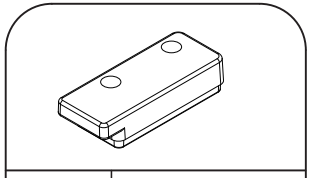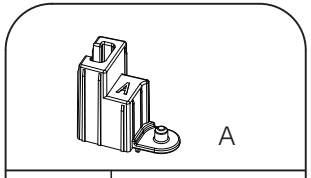
| | | |
|---|---|---|
|  |  |  |
| A x1 | B x2 | C x2 |
|  |  |  |
| D x2 | E x1 | F x1 |
|  |  |  With Brake Block |
| G x1 | H x2 | I x2 |
|  |  Ø25mm |  |
| J x2 | K x1 | LA x4 |
|  |  |  A |
| LB x1 | LC x1 | LD x2 |




# Part List

## Note identification

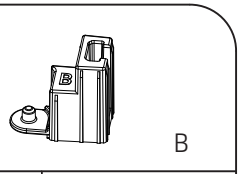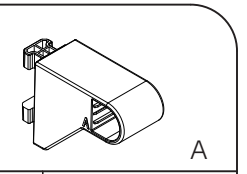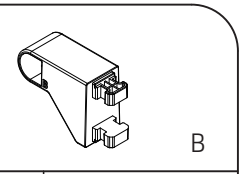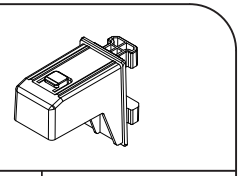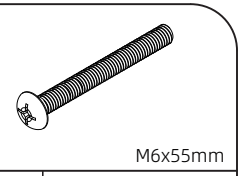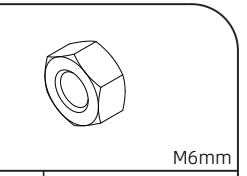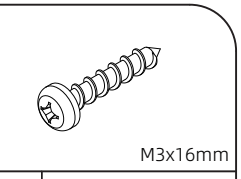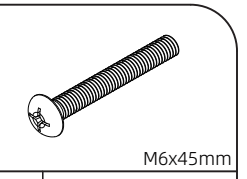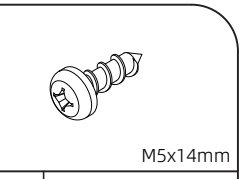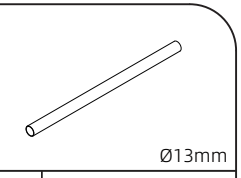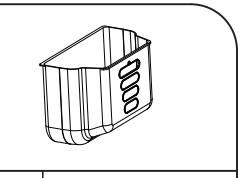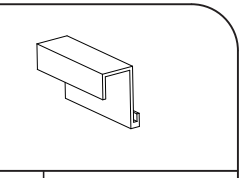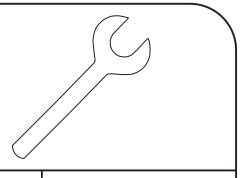
| | | |
|---|---|---|
|  B |  A |  B |
| LE x2 | LF x1 | LG x1 |
|  |  M6x55mm |  M6mm |
| LH x2 | MA x8 | MB x8 |
|  M3x16mm |  M6x45mm |  M5x14mm |
| MC x8 | MD x6 | ME x4 |
|  Ø13mm |  |  |
| NA x1 | NB x1 | NC x1 |
|  | | |
| ND x1 | | |

# Board Identification

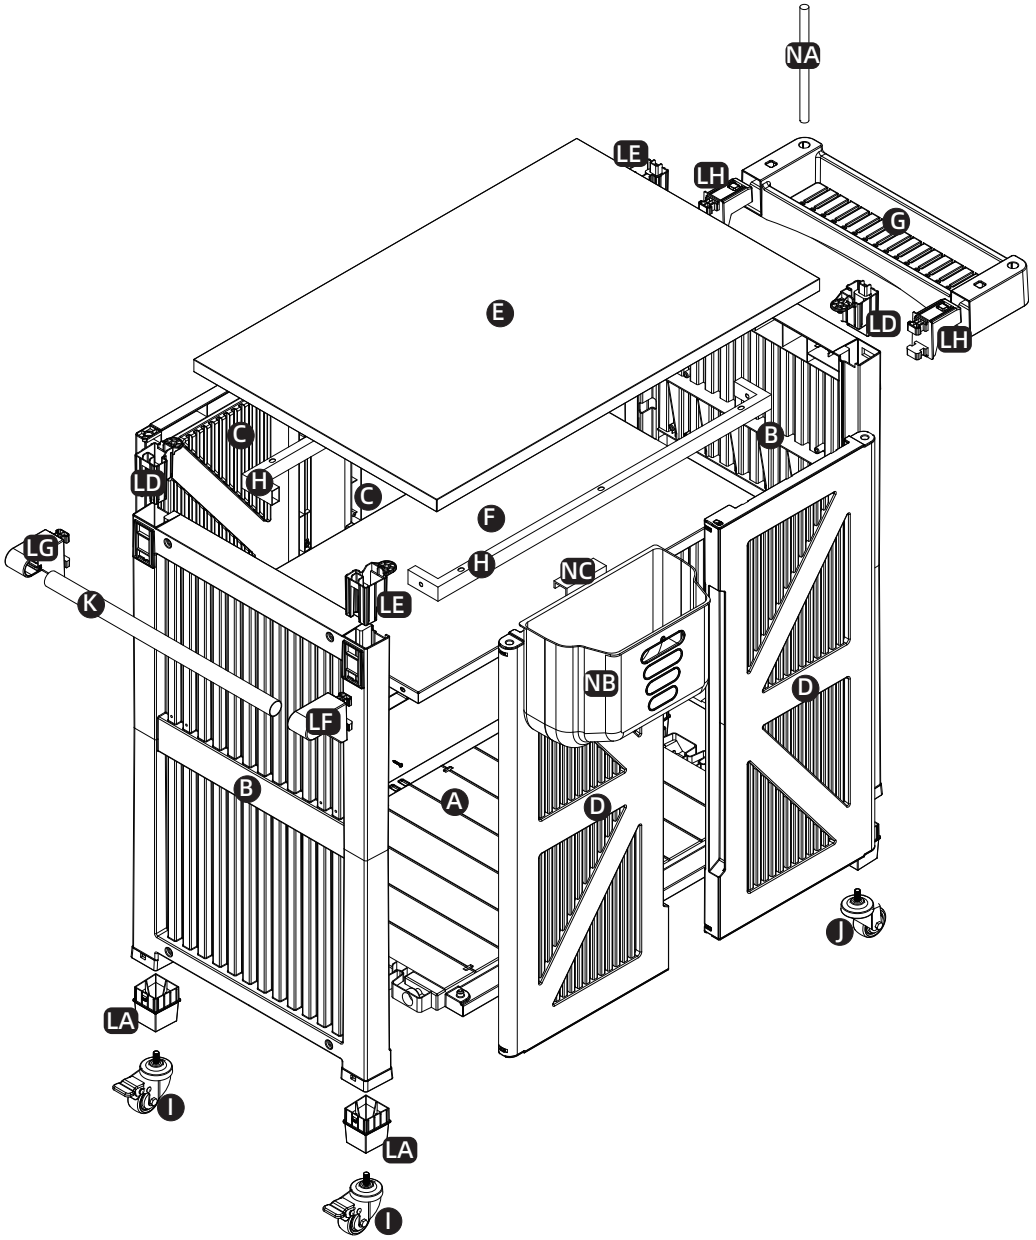






## STEP1

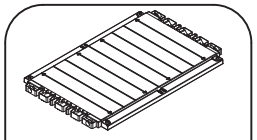

| A | x1 |
|---|---|

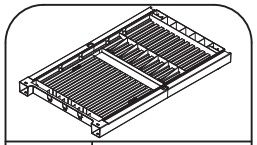


| B | x2 |
|---|---|

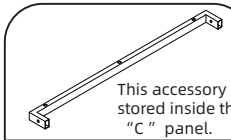

This accessory is stored inside the "C " panel.

| H | x2 |
|---|---|

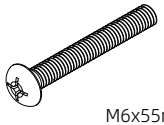

M6x55mm


| MA | x8 |
|---|---|



M6mm

| MB | x8 |
|---|---|

Take out the two "H " tubes stored inside the "C" panel and install them here.

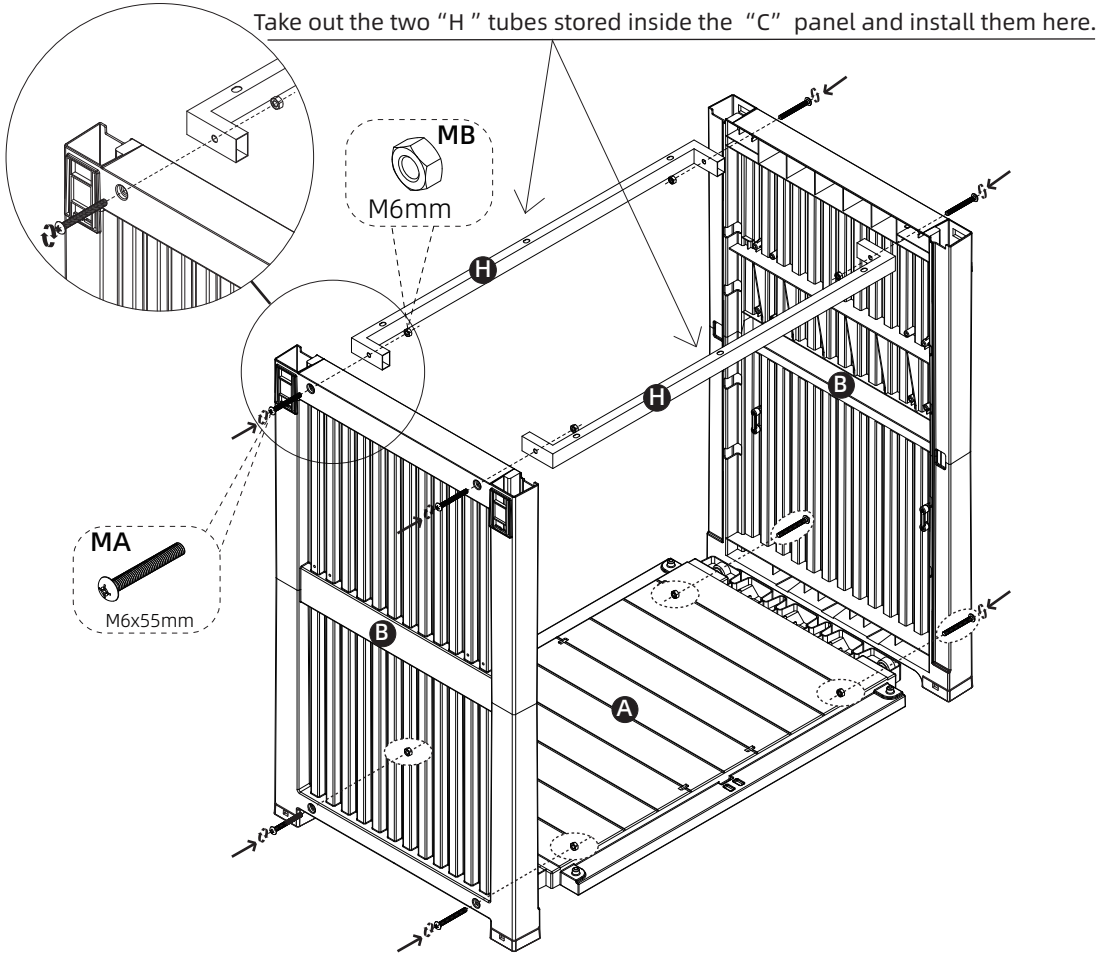

## STEP2

| With Brake Block | |
|---|---|
| I | x2 |


| | |
|---|---|
| J | x2 |

| | |
|---|---|
| LA | x4 |

| | |
|---|---|
| ND | x1 |

Flip Over

Tighten the wheels by "ND" into the bottom thread("ND"should be inserted from the arrow position)

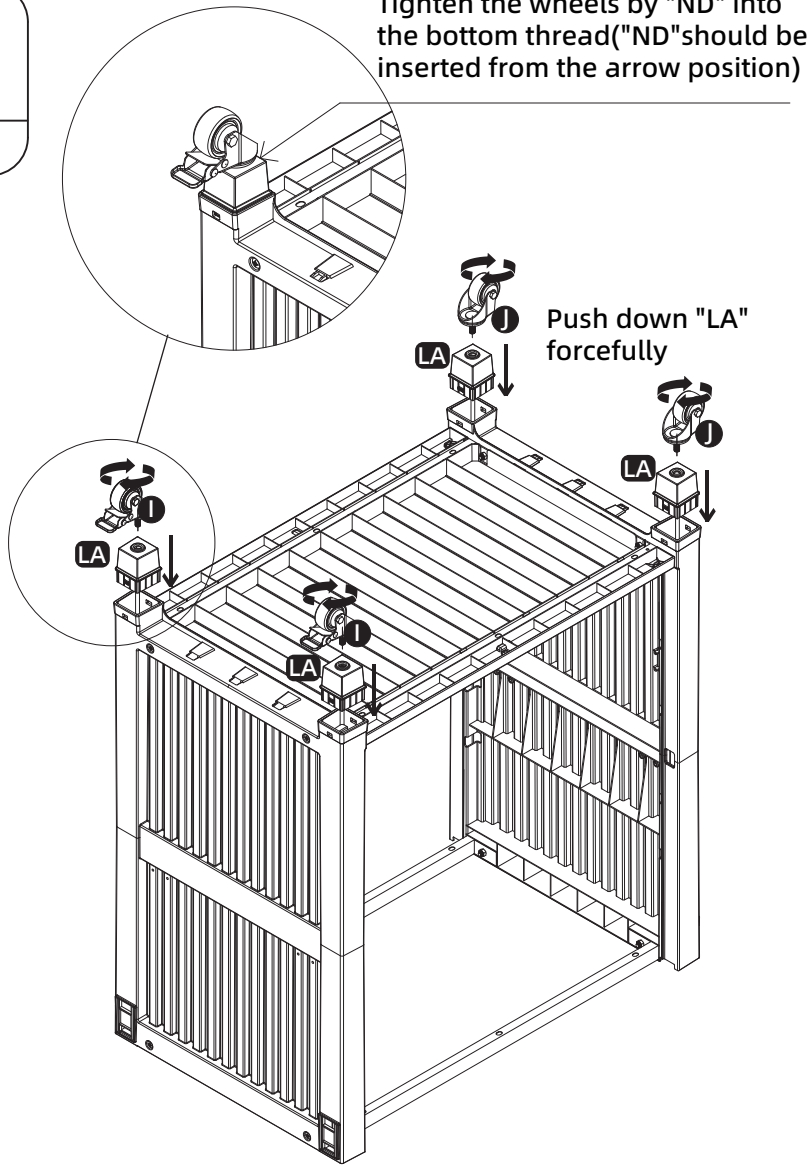





## STEP3


| | |
|---|---|
| C | x2 |

| | |
|---|---|
| LB | x1 |


| | |
|---|---|
| LC | x1 |

| M3x16mm | |
|---|---|
| MC | x8 |

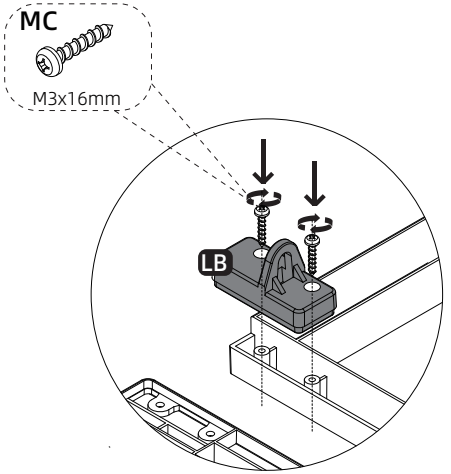

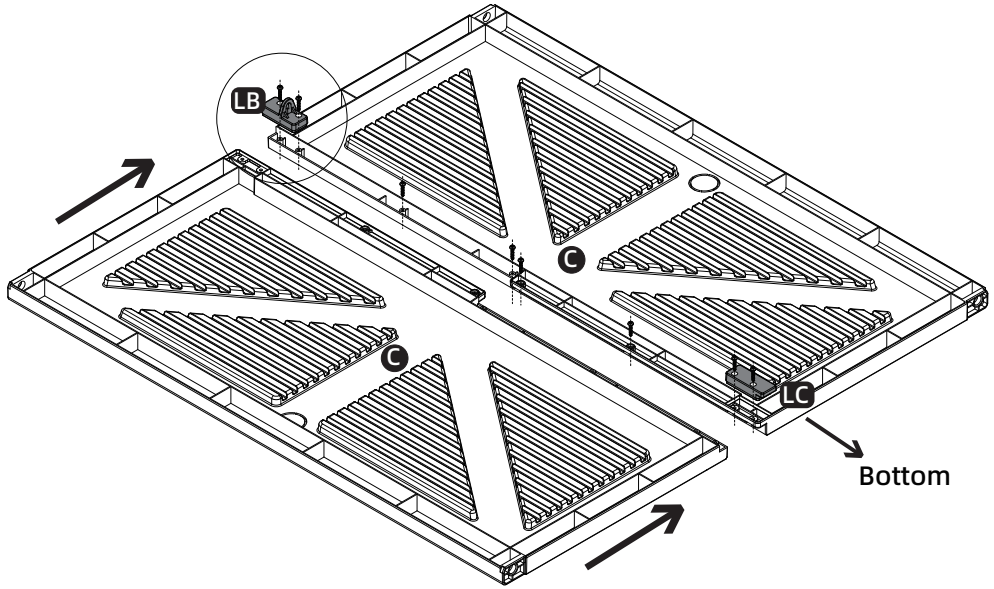



## STEP4

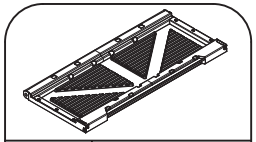

| D | x2 |
|---|---|


Flip Over

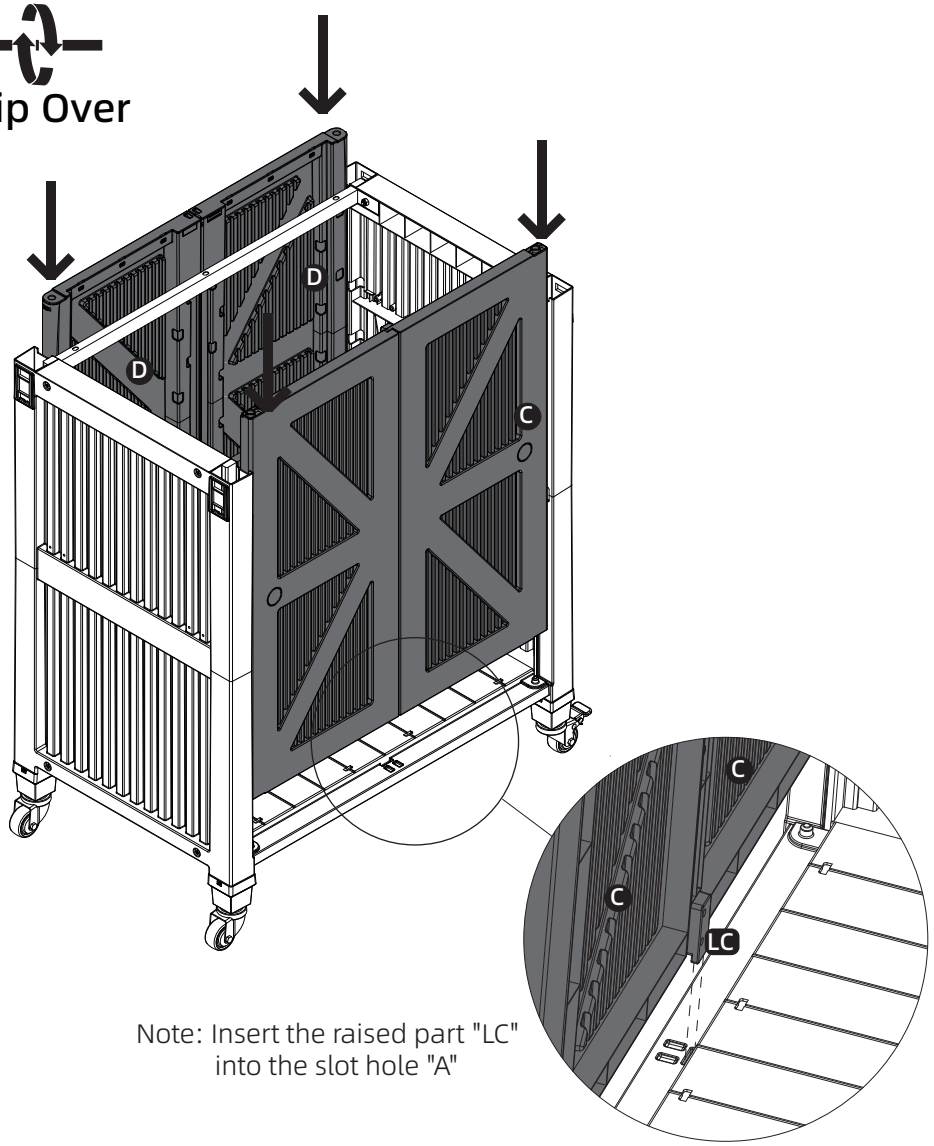



Note: Insert the raised part "LC" into the slot hole "A"




## STEP5

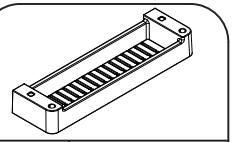

| G | x1 |
|---|---|

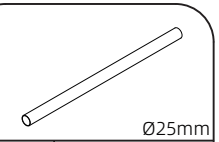



| K | x1 |
|---|---|

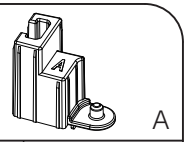



| LD | x2 |
|---|---|





| LE | x2 |
|---|---|

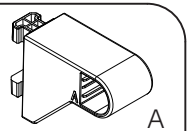



| LF | x1 |
|---|---|

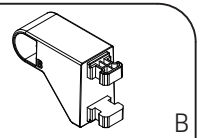



| LG | x1 |
|---|---|

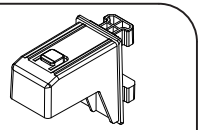

| LH | x2 |
|---|---|

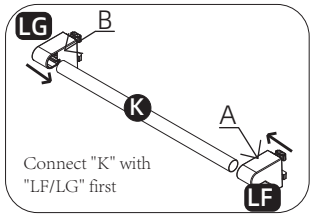


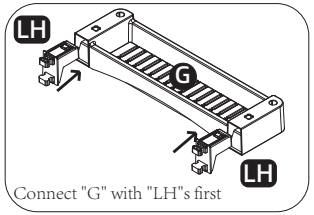





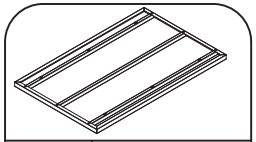


1. Insert "K" & "G" first
2. From top to bottom, insert "LD" ,"LE" ,"LD" and "LE"

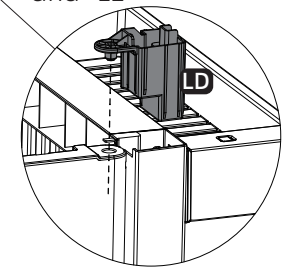

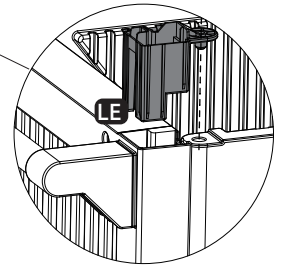
## STEP6



| E | x1 |
|---|---|





| MD | x6 |
|---|---|

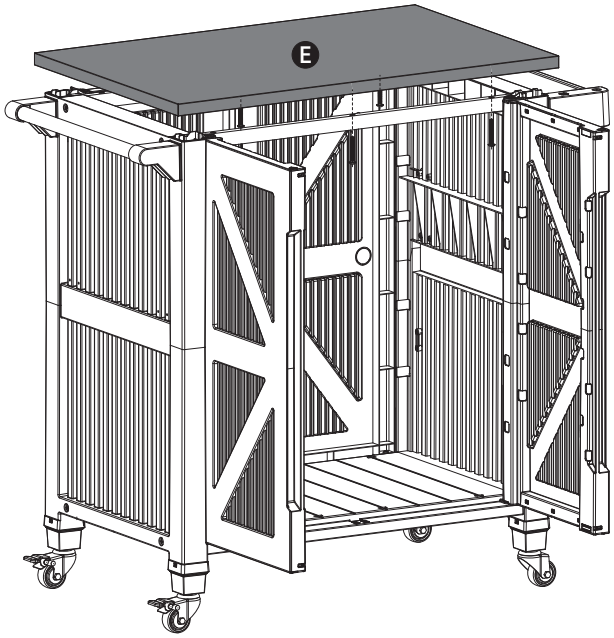


**Warning**: Before installing the "E" panel, be sure to wear gloves to prevent your hands from being scratched.

Remove the protection film before installation.

Place "E" on the relevant area and fix it by screws.

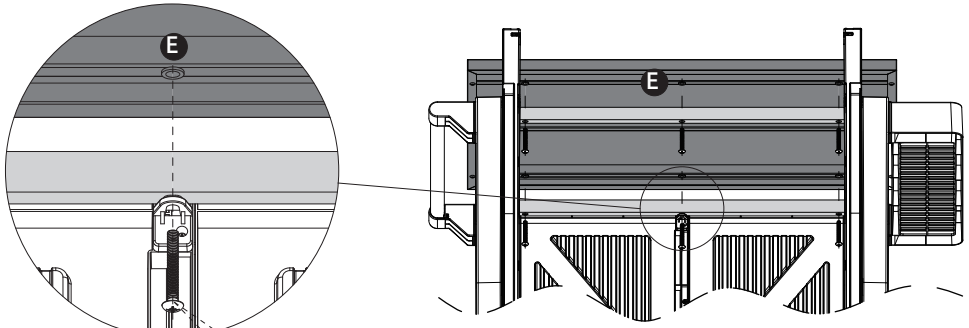









## STEP7

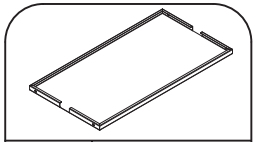



| F | x1 |
|---|---|





| ME | x4 |
|---|---|

1.Place the "F" at an inclined angle in the cabinet first.
2. Put down the "F" and align with the installation holes
3. Fix the "F" with 4pcs screws.

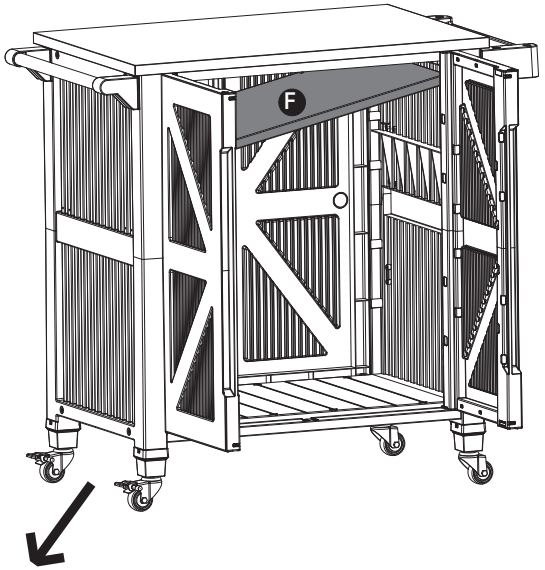


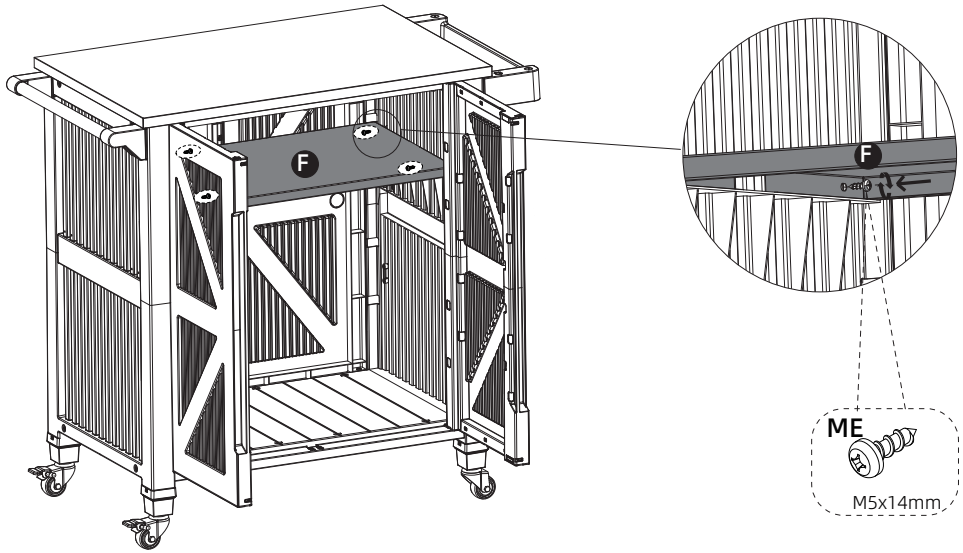
STEP8

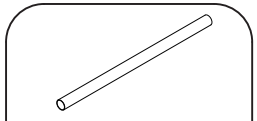



| NA | x1 |
|---|---|

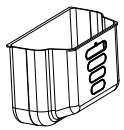

| NB | x1 |
|---|---|



| NC | x1 |
|---|---|

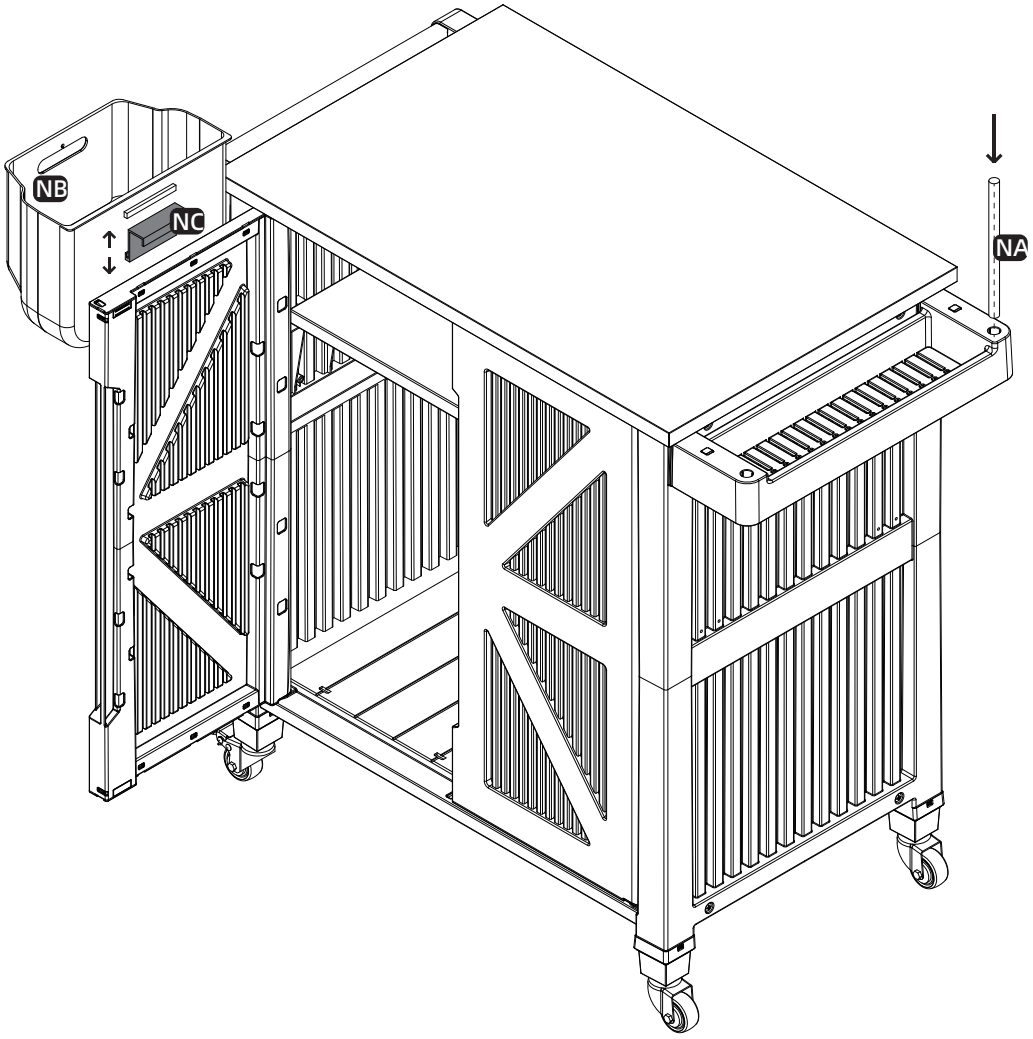




Congratulations! You have completed the installation of the dining car.

