




ASSEMBLY INSTRUCTIONS

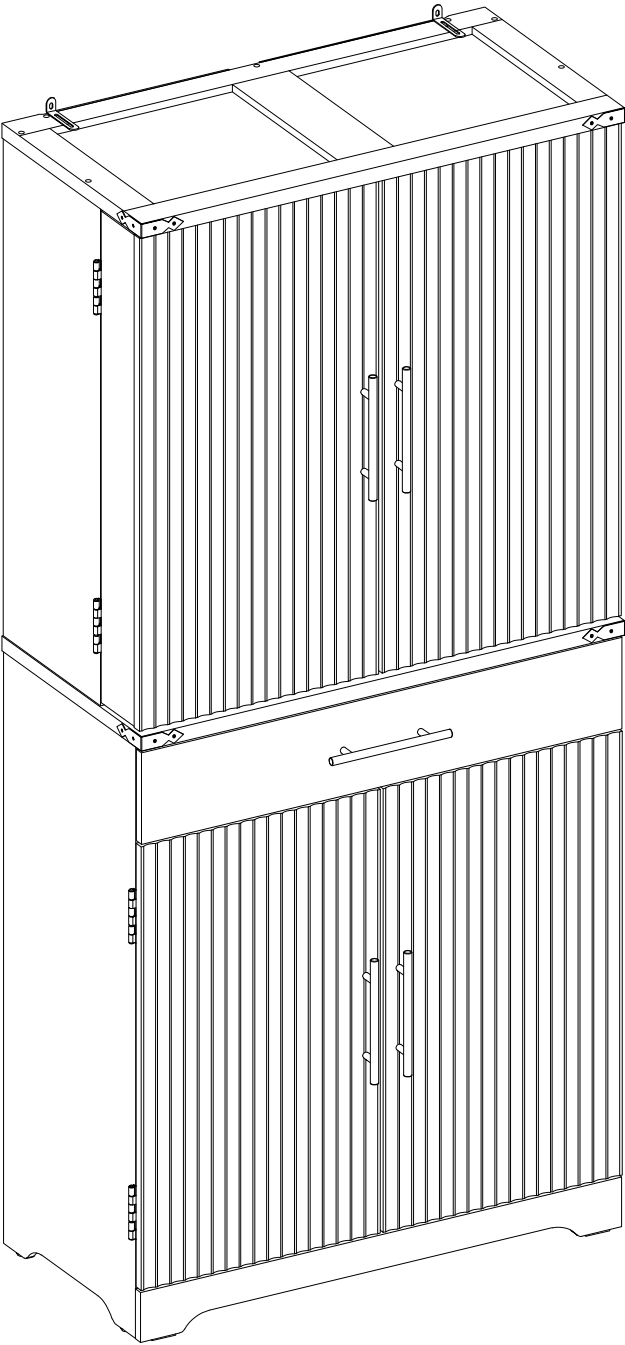


Notice:







1. Please unbox the item from the side with an open label and put a carpet on the floor to avoid scratching it.
2. Follow the installation instructions carefully. before installation, please ensure that all accessories are present. For large items, we advise you to install them with 2 or more people for faster and safer installation.
3. Do not fully tighten the screws during initial assembly. Fully tighten the screws only once all pieces are correctly assembled.
4. Do not stand, climb, or swing on the product.
5. If you encounter any problems during installation, please contact our customer service.



































Recommended installers:2





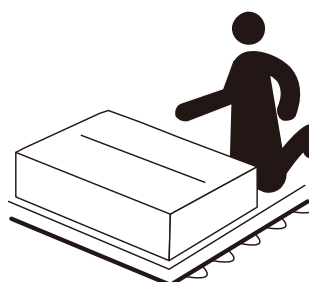














Put a carpet on the floor before unpcking


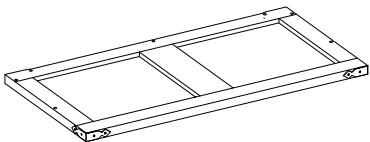



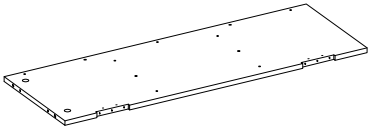

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		×1	2		×1
3		×2	4		×2
5		×1	6		×1

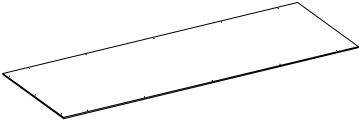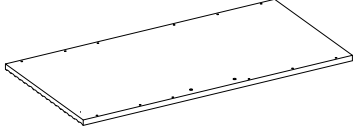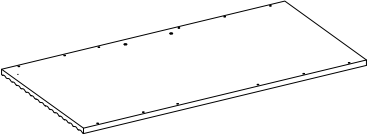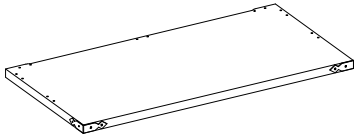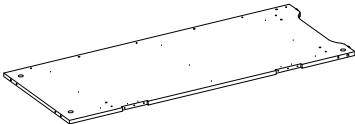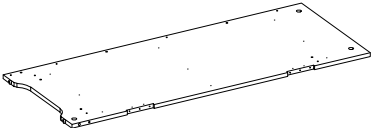
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
7		×1	8		×1
9		×2	10		×1
11		×1	12		×1
13		×1	14		×1
15		×1	16		×6
17		×6	18		×1
19		×1	20		×1
21		×1	22		×1

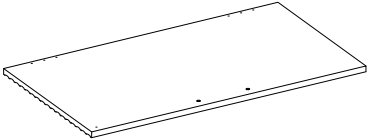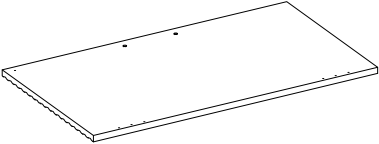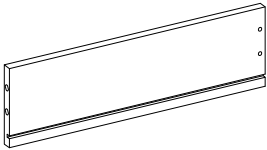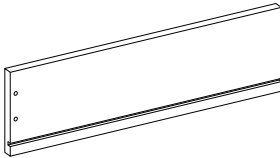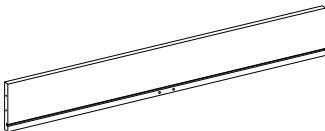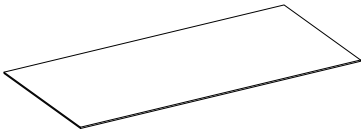Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
23		×1	24		×1
25		×2	26		×1
27		×1	28		×1
29		×1	30		×1
31		×1	32		×1
33		×1	34		×1
35		×1	36		×1
37		×1	38		×2

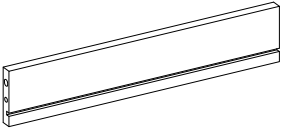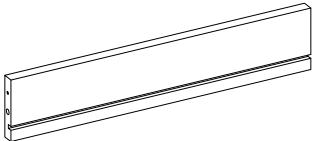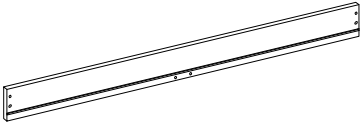Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
39		× 2	40		× 2
41		× 2	42		× 2
43		× 2			

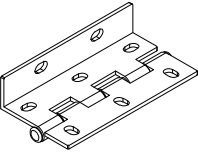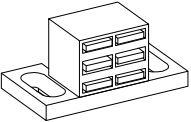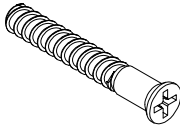
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		× 89 ⁺³	B	 ø15x9.5mm	× 89 ⁺³
C	 ø30mm	× 89 ⁺³	D	 ø6x30mm	× 78 ⁺³
E		× 8	F	 ø4x20mm	× 36 ⁺²
G	 ø3x12mm	× 52 ⁺²	H	 ø3.5x12mm	× 28 ⁺²
I		× 4	J	 ø4x32mm	× 14 ⁺¹
K		× 2	L		× 1
M	 ø5*50mm	× 14 ⁺¹	N	 ø4x25mm	× 6
O		× 2	P	 ø4x12mm	× 10 ⁺¹
Q		× 2	R	 ø4x35mm	× 2

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
S		× 5	T	 ø4x19mm	× 10₊₁
U	 ø3x15mm	× 6₊₁	V	 ø3. 5x12mm	× 40₊₂
CL		× 3	CR		× 3
DL		× 3	DR		× 3
W		× 2	X		× 2
Y	 M4mm	× 1			









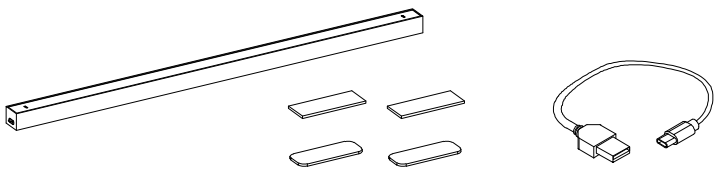
Z		× 1
----------	---	------------

 **Tips:** The number after "+" represents the spare hardware.


Explosion Diagram

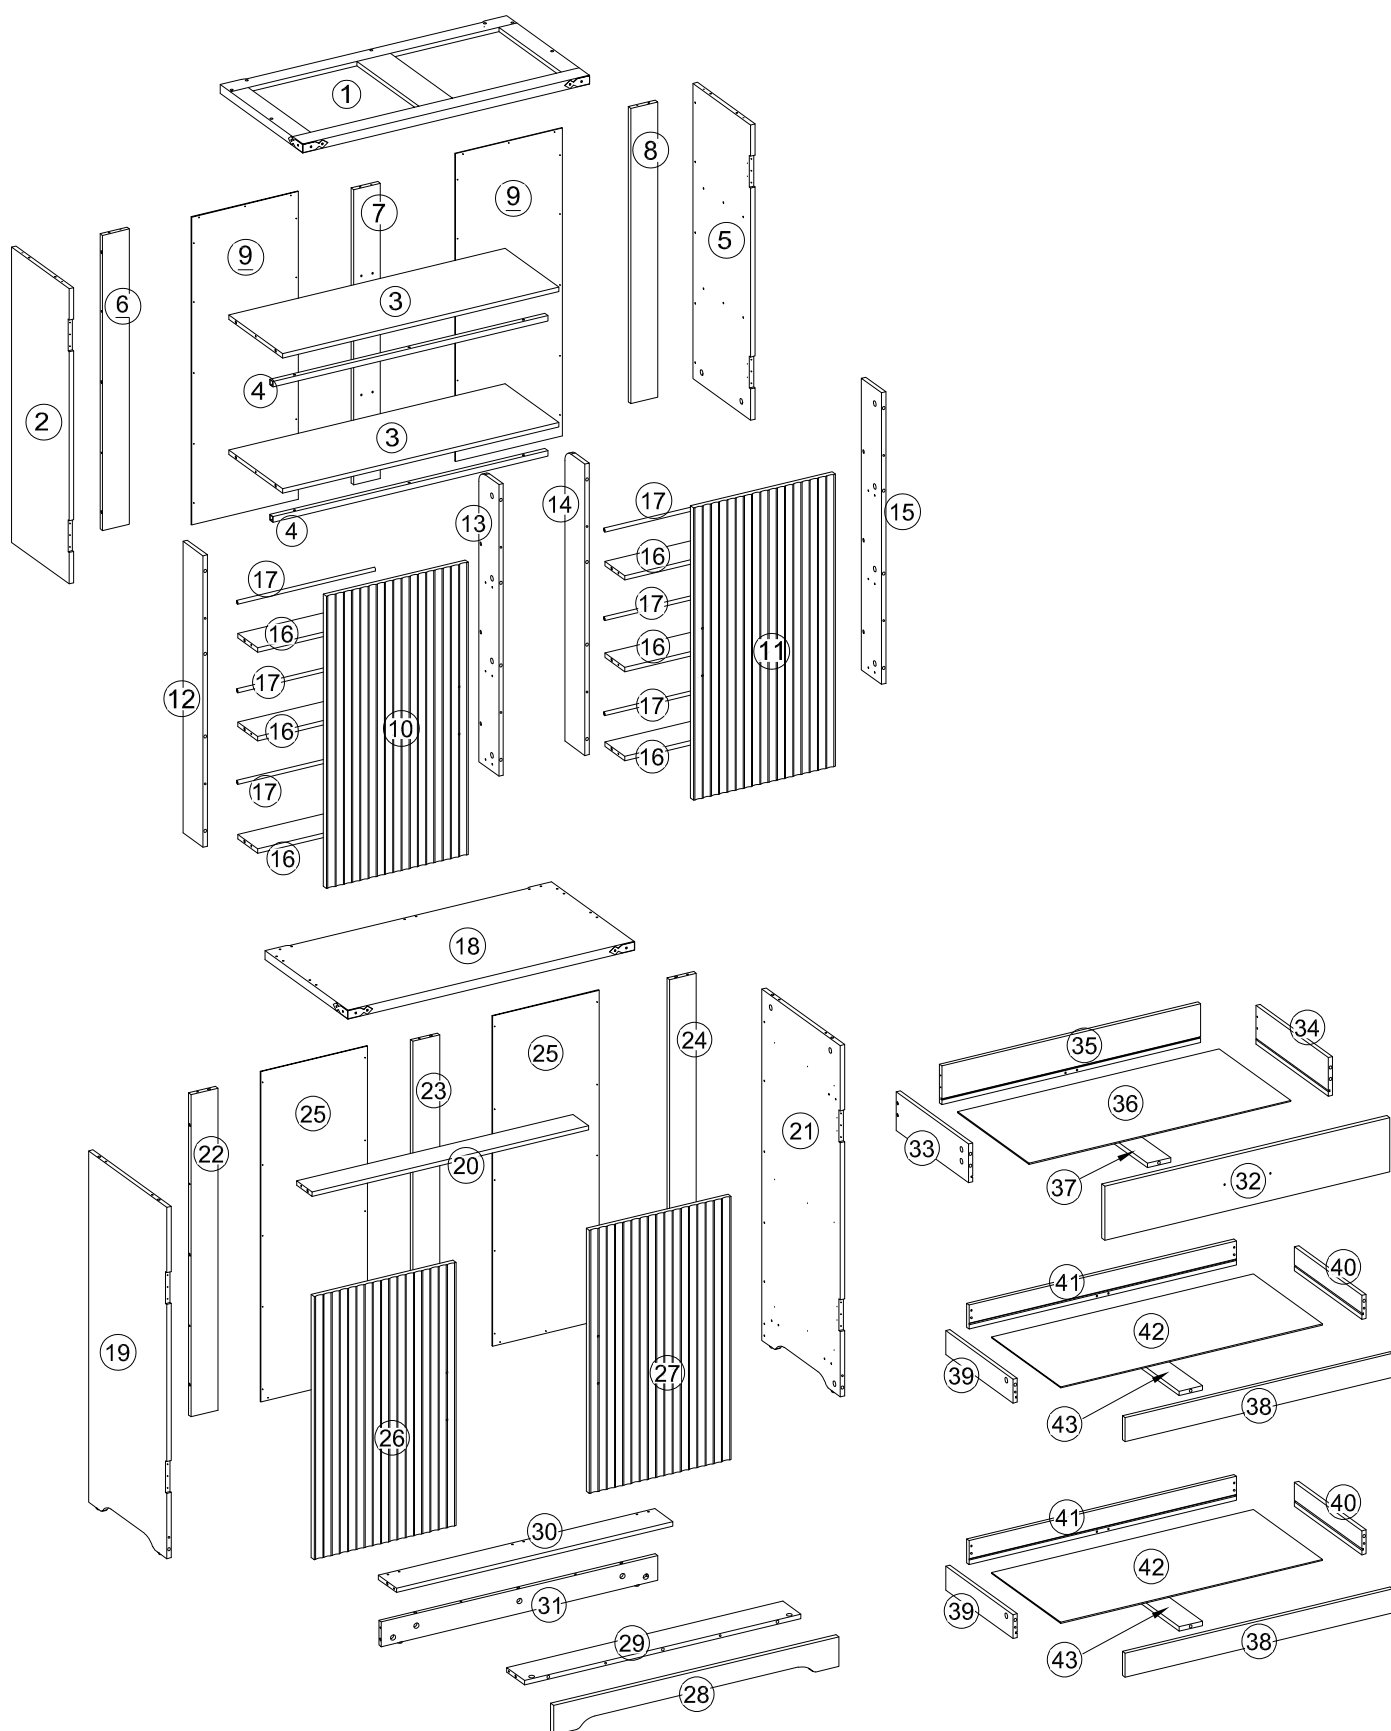


1

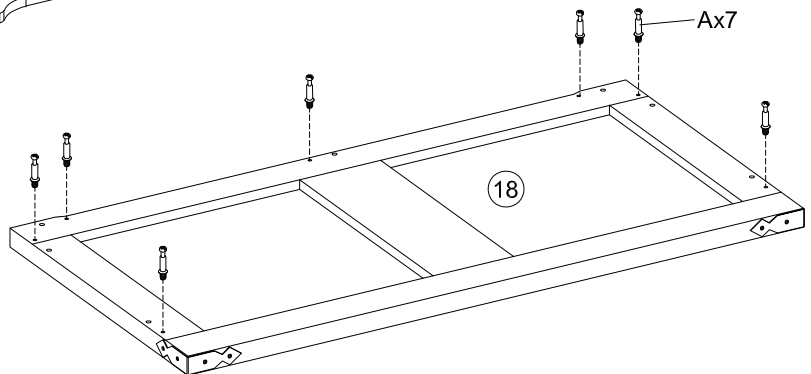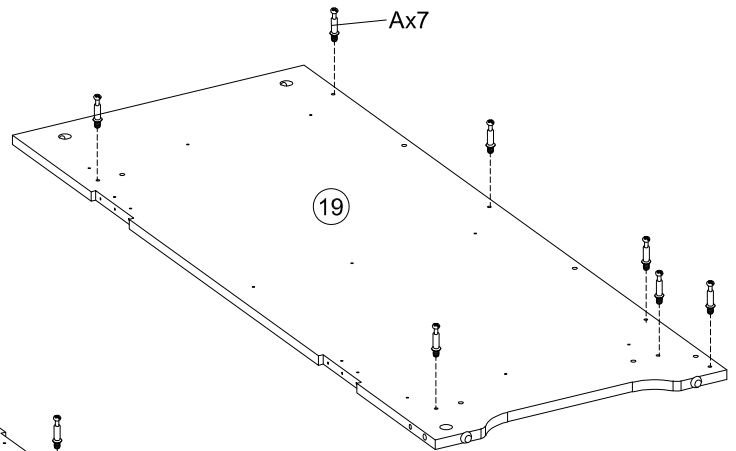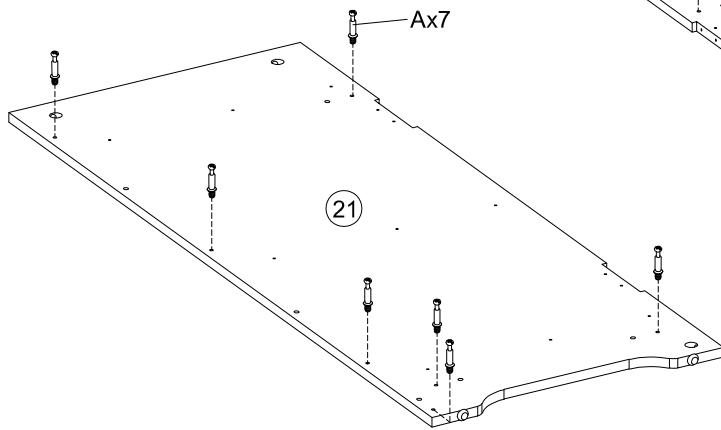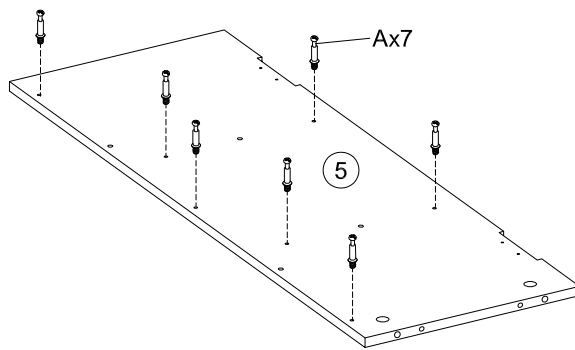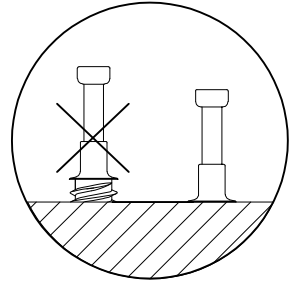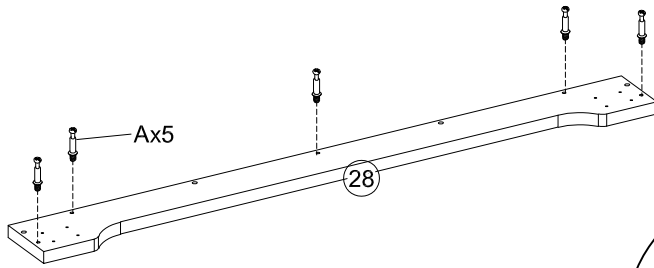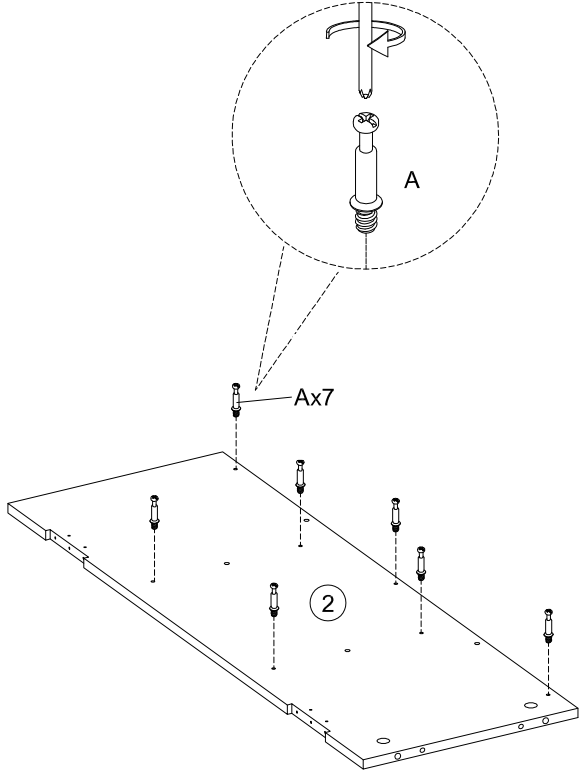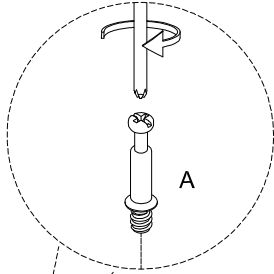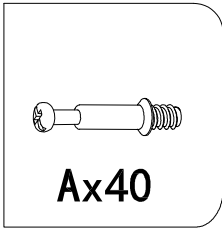

2




CLx3




CRx3



Vx18

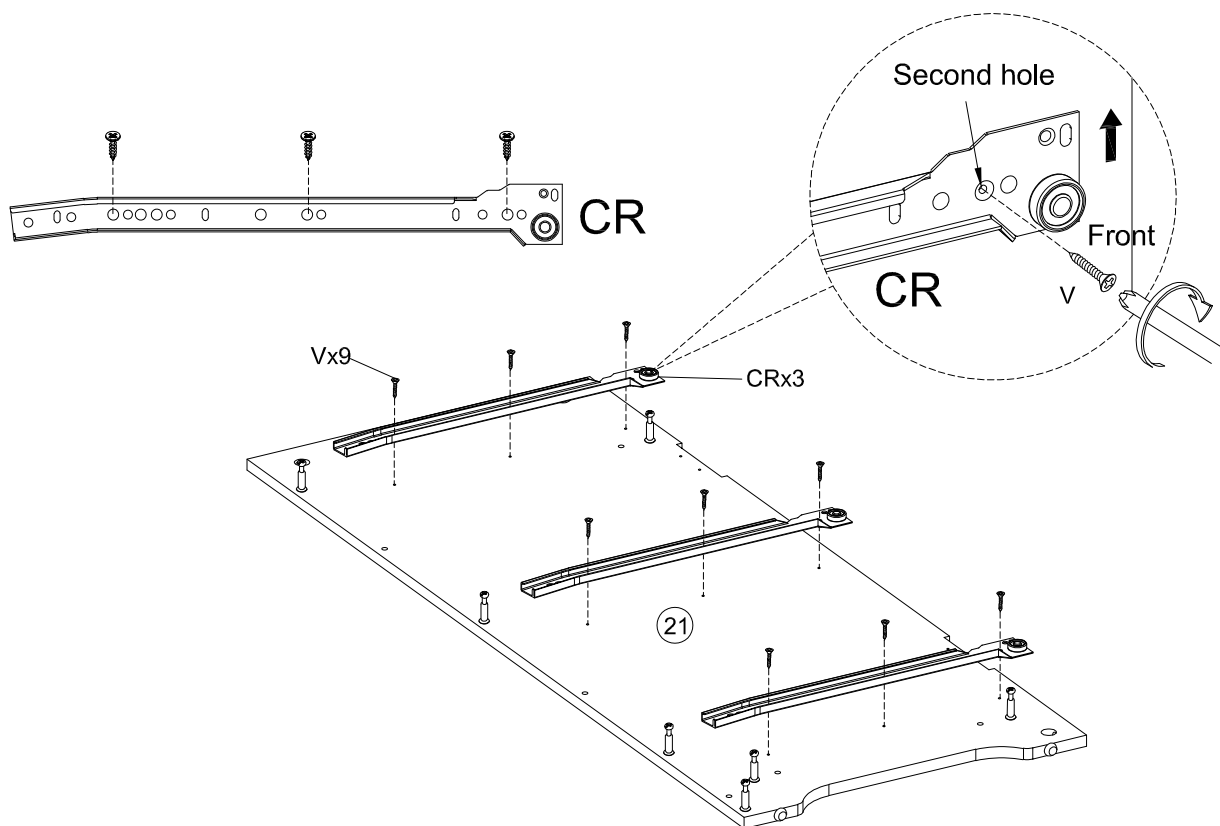


Note the CL or CR stamped label on the track !

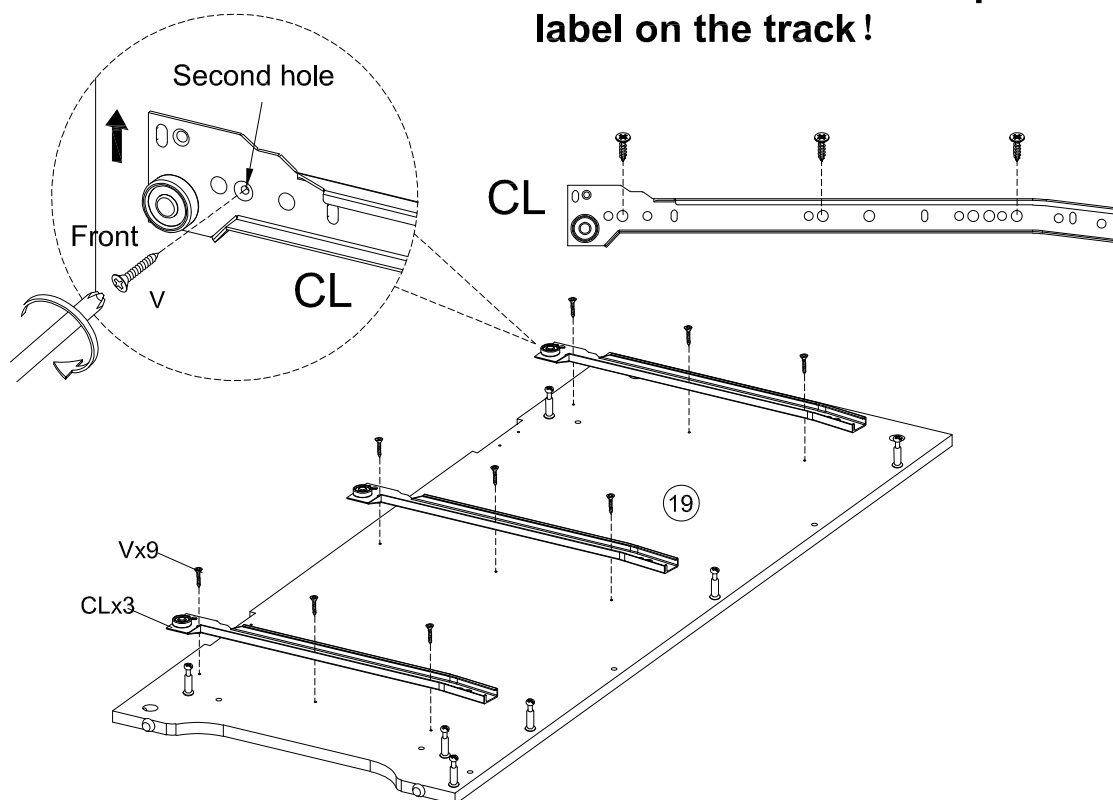


3



Ax3




Mx3



Dx3

Cam locks hole faces upward and downward

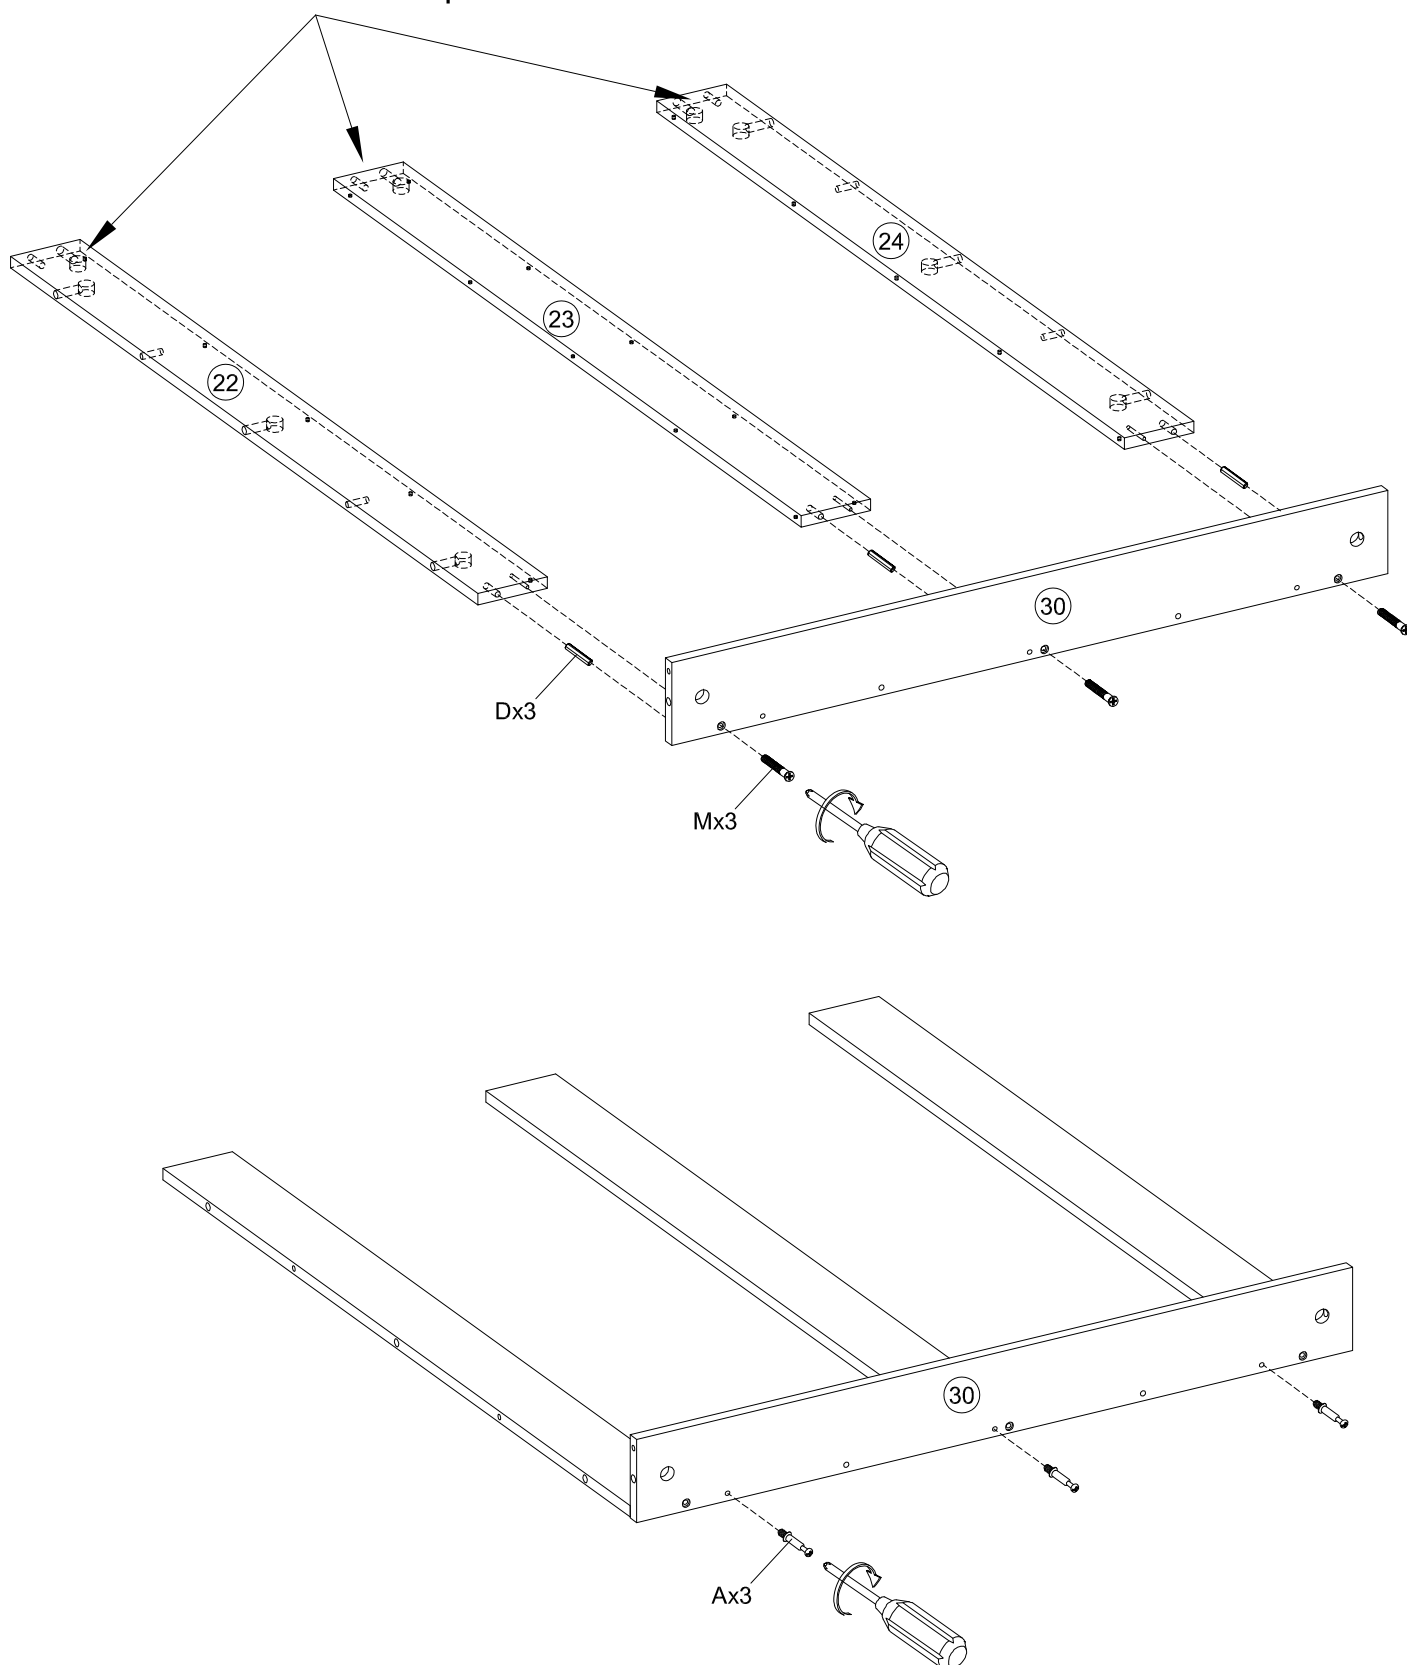




4



Bx5



Dx6

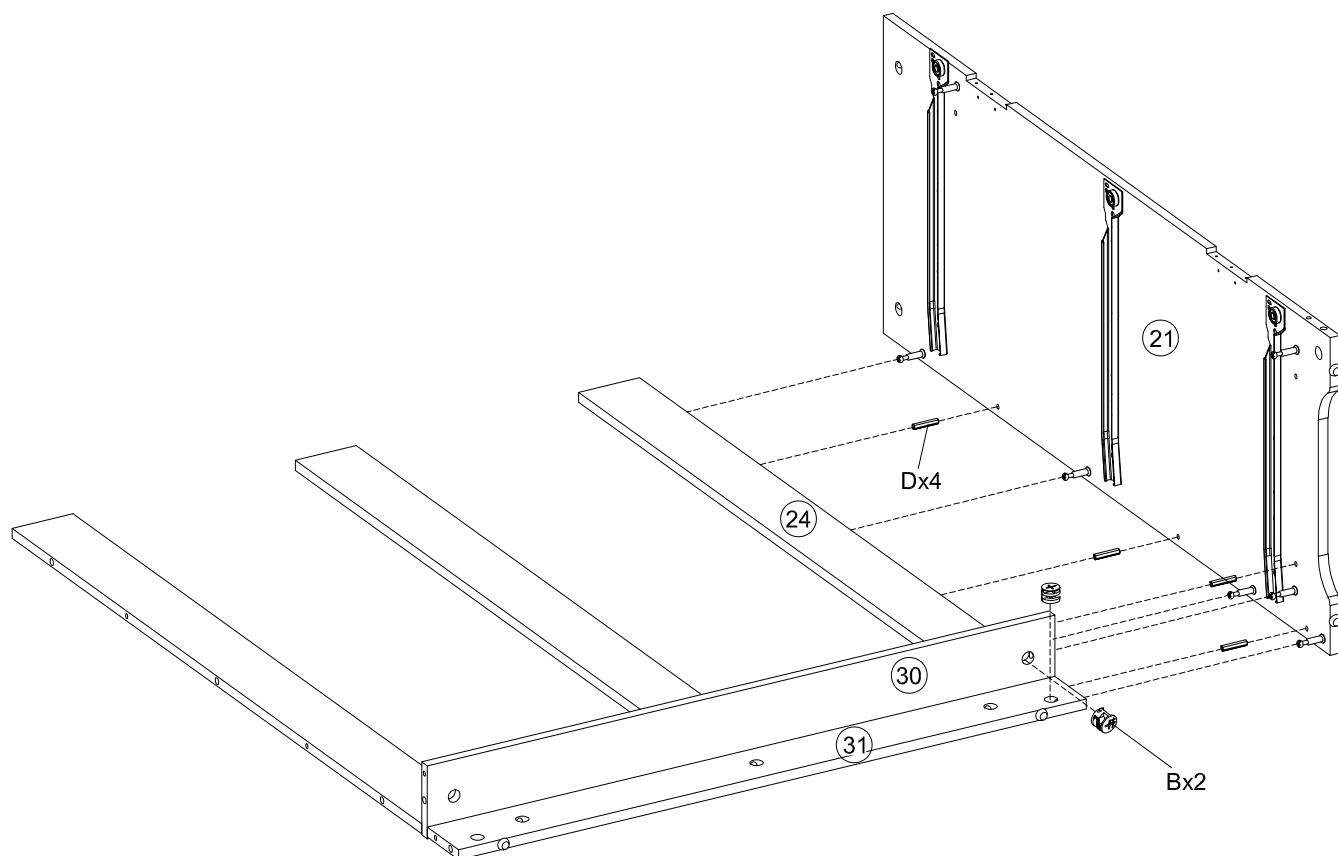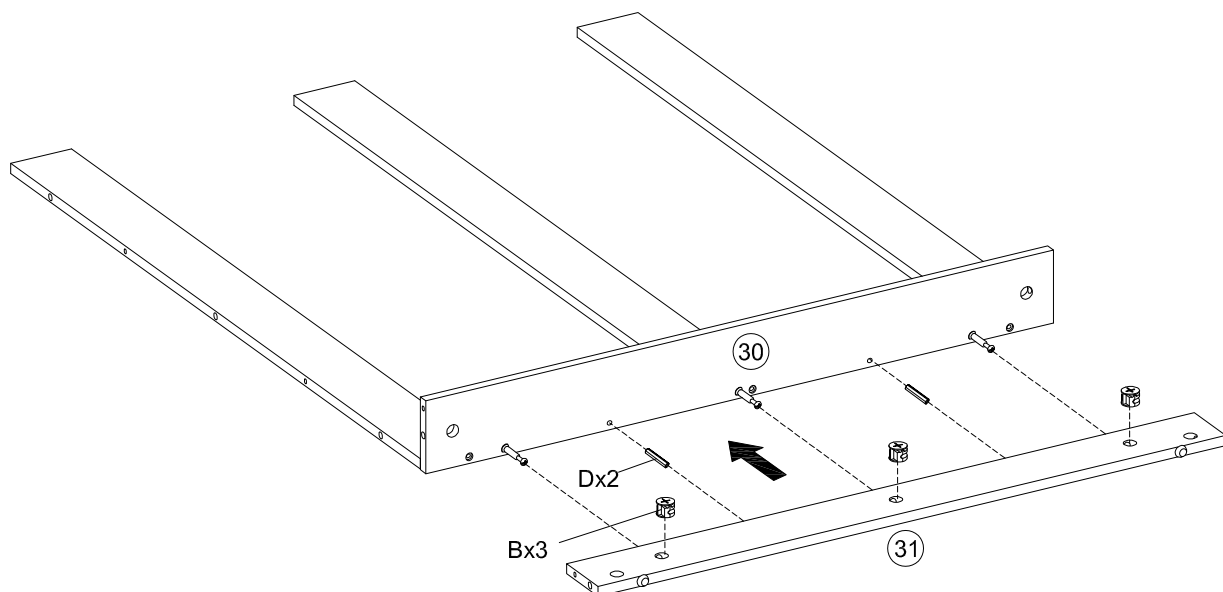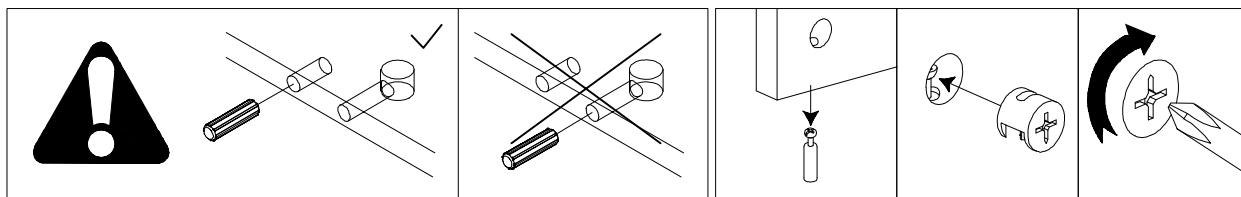

5



Bx6




Dx8










Lx1



Ux2

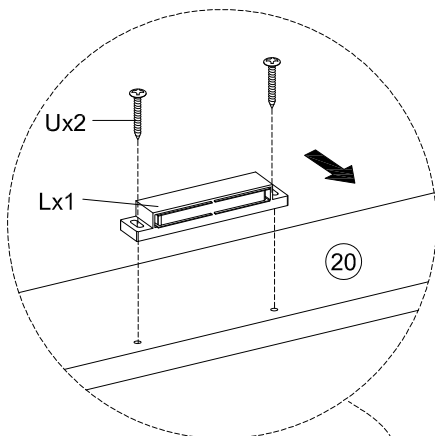


Magnetic catch should face outwards.

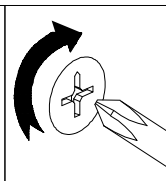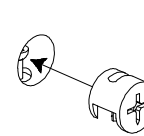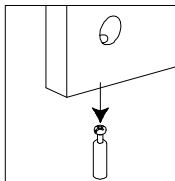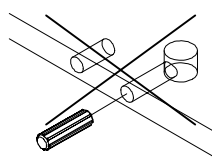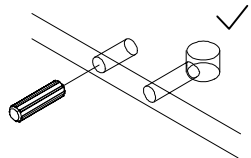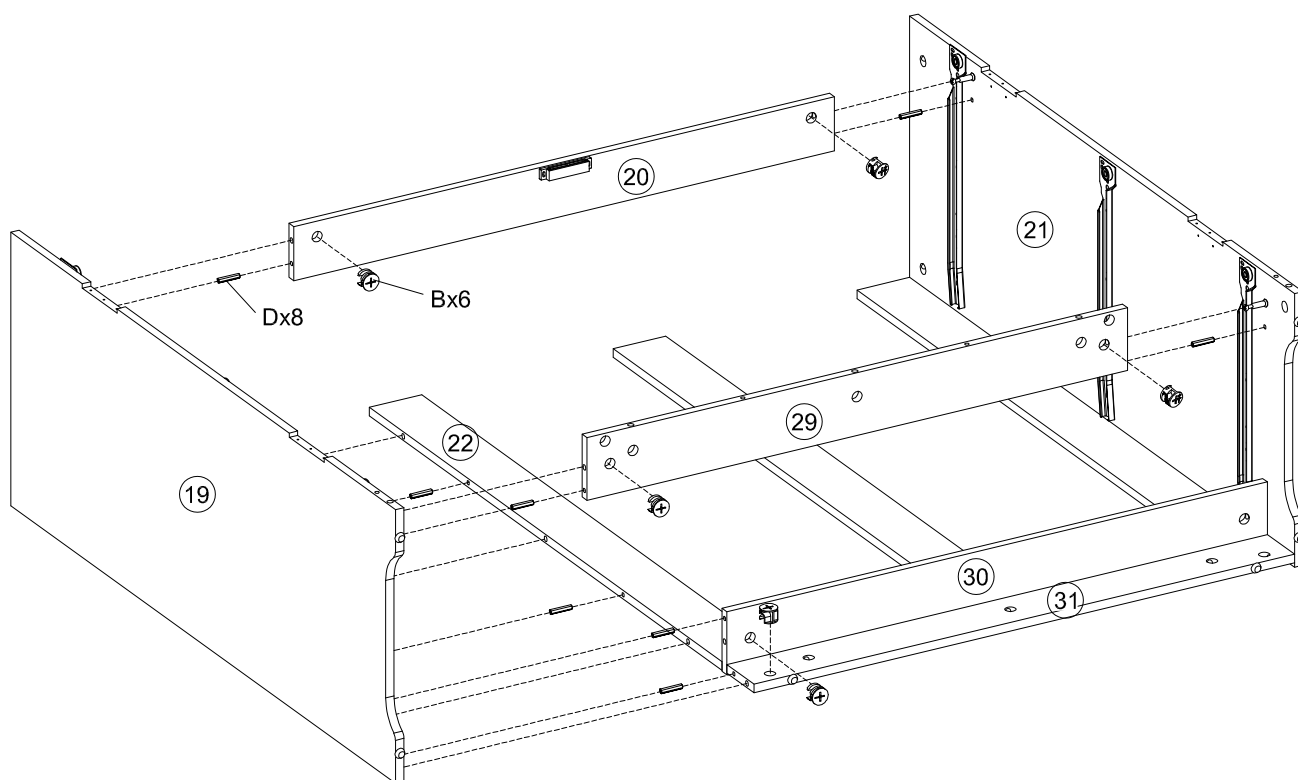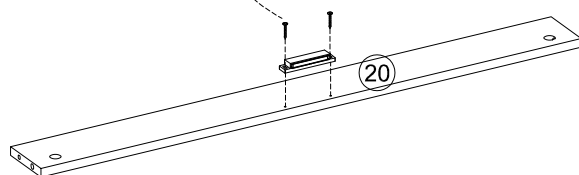




6




Bx12



Dx11

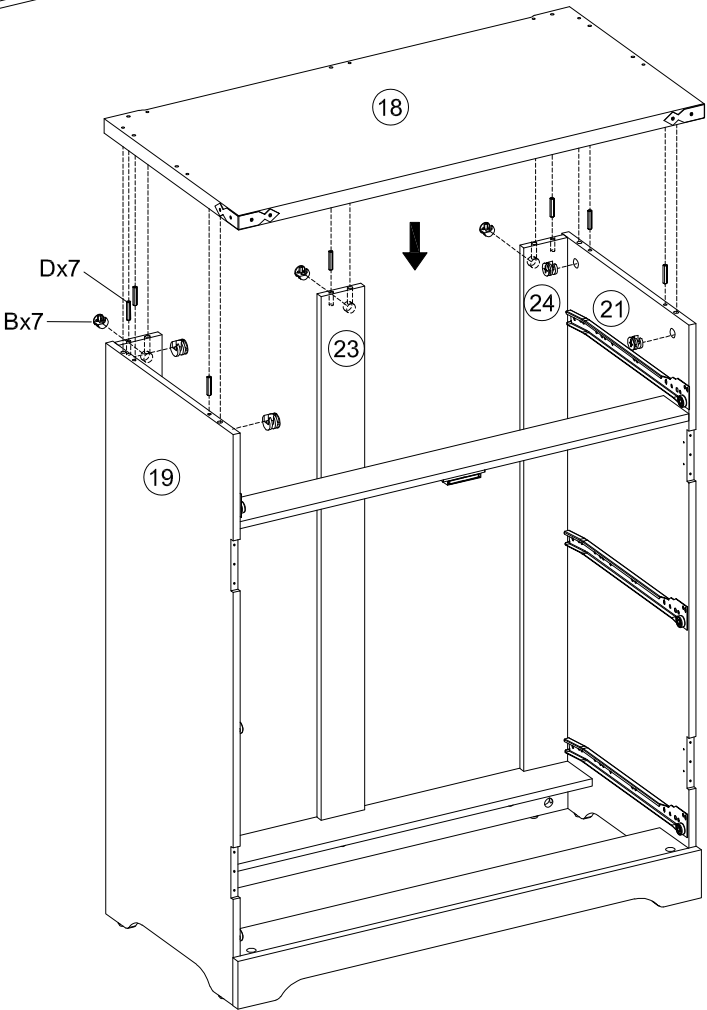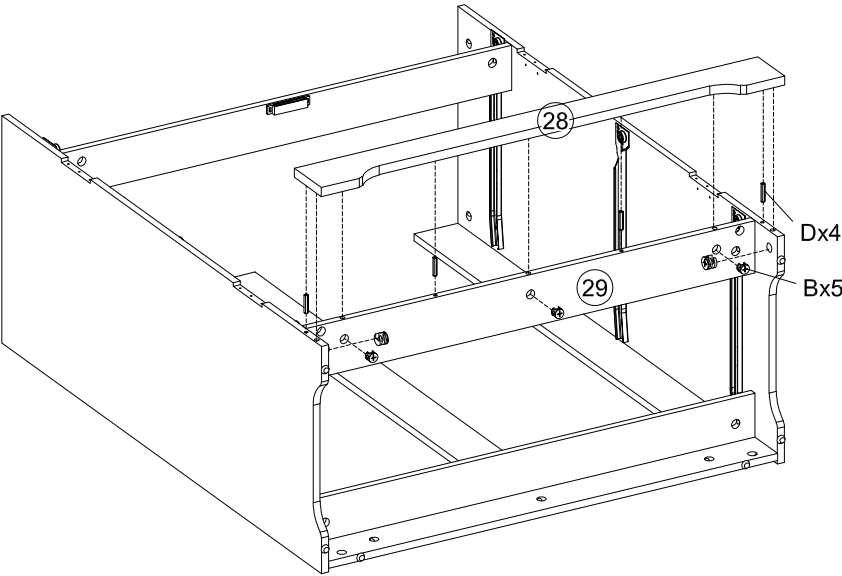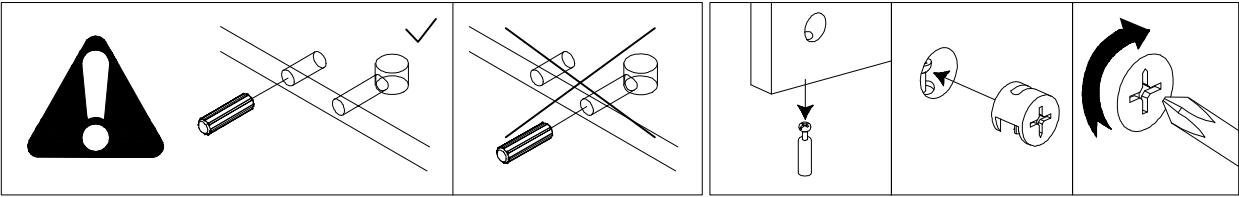


7



Ax7







Bx6



Wx2




Px8

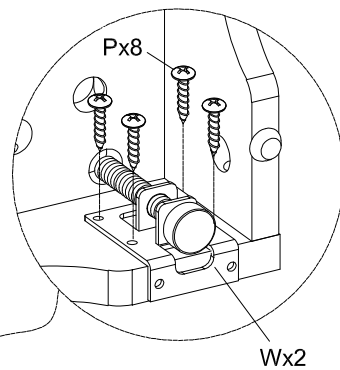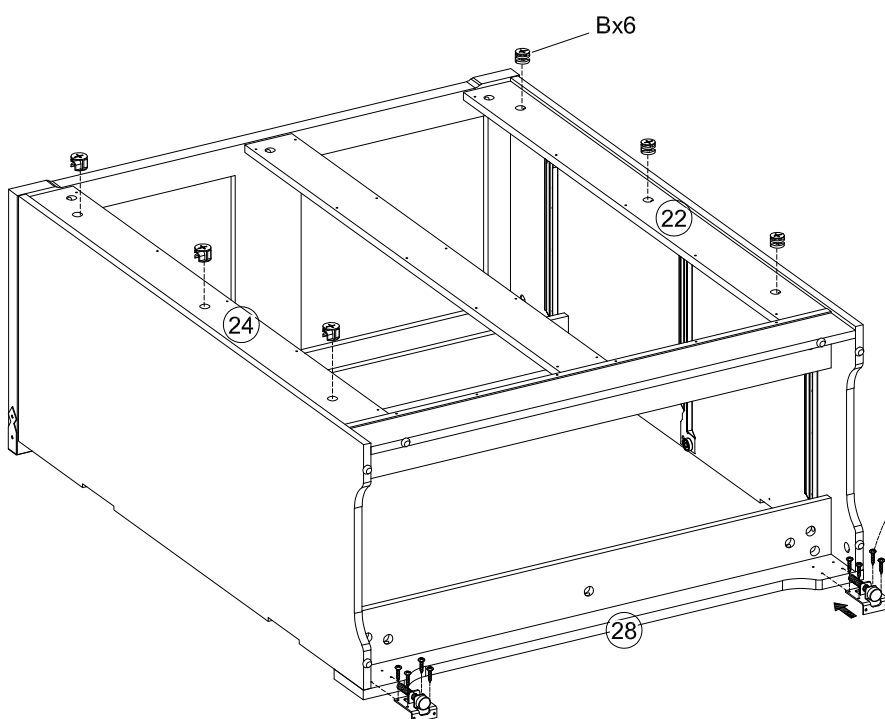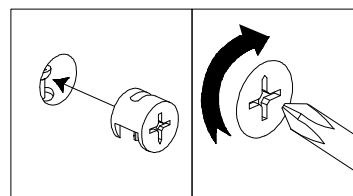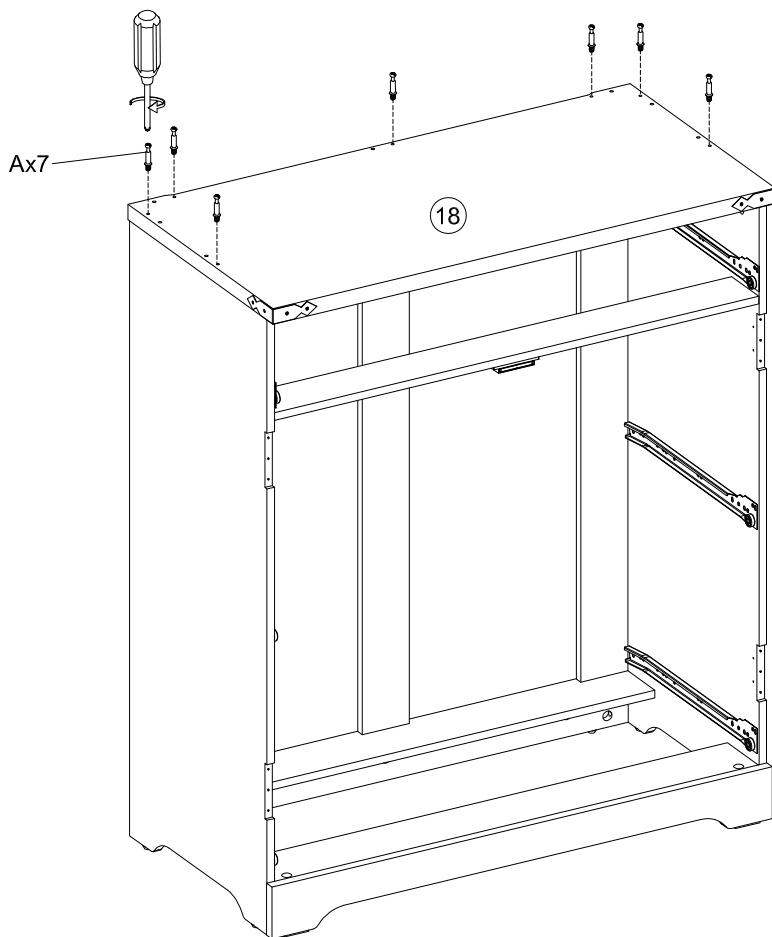




8





Bx6



Dx4

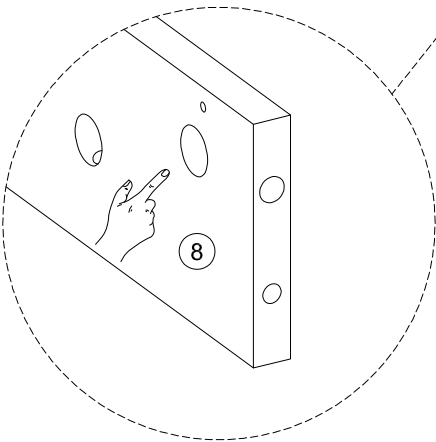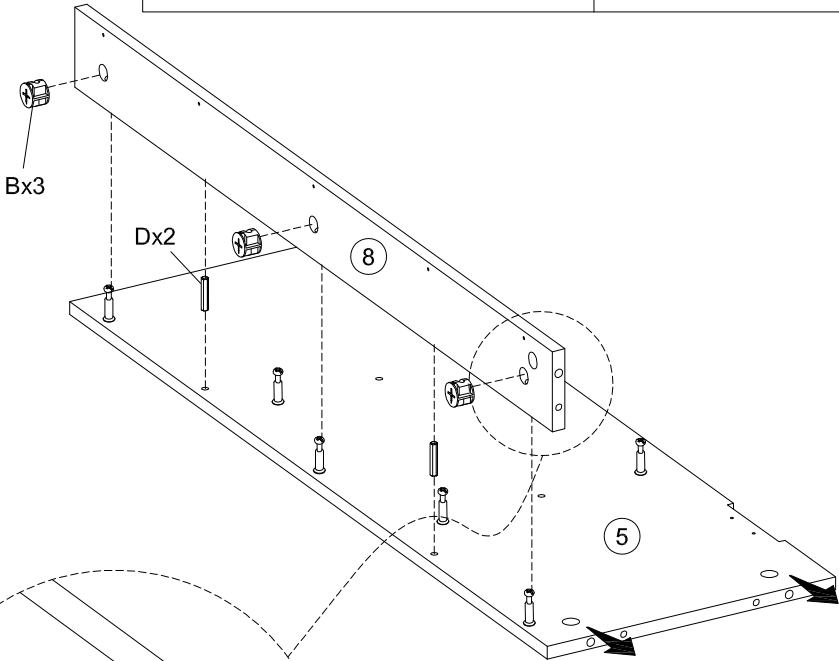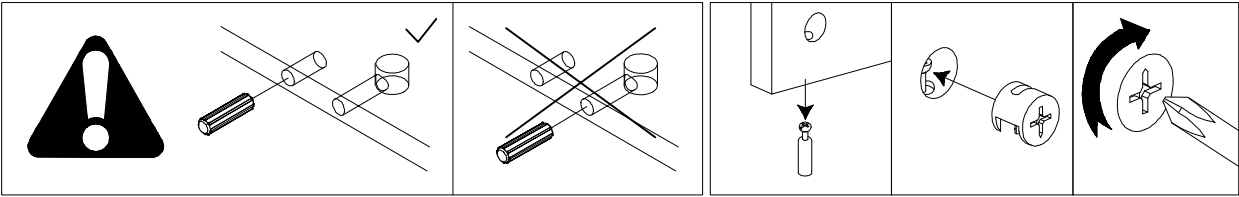


Note the hole direction.

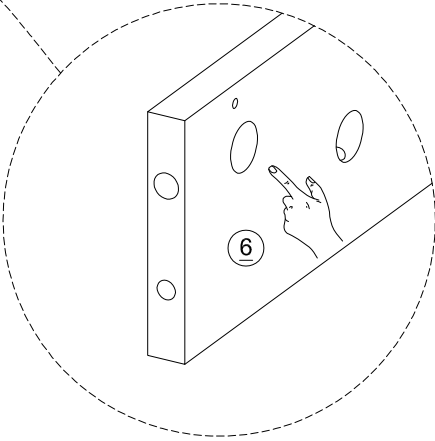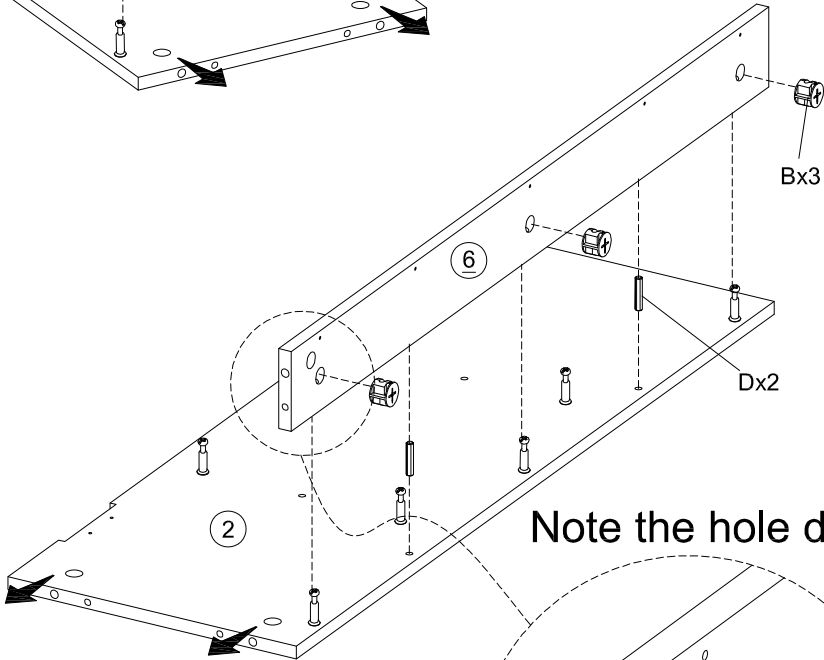


Note the hole direction.

9





Nx6




Kx2



Ux4

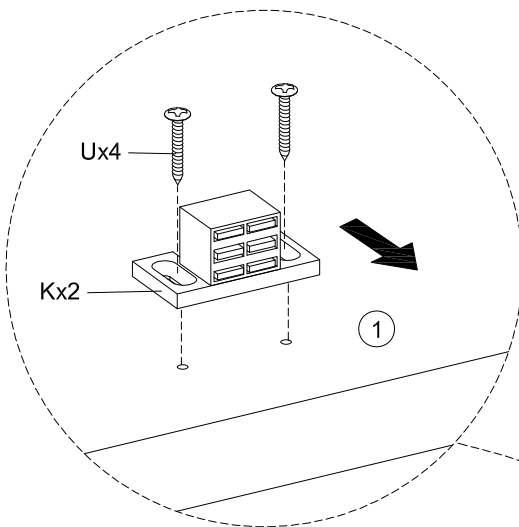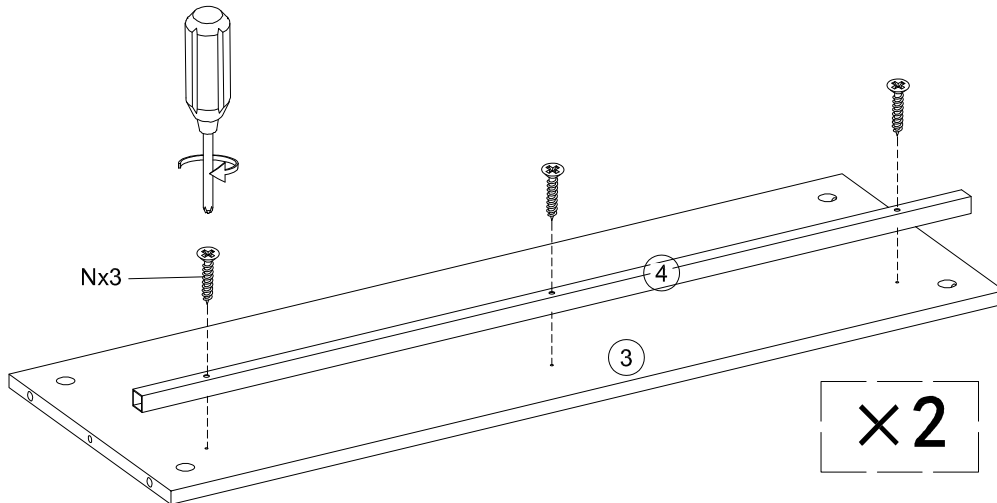

Magnetic catch should face outwards.

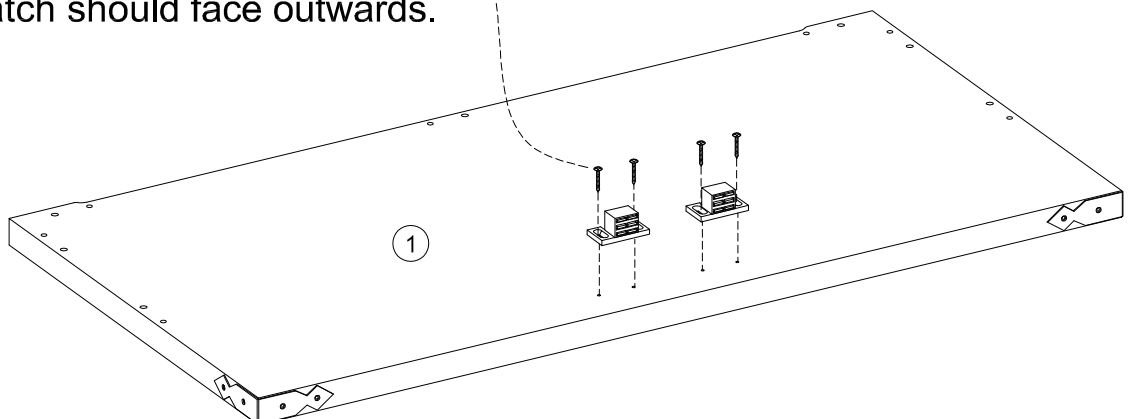

10




Bx8




Dx4




Mx4

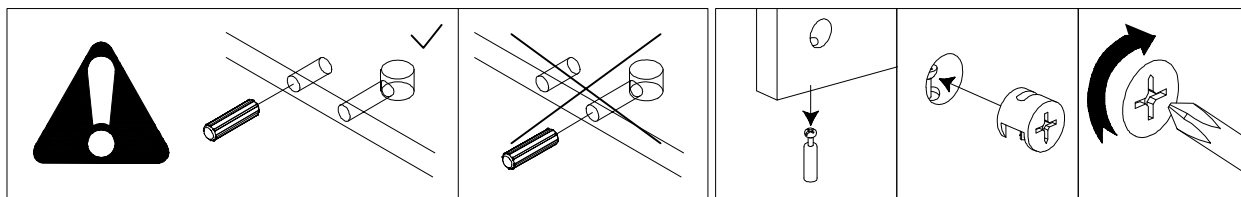


Note the hole direction.

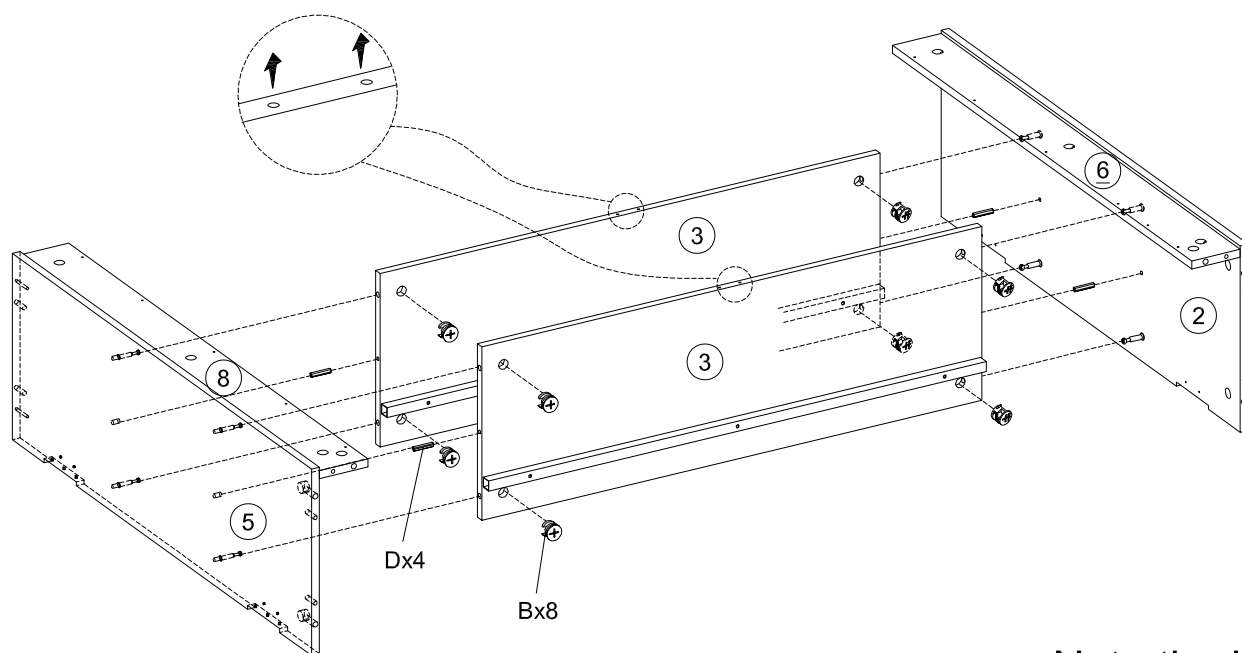

Note the hole direction.

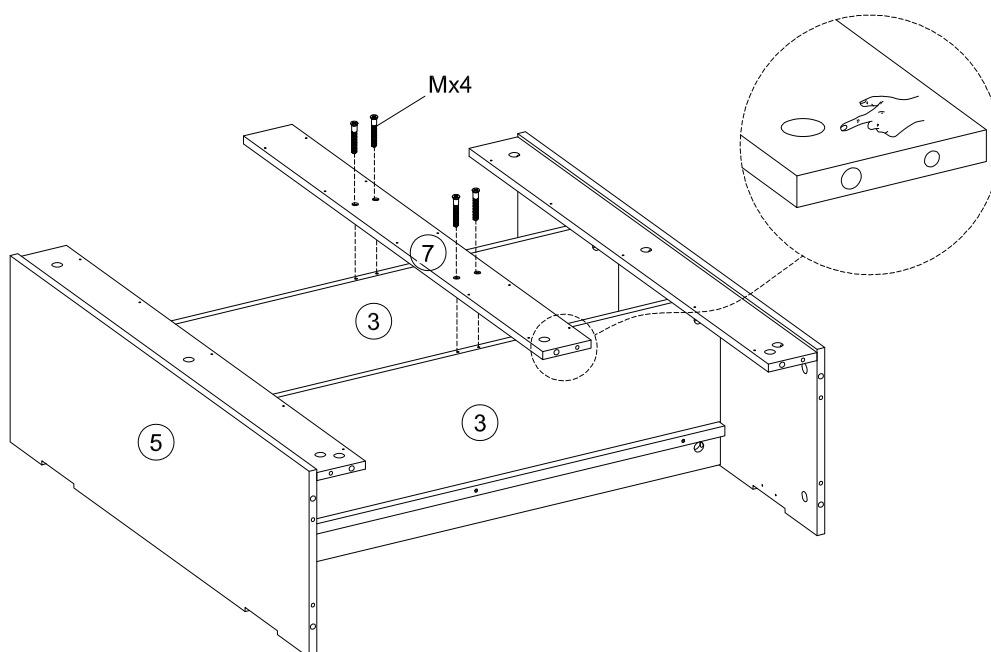


11



Dx7




Mx7

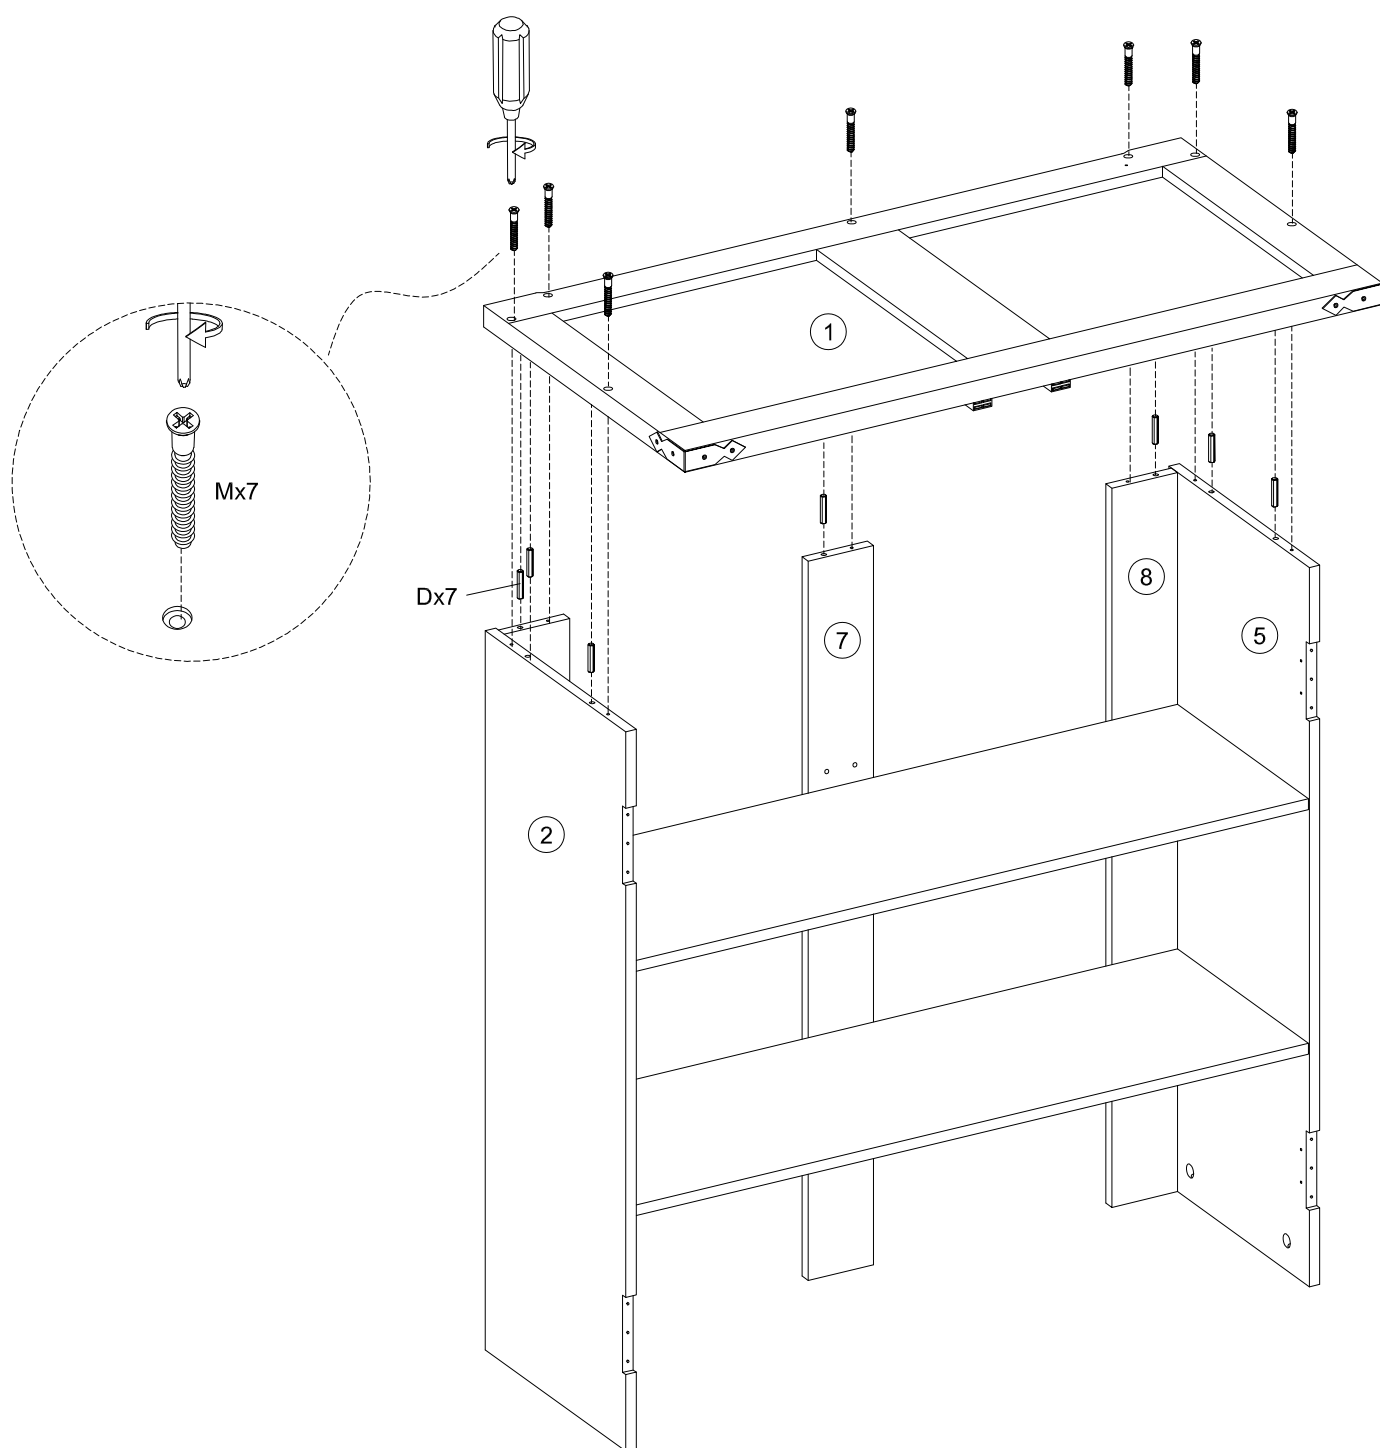








12



Bx7




Dx7

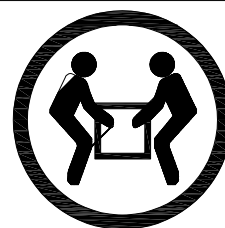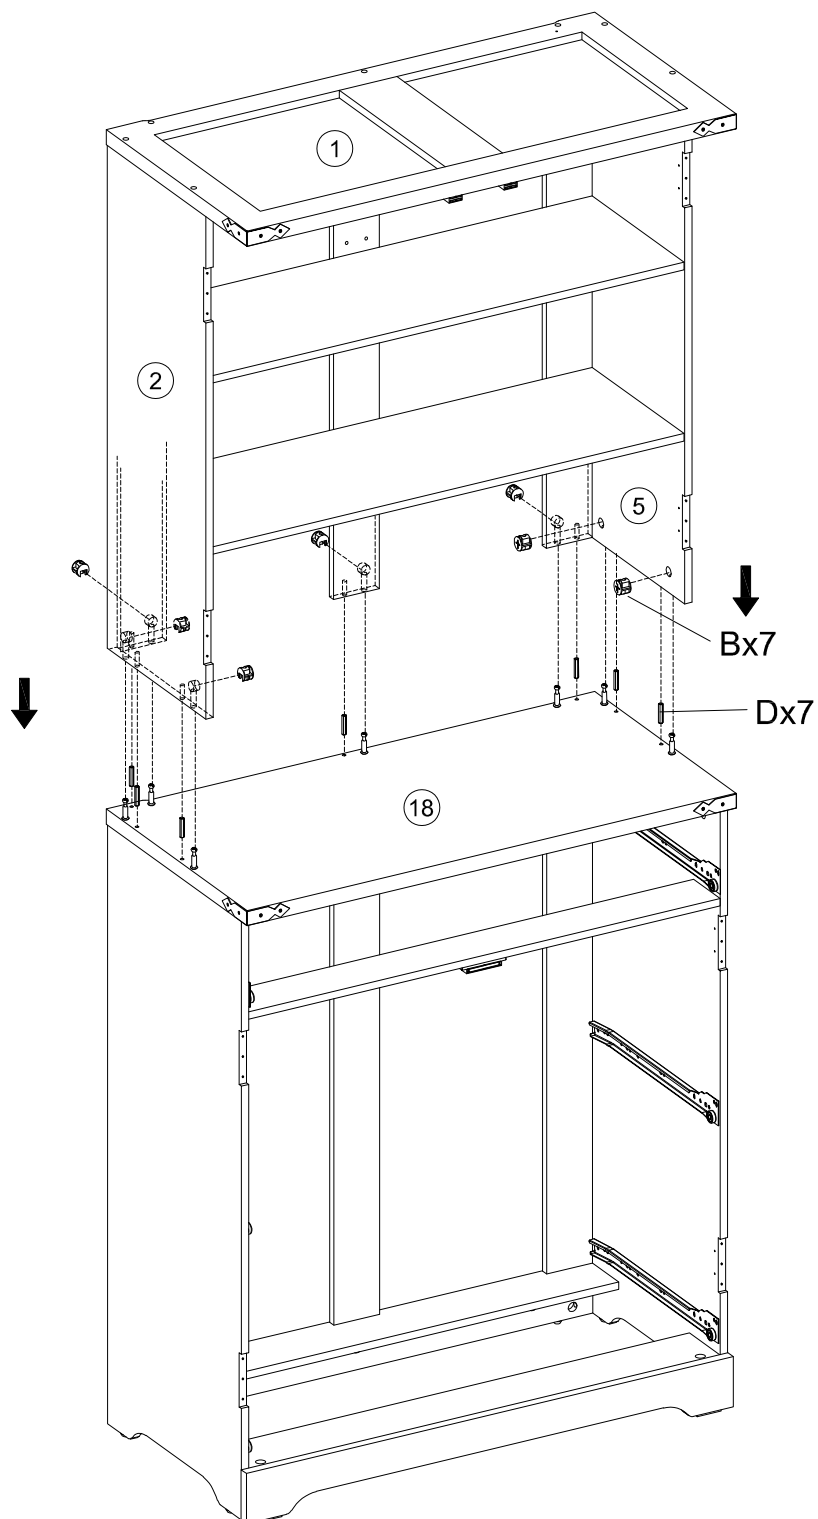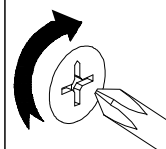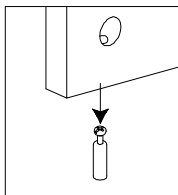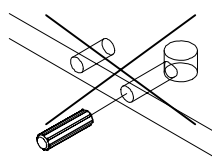
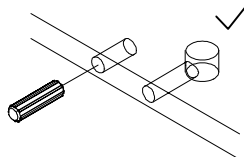


CAUTION: Heavy! You may need assistance with this step.

13



Gx52

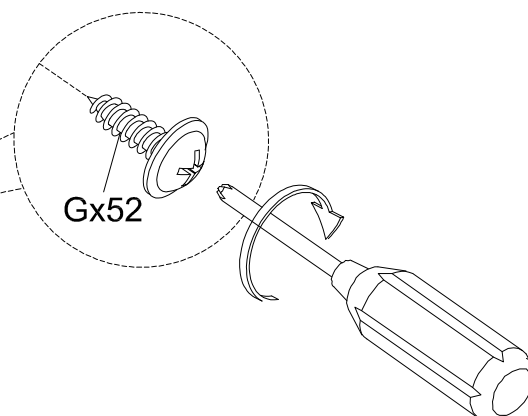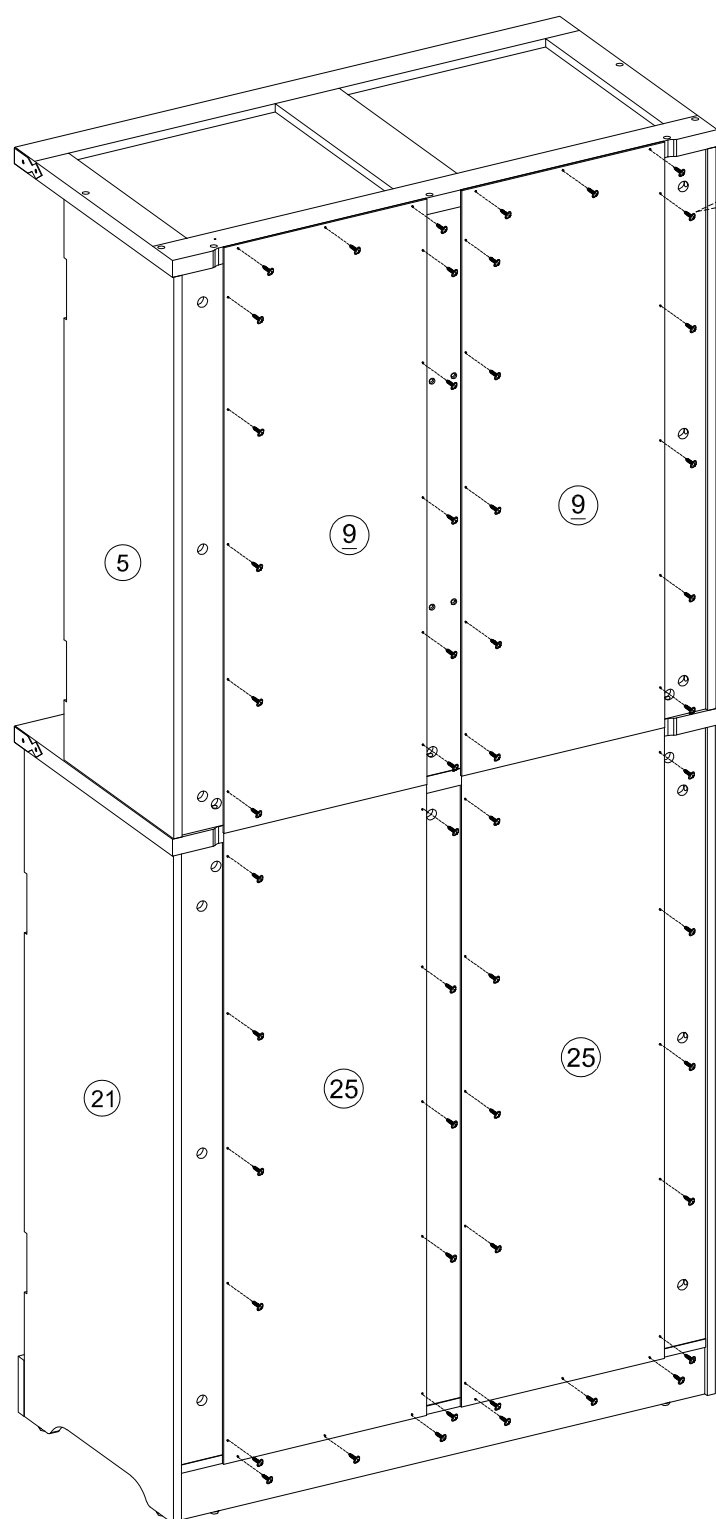

Align the predrilled holes with the pilot holes, attach it in place with the (G) washer head screws.


14



Ax5



Bx5




Jx6




Sx1



Tx2

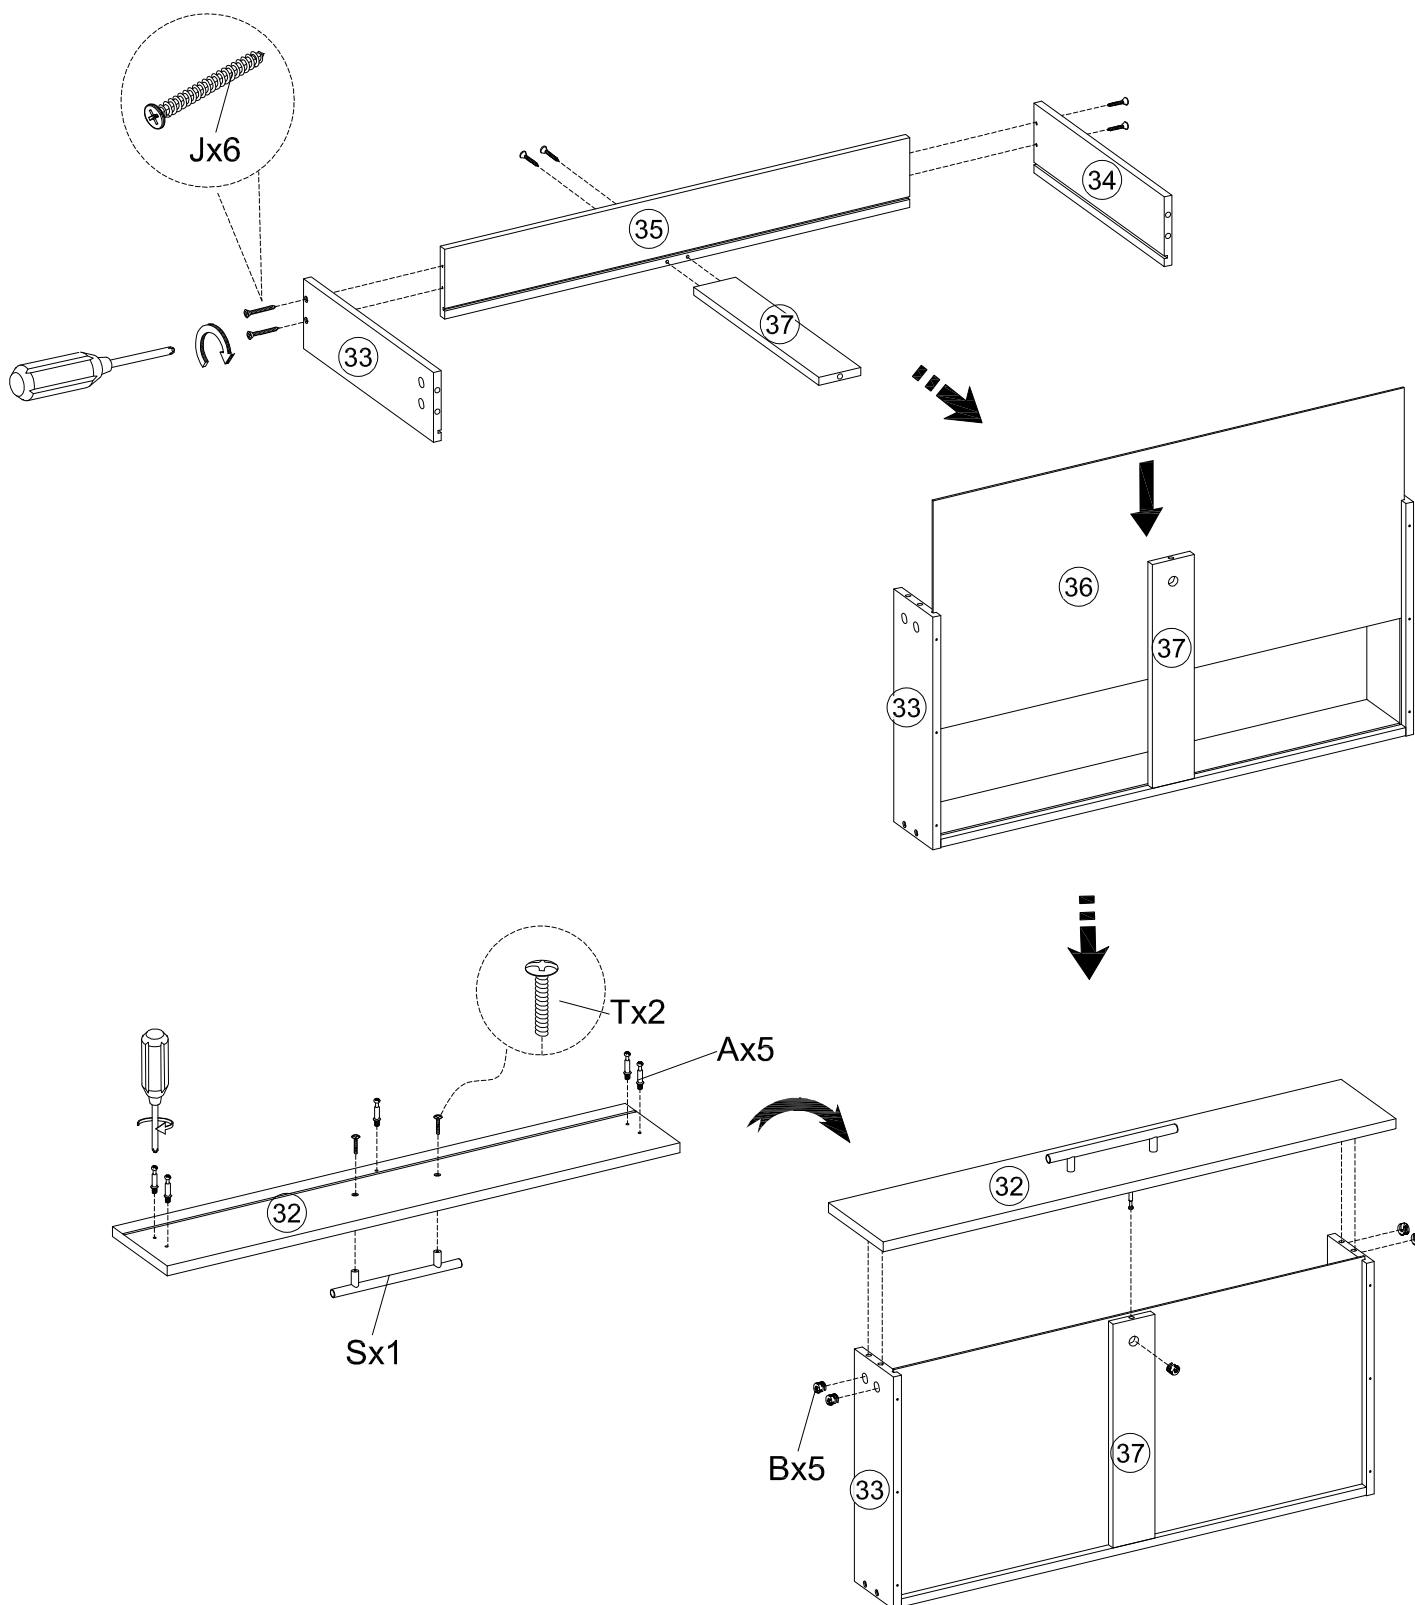


15



Ax6




Bx6






Dx8




Jx8

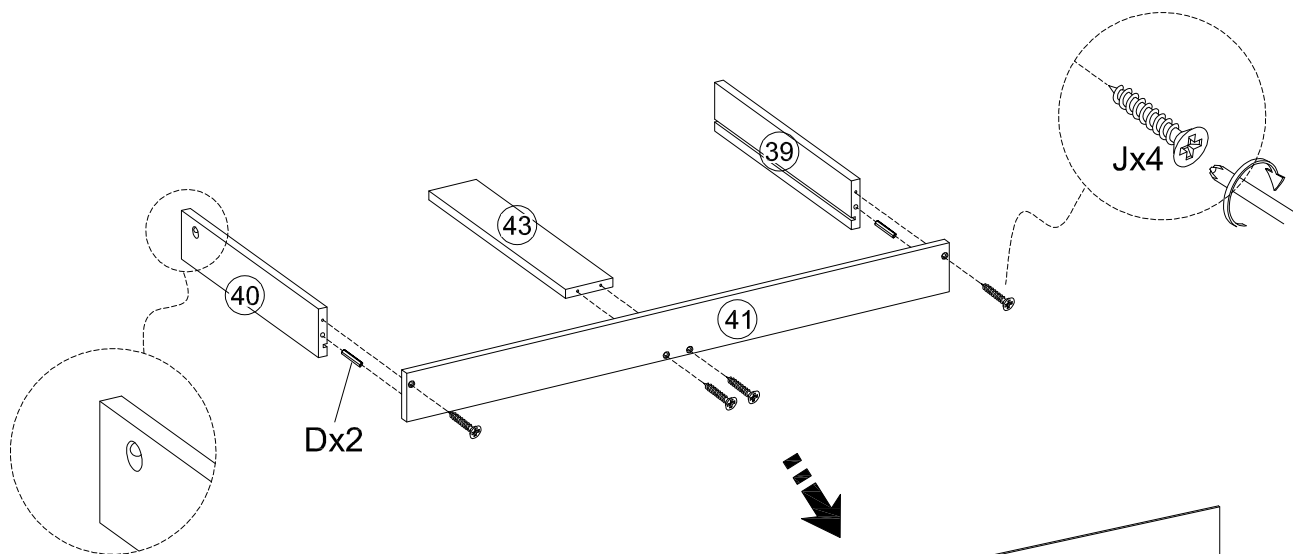


× 2

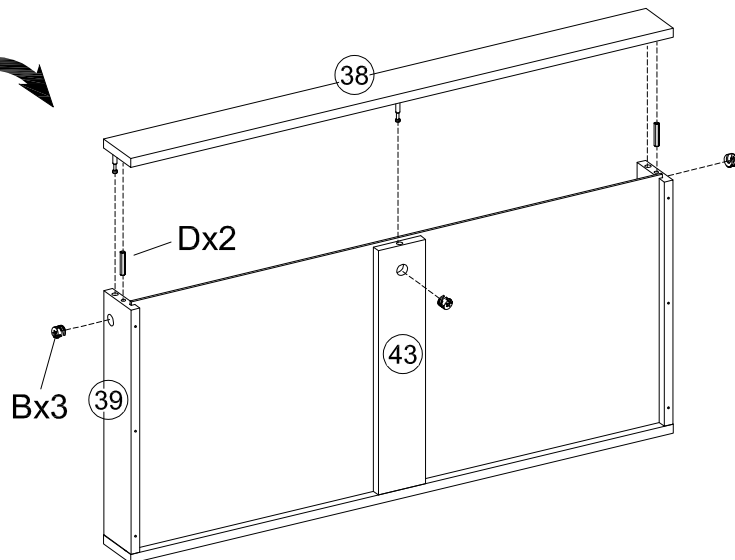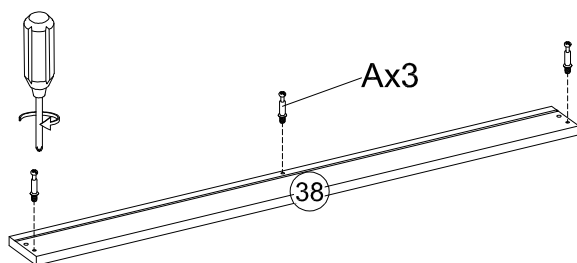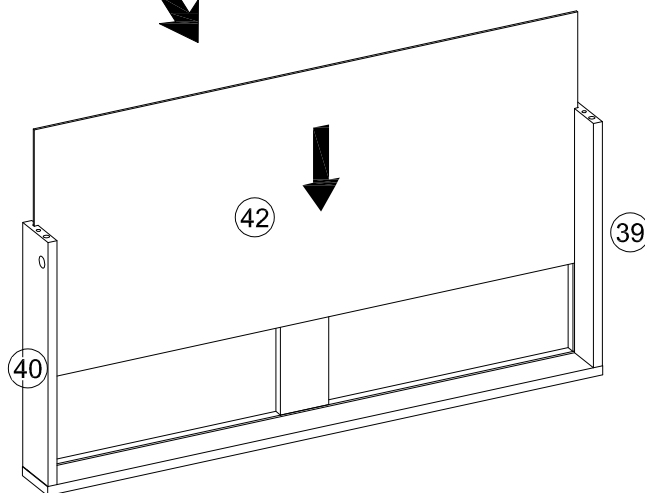

16




DLx3




DRx3




Vx18

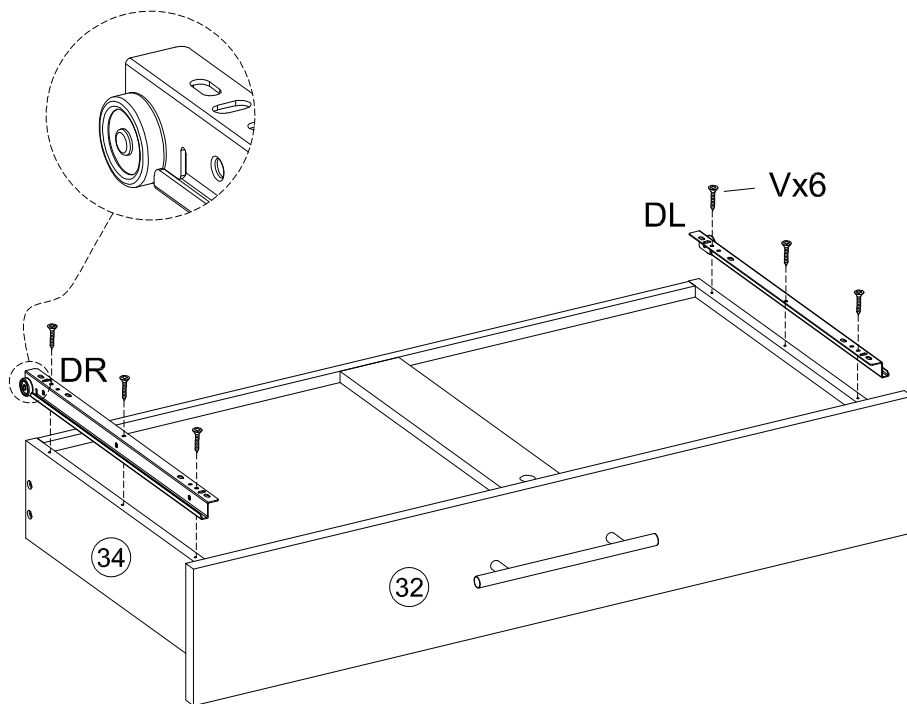






Note the DL or DR stamped label on the track !

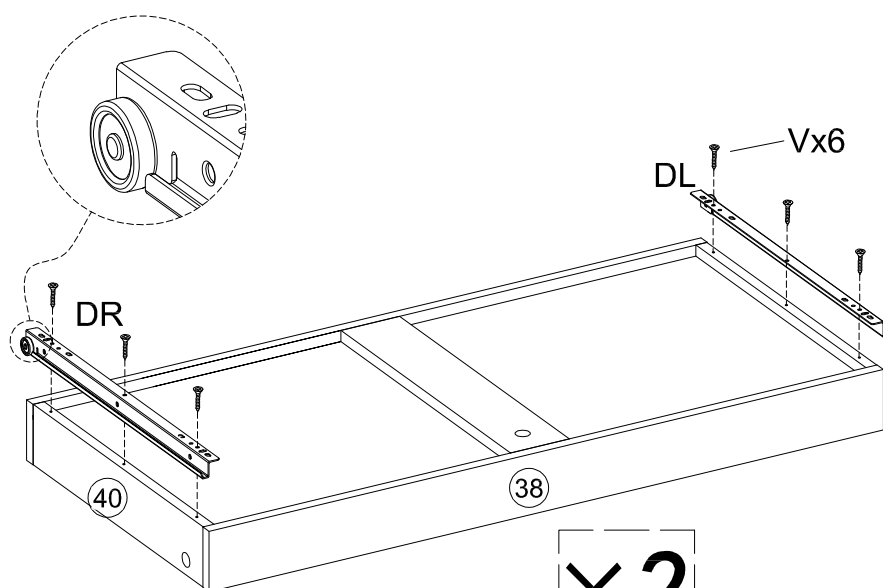

× 2

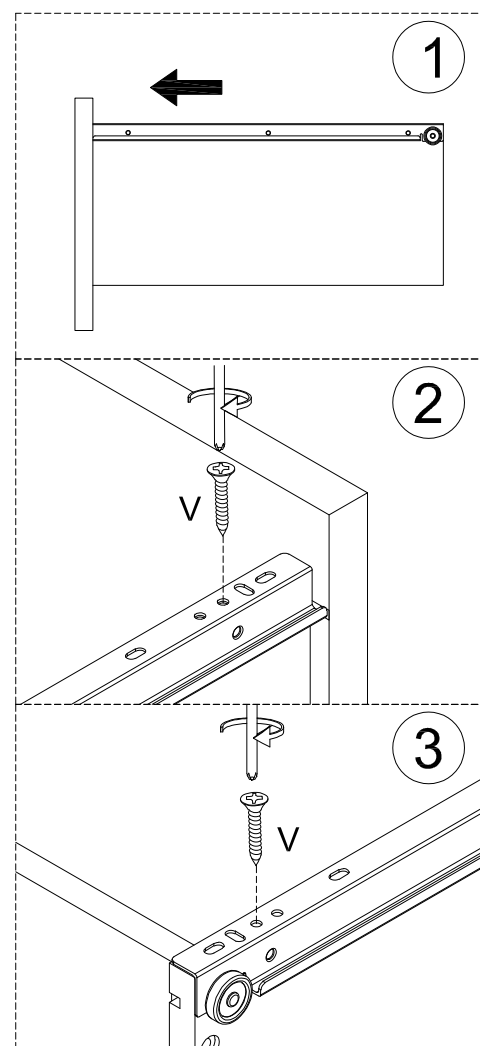

17

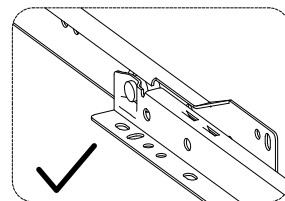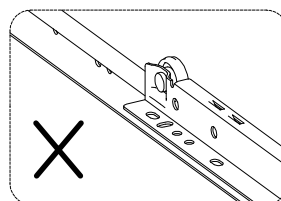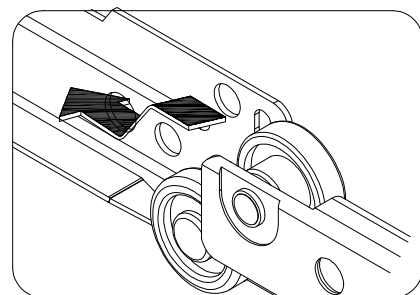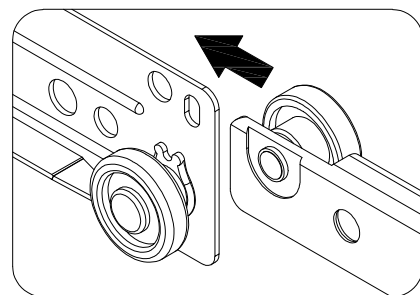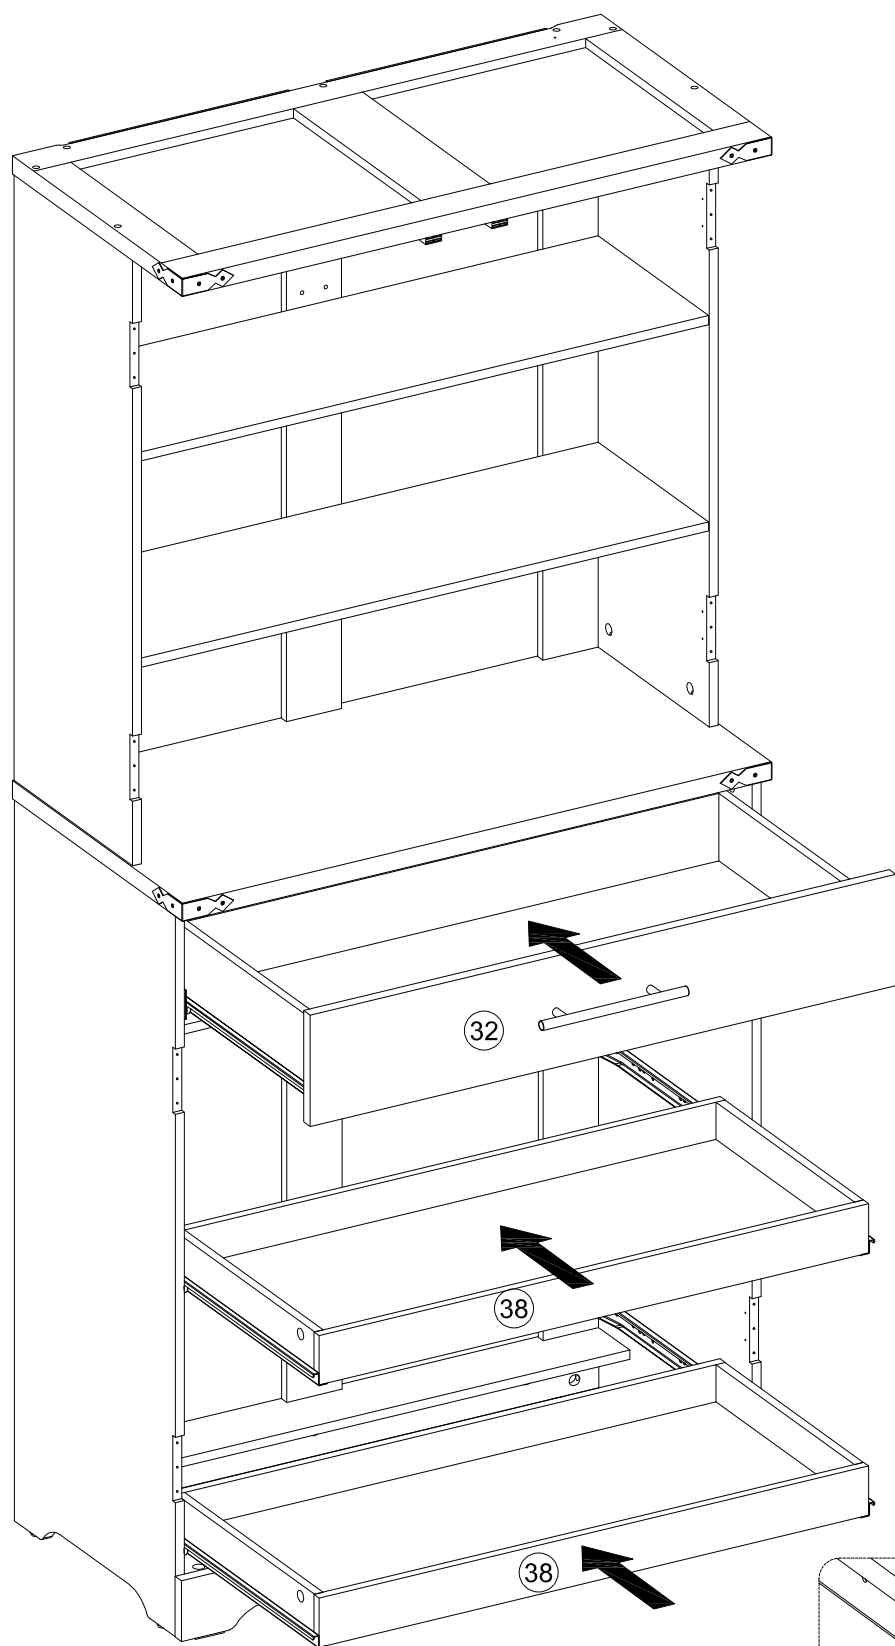


18




Fx24



Hx16



Ex8

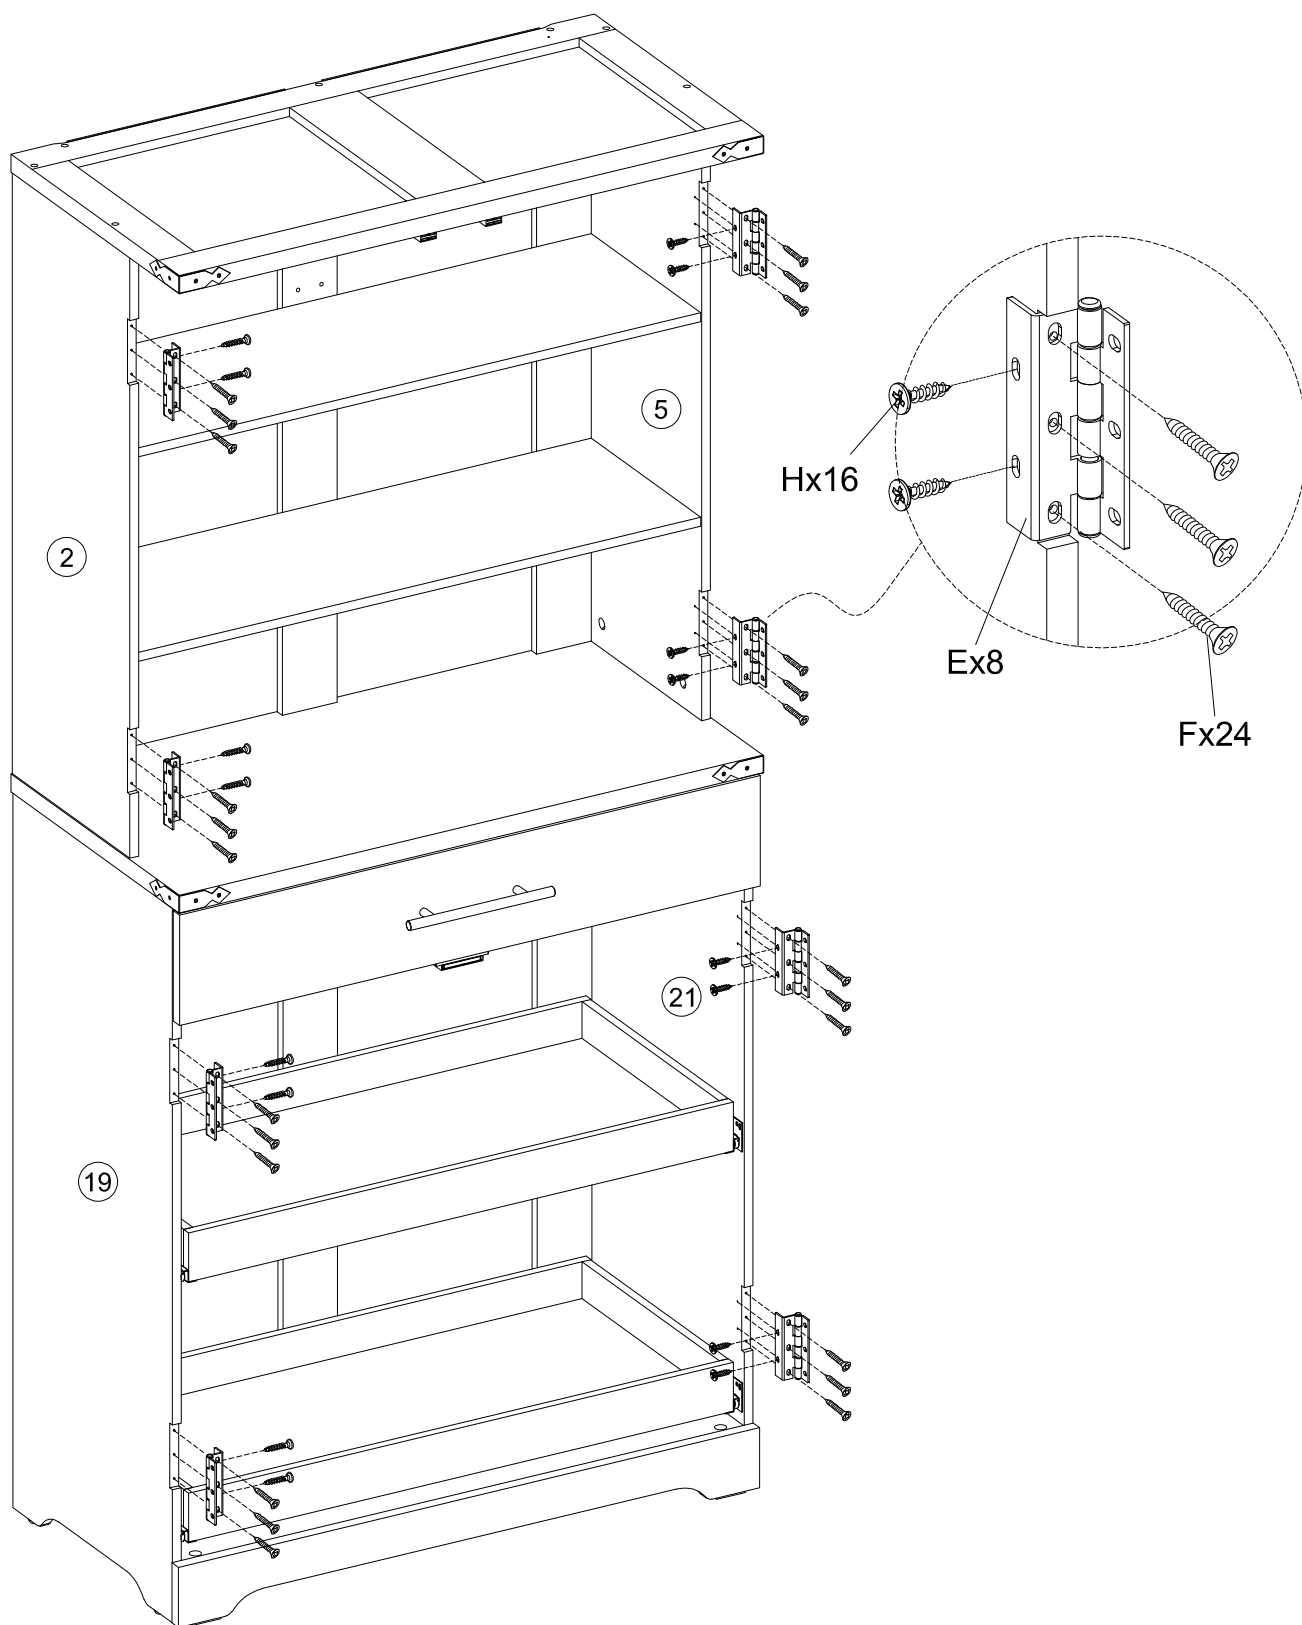


19



Sx2





Tx4



Ix2




Vx2

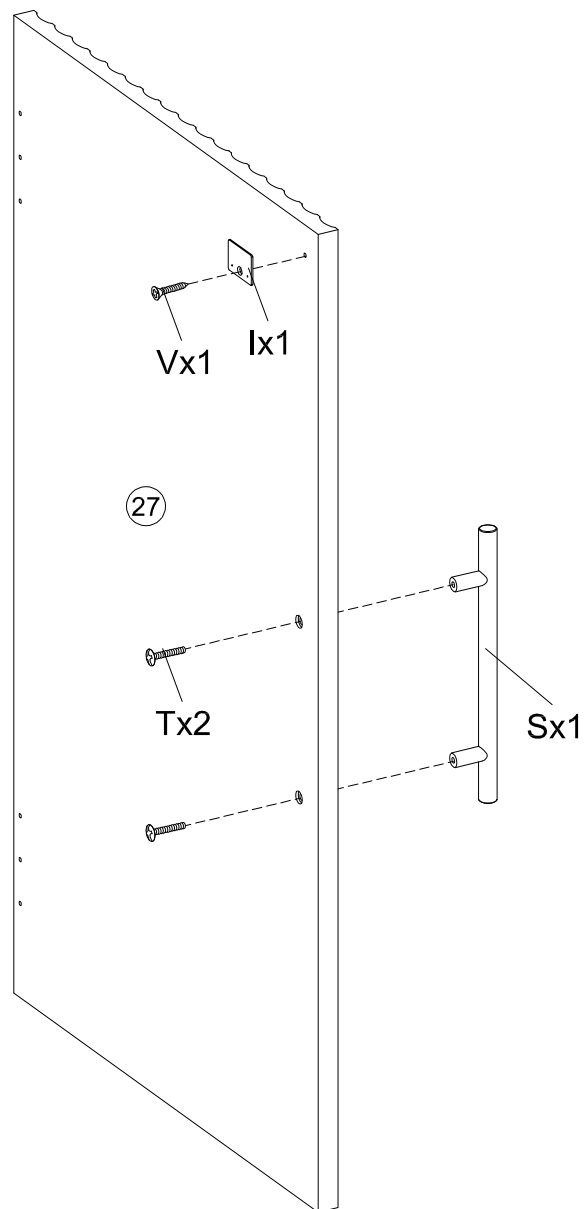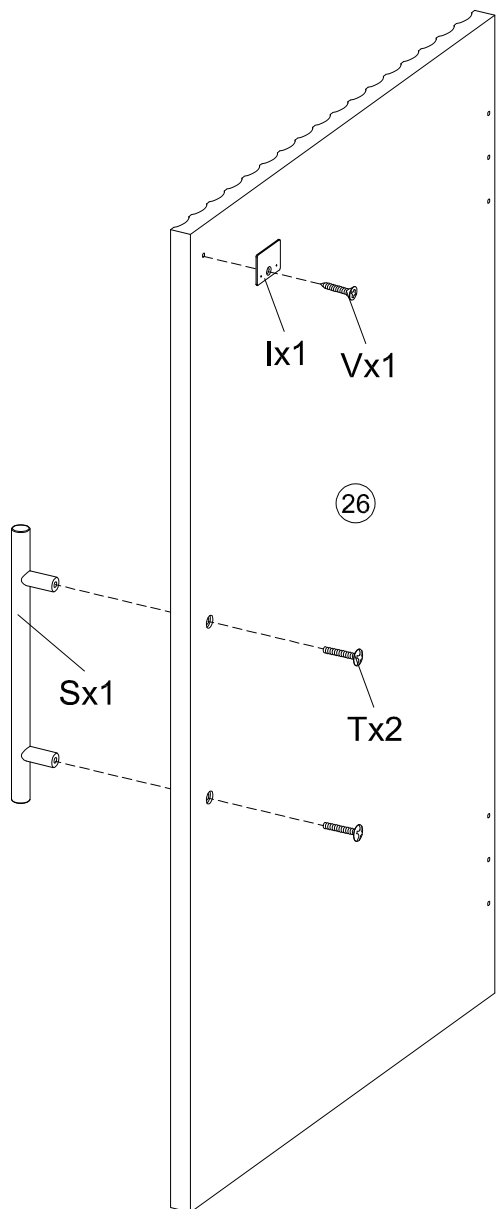





20






Hx12

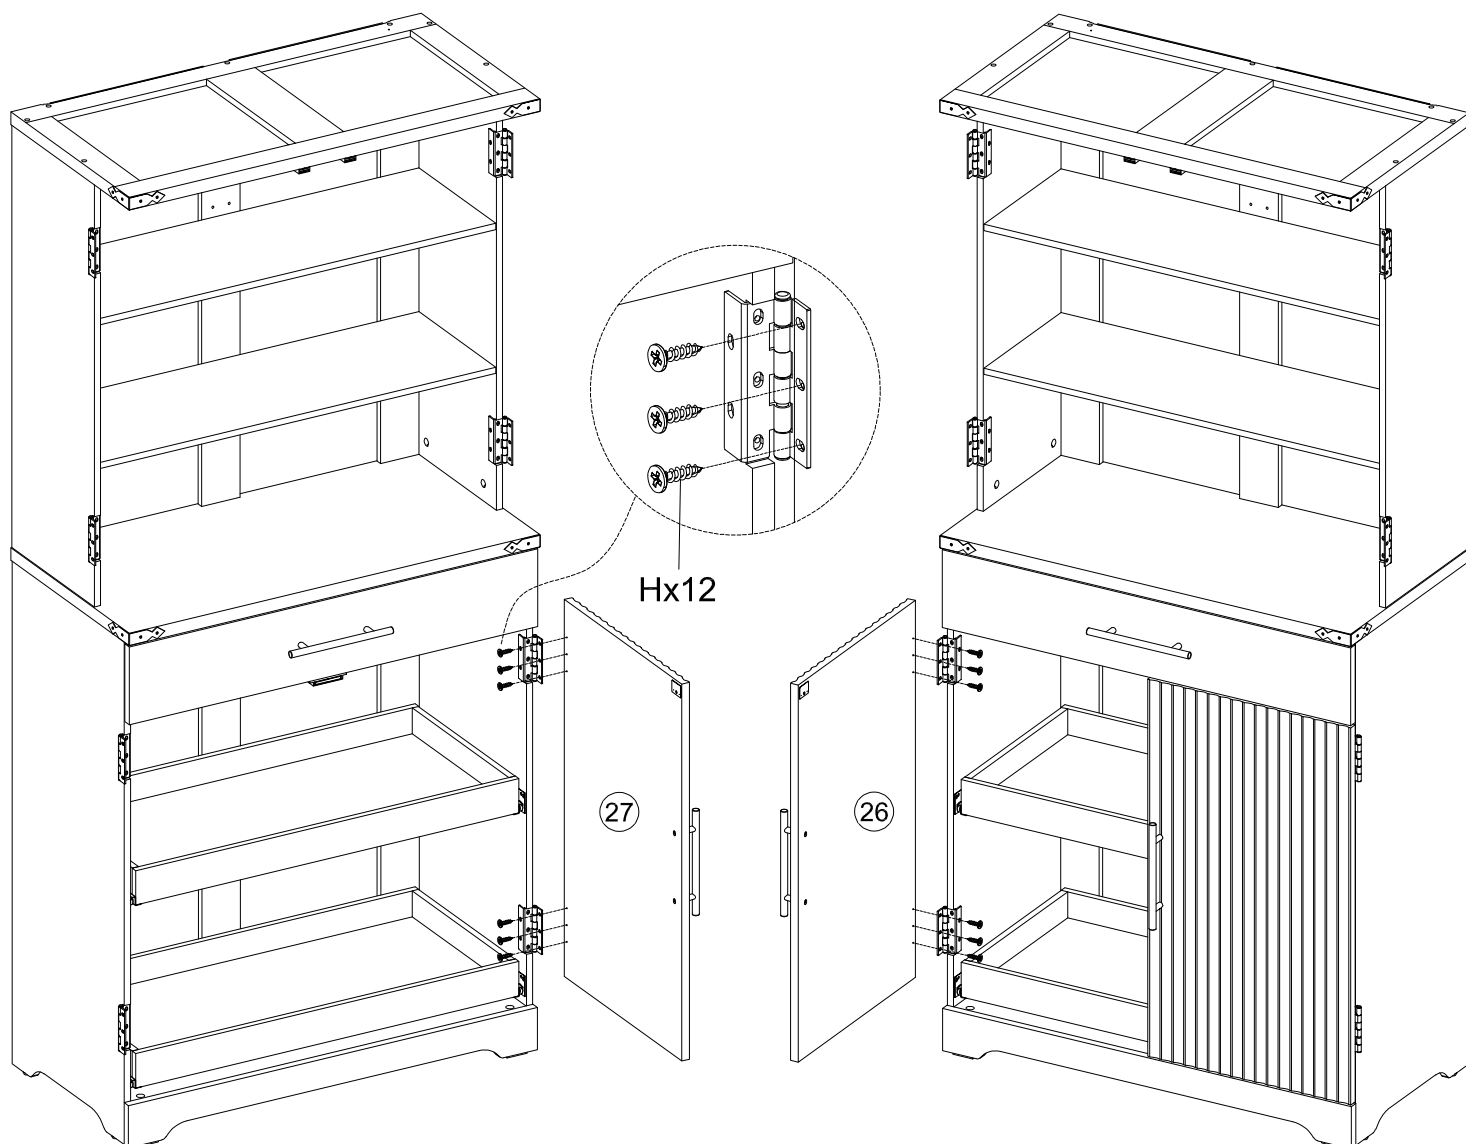

21

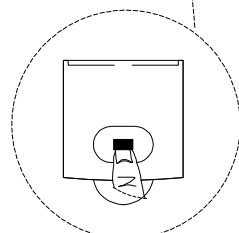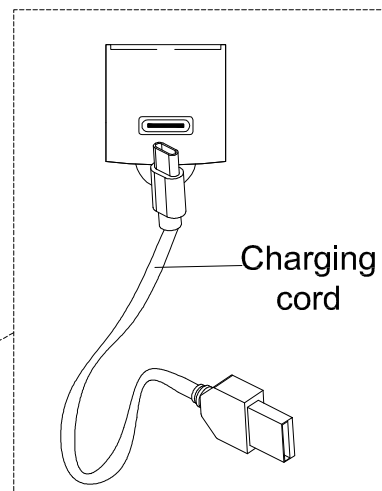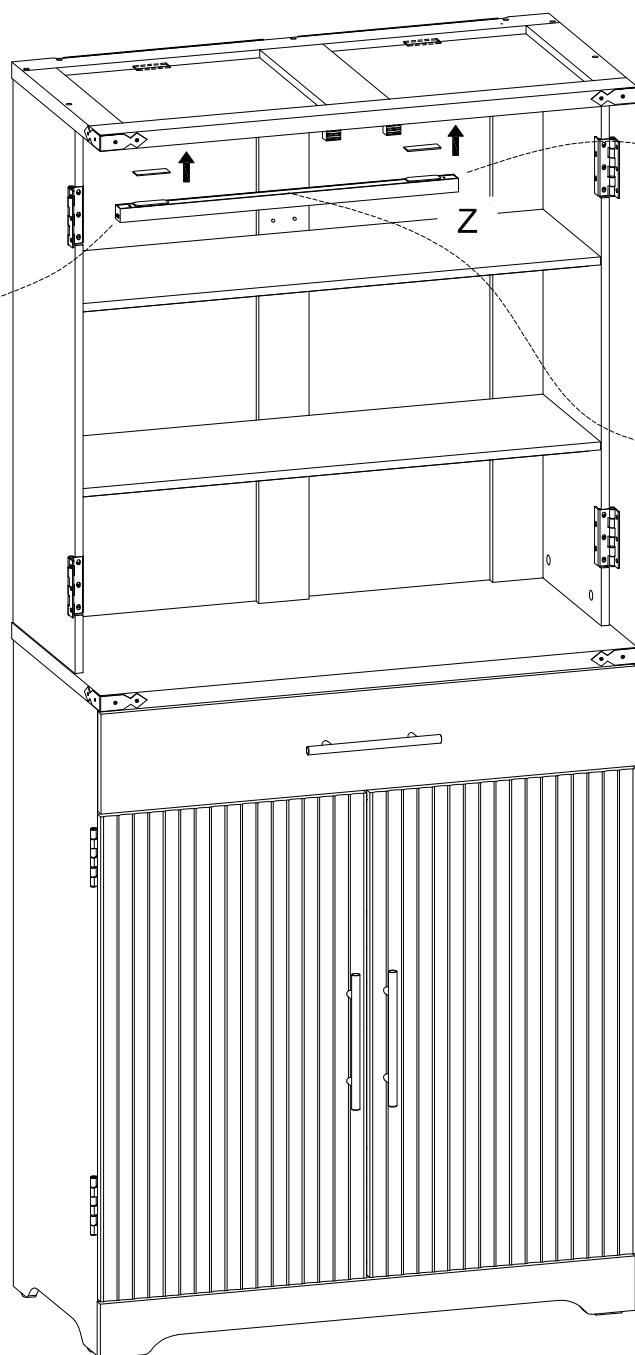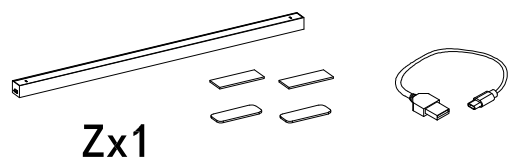


Switching mode

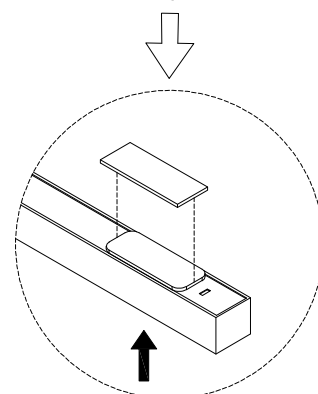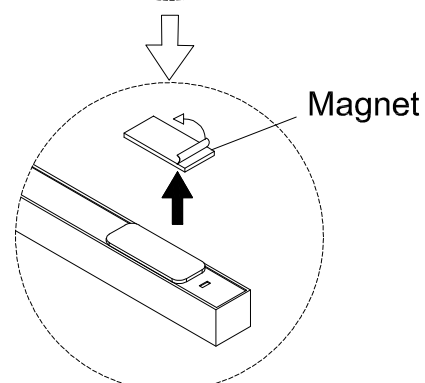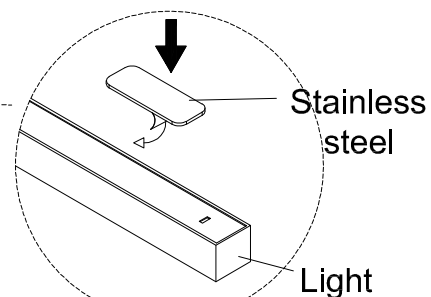


Align it with where you want to install it and press it firmly

22




Ax28



Ix2




Vx2

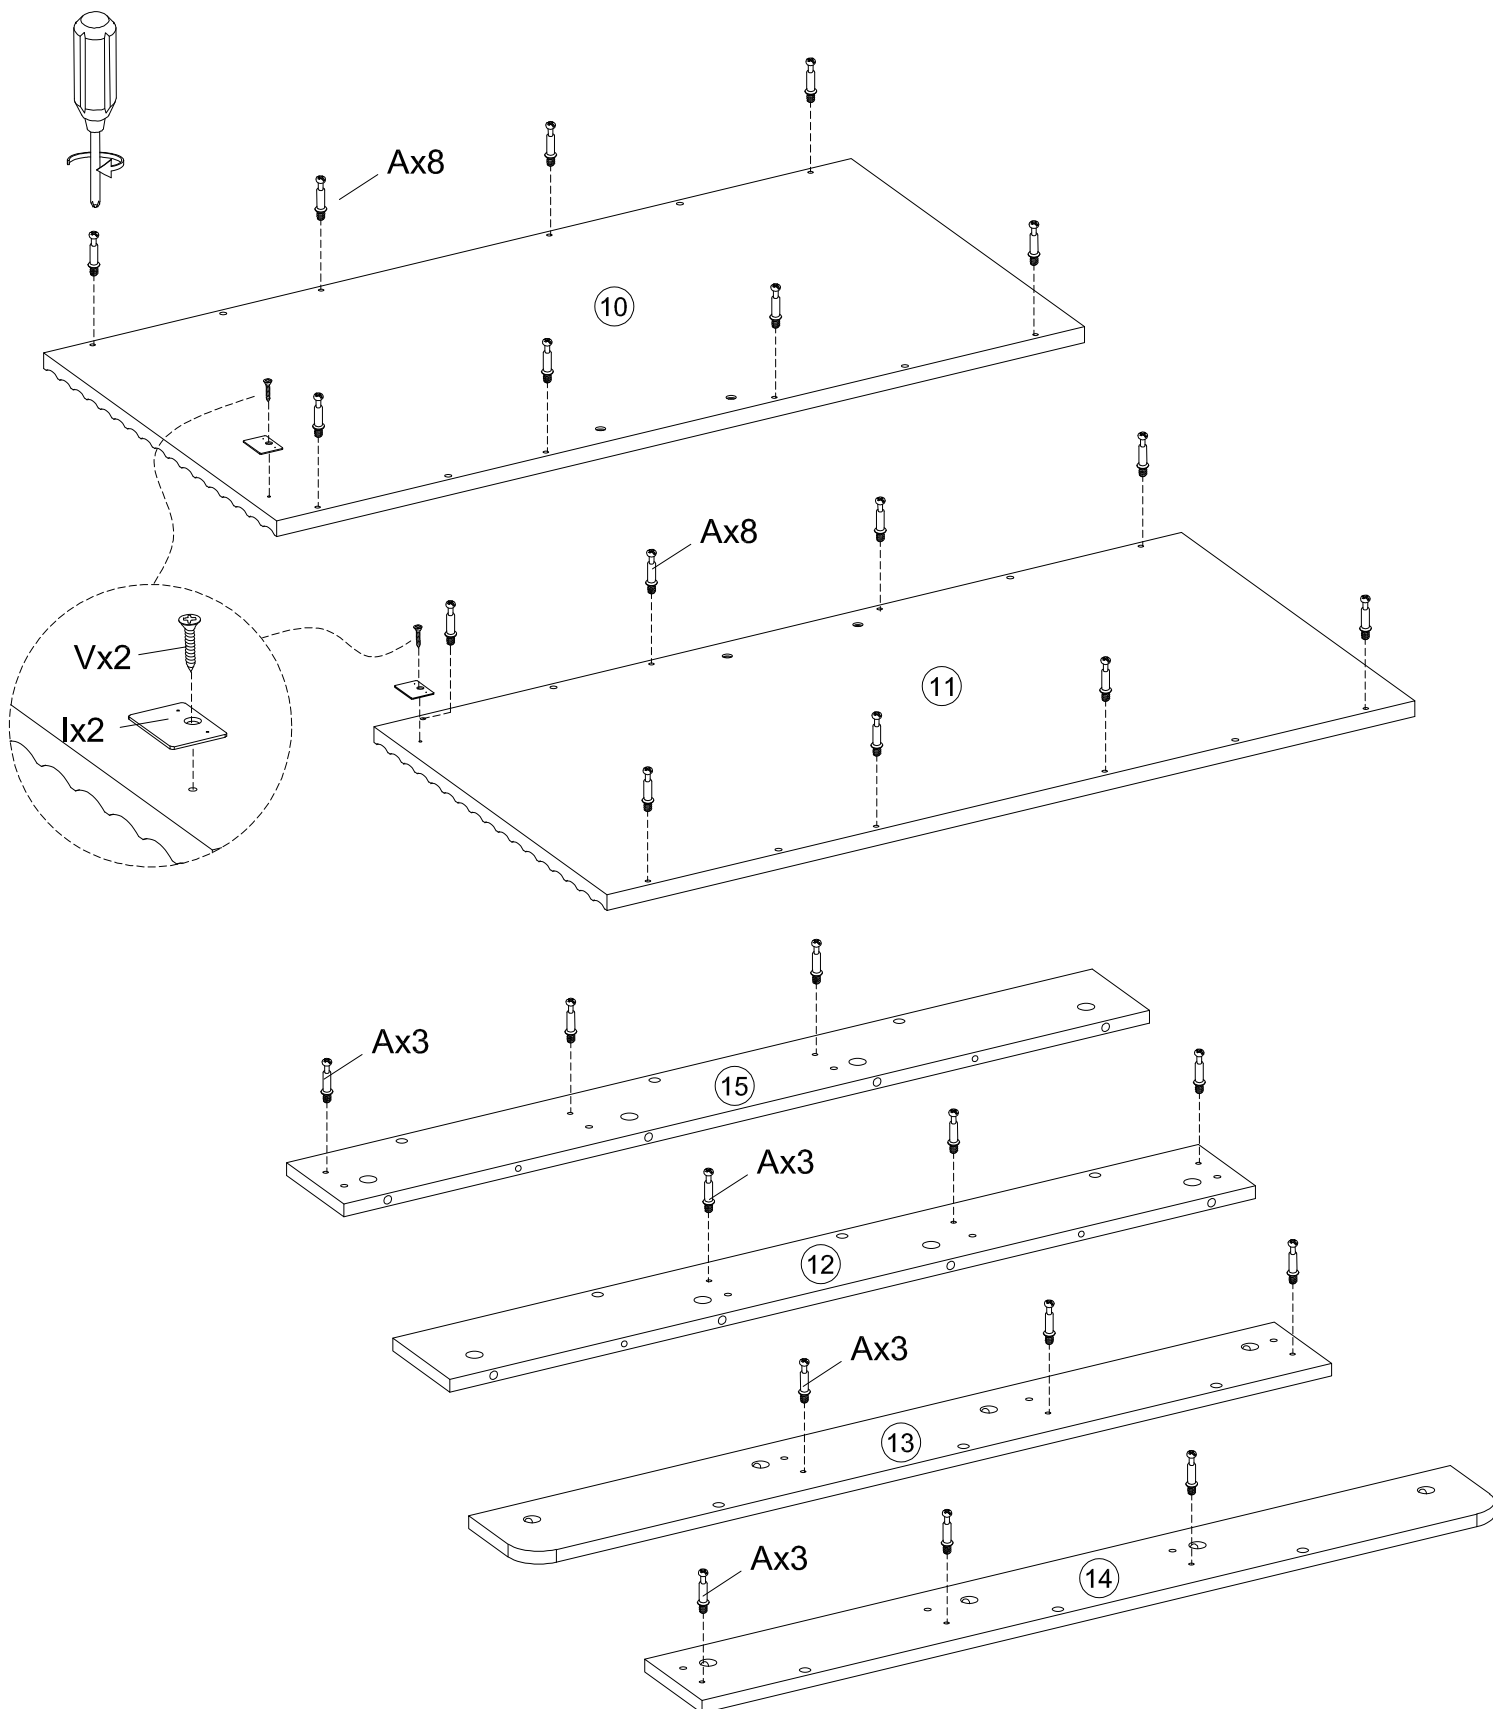


23





Bx6





Dx6

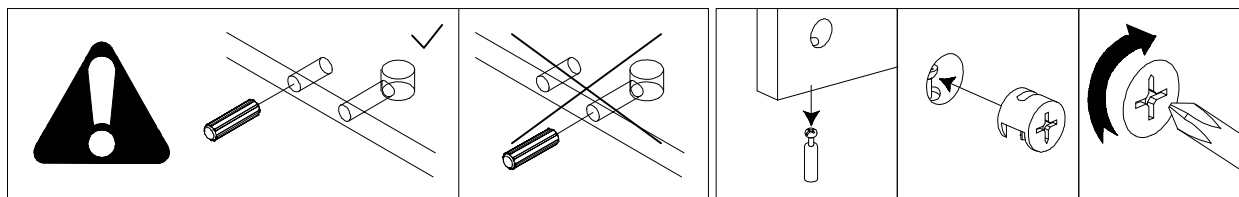

Unfinished edges

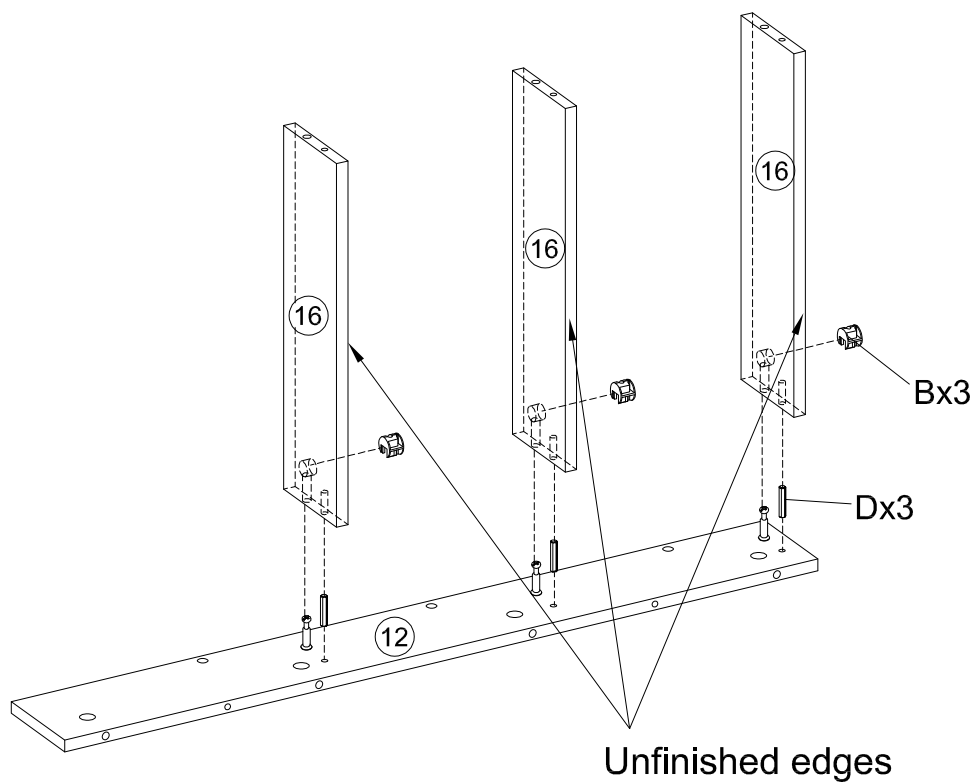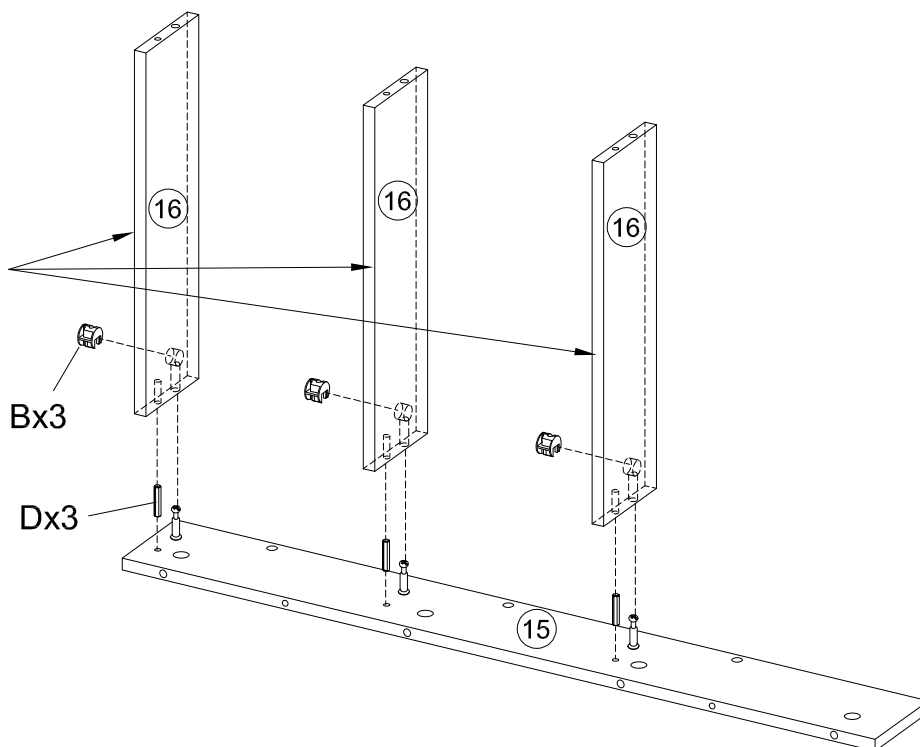


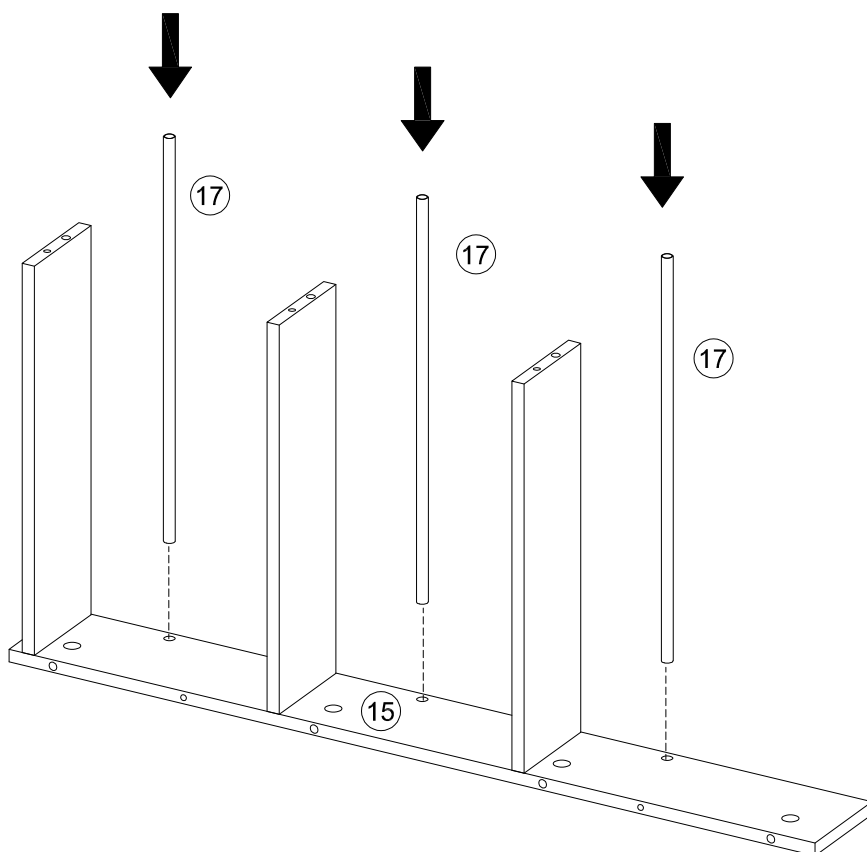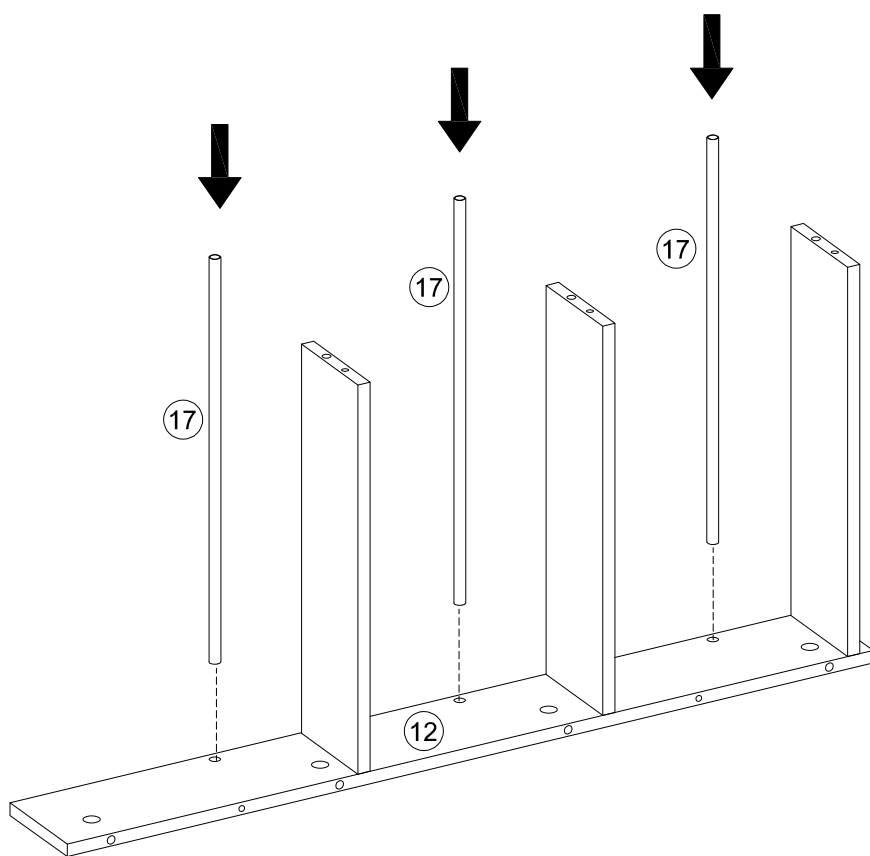








25



Bx6




Dx6

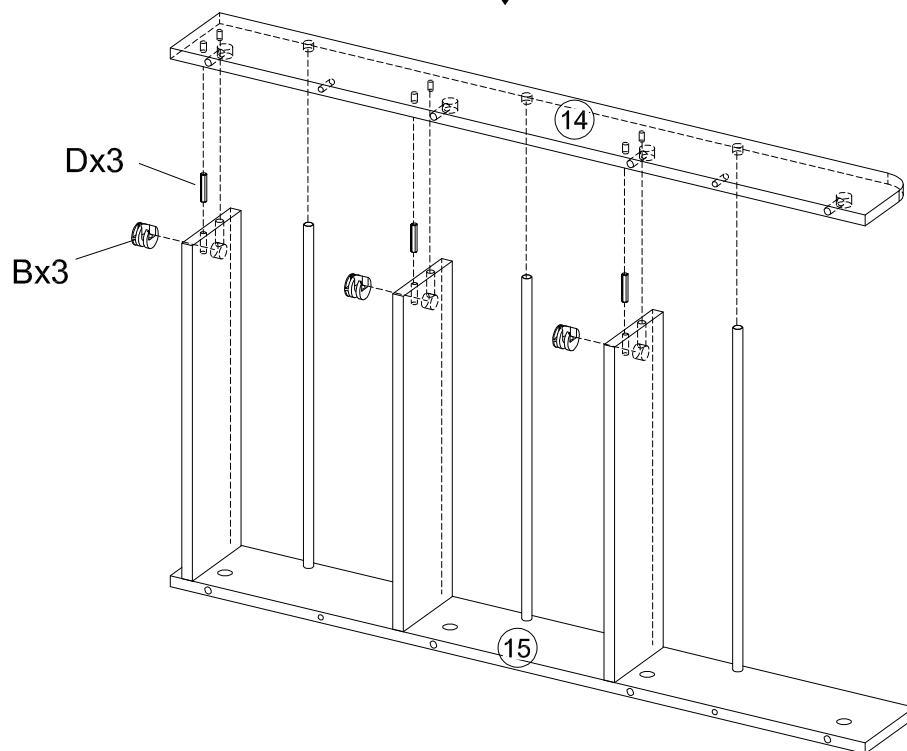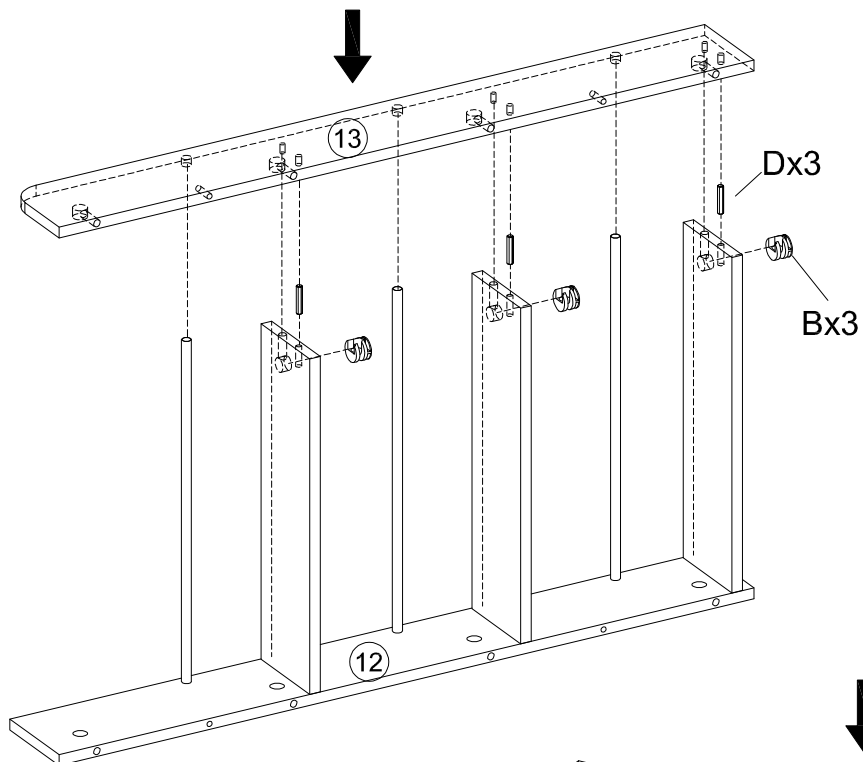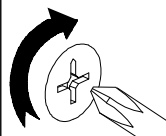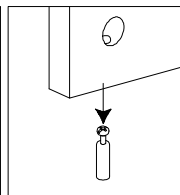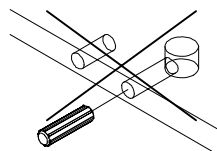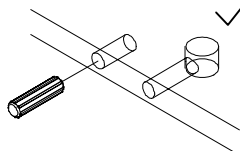








26



Bx16



Dx8

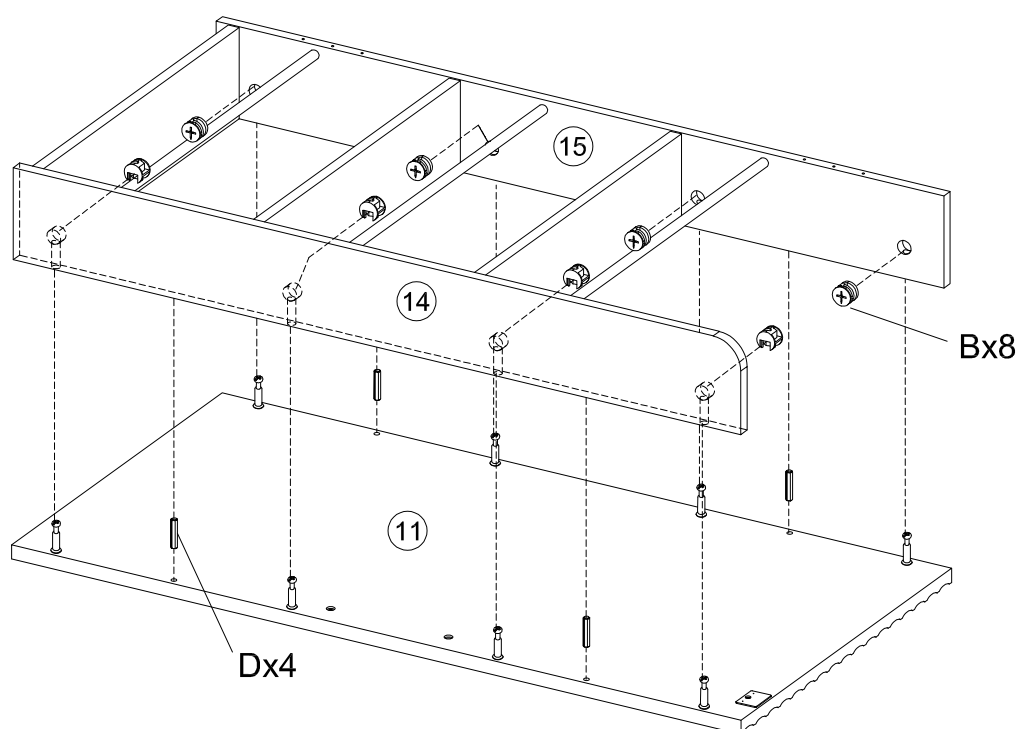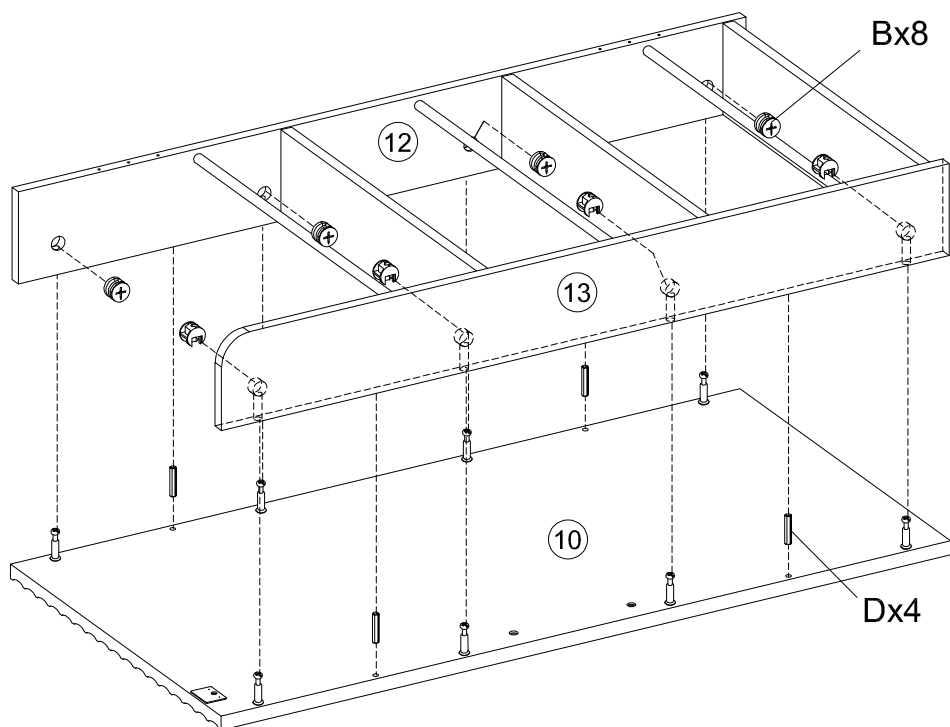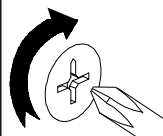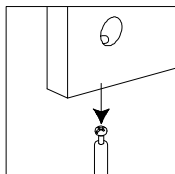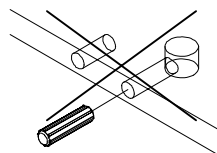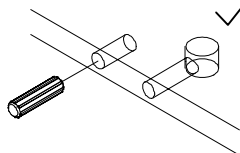


27



Sx2





Tx4

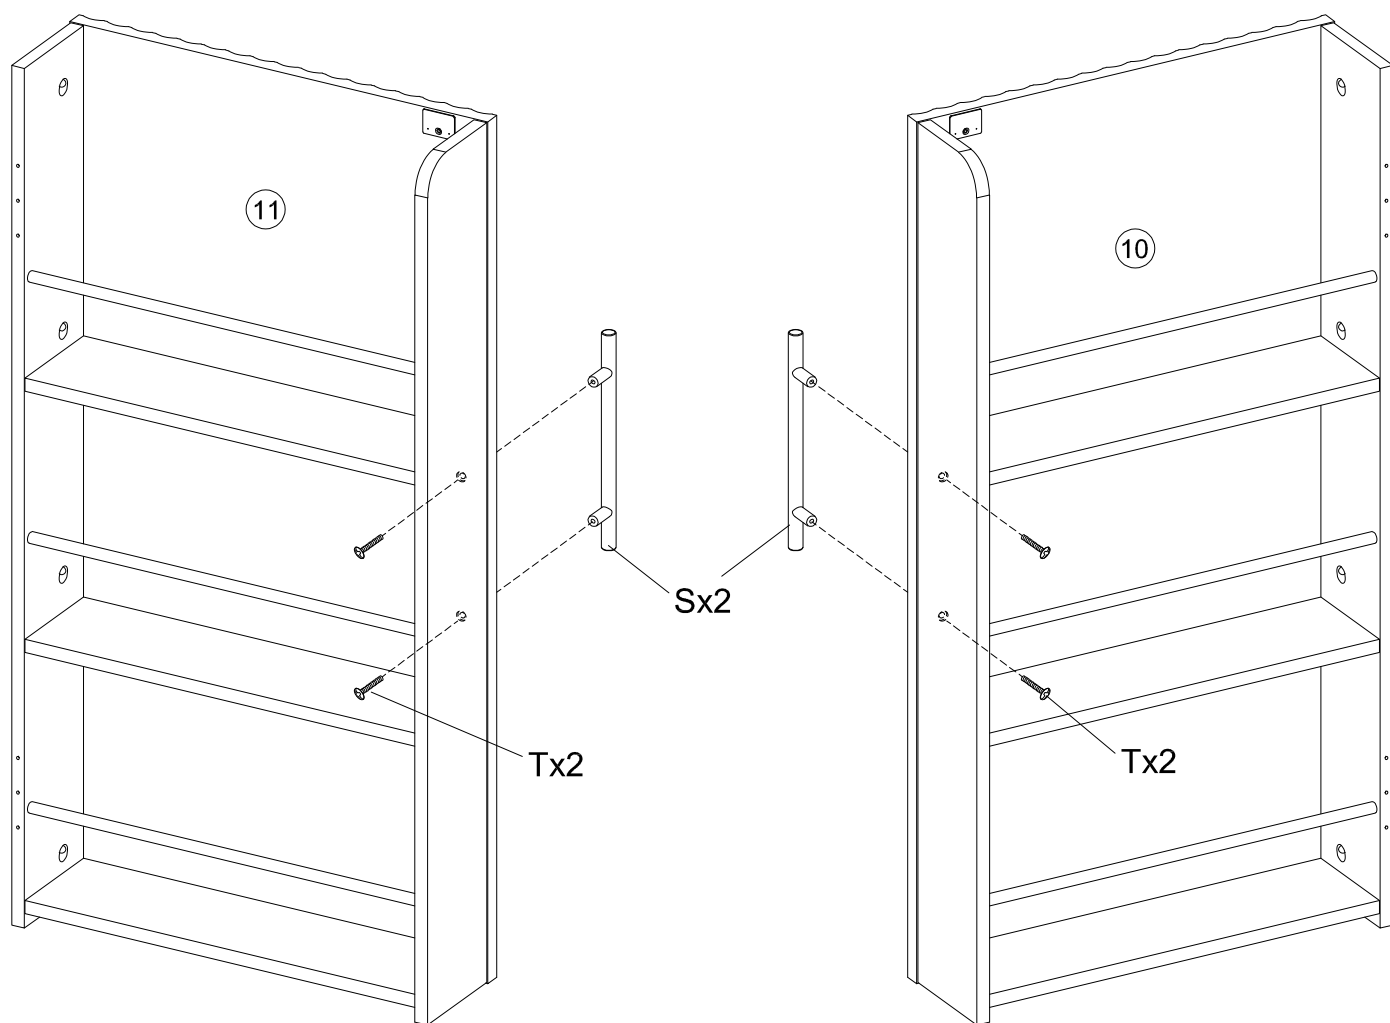


28



Fx6

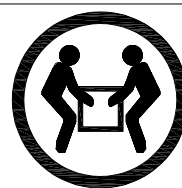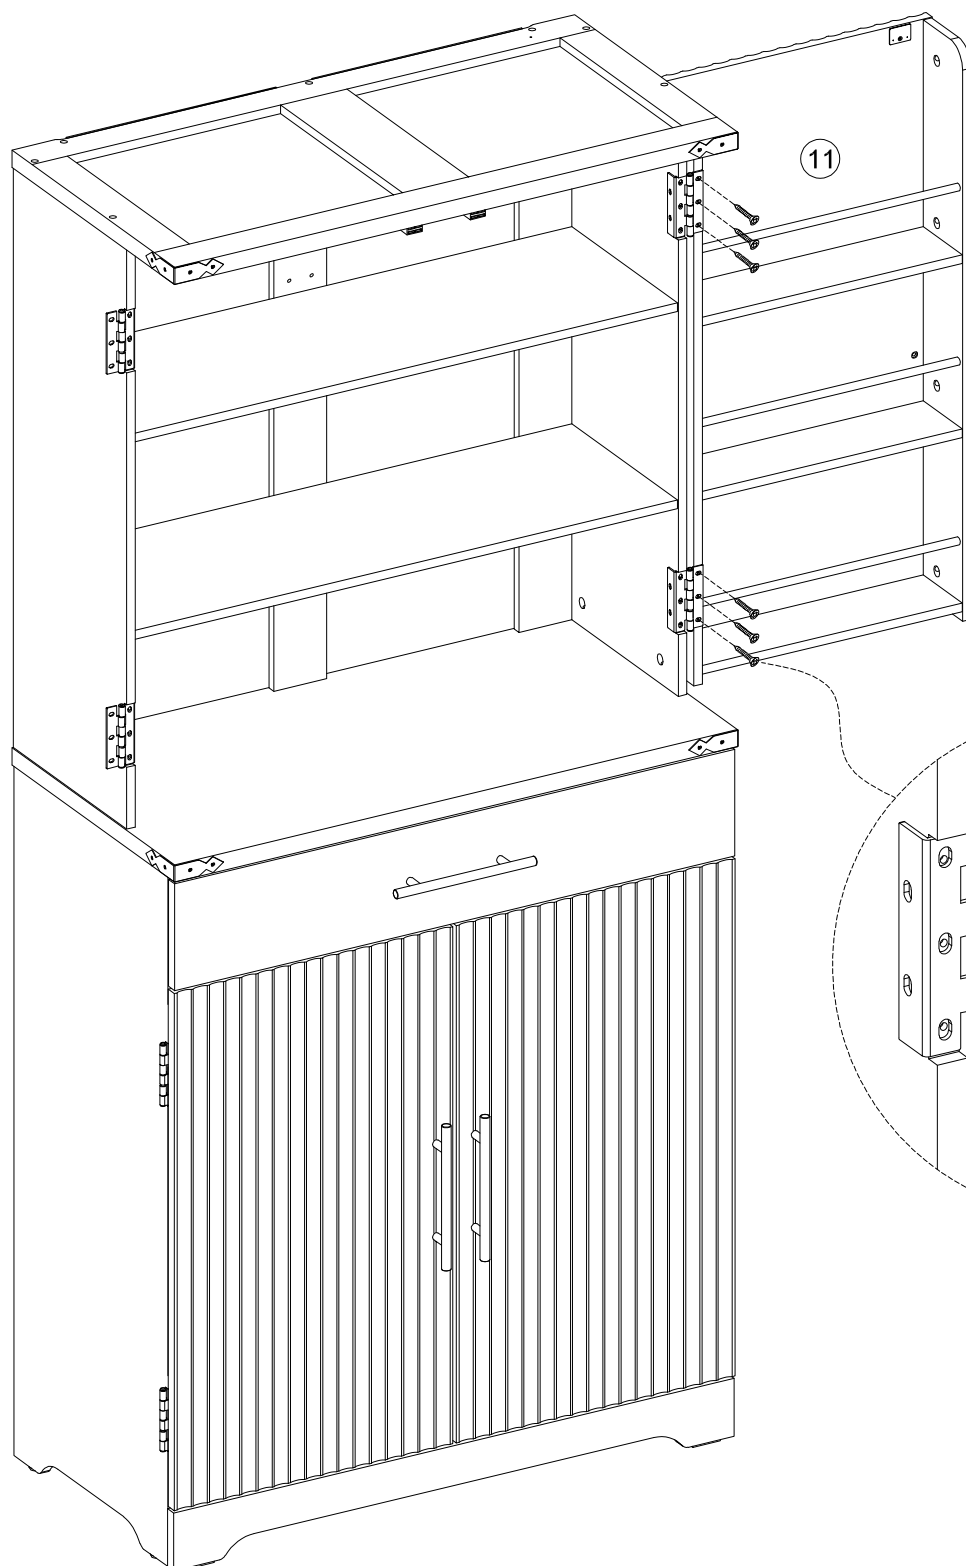

CAUTION: Heavy! You may need assistance with this step.

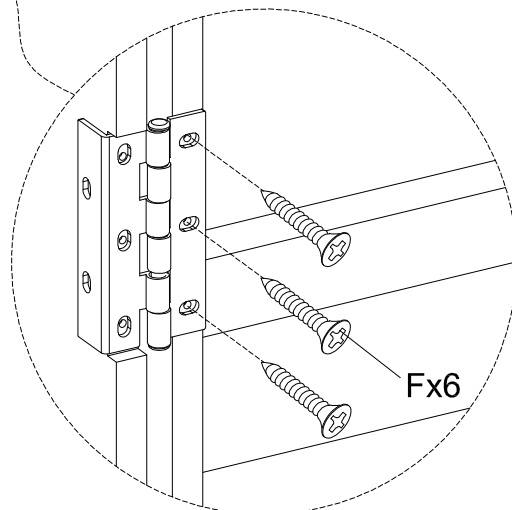


Fx6


29



Fx6

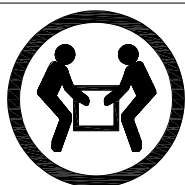


CAUTION: Heavy! You may need assistance with this step.

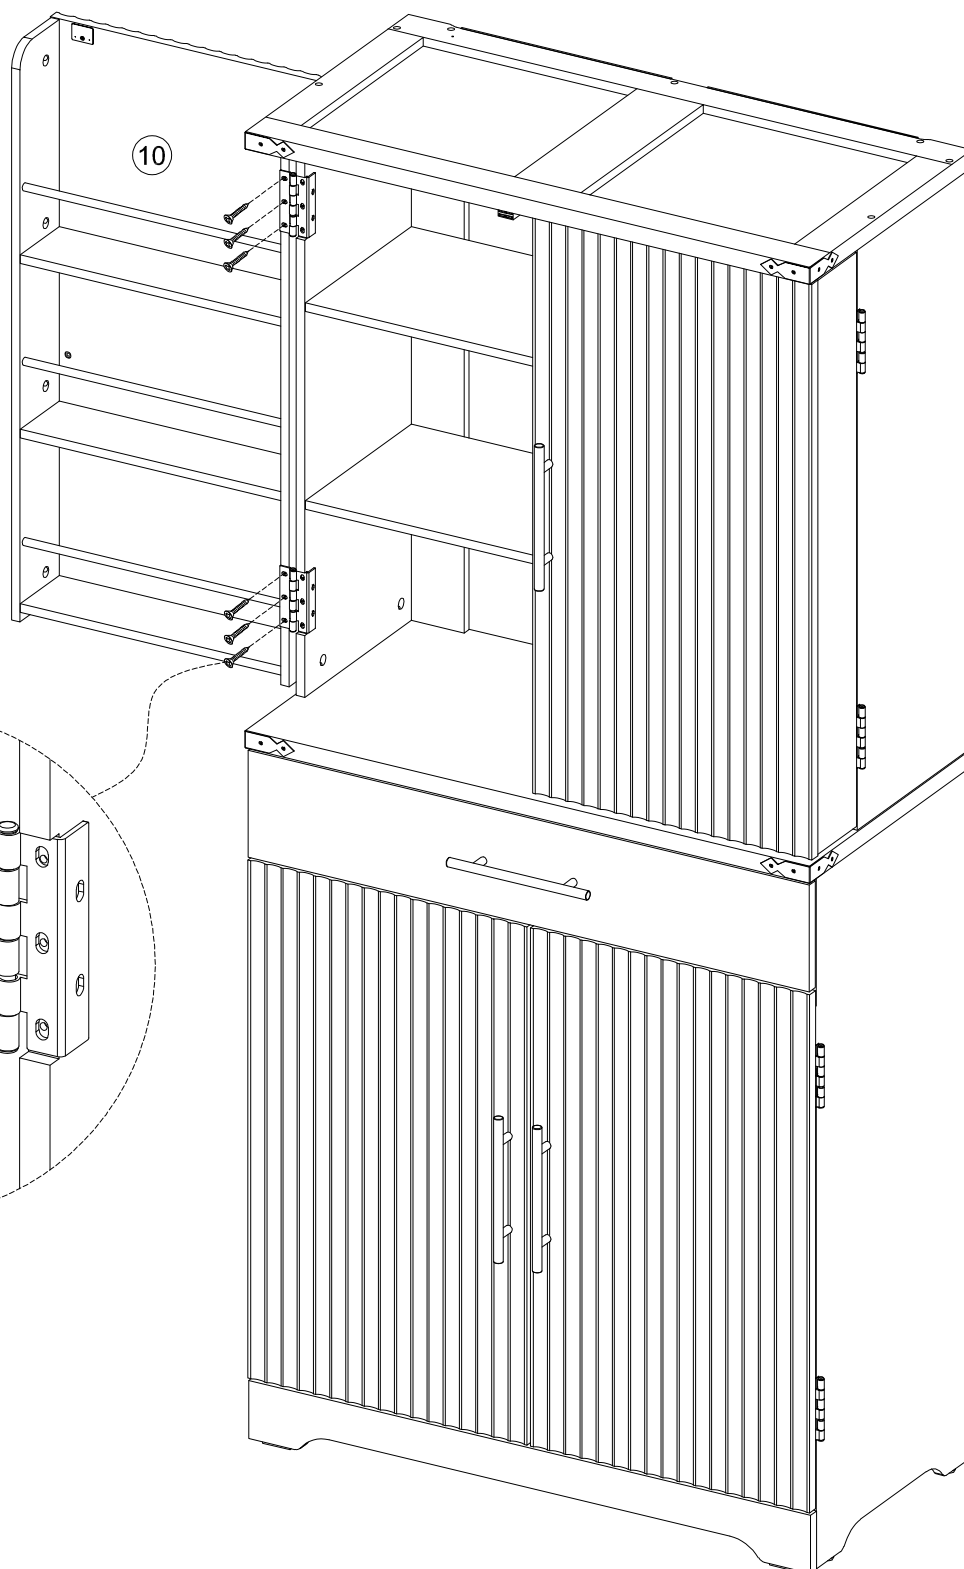





Fx6

30

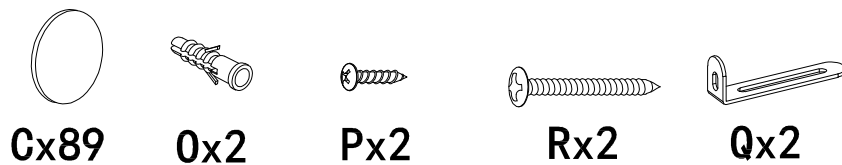

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

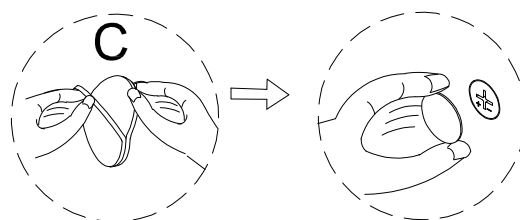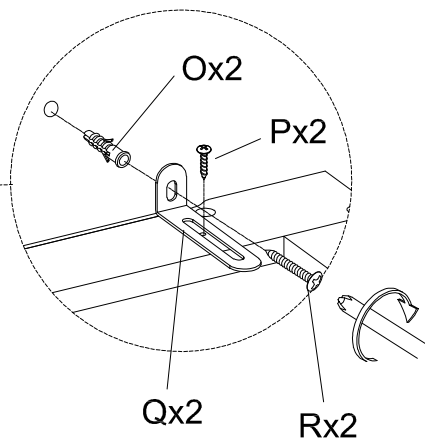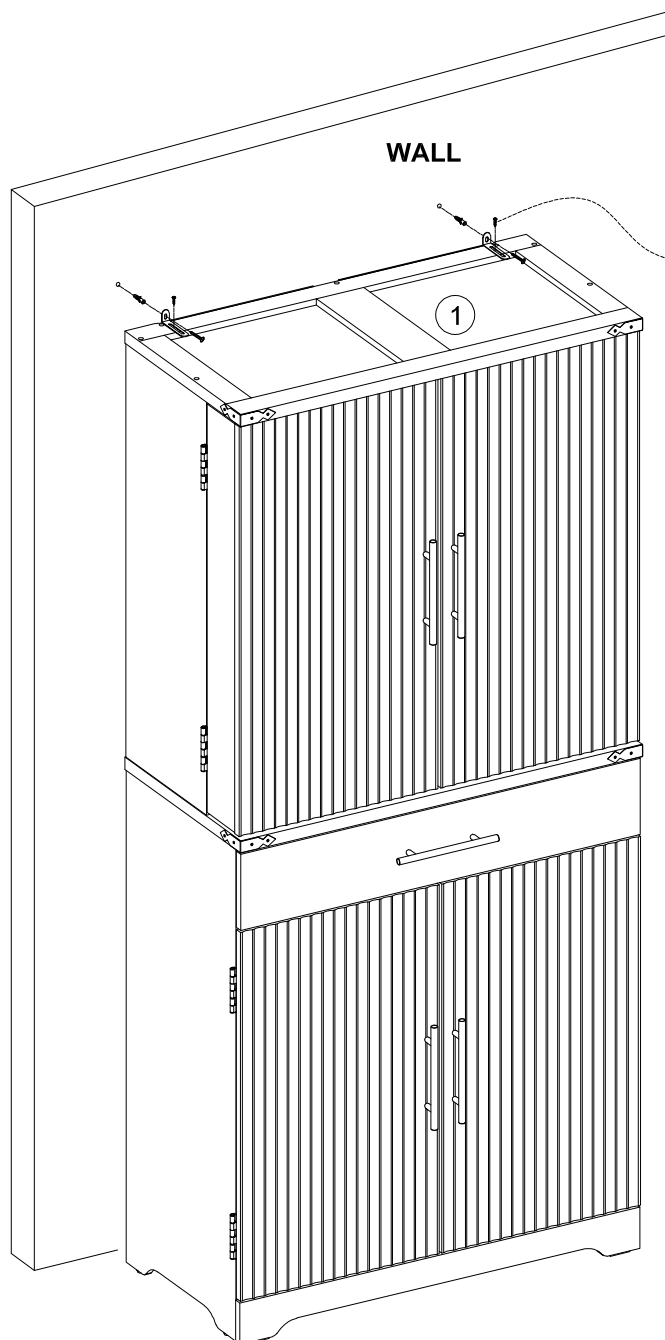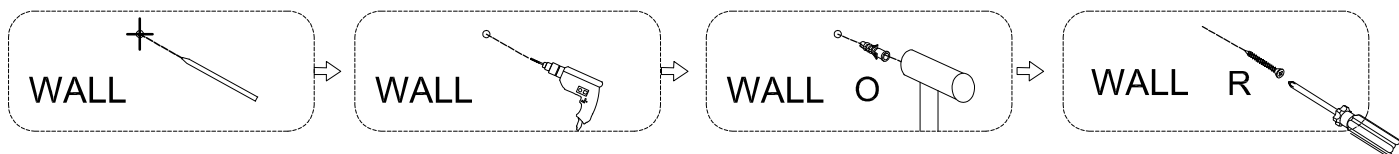

· Stick stickers (C) on cam locks (B).


31






Xx2



Yx1

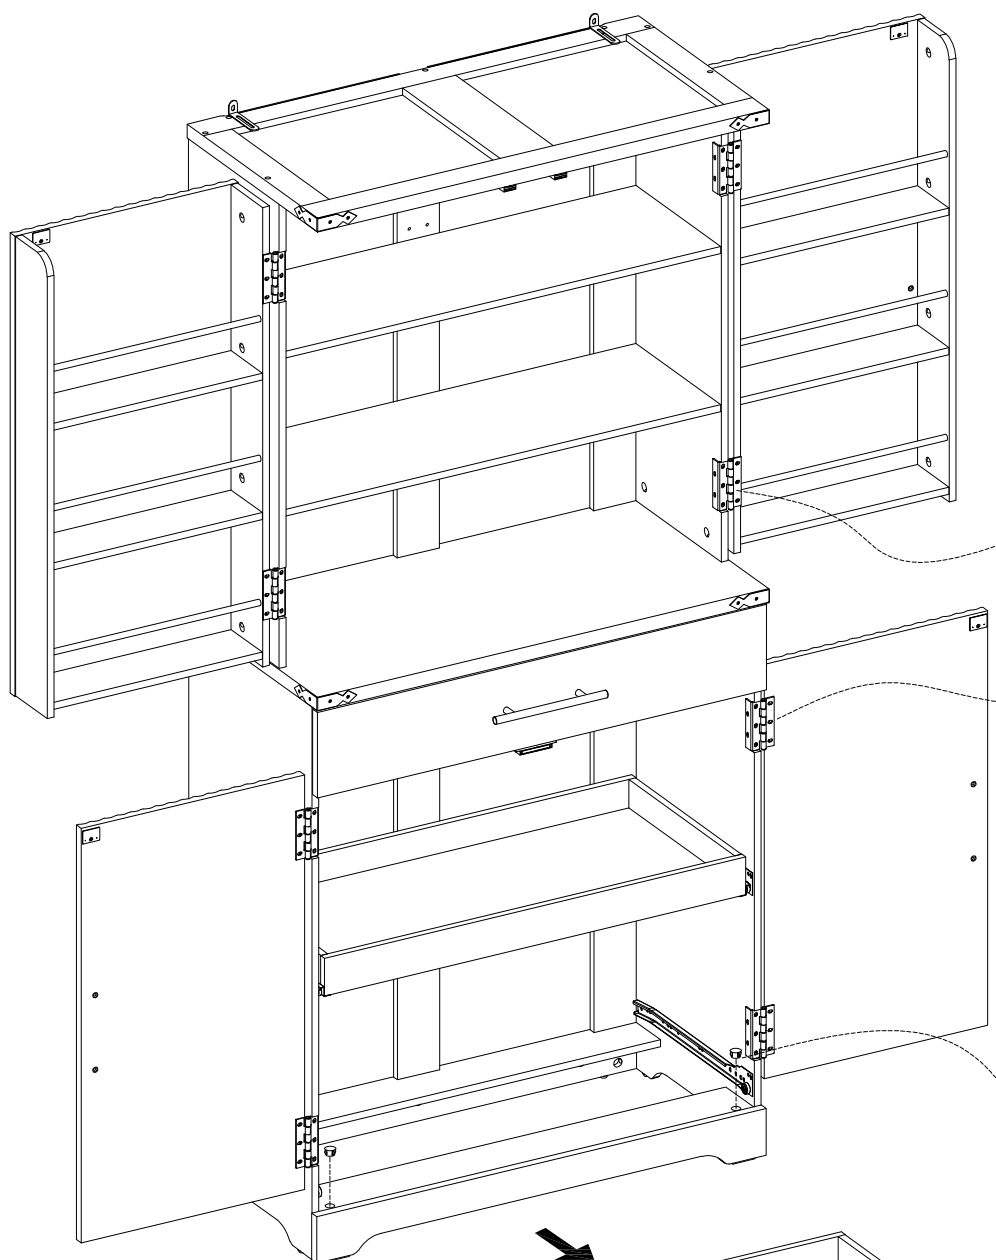

Note: The door side gap can be adjusted as shown

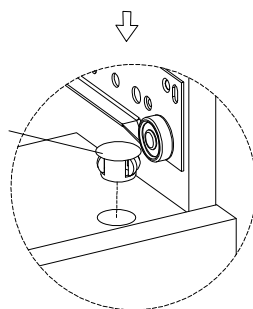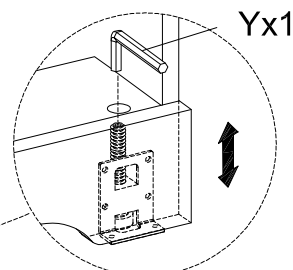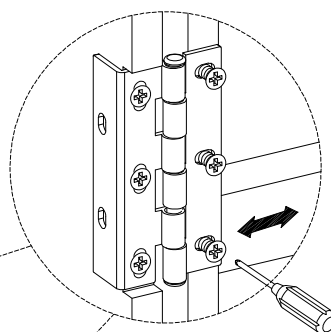

Remove the drawer for easy adjustment

Installation Completed

Adjust the floor levelers to make the cabinet door gaps even and then cover the hole plugs.