


Assembly Instructions

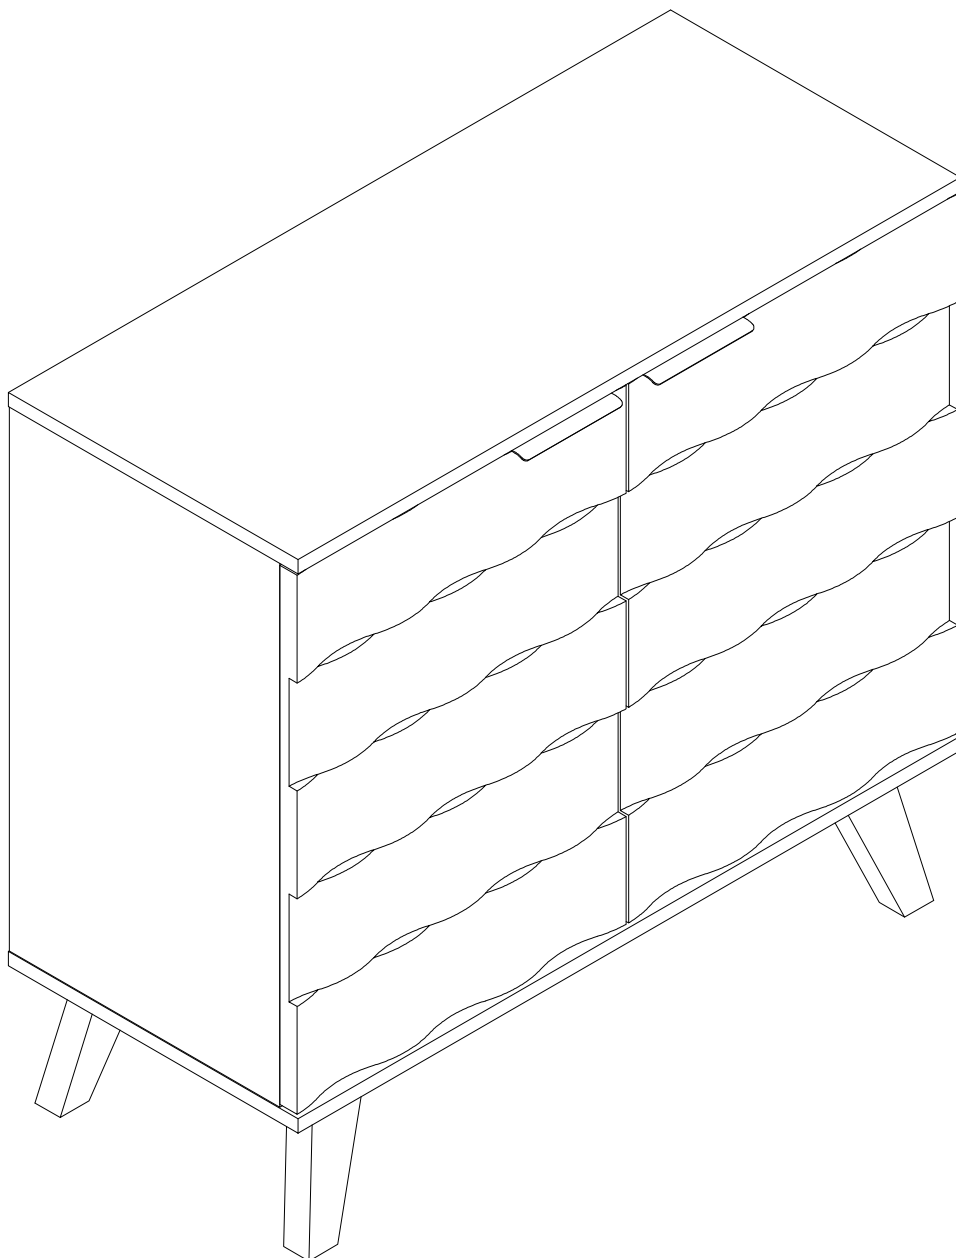


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

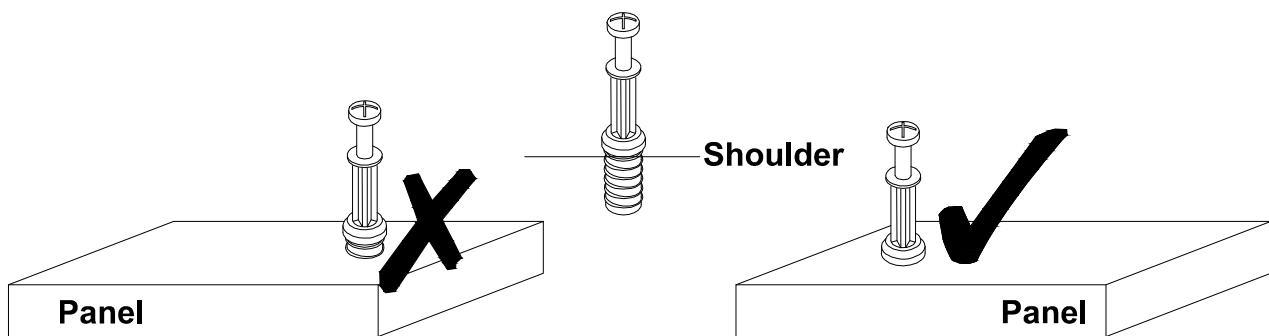

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

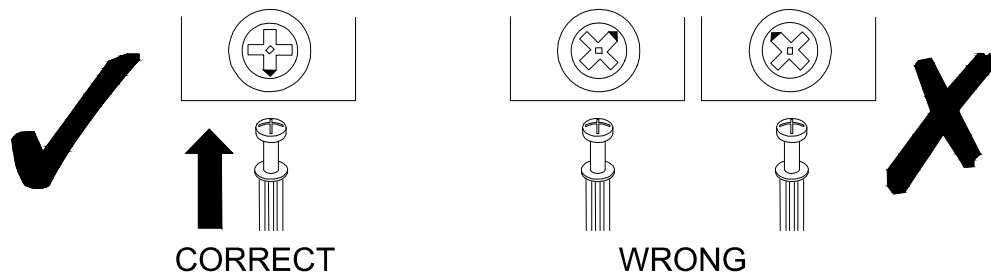

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT



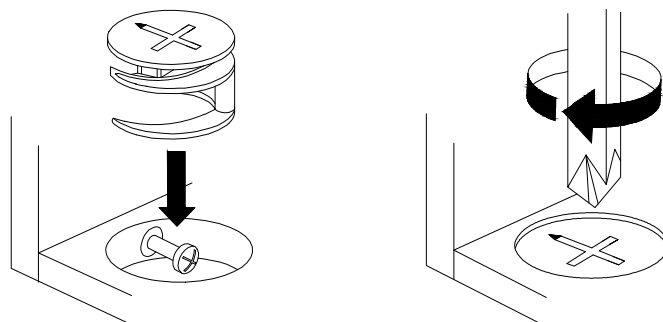










Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.




Turn cam lock clockwise to tighten.


Part List

No. A Quantity:15 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:15 Pcs Cam φ15 	No. C Quantity:15 Pcs Sticker Ø20 	No. D Quantity:8 Pcs Dowel 8*30mm 
No. E Quantity:4 Pcs Hinge 	No. F Quantity:4 Pcs Shelf Support M5*15mm 	No. G Quantity:28 Pcs Screw M3.5*14mm 	No. H Quantity:2 Pcs Handle 120*38*17mm 
No. I Quantity:4 Pcs Slip Mat Ø20 	No. J Quantity:4 Pcs Screw M8*35mm 	No. K Quantity:1 Pcs Allen Key 5# 	No. L Quantity:8 Sets Plastic Wedge 
No. M Quantity:1 Sets Anti-falling Parts 			

Product structure

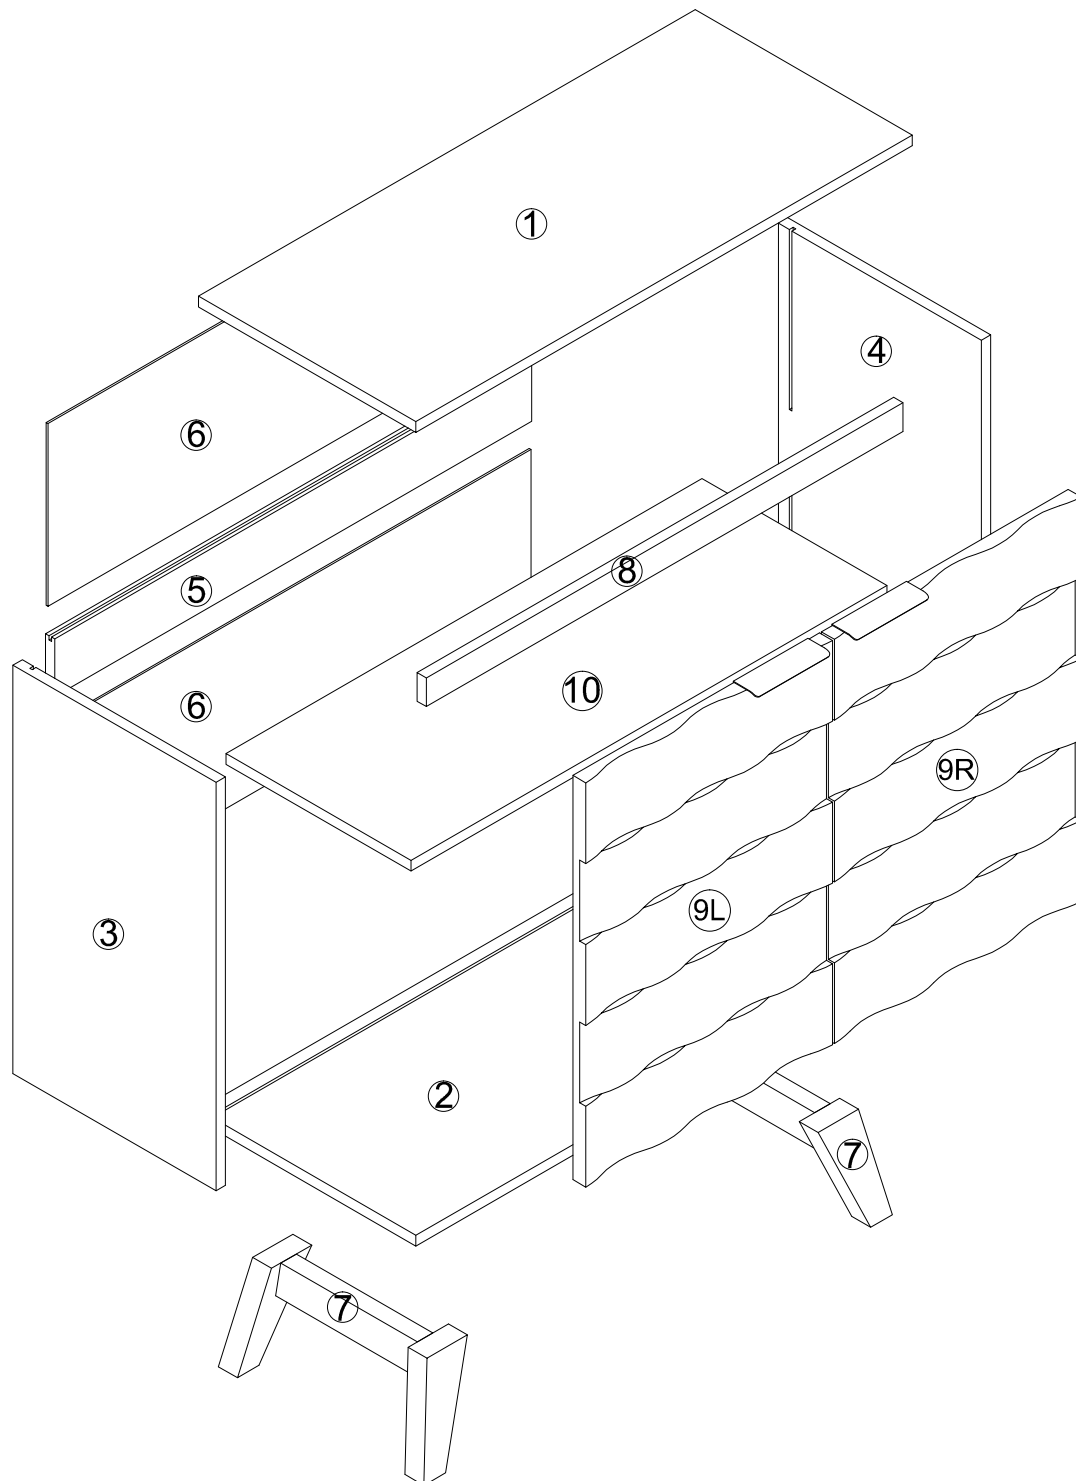


STEP 1

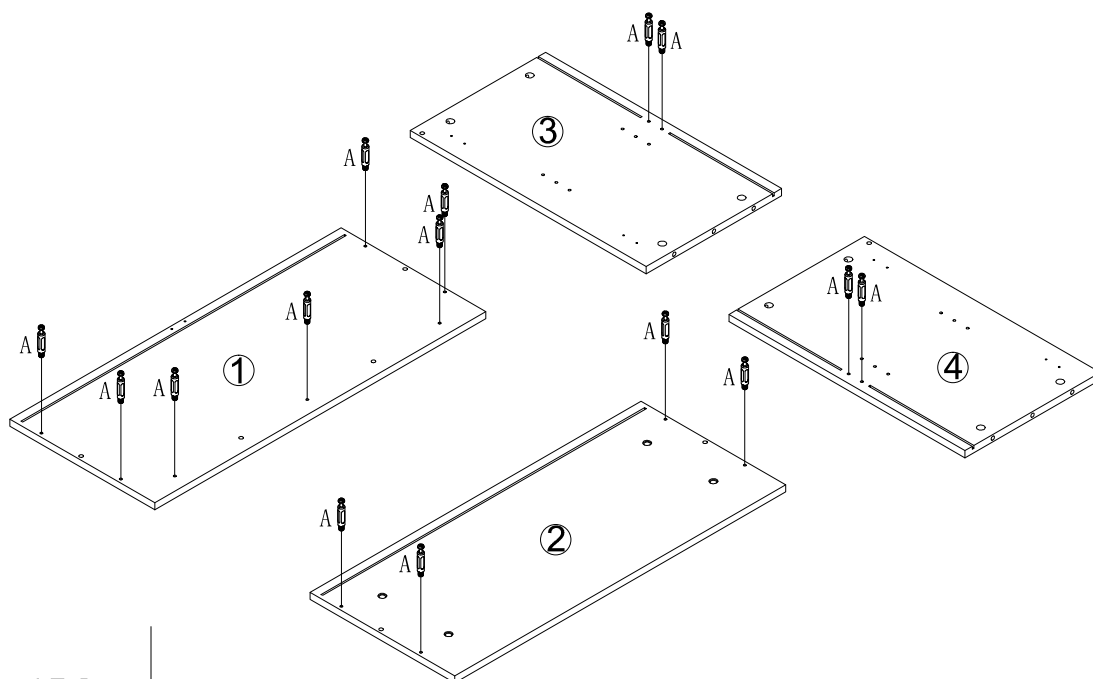

No. A
Quantity: 15 Pcs
8*28 mm




STEP 2

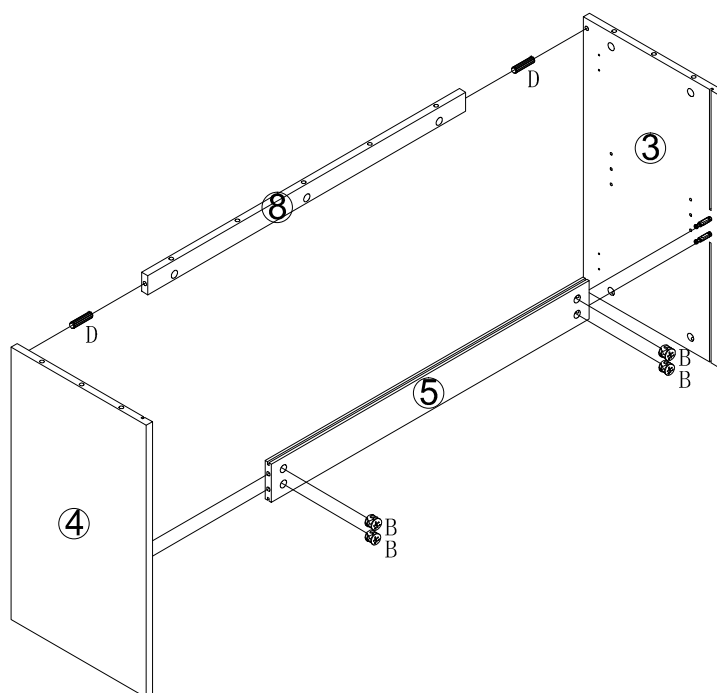


No. B
Quantity: 4 Pcs
Ø15




No. D
Quantity: 2 Pcs
8*30mm



STEP 3

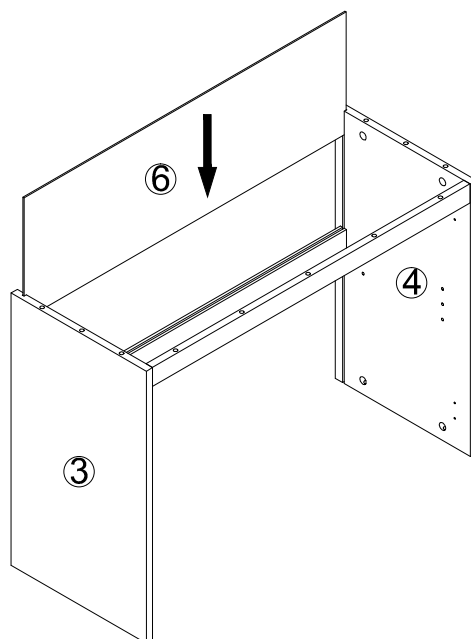


STEP 4

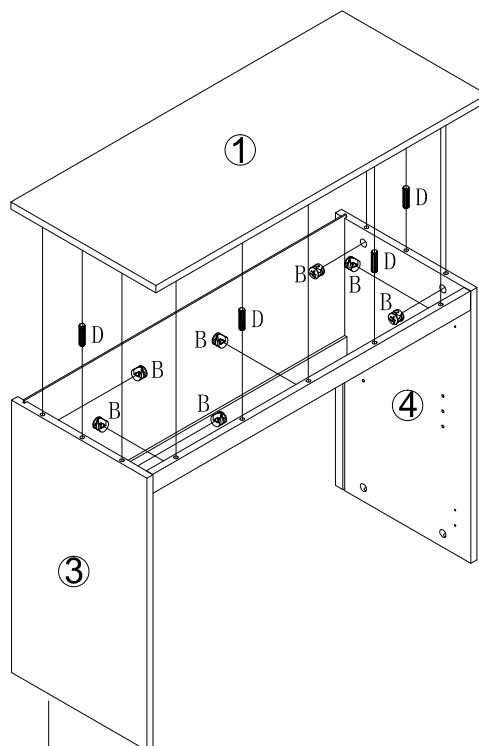


No. B
Quantity: 7 Pcs
Ø15




No. D
Quantity: 4 Pcs
8*30mm



STEP 5

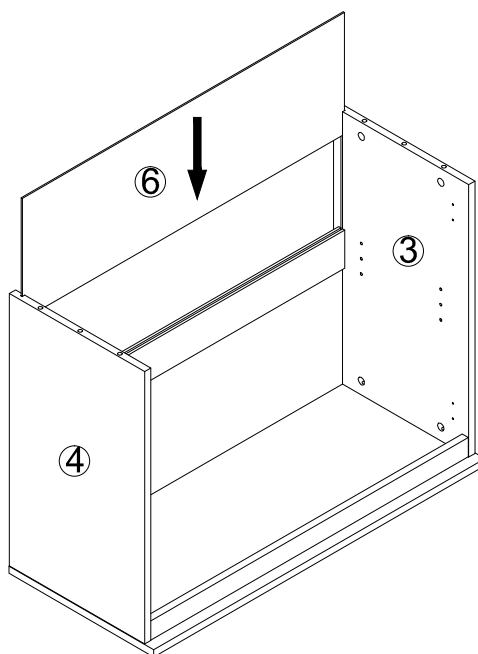


STEP 6

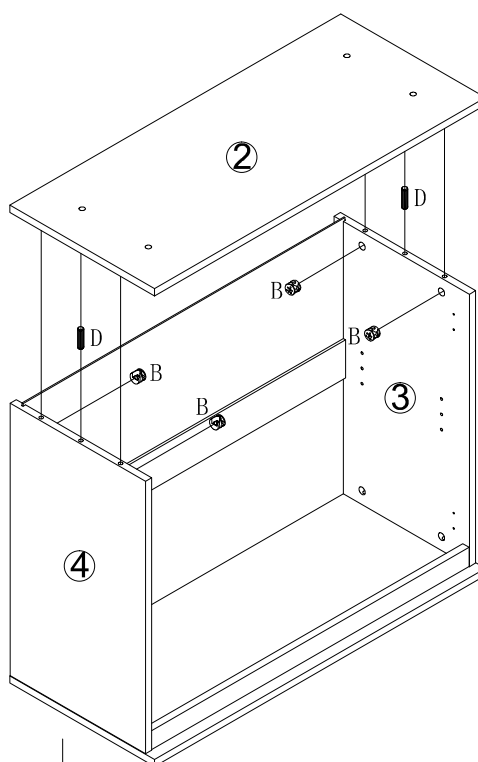


No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm



STEP 7

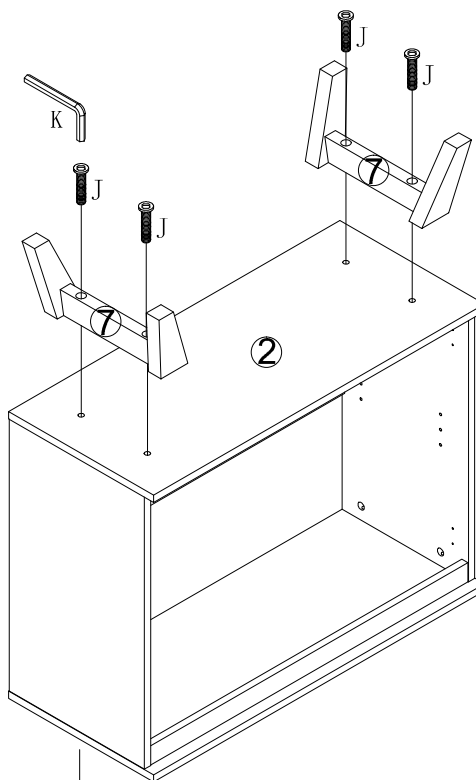


No. J
Quantity: 4 Pcs
M8*35mm



No. K
Quantity: 1 Pcs
5#




STEP 8

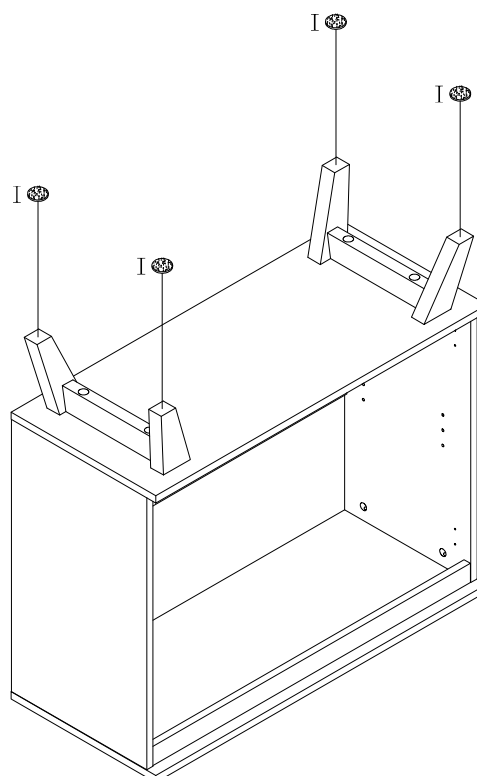

No. I
Quantity: 4 Pcs
Ø20




STEP 9

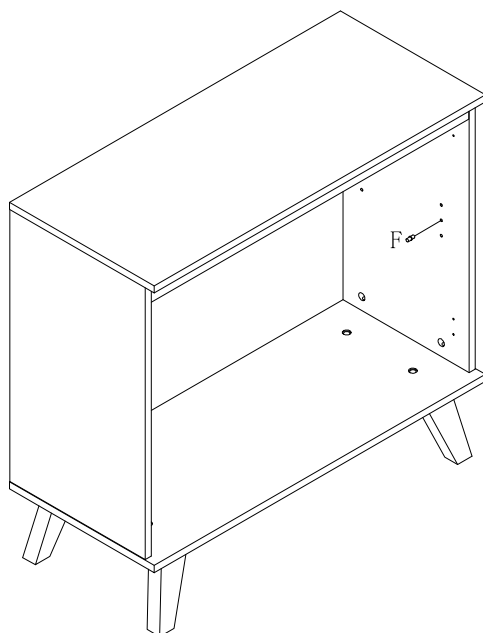


No. F
Quantity: 4 Pcs
M5*15mm




STEP 10

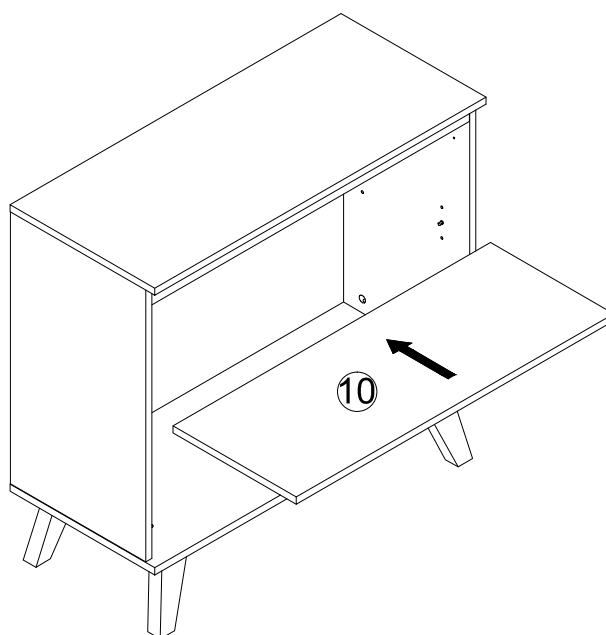

STEP 11

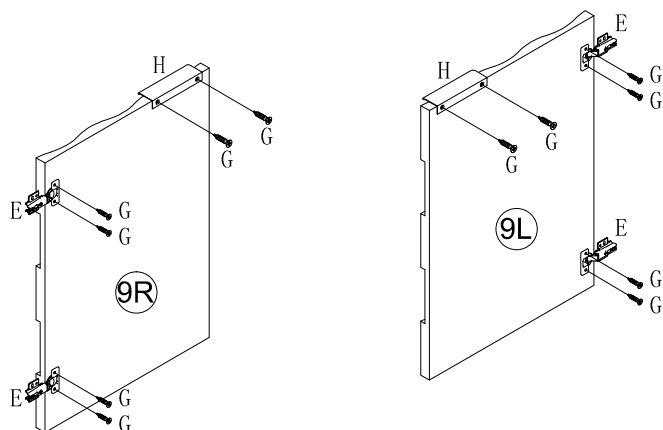


No. E
Quantity: 4 Pcs




No. G
Quantity: 12 Pcs
M3.5*14mm




No. H
Quantity: 2 Pcs
120*38*17mm




STEP 12

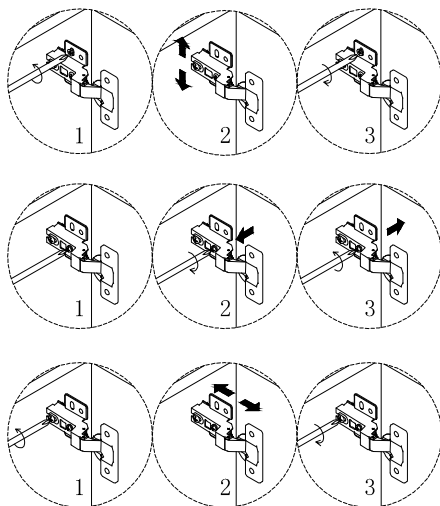

No. G
Quantity: 16 Pcs
M3.5*12mm

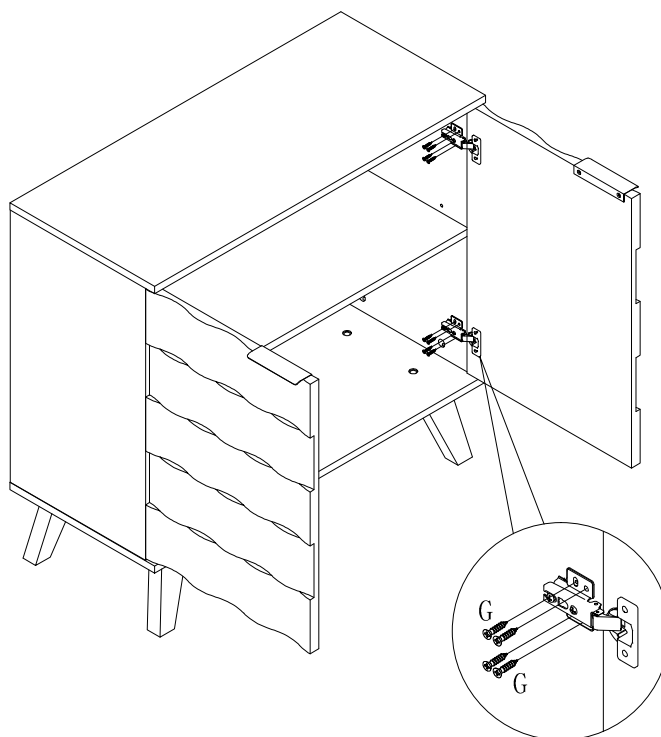


STEP 13

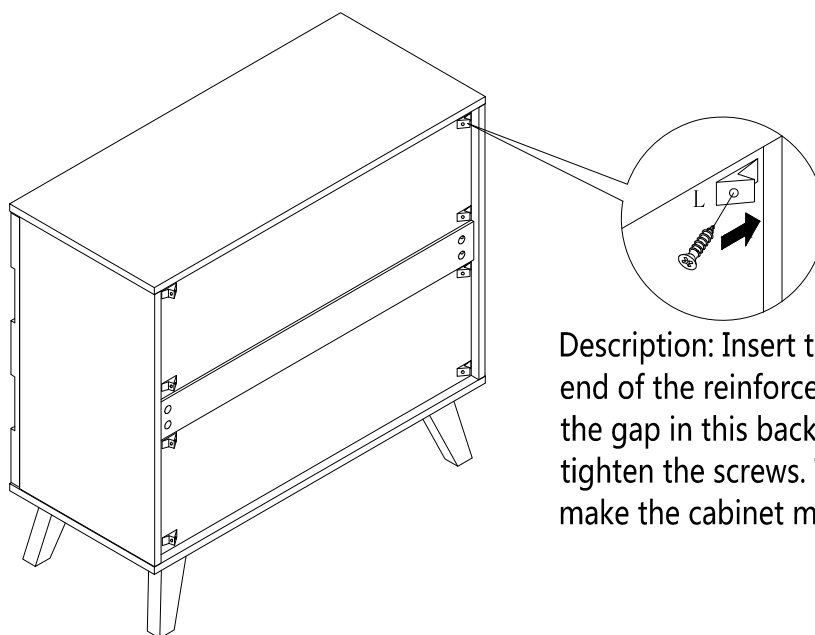


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.


No. L
Quantity: 8 Sets



STEP 14

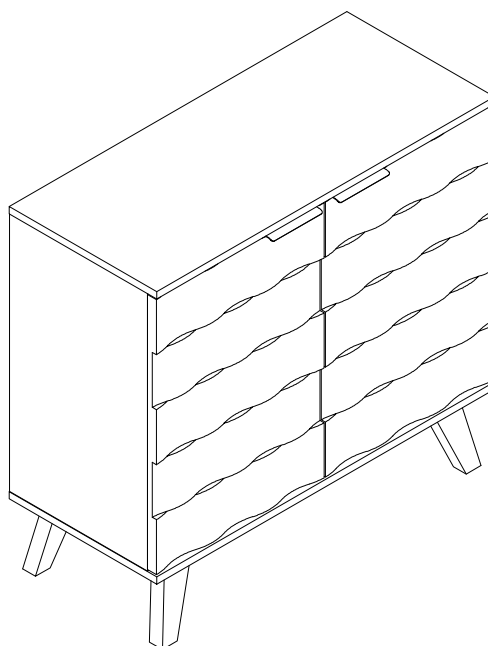


STEP 15

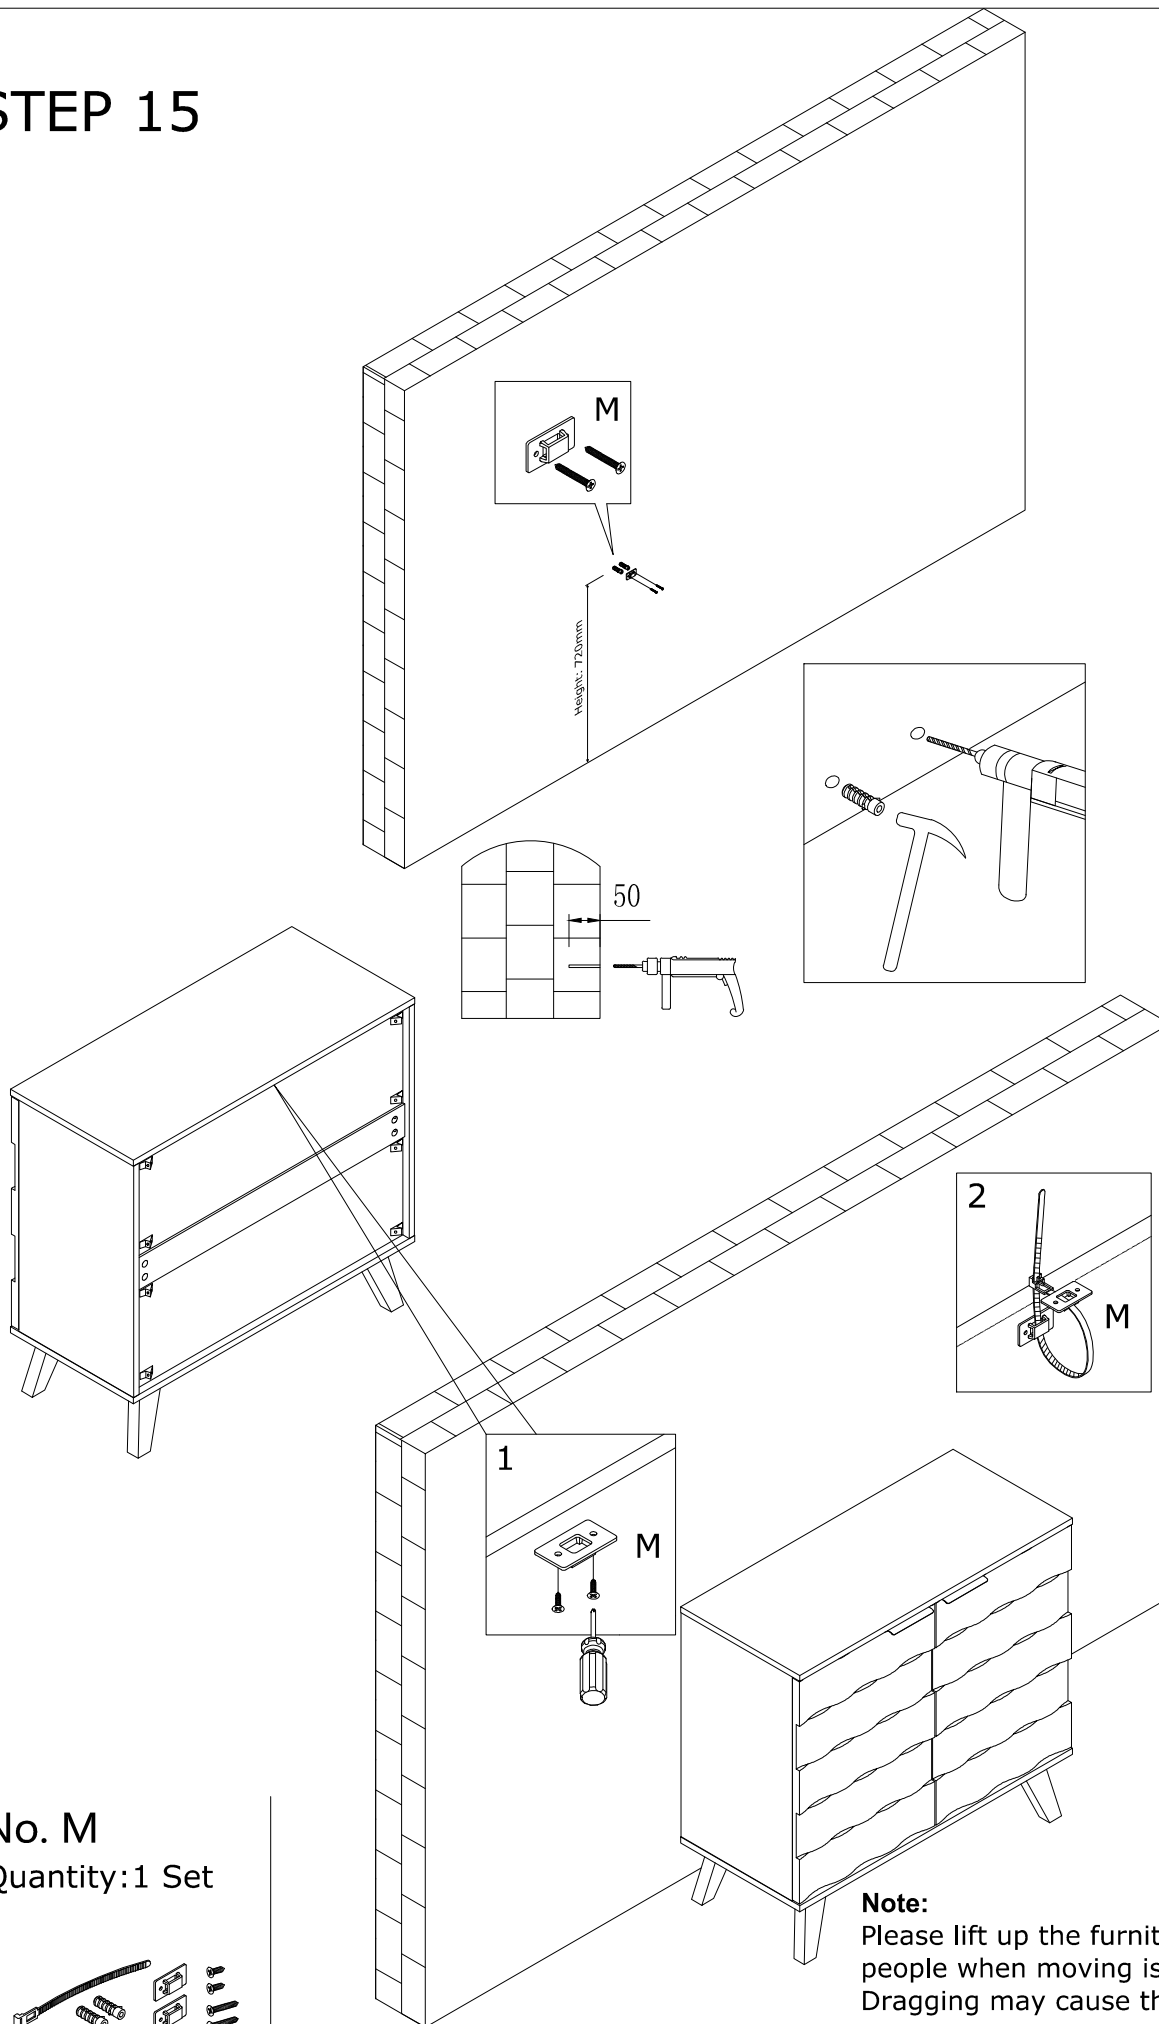

No. M

Quantity: 1 Set



Note:
Please lift up the furniture by two people when moving is needed.
Dragging may cause the legs failure.