


Installation instruction

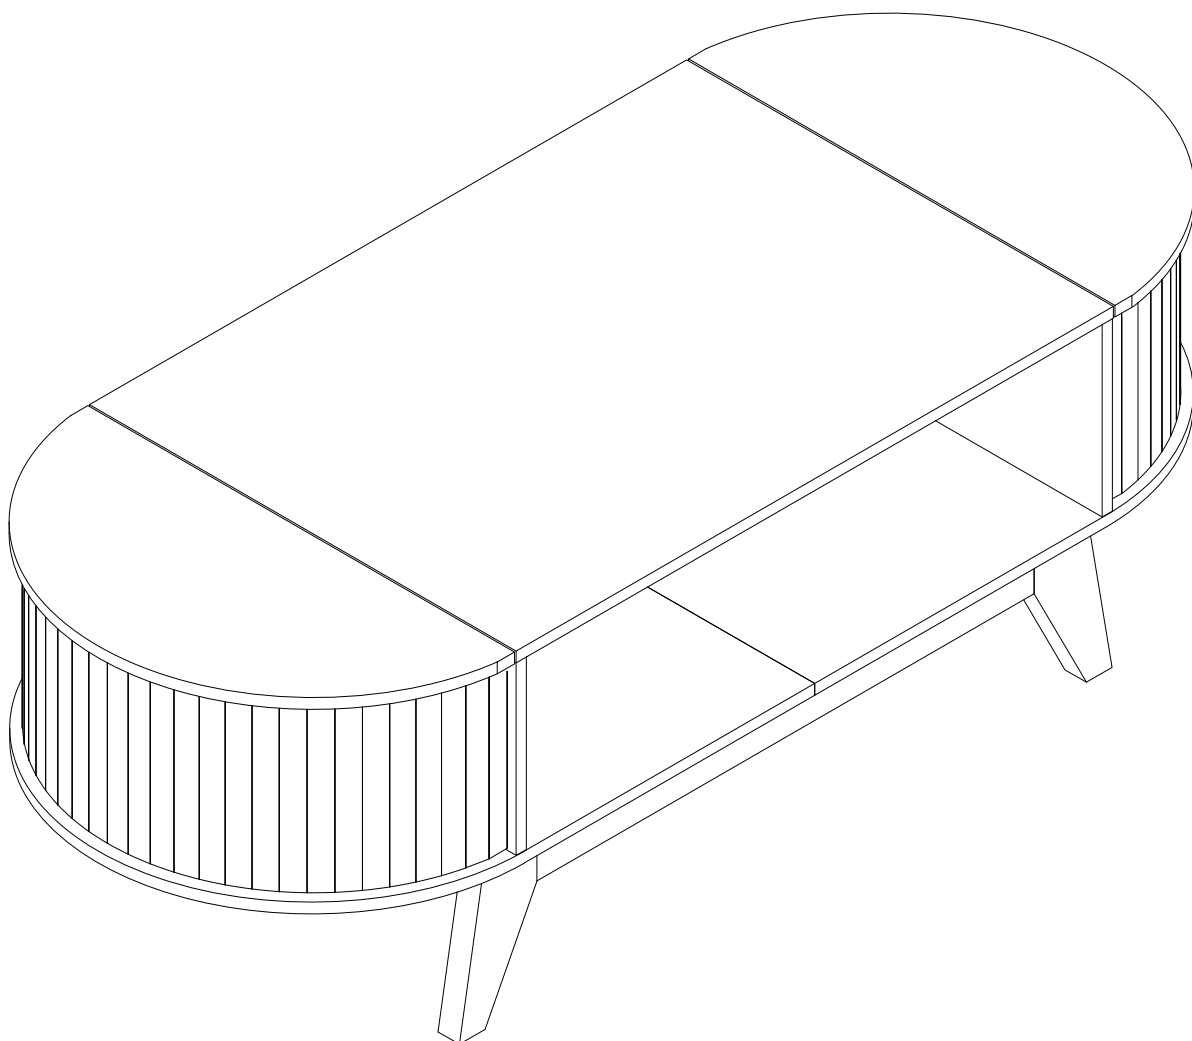

Assembling


Estimated time for assembly



45 : 00

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100 | **35**
lbs table top lbs per

What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	33
B	Cam Lock 15X9MM	33
C	Wooden Dowel M6X30MM	14
D	Screw M3.5X12MM	24
E	Screw M 4X35MM	4
F	Screw M6X40MM	12
G	Screw M6X25MM	4
H	Door panel hinge	4
I	Plank sticker	7
J	Foot pads	4
K	Screw wrench	1

The Hardwares

A x 33



Ø6×35 mm

B x 33



Ø15×9 mm

C x 14




Ø6×30 mm

D x 24




Ø3.5×12 mm

E x 4

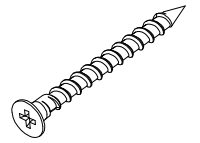

Ø 4 ×35 mm

F x 12




ØM6*40 mm

G x 4



ØM6*25 mm


H x 4



I x 7



J x 4



K x 1



M4


IMPORTANT:

- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product. Do not use power tools.

Included Accessories


Code	Description	Qty
1	Middle panel	1
2	Left and right Panels	2
3	Left and right side plate	2
4	Left and right side panel	2
5	Left bottom plate	1
6	Right bottom plate	1
7	Reinforcing plate	1
8	Short Upright Board	2
9	Long Standing Board	2
10	Left support foot	2
11	Right support foot	2
12	Semi-circular iron frame	4
13	Crossbar	6

The Accessoriess

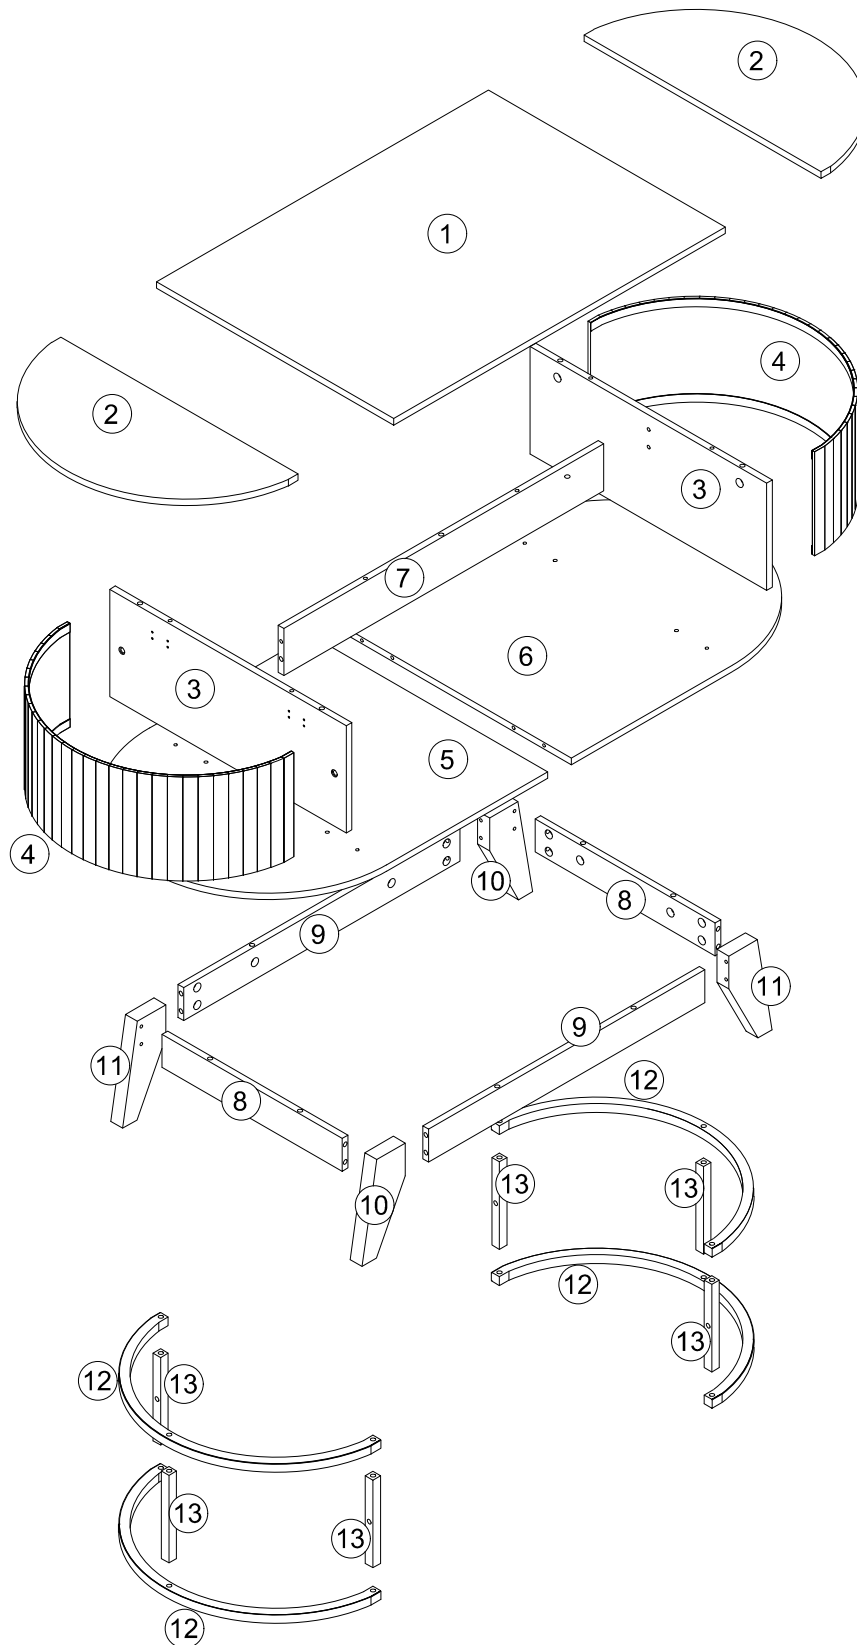


Step 1


A x 7	C x 8
	

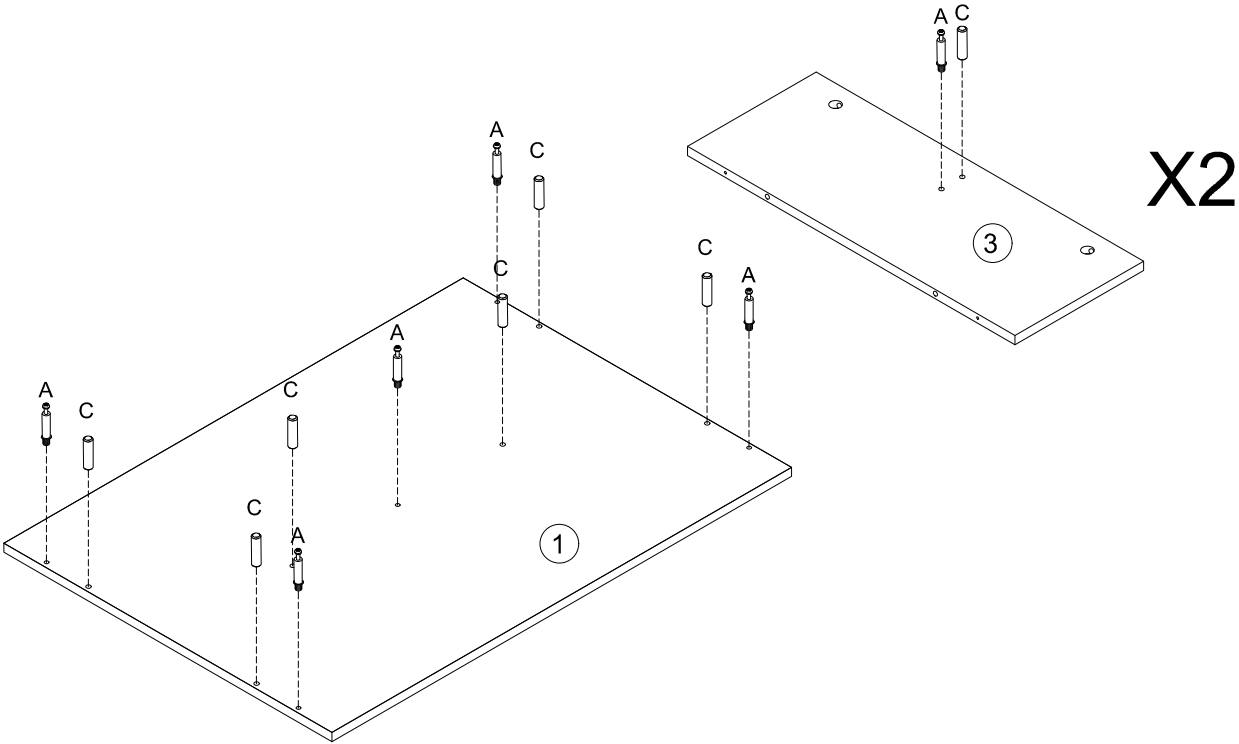


Step 2

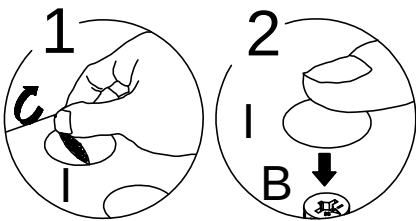


For beauty and safety.
Please attach I-hole stickers
at the end of this step.

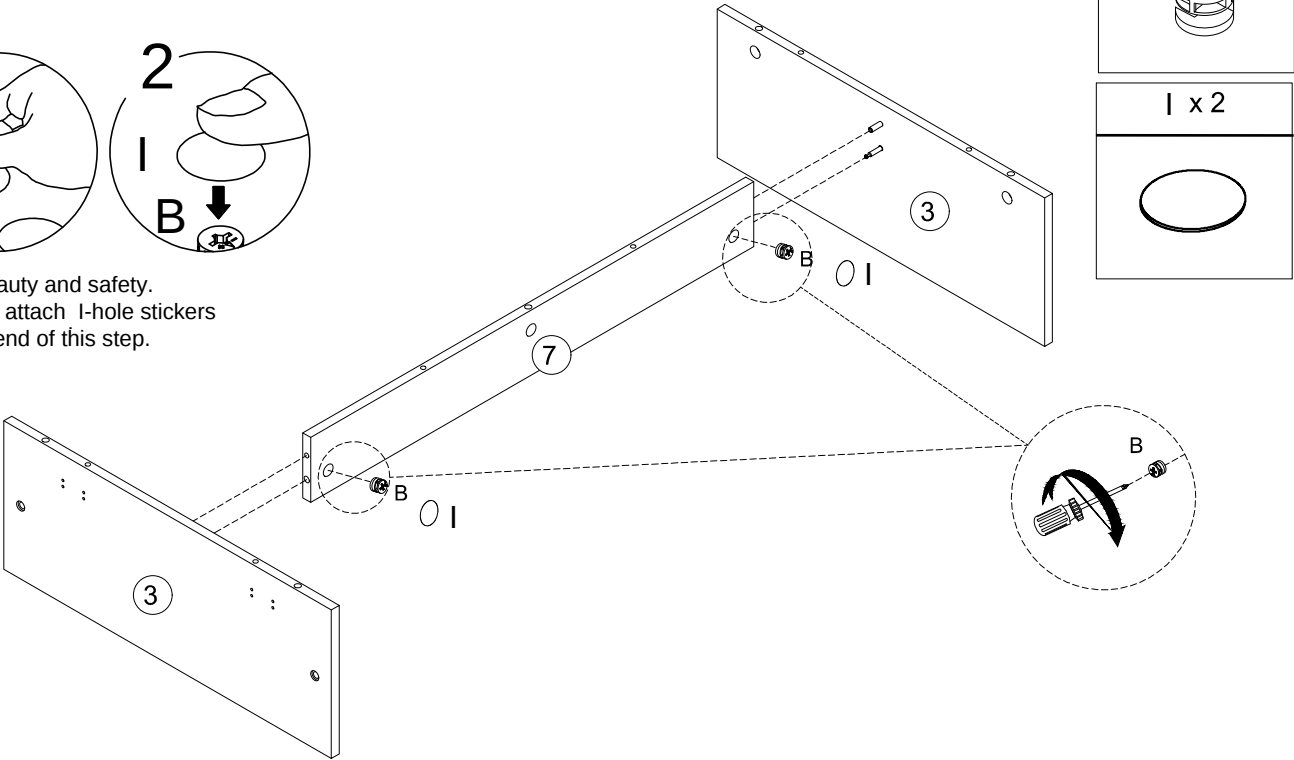

Step 3

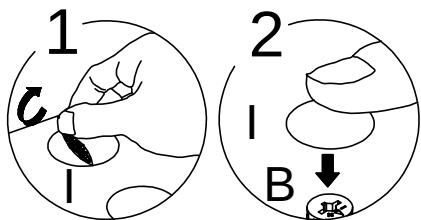


For beauty and safety.
Please attach I-hole stickers
at the end of this step.

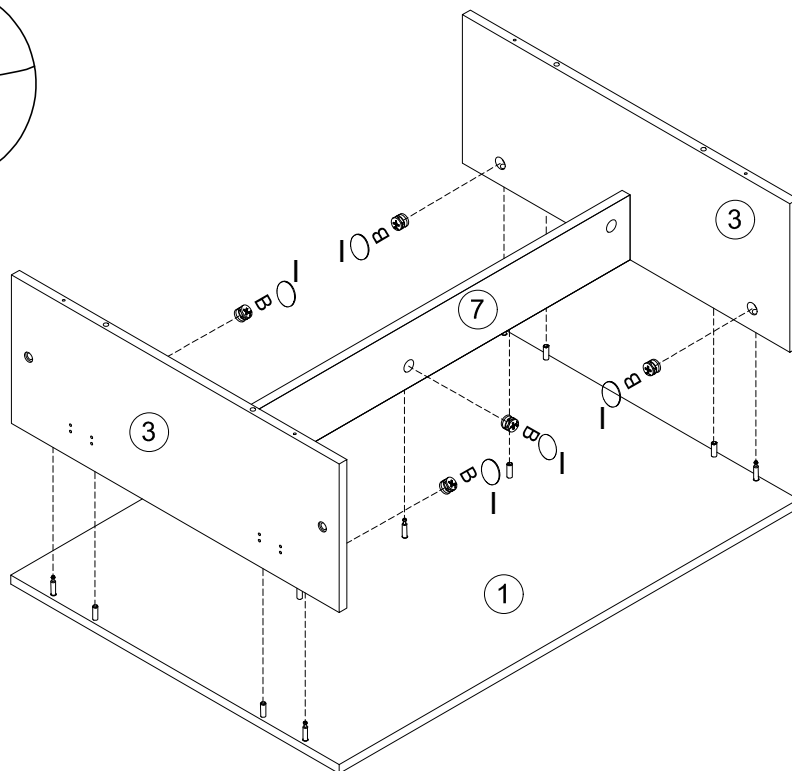

B x 5



I x 5


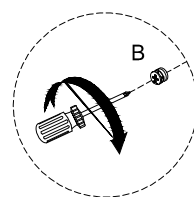


Step 4

A x 16




B x 8

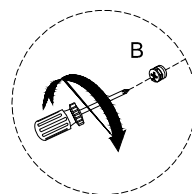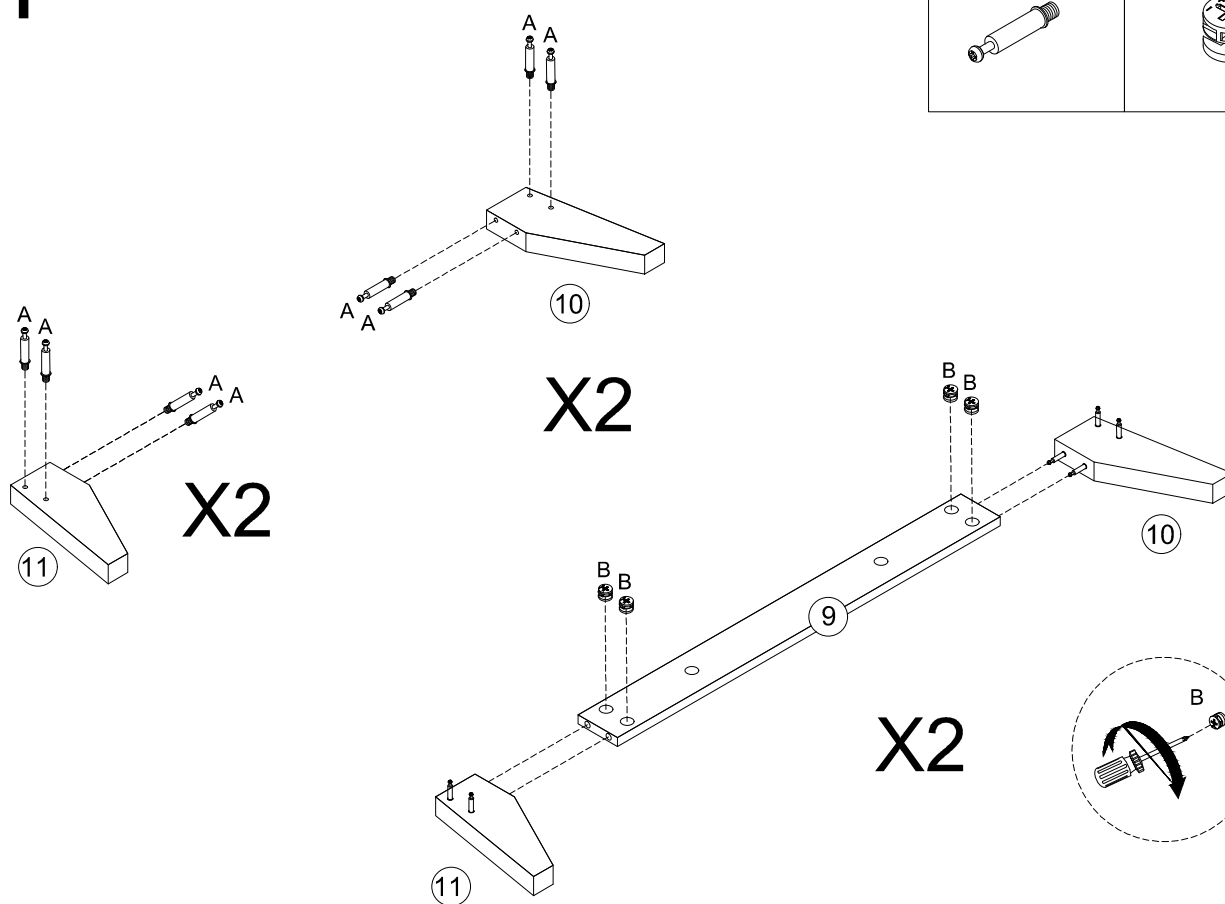


Step 5

B x 8

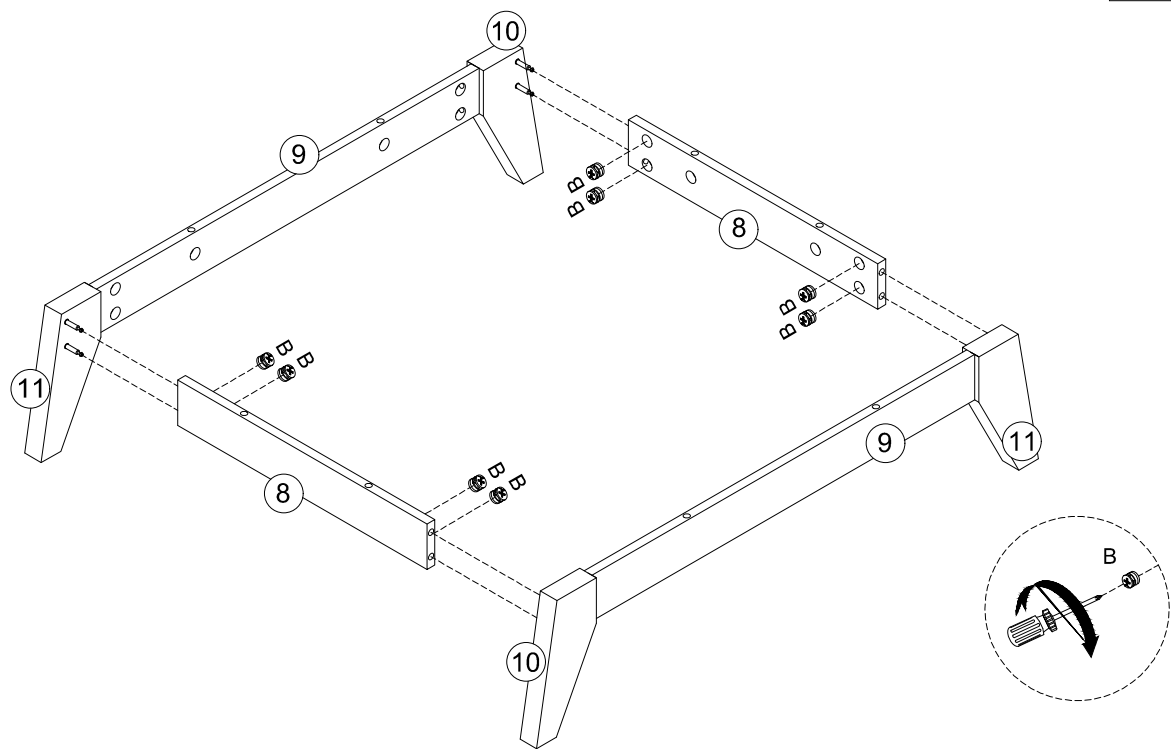
Step 6

A x 10	C x 2
	

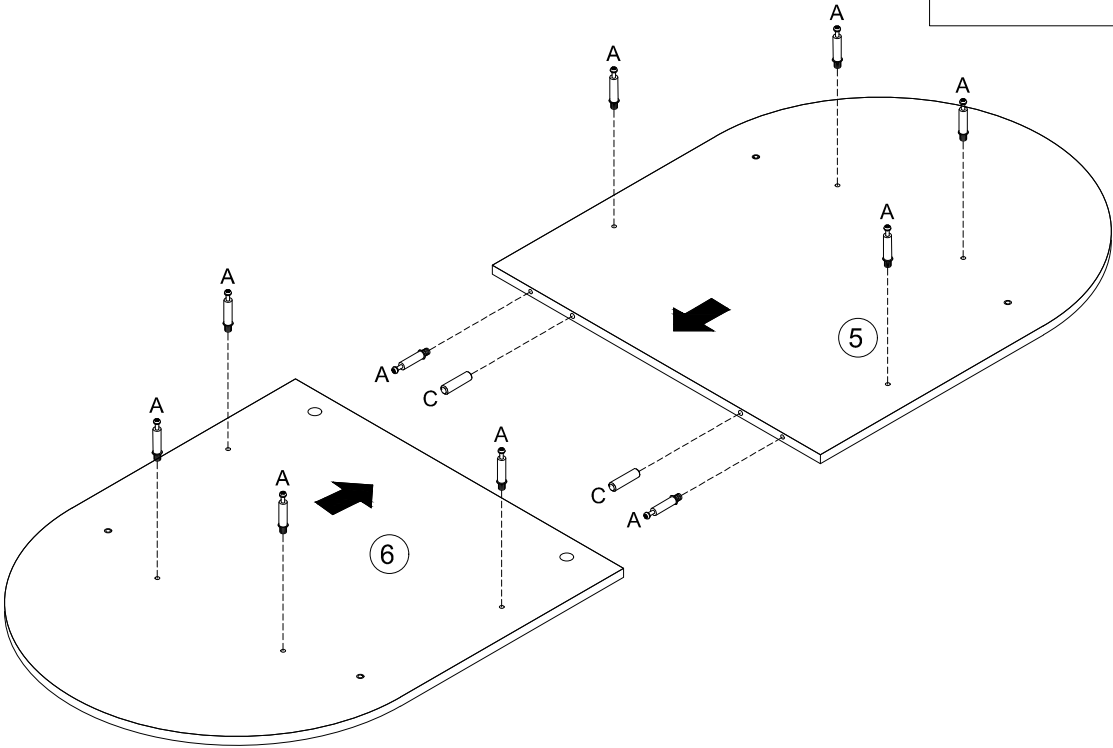



Step 7

B x 2

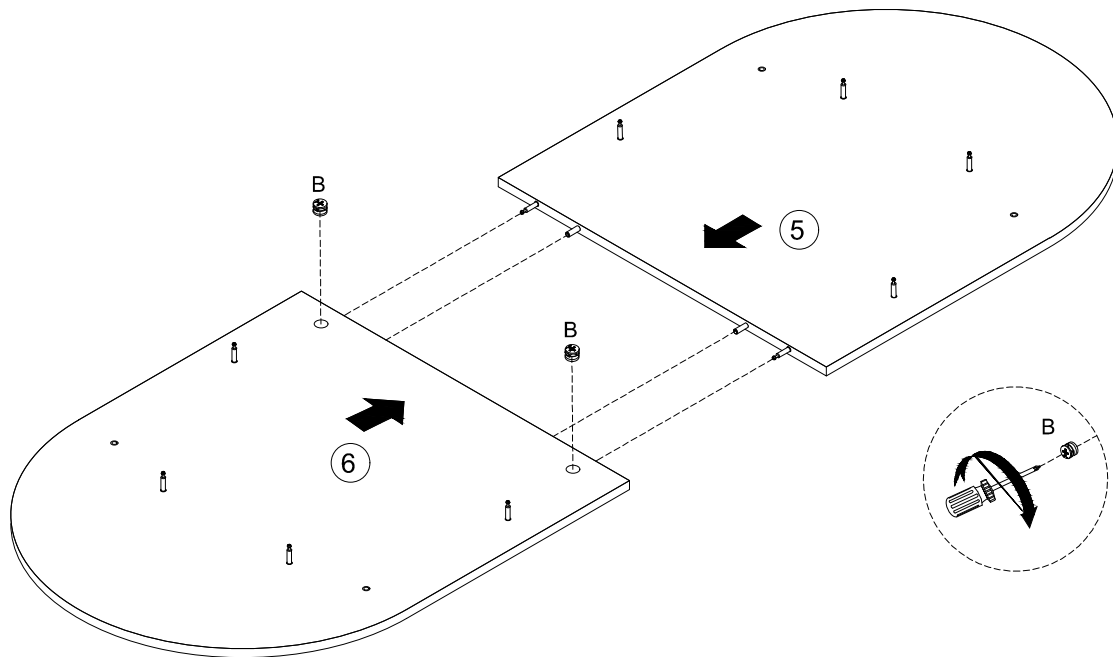



Step 8

J x 4	B x 8
	

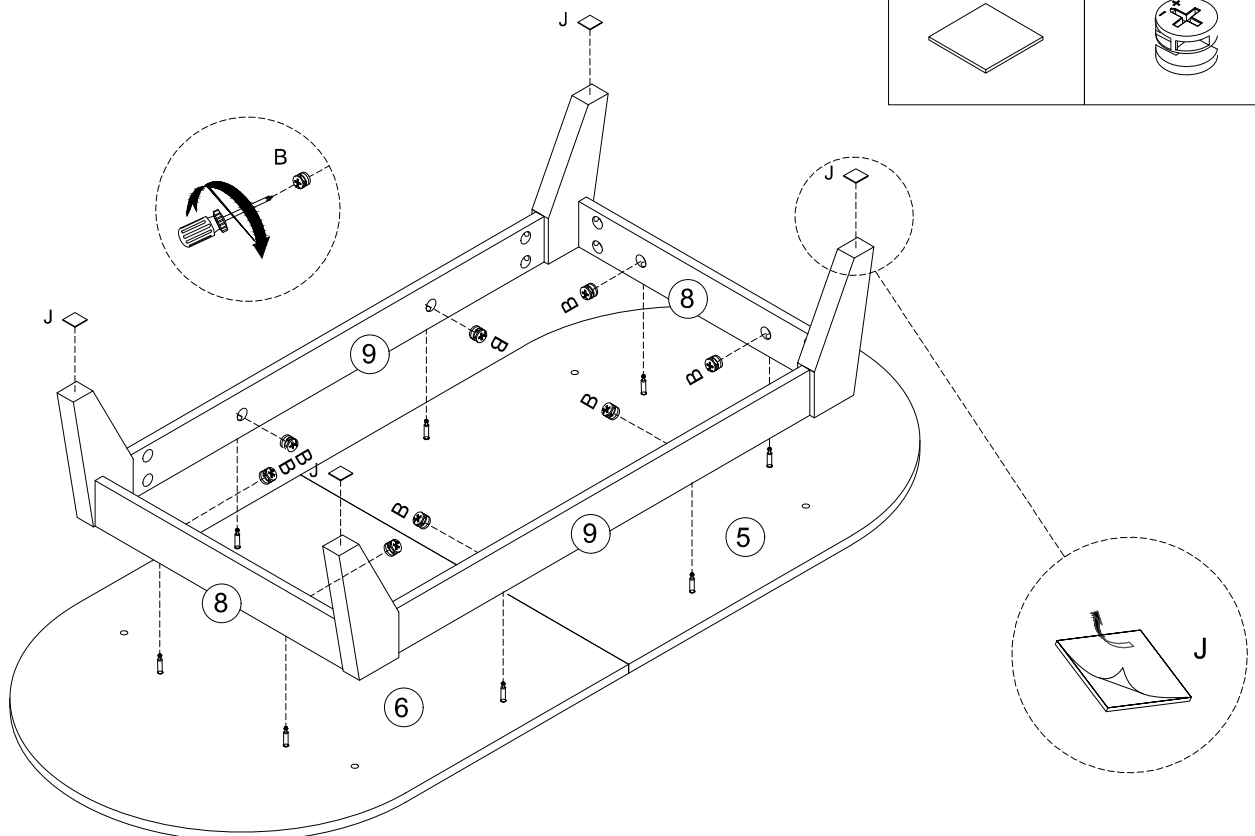


Step 9

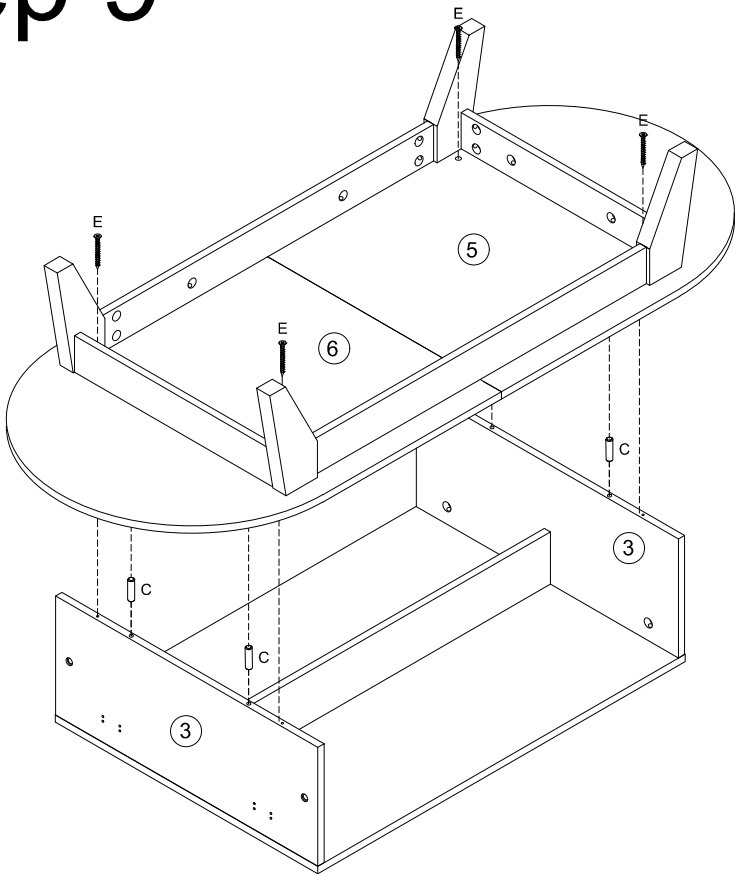


C x 4	E x 4

Step 10

Please note
The side with the flocked
fabric should face outwards.

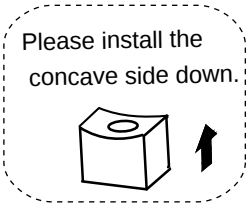


X2

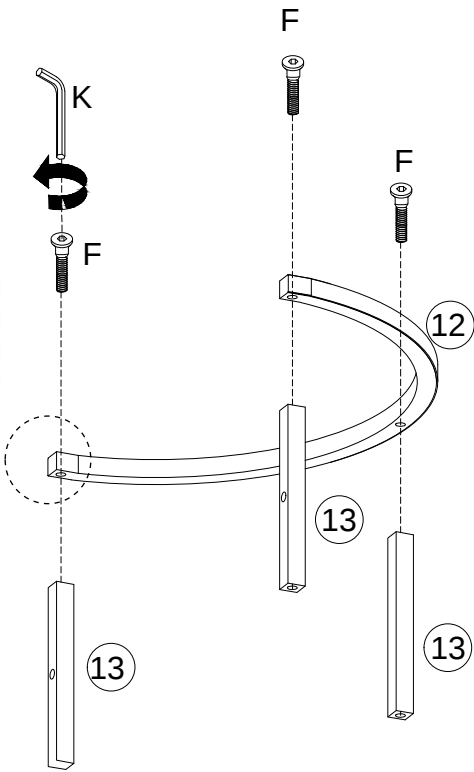


F x 6
K x 1




Step 11

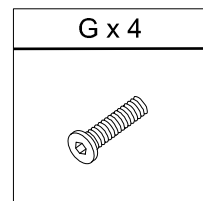

If the screw holes don't line up when installing
You can gently apply force to adjust parts 12 and 13
to align with the screw holes for installation.

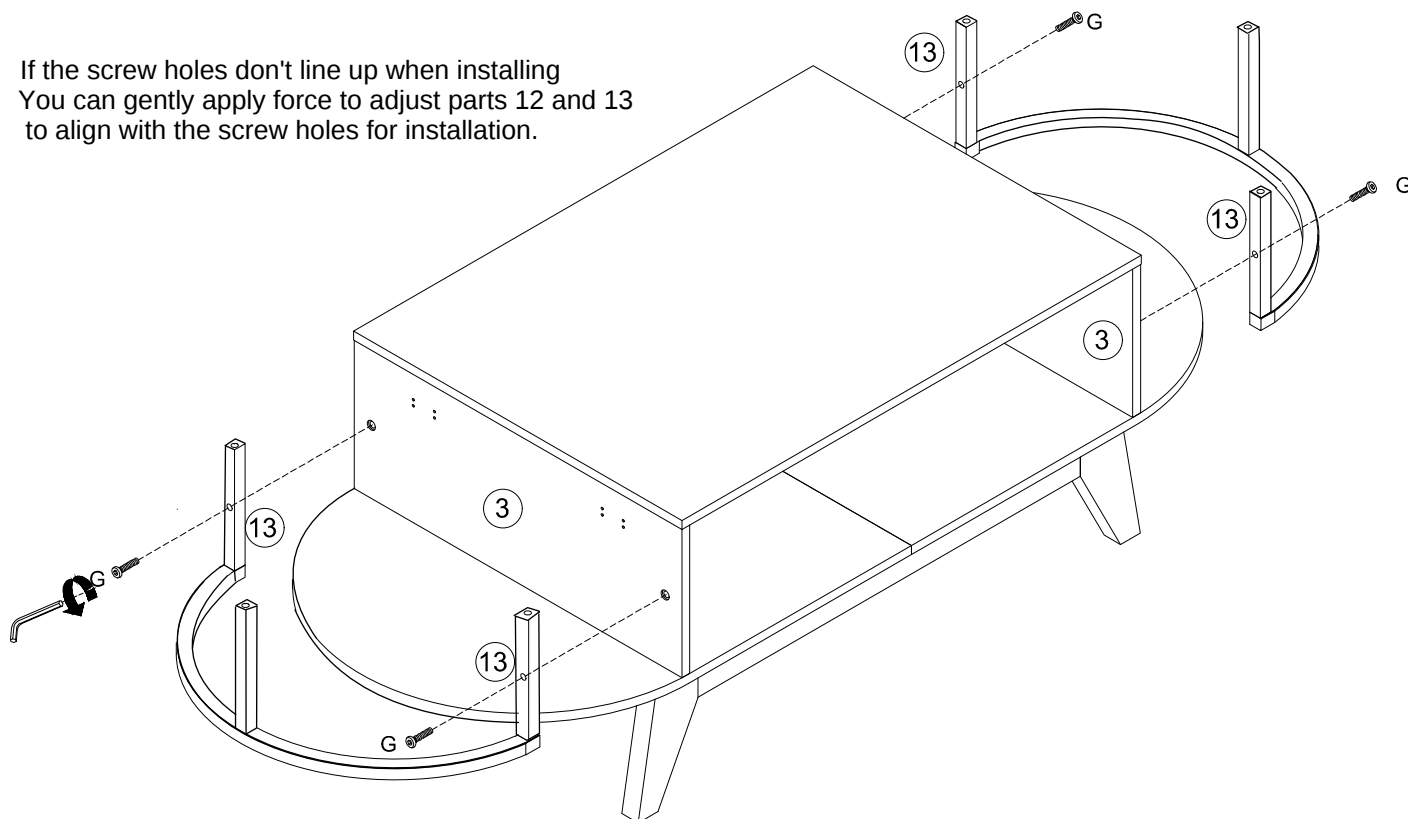

Step 12

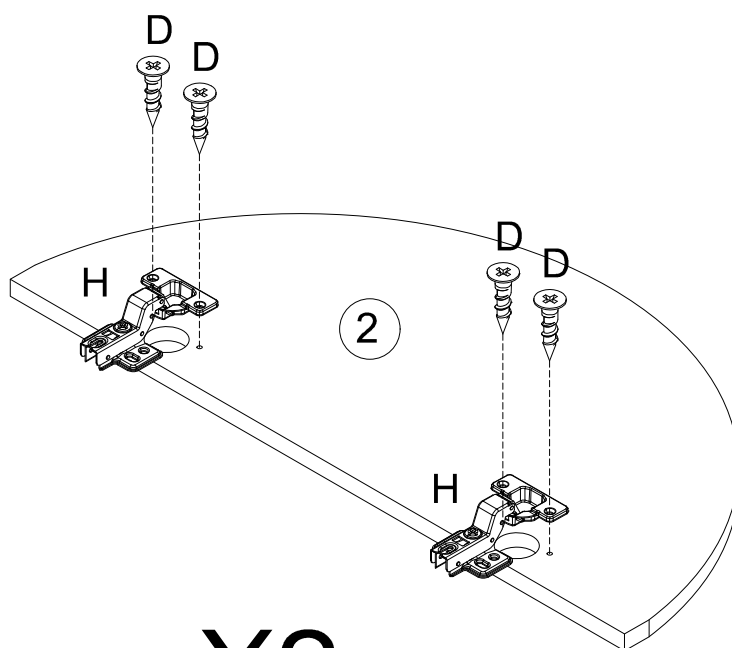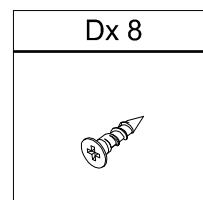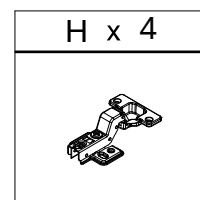


X2


Step 13

If the screw holes don't line up when installing
You can gently apply force to adjust parts 12 and 13
to align with the screw holes for installation.

F x 6






Please install the
concave side upwards.

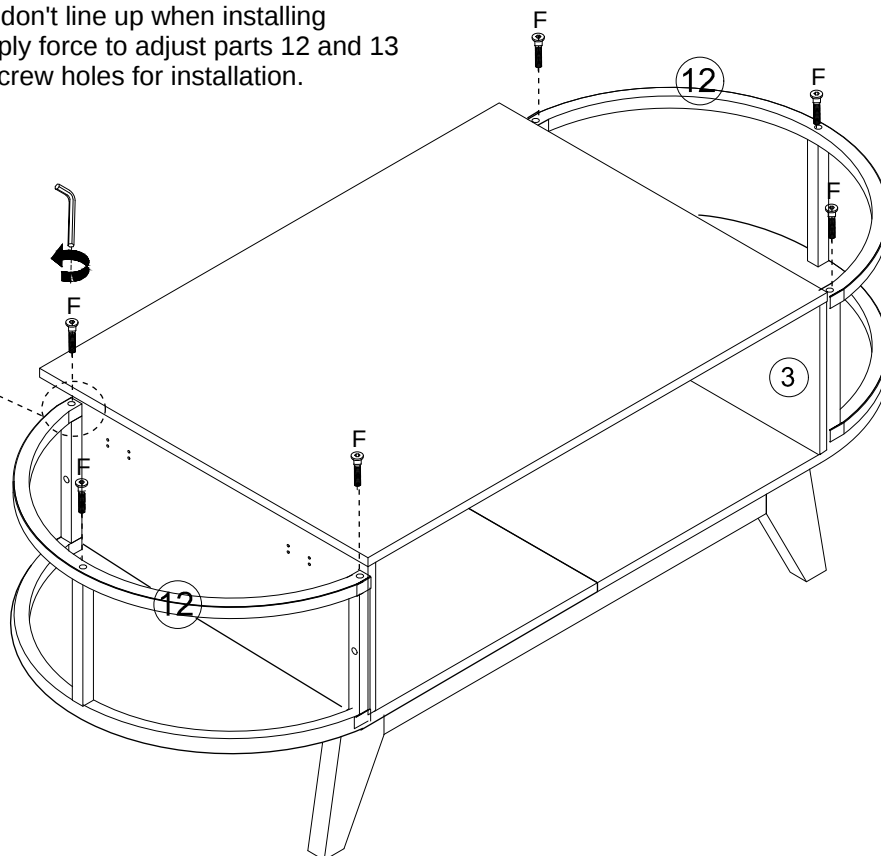


Step 14

Dx16

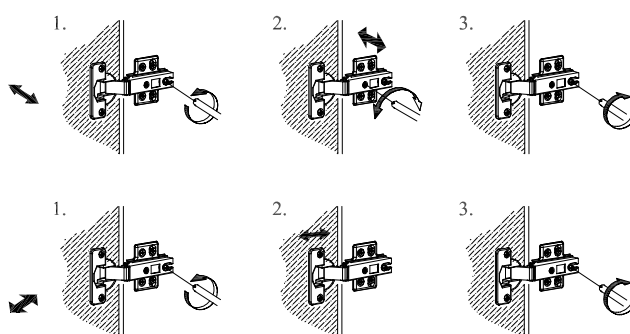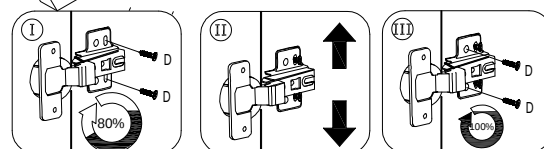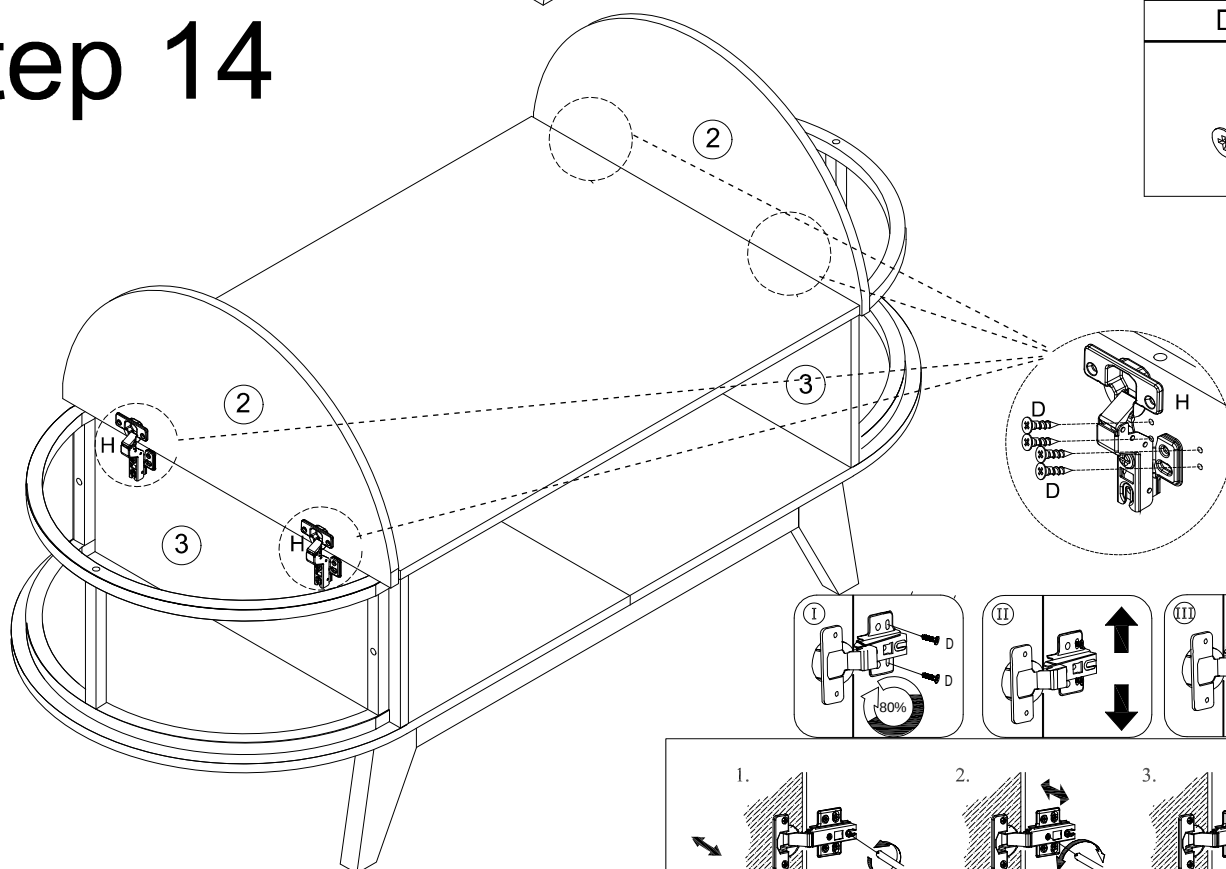


Step 15

Please install the part 4 from left to right.

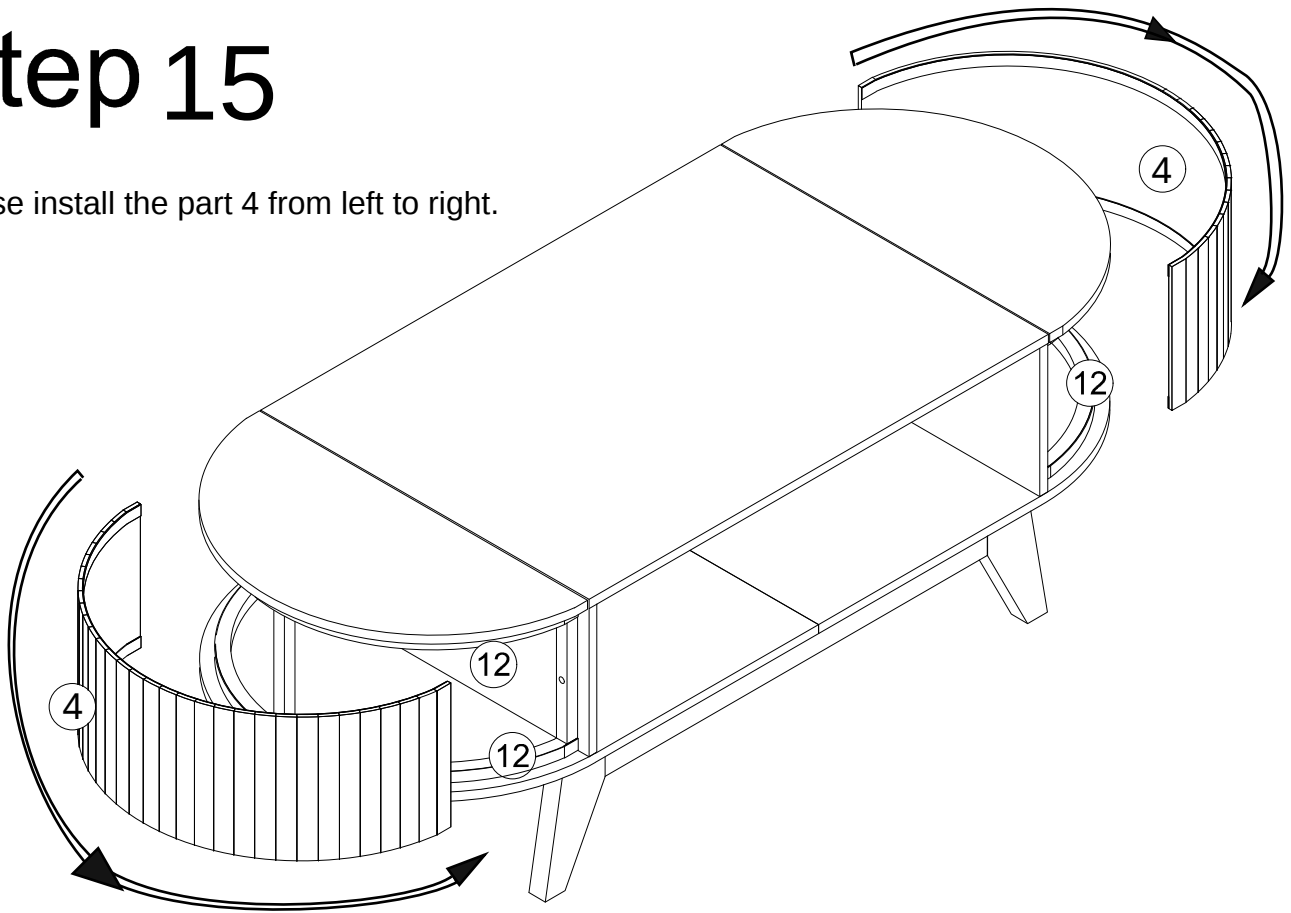

Step 16

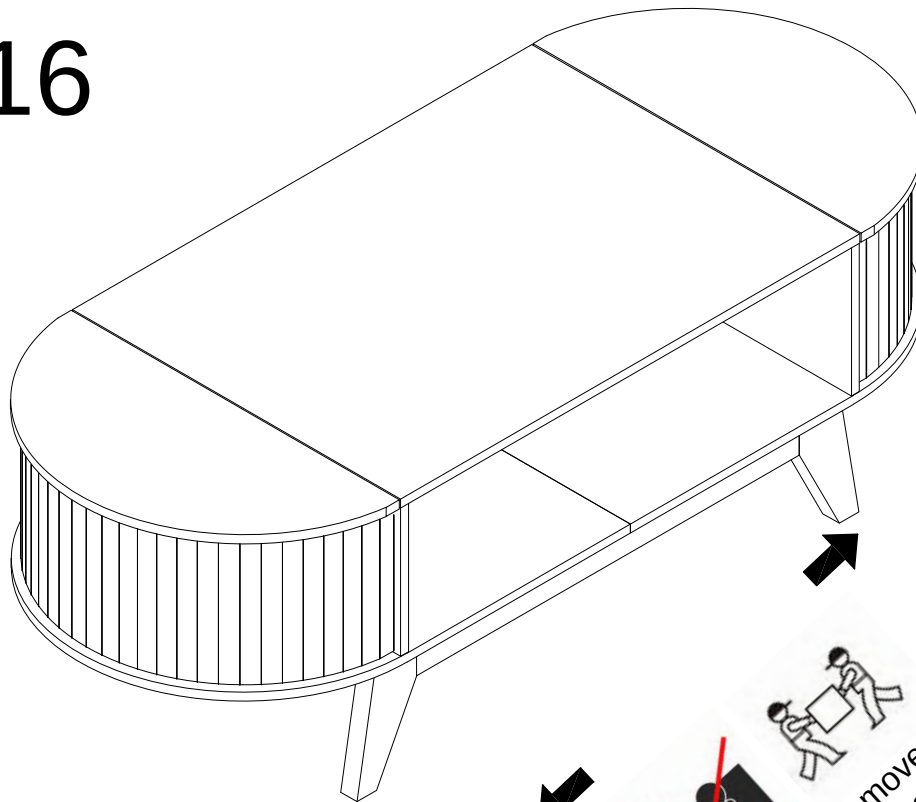

Two people work together to move the table.
Make sure you lift it off the ground.
Don't push and pull.