## HOW TO HANG YOUR Frameless MIRROR!!

Chrome Oval




Antique Gold




Clear



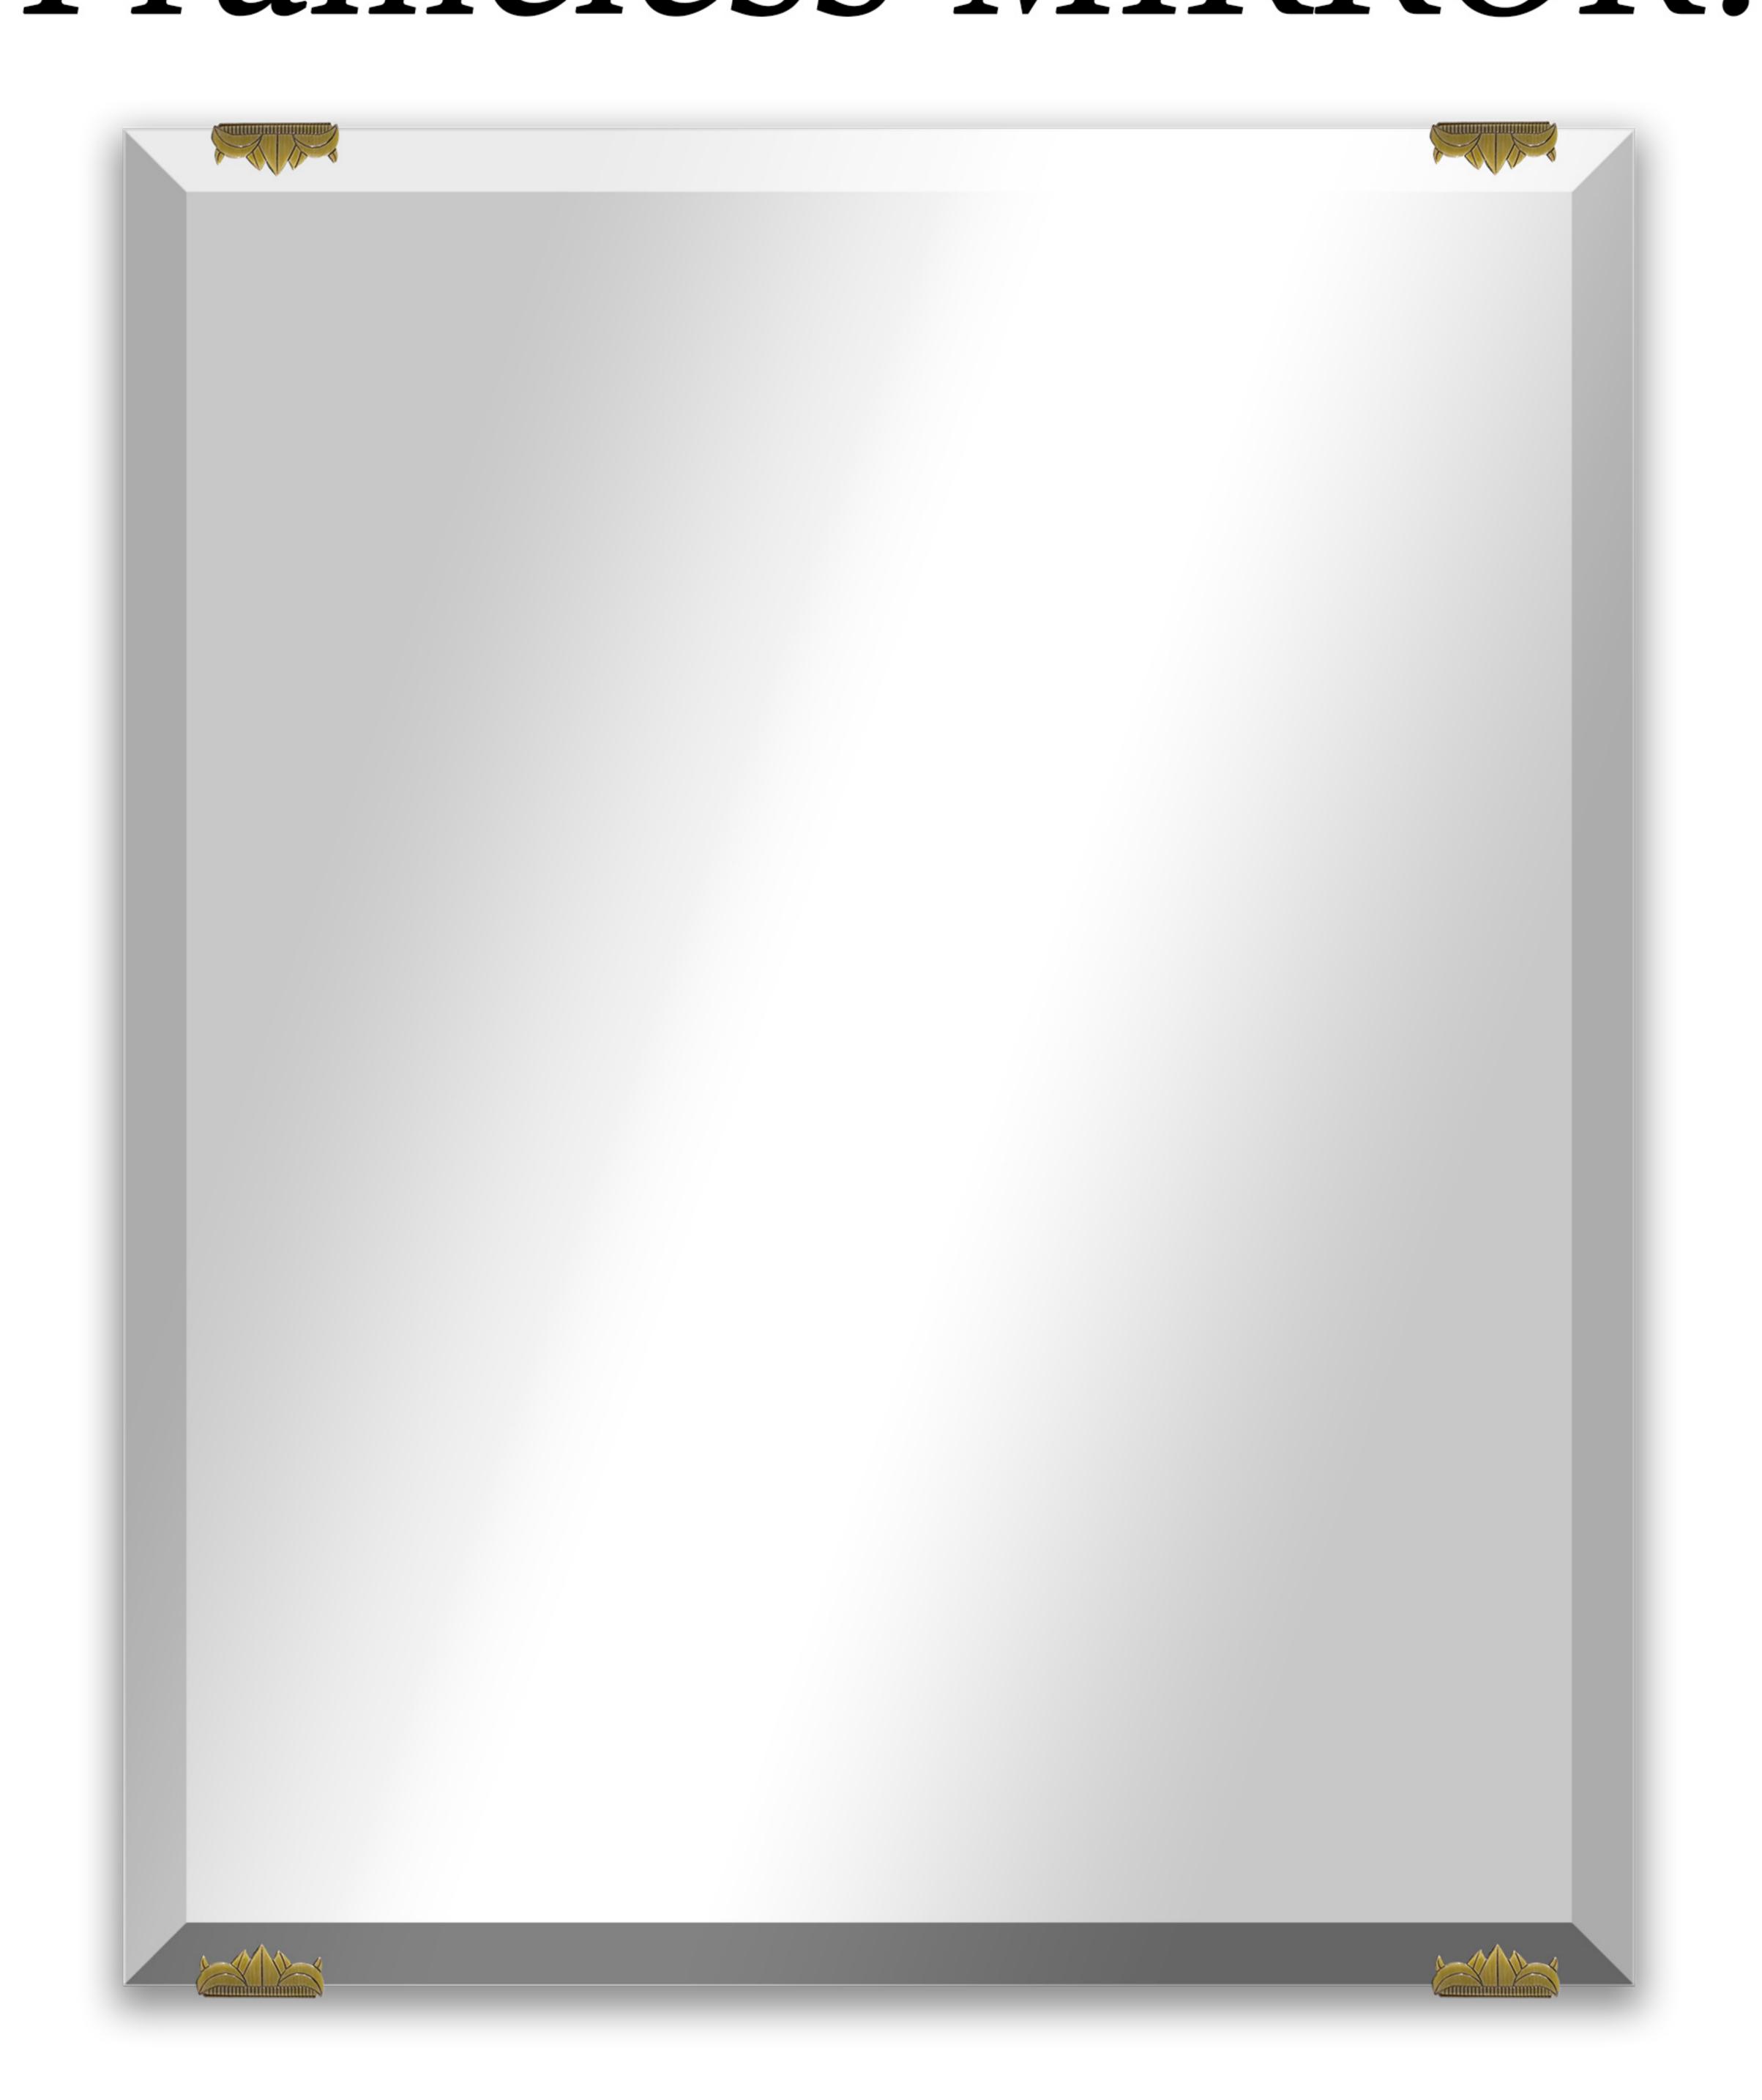


Chrome Square

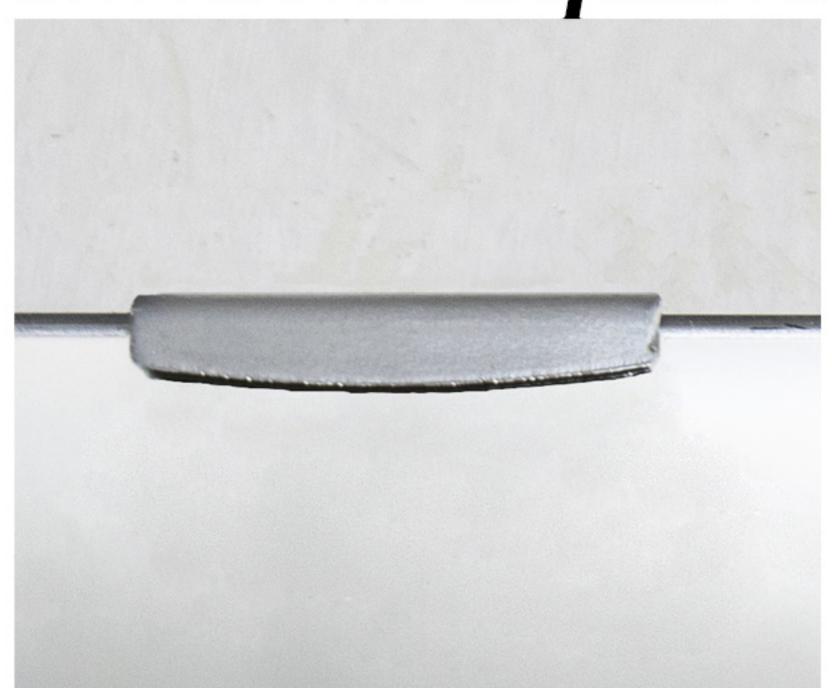

Brass Round



Chrome Round

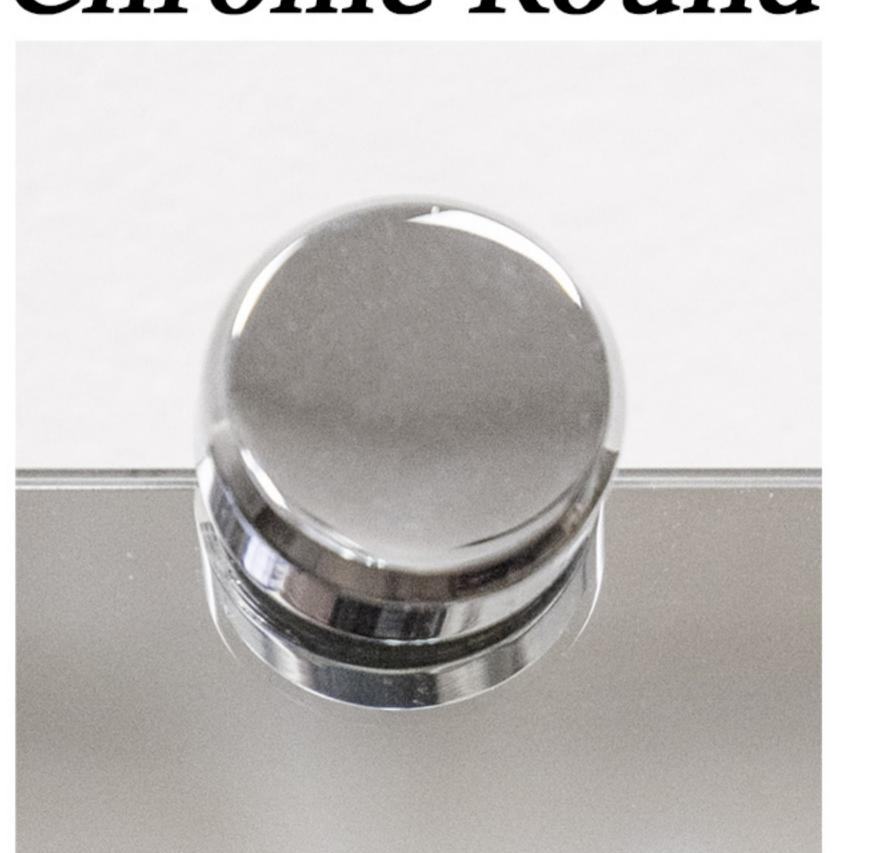

## Included With Your Mirror:

4 Decorative Brackets

## Tools needed for installation:

Drill
Phillips Bit
3/16" Drill Bit
Level
Hammer
Tape Measure



<sup>\*</sup>This process is the same for both Square and Round frameless mirrors\*


Step 1: Remove the packaged hardware.



Step 2: Locate where you would like to hang your mirror.

Step 3: With help, hold your mirror on the wall. Place a level along the bottom make sure it is straight and make a mark with a pencil on the top & bottom where you want the brackets to go.



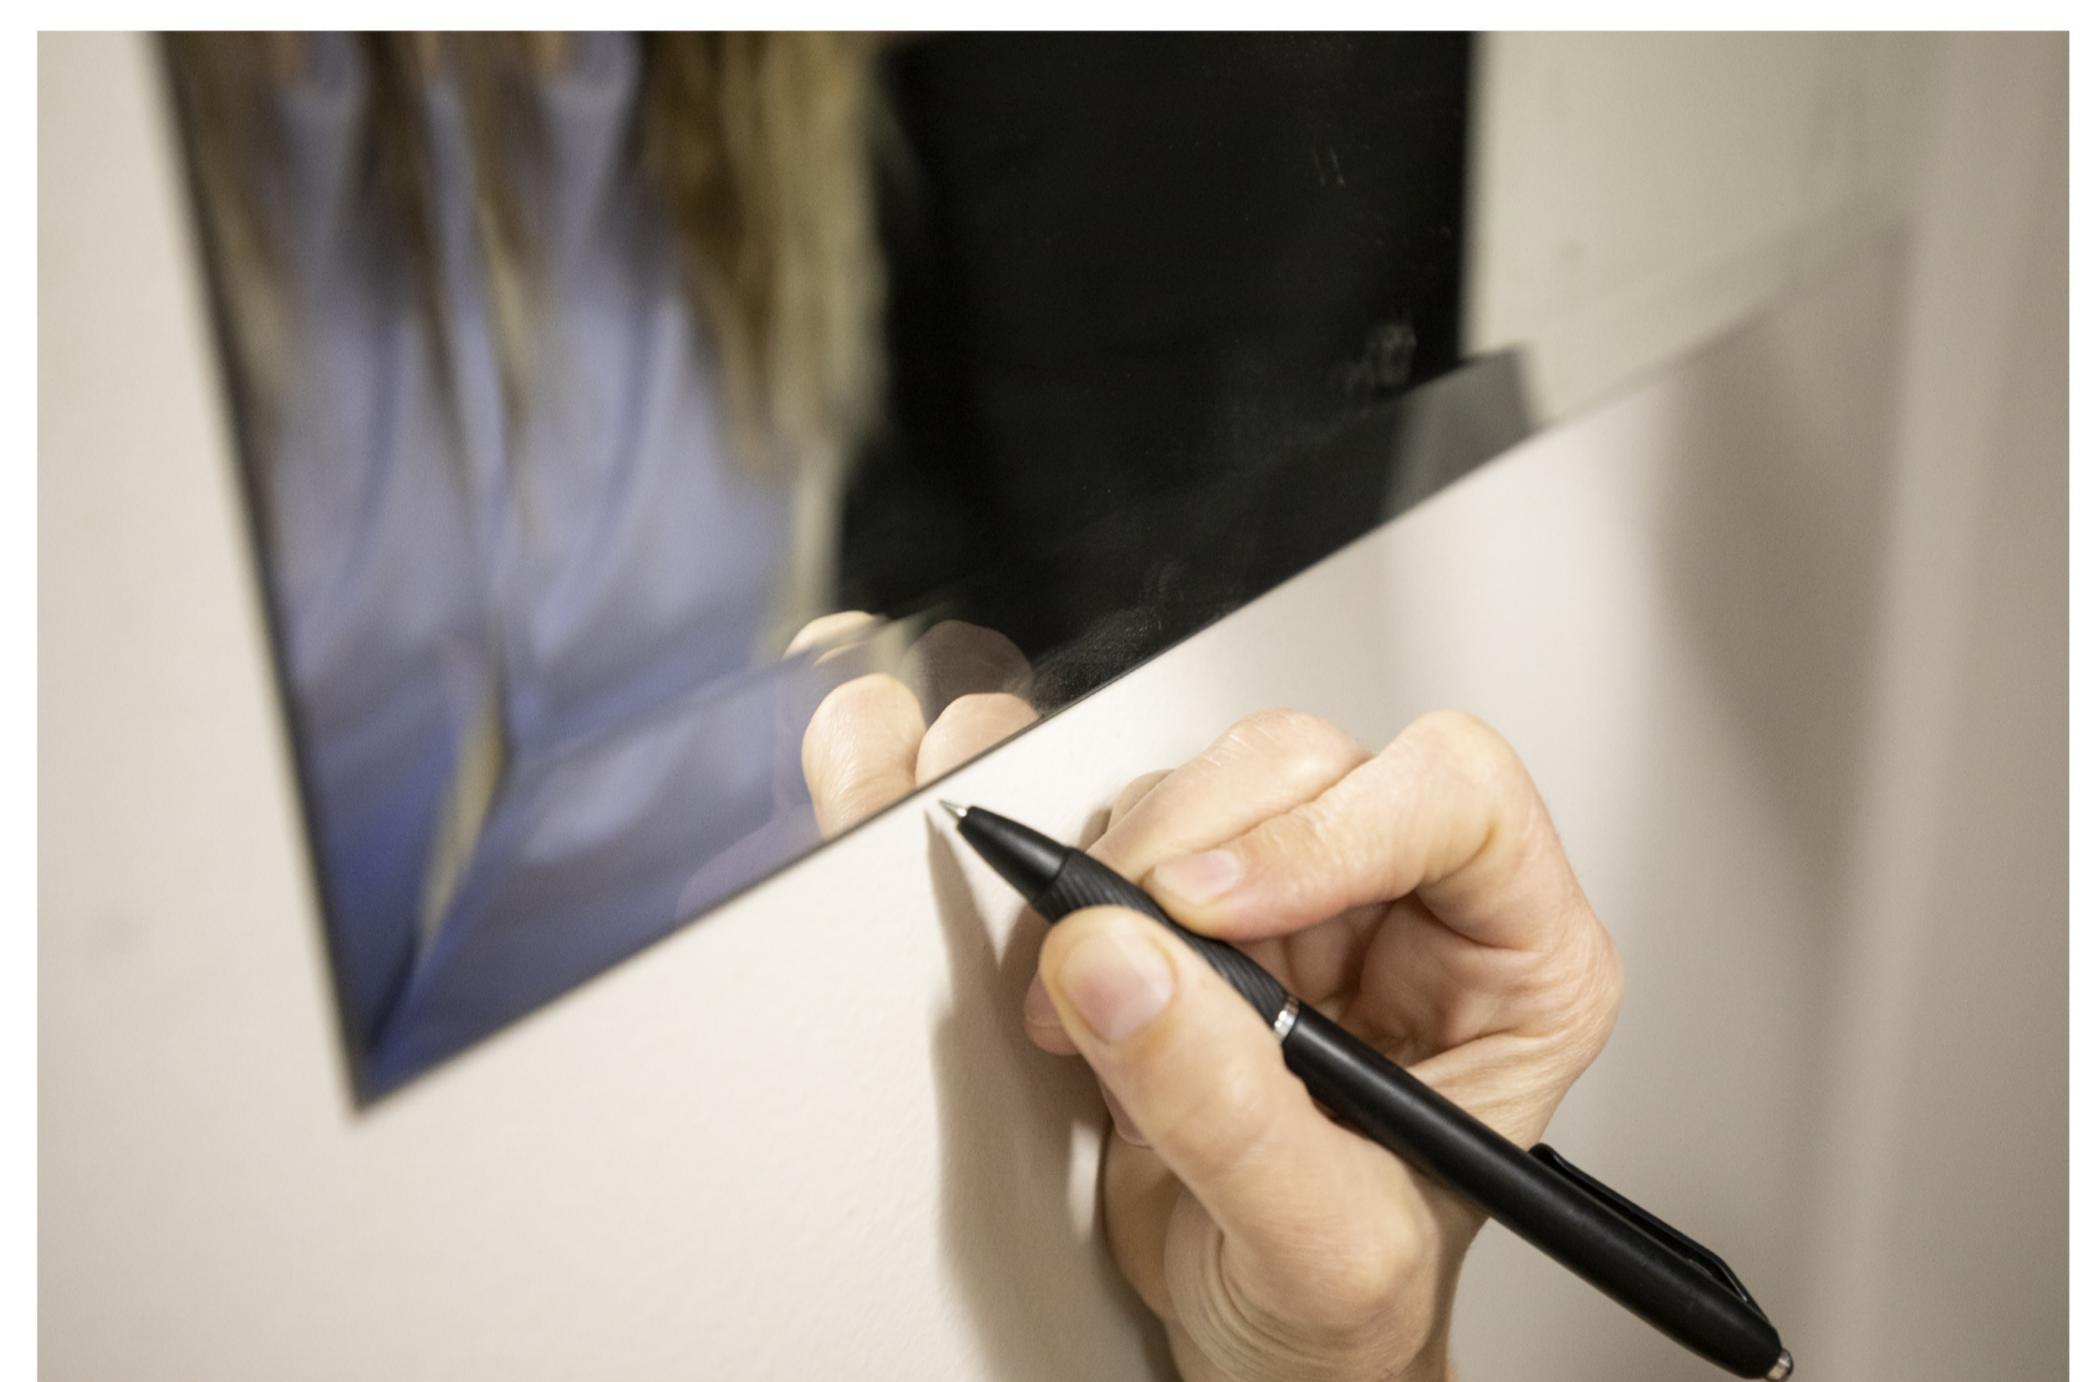


Step 4: Using a level, be sure your marks are in a straight line.




Step 5: Place the edge of the bracket at the bottom of the mark you made & mark the hole where the screw goes.

\*This step will vary depending on the type of bracket you purchased.\*

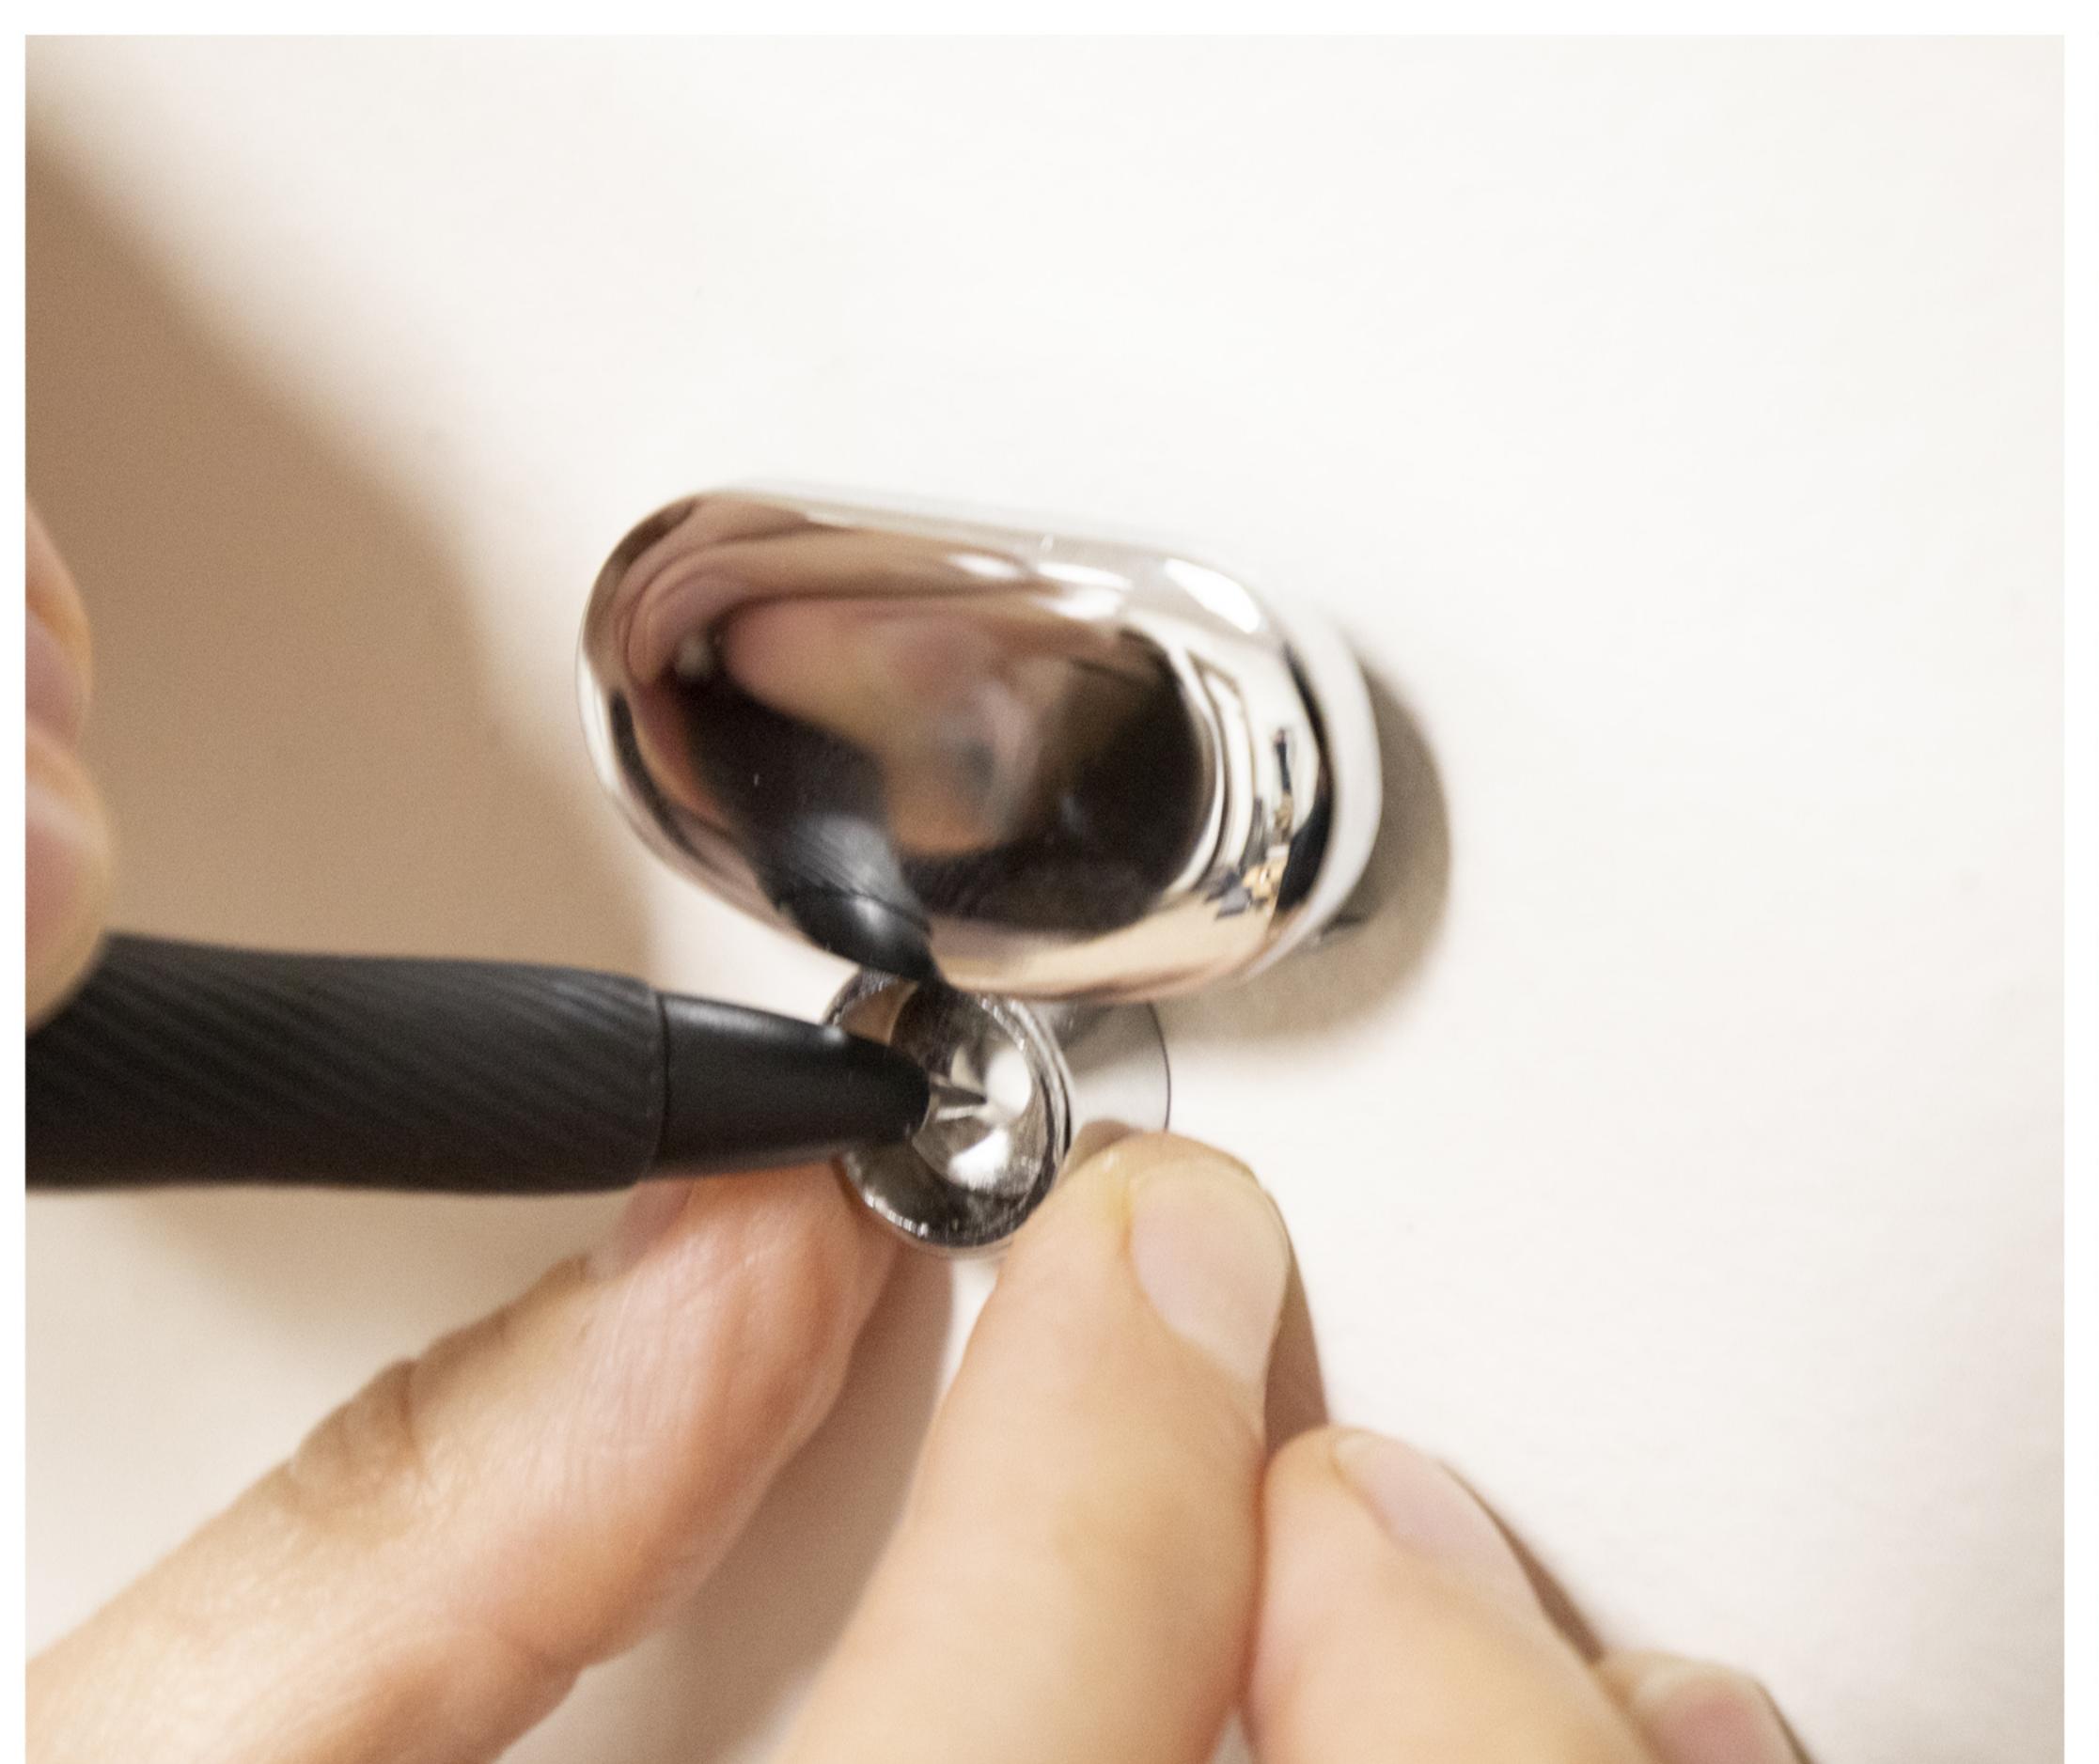



\*Antique Gold & Chrome Square go behind the mirror so the outside edge goes where your mark was made\*

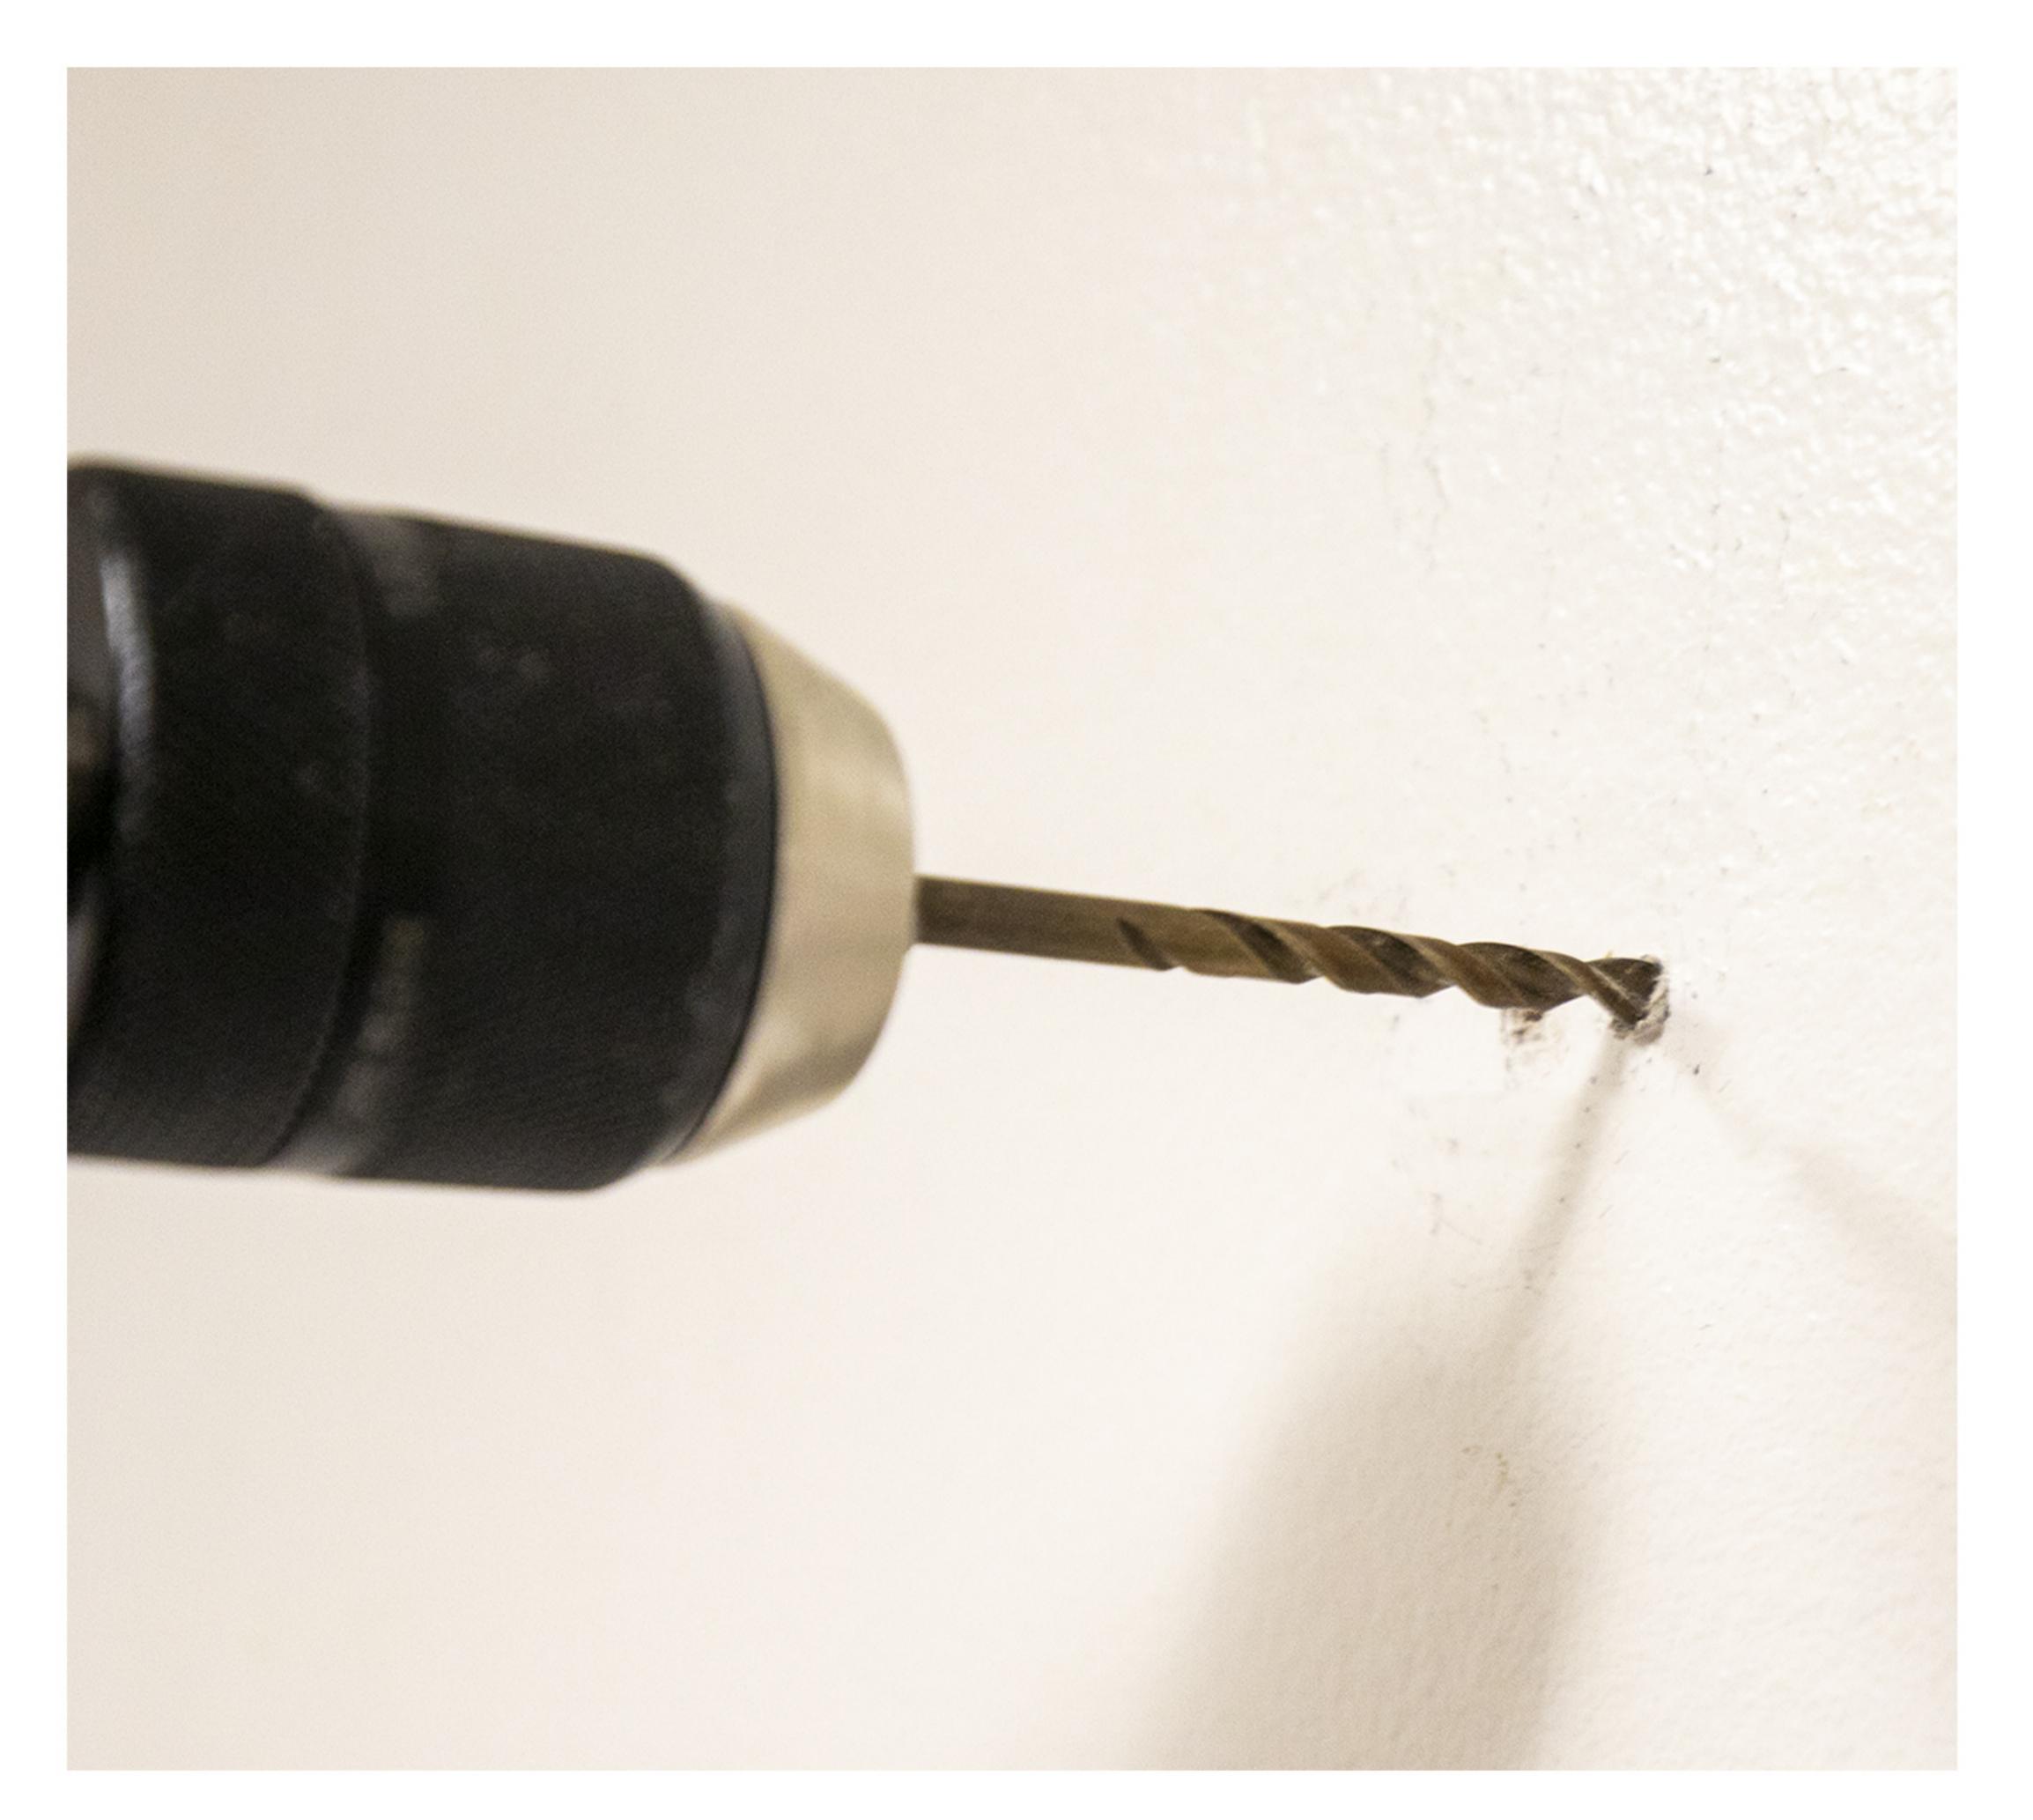


Step 6: Using a drill and 3/16" bit, drill holes where you marked in step 5.

Step 7: Use a hammer and gently tap the anchors into the holes you drilled.



Step 8: Using a drill with a phillips head bit and the screws provided, fasten the bottom brackets to the wall.

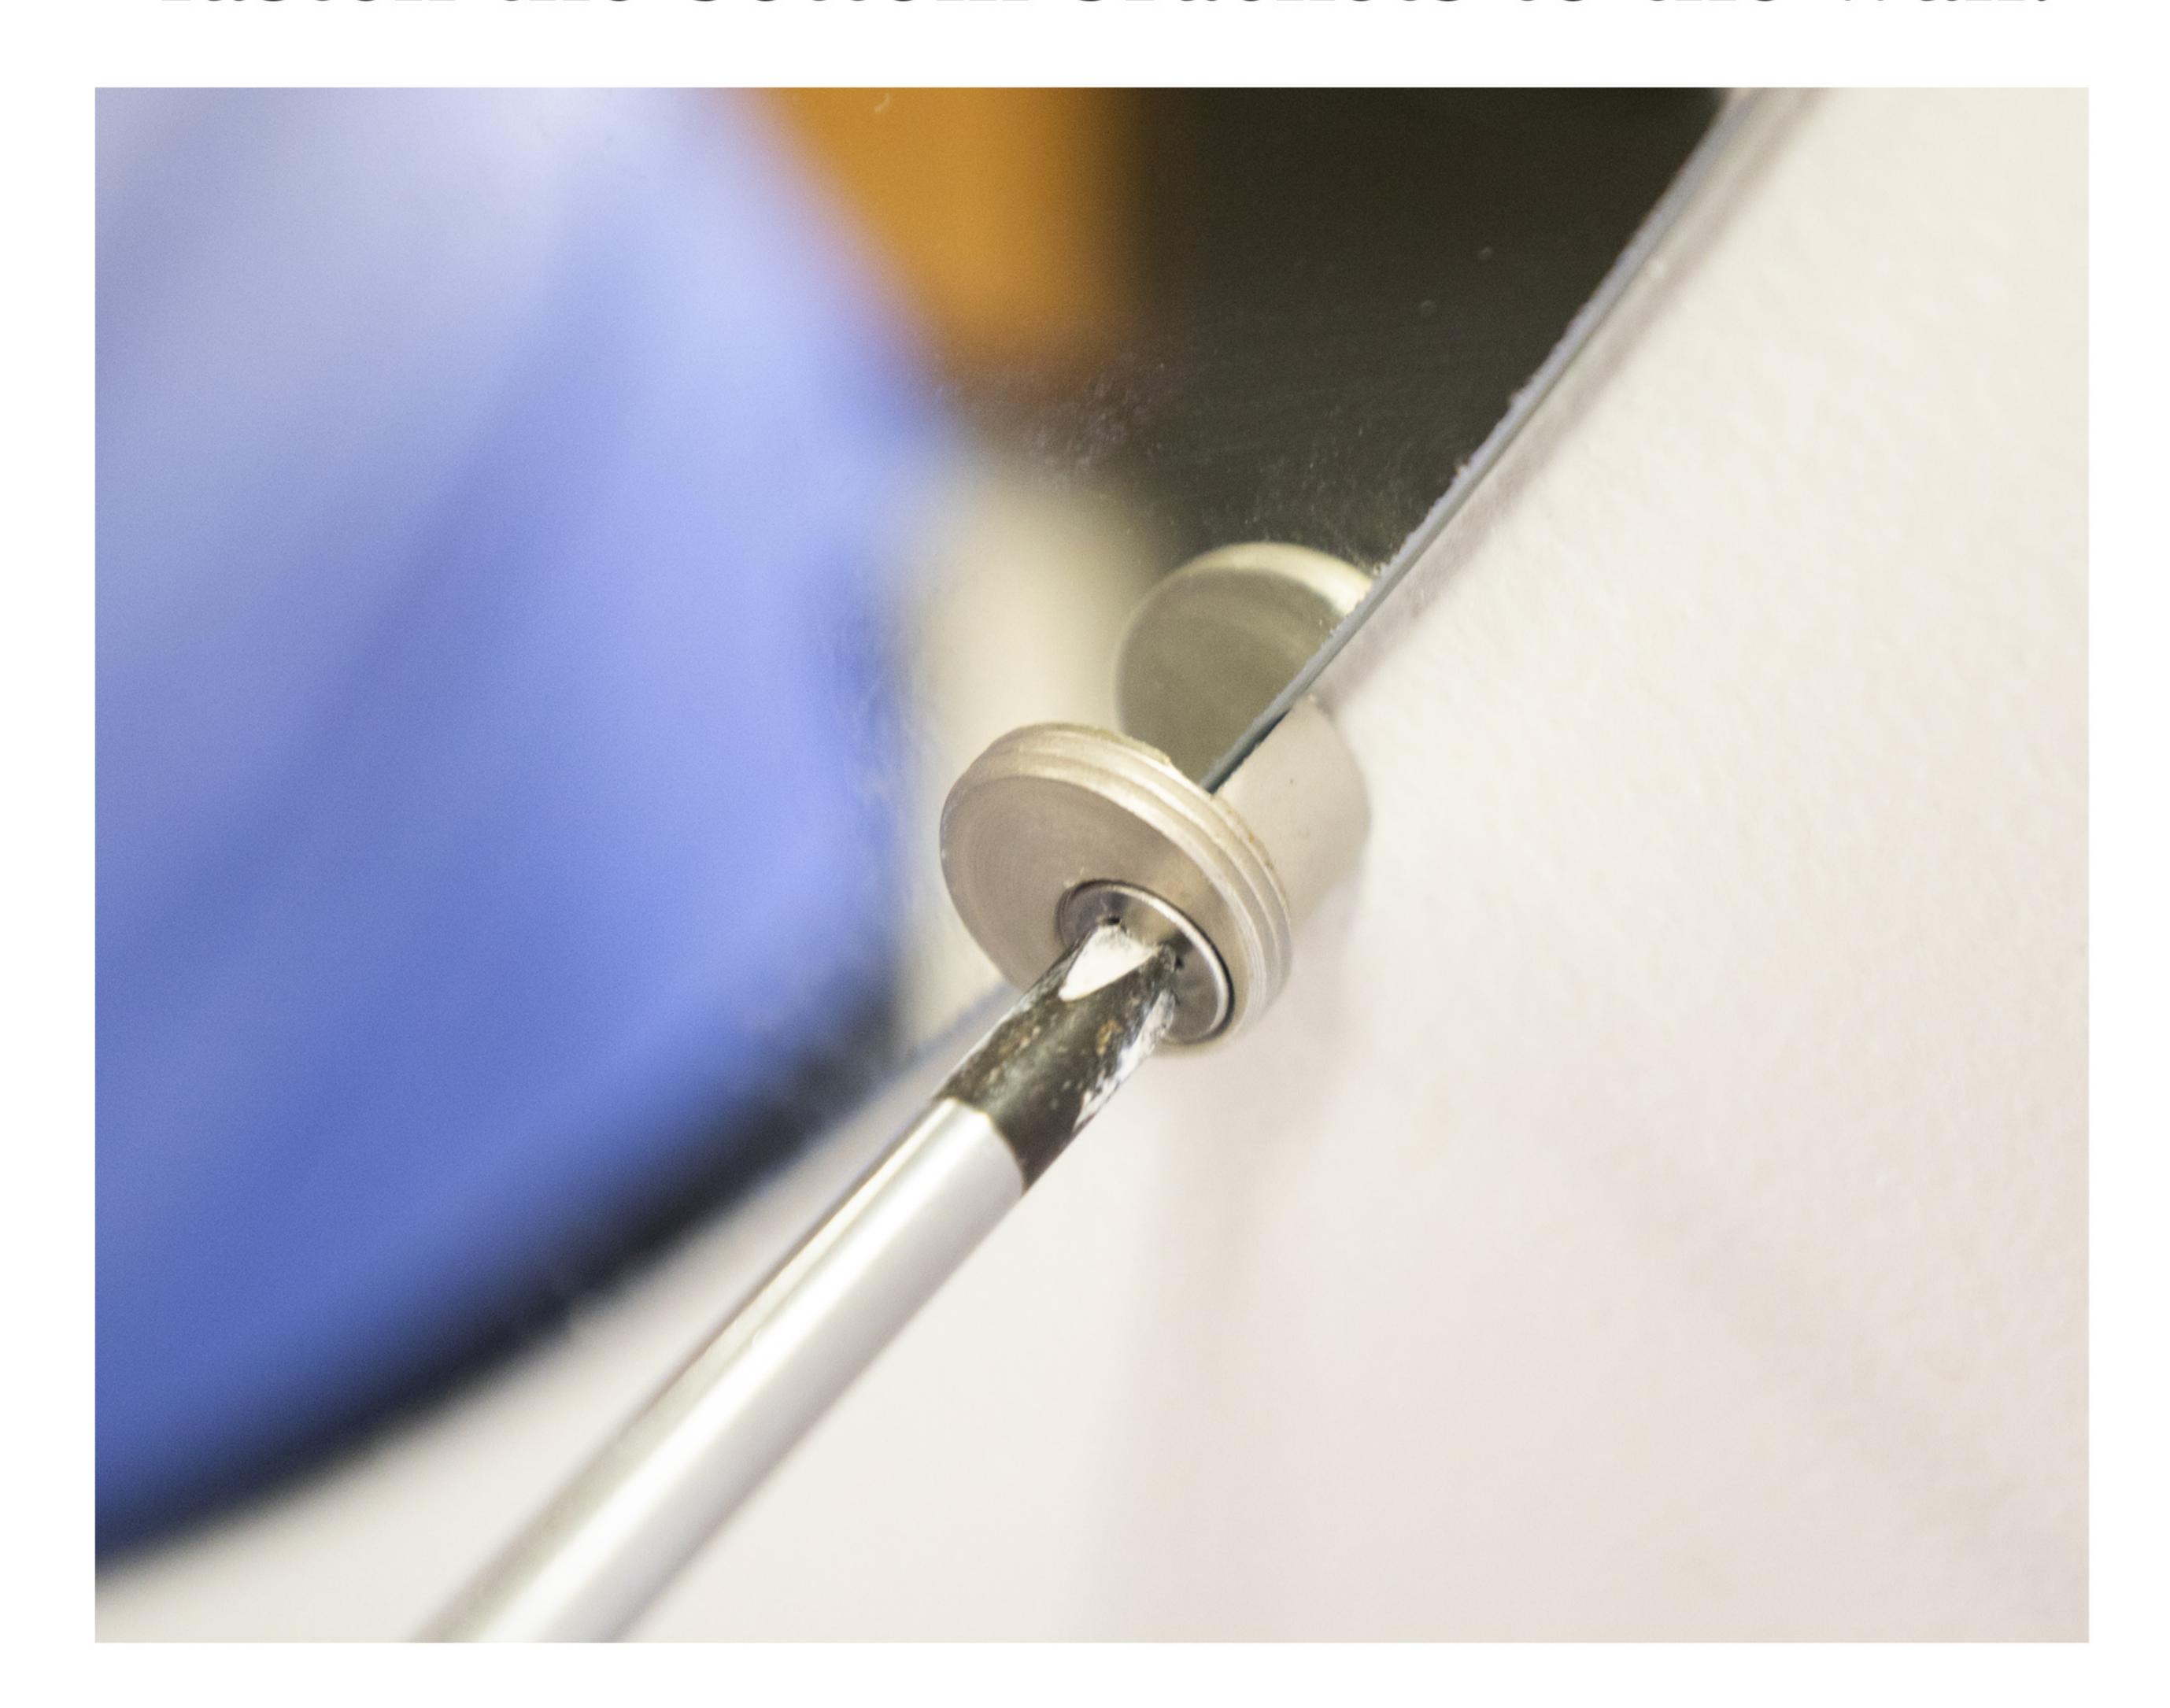

Step 9: With help, place the mirror onto the bottom brackets and fasten the top brackets just like in step 8.

\*For the Chrome Square application two of the brackets are spring loaded and should installed on the top of the mirror\*

\*For the Antique Gold appliction you should leave the top brackets slightly loose so the bracket can slide back over the top of the mirror.\*

Your Installation Is Complete!