


Cabinet

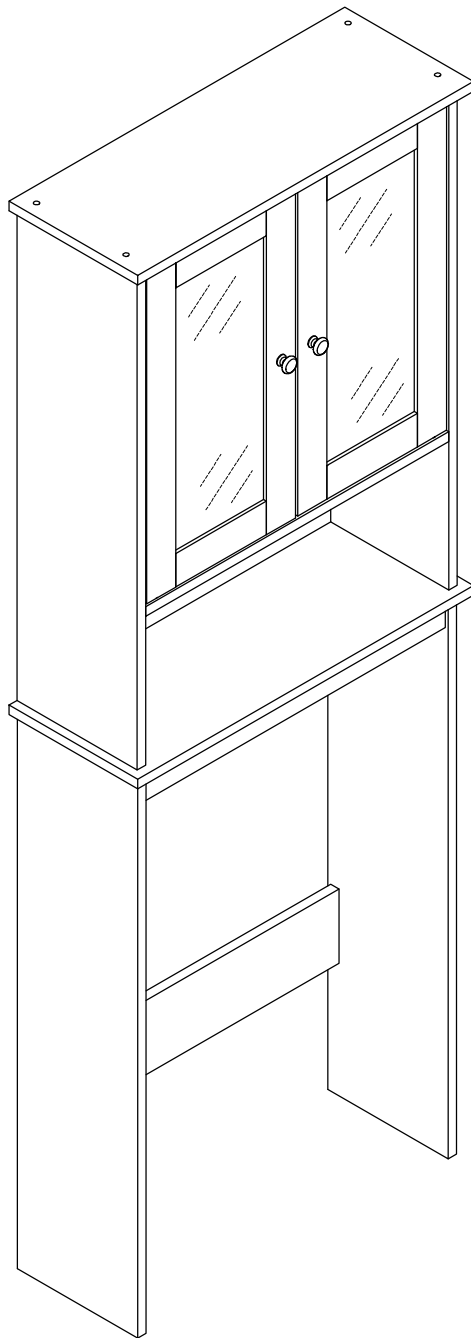

Instruction Manual

Thank you for shopping with us!

We appreciate your purchase and are ready to be at your service!

Be sure to check all the parts are included according to the instructions.














Some of the hardware are small and may be hidden somewhere in the box or under the big parts.

If you find them missing, we appreciate you can check again.












Issues like parts missing, parts damaged or assembly difficulties, please contact us for efficient assistance.

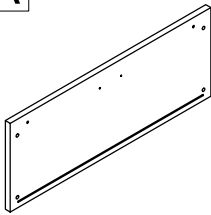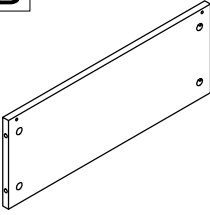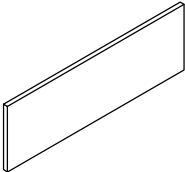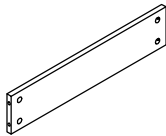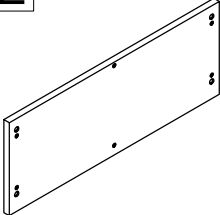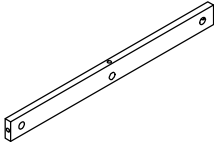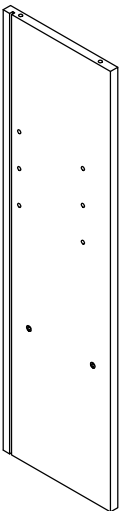Email: \


PART LIST

A 	B 	C 	D 	E 
Top Panel 1 PC	Fixed Shelf Panel 1 PC	Adjustable Shelf 1 PC	Back Bottom Rail 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	
Top Rail 2 PCS	Back Panel 1 PC	Left Door 1 PC	Right Door 1 PC	
J 	K 	L 	M 	
Upper Left Panel 1 PC	Upper Right Panel 1 PC	Lower Left Panel 1 PC	Lower Right Panel 1 PC	

HARDWARE LIST
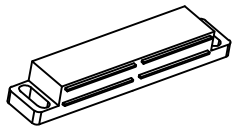
#1		#2		#3		#4		#5	
	Ø7*38mm		30*22*1mm				Ø6*35mm		Ø15*9mm
	Screw		Door Small Plate		Back Bracket		Cam-bolt		Cam-lock
	8 PCS (Extra 2)		2 PCS		4 PCS		18PCS (Extra 4)		18PCS(Extra 4)
#6		#7		#8		#9		#10	
			M4*22mm		Ø6.5mm		Ø3.5*14mm		70*17*13mm
	Handle		Round Head Bolt		Shelf Holder		Screw		Door Magnet
	2 PCS		2 PCS		4 PCS (Extra 1)		10PCS (Extra 4)		1 PC
#11									
	Safety Strap Kit								
	1 SET								

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required

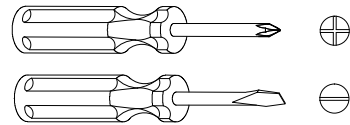


INSERTING AND TIGHTENING CAM-BOLT

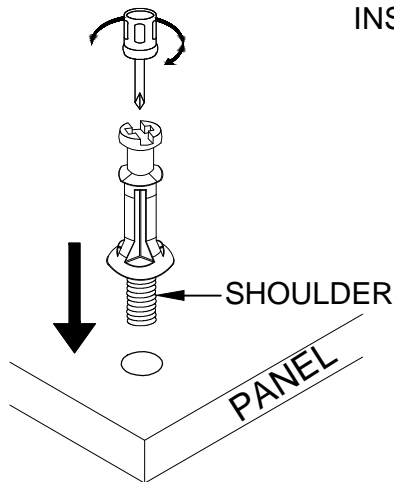

Place Cam-bolt on pre-drilled hole and screw in vertically

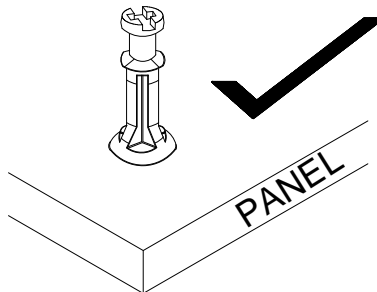


Shoulder is flushed (on the same level) with the panel.

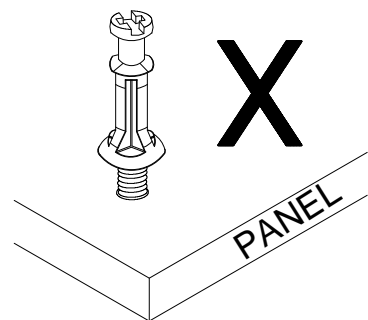


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


INSERTING CAM-LOCK

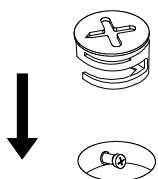

Insert Cam-lock with arrow align to Cam-bolt head

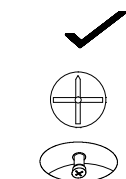


CORRECT

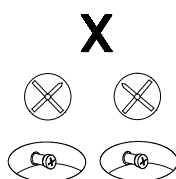

WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK




Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.



Step 1.

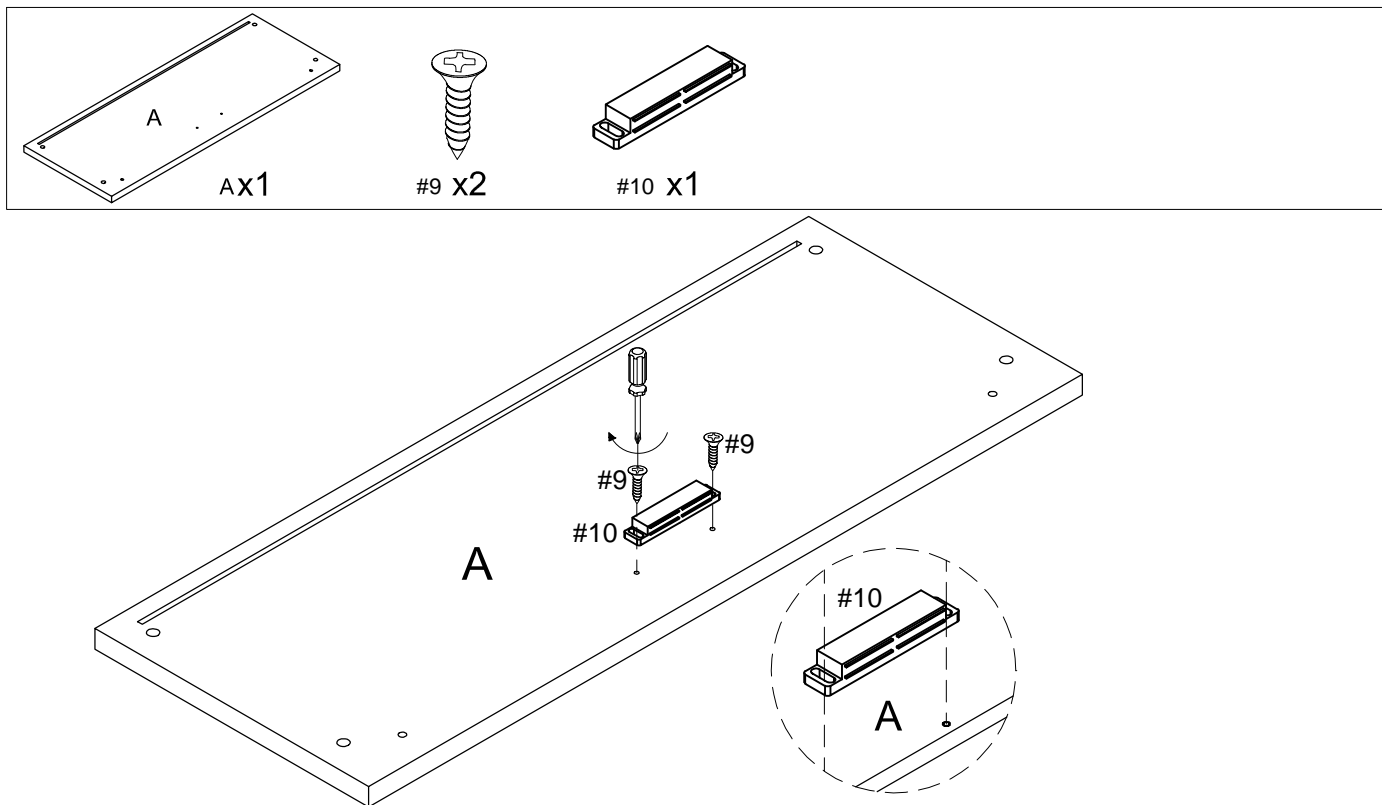



Step 2.

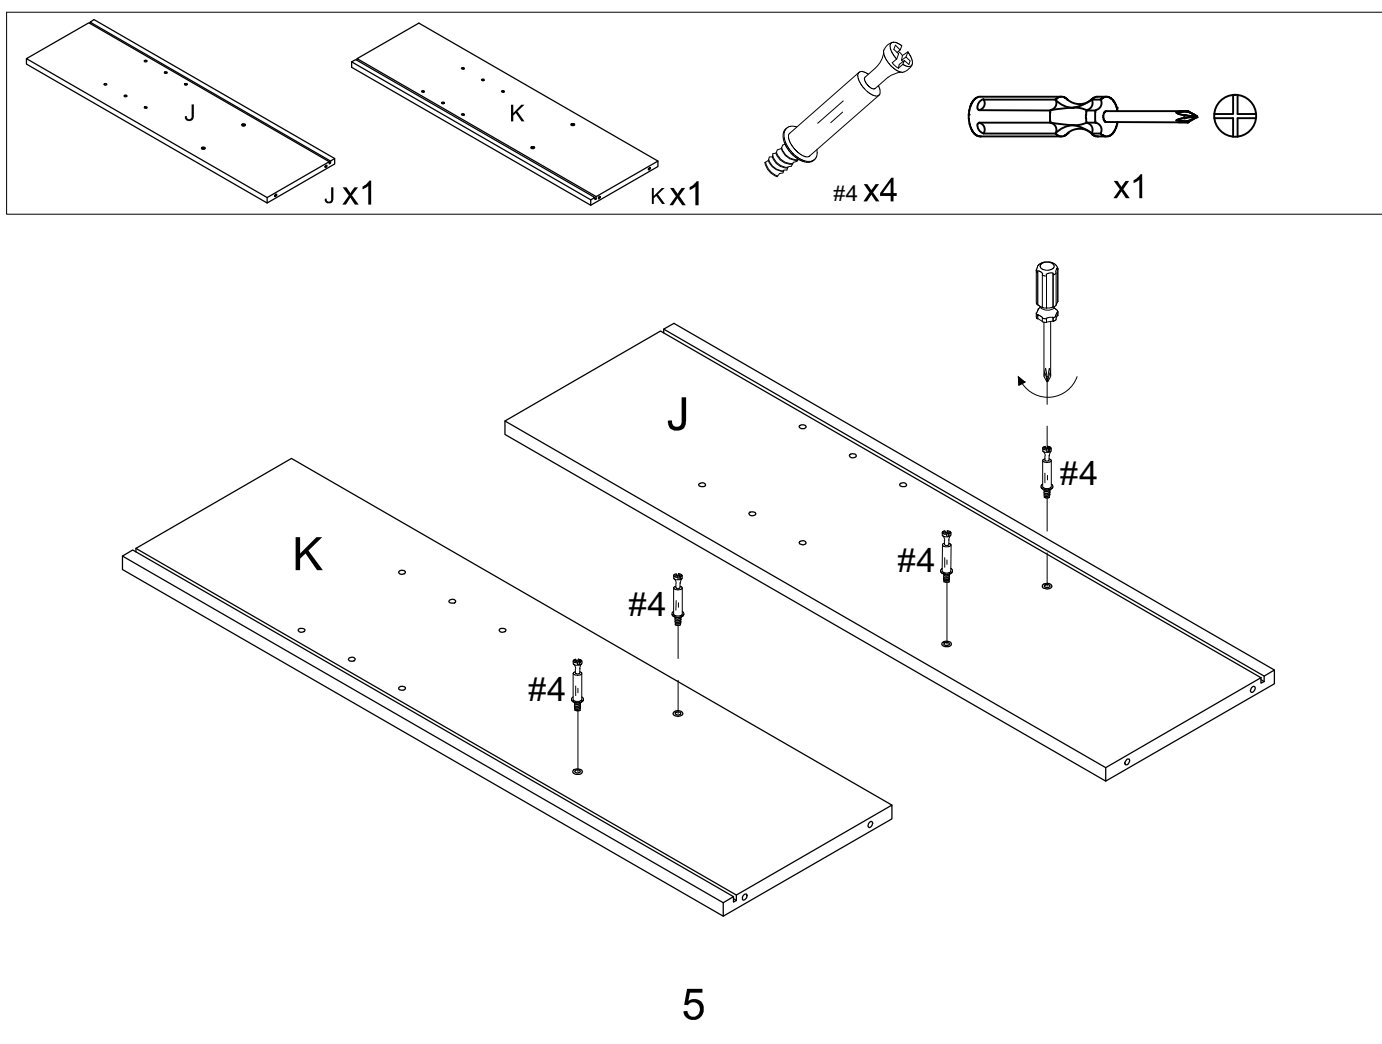



Step 3.

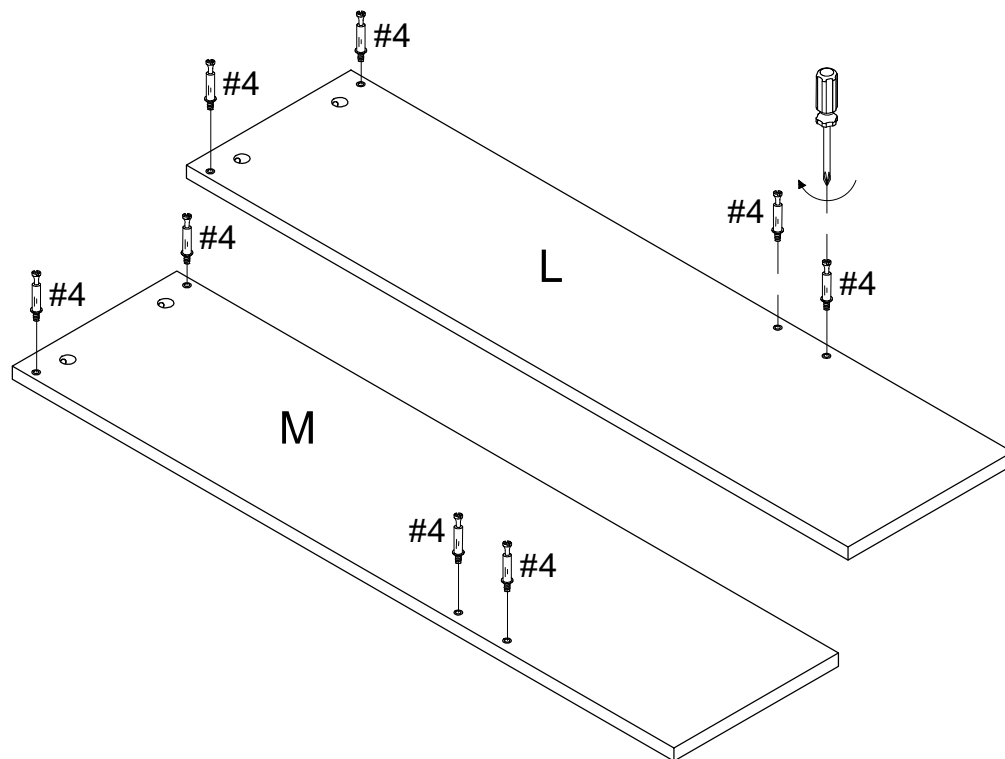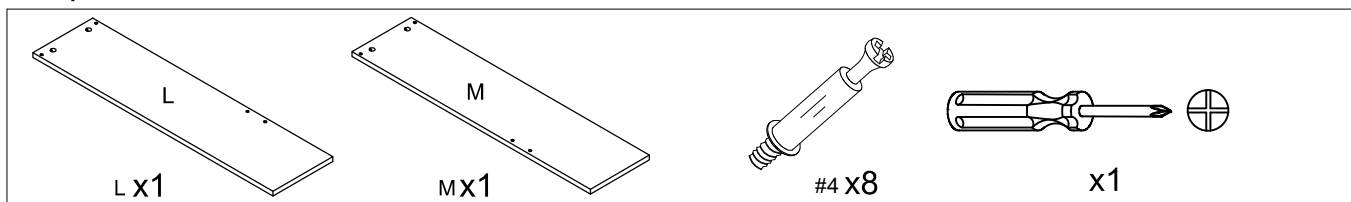



Step 4.

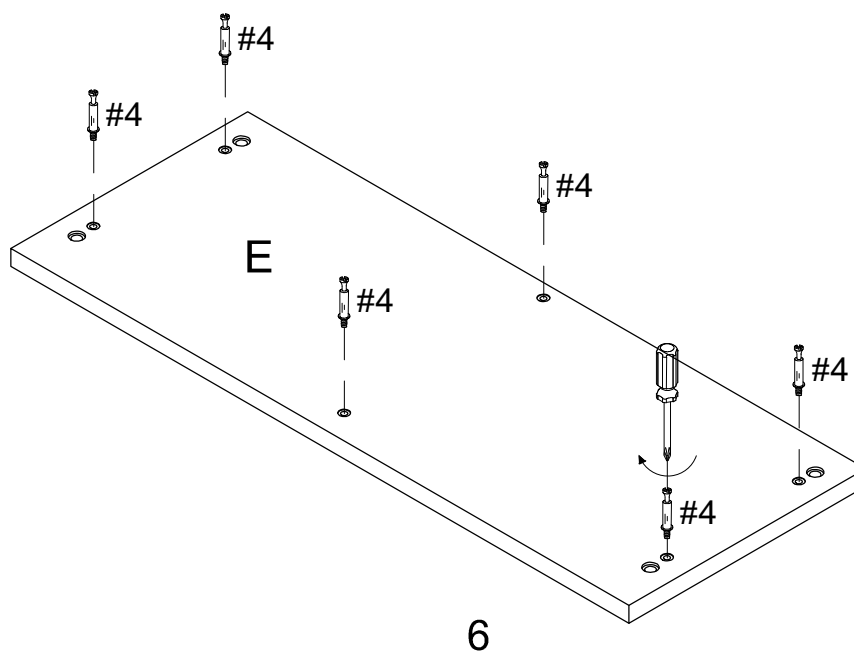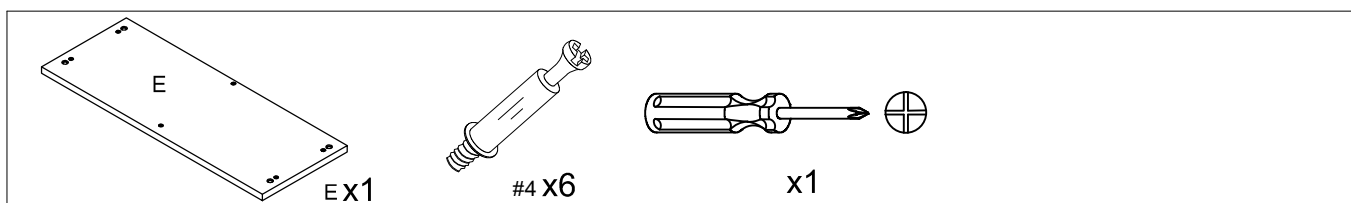



Step 5.

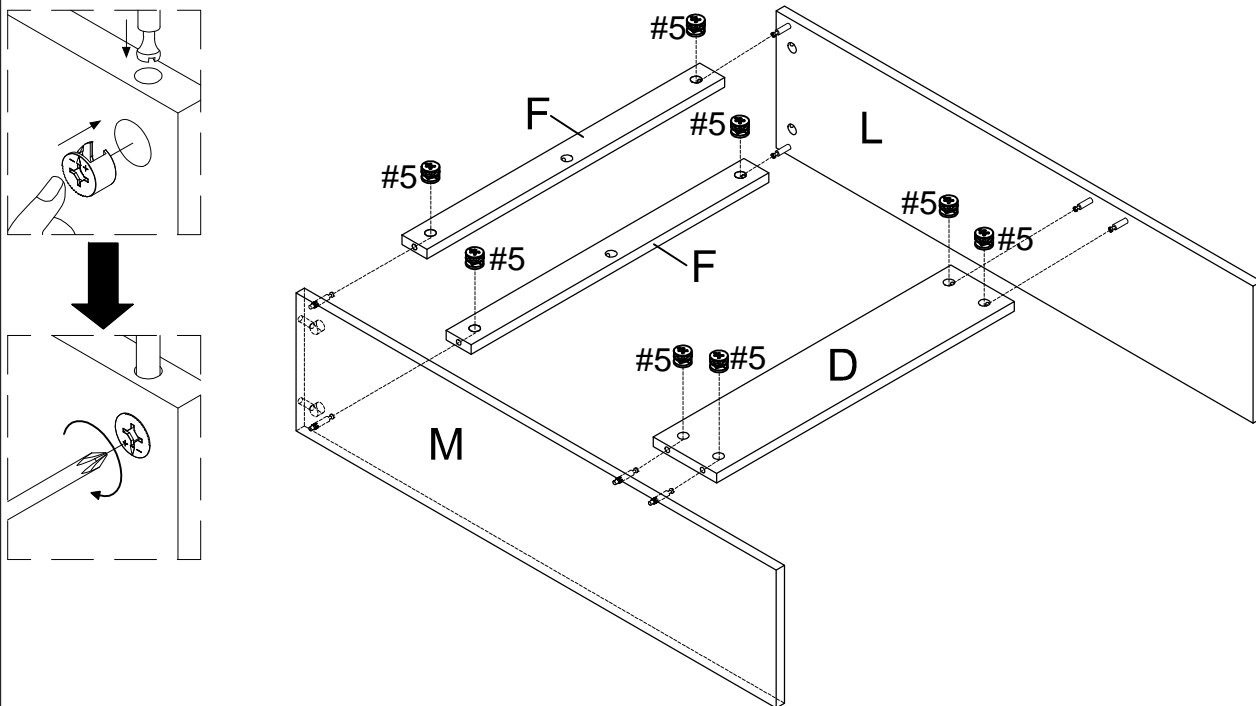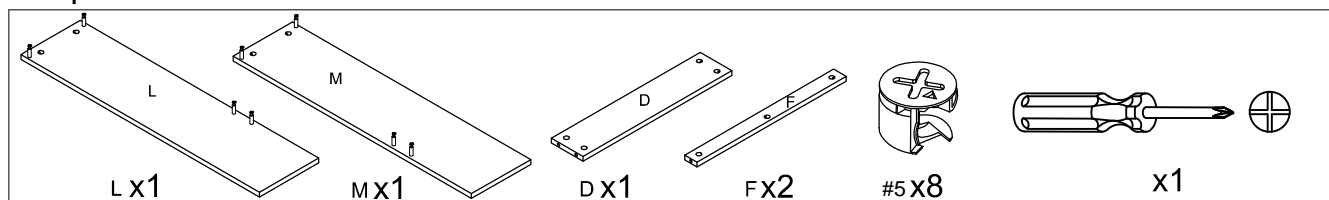



Step 6.

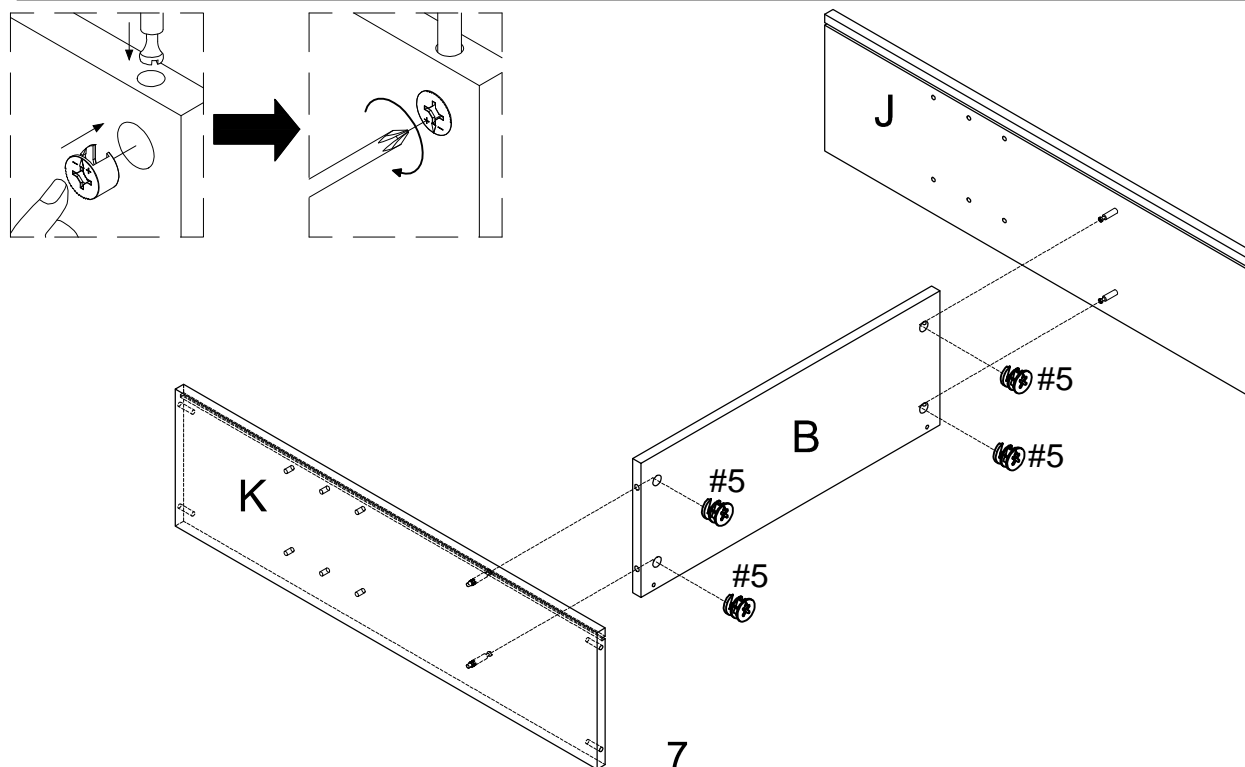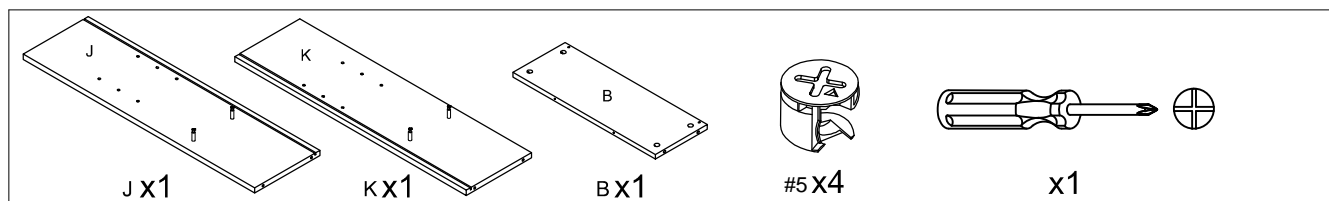



Step 7.

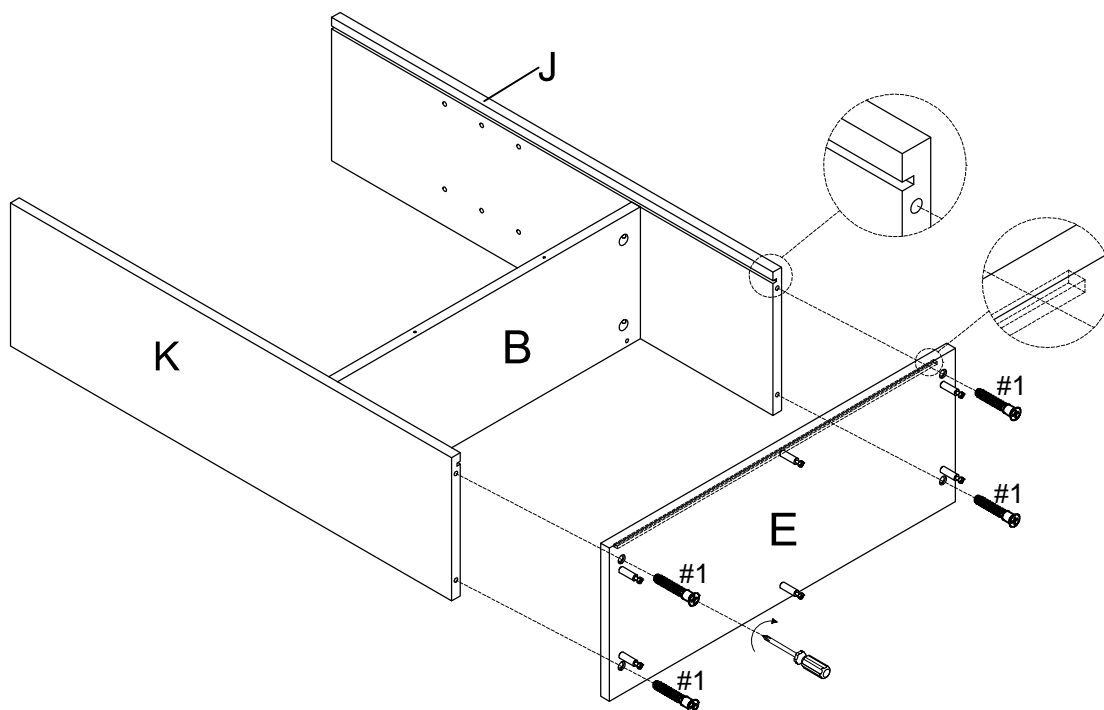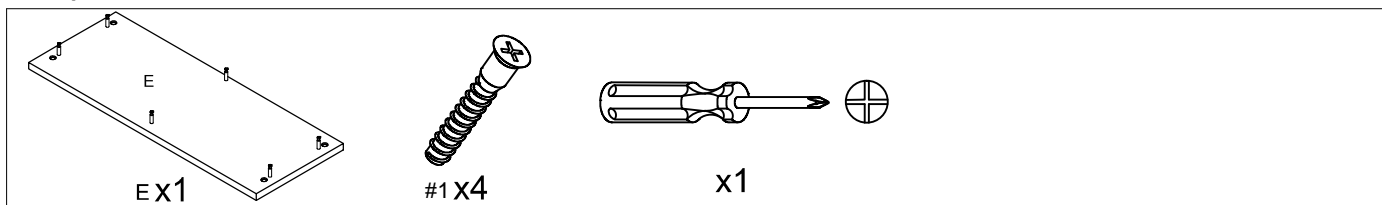

Step 8.

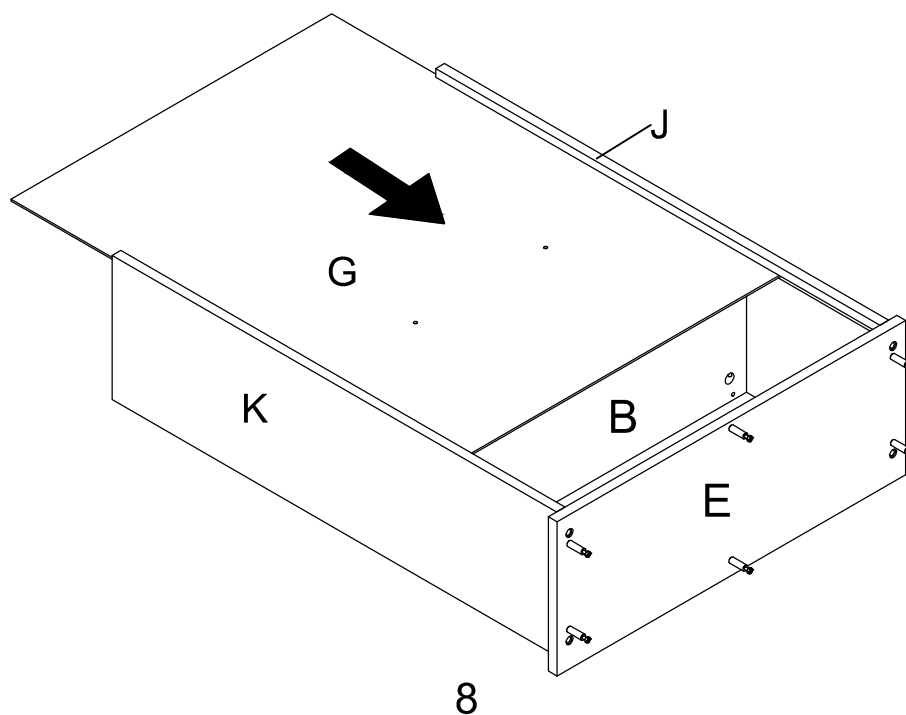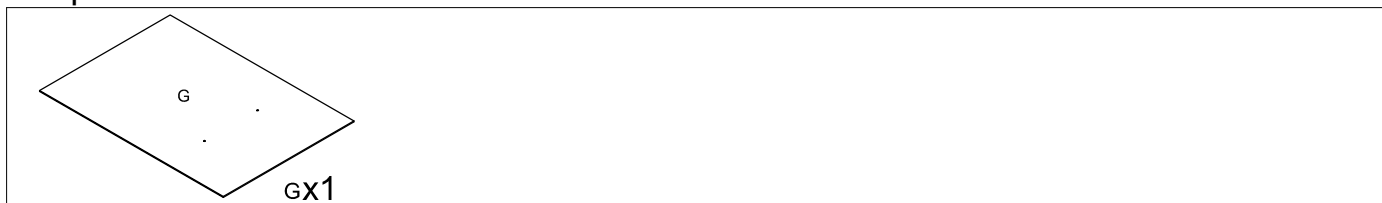

Step 9.

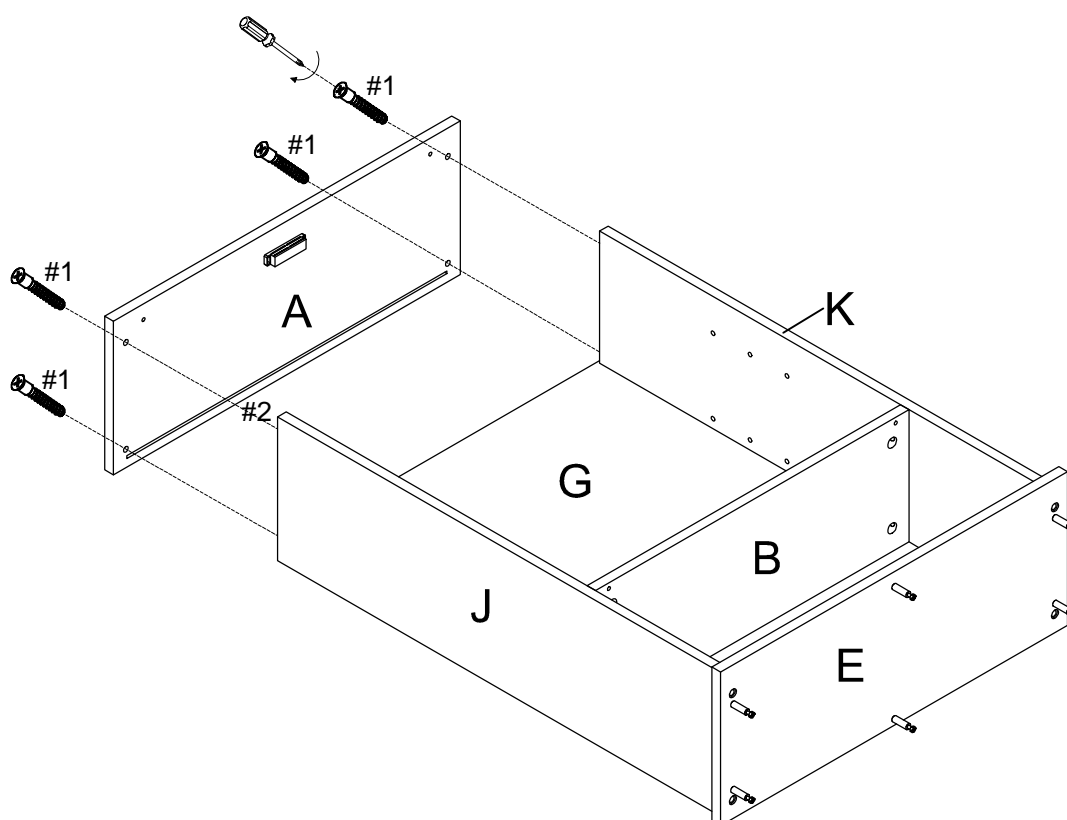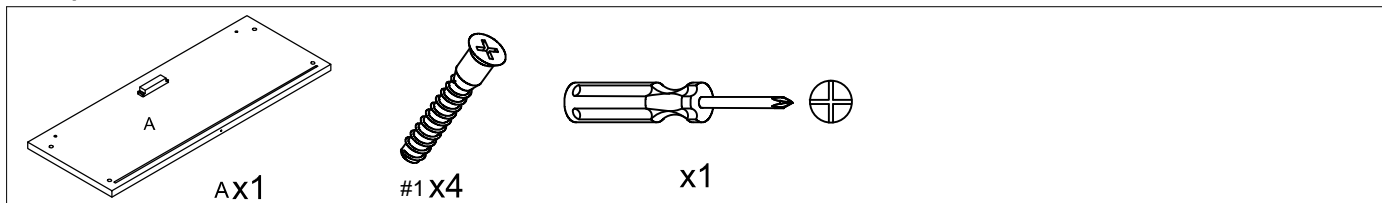


Step 10.




#5 x 6






x1

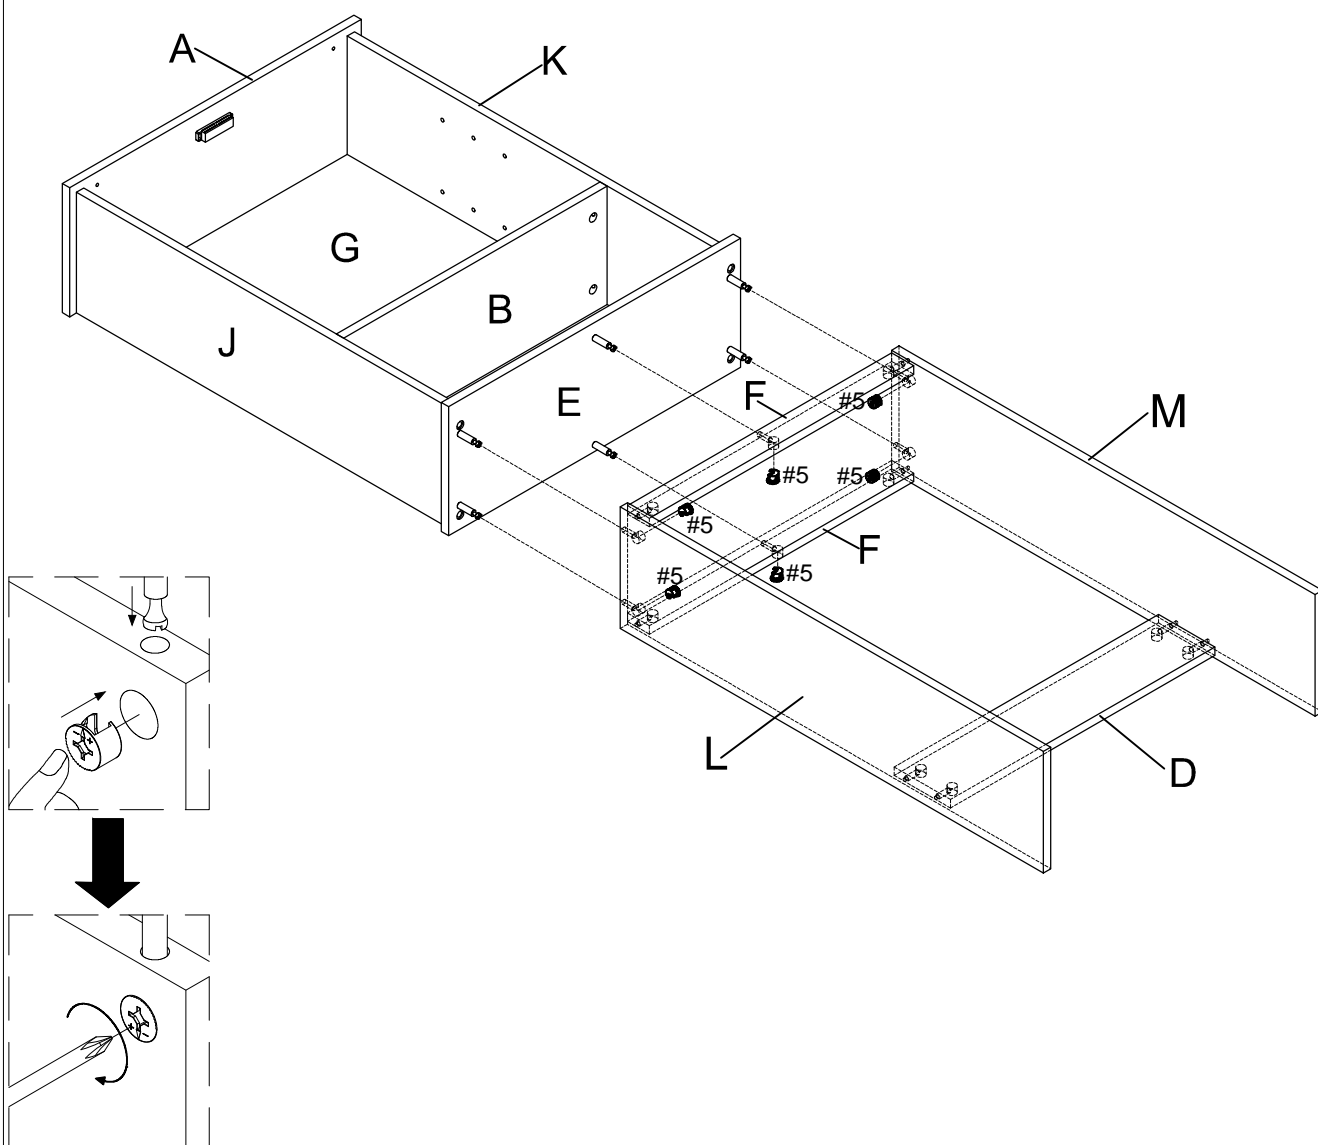

Step 11.

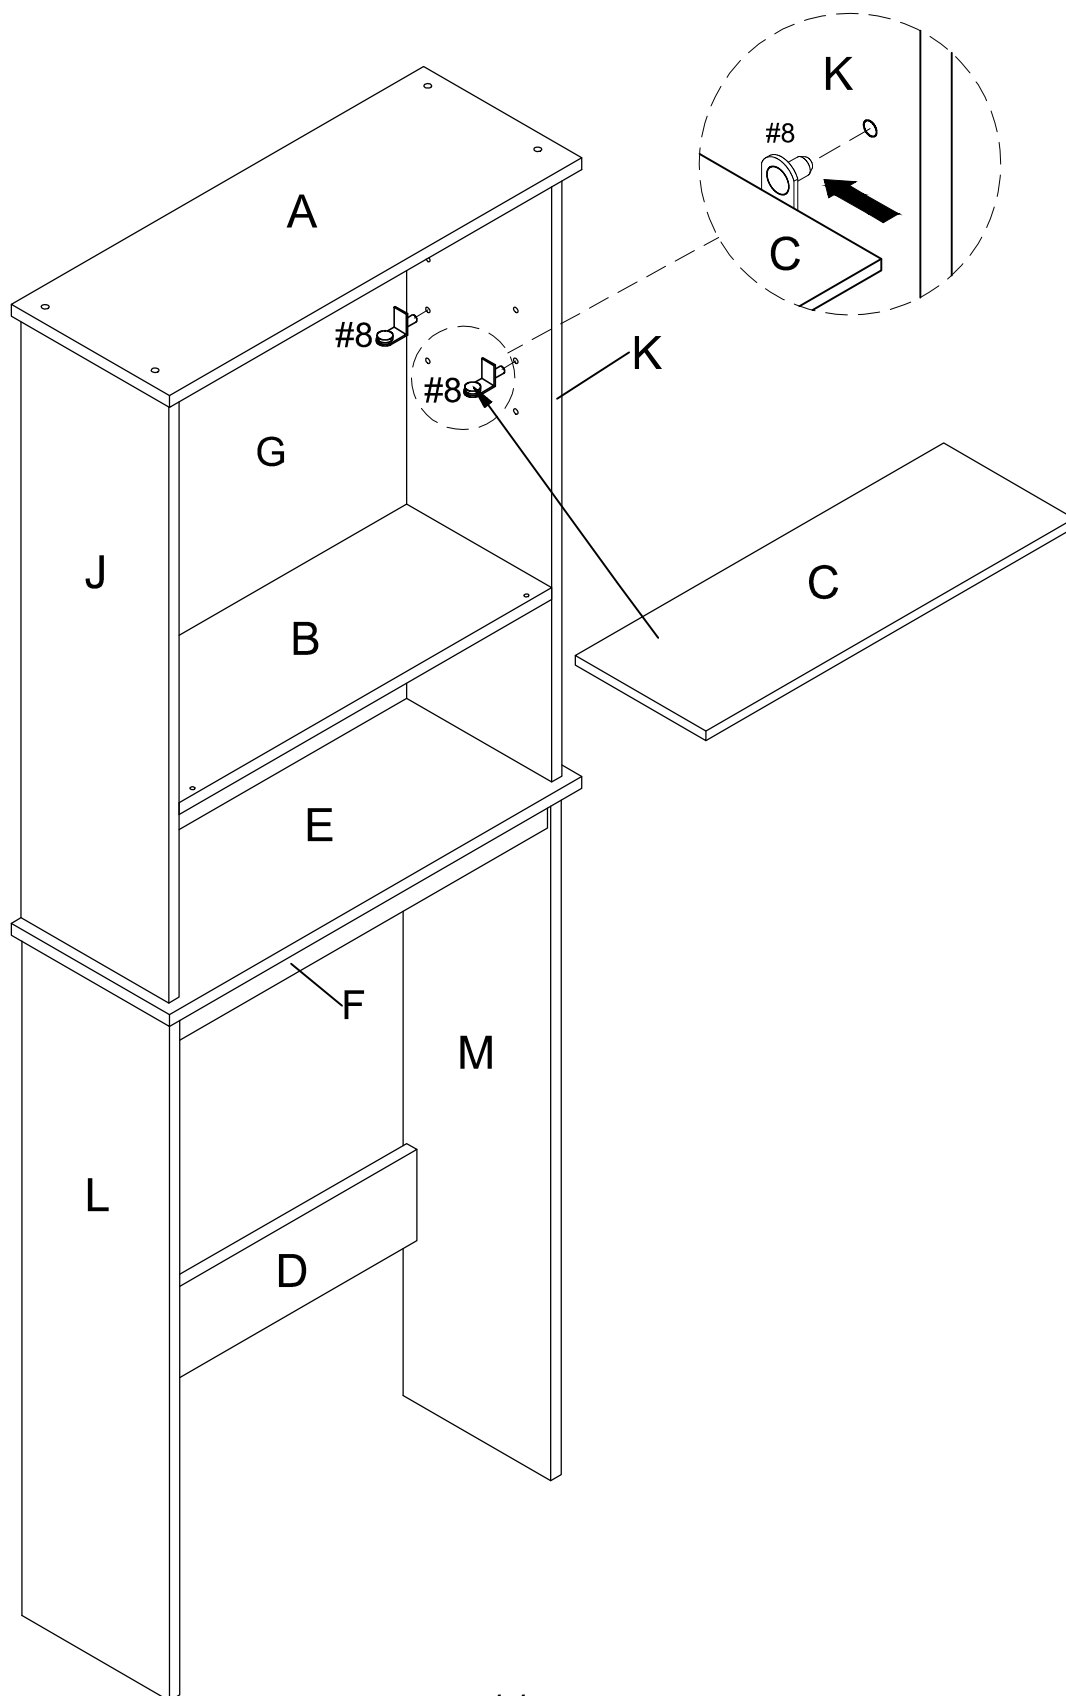


Step 12.

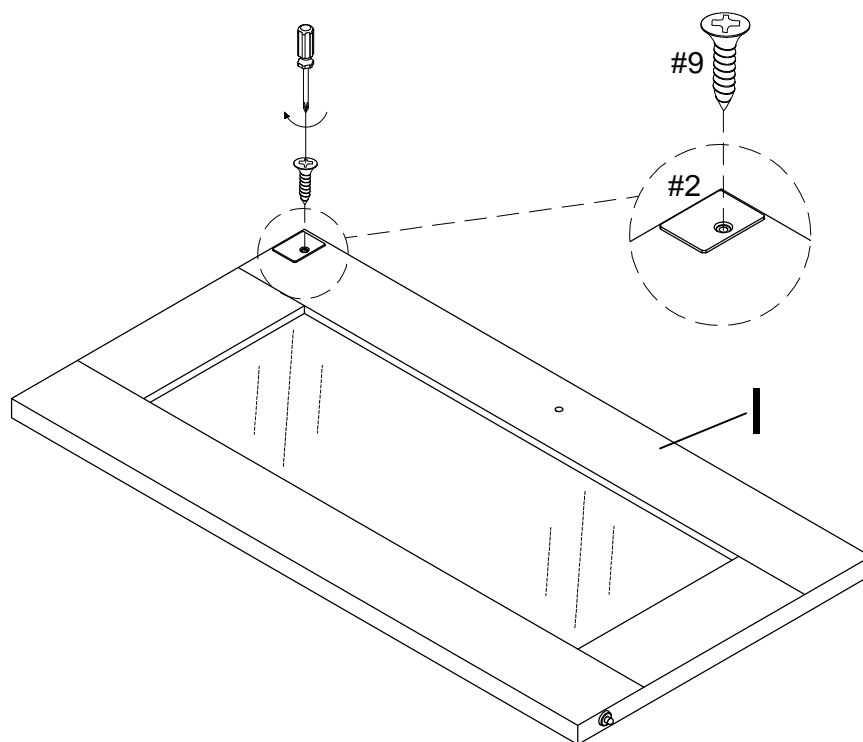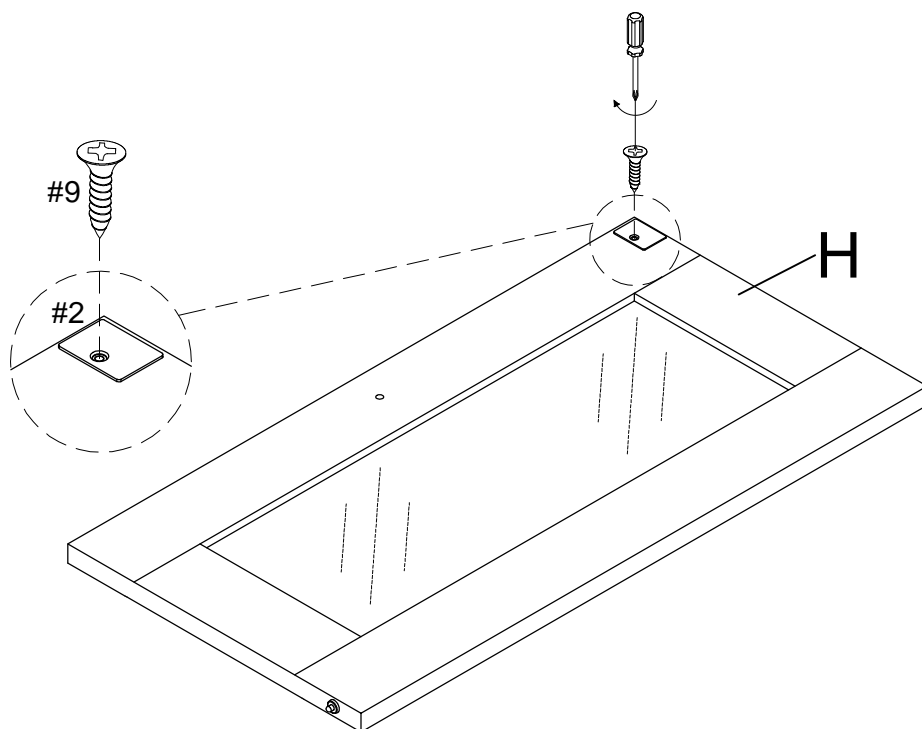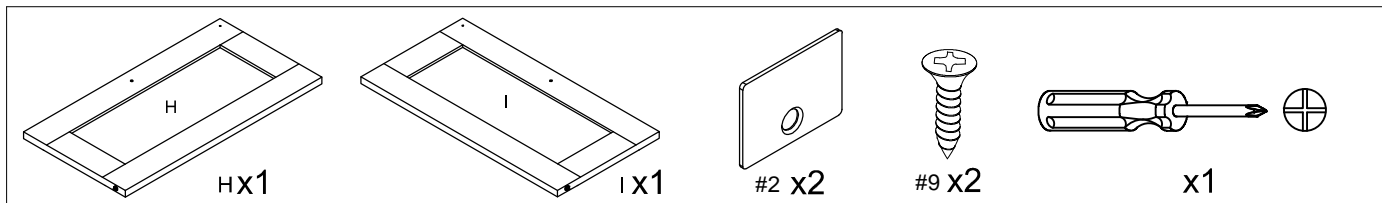

Step 13.




#6 x2




#7 x2



x1

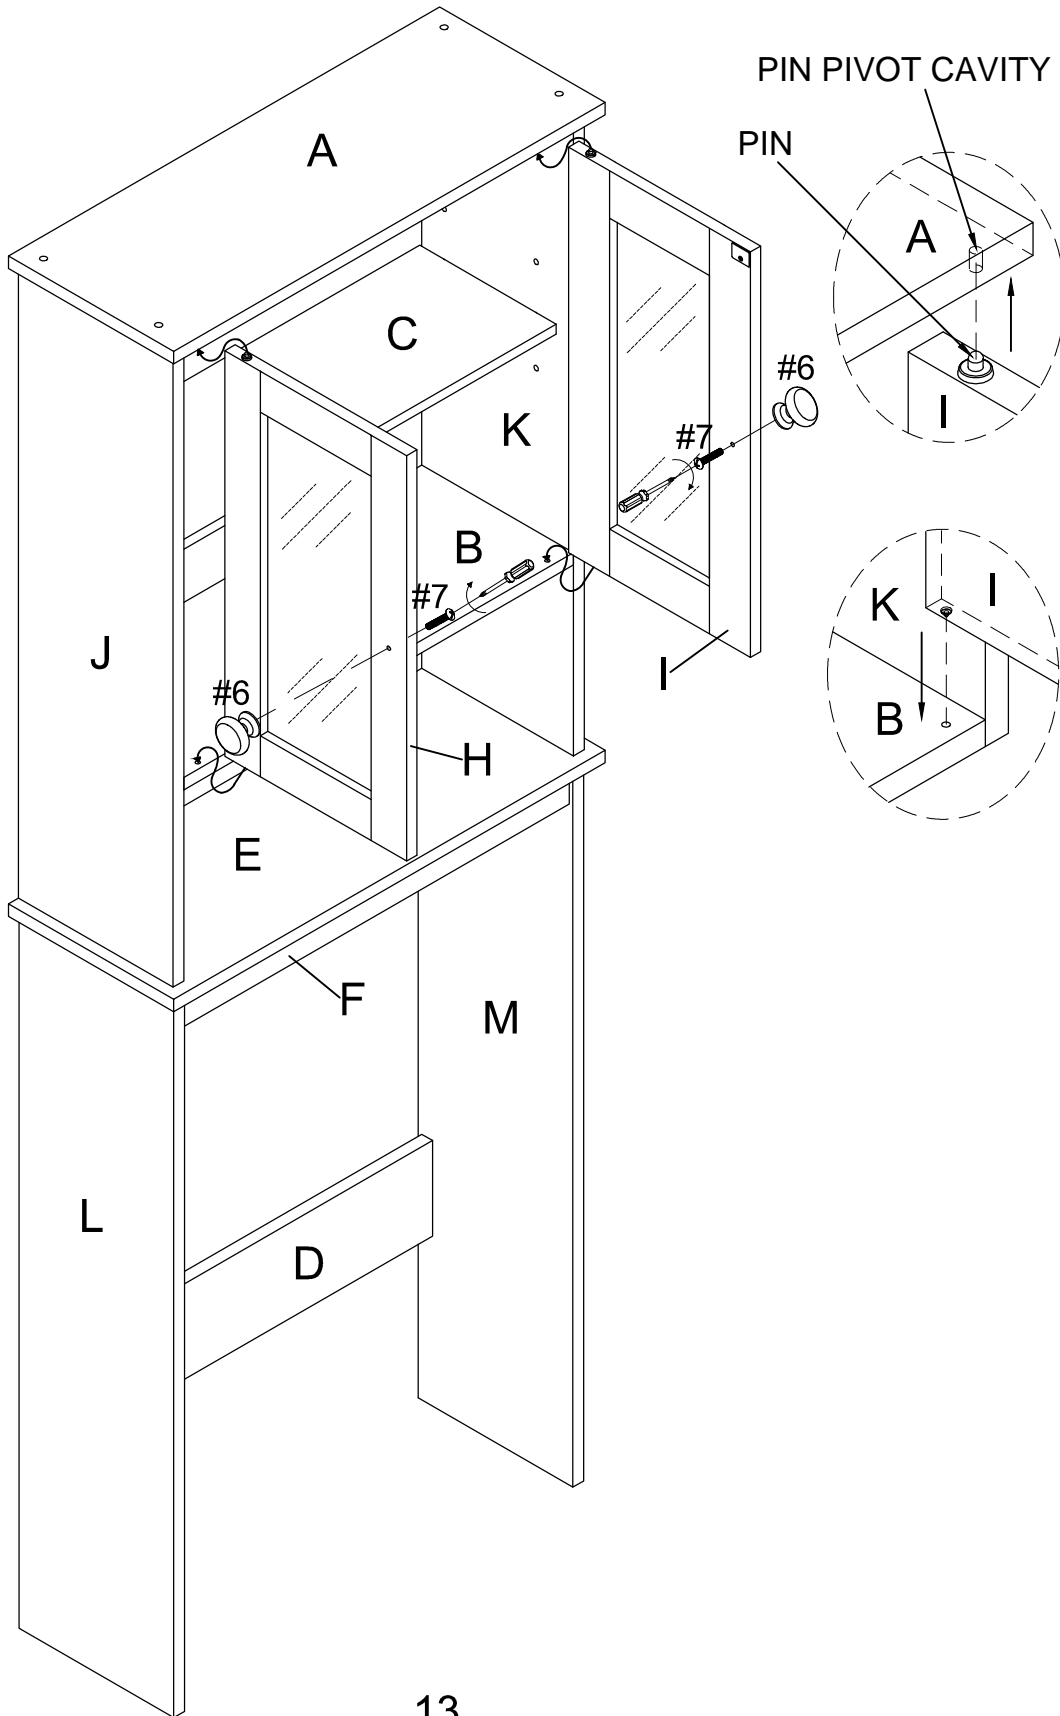

Step 14.





#3 x4


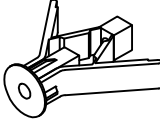



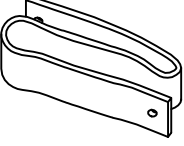


#9 x6

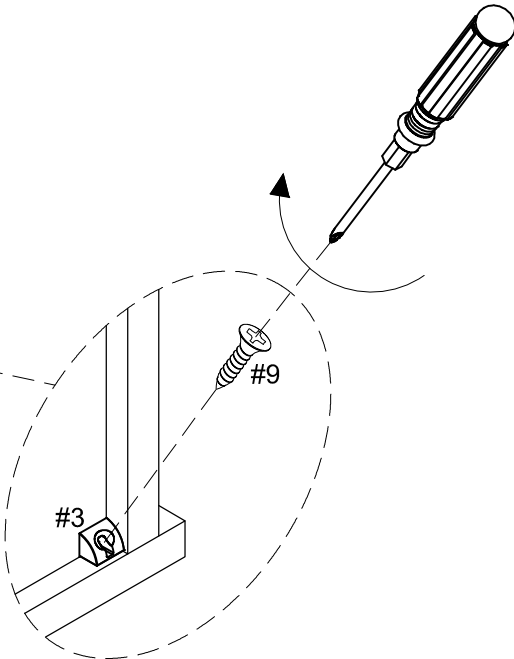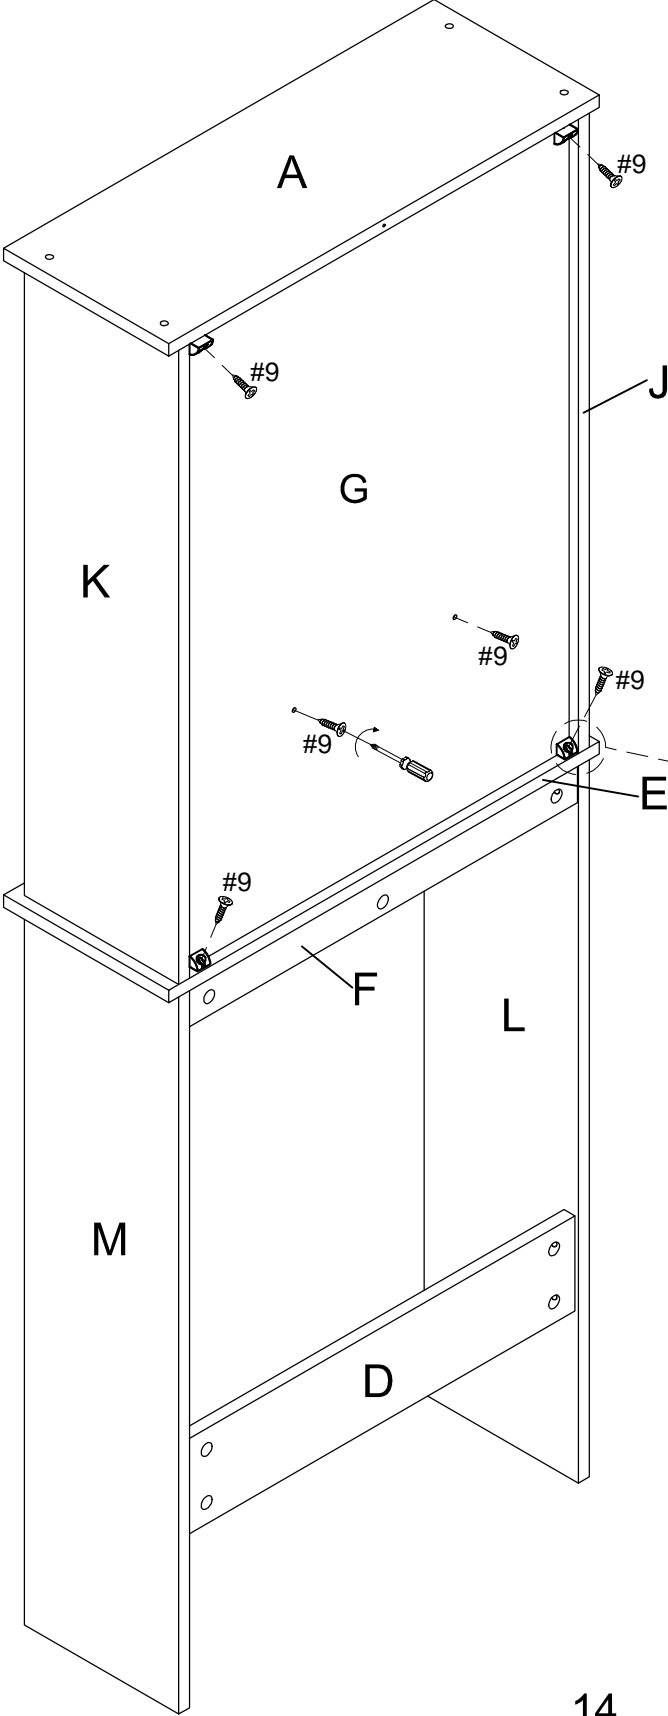

x1



#11	A	B	C	D	E
					
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

