


TV STAND

Assembly Instructions-Please keep for future reference

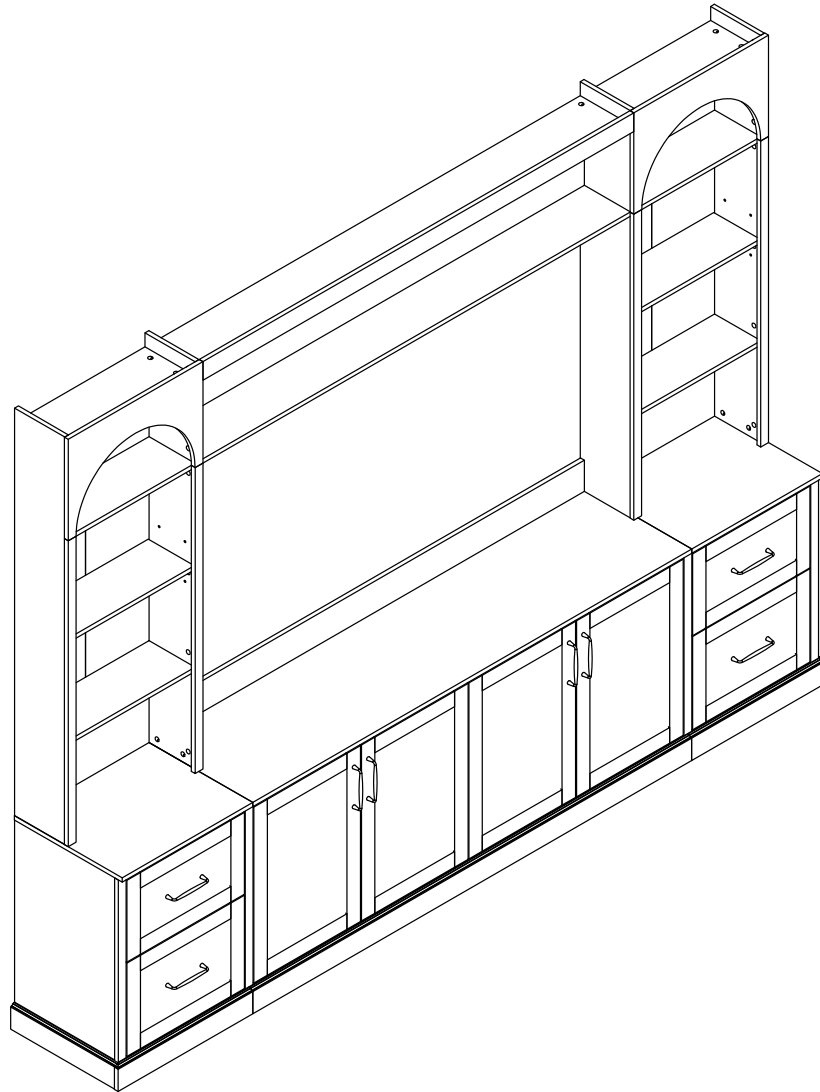

Dimensions

Width-15.74inch

Depth-102.36inch

Height-77.95inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

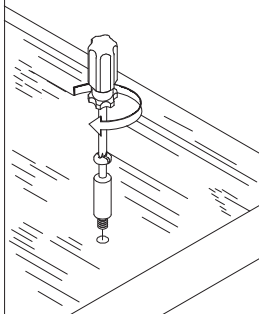

Step 2

Push the male camlock into the entry hole.

2

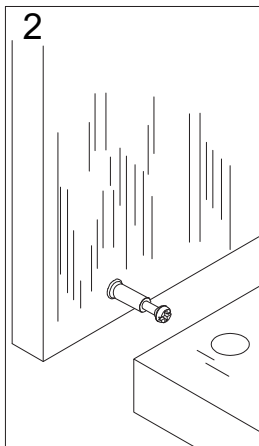


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock

3

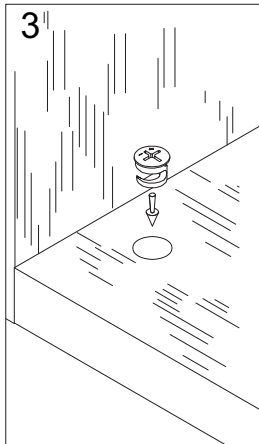


Step 4

Turn the female camlock clockwise with a screwdriver


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

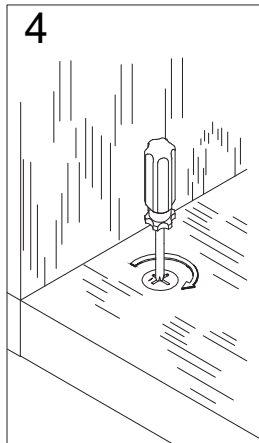









Assembly Instructions

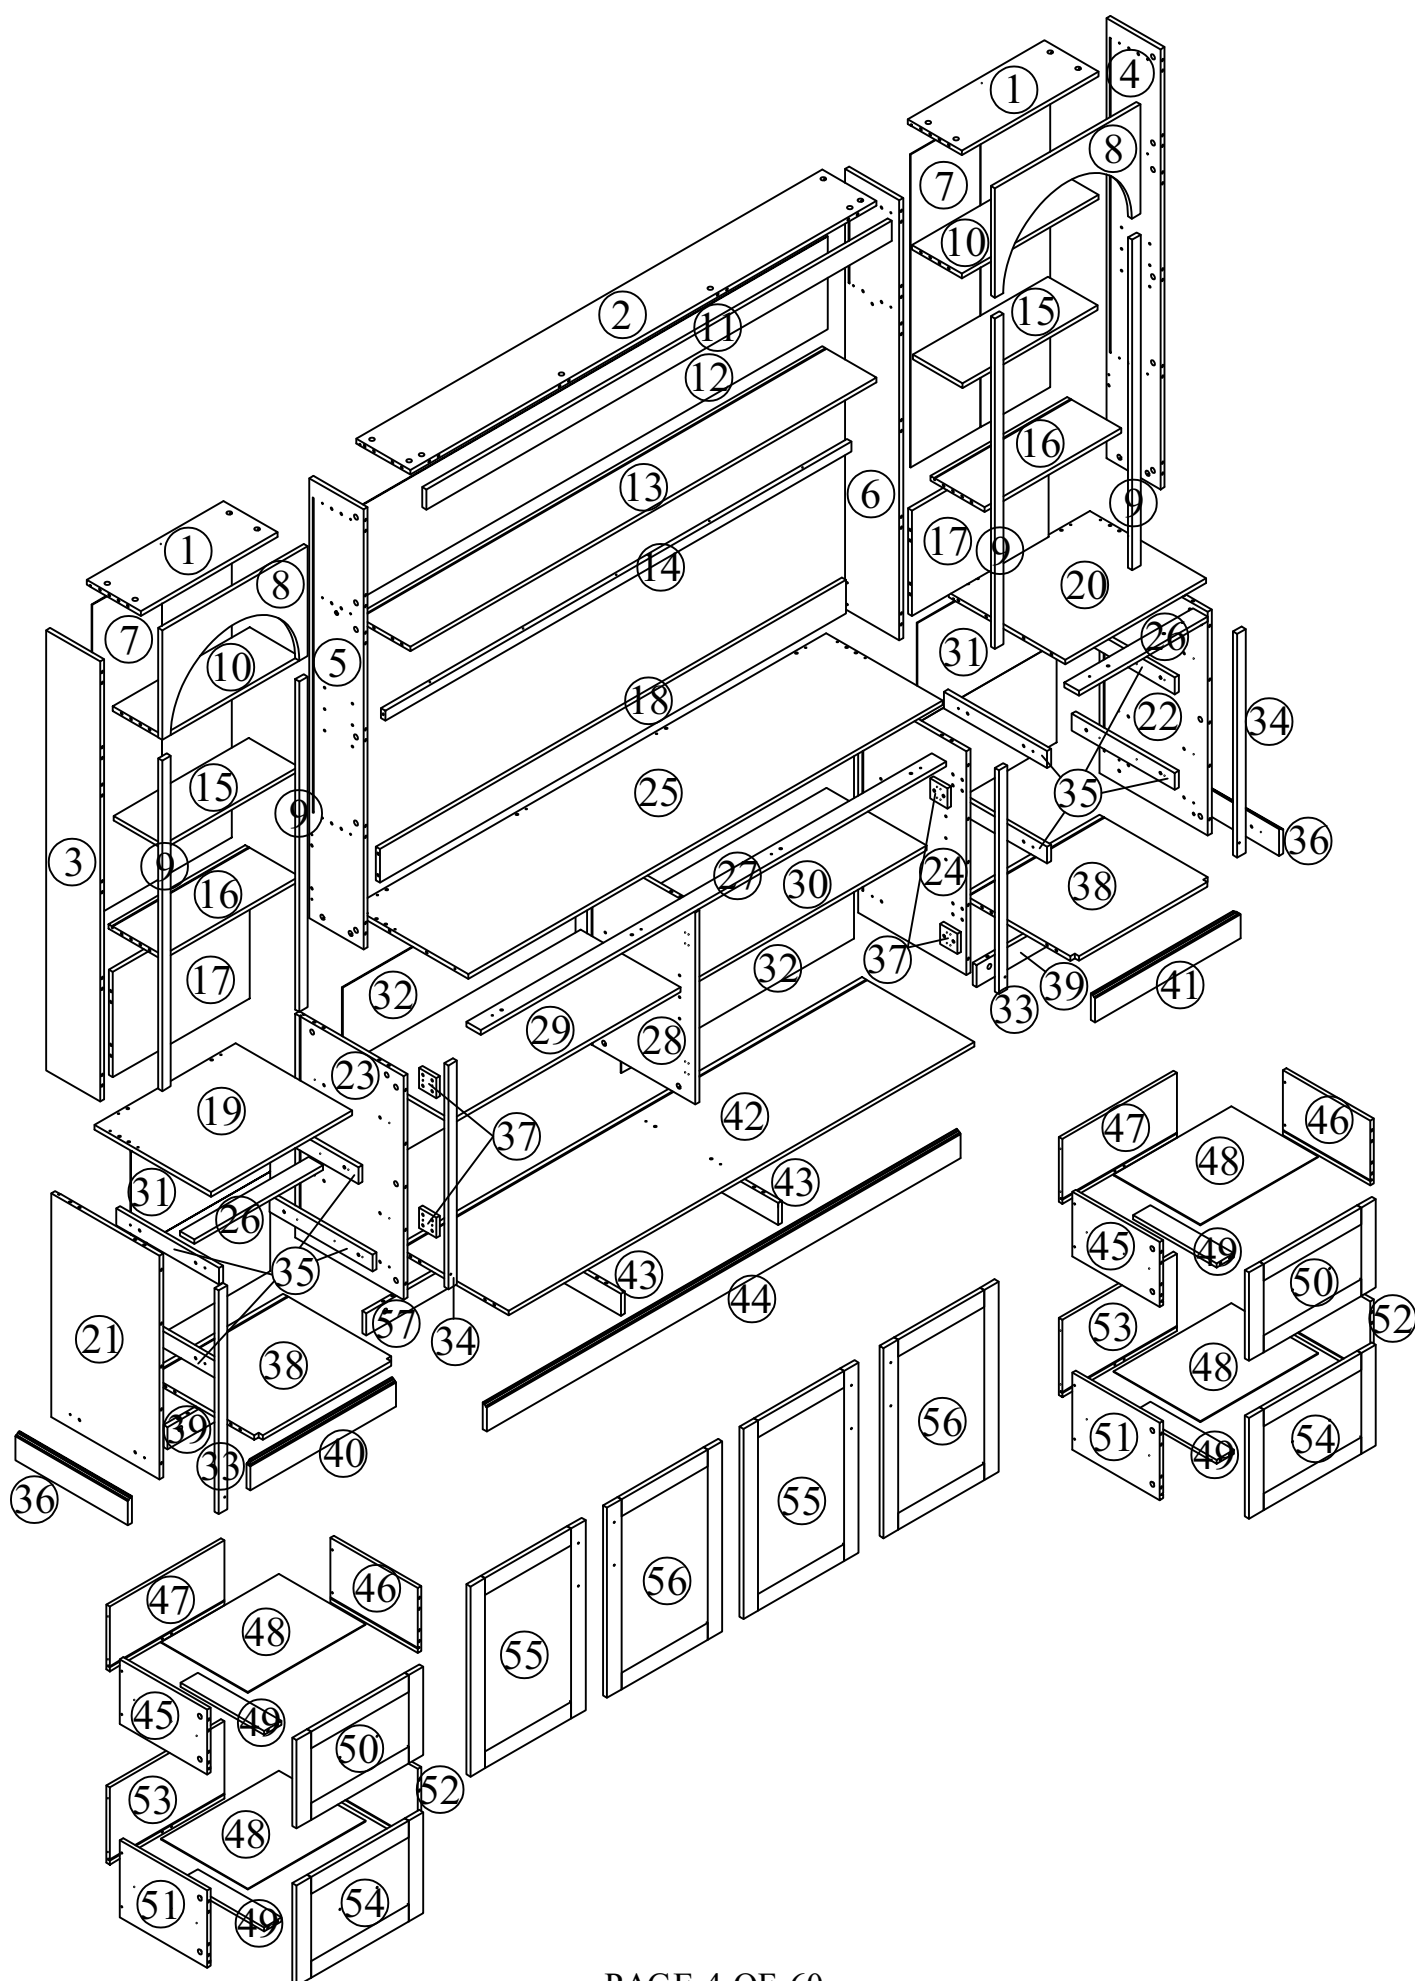

Assembly Instructions

There are 3 boxes of this product







BOX_1:N721P462094

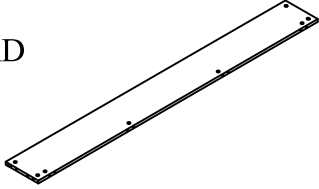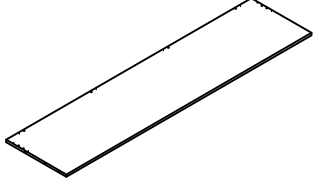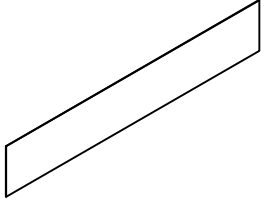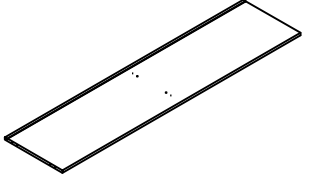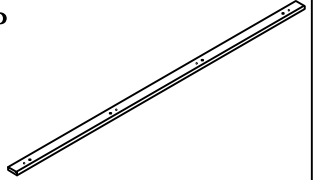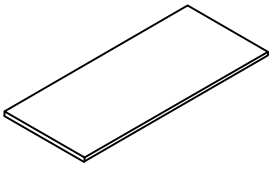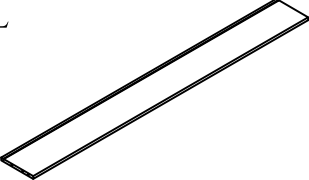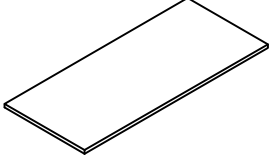②	ROOF BOARD OF UPPER MIDDLE CABINET 1602 x 186 x 14mm 	1PC	②5	ROOF BOARD OF LOWER MIDDLE CABINET 1630 x 400 x 14mm 	1PC
③	SIDES BOARD OF UPPER LEFT CABINET 1310 x 186 x 14mm 	1PC	①2	BACK BOARD OF UPPER MIDDLE CABINET 300 x 150 x 14mm 	1PC
④	SIDES BOARD OF UPPER RIGHT CABINET 1310 x 186 x 14mm 	1PC	④2	BASE BOARD OF LOWER MIDDLE CABINET 1601 x 386 x 14mm 	1PC
⑤	VERTICAL PARTITION BOARD OF UPPER LEFT CABINET 1310 x 186 x 14mm 	1PC	②7	FRONT STRIP OF LOWER MIDDLE CABINET 1600 x 50 x 14mm 	1PC
⑥	VERTICAL PARTITION BOARD OF UPPER RIGHT CABINET 1310 x 186 x 14mm 	1PC	②9	REMOVABLE SHELT OF LOWER MIDDLE CABINET 787.5 x 344 x 14mm 	1PC
⑬	HORIZONTAL PARTITION BOARD OF UPPER MIDDLE CABINET 1602 x 186 x 14mm 	1PC	③0	REMOVABLE SHELT OF LOWER MIDDLE CABINET 787.5 x 344 x 14mm 	1PC

Assembly Instructions

There are 3 boxes of this product













BOX_1:N721P462094

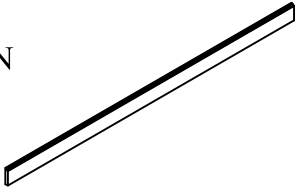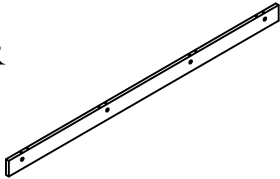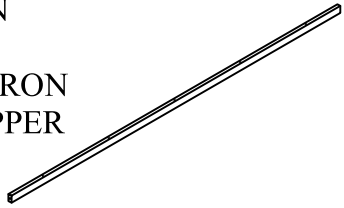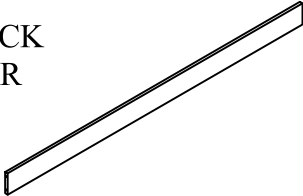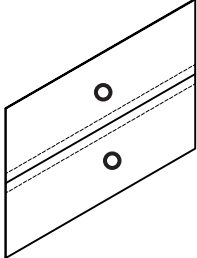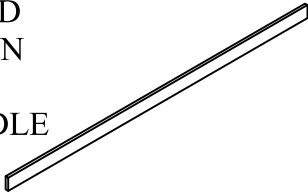④④	FRONT DECORATION STRIP OF LOWER MIDDLE CABINET  1629 x 80 x 14mm	1PC	⑨	SIDE FRONT DECORATION STRIPS OF UPPER LEFT RIGHT CABINET  984 x 29 x 14mm	2PCS
⑤⑦	BASE BOARD SUPPORT BAR OF MIDDLE LOWER CABINET  1601 x 66 x 14mm	1PC	①④	PARTITION BOARD SUPPORT IRON BAR OF UPPER MIDDLE CABINET  1602 x 30 x 15mm	1PC
①⑧	BOTTOM BACK TENSION BAR OF UPPER MIDDLE CABINET  1602 x 100 x 14mm	1PC	③②	BACK BOARD OF LOWER MIDDLE CABINET  800 x 594 x 2.5mm	2PCS
①①	ROOF BOARD DECORATION STRIP OF UPPER MIDDLE CABINET  1600 x 60 x 14mm	1PC			

Assembly Instructions

There are 3 boxes of this product










BOX_2:N721P462095

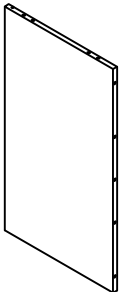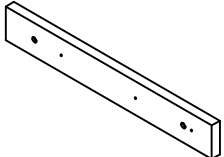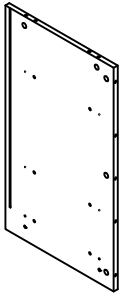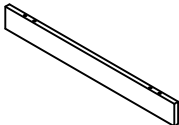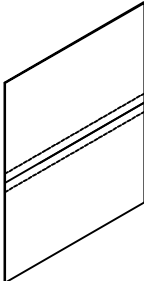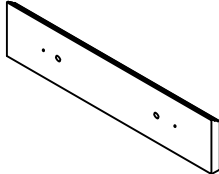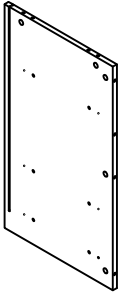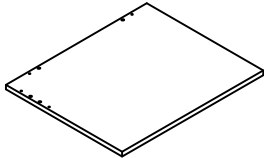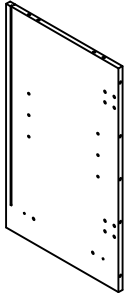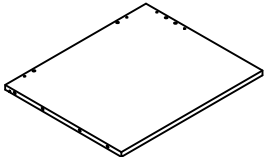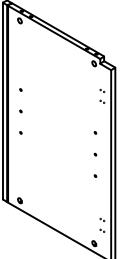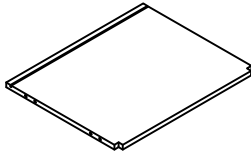②1	SIDE BOARD OF LOWER LEFT CABINET 666 x 372 x 14mm		1PC	③5	SLIDE RAILS PADDING BAR OF LOWER CABINET 354 x 50 x 14mm		8PCS
②2	SIDE BOARD OF LOWER RIGHT CABINET 666 x 372 x 14mm		1PC	④3	BASE BOARD SUPPORT BAR OF LOWER MIDDLE CABINET 371 x 66 x 14mm		2PCS
③1	BACK BOARD OF LOWER LEFT RIGHT CABINET 594 x 478 x 2.5mm		2PCS	③6	SIDE DECORATION STRIP OF LOWER RIGHT CABINET 386 x 80 x 14mm		2PCS
②3	VERTICAL PARTITION BOARD OF LOWER LEFT CABINET 666 x 372 x 14mm		1PC	①9	TOP BOARD OF LOWER LEFT CABINET 485 x 400 x 14mm		1PC
②4	VERTICAL PARTITION BOARD OF LOWER RIGHT CABINET 666 x 372 x 14mm		1PC	②0	TOP BOARD OF LOWER RIGHT CABINET 485 x 400 x 14mm		1PC
②8	HORIZONTAL PARTITION BOARD OF LOWER MIDDLE CABINET 586 x 372 x 14mm		1PC	③8	BASE BOARD OF LOWER LEFT RIGHT CABINET 471 x 386 x 14mm		2PCS

Assembly Instructions

There are 3 boxes of this product




BOX_2:N721P462095

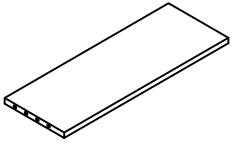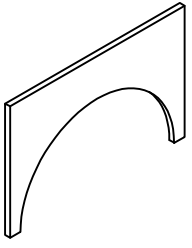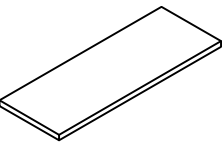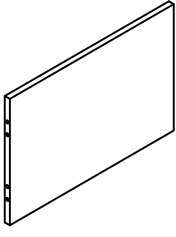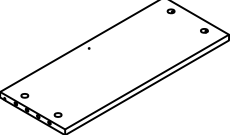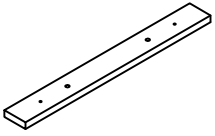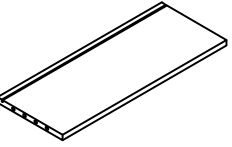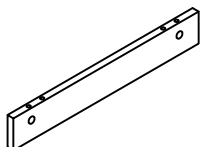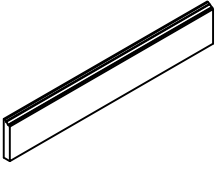⑩	UPPER HORIZONTAL PARTITION BOARD OF LOWER LEFT RIGHT CABINET 470 x 171 x 14mm 	2PCS	⑧	FORNT DECORATION BOARD OF UPPER LEFT RIGHT CABINET 500 x 326 x 14mm 	2PCS
⑮	REMOVALE BOARD OF LOWER LEFT RIGHT CABINET 464 x 171 x 14mm 	2PCS	⑰	LOWER BACK BOARD OF LOWER LEFT RIGHT CABINET 470 x 314 x 14mm 	2PCS
①	ROOF BOARD OF LOWER LEFT RIGHT CABINET 470 x 186 x 14mm 	2PCS	⑳	TOP BOARD'S STRIP OF LOWER LEFT RIGHT CABINET 442 x 50 x 14mm 	2PCS
⑯	LOWER HORIZONTAL PARTITION BOARD OF LOWER LEFT RIGHT CABINET 470 x 186 x 14mm 	2PCS	㉔	BASE BOARD BACK SUPPORT BAR OF LOWER LEFT RIGHT CABINET 471 x 66 x 14mm 	2PCS
㉓	LEFT VERTICAL DECORATION STRIP OF LOWER LEFT RIGHT CABINET 666 x 29 x 14mm 	2PCS	⑨	SIDE FRONT DECORATION STRIPS OF UPPER LEFT RIGHT CABINET 984 x 29 x 14mm 	2PCS
㉔	RIGHT VERTICAL DECORATION STRIP OF LOWER LEFT RIGHT CABINET 666 x 29 x 14mm 	2PCS	㉕	BASEBOARD'S FRONT STRIP OF LOWER LEFT CABINET 500 x 80 x 14mm 	1PC

Assembly Instructions

There are 3 boxes of this product












BOX_2:N721P462095

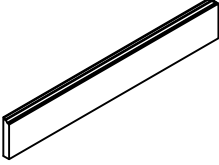④1	BASEBOARD'S FRONT STRIP OF LOWER RIGHT CABINET  500 x 80 x 14mm	1PC
③7	DOOR HINGES'S PADDING BAR OF LOWER MIDDLE CABINET  464 x 171 x 14mm	4PCS
⑦	BACK BOARD OF UPPER LEFT RIGHT CABINET  932 x 479 x 2.5mm	2PCS
Hardware Kit		1PC

Assembly Instructions

There are 3 boxes of this product













BOX_3:N721P462096

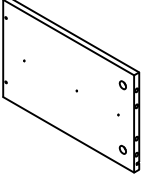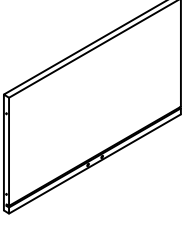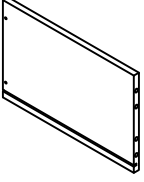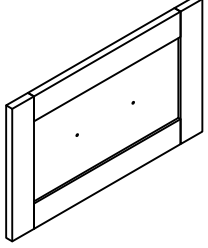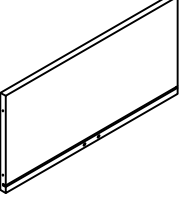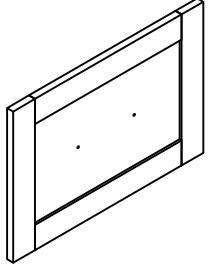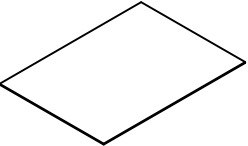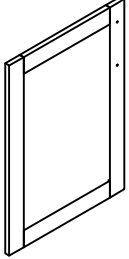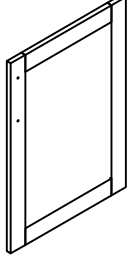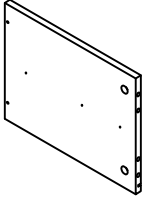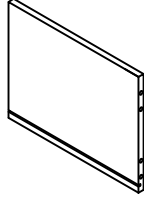④5	LEFT SIDE BOARD OF UPPER DRAWERS 300 x 193 x 12mm 	2PCS	⑤3	BACK BOARD OF LOWER DRAWERS 394 x 230 x 12mm 	2PCS
④6	RIGHT SIDE BOARD OF UPPER DRAWERS 300 x 193 x 12mm 	2PCS	⑤0	FRONT BOARD OF UPPER DRAWERS 436 x 263 x 14mm 	2PCS
④7	BACK BOARD OF UPPER DRAWERS 394 x 193 x 12mm 	2PCS	⑤4	FRONT BOARD OF LOWER DRAWERS 436 x 300 x 14mm 	2PCS
④8	BOTTOM BOARD OF UPPER DRAWERS 405 x 298 x 2.5mm 	4PCS	⑤5	LEFT DOOR OF LOWER MIDDLE CABINET 566 x 396 x 14mm 	2PCS
④9	BOTTOM BOARD SUPPORT BAR OF DRAWERS 287 x 60 x 12mm 	4PCS	⑤6	RIGHT DOOR OF LOWER MIDDLE CABINET 566 x 396 x 14mm 	2PCS
⑤1	SIDE BOARD OF LOWER LEFT DRAWERS 300 x 230 x 12mm 	2PCS	⑤2	SIDE BOARD OF LOWER RIGHT DRAWERS 300 x 230 x 12mm 	2PCS

Components-Fittings

Please check you have all the panels listed below




Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

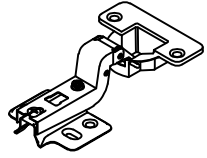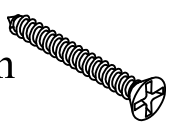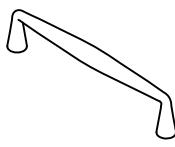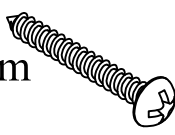Ⓐ	Ø5*35 mm 	174+4 (PCS)	Ⓚ	Ø35 mm 	8 (PCS)
Ⓑ	Ø15*9 mm 	174+4 (PCS)	Ⓛ	Ø3.5*12 mm 	96+4 (PCS)
Ⓒ	Ø8*30 mm 	132+4 (PCS)	Ⓜ	Ø3.9*22 mm 	40+1 (PCS)
Ⓓ	Ø8*20 mm 	44 (PCS)	Ⓝ	Ø3.5*30 mm 	16+1 (PCS)
Ⓔ	Ø6*30 mm 	16+1 (PCS)	Ⓞ	Ø3.9*15 mm 	24+2 (PCS)
Ⓕ	139 mm 	8 (PCS)	Ⓟ	32*19*19 mm 	4 (PCS)
Ⓖ	Ø5/32"*19 mm 	8 (PCS)	Ⓠ	58*29*29 mm 	8 (PCS)
Ⓕ	Ø5/32"*9 mm 	8 (PCS)	Ⓡ	38*13*6 mm 	4 (PCS)
Ⓖ	15*19*16mm 	16 (PCS)	Ⓢ	Ø1/4*12 mm 	16 (PCS)
Ⓖ	Ø3.5*15 mm 	16+1 (PCS)	Ⓣ	Ø3.9*40 mm 	5 (PCS)


Components-Fittings



Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

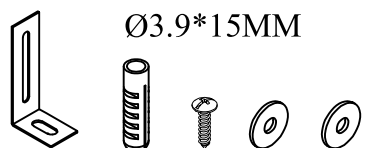Ⓢ	M6*40 mm 	2 (PCS)
Ⓥ	72*15*25MM Ø3.9*15MM 	2 (PCS)
Ⓦ	Ø3.9*30 mm 	2 (PCS)
Ⓧ	Ø20*0.2mm 	174 (PCS)
Ⓨ	Ⓨ-1 Ø300*35mm 	8 (PCS)
	Ⓨ-2 Ø295*15mm 	8 (PCS)




Step/Étape 1



3		1	5		1
4		1	6		1
A		32	C		32

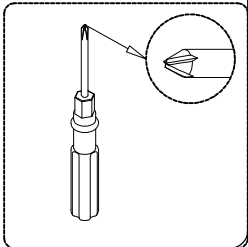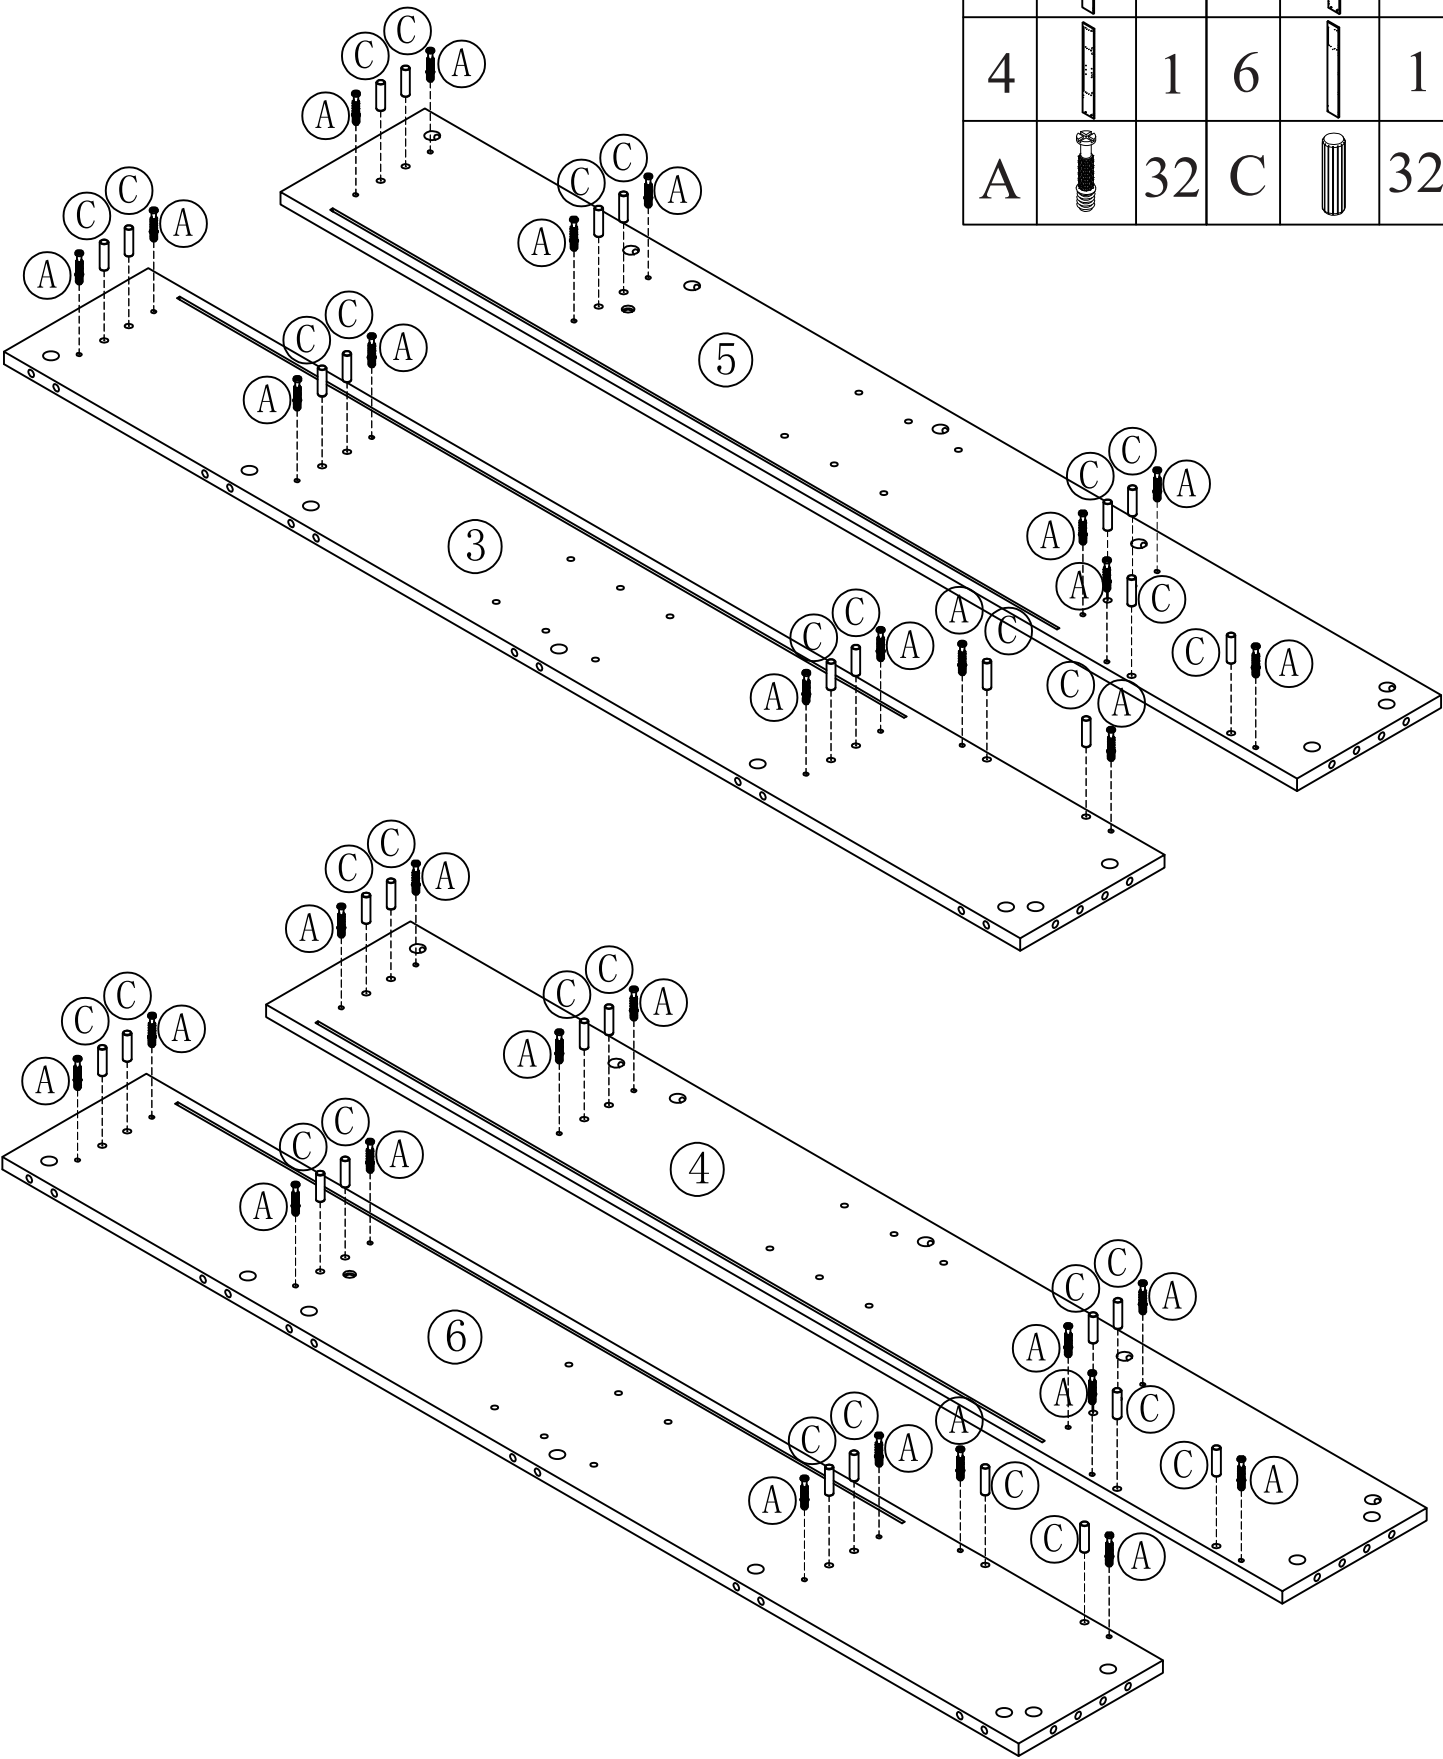

Step/Étape 2



1		2	16		2
10		2	17		2
			B		12

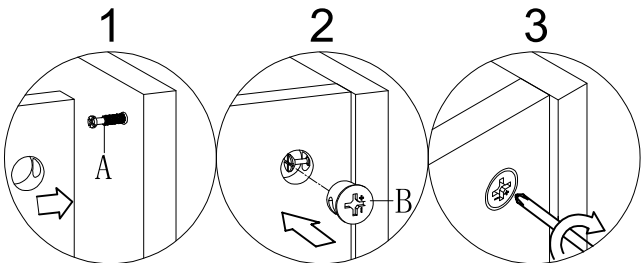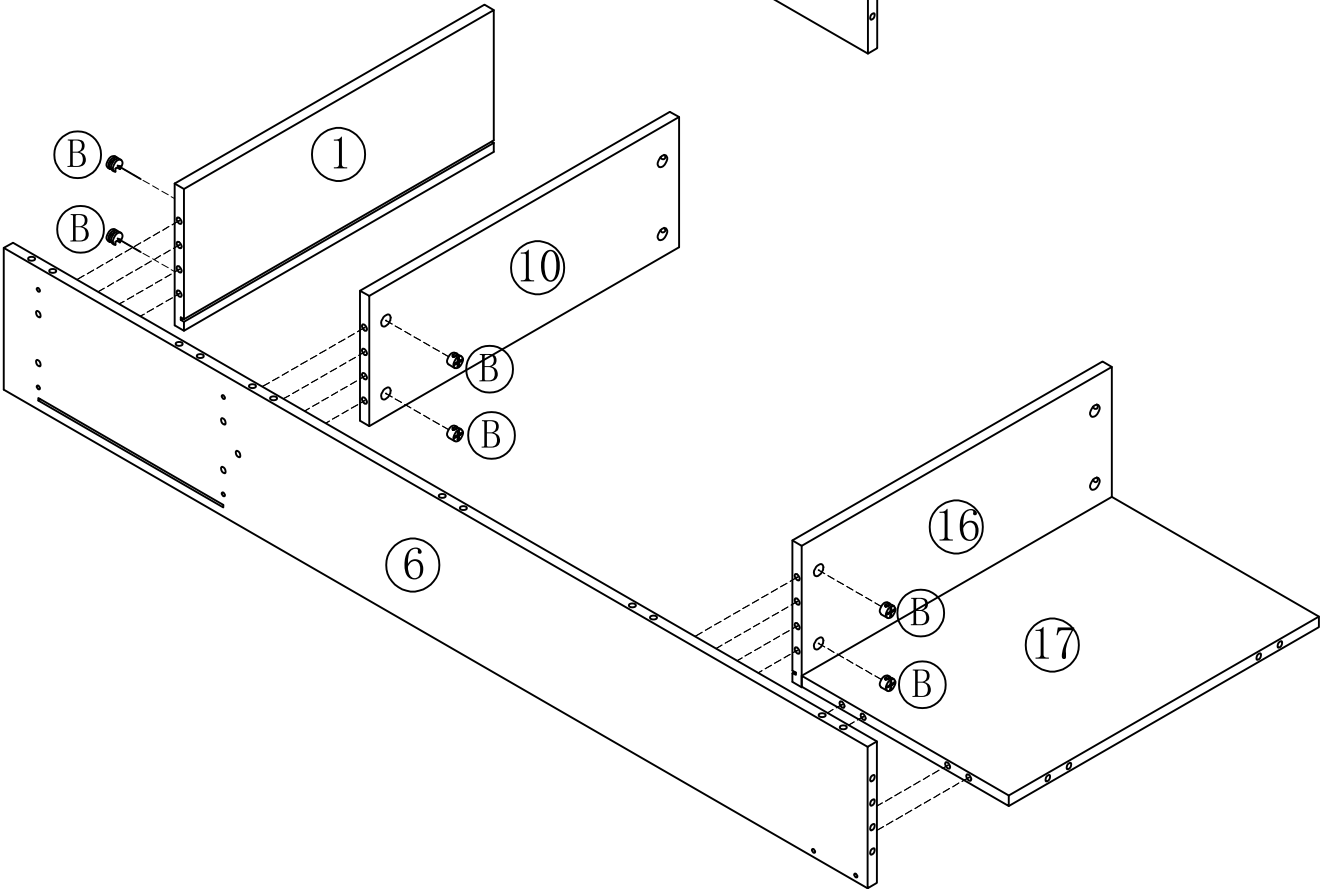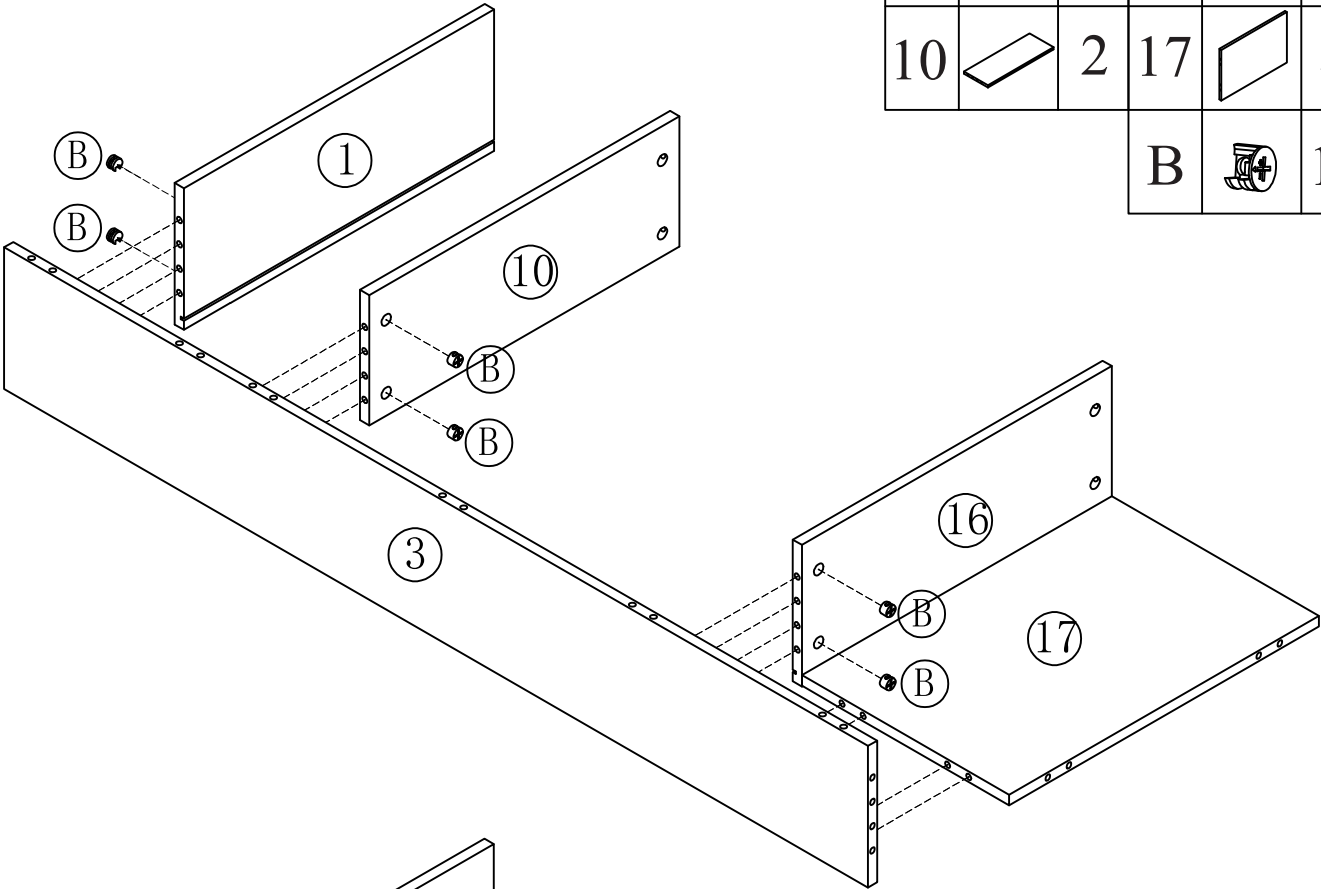

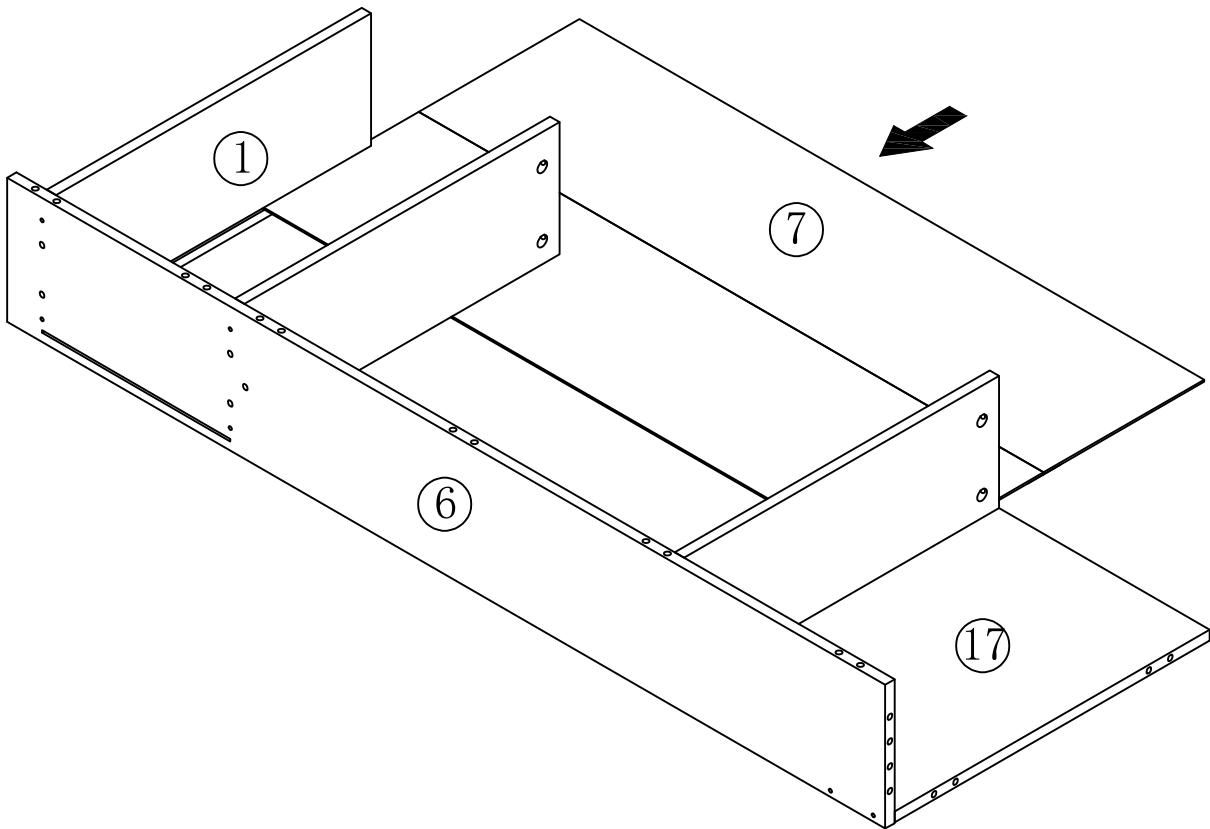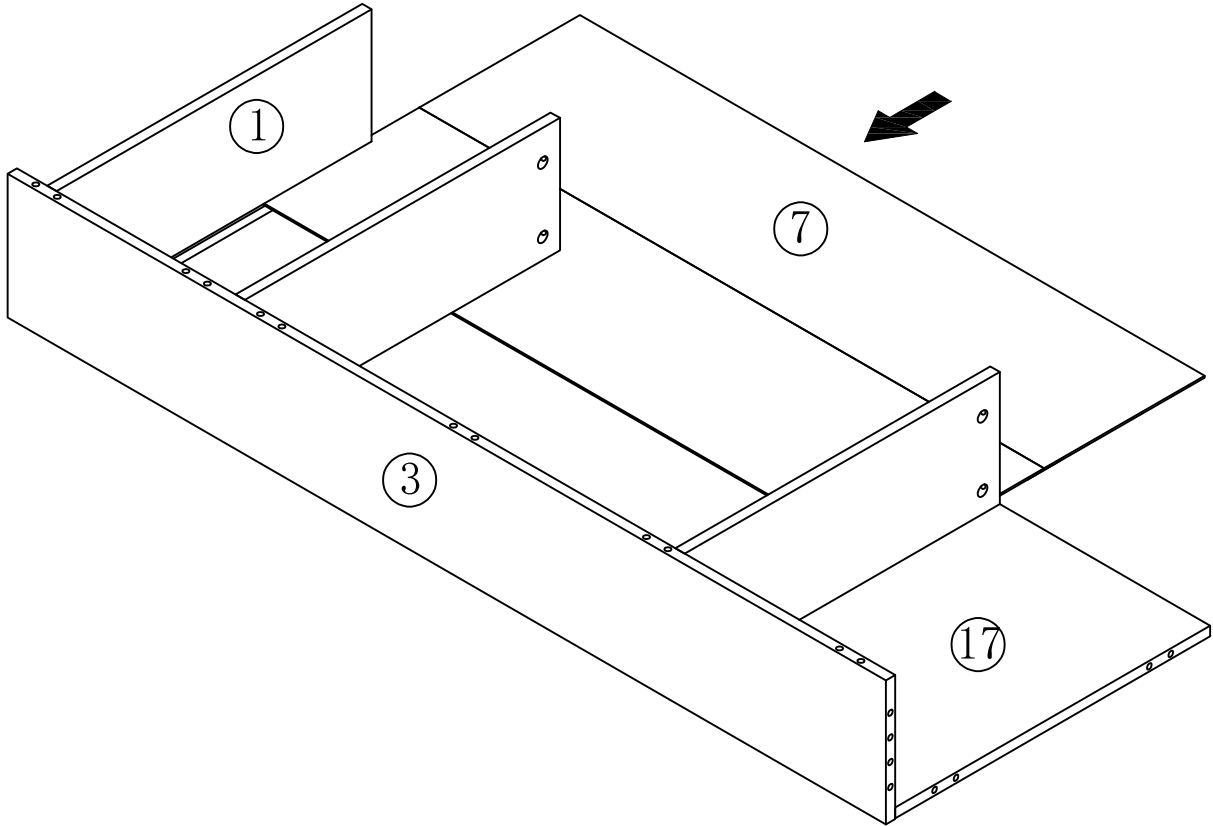



Step/Étape 4



B		6
---	--	---

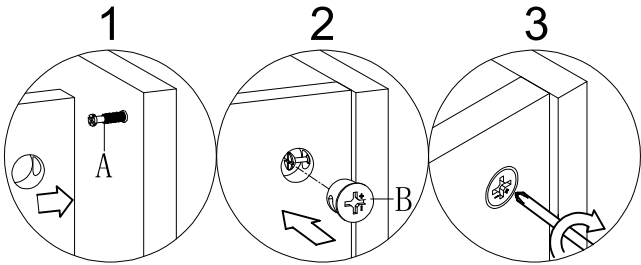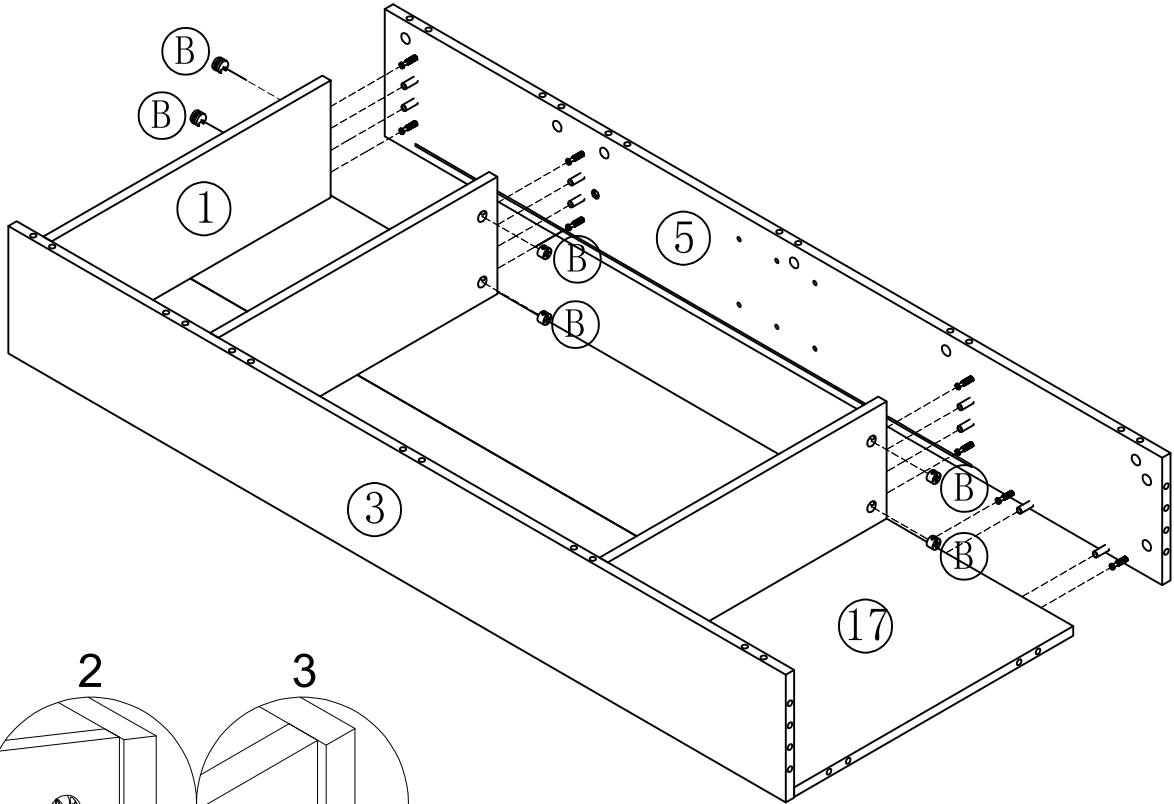

Step/Étape 5


B		6
---	---	---

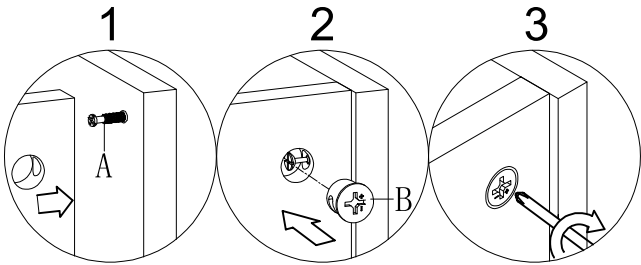
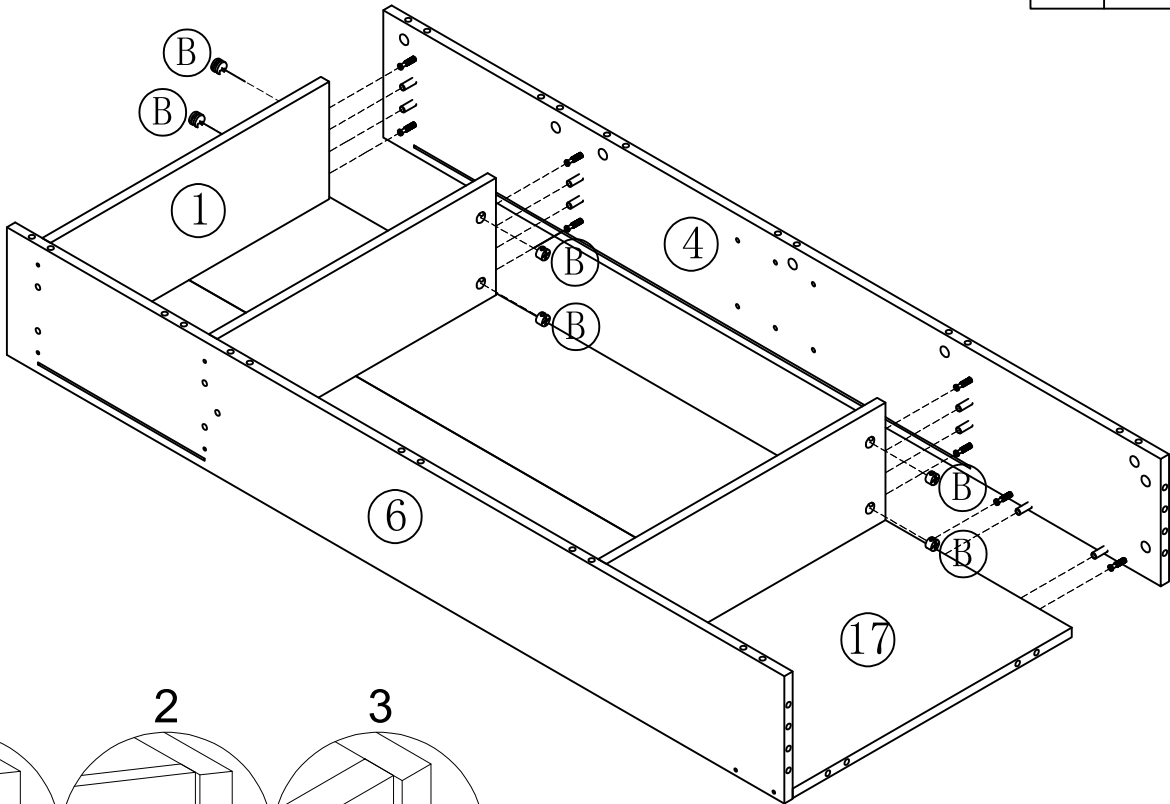


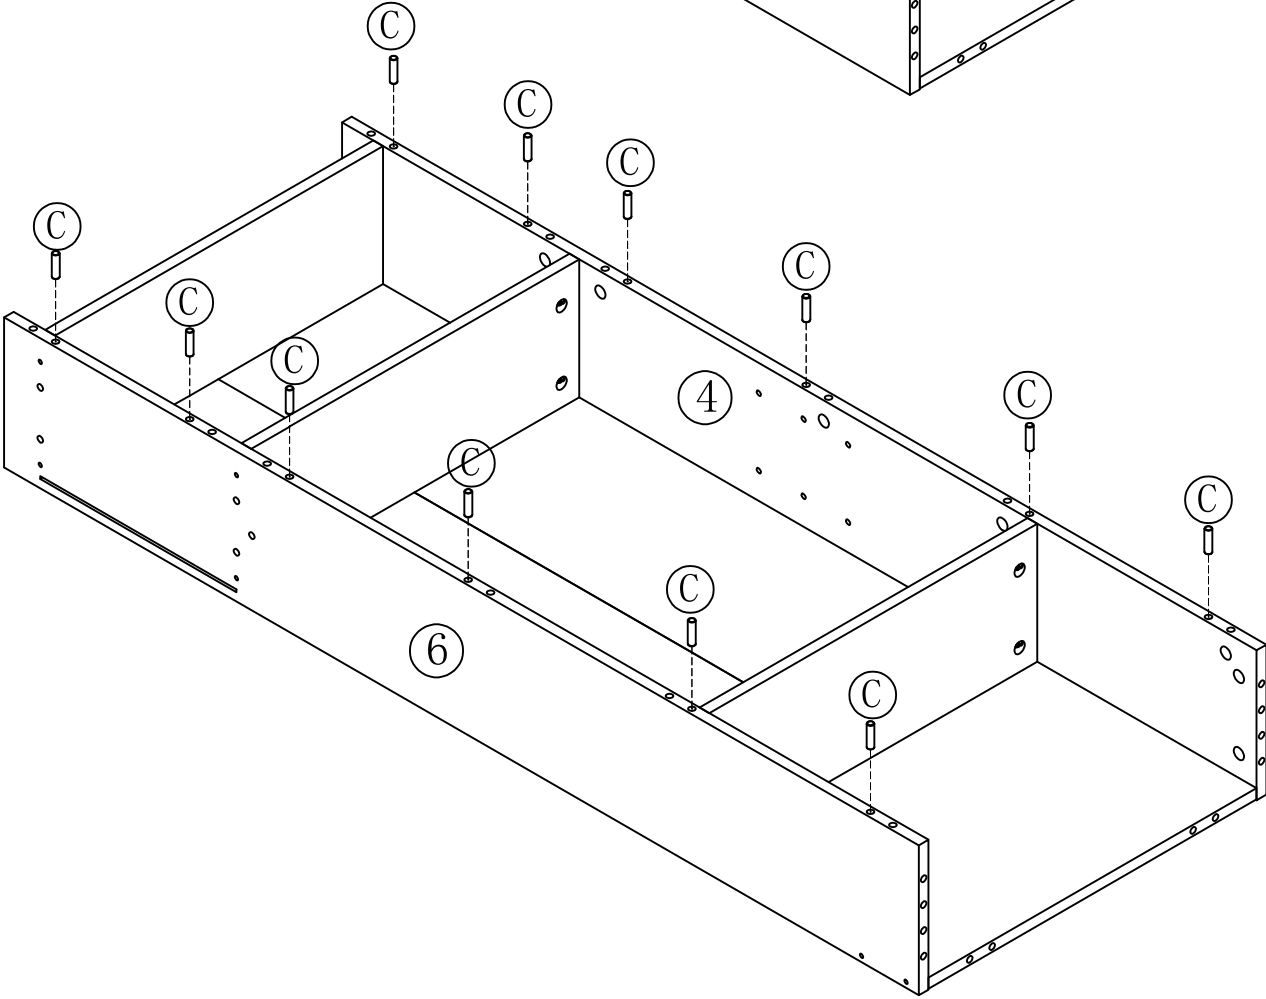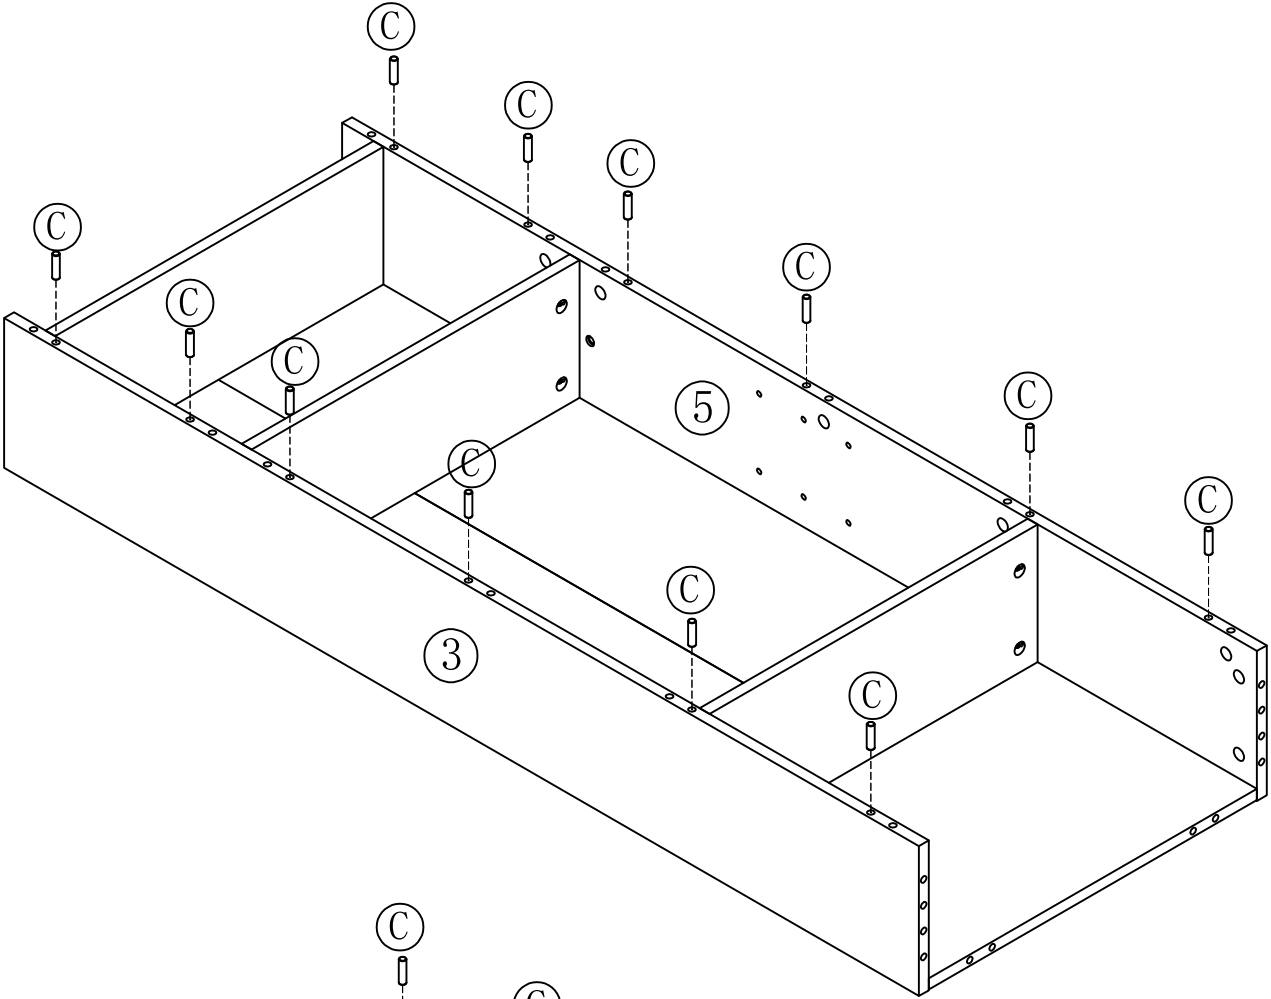

Step/Étape 7



8		2
9		4
A		24

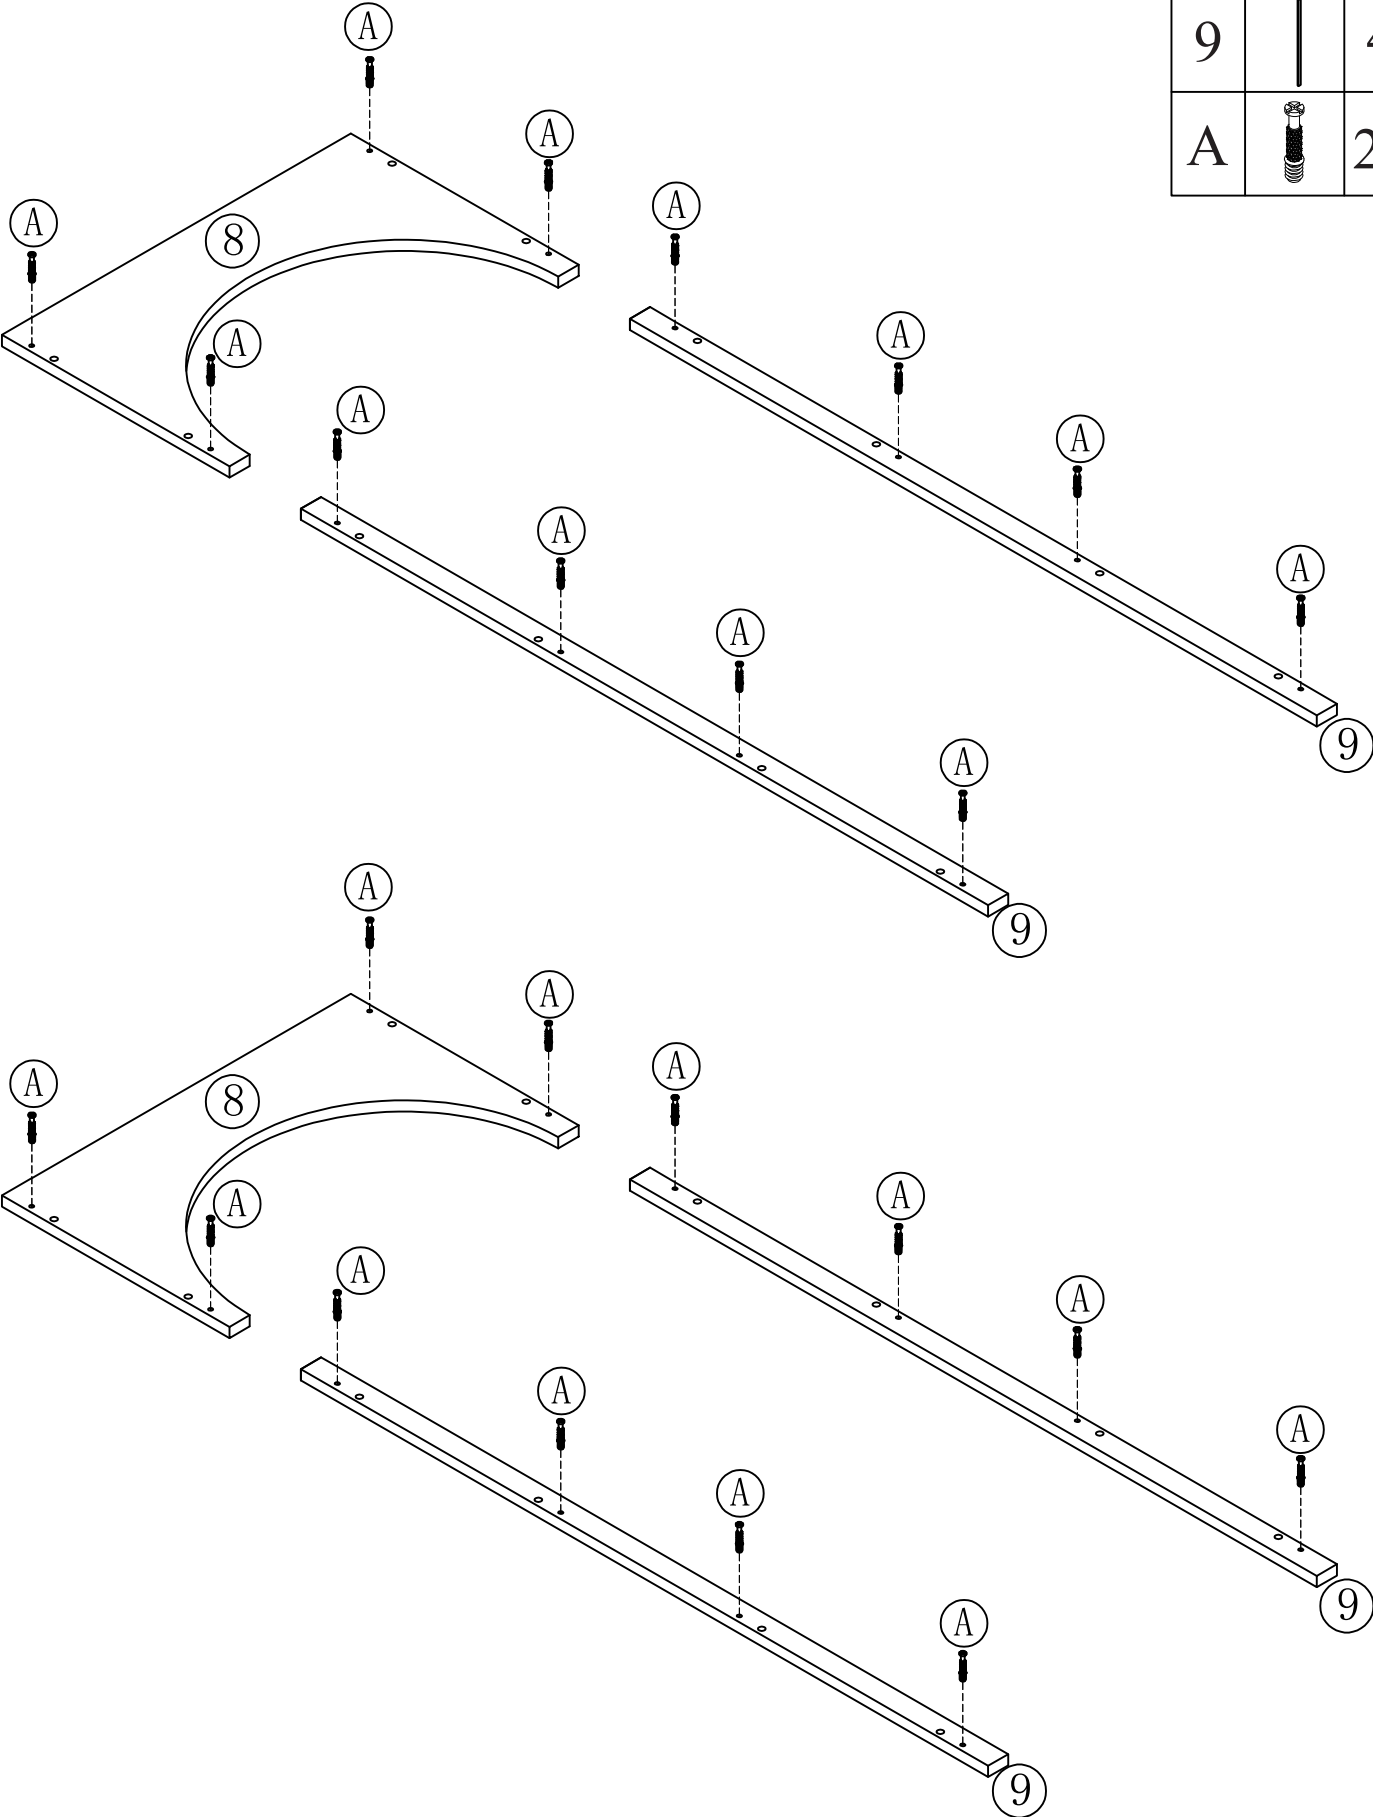

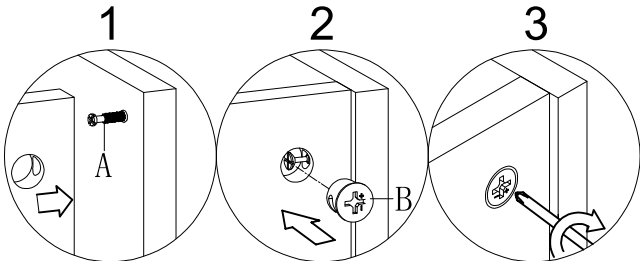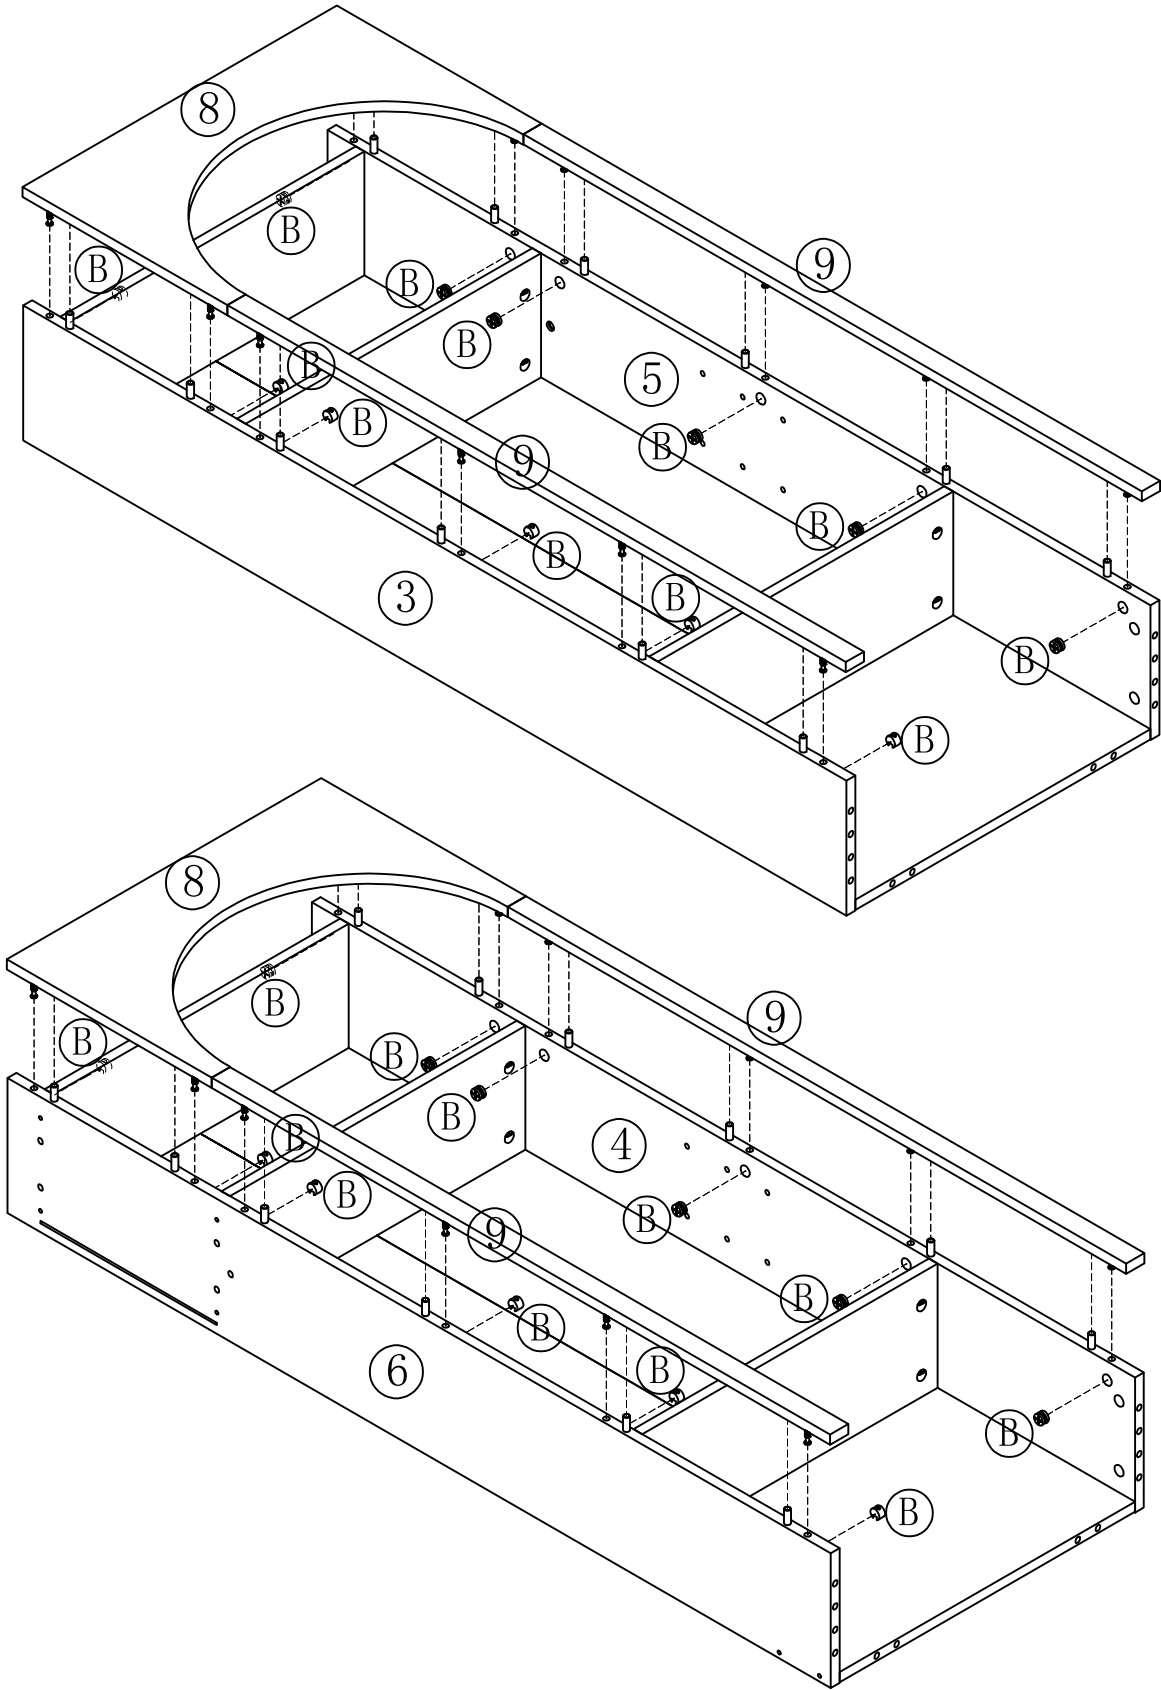


Step/Étape 9

A		12
C		8

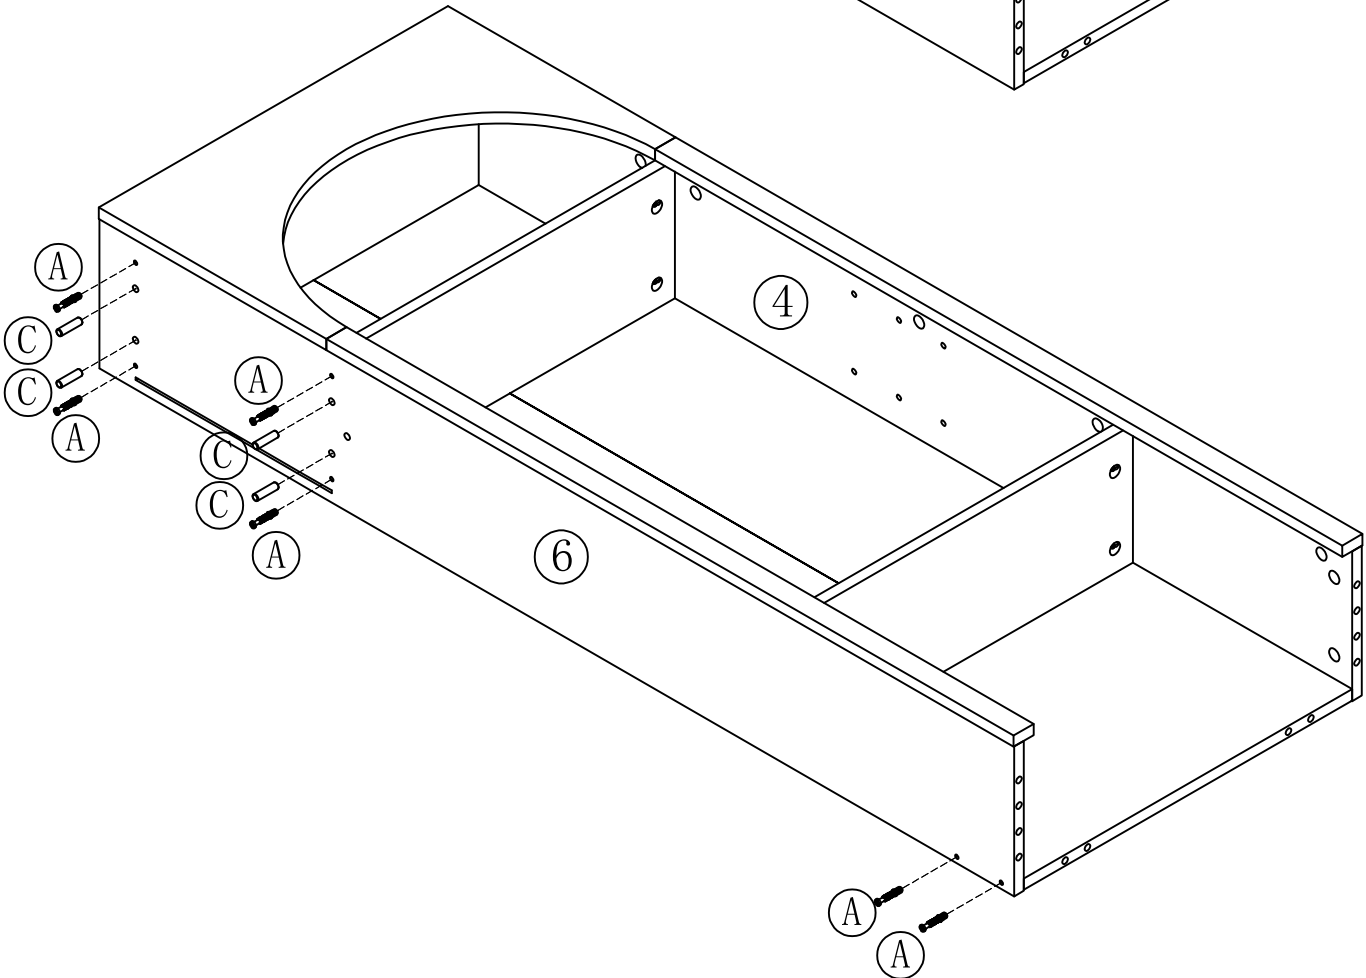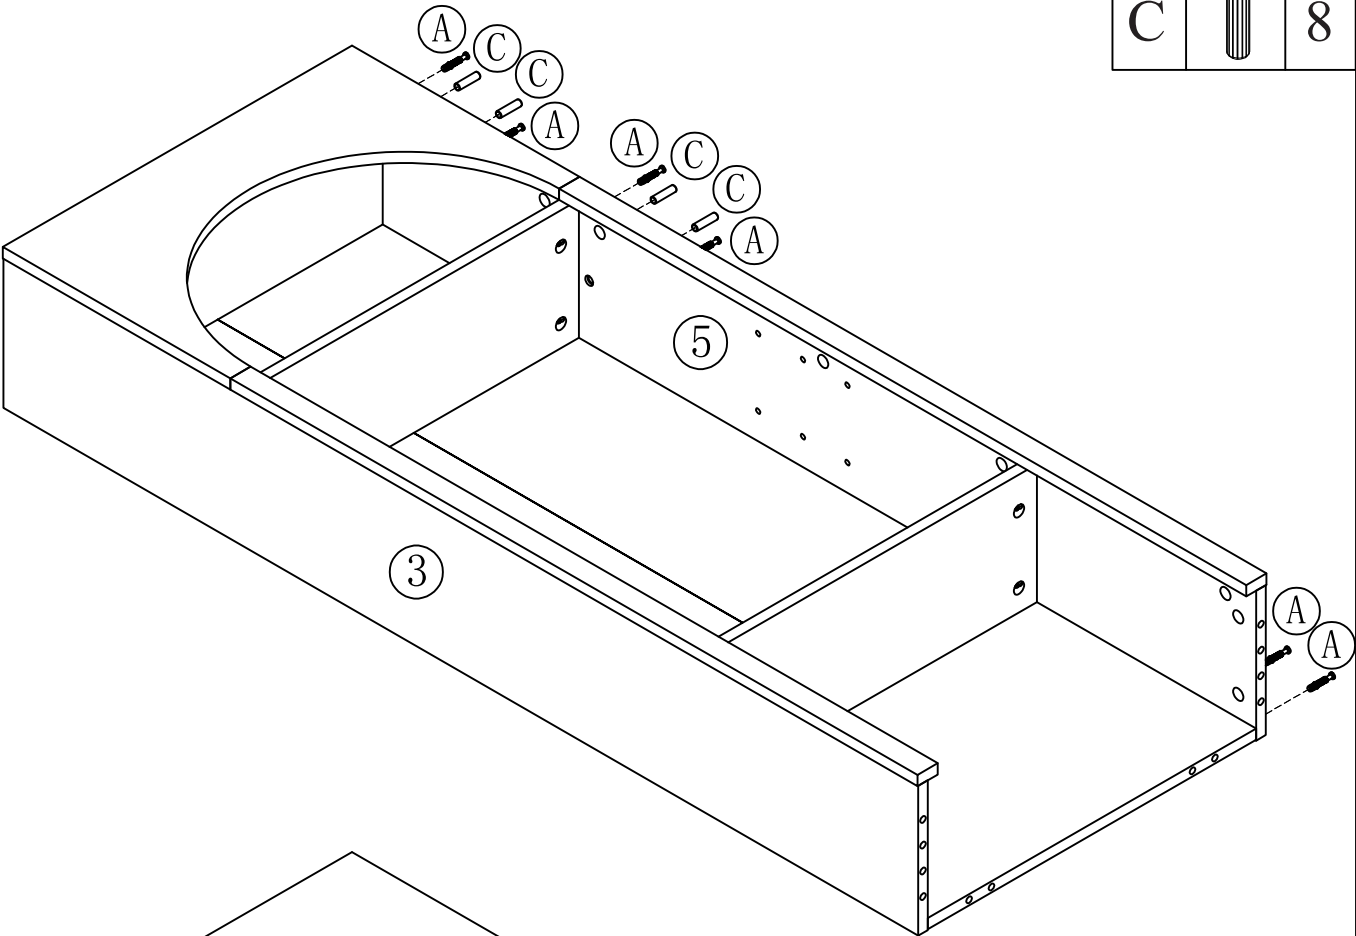



Step/Étape 10

11		1	C		4
A		4	O		4
			P		2

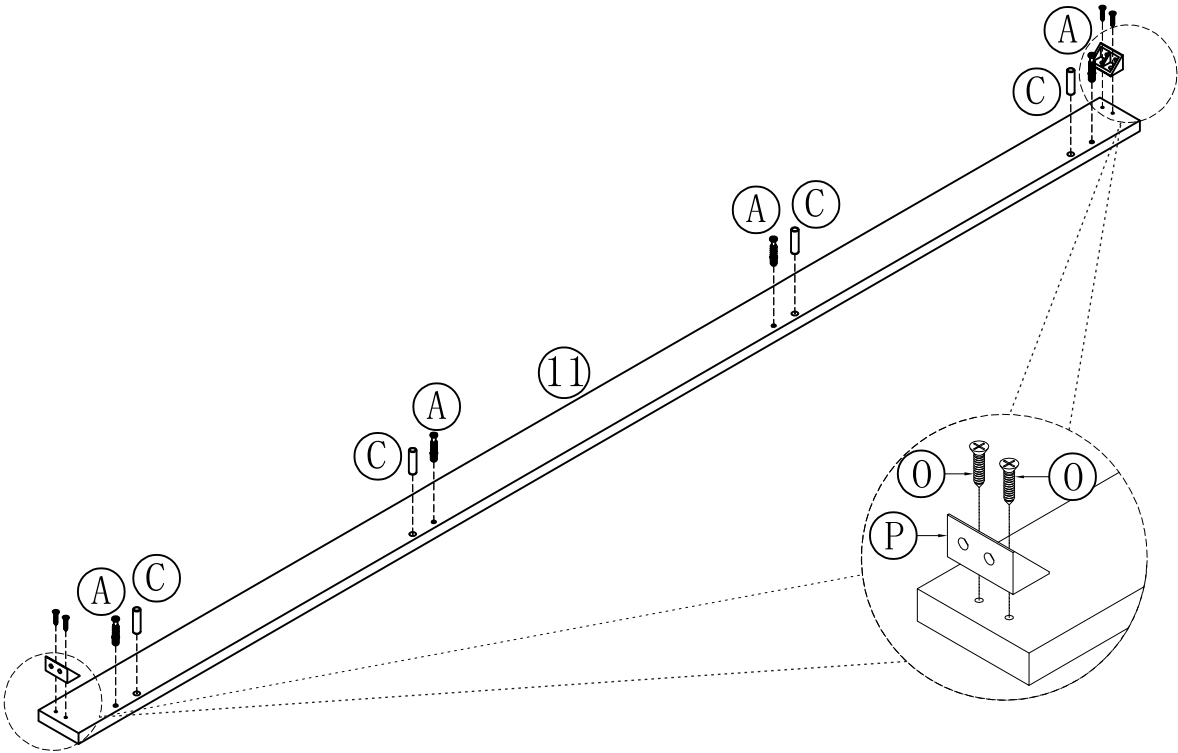


Step/Étape 11

2		1
B		4

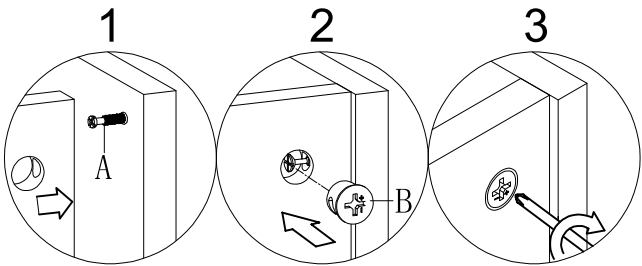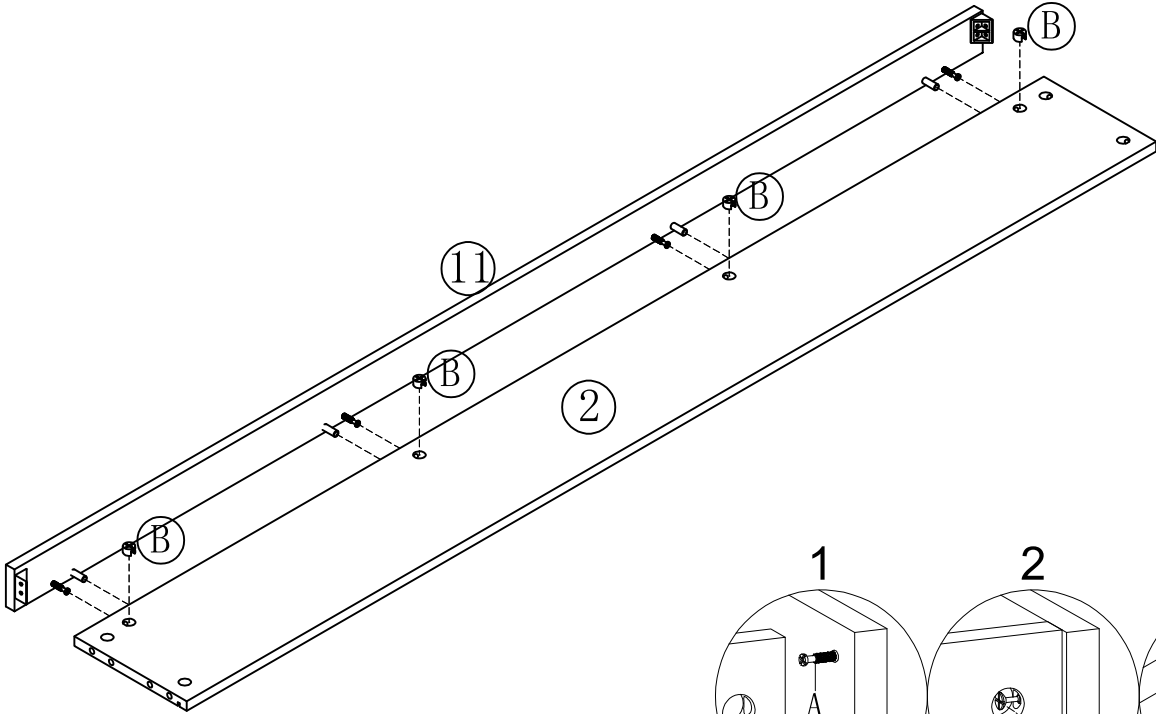


Step/Étape 12

13		1
14		1
T		5

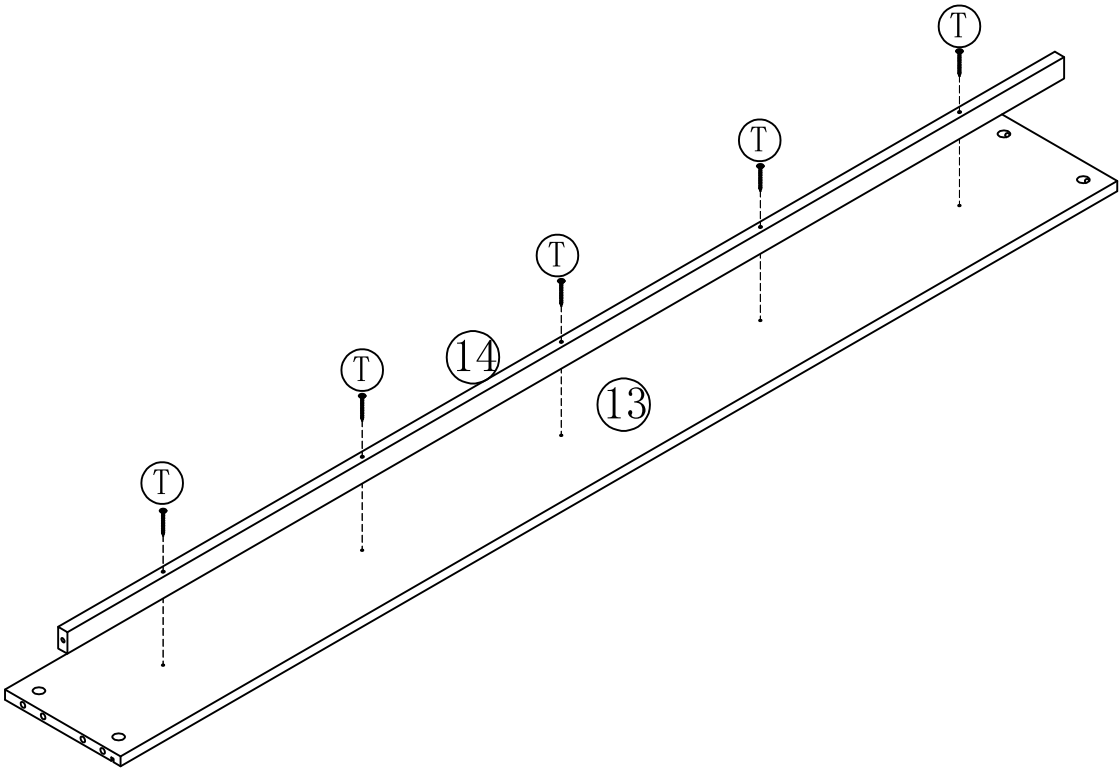


Step/Étape 13

12		1	B		4
18		1	U		1

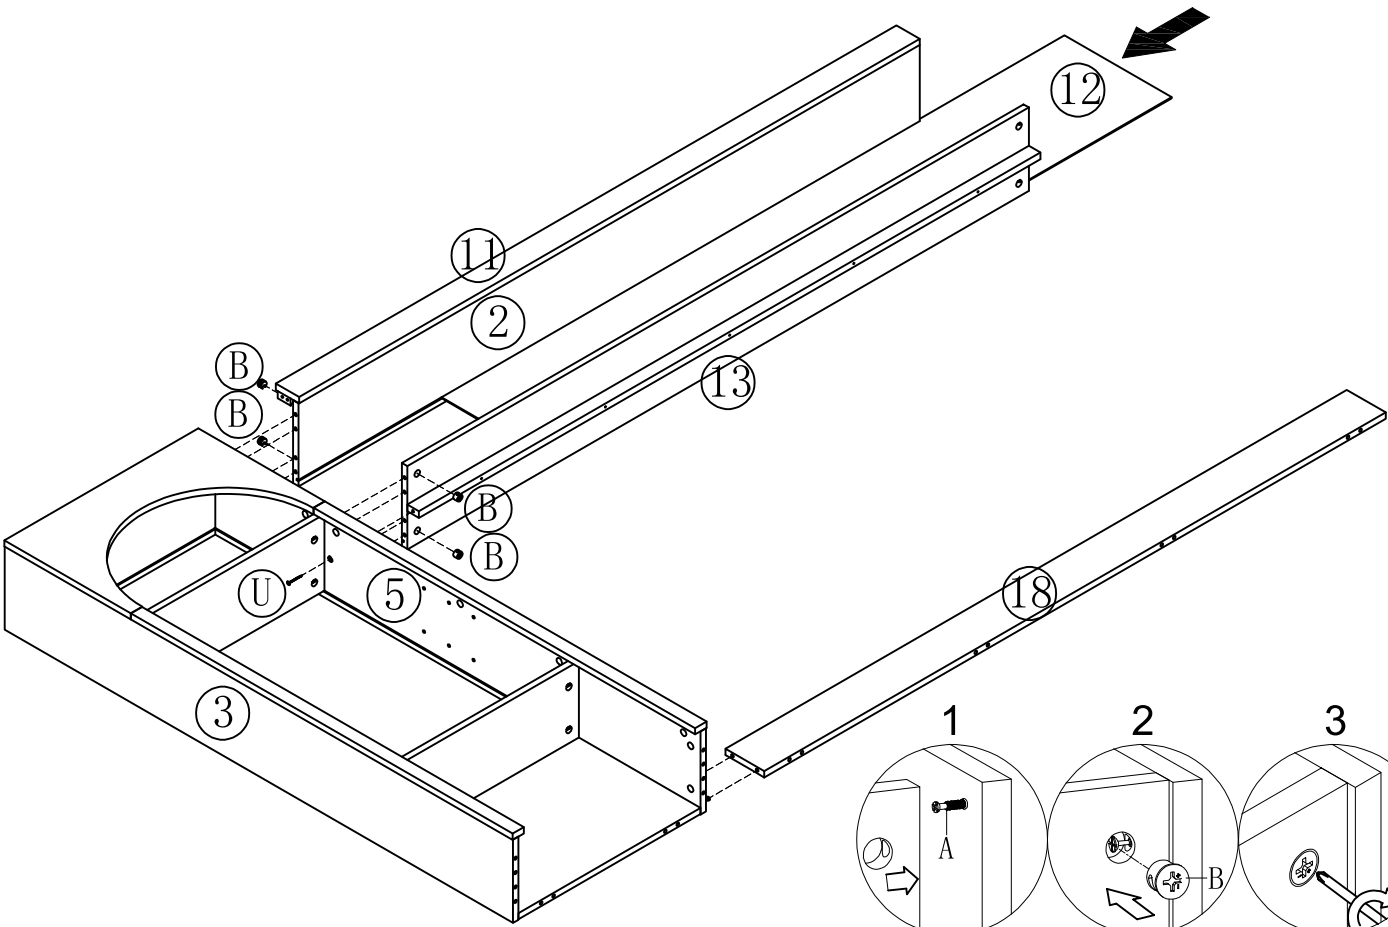

Step/Étape 14



B		4
U		1

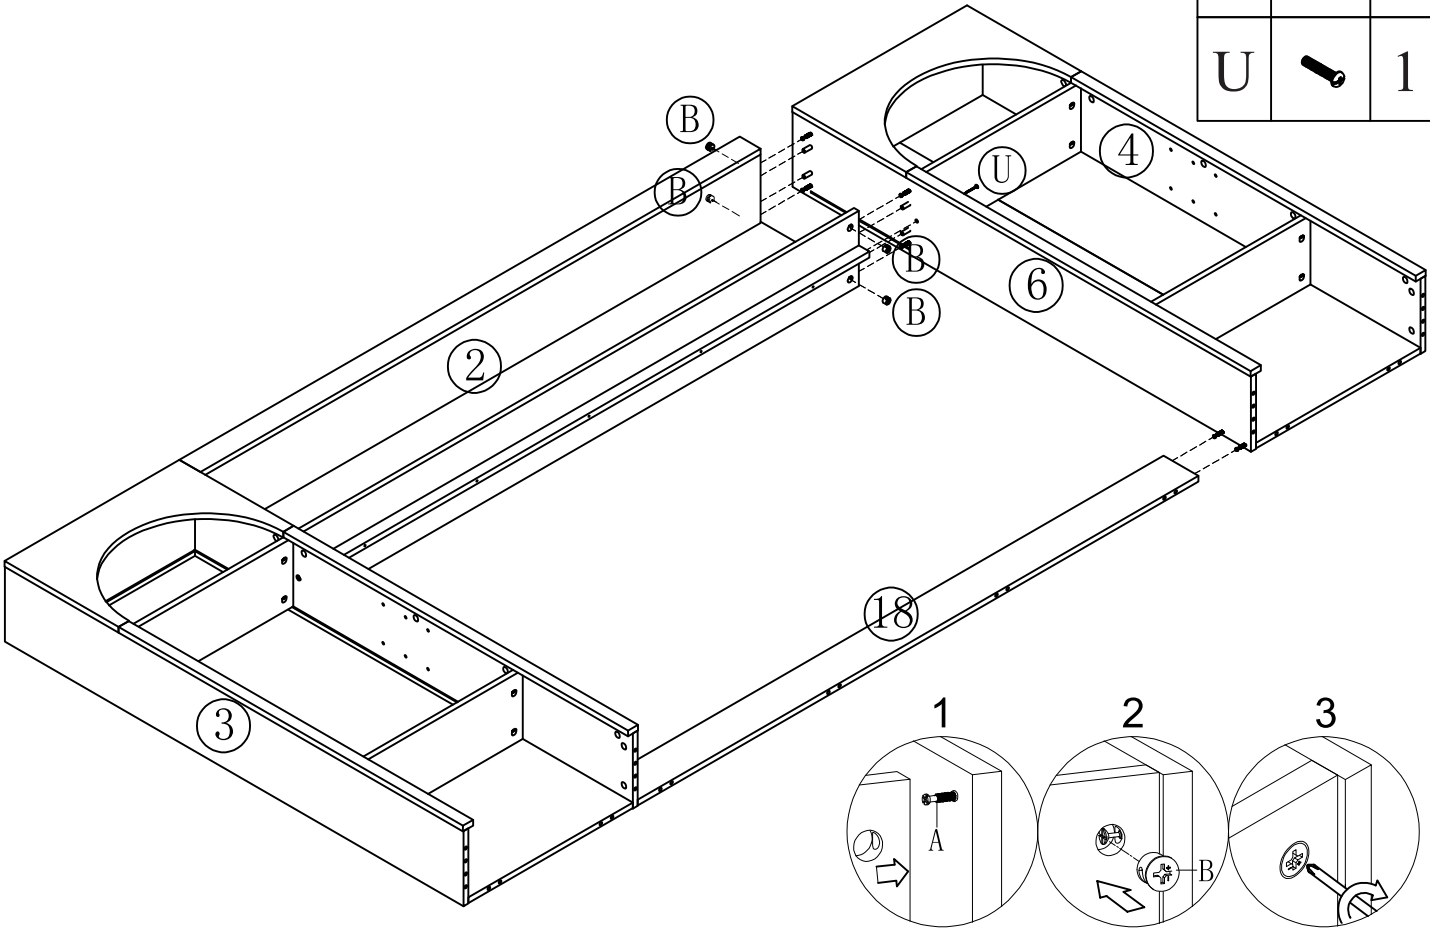

Step/Étape 15


B		12
O		4

At least 2 people are required.

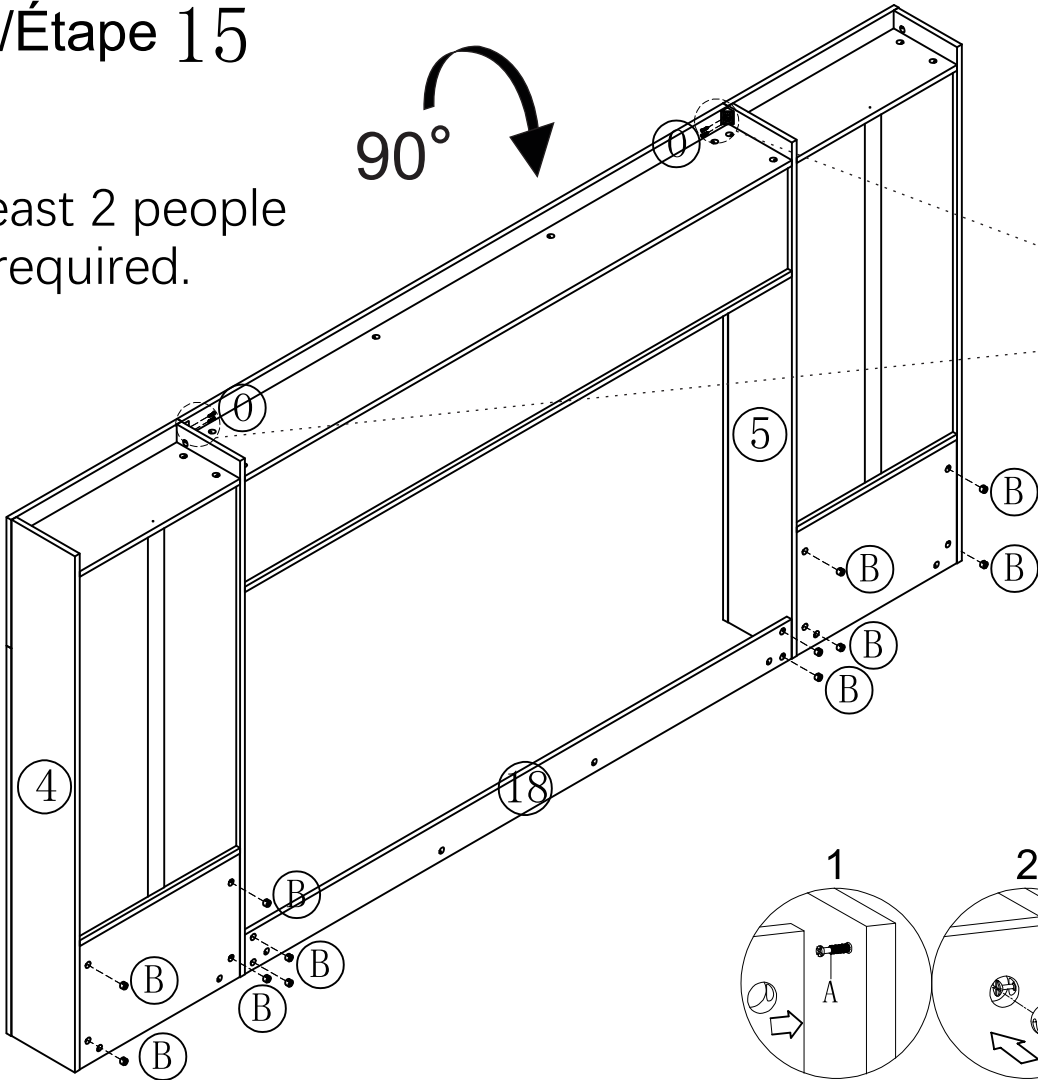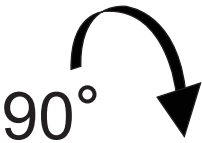

Step/Étape 16

21		1	23		1	35		8
22		1	24		1	D		16
						M		16

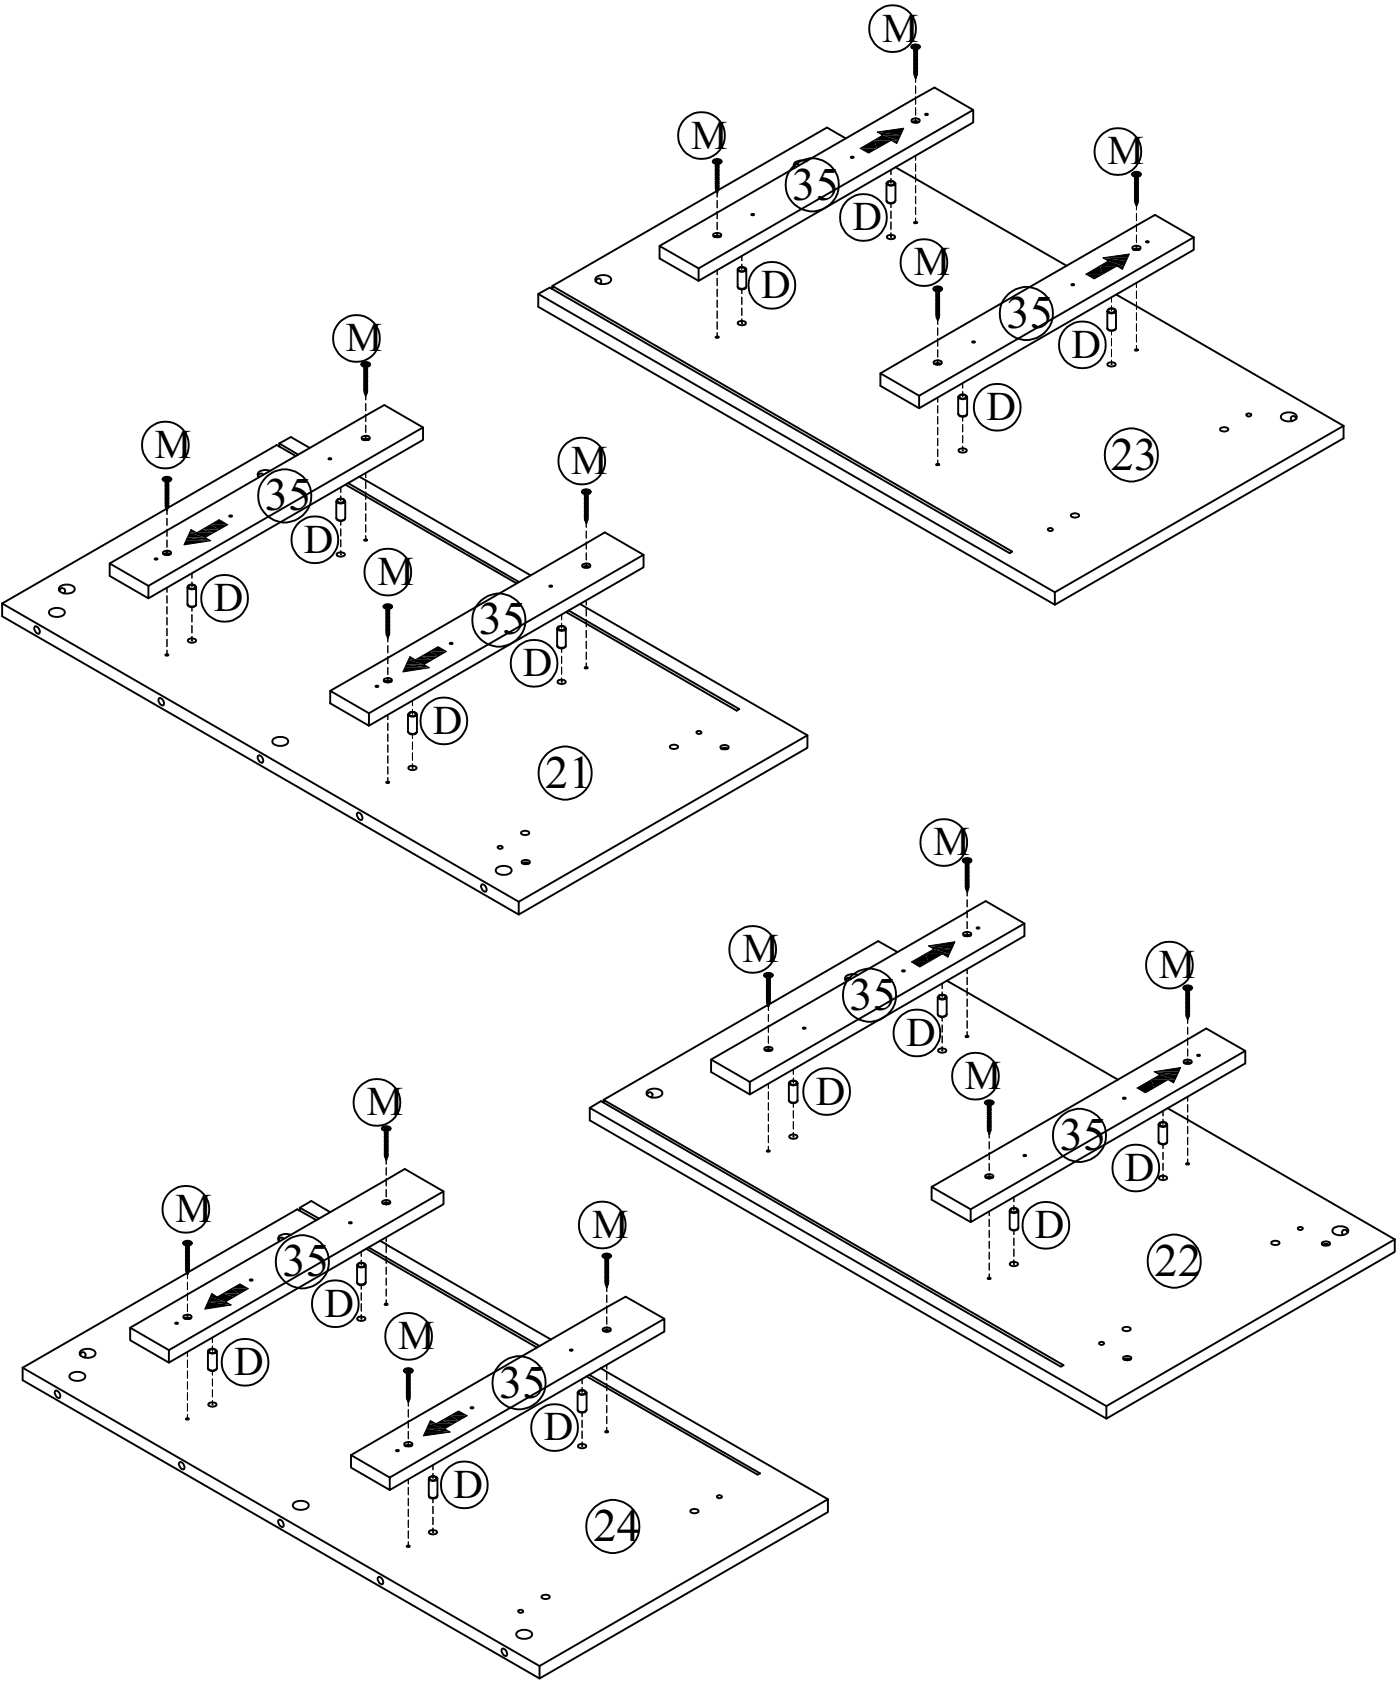

Step/Étape 17

Y



8

Slides Must Be Separated Before Assembly,
After Separated, Set Aside Until Needed for Assembly.

Step 1: Extend Slide

Step 2: Push Lever Up

Step 3: Remove Runner


Les lames doivent être séparées avant l'assemblage.

Une fois séparées elles doivent être mises de
côté jusqu'à leur utilisation pour l'assemblage


Étape 1 : Étendre la diapositive

Étape 2 : Poussez le levier vers le haut



Étape 3 : Supprimer le Runner

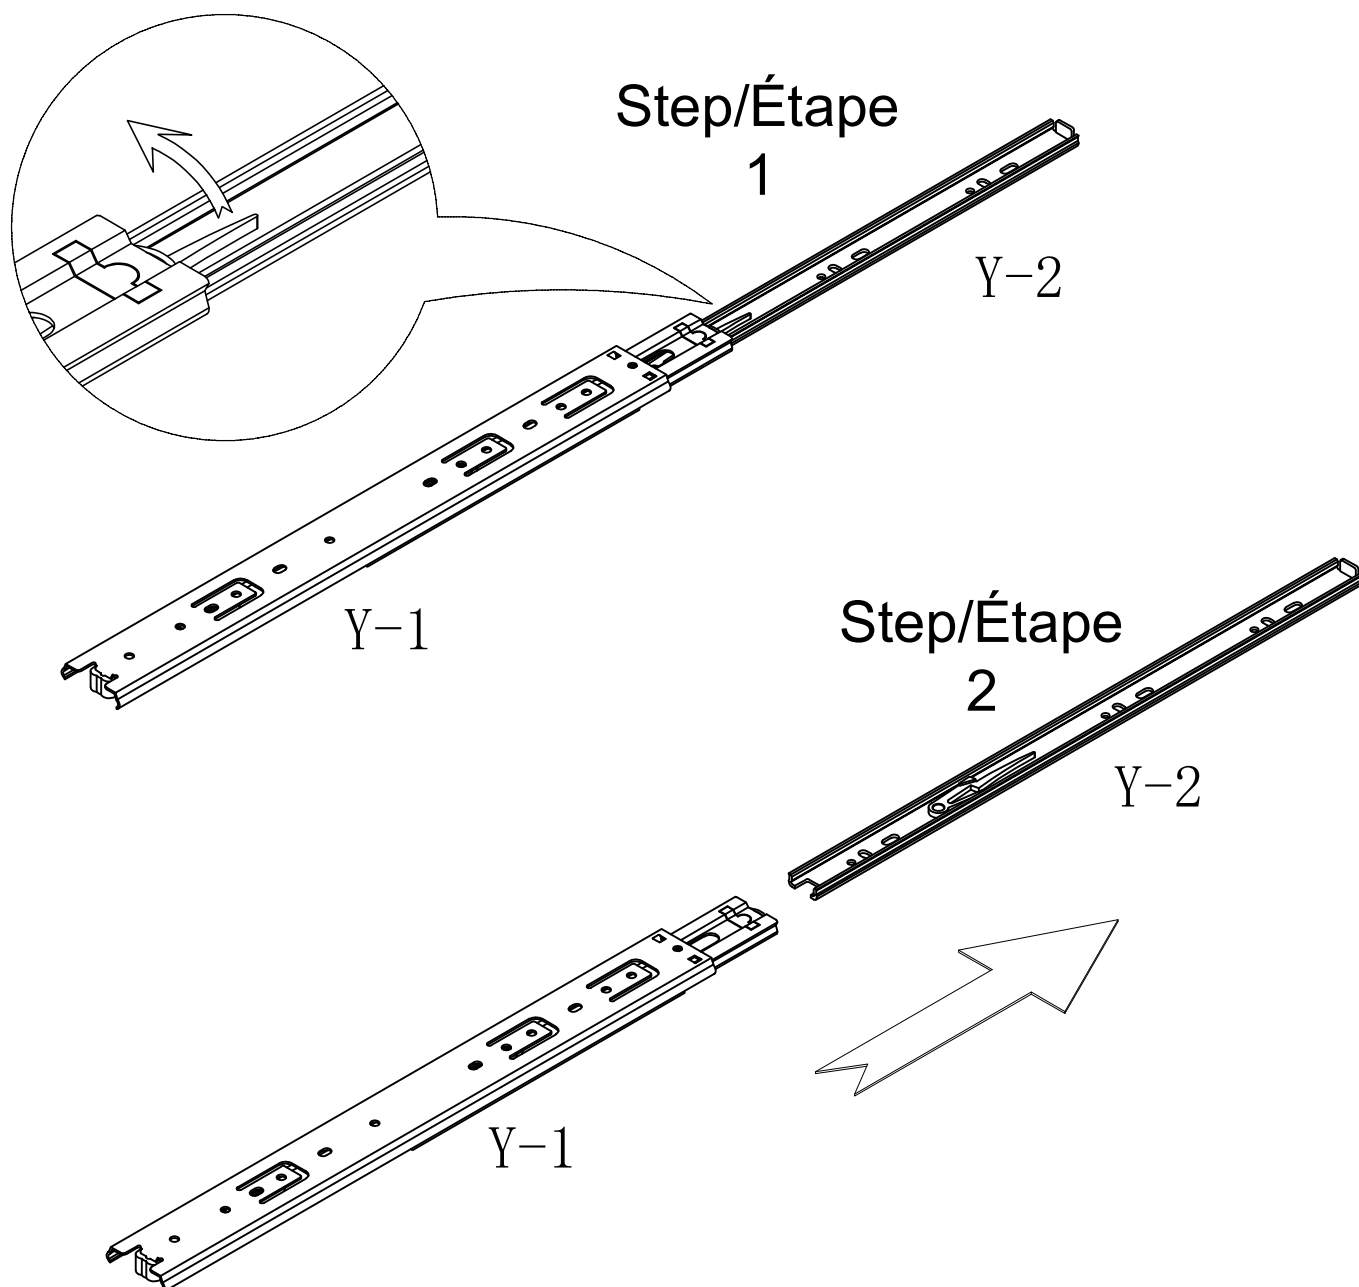


Step/Étape 18

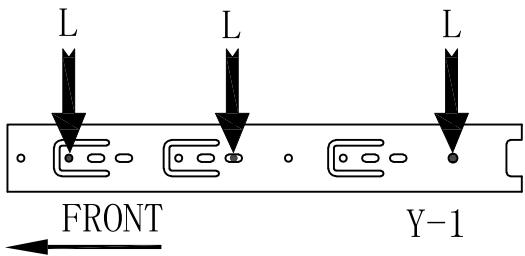



A		4	L		12
C		4	Y-1		4

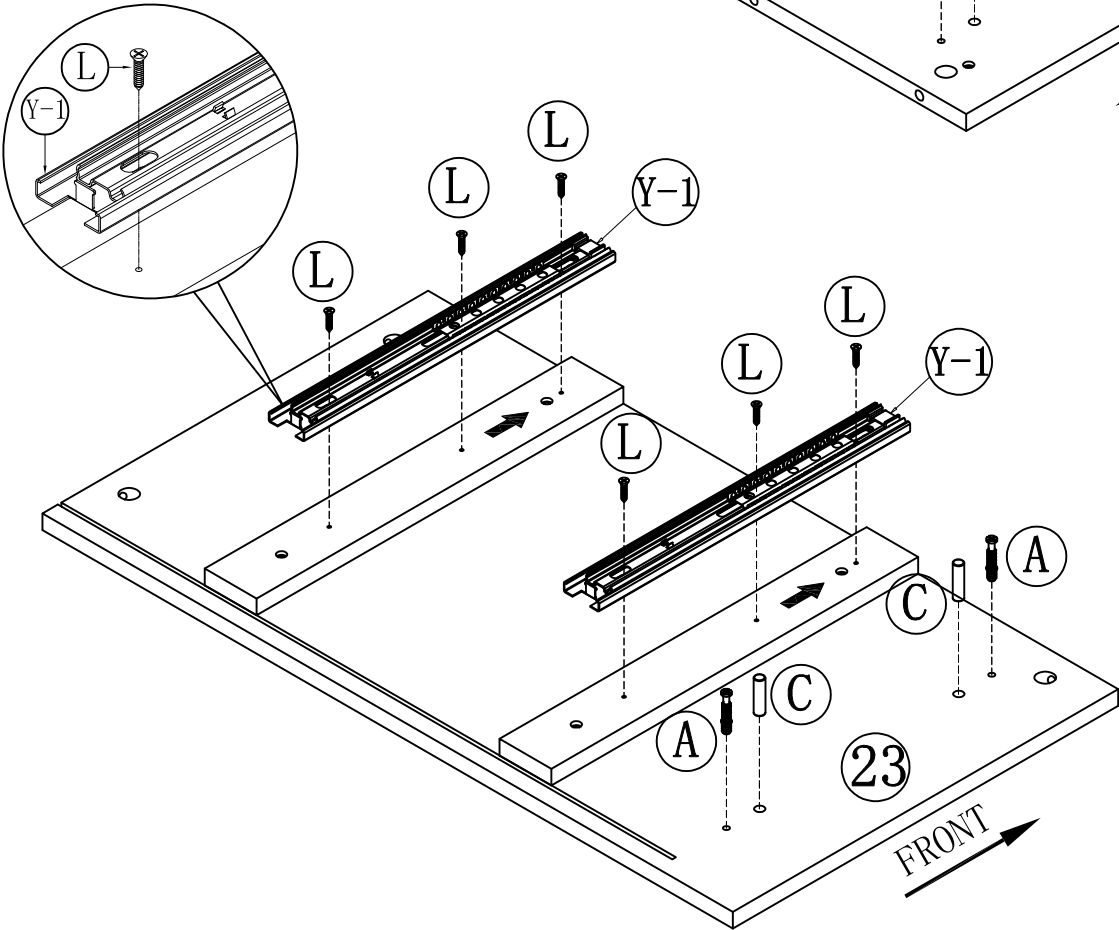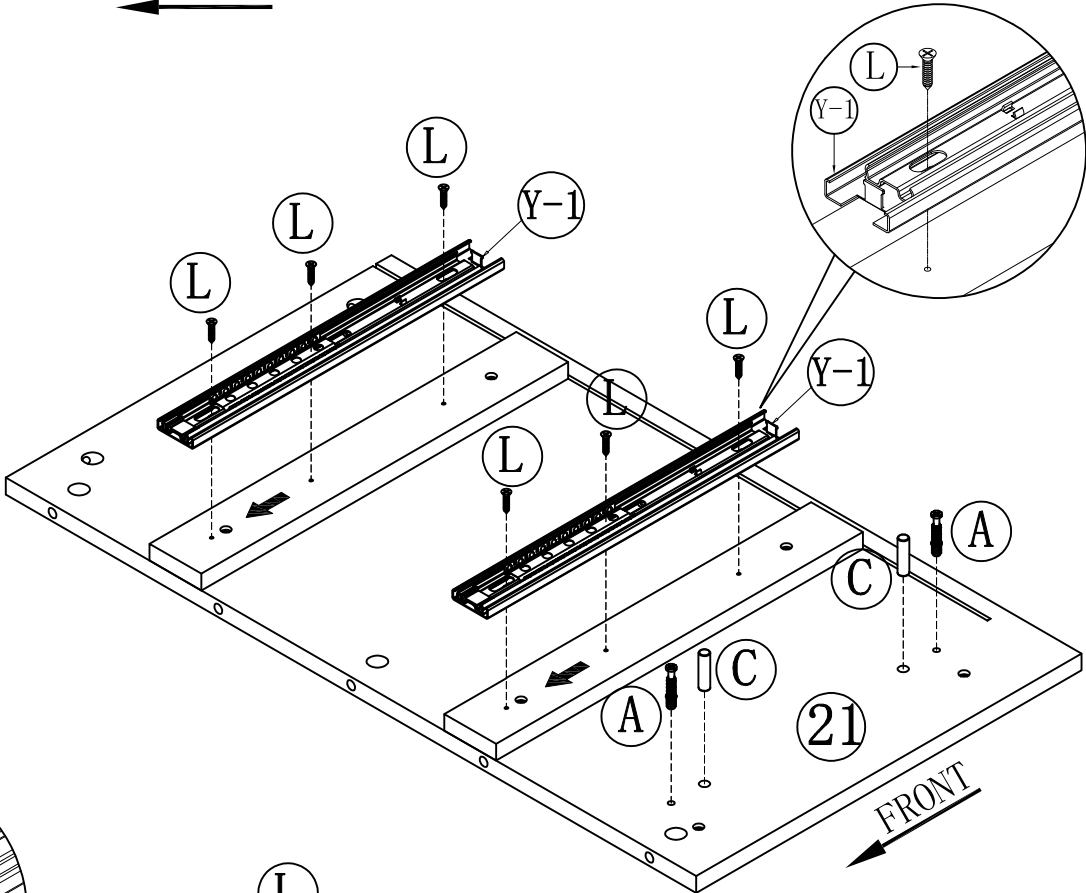

Step/Étape 19

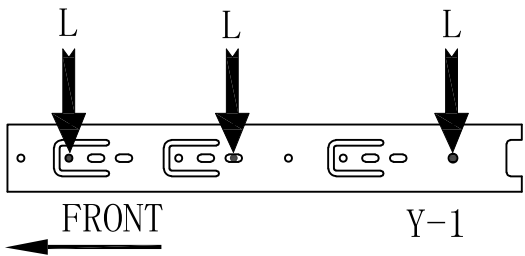


A		4	L		12
C		4	Y-1		4

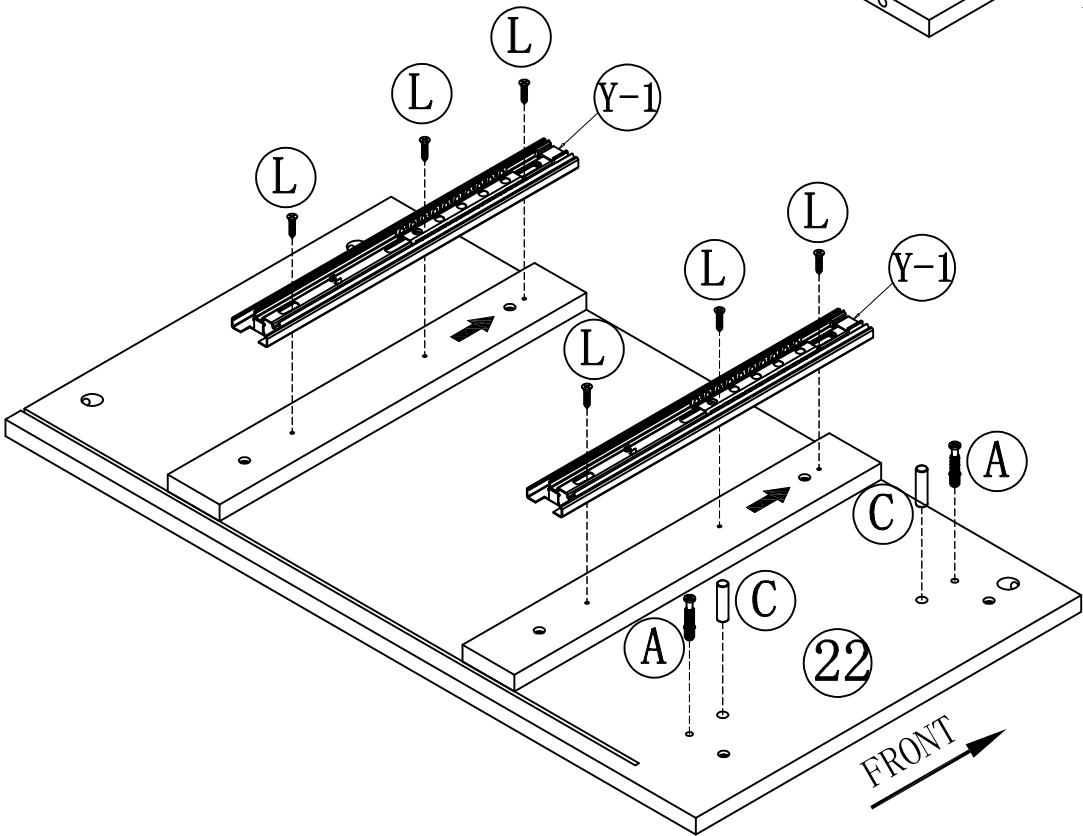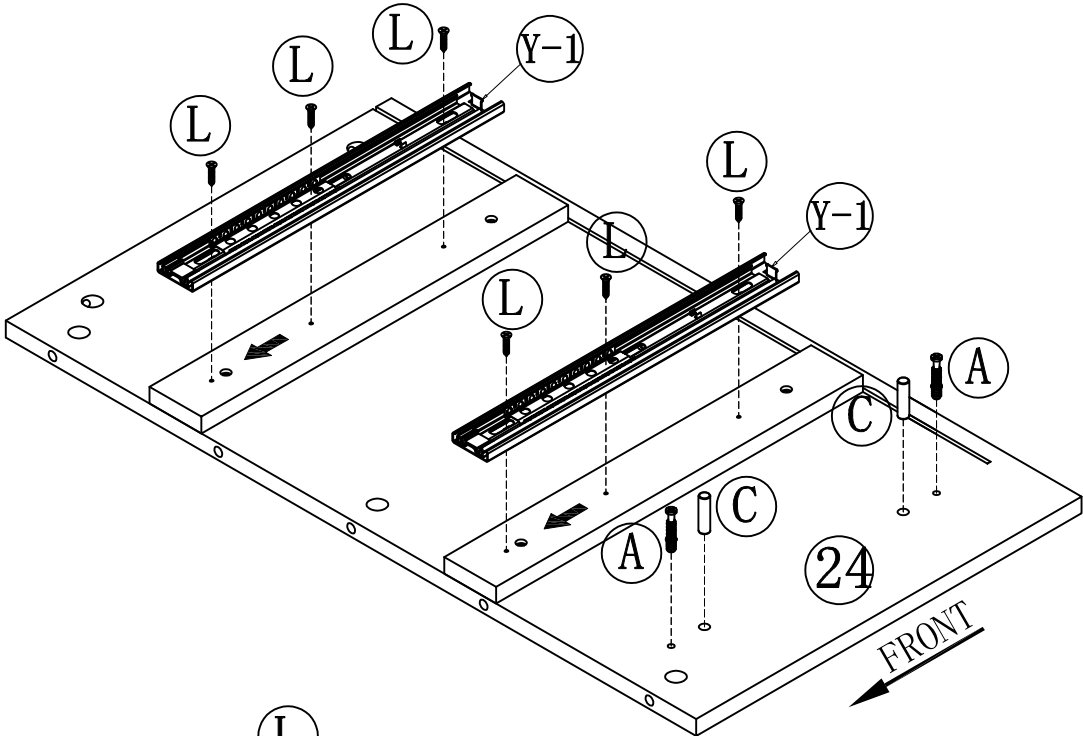



Step/Étape 20

38		2
A		6
C		4

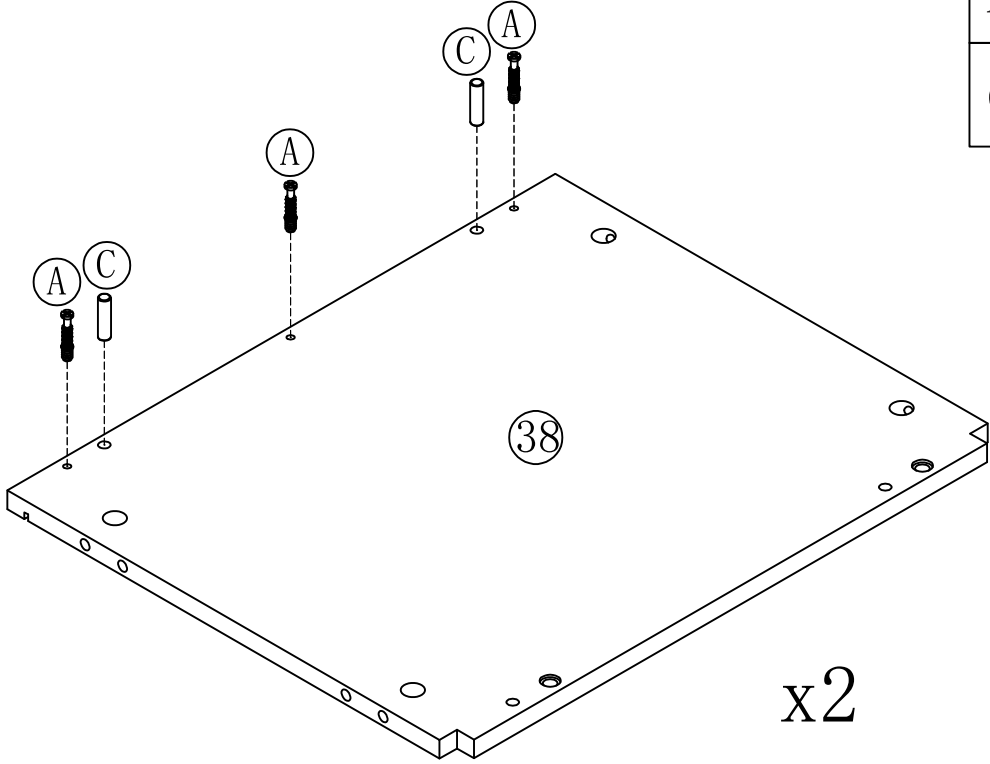


Step/Étape 21

39		2
B		6

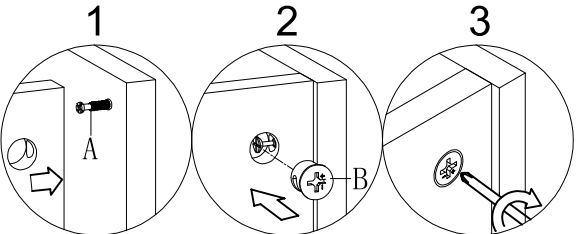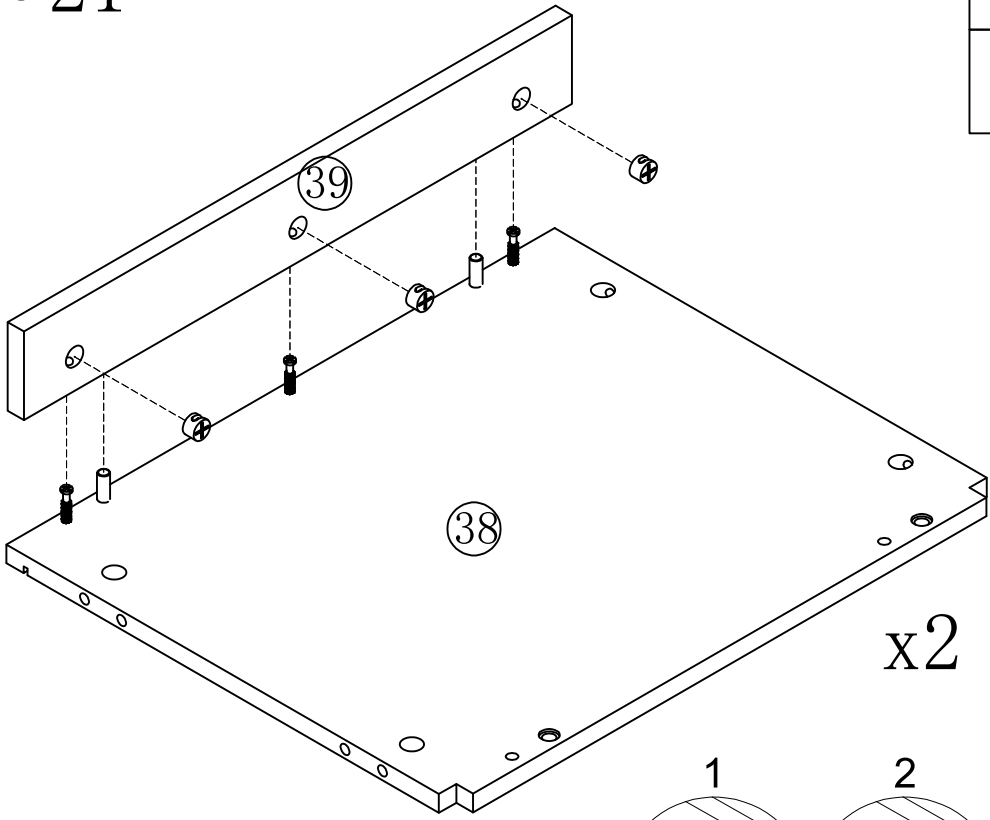


Step/Étape 22

B		4
---	--	---

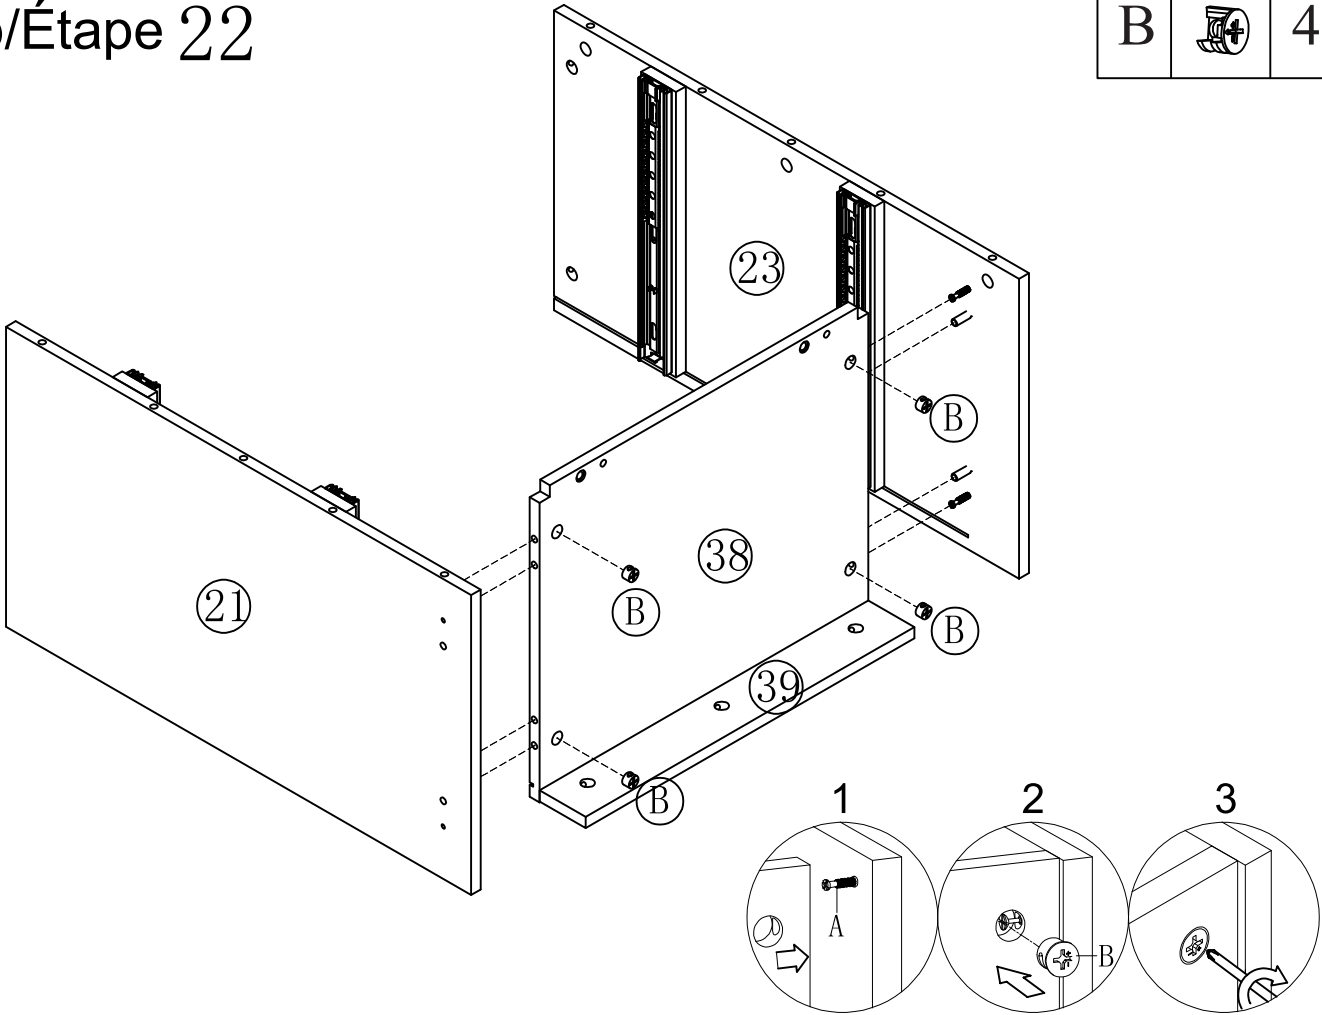


Step/Étape 23

B		4
---	---	---

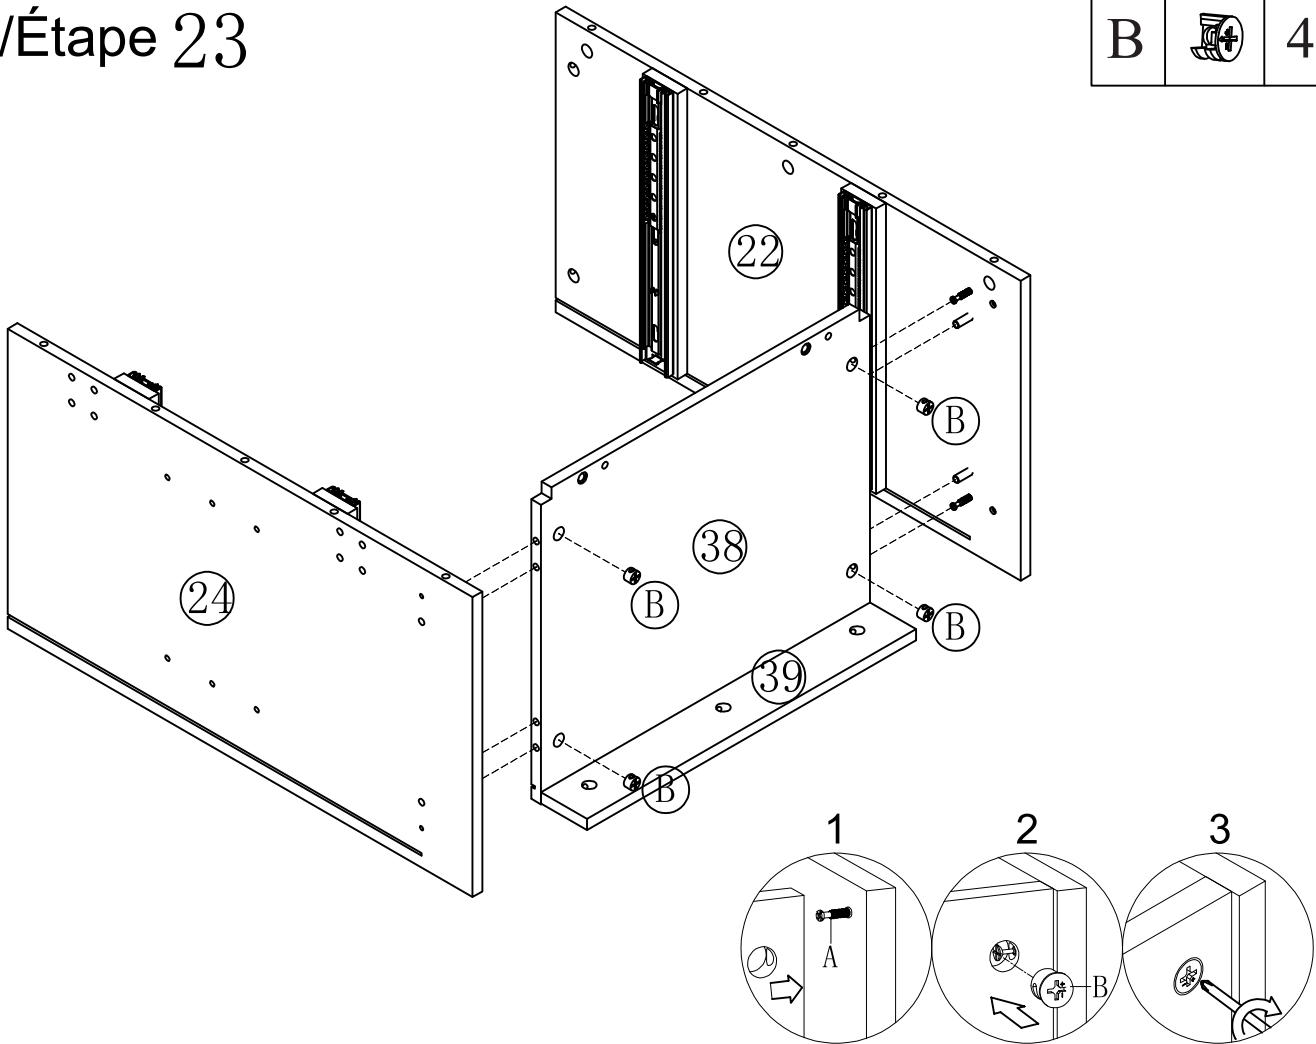



Step/Étape 24

37		4	D		16
			M		8

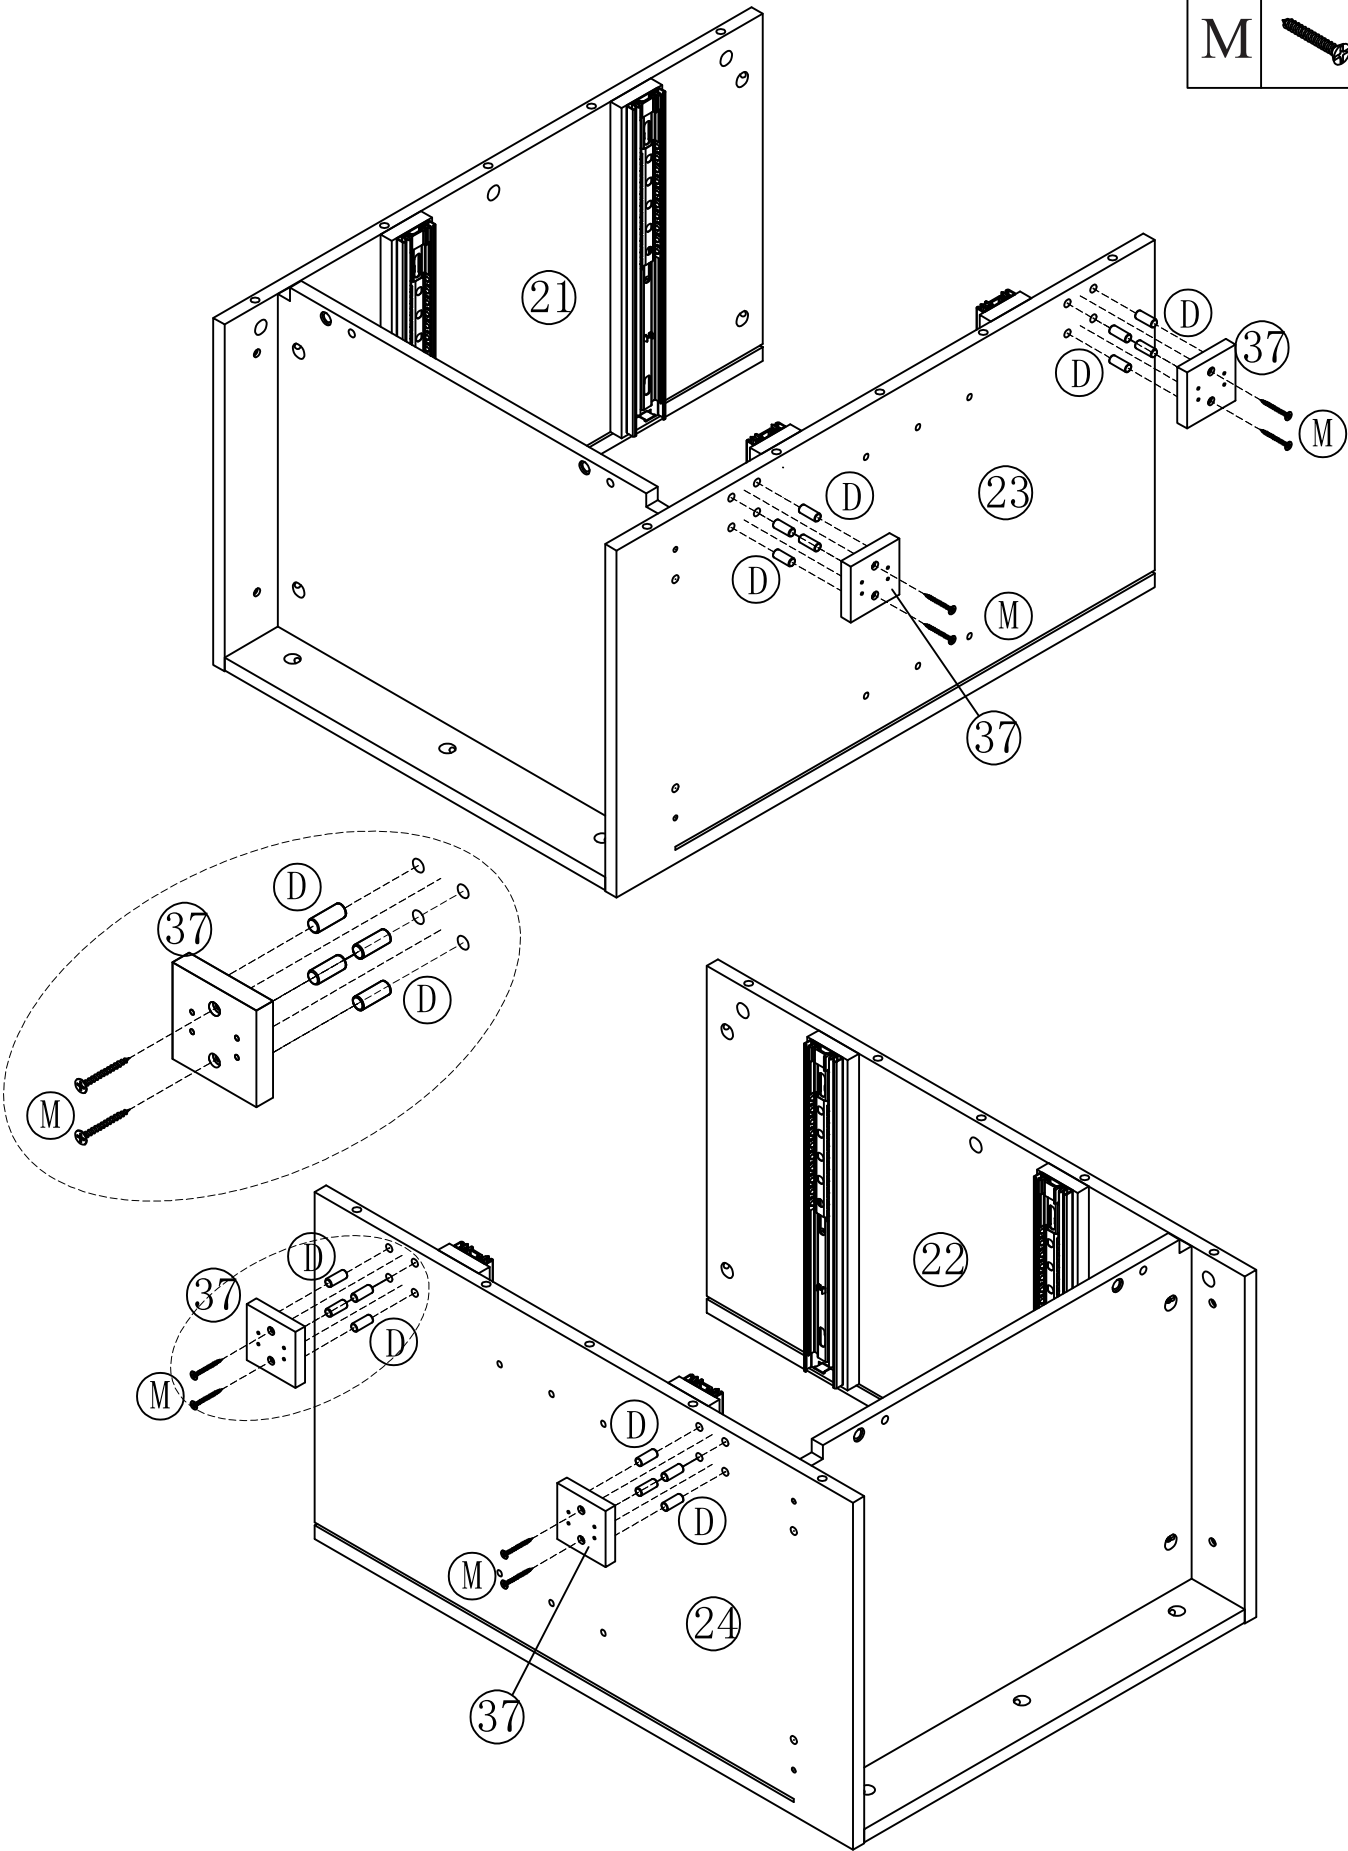


Step/Étape 25

A		4
C		4

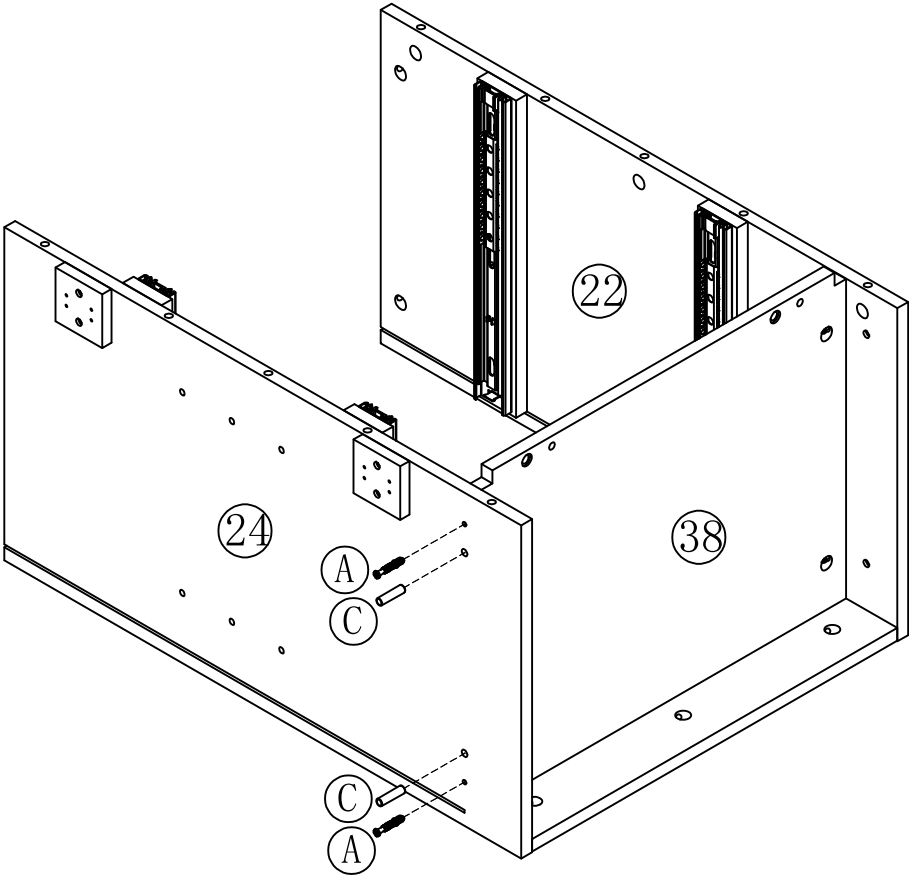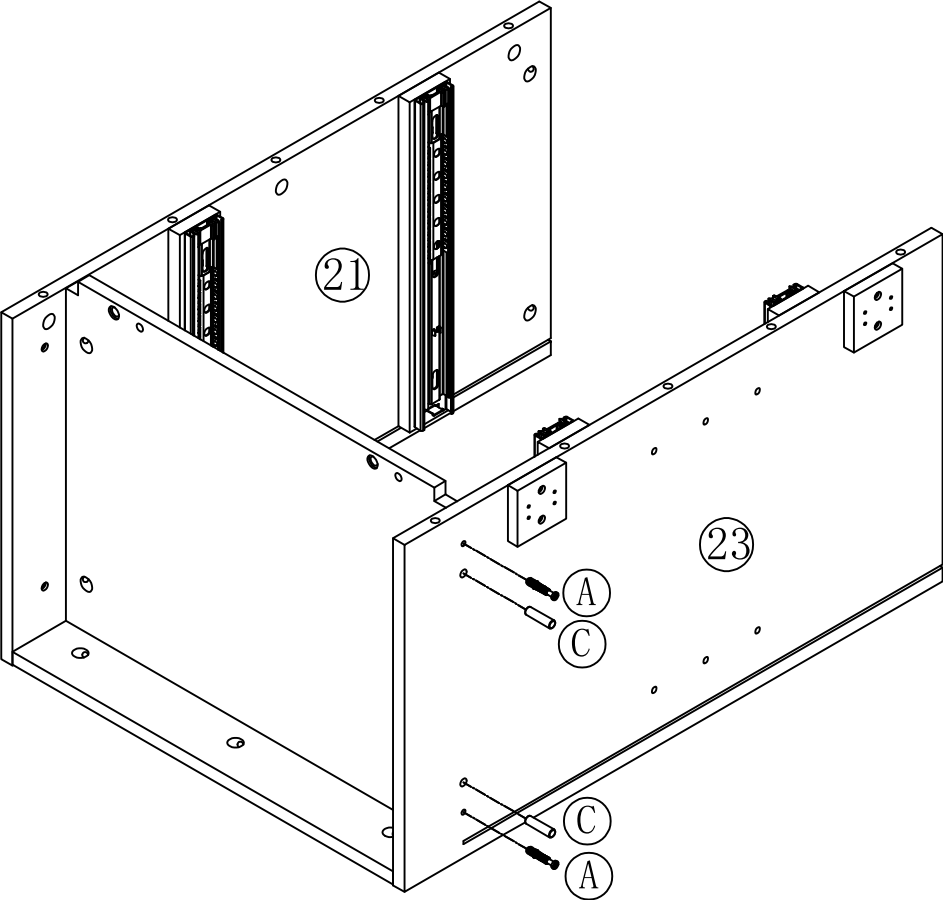



Step/Étape 26

42		1
A		8
C		8

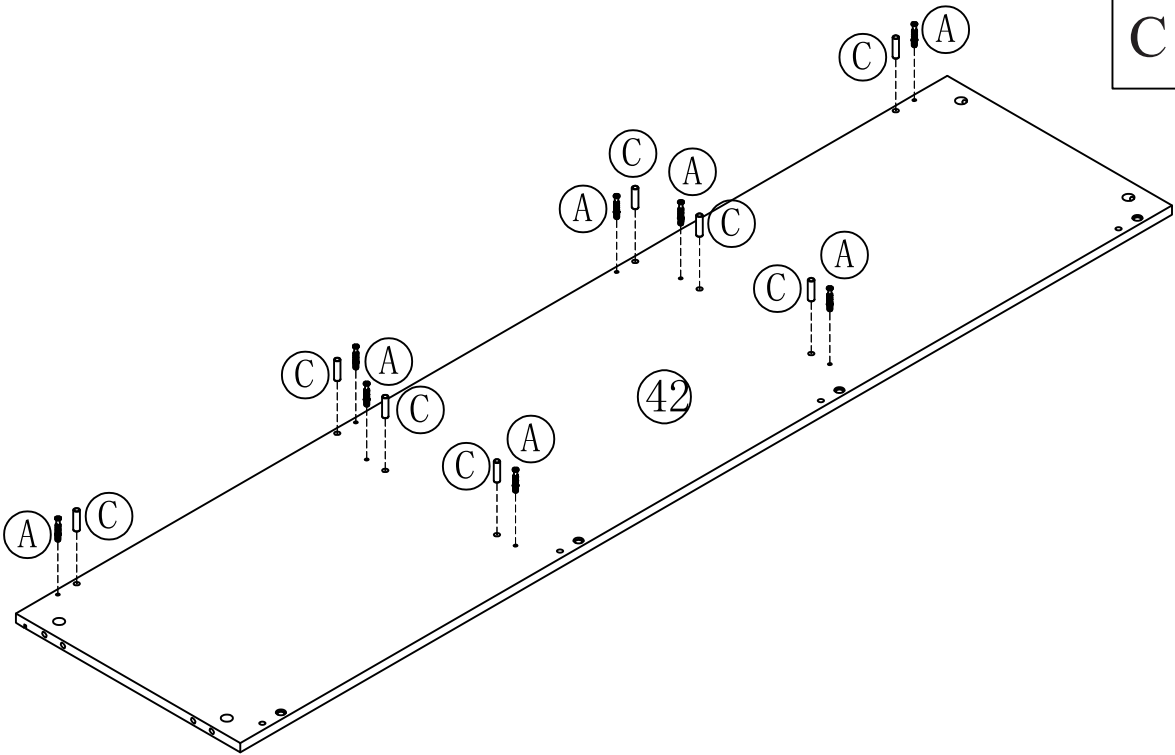


Step/Étape 27

43		2
57		1
B		8

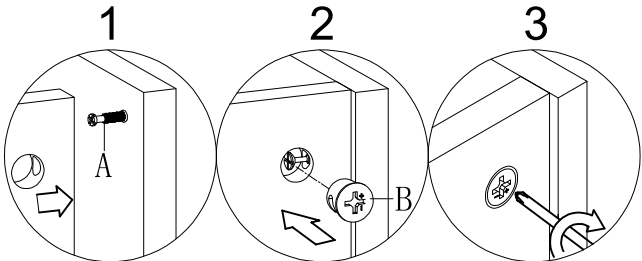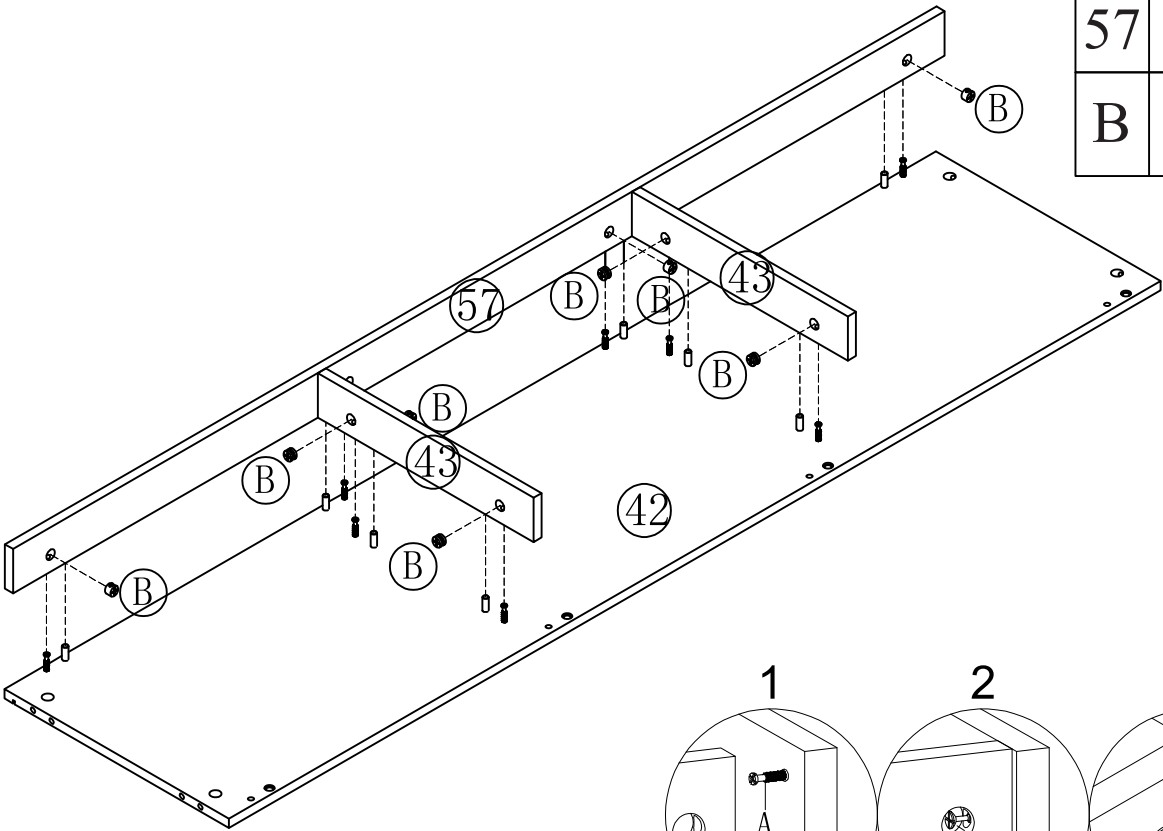


Step/Étape 28

A		2
C		2

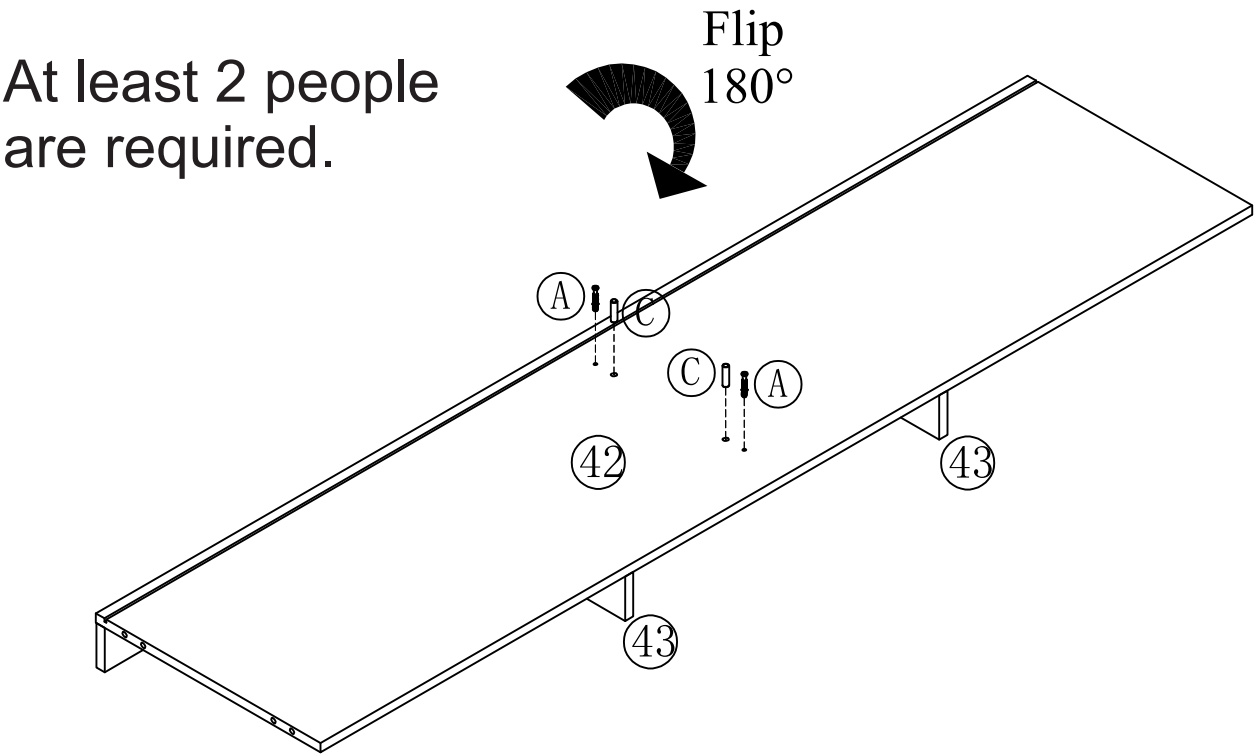


Step/Étape 29

28		1
B		2

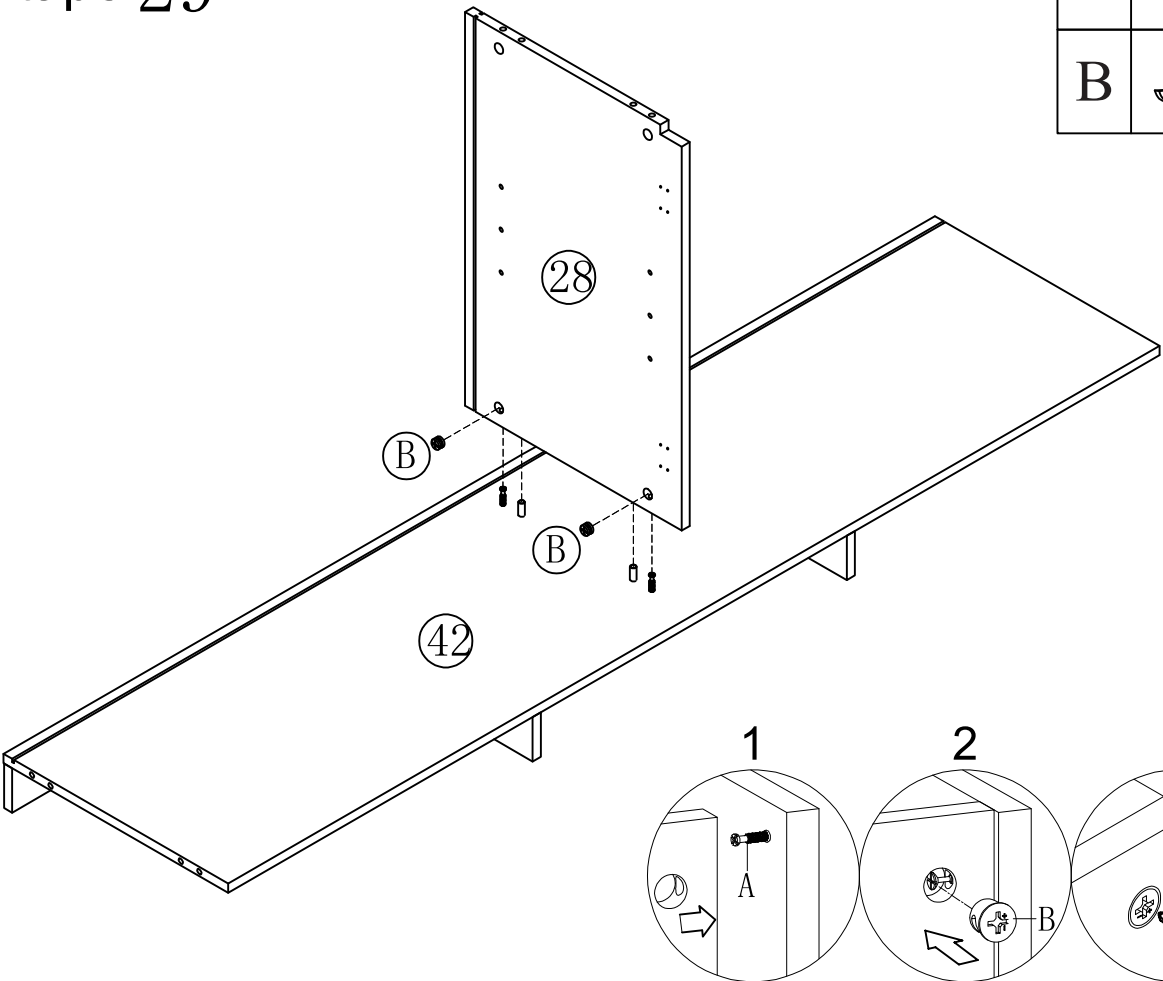


Step/Étape 30

B		4
---	--	---

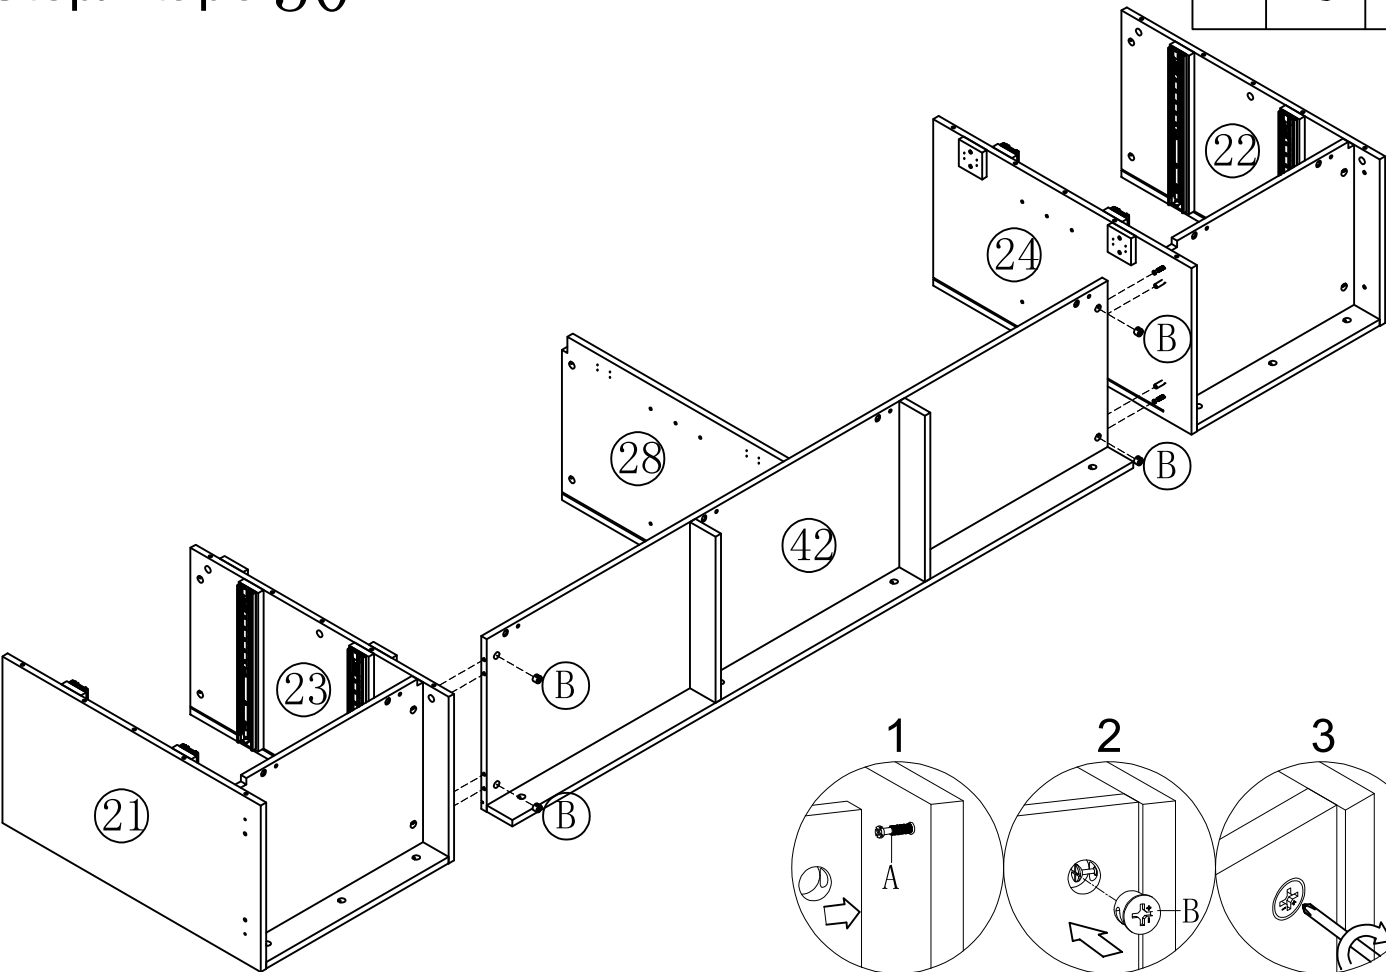


Step/Étape 31

31		2	32		2
C			8		

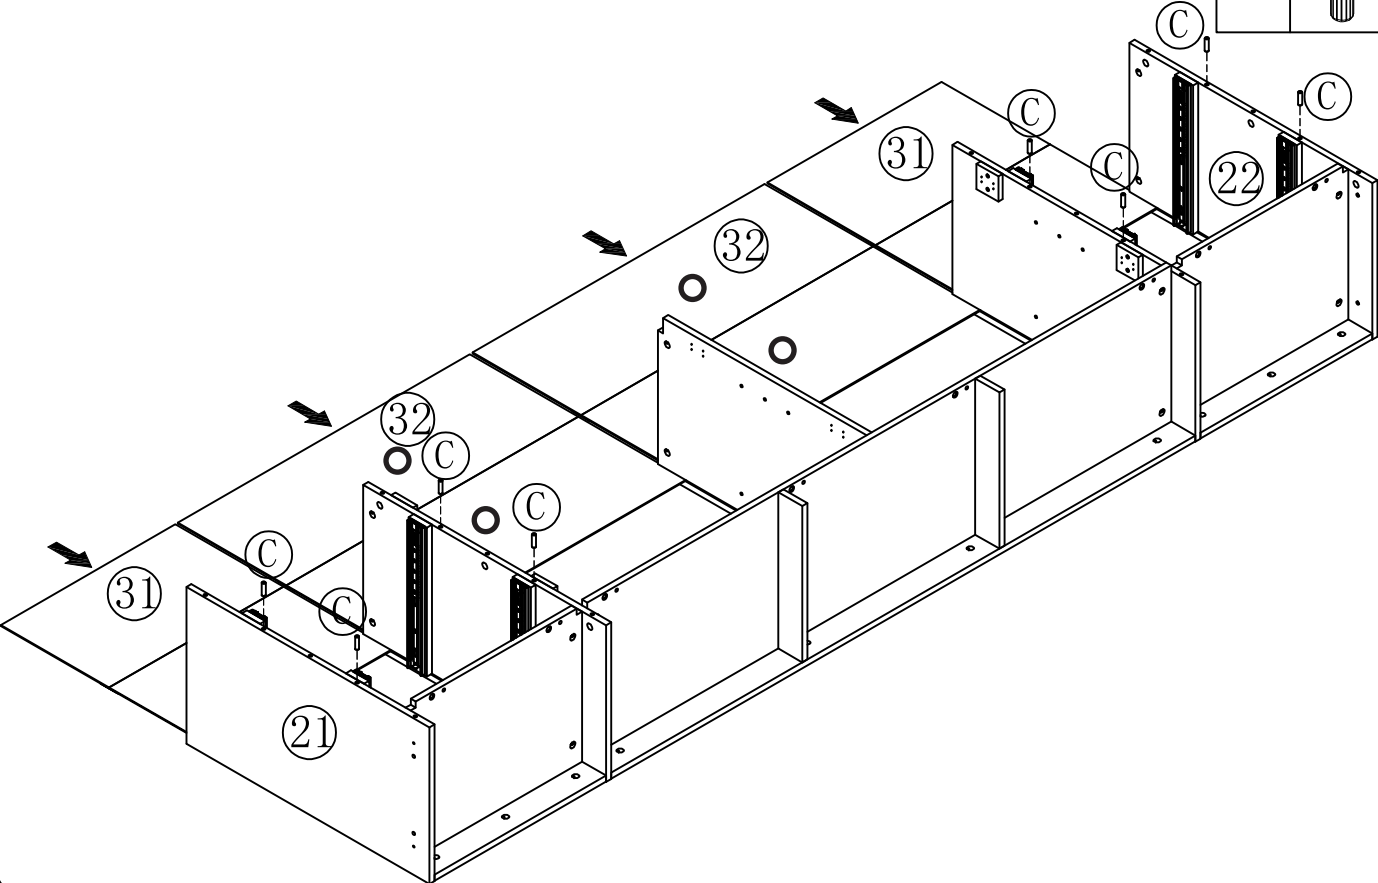


Step/Étape 32

19		1	25		1
20		1	A		14
			C		14

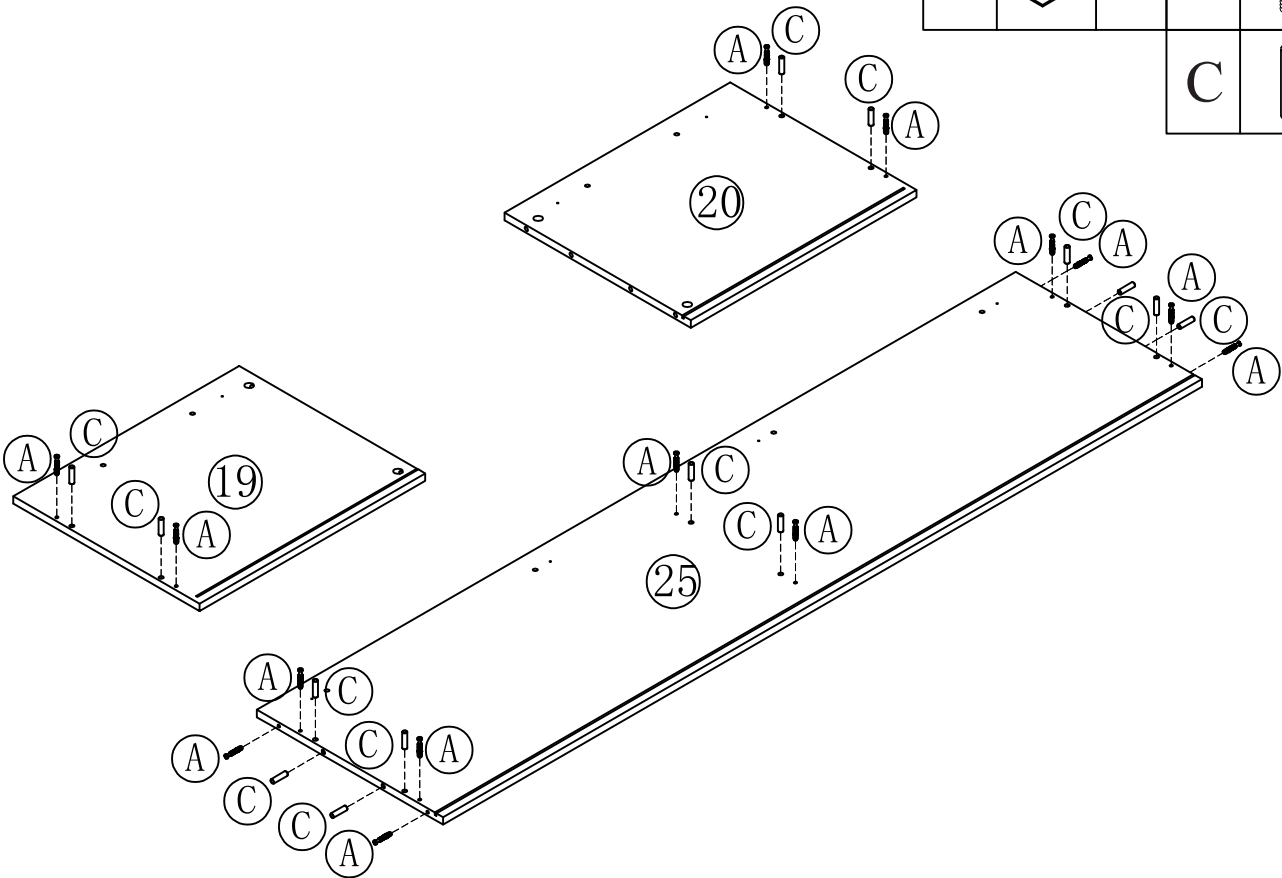


Step/Étape 33

B		4
---	---	---

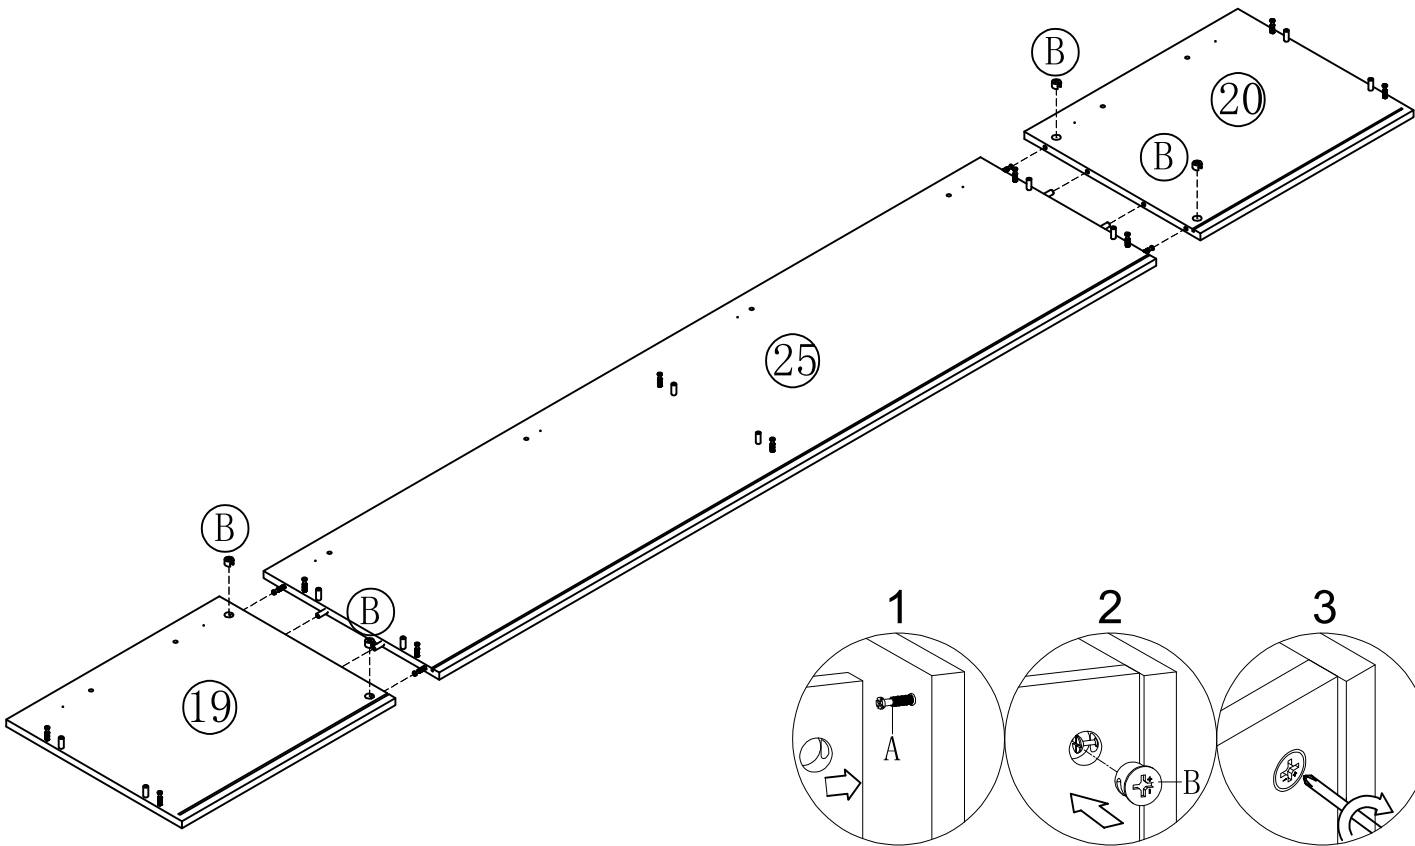


Step/Étape 34

26		2	D		8	O		8
27		1	M		8	R		4

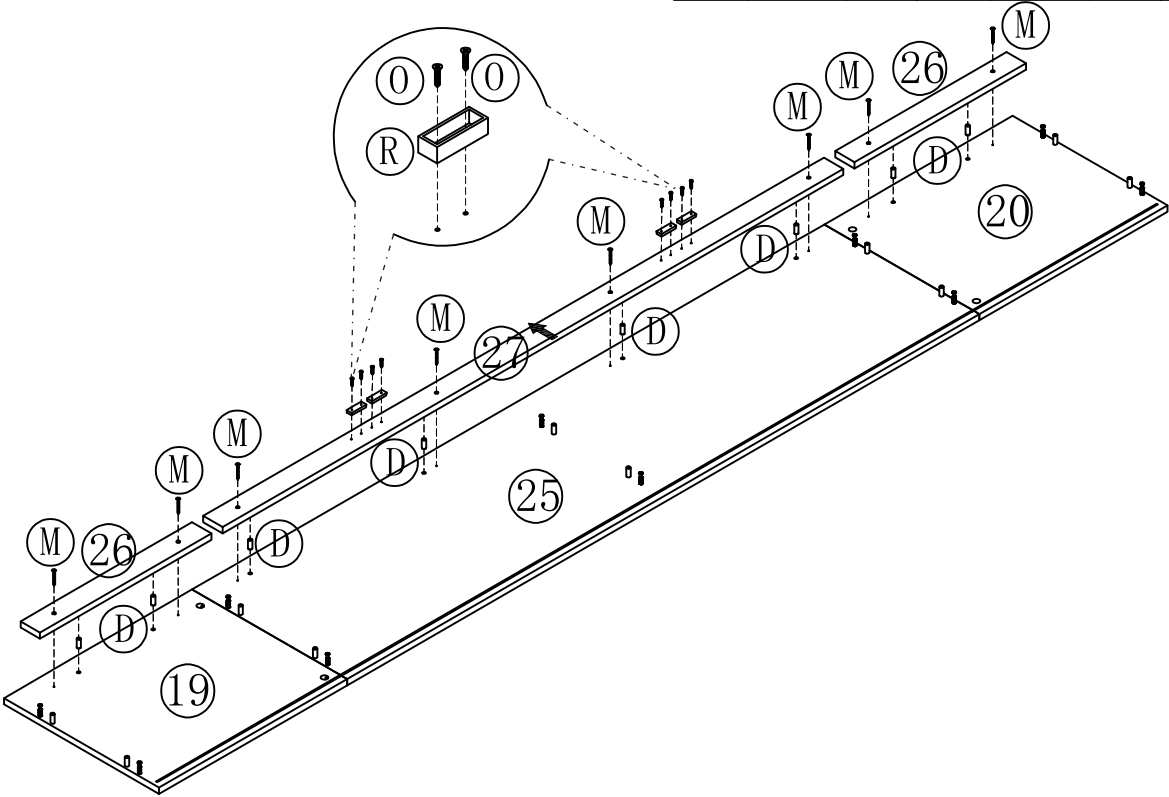


Step/Étape 35

B		10
---	---	----

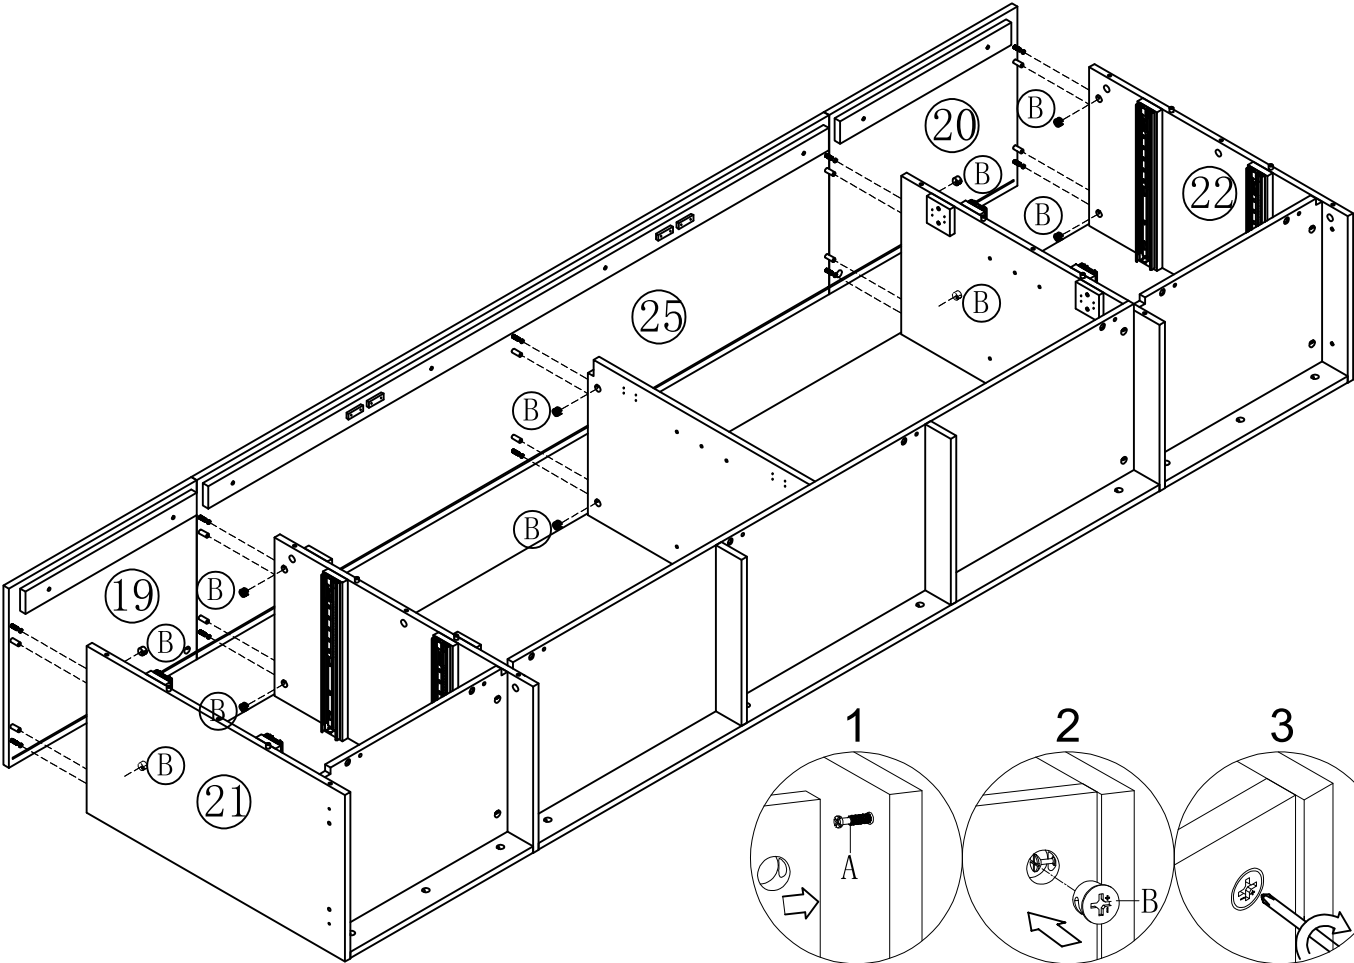


Step/Étape 36

33		2
34		2
A		12

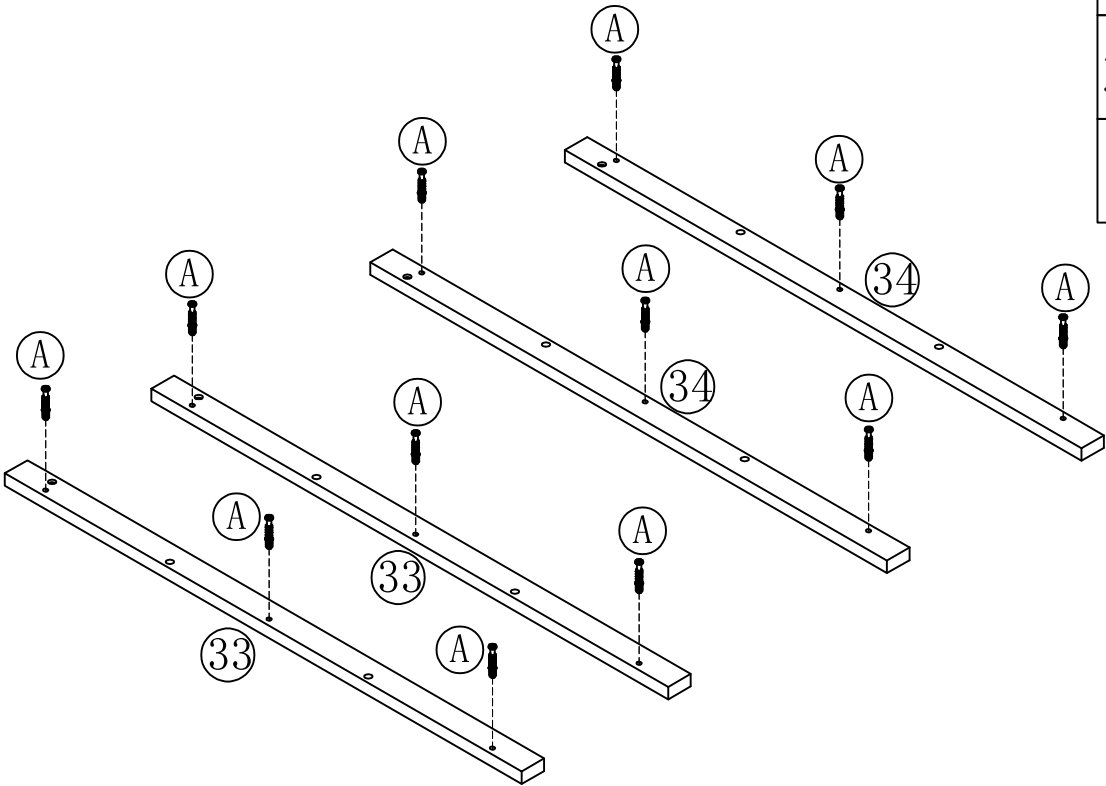


Step/Étape 37

B		12
---	--	----

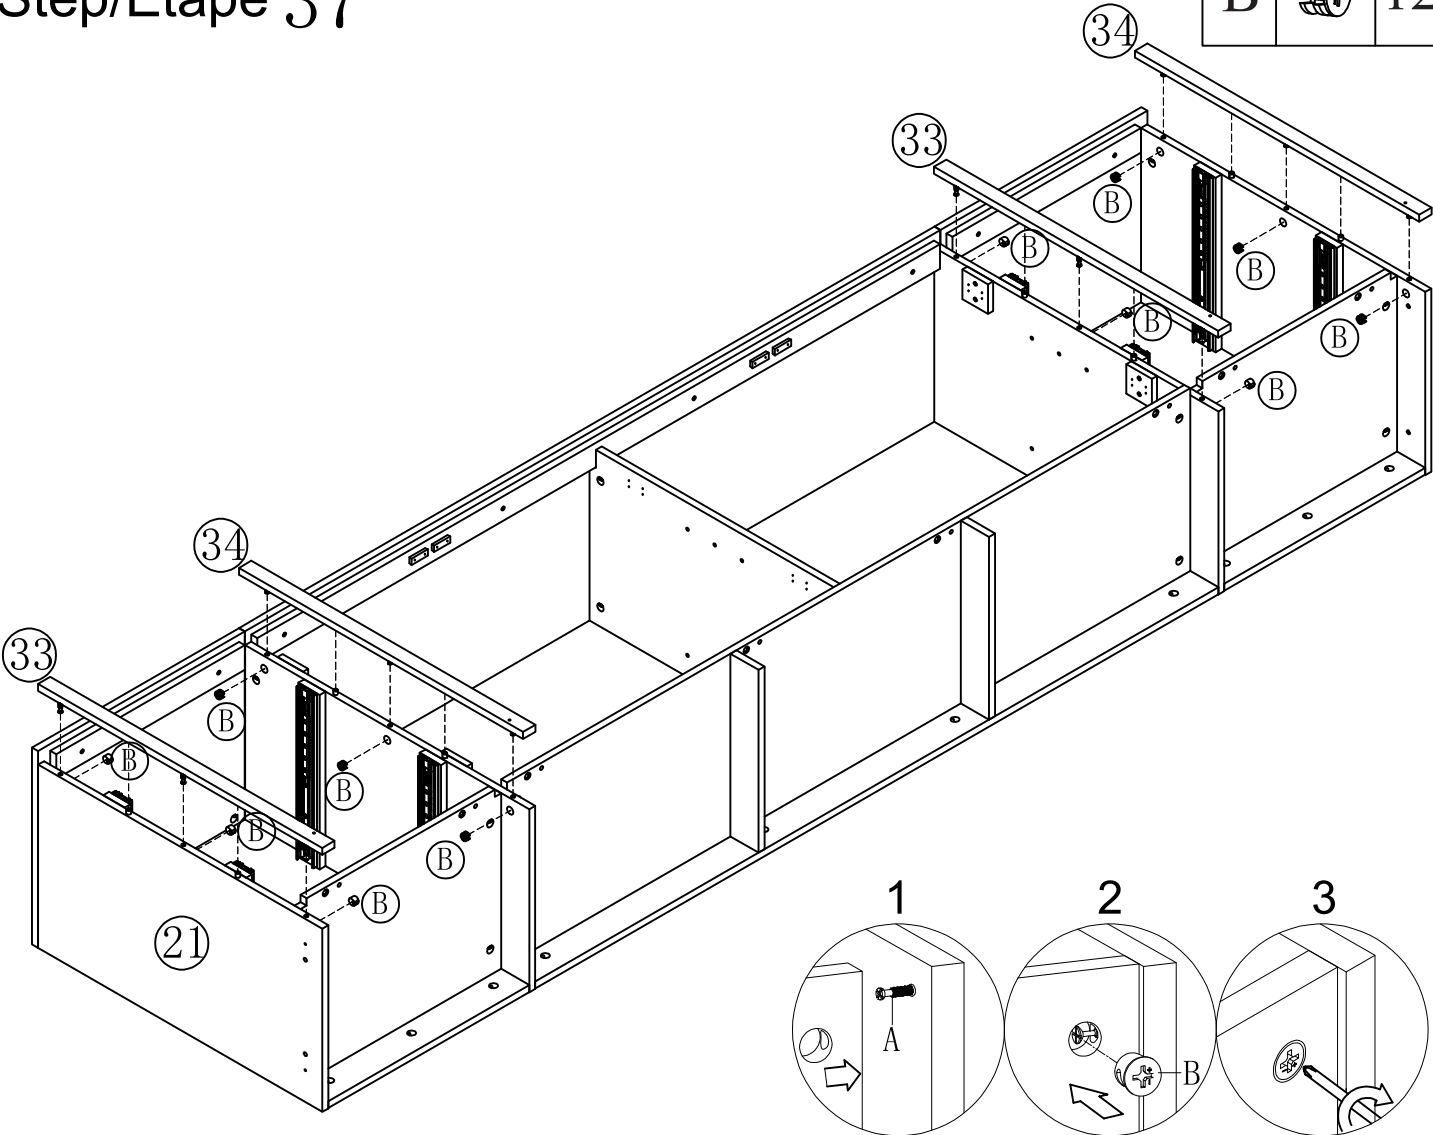


Step/Étape 38

44		1	O		4
			P		2

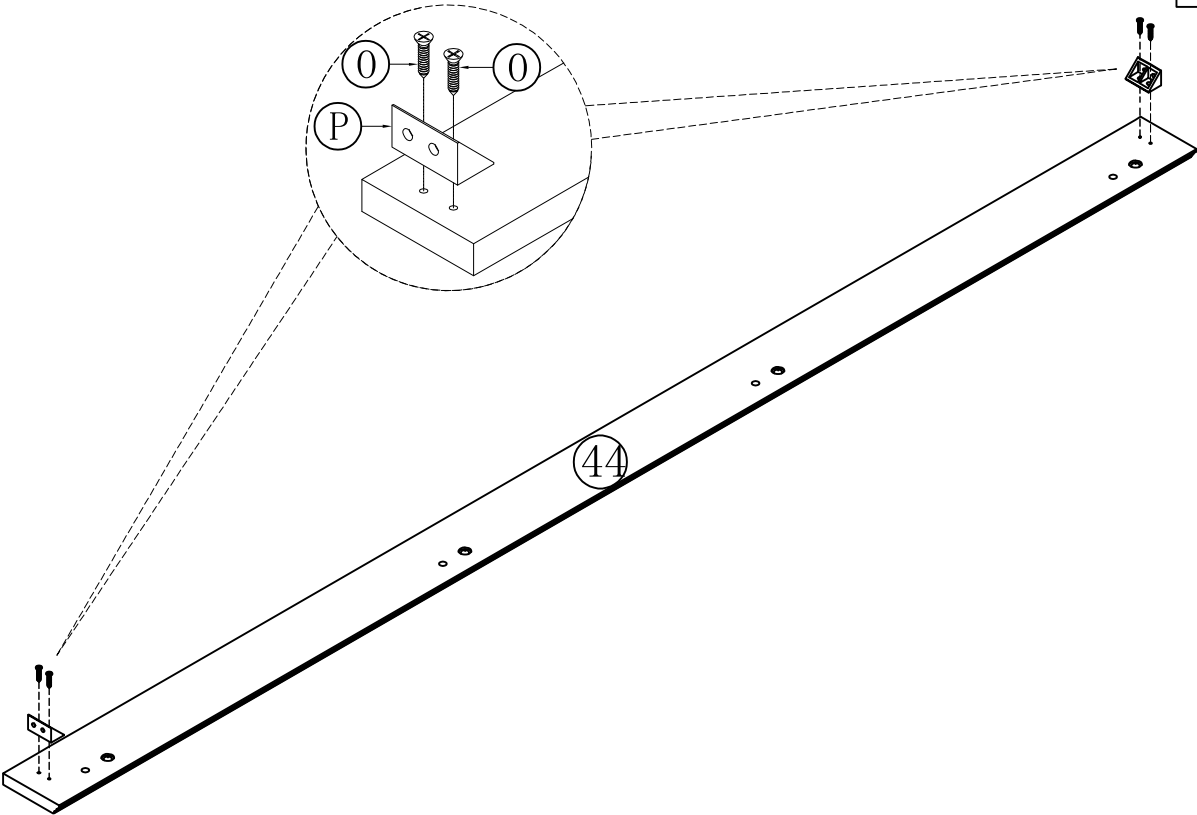


Step/Étape 39

40		1	Q		8
41		1	S		8

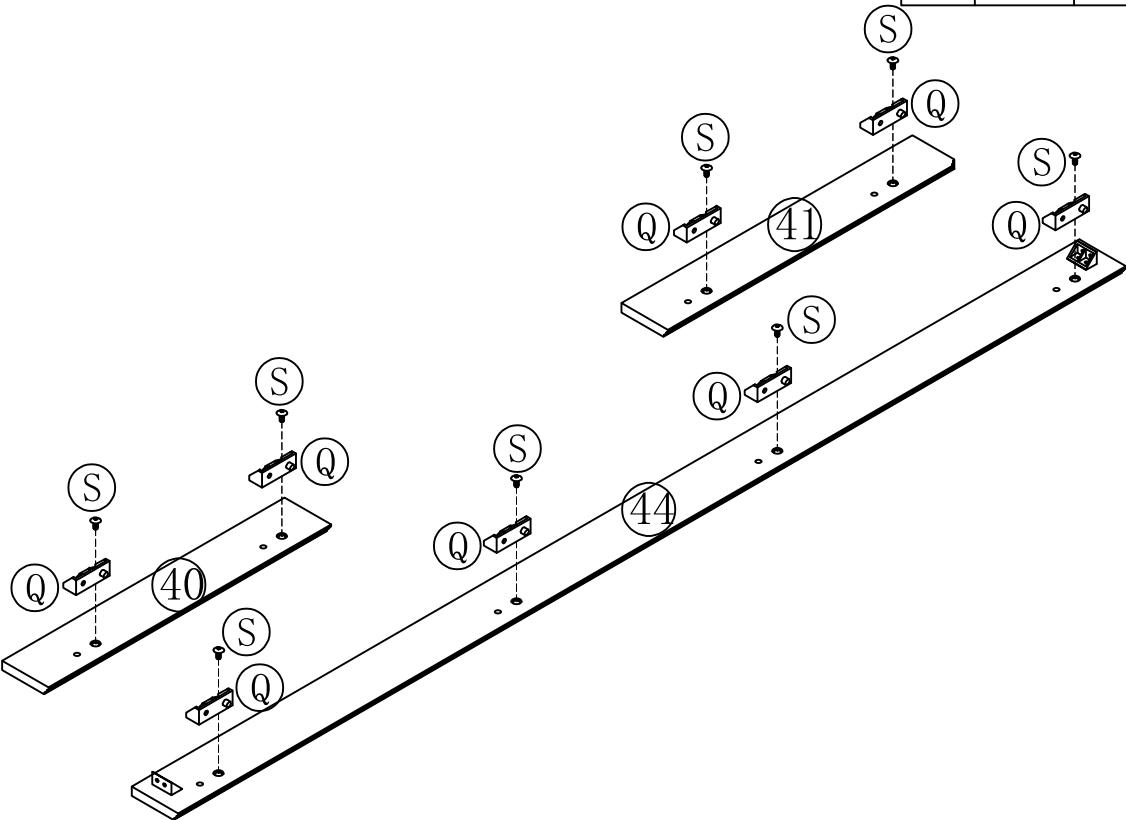


Step/Étape 40

S		8
---	--	---

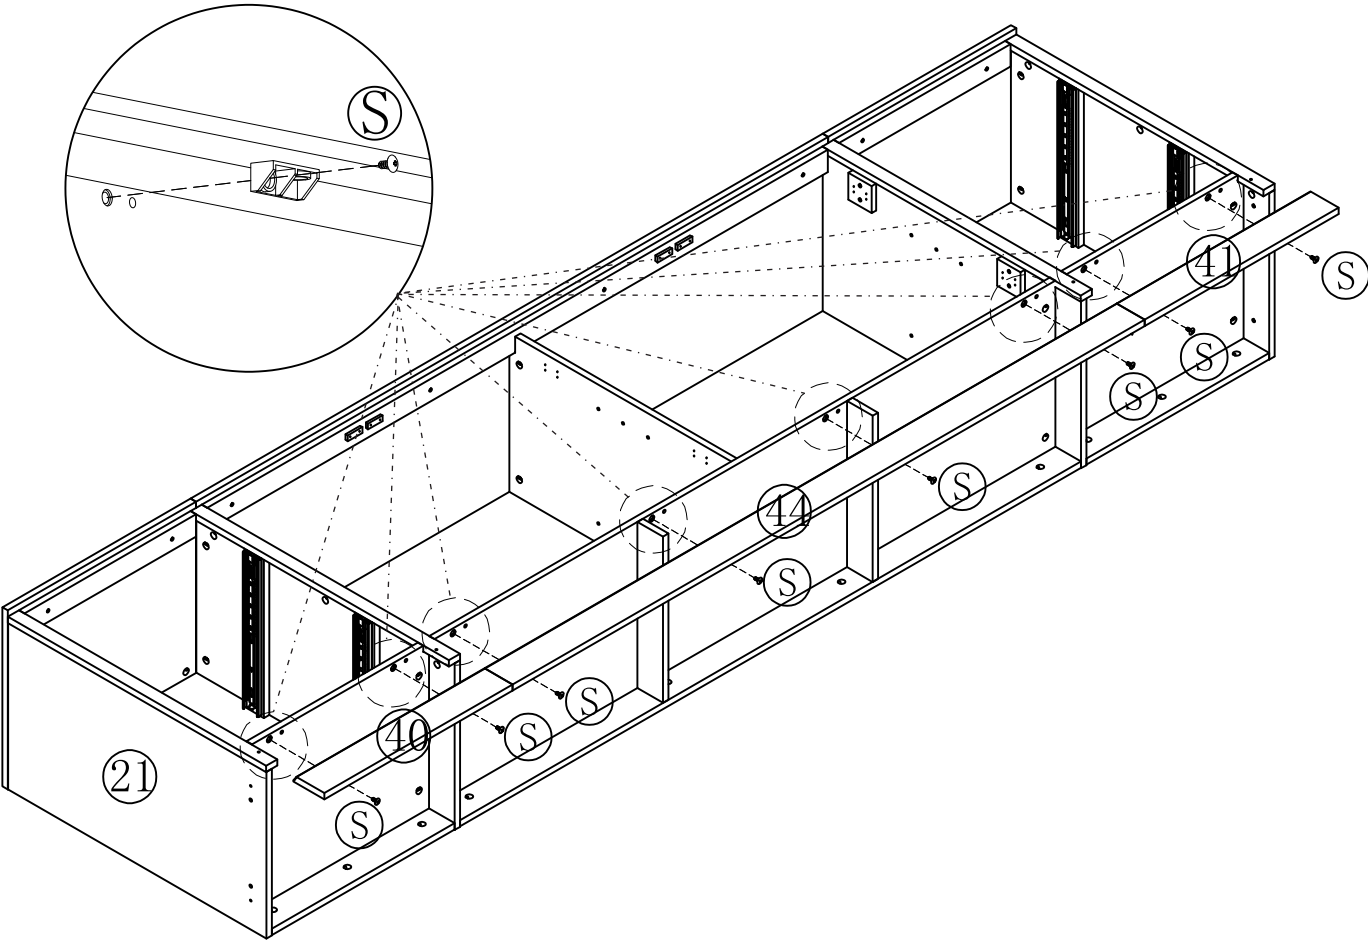


Step/Étape 41

O		4
---	---	---

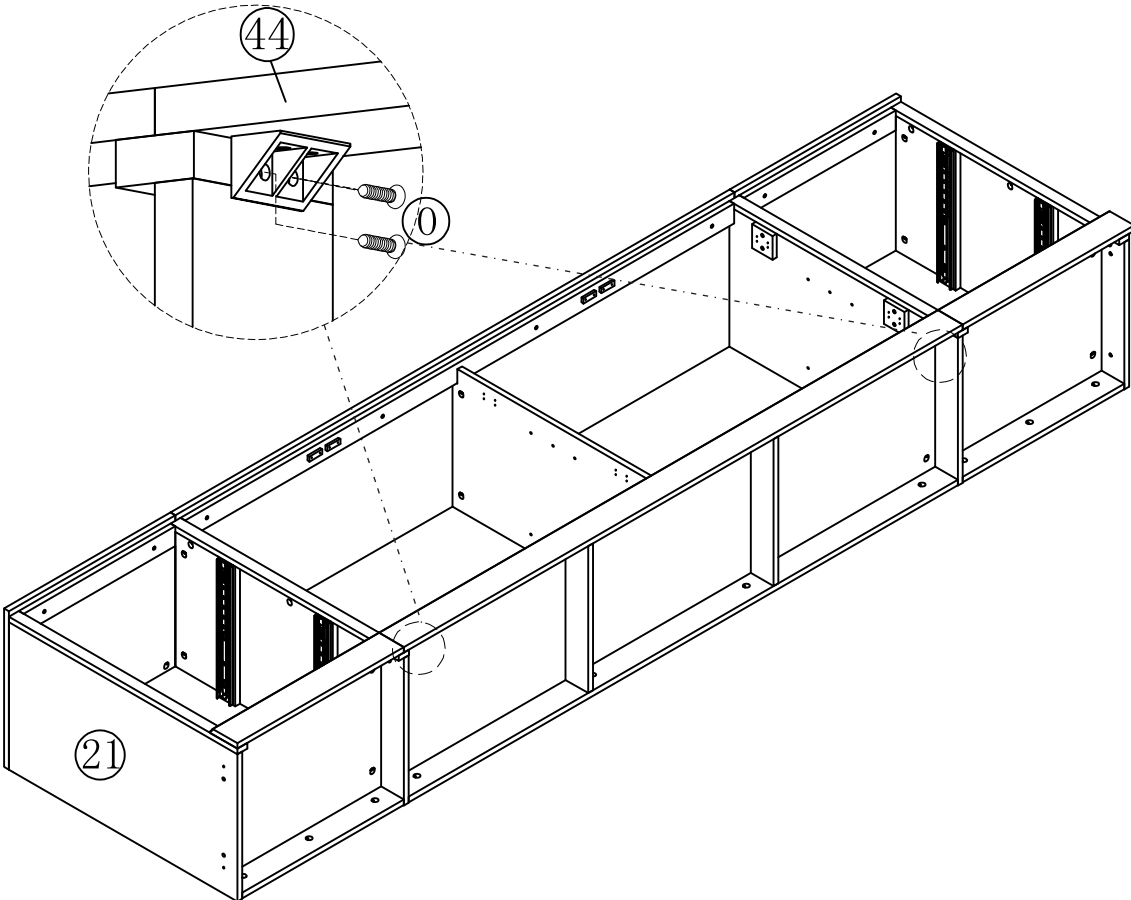

Step/Étape 42

3		2	M		8
			D		4

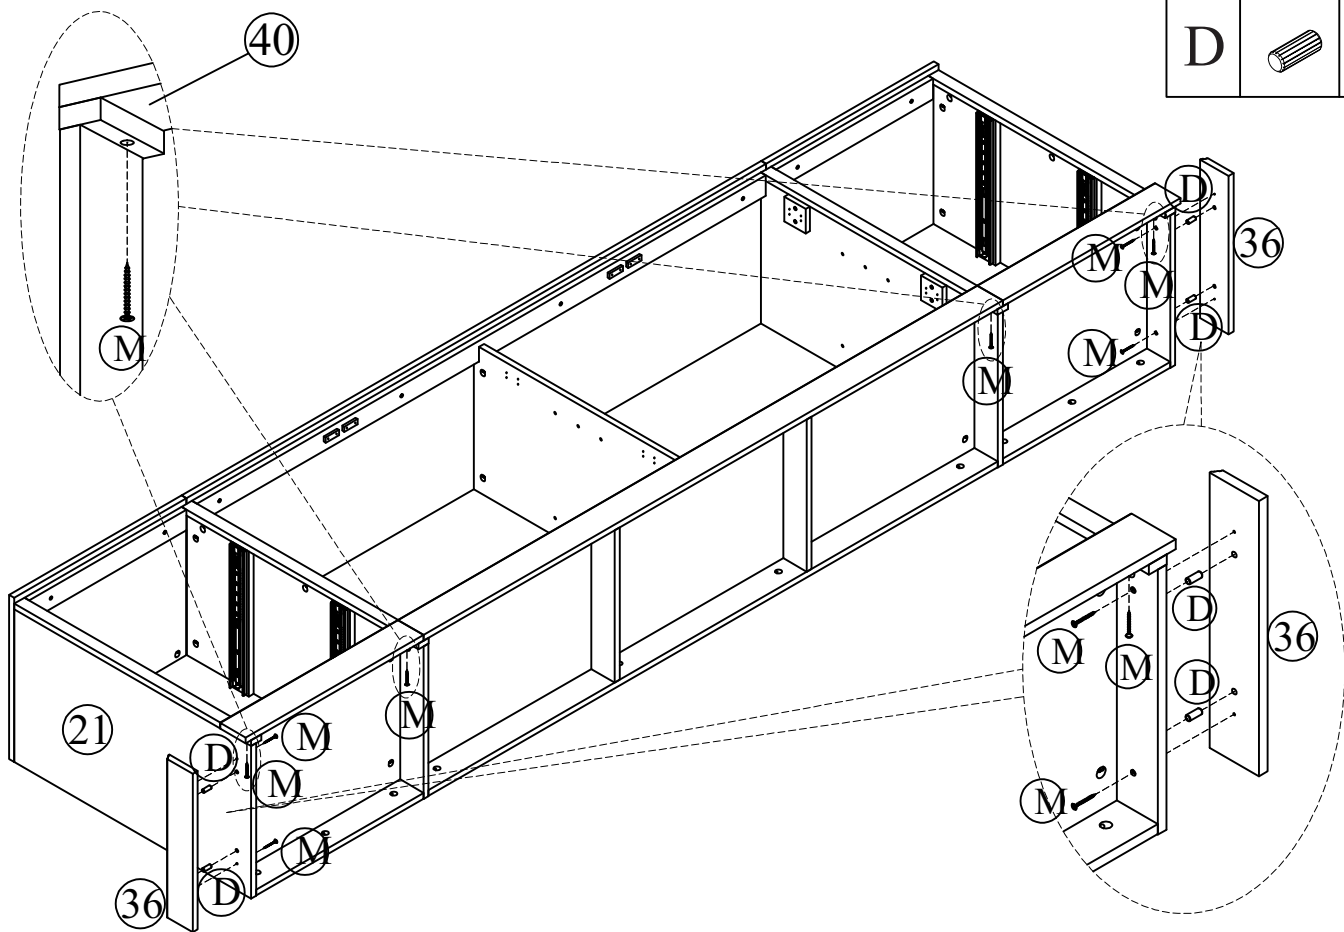


Step/Étape 43



Turn Over 90°



At least 2 people are required.


A		16
C		16

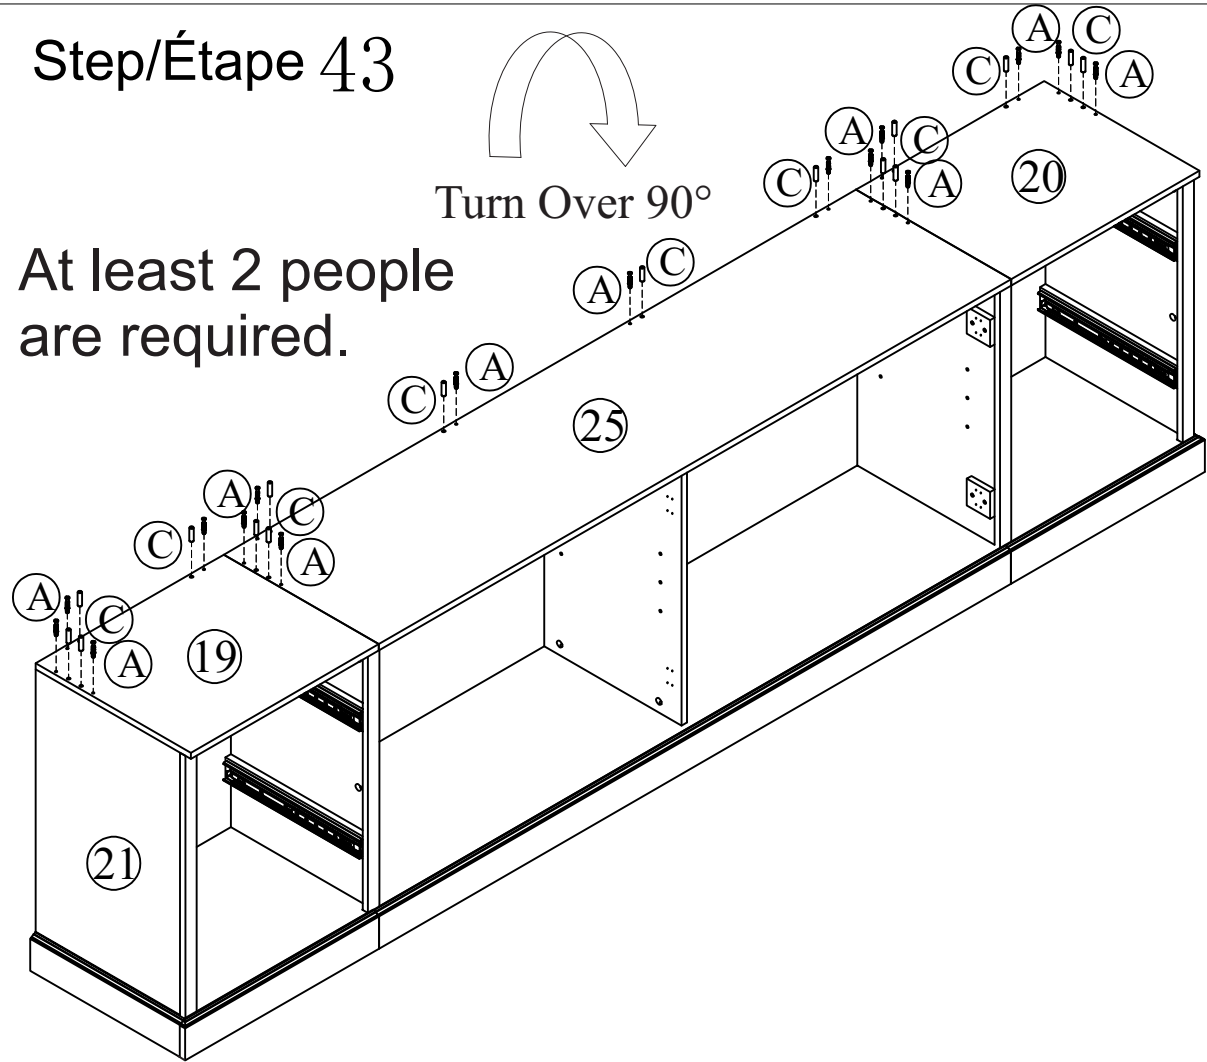

At least 2 people
are required.

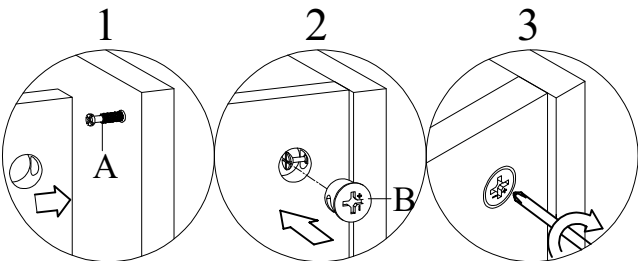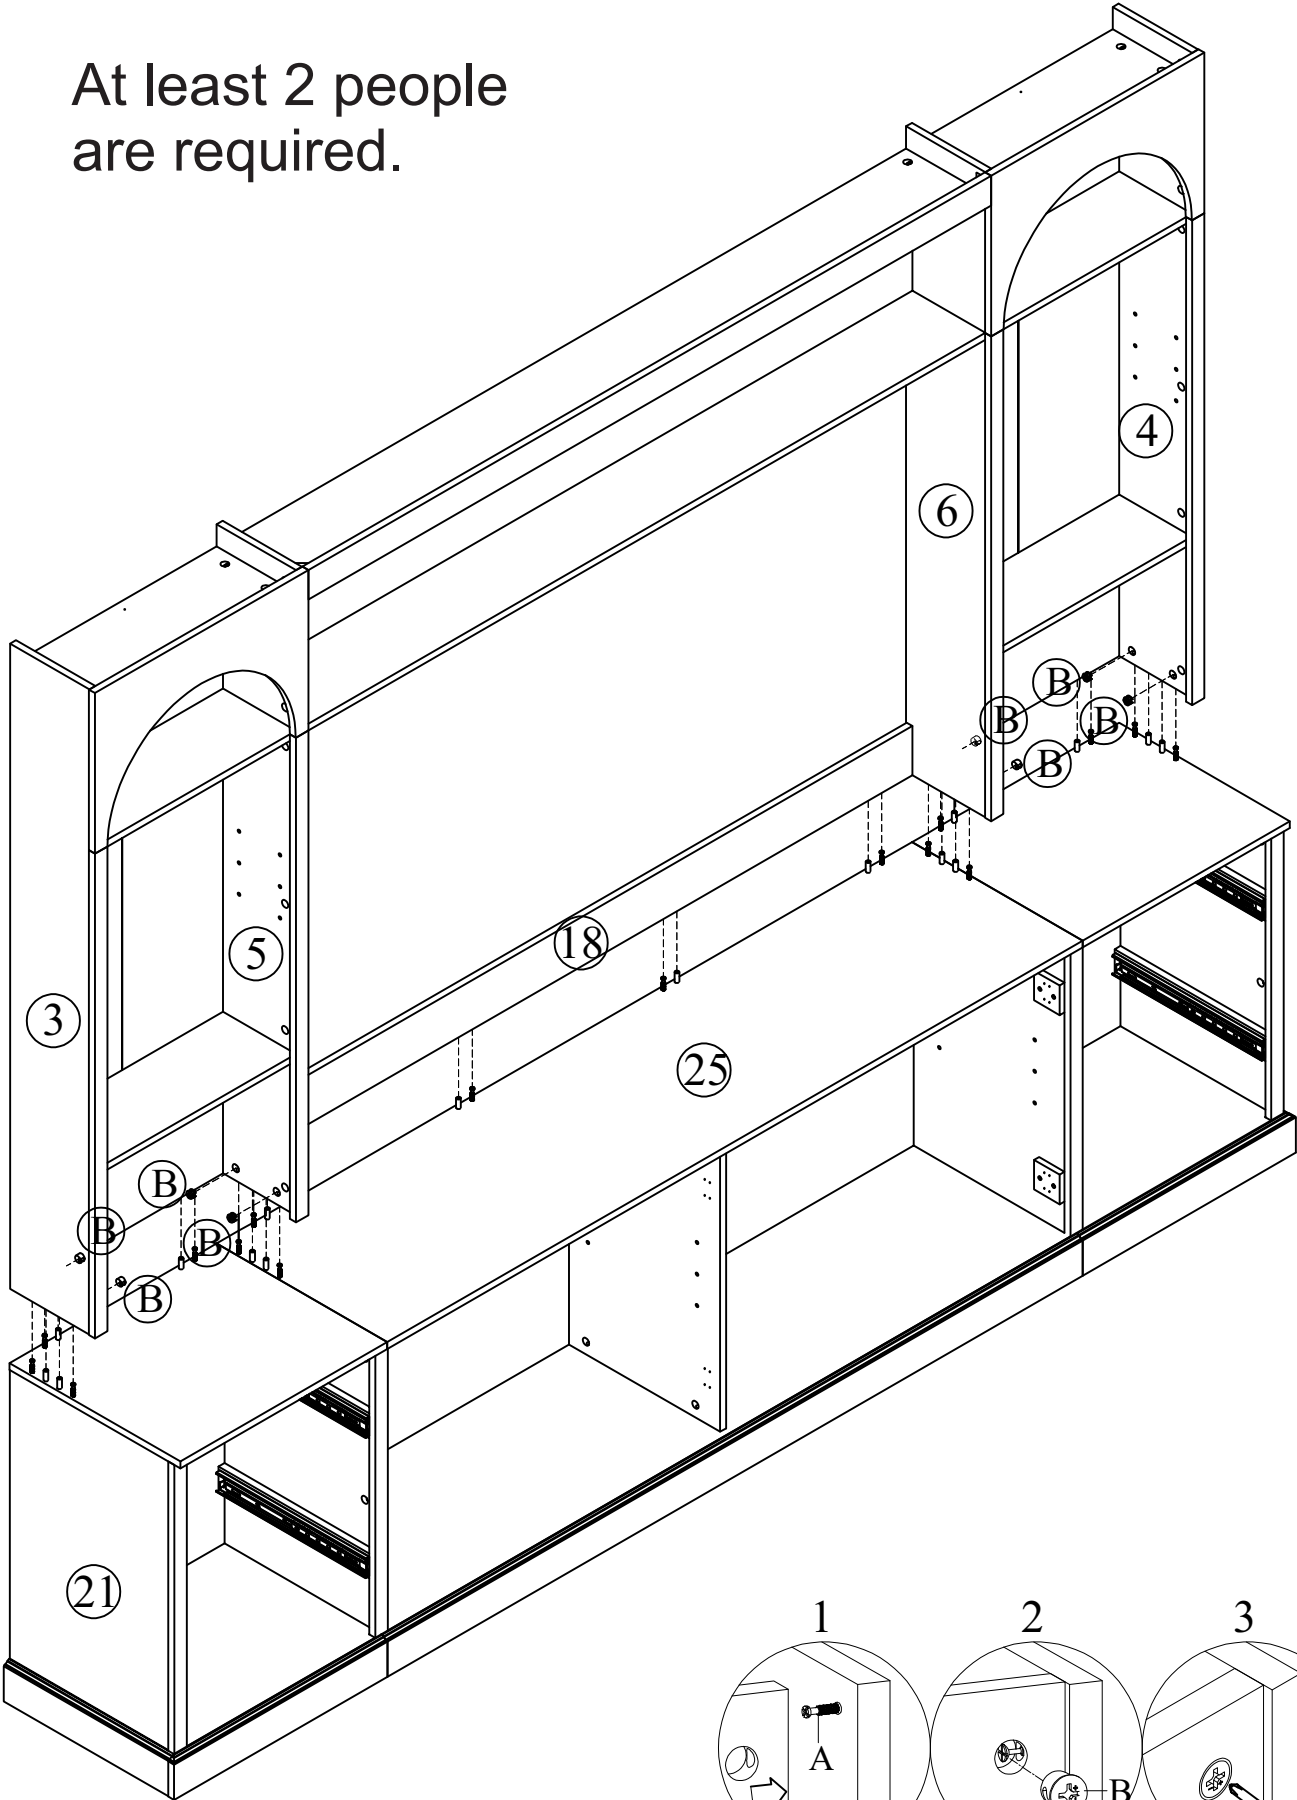


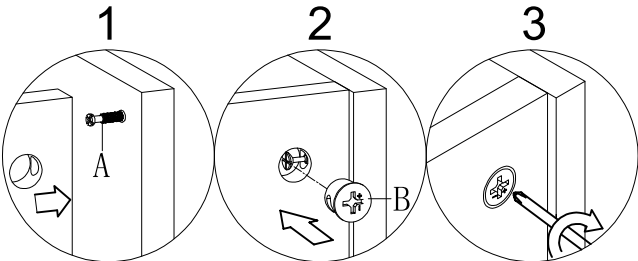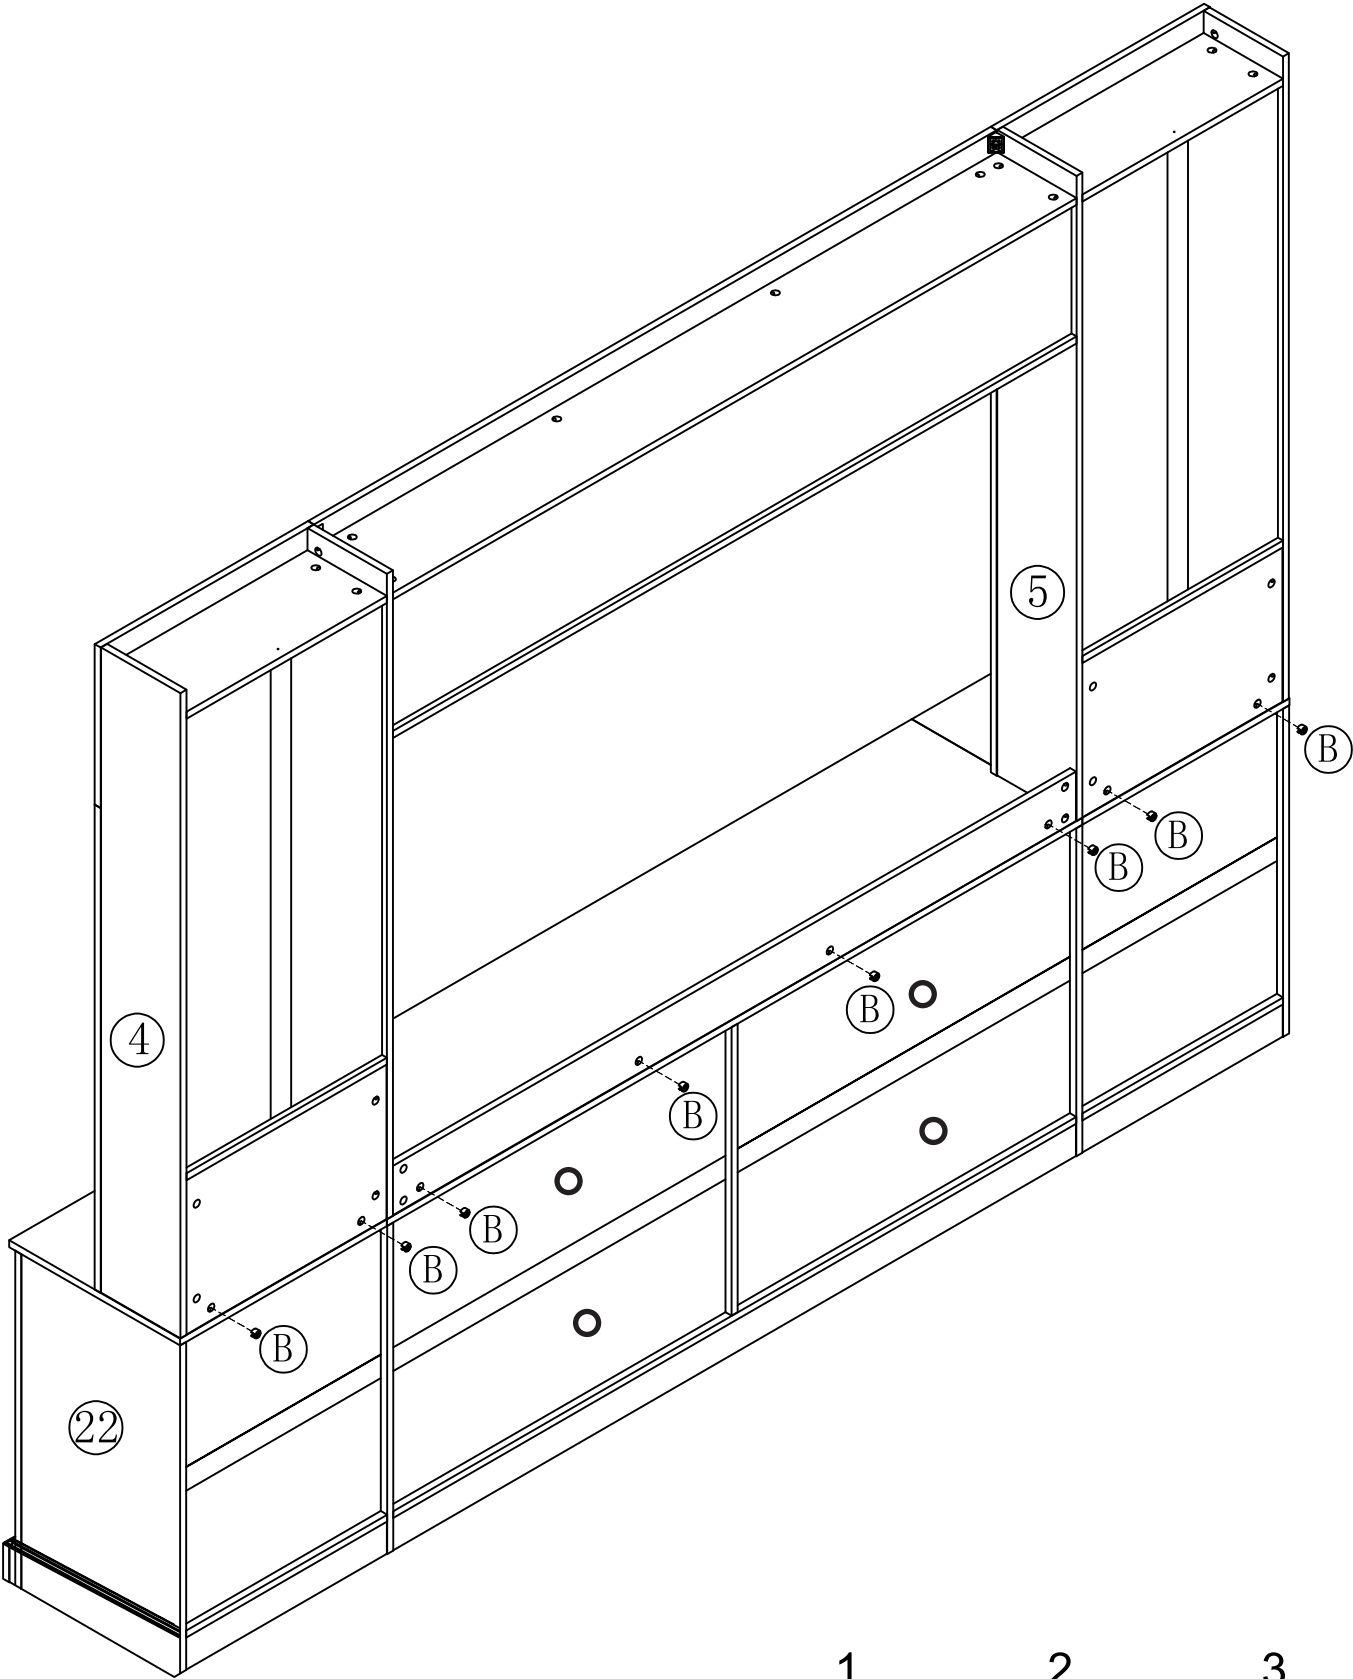

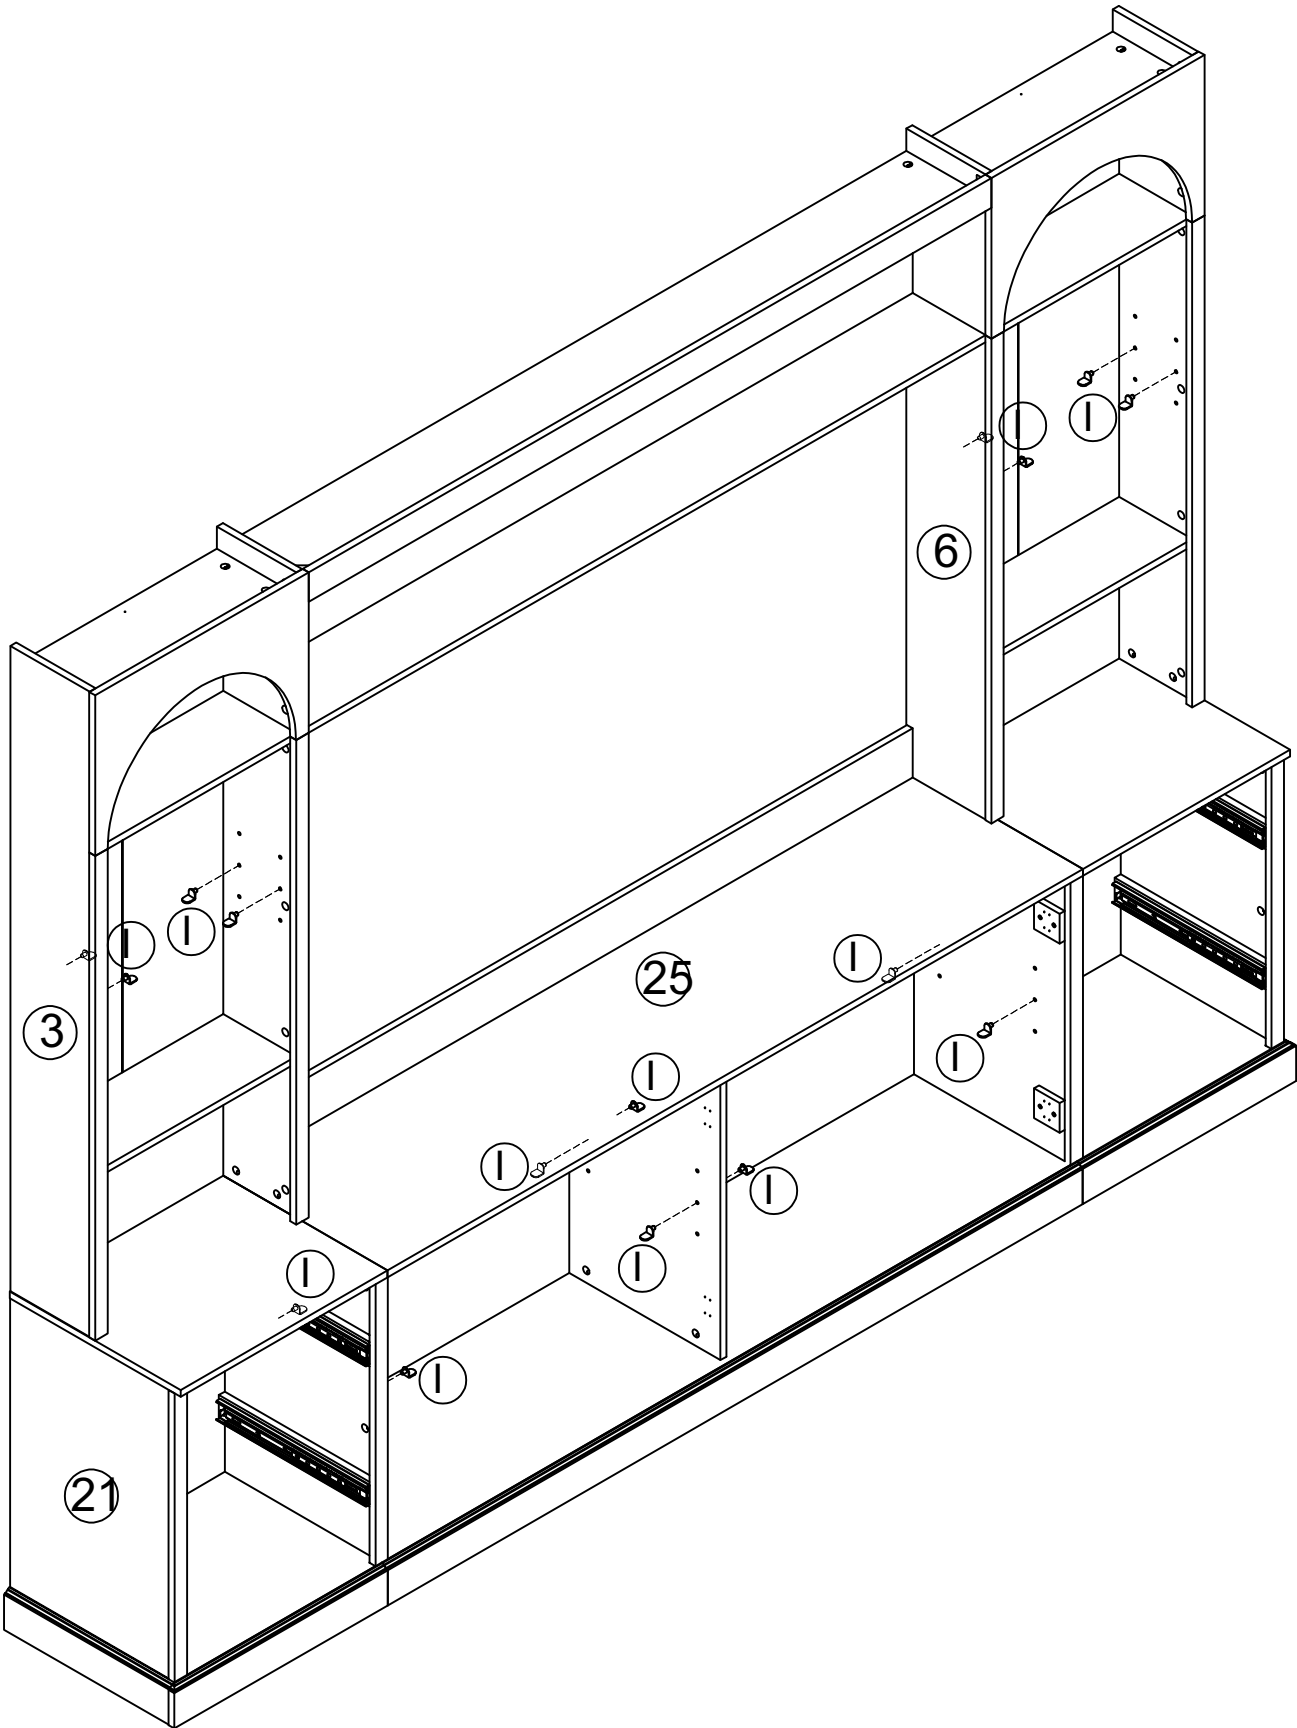

Step/Étape 47


15		2	30		1
29		1	J		16

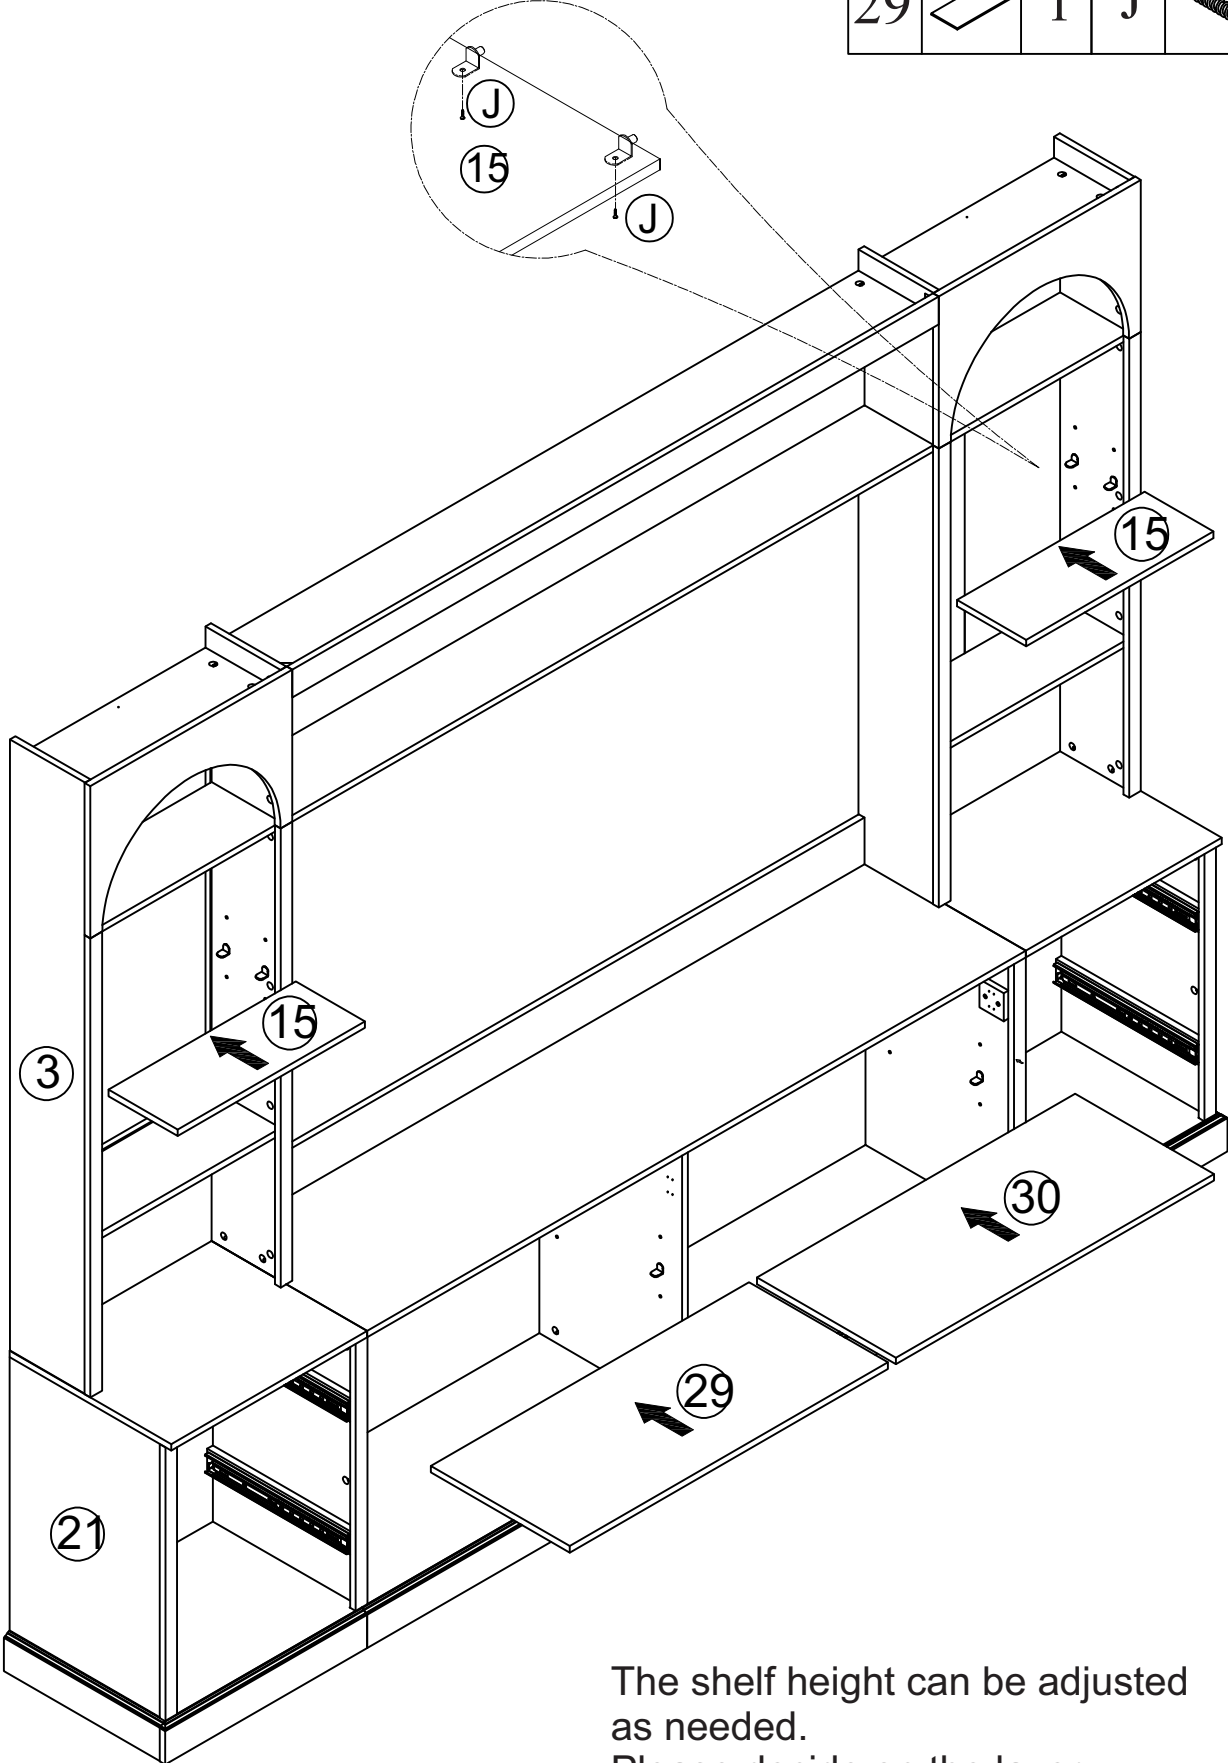

The shelf height can be adjusted as needed.
Please decide on the layer placement before installing the shelves in the side cabinet.



Step/Étape 48

47		2
A		4

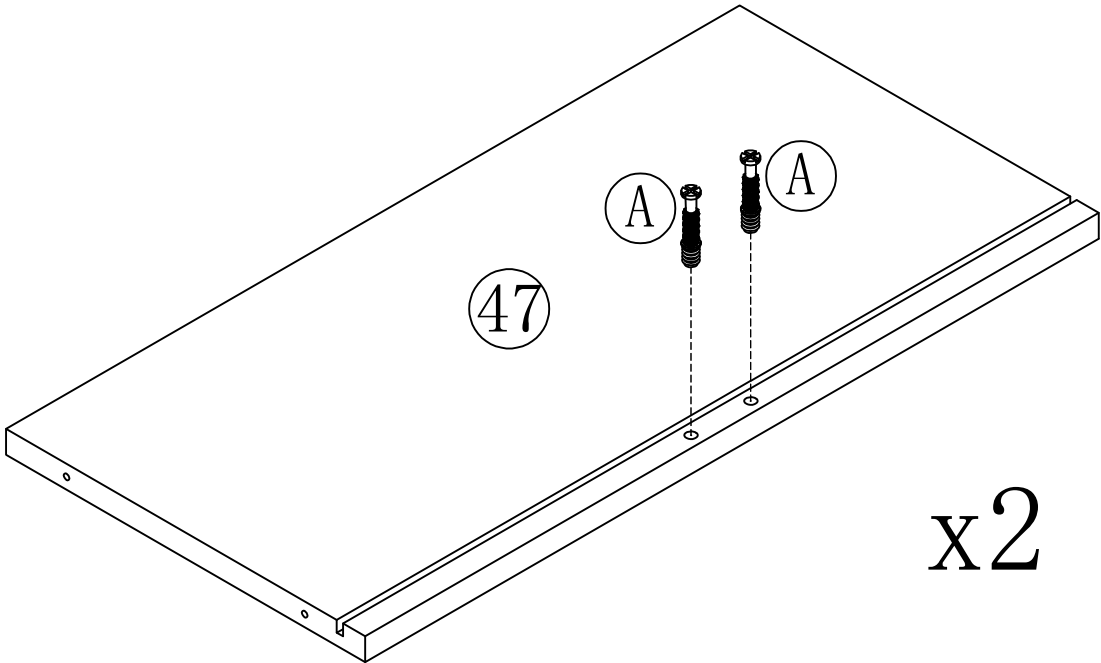



Step/Étape 49

45		2	L		12
46		2	Y-2		4

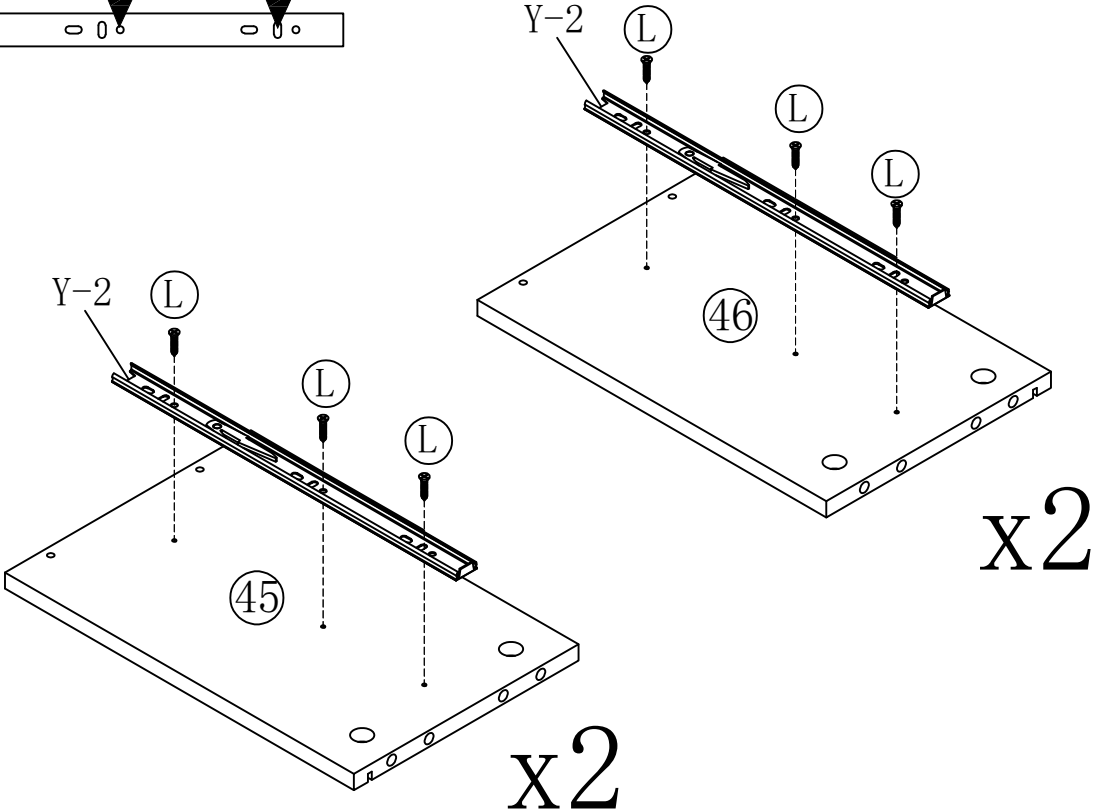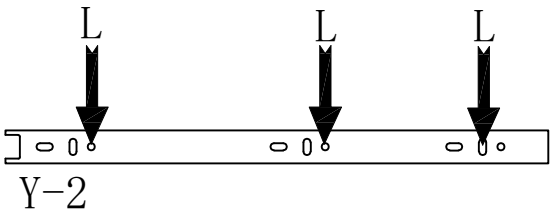


Step/Étape 50

49		2
B		4
N		8

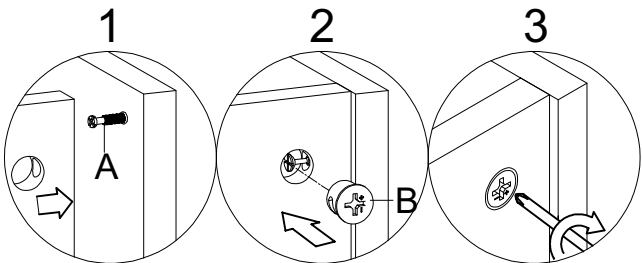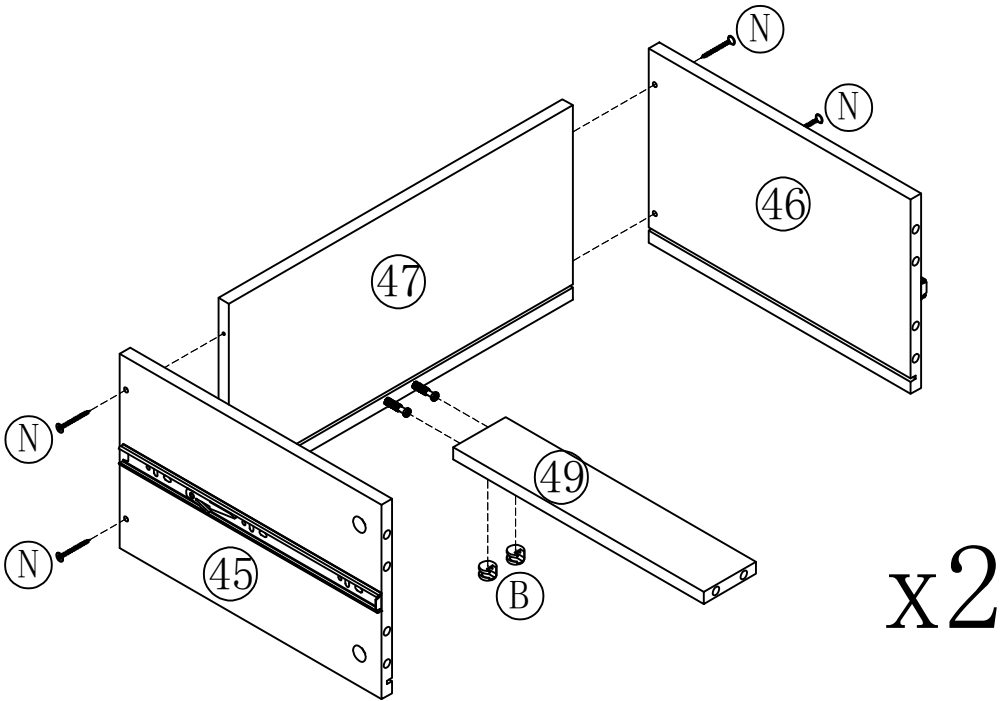


Step/Étape 51

48		2
----	---	---

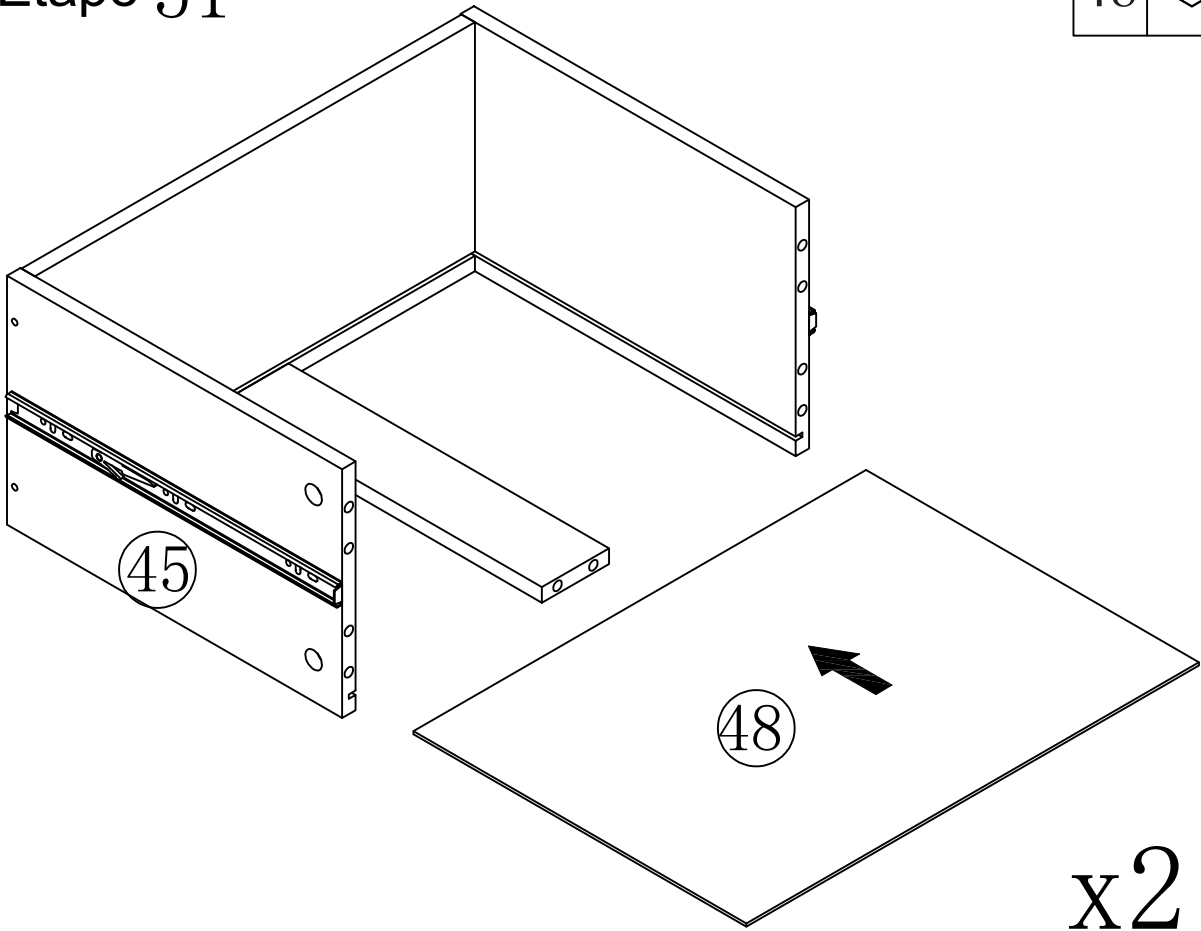


Step/Étape 52

50		2
A		12
E		8

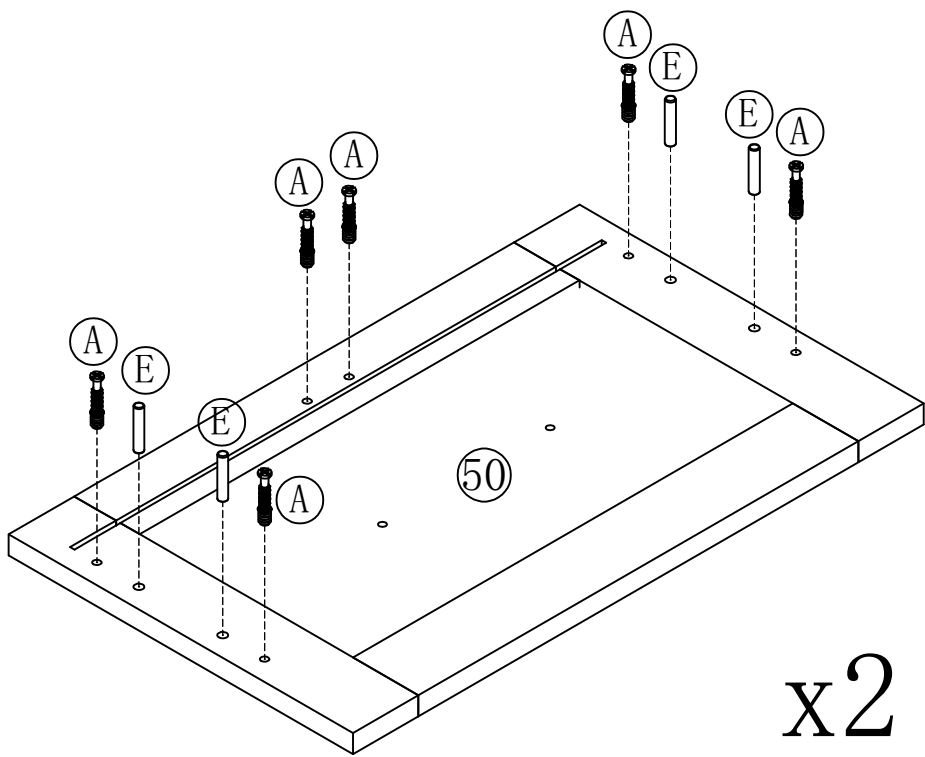


Step/Étape 53

B		12
---	---	----

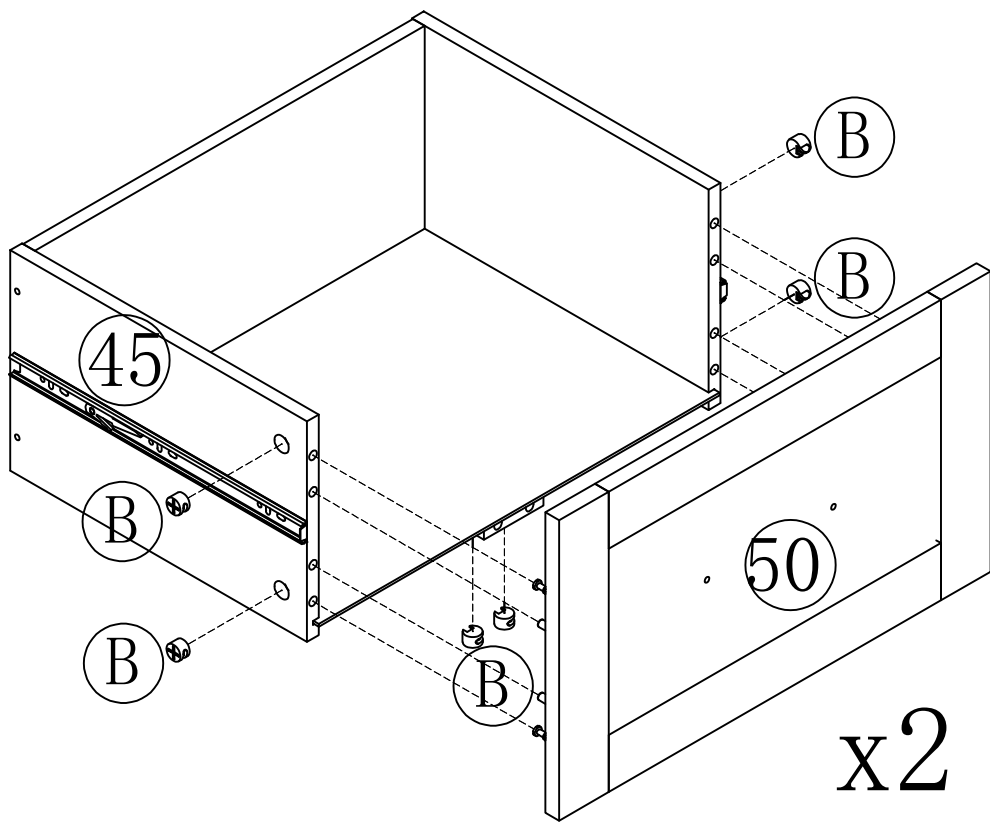


Step/Étape 54

F		2
H		4

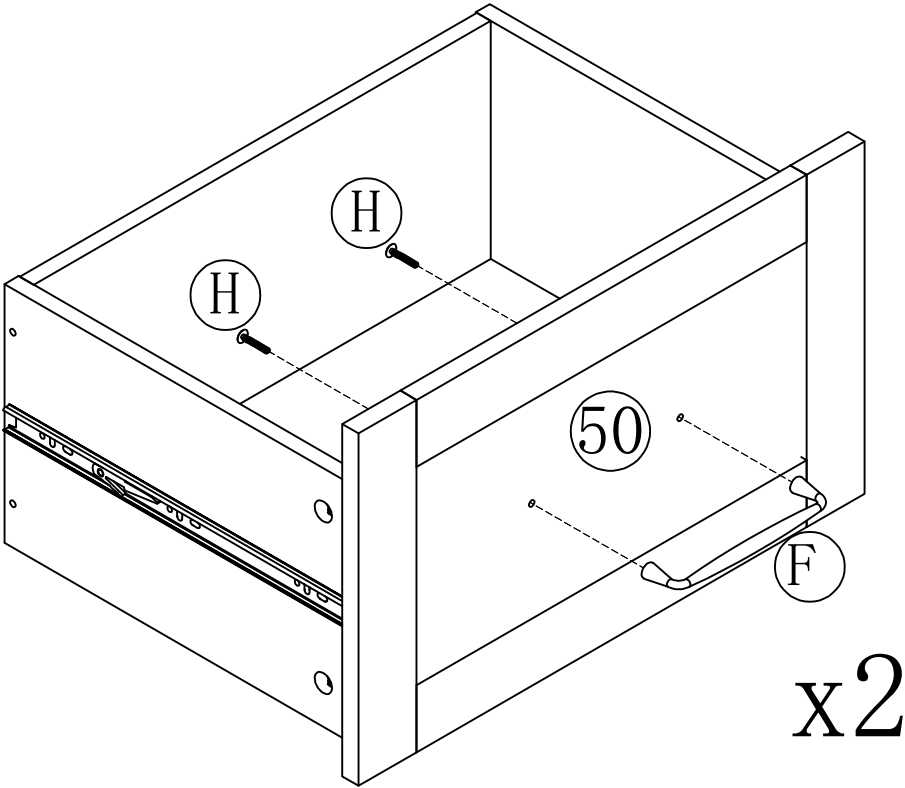



Step/Étape 55

53		2
A		4

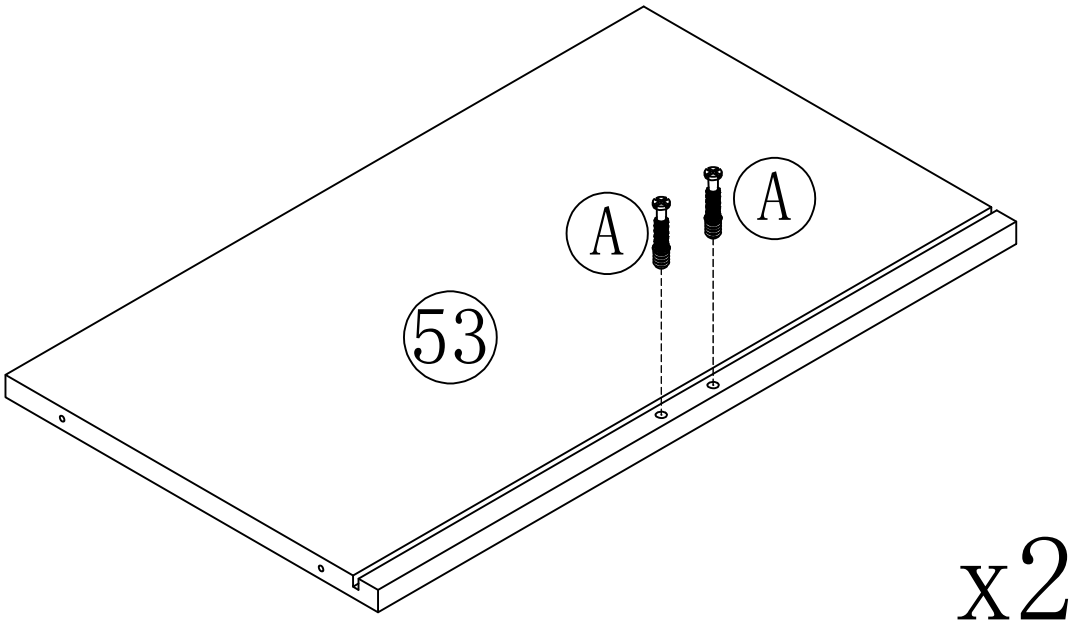



Step/Étape 56

51		2	L		12
52		2	Y-2		4

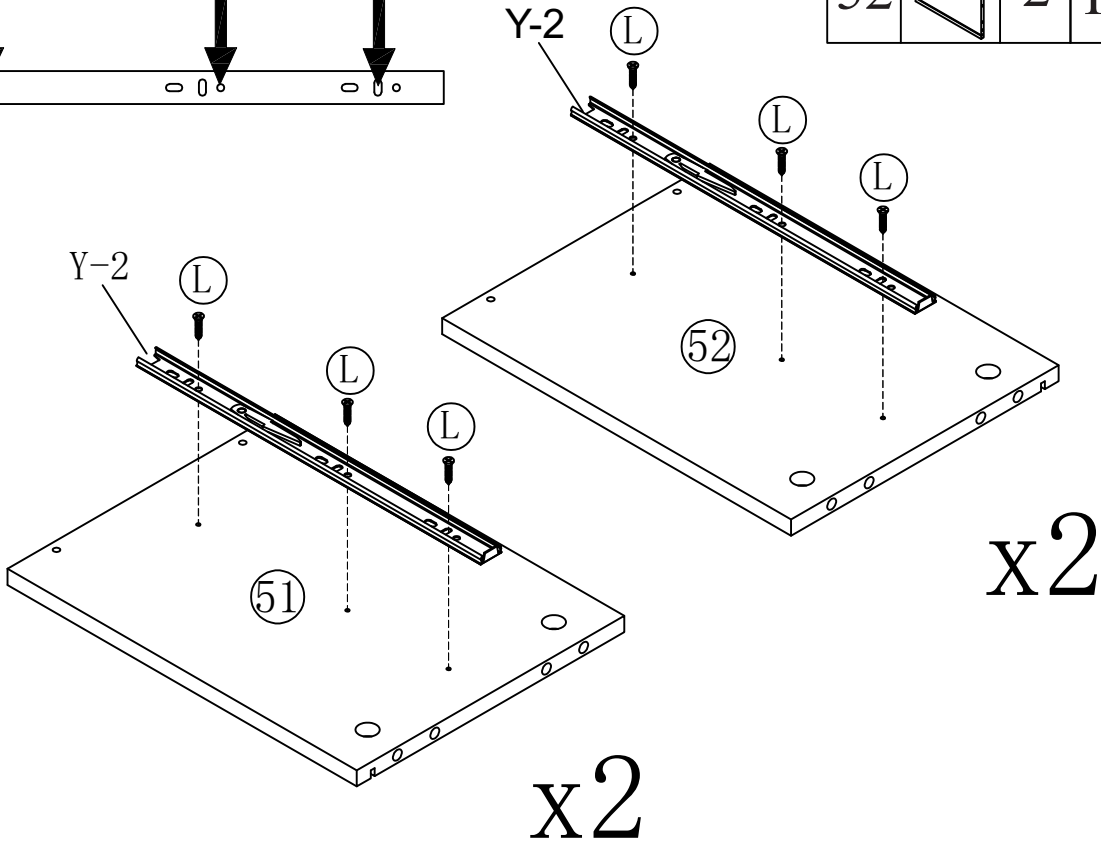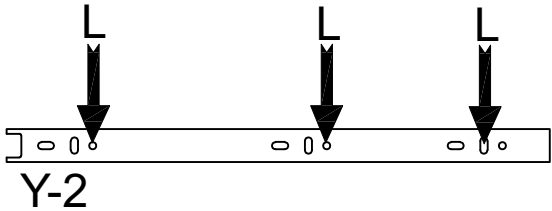


Step/Étape 57

49		2
B		4
N		8

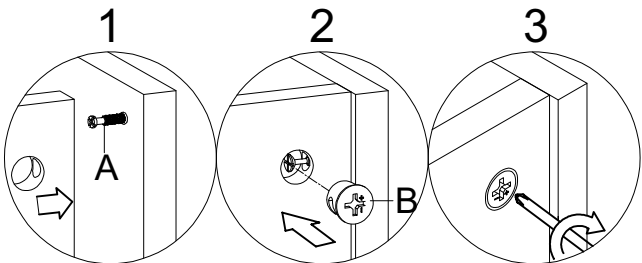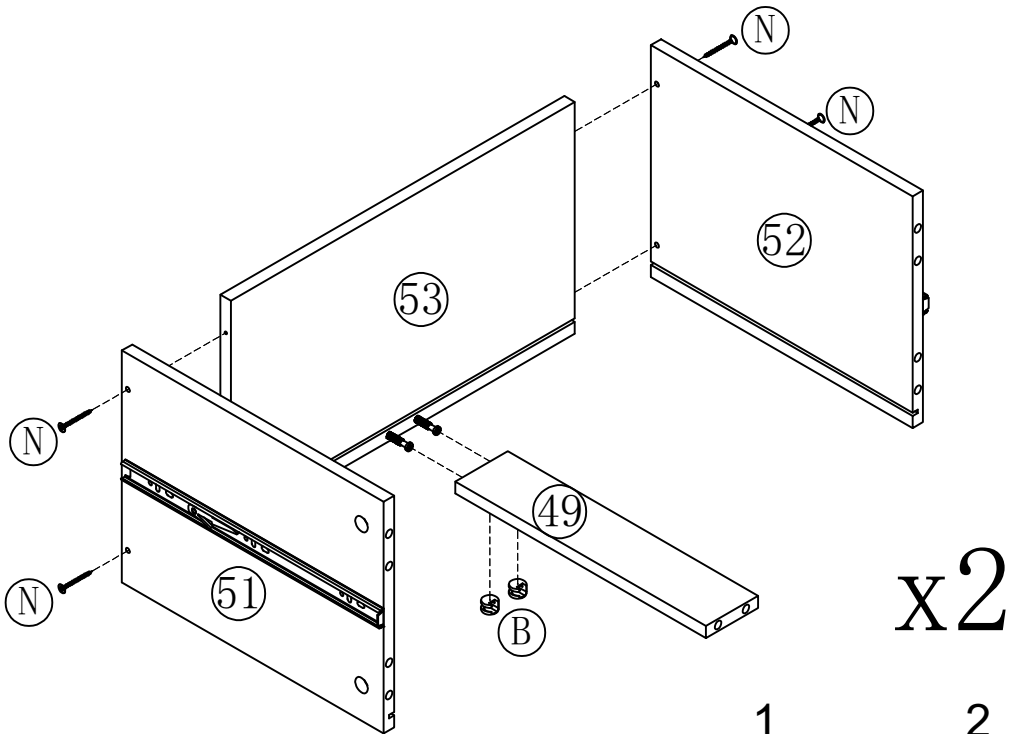


Step/Étape 58

48		2
----	--	---

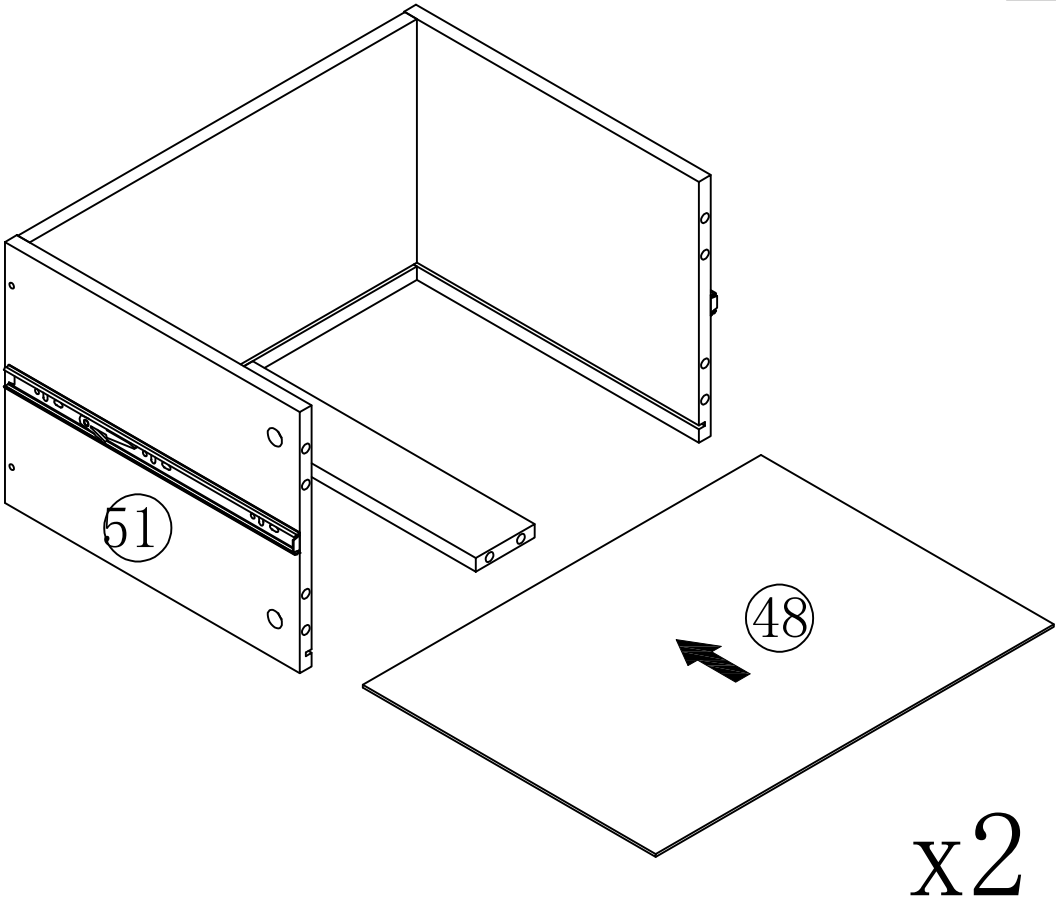



Step/Étape 59

54		2
A		12
E		8

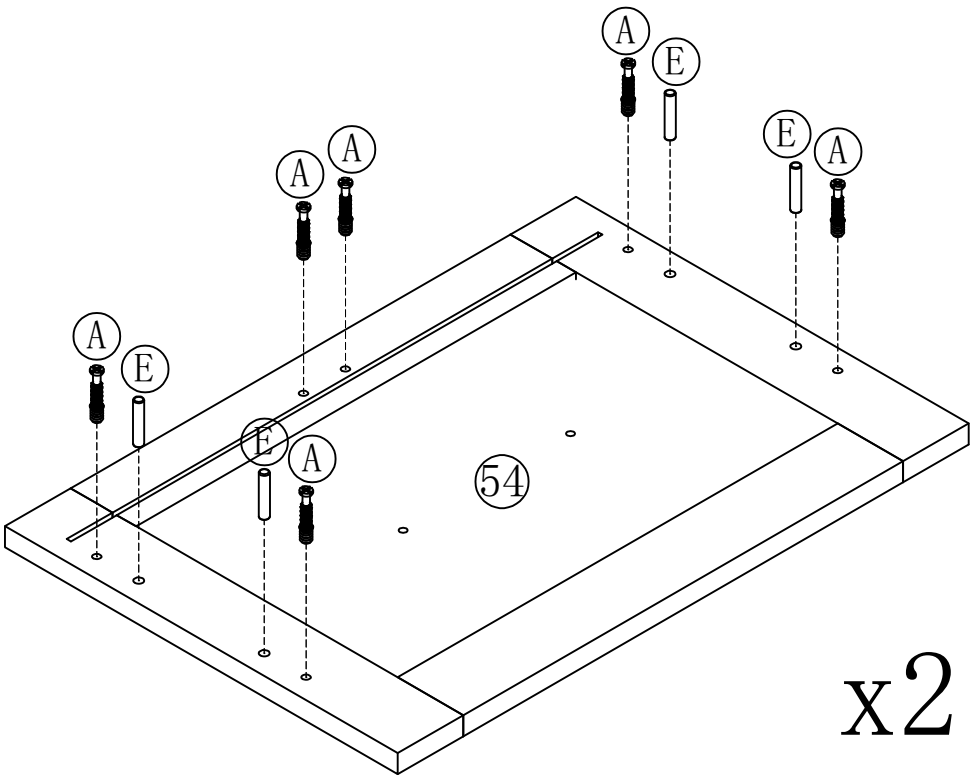


Step/Étape 60

B		12
---	--	----

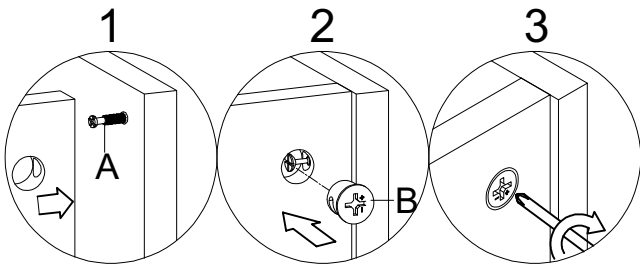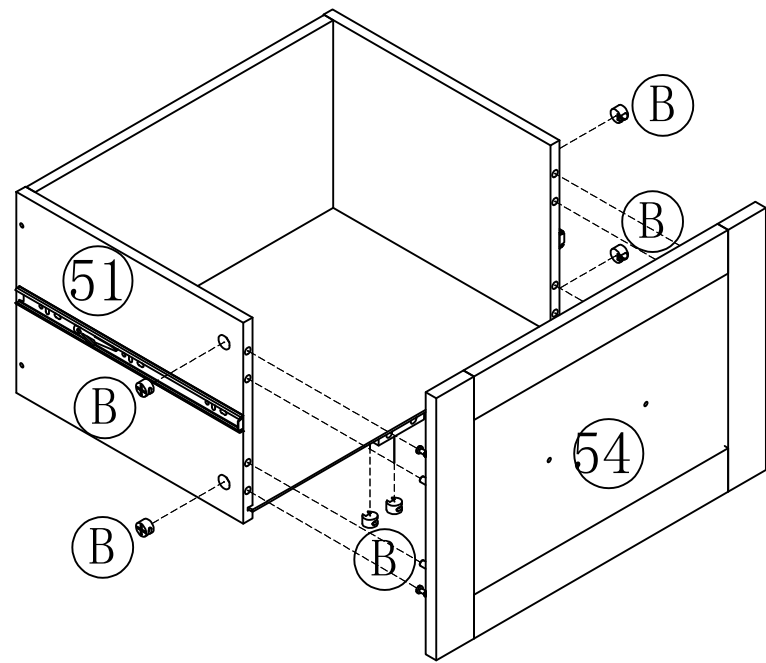

Step/Étape 61





F		2
H		4

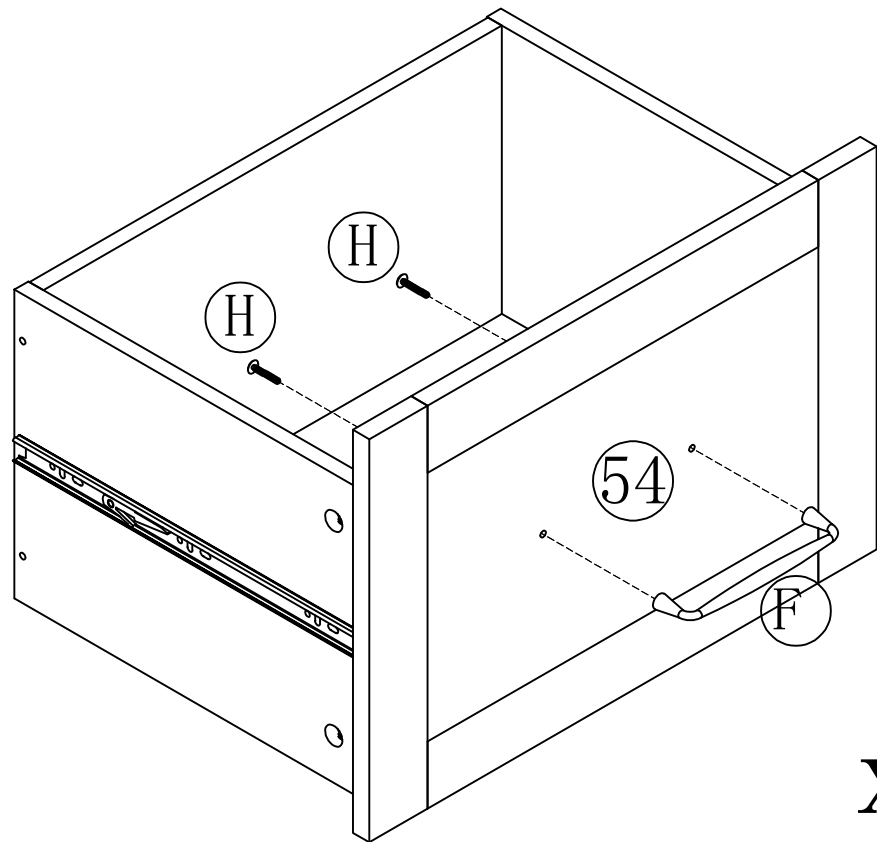

Step/Étape 62

X ○ 174

Slide the ball slide to the front end of the guide rail

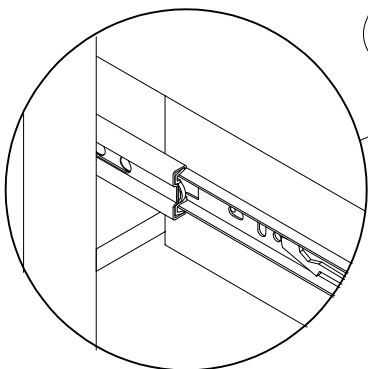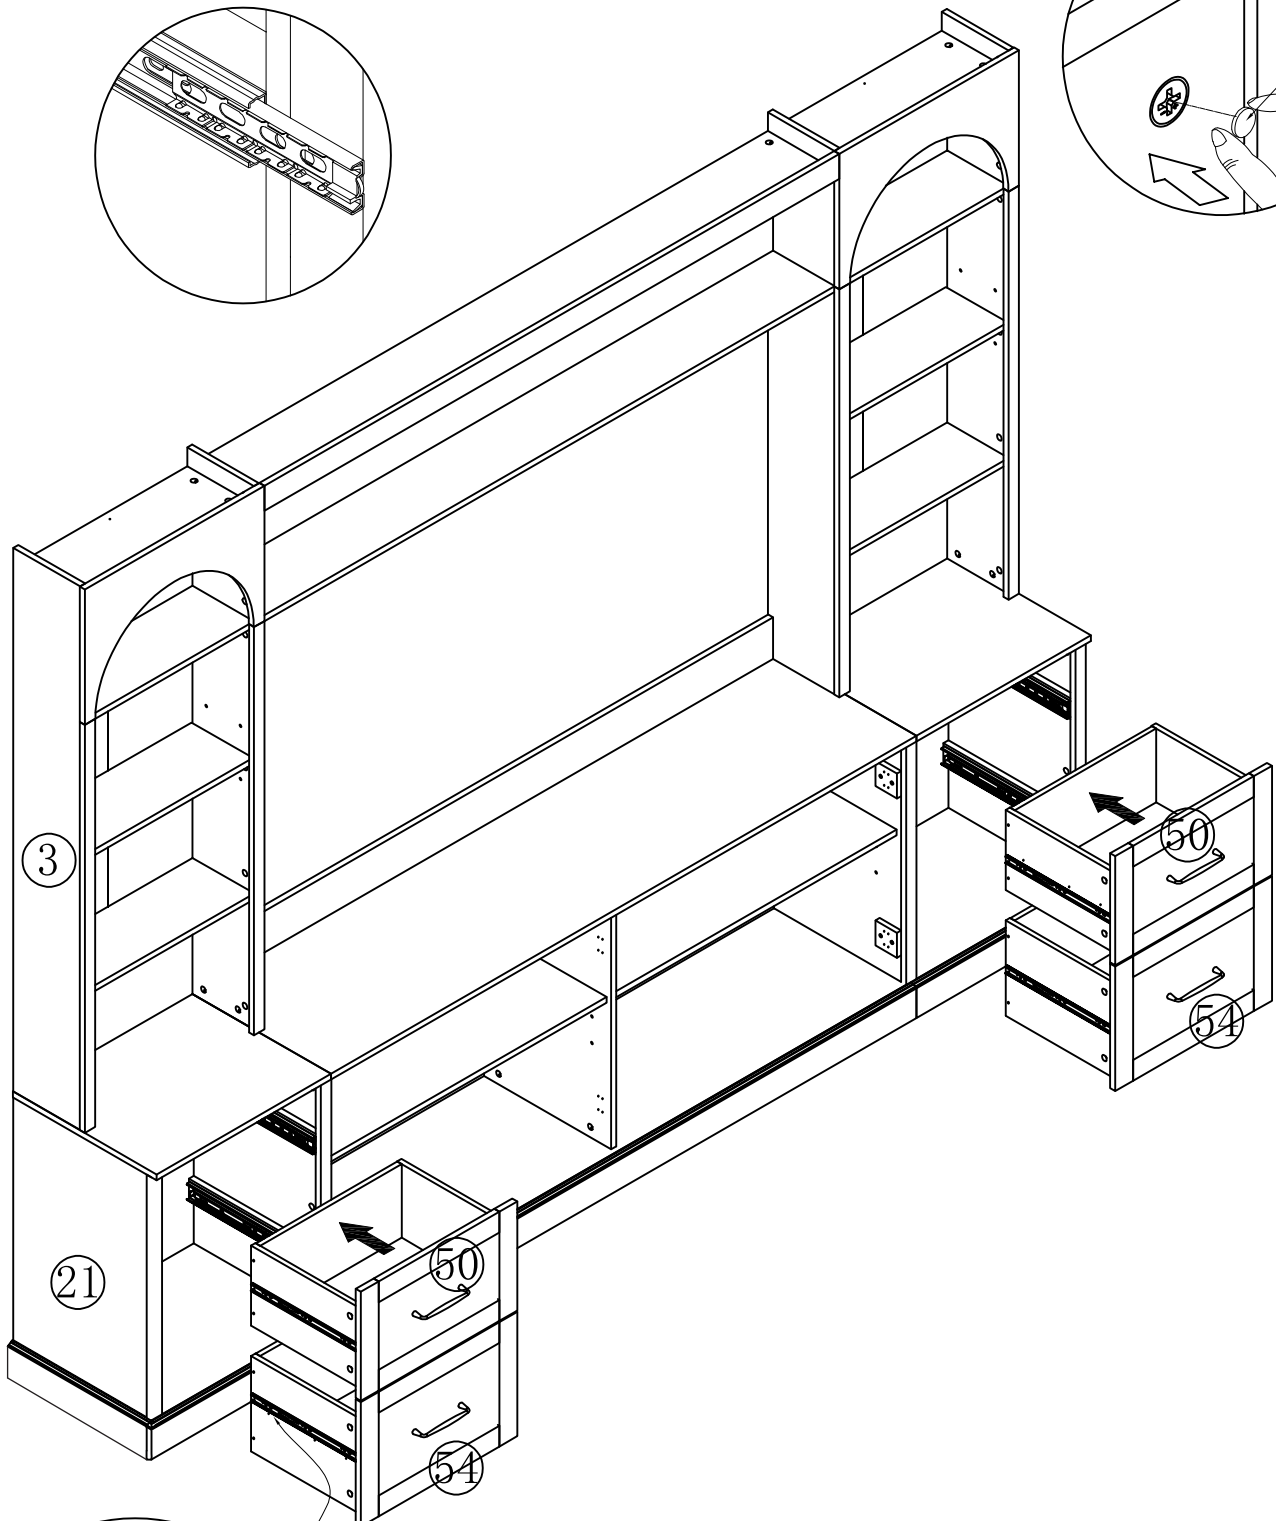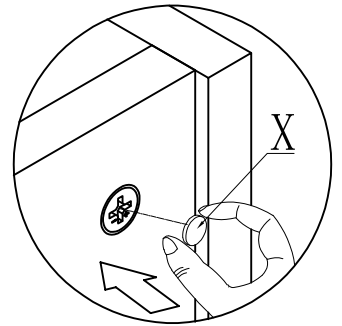
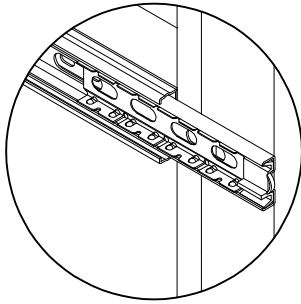


Attention:

1. Pull out the rail installed on the cabinet.
2. Align the slide runners on the drawer with the unit and push it carefully inside until it stops.
3. If the drawer does not go in smoothly please take it out and repeat the previous step

Step/Étape 63

55		2	F		4	K		8
56		2	G		8	L		16

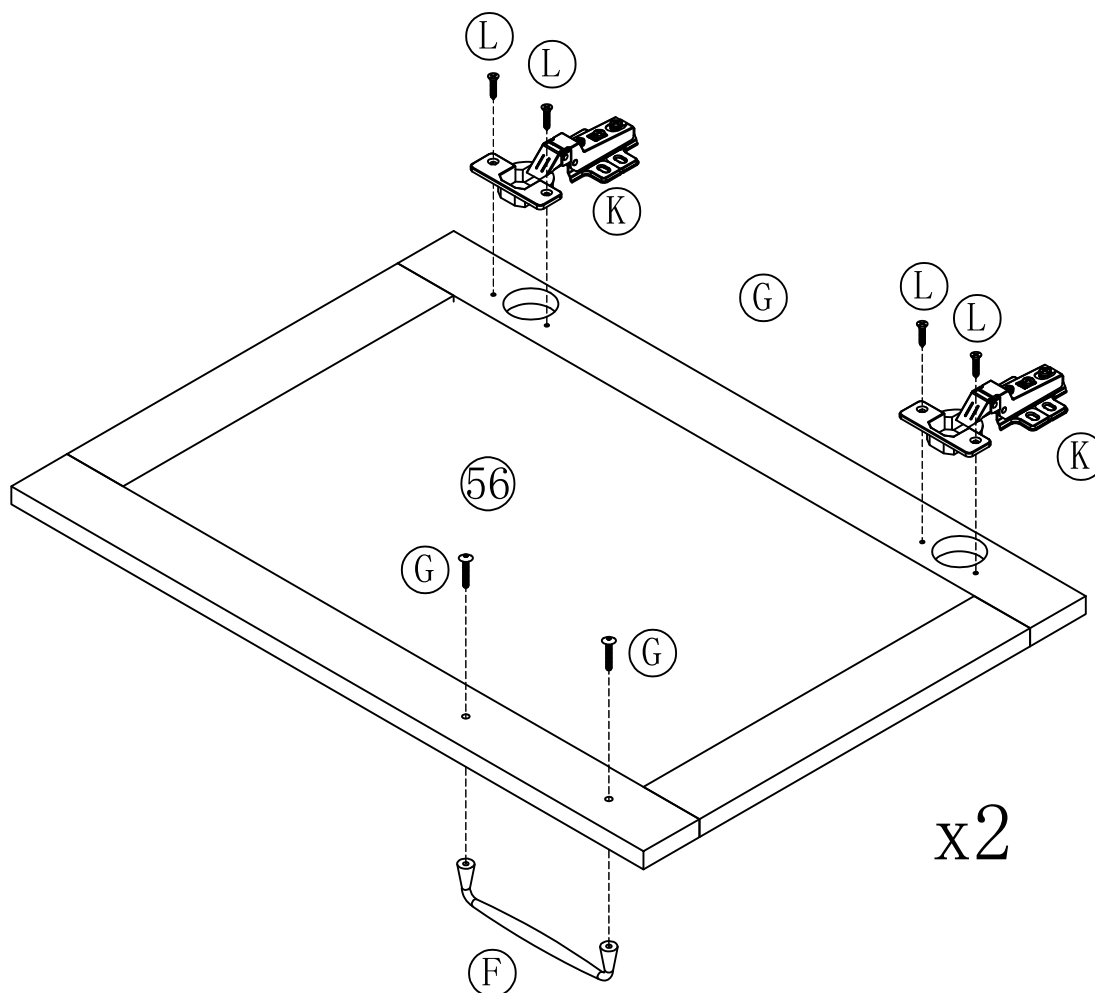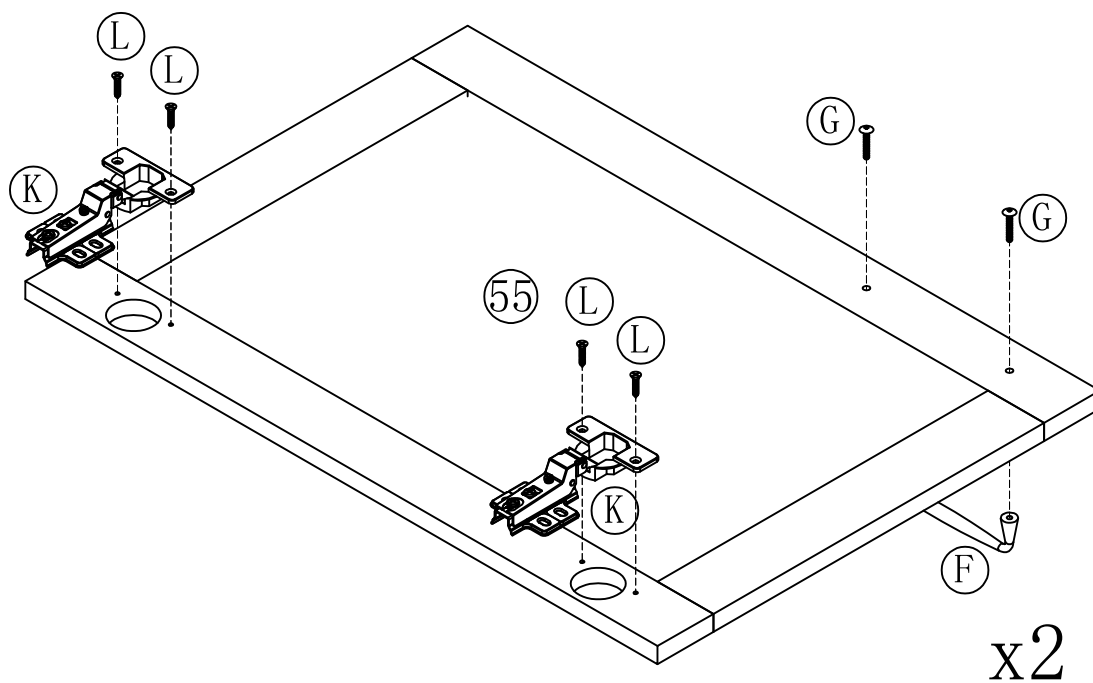


Step/Étape 64

L




16


When the hinges are installed, you can refer to the pictures to adjust the screws of the

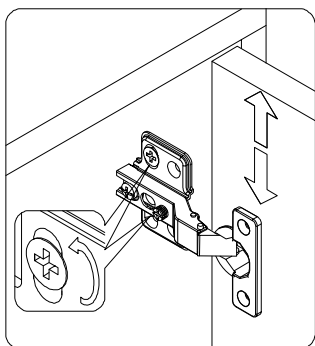


1.Adjust the screws shown in Figure 1 to adjust the door up and down.

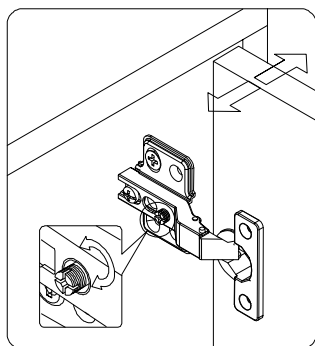




2.Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

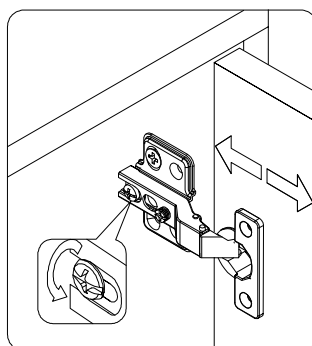



3.Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

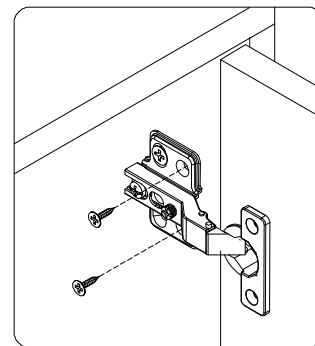

4.After the adjustment is complete, install the remaining two screws to secure the door in place.

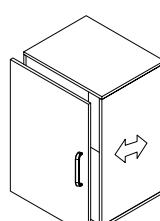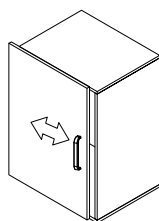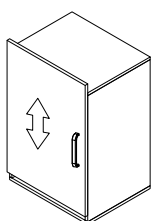

If there is an uneven gap between the door and the cabinet body, the problem can be solved by adjusting the hinge.

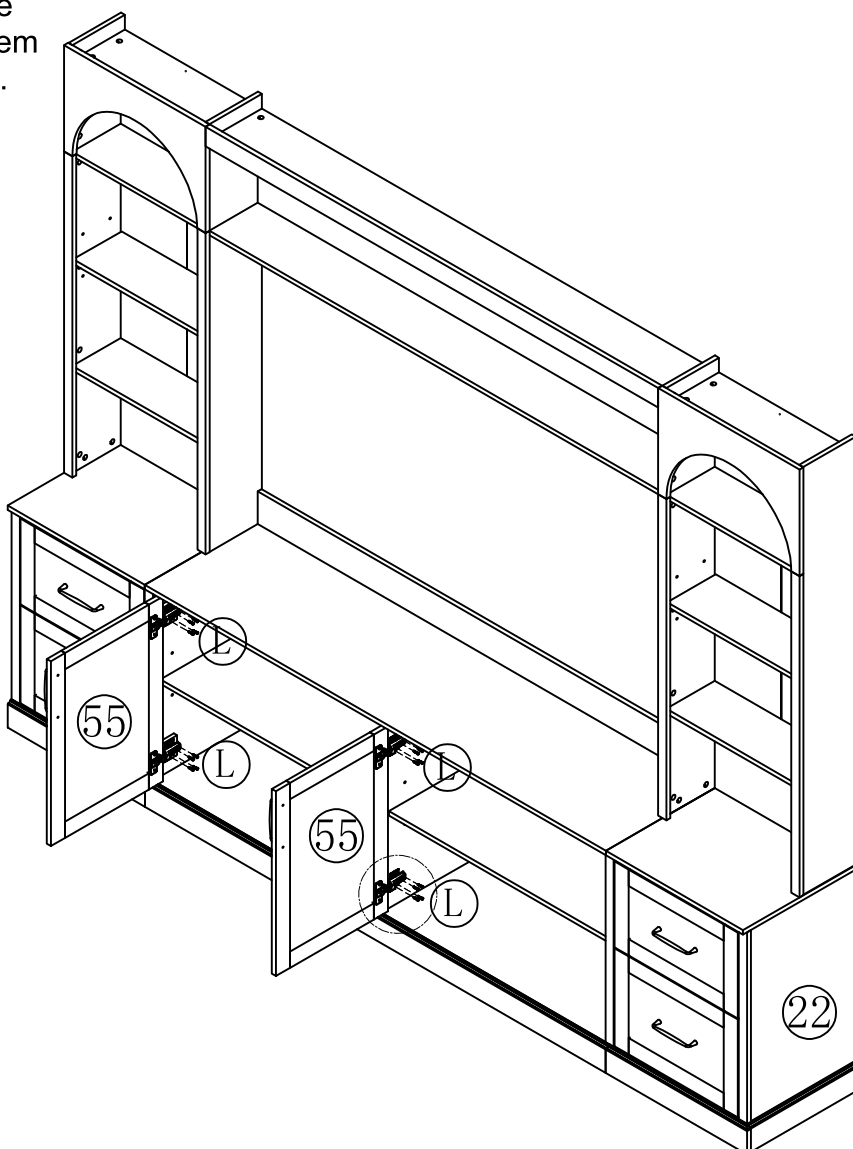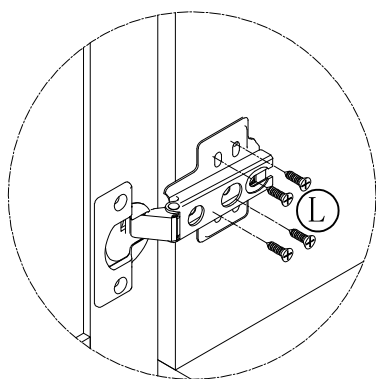


Step/Étape 65

L




16


When the hinges are installed, you can refer to the pictures to adjust the screws of the

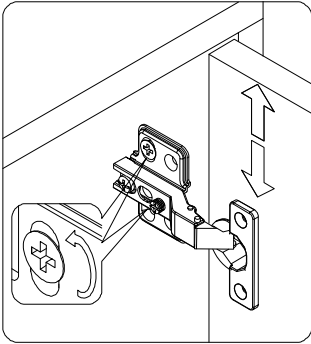


1. Adjust the screws shown in Figure 1 to adjust the door up and down.

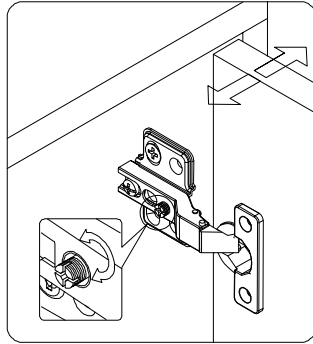




2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

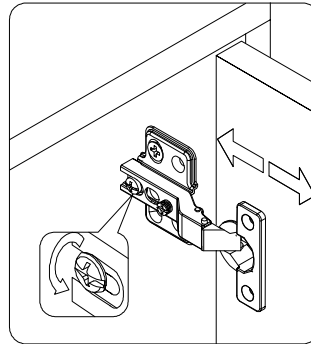



3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

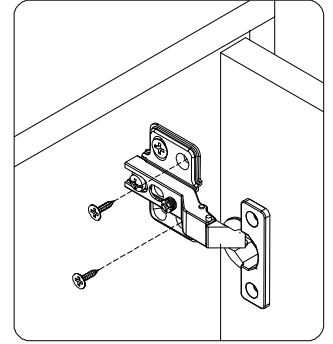


4. After the adjustment is complete, install the remaining two screws to secure the door in place.

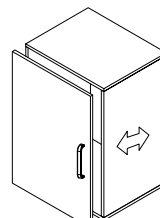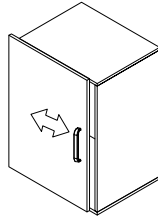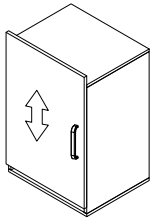


If there is an uneven gap between the door and the cabinet body, the problem can be solved by adjusting the hinge.

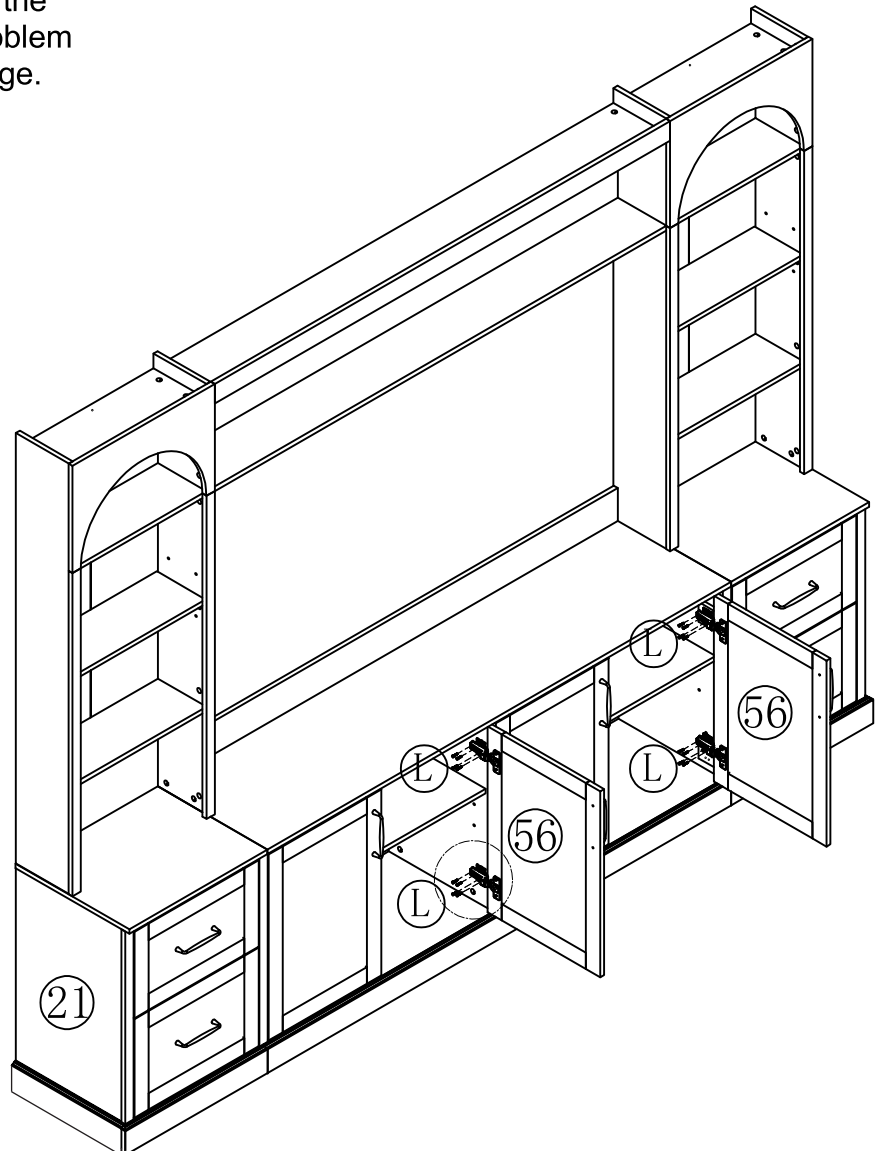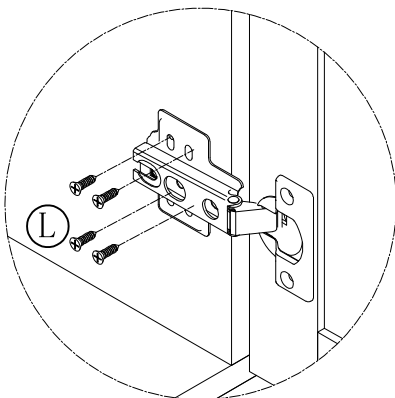


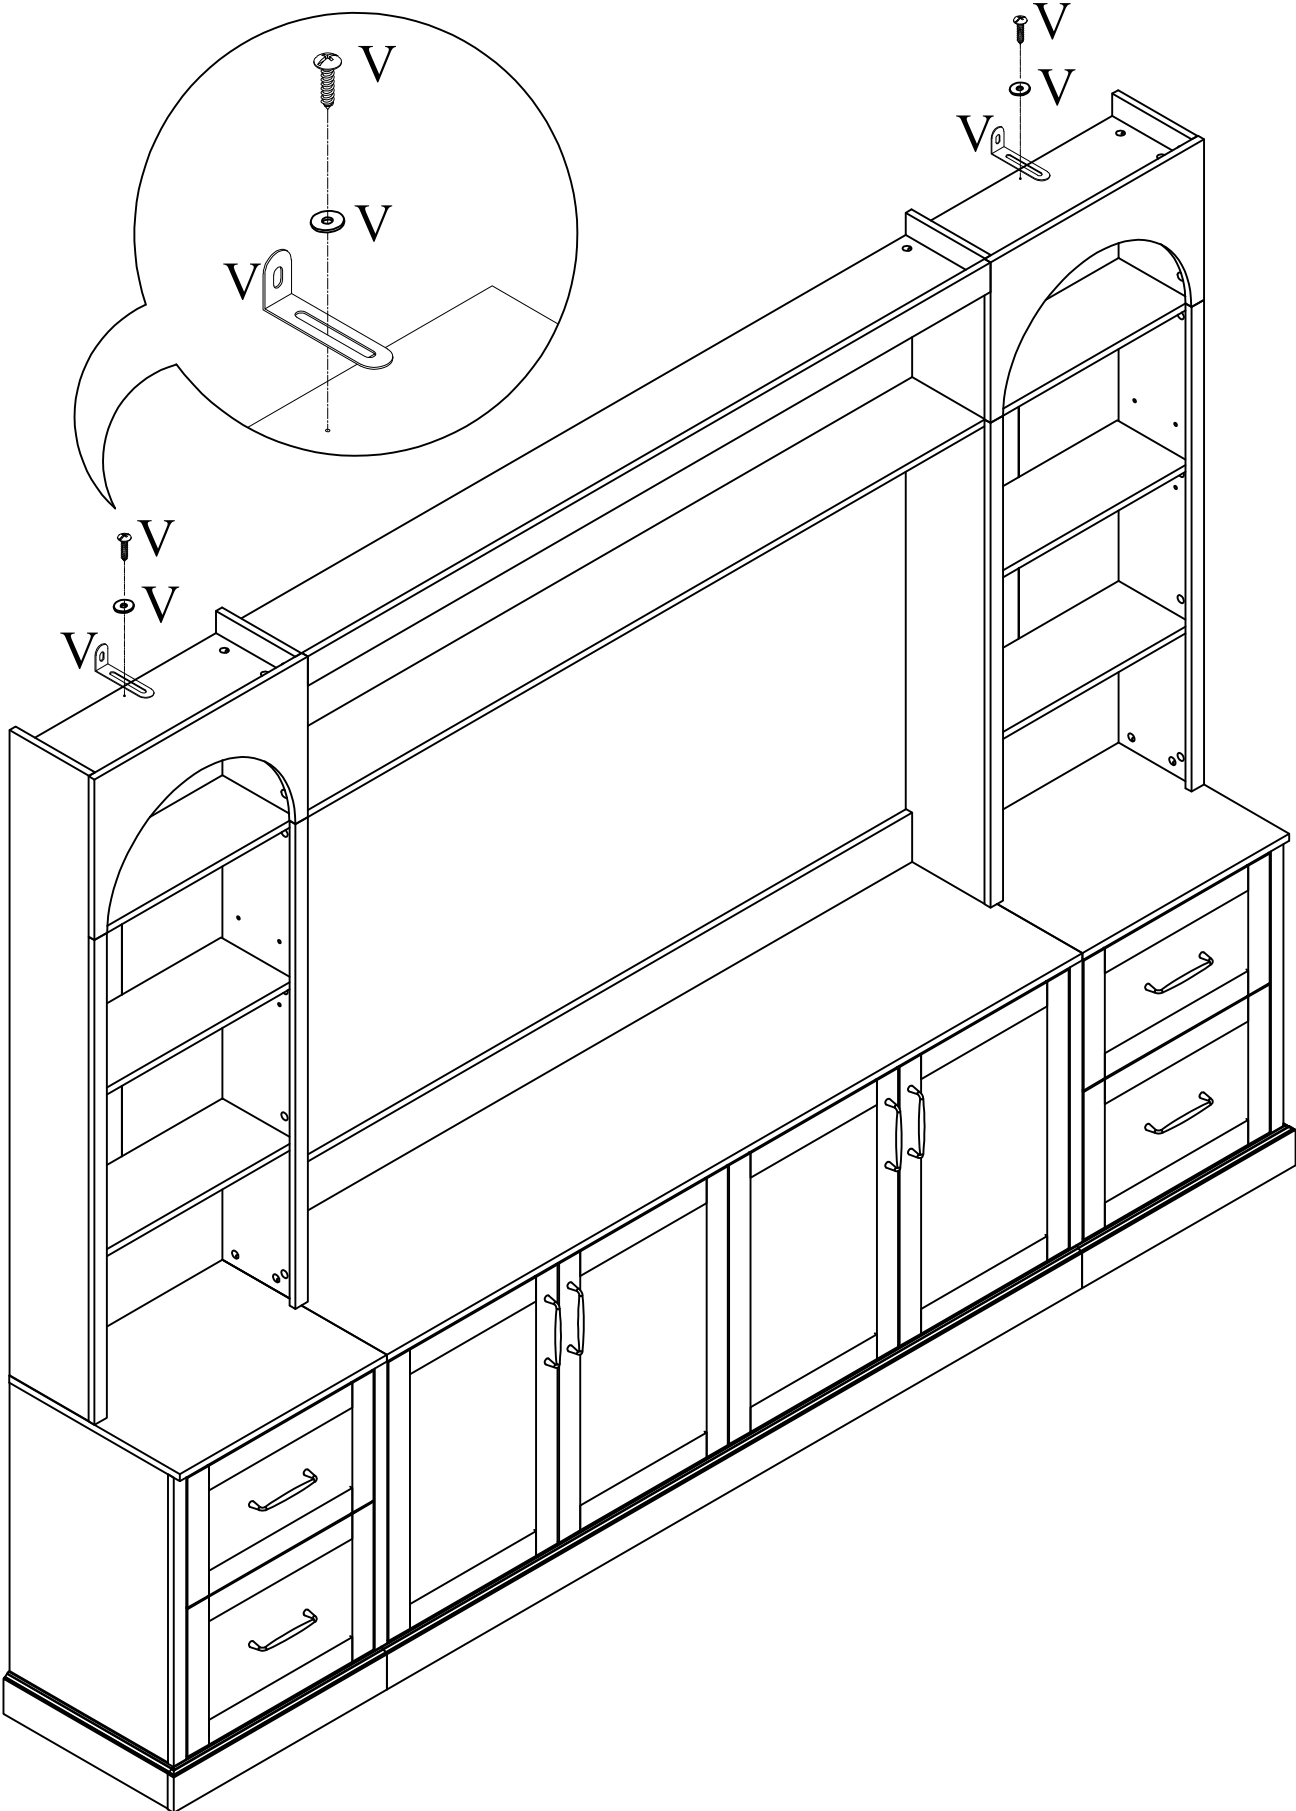

Step/Étape 67

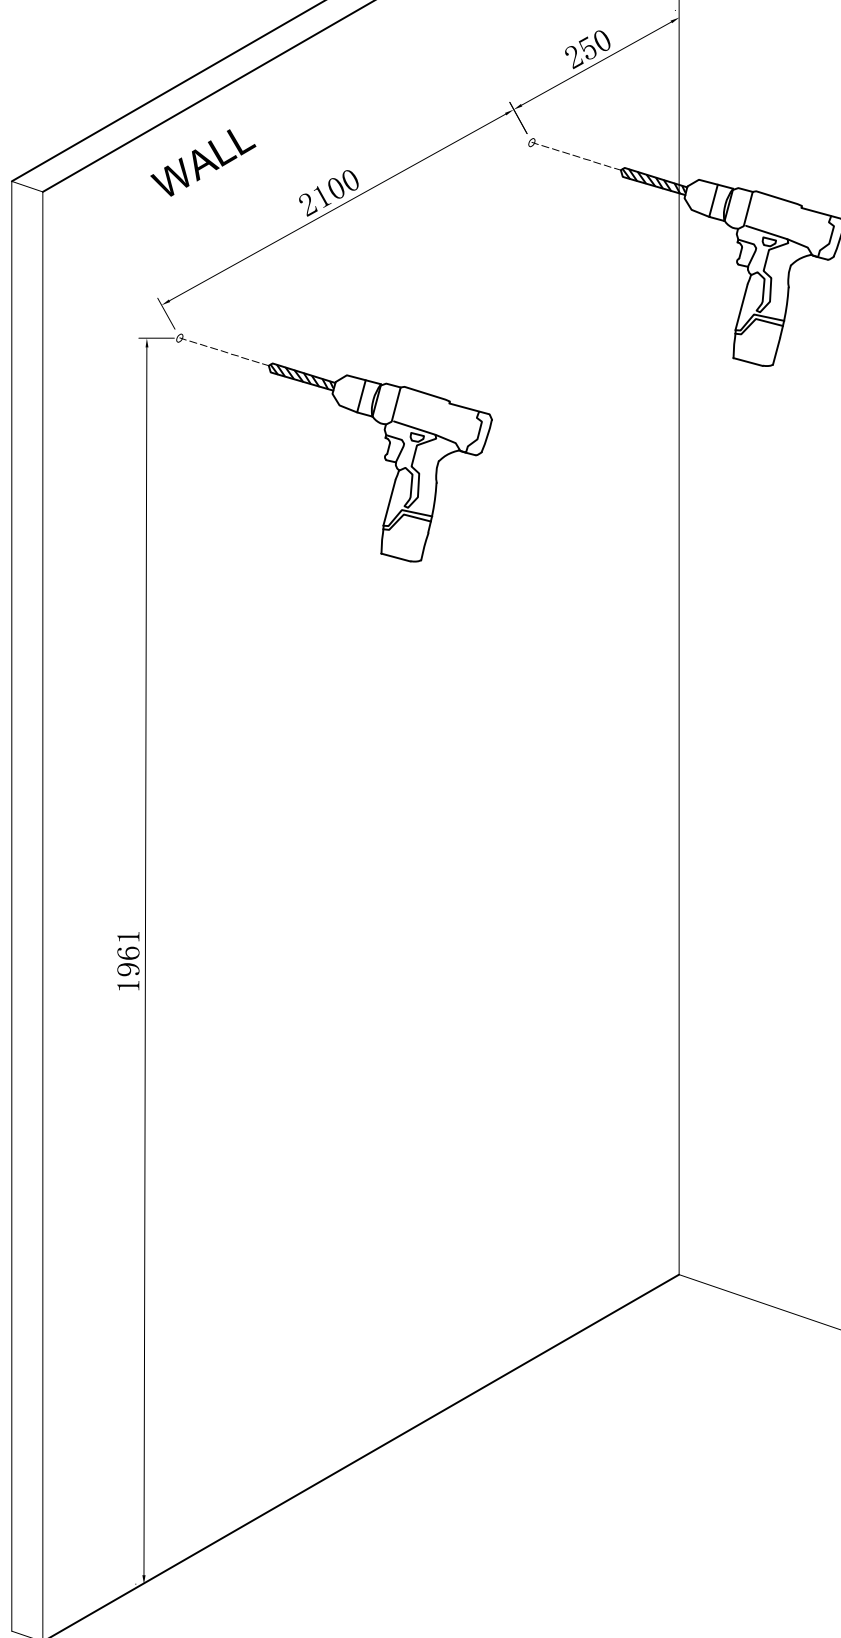



Before installing the anti-tipping device,
ensure the correct distance when drilling holes in the wall.

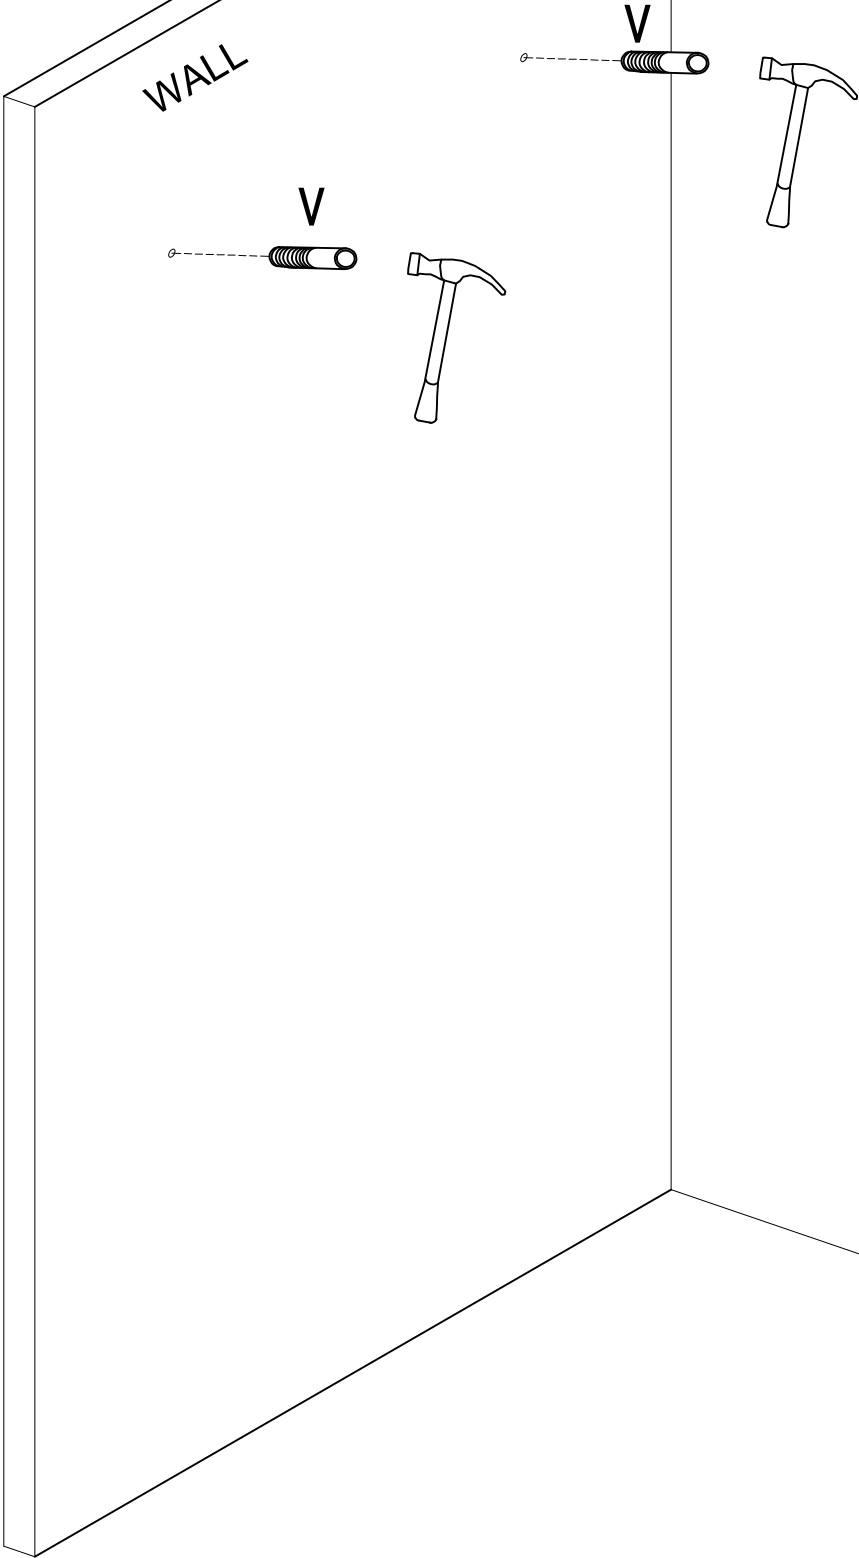

Step/Étape 69

V		2
W		2

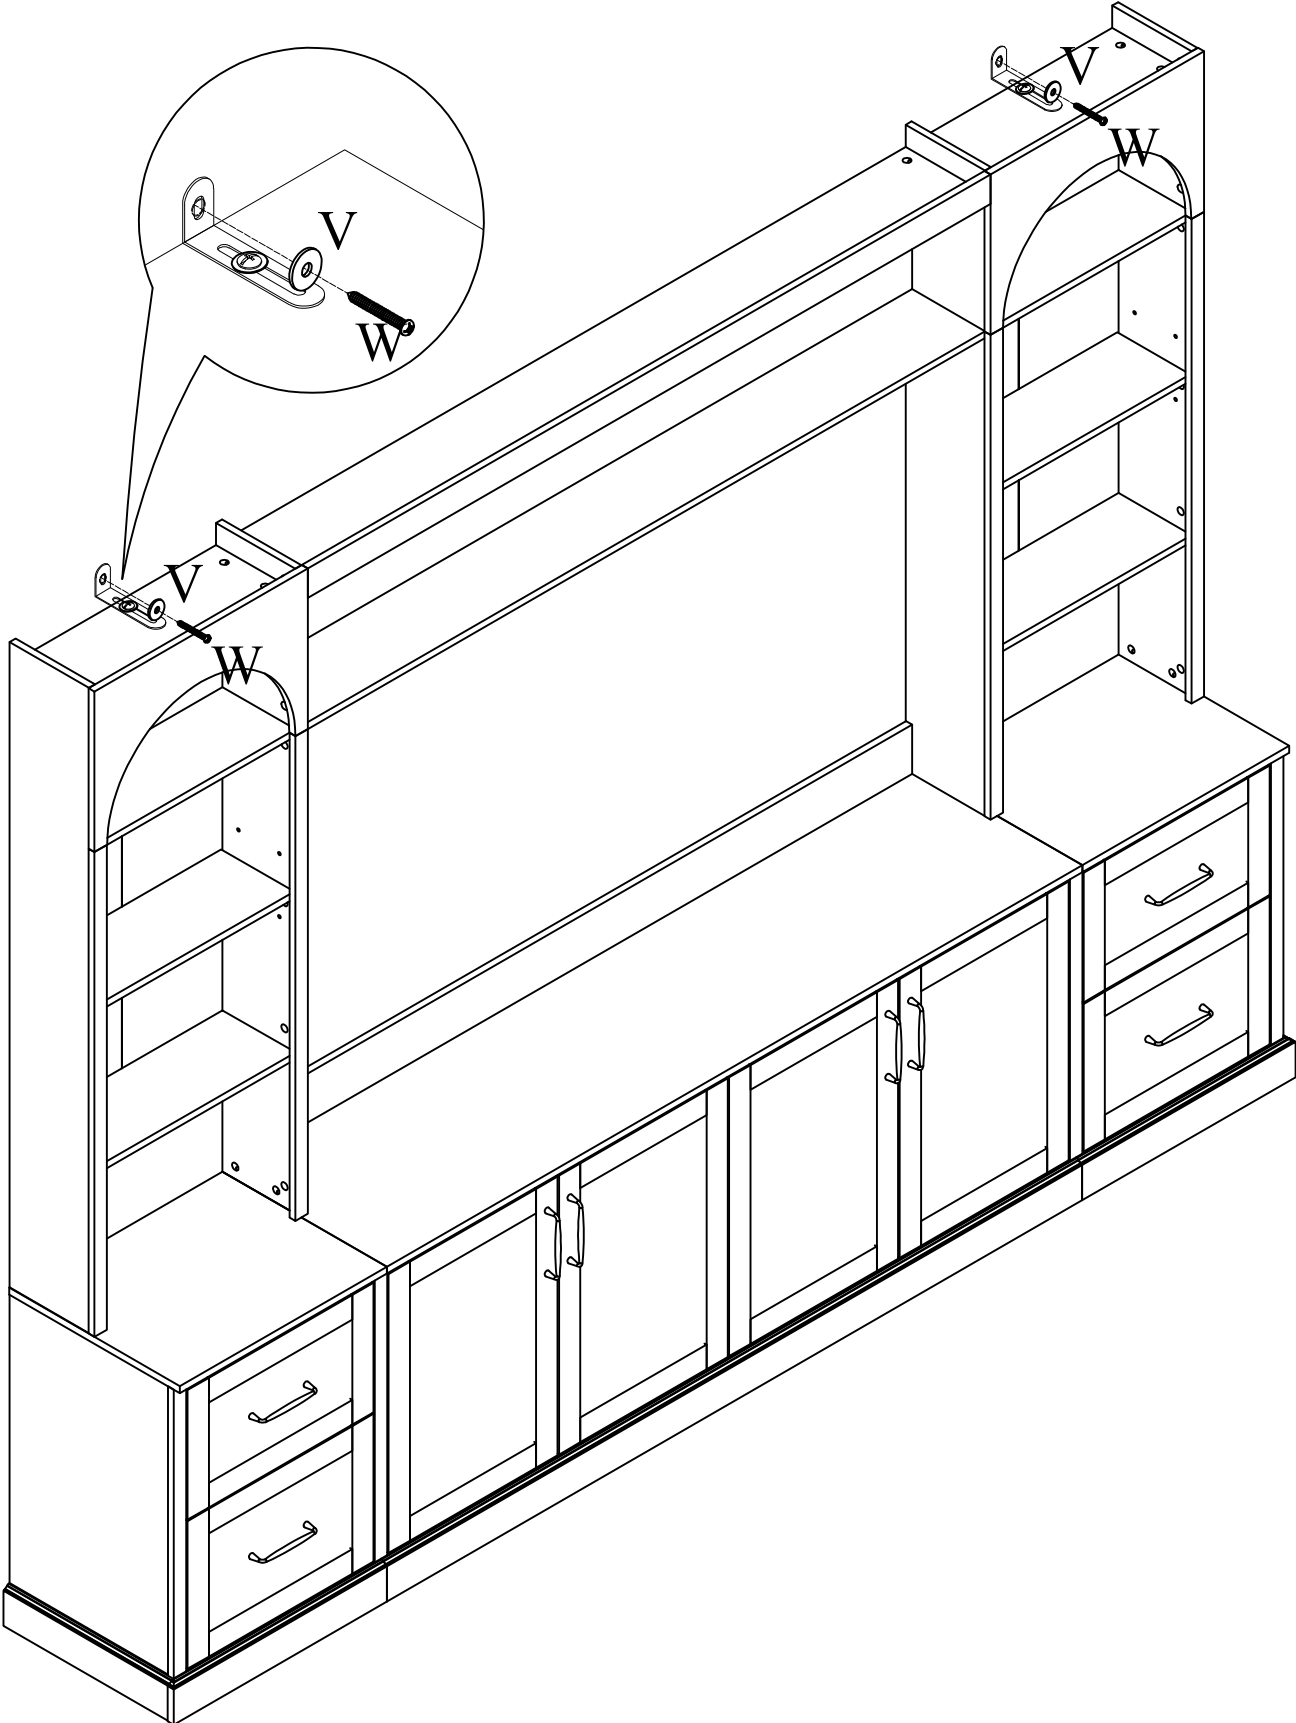

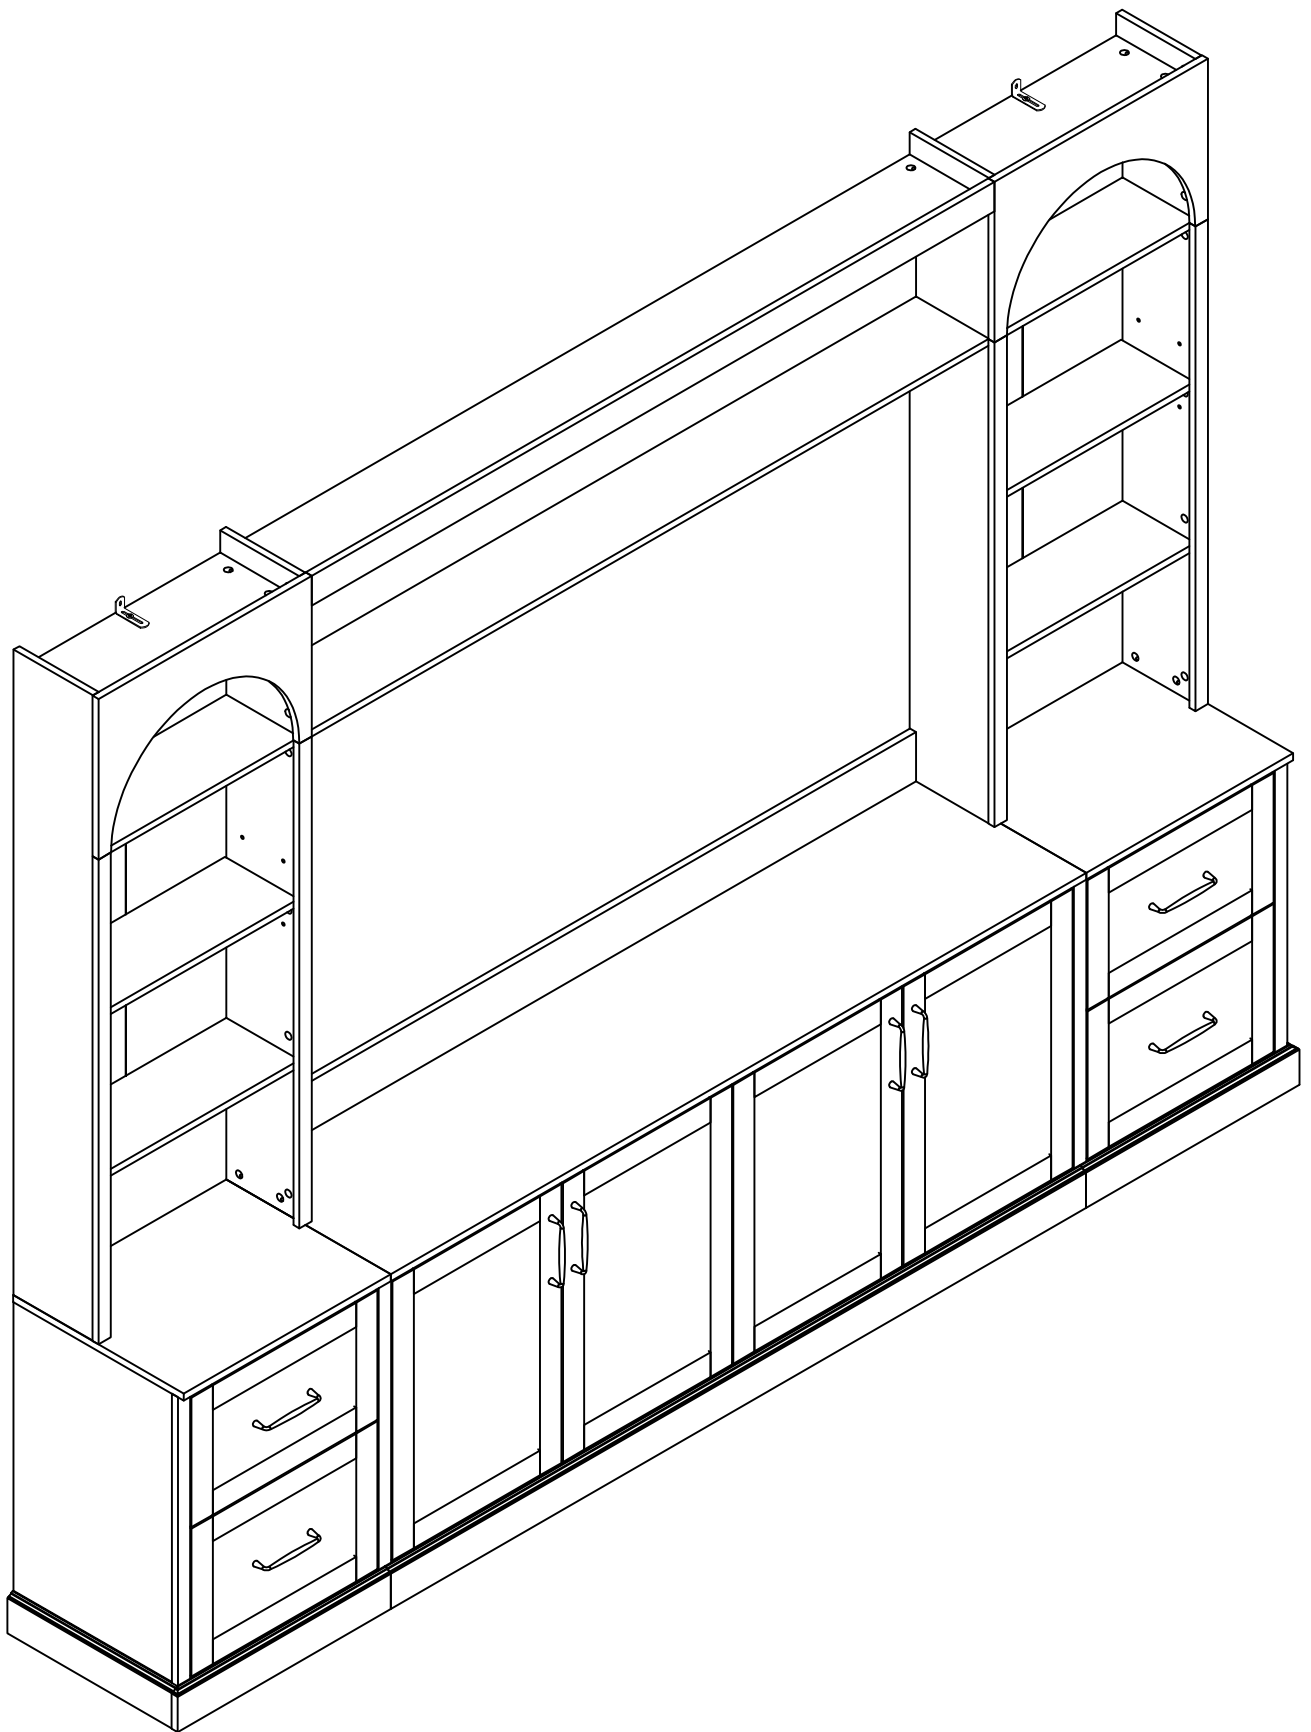

Finish/Finir