

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip_restraint_help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over


1. **NEVER** put a TV or other heavy objects on top of this product".
2. Do not stand on the product

⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none">• ALWAYS install tipover restraint provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.• Do not defeat or remove the drawer interlock system. <p><i>This is a permanent label. Do not remove!</i></p>
	




Assembly Instructions






Caution: You must read this before you proceed









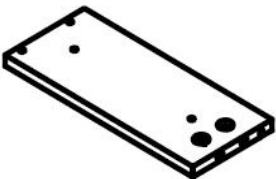
Bookcase








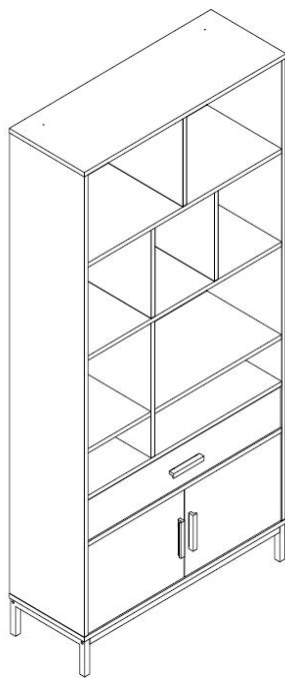


Parts List

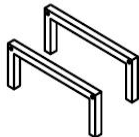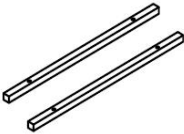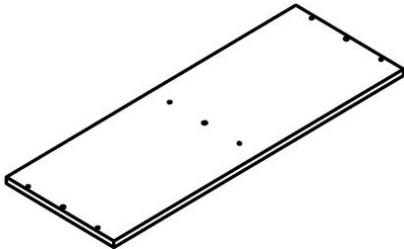

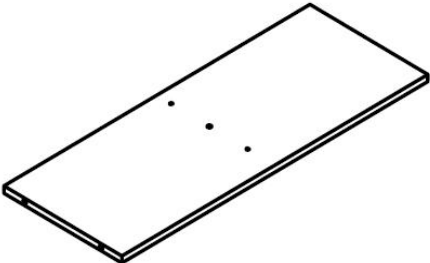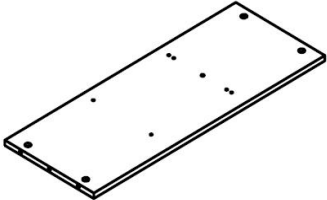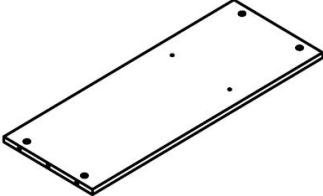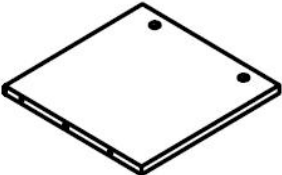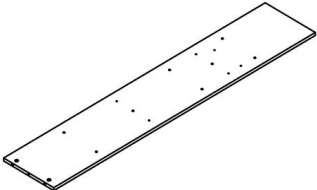

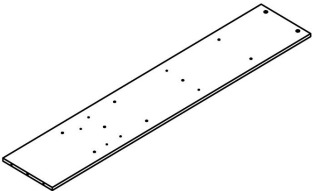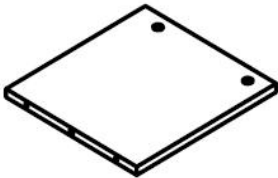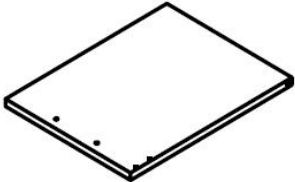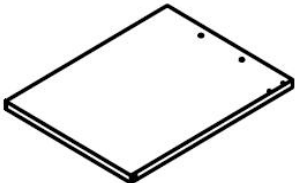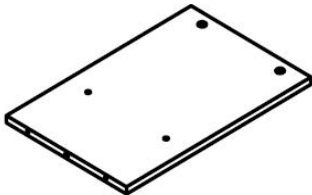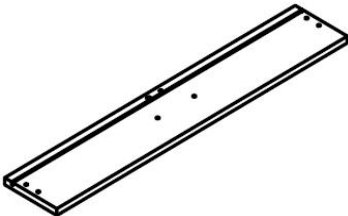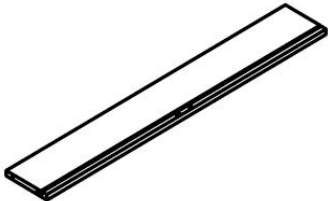

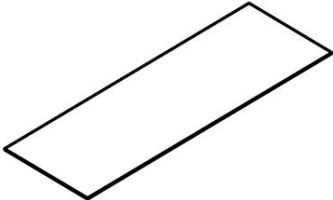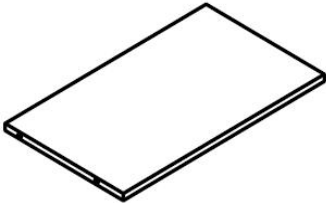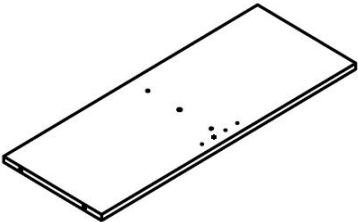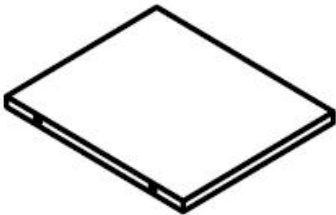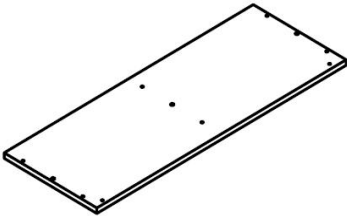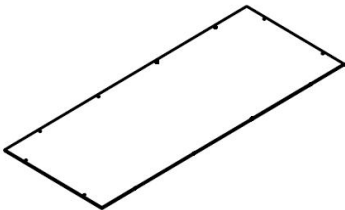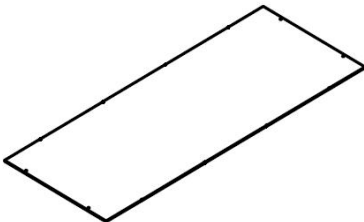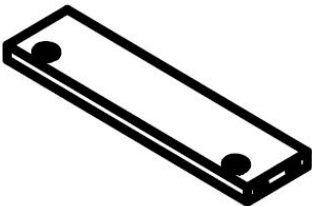







Label	Picture	Description	QTY
A		Side Frame	2
B		Transversal Tube	2
C		Top Panel	1












D		Upper Shelf	1
E		Middle Shelf	1
F		Shelf	1
G		Divider	3
H		Left Side Panel	1

I		Right Side Panel	1
J		Bottom Divider	1
K		Right Door	1
L		Left Door	1
M		Middle Divider	1
N		Front Panel of Drawer	1
O		Back Panel of Drawer	1
P		Left Panel of Drawer	1
Q		Right Panel of Drawer	1

R		Bottom of Drawer	1
S		Right Shelf	1
T		Bottom Shelf of Drawer	1
U		Left Shelf	1
V		Bottom Panel	1
W		Back Wall at Top and Bottom	2
X		Back Wall at Middle	3
Y		Reinforcement Panel of Drawer	1


Hardware

Label	Picture	Description	QTY
①		Cam Lock	29
②		Cam Bolt	29
③		Wooden Dowel	37
④		Bolt (M6*30mm)	13
⑤		Bolt (M4*25mm)	7
⑥		Screw (M4*40mm)	19
⑦		Door Hinge	5
⑧		Magnet	2
⑨		Screw (M3*16mm)	5
⑩		Screw (M3*12mm)	5
⑪		Screw (M3.5*12mm)	9
⑫		Allen Wrench	1
⑬		Screw (M3*12mm)	41
⑭		Handle	3

⑮		Holes Cover	29
⑯		Drawer Slides	2
⑰		Magnetic Bar	2
⑱		Metal Gasket	13
Cabinet Restraint Device Hardware			
⑲		L-shape Metal Brackets	2
⑳		Screws (M4*35mm)	3
㉑		Screws (M4*15mm)	3
㉒		Plastic Dowel	3
㉓		Screwdriver (Not provided)	1
㉔		Power Drill (Not provided)	1
㉕		Hammer (Not provided)	1

Assembly Preparation

Before Beginning Assembly:

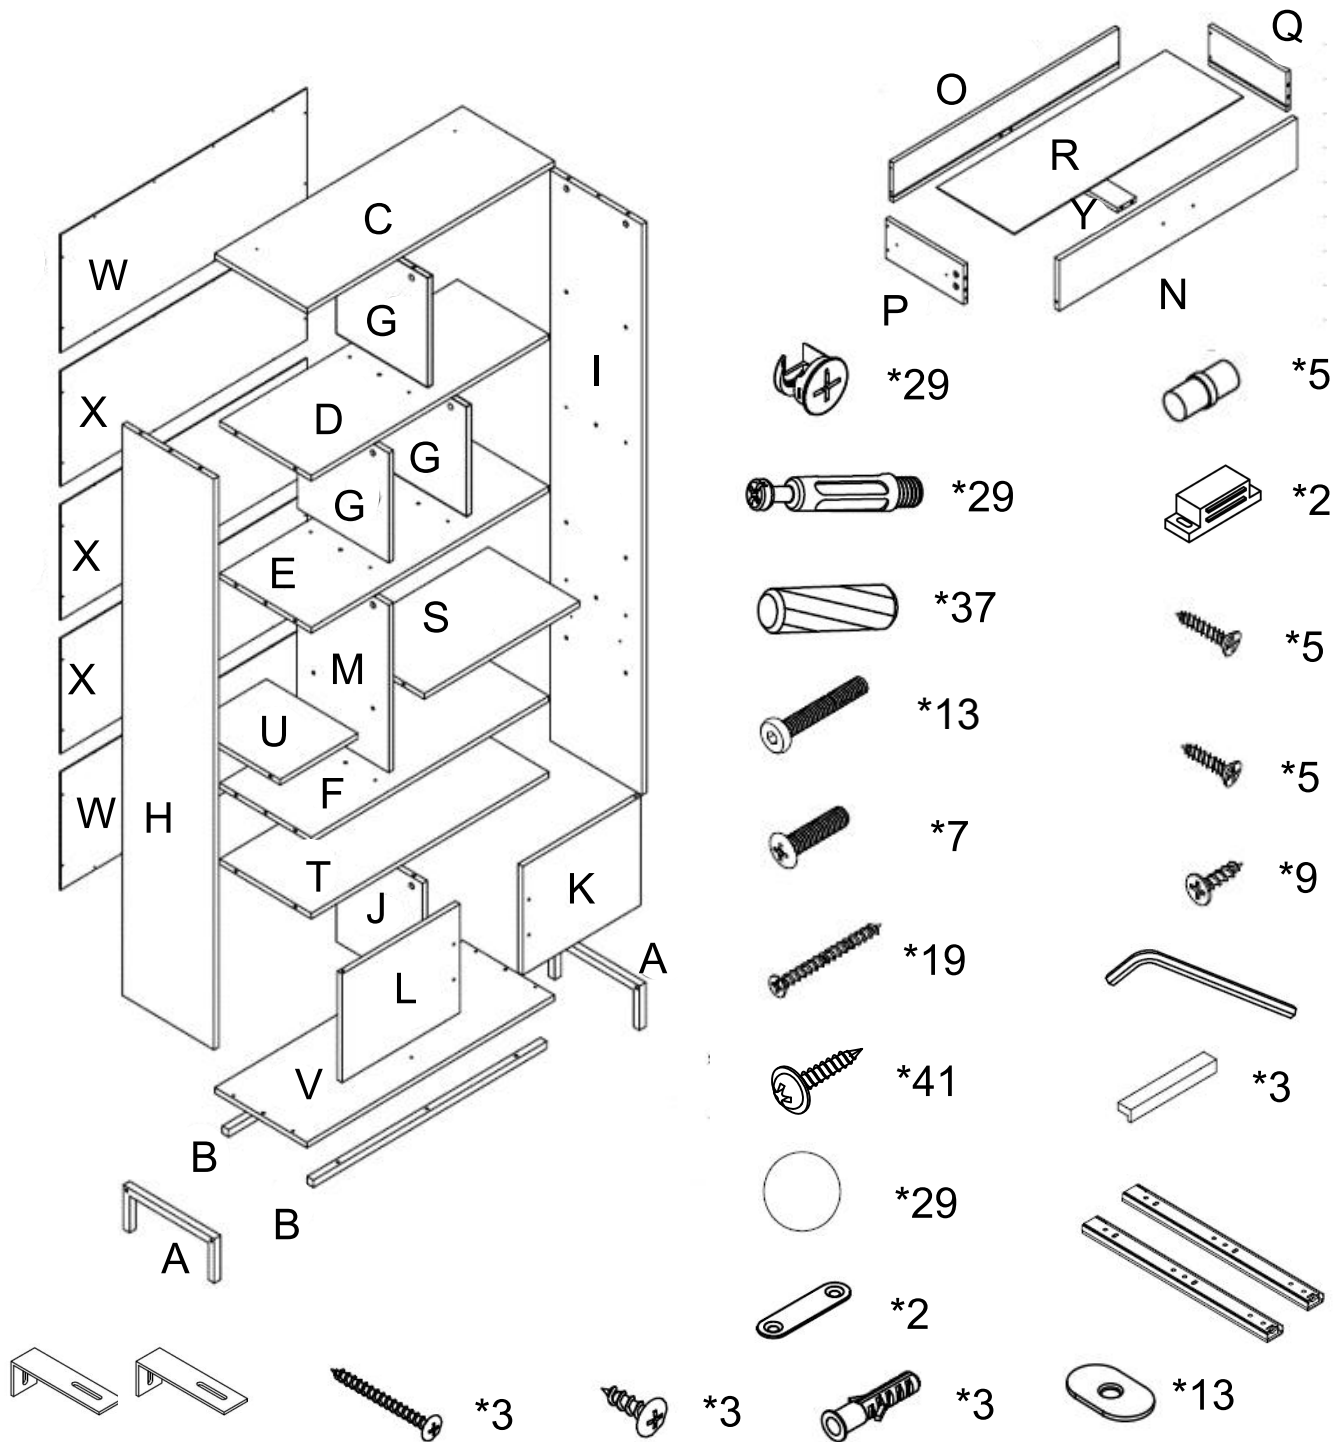

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps


Overview

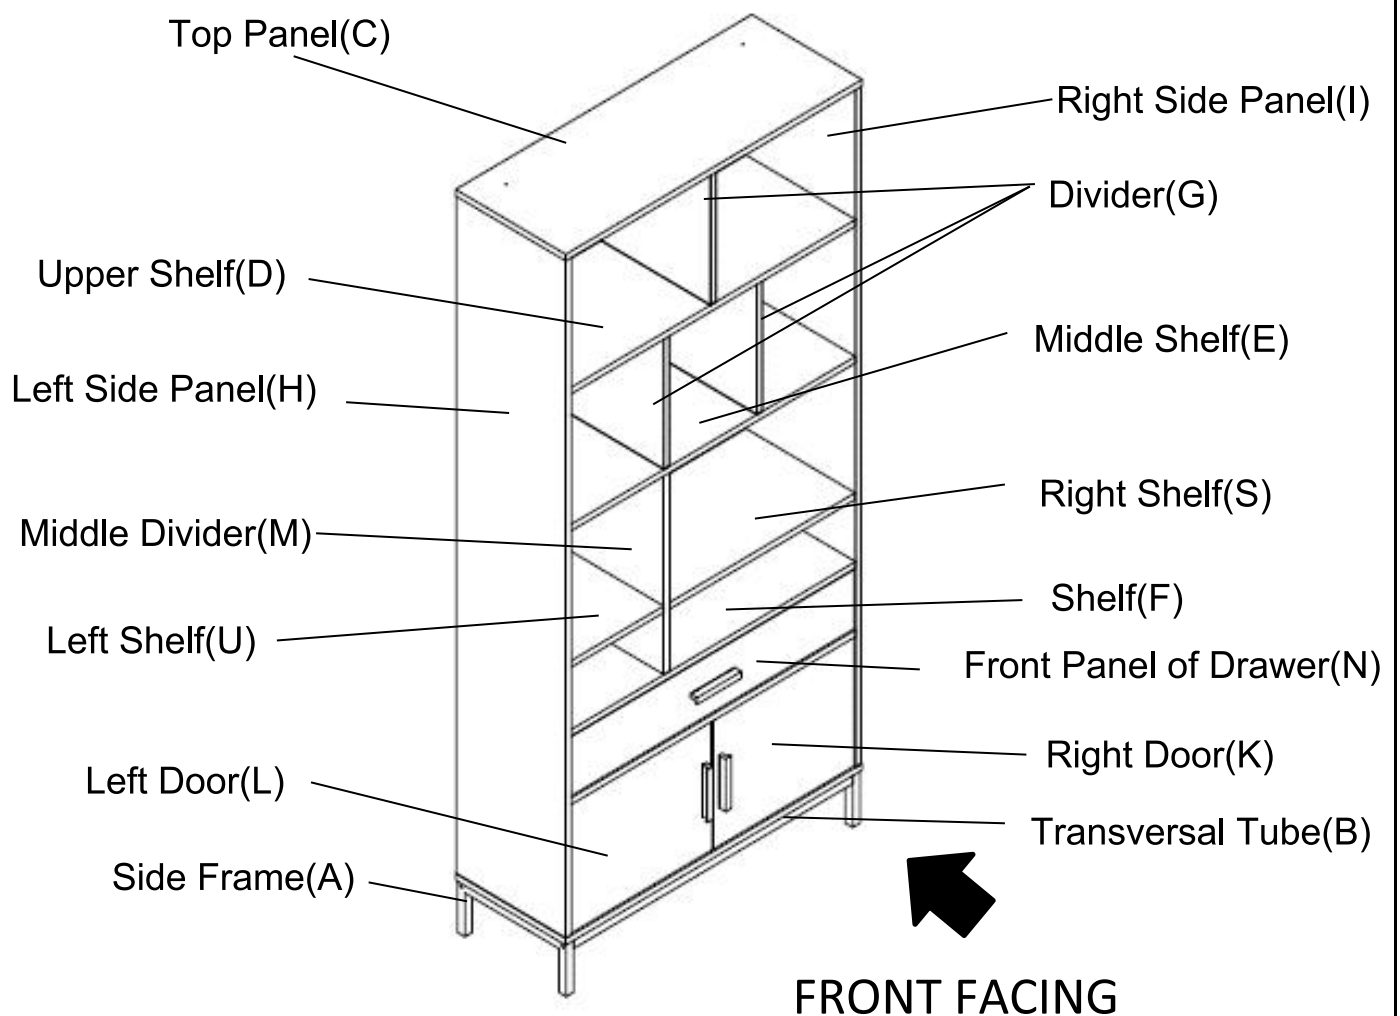

This Bookcase has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bookcase parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Step 1

- 1) Pull toward arrow to open the slide until its stops and then flip it over.



- 2) Push plastic lever down and pull apart.



Cabinet member




Drawer member




Open the carton and place all parts onto a clean, non-marring surface.
Split up the Drawer Slides(16) into a and b.

Step 2

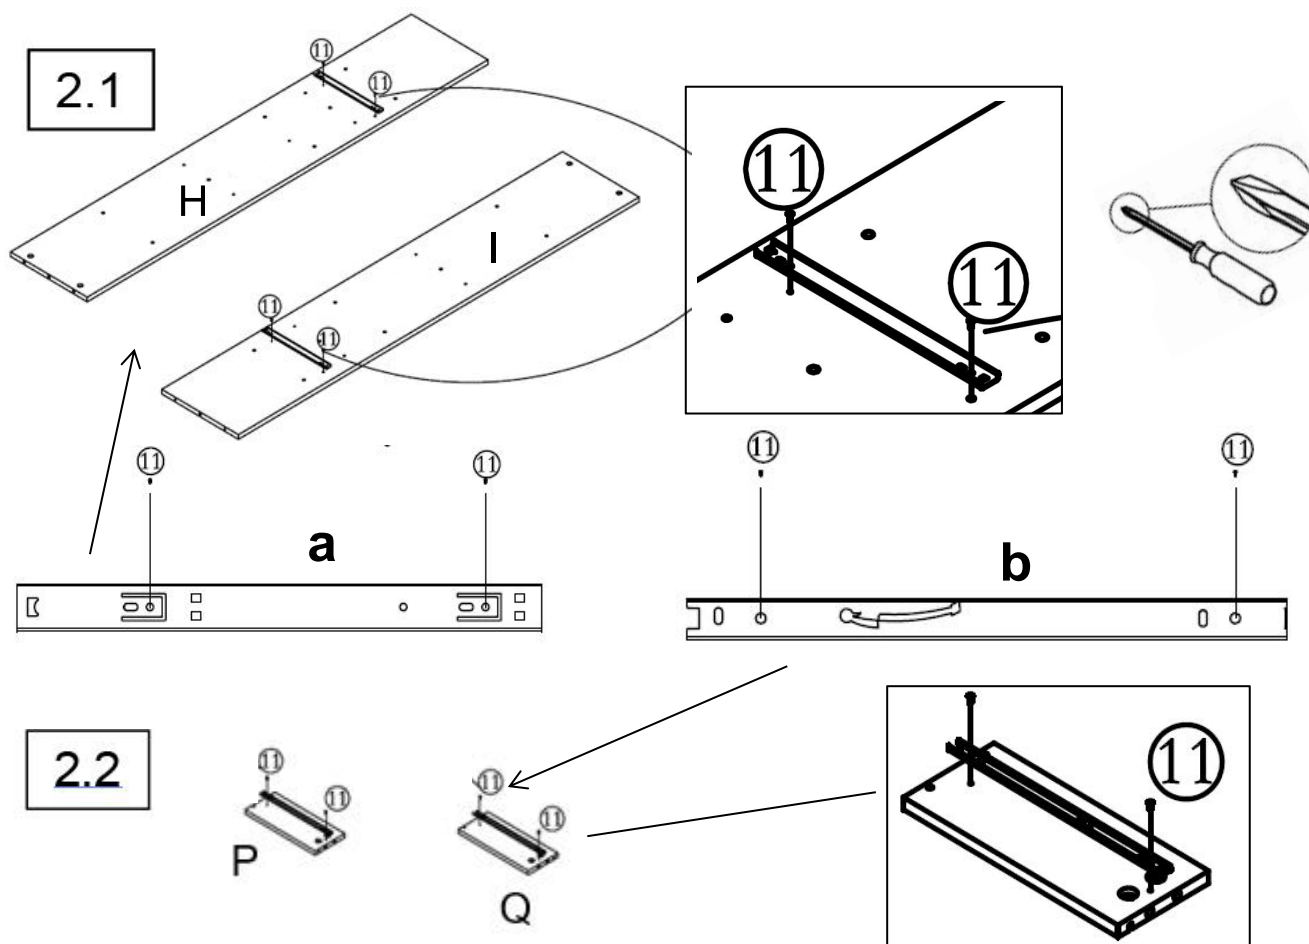


- 2.1) Attach part a of Drawer slides(⑩) to Left Side Panel(H) and Right Side Panel(I) using Screw(⑪) with Screwdriver(⑬).
- 2.2) Attach part b of Drawer slides(⑩) to Left Panel of Drawer(P) and Right Panel of Drawer(Q) using Screw(⑪) with Screwdriver(⑬).

Step 3

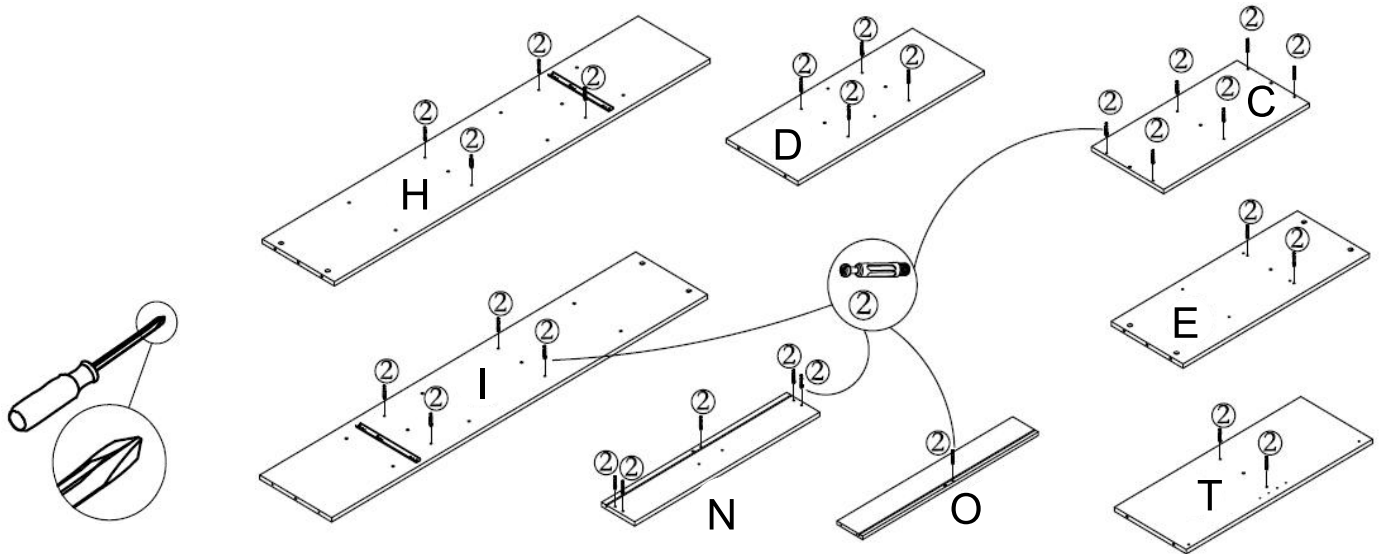


Insert Cam Bolt(②) into the mounting position of C,D,H, I, N,O,T,E as shown, lock by turning Cam Bolt(②) with Screwdriver(⑬).

Step 4

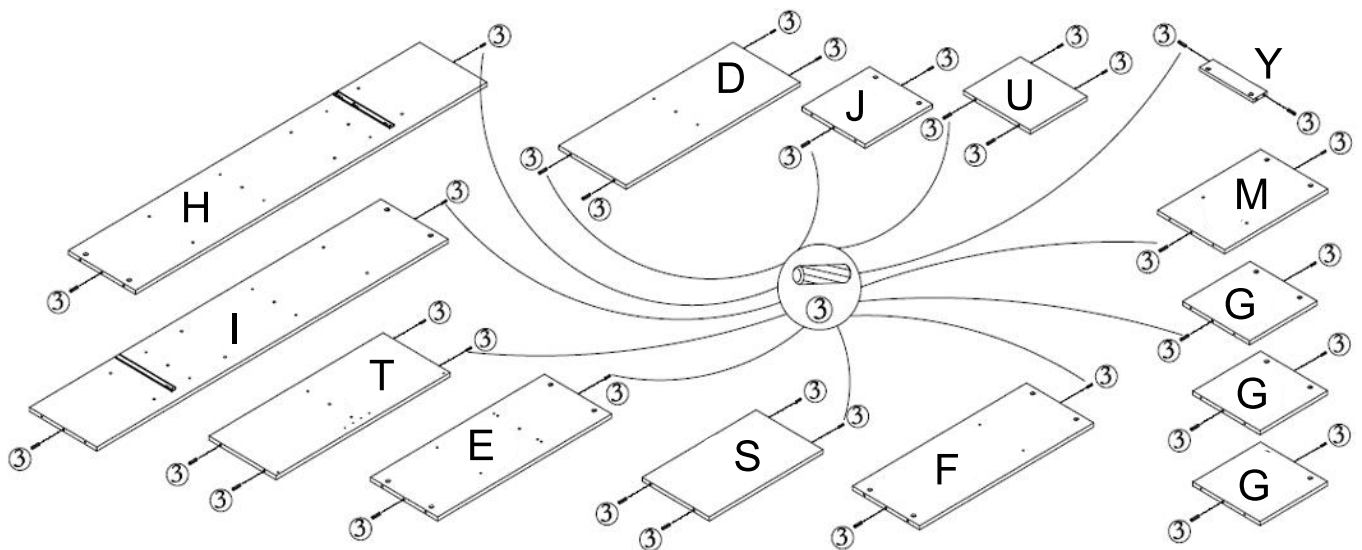

Insert Wooden Dowel(③) into the mounting positions on D,E,F,G,H,I,J,M,S,T,U,Y, as shown.


Step 5

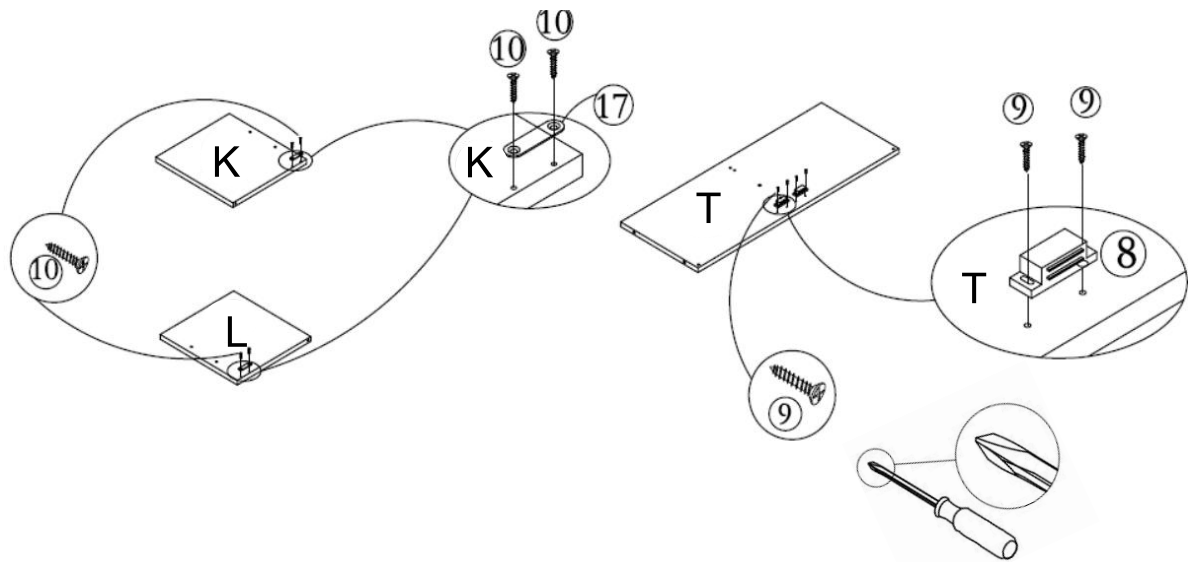

5.1) Attach Magnet(⑧) to Bottom Shelf of Drawer(T) using Screw(⑨) with Screwdriver(②③).


5.2) Attach Magnetic Bar(⑰) to Right Door(K) and Left Door(L) using Screw(⑩) with Screwdriver(②③).

Step 6

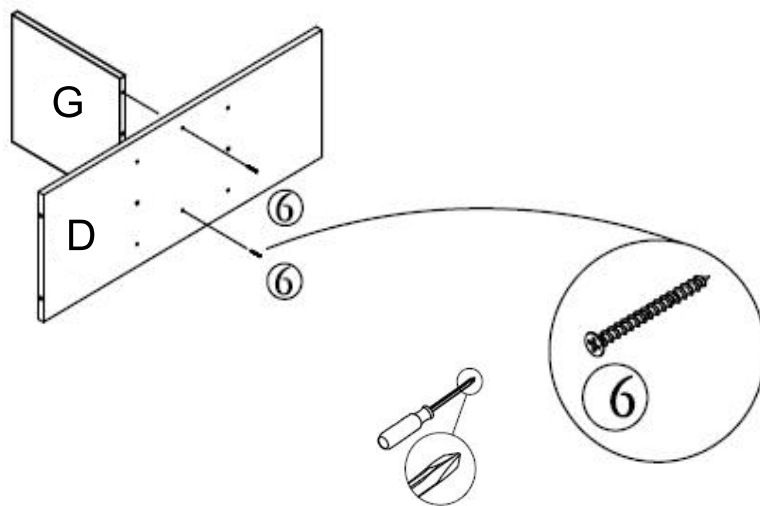

Insert Wooden Dowel on Divider(G) into the mounting positions on Upper Shelf(D), then attach Upper Shelf(D) to Divider(G) using Screw(⑥) with Screwdriver(②③).

Step 7

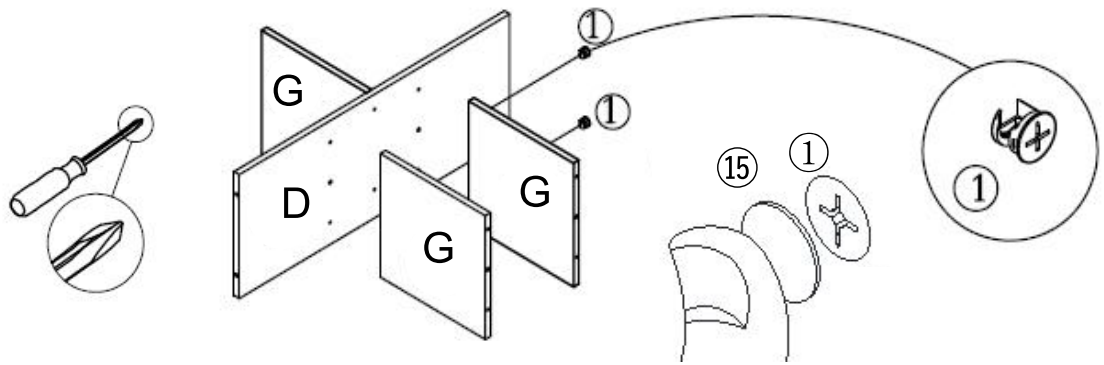


7.1) Insert Wooden Dowel on Divider(G) into the mounting positions on Upper Shelf(D), and Insert Cam Bolt on Upper Shelf(D) into the mounting positions on Divider(G), then Insert Cam Lock(①) into the mounting positions of Divider(G) .

7.2) Lock by turning Cam Lock(①) with Screwdriver(②③).

7.3) Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).

Note: Ensure the arrows on Cam Locks head points towards the Cam Bolt mounting positions.


Step 8

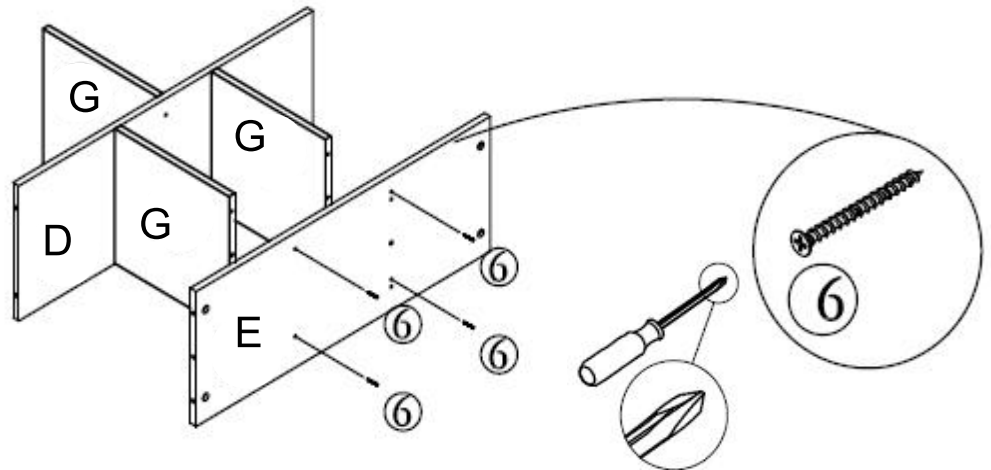

8.1) Insert Wooden Dowel on Divider(G) into the mounting positions on Middle Shelf(E).

8.2) Attach Middle Shelf(E) to Divider(G) using Screw(⑥) with Screwdriver(②③).

Step 9

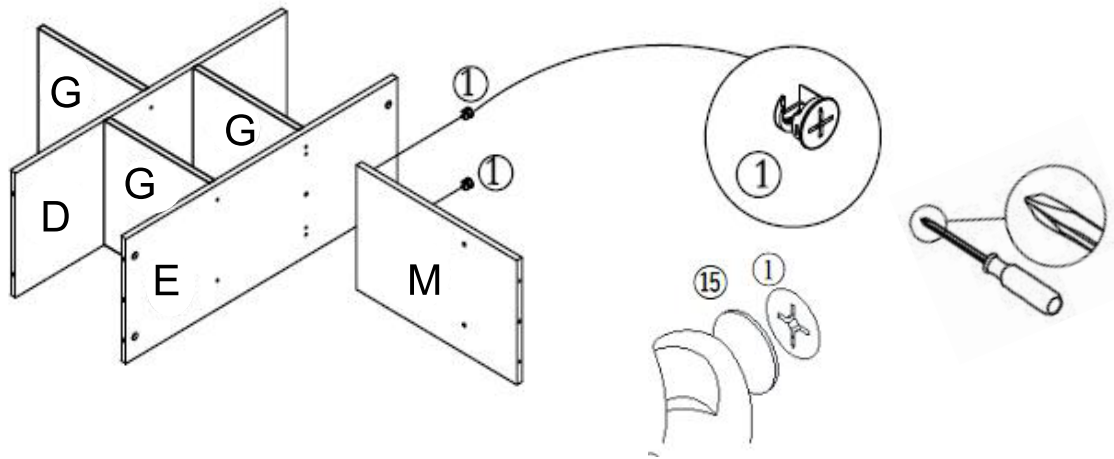


9.1) Insert Wooden Dowel on Middle Divider(M) into the mounting positions on Shelf(E), then insert Cam Bolt on Middle Shelf(E) into the mounting positions on Middle Divider(M).

9.2) Insert Cam Lock(①) into the mounting positions of Middle Divider(M) .Lock by turning Cam Lock(①) with Screwdriver(②③).

9.3) Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).

Step 10

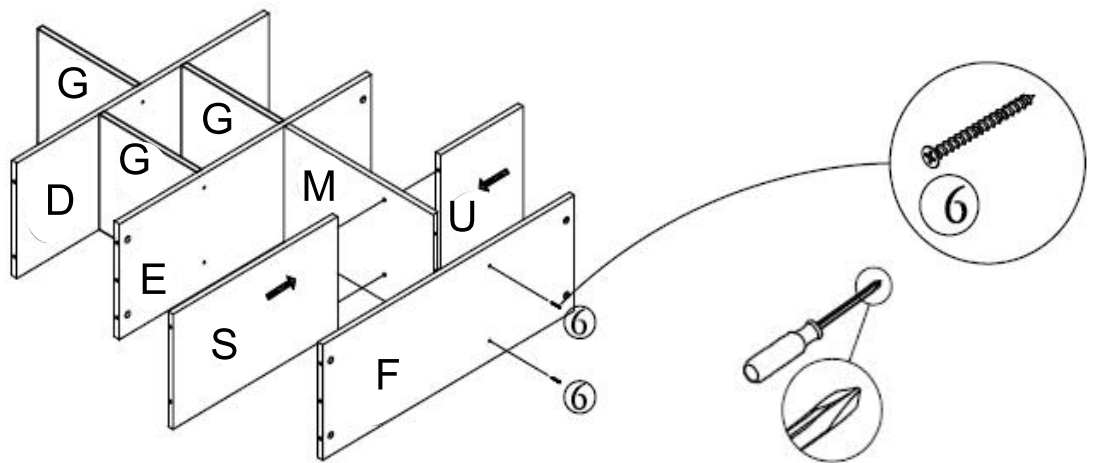


10.1) Insert Wooden Dowel on Right Shelf(S) and Left Shelf(U) into the mounting positions on Middle Divider(M).

10.2) Insert Wooden Dowel on Middle Divider(M) into the mounting positions on Shelf(F).

10.3) Attach Shelf(F) to Middle Divider(M) using Screw(⑥) with Screwdriver(②③).

Step 11

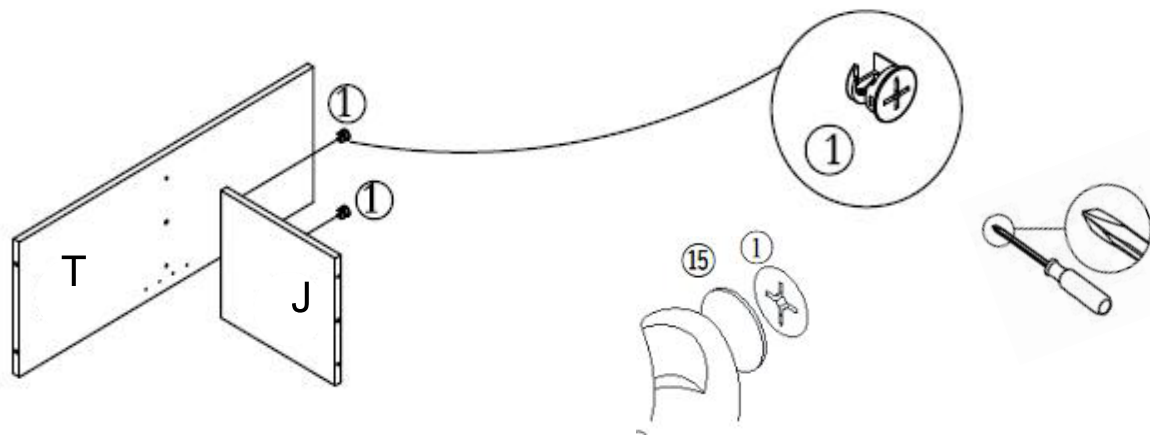


11.1) Insert Wooden Dowel on Bottom Divider(J) into the mounting positions on Bottom Shelf of Drawer(T).

11.2) Insert Cam Bolt on Bottom Shelf of Drawer(T) into the mounting positions on Bottom Divider(J), then Insert Cam Lock(①) into the mounting positions of Bottom Divider(J) .

11.3) Lock by turning Cam Lock(①) with Screwdriver(②③).

11.4) Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).


Step 12

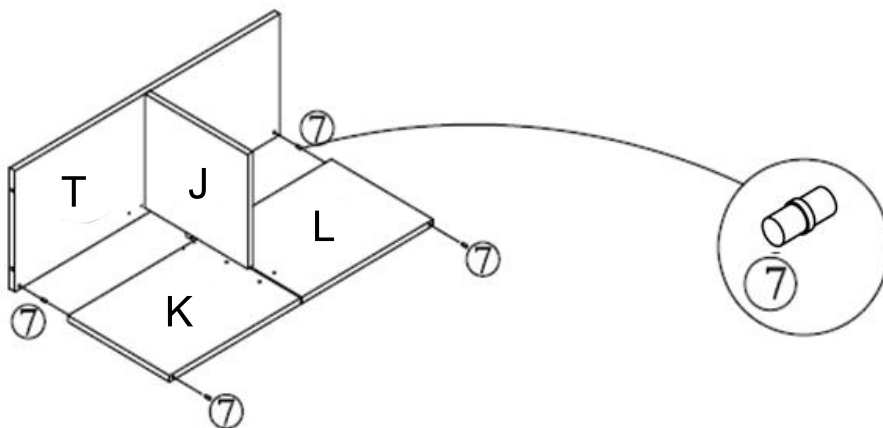

12.1) Attach Door Hinge (⑦) to the Right Door(K) and Left Door(L) as shown.


12.2) Insert one side of Door Hinge(⑦) on Right Door(K) and Left Door(L) into the mounting positions on Bottom Shelf of Drawer(T) as shown.

Step 13

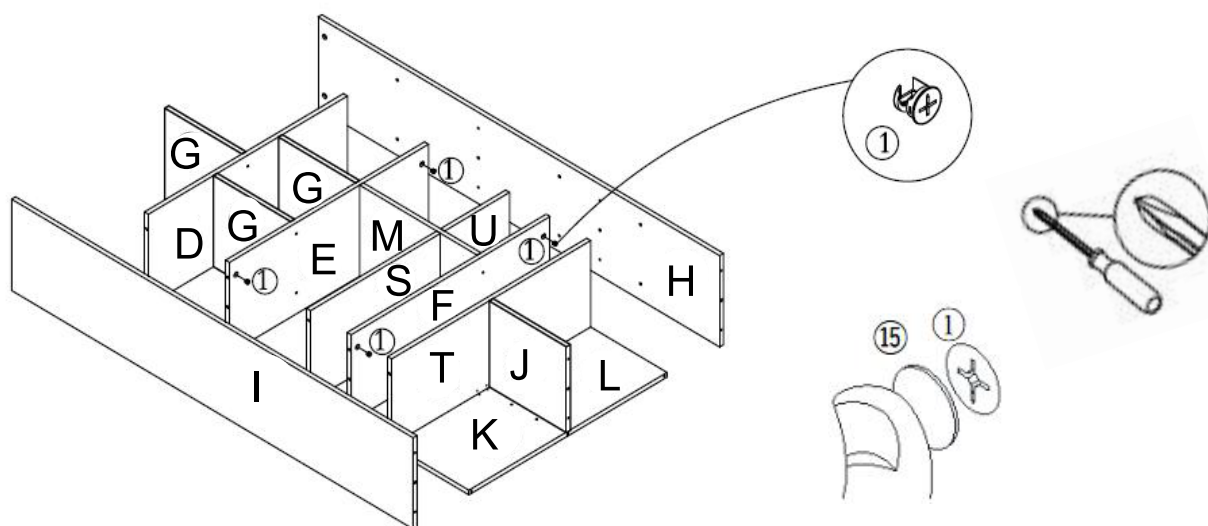

- 13.1) Insert Wooden Dowel on Shelf D,E,S,F,T into the mounting positions on Right Side Panel(I). Insert Cam Bolt on Right Side Panel(I) into the mounting positions on Middle Shelf(E) and Shelf(F),then Insert Cam Lock(①) into the mounting positions of Middle Shelf(E) and Shelf (F).Lock by turning Cam Lock(①) with Screwdriver(②③).
- 13.2) Insert Wooden Dowel on Shelf D,E,U,F,T into the mounting positions on Left side panel(H). Insert Cam Bolt on Left Side Panel(H) into the mounting positions on Middle Shelf(E) and Shelf(F), then Insert Cam Lock(①) into the mounting positions of Middle Shelf(E) and Shelf(F) .Lock by turning Cam Lock(①) with Screwdriver(②③).
- 13.3) Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).

Step 14

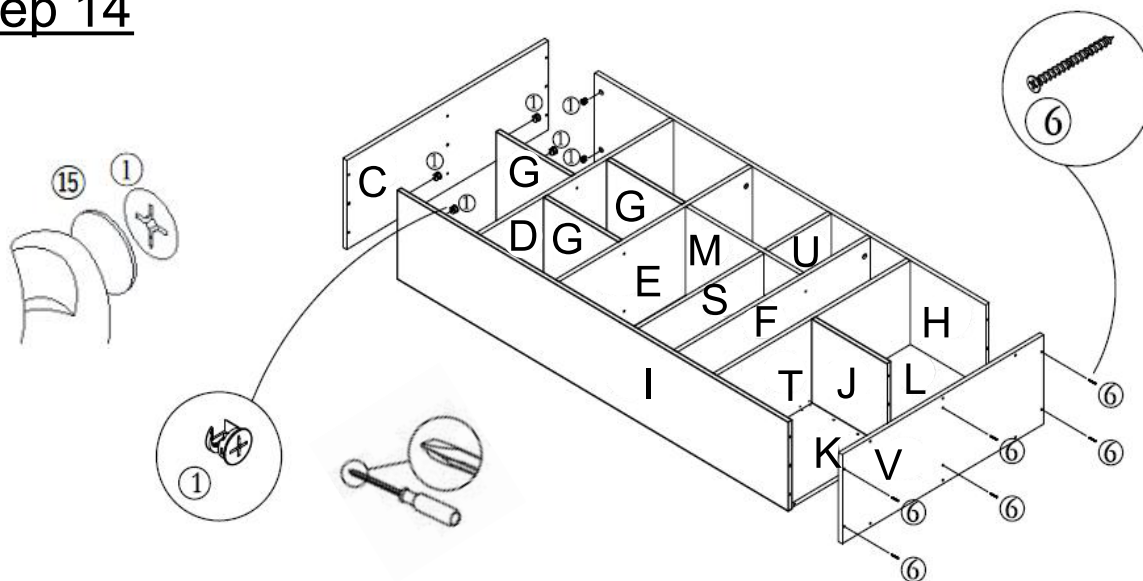


14.1) Insert Cam Bolt on Top Panel(C) into the mounting positions on Right Side Panel(I) and Divider(G) and Left Side Panel(H), then insert Wooden Dowel on Right Side Panel(I) and Divider(G) and Left Side Panel(H) into Top Panel(C).

14.2) Insert Cam Lock(①) into the mounting positions of Right Side Panel(I) and Divider(G) and Left Side Panel(H). Lock by turning Cam Lock(①) with Screwdriver(②③). Use Holes Cover(⑮) to cover the mounting positions of Cam Lock(①).

14.3) Insert Wooden Dowel on Right Side Panel(I) and Bottom Divider(J) and Left Side Panel(H) into Bottom Panel(V).


14.4) Attach Bottom Panel(V) to Right Side Panel(I) and Bottom Divider(J) and Left Side Panel(H) using Screw(⑥) with Screwdriver(②③).

Step 15

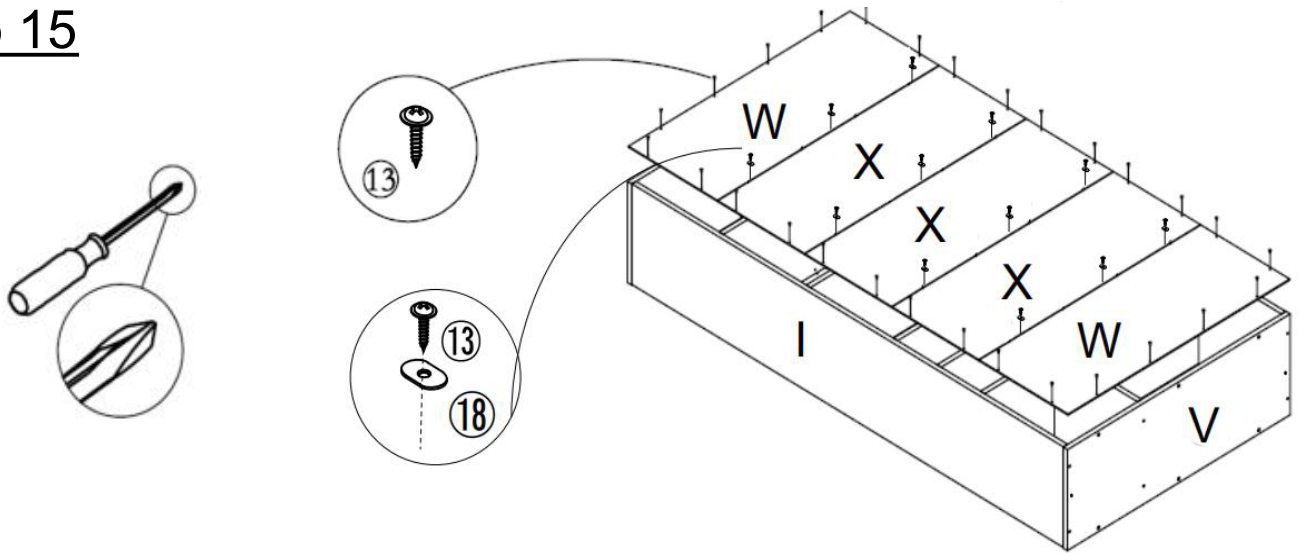

Attach Back Wall at Top and Bottom(W) and Back Wall at Middle(X) to the frame of bookcase using Screw(⑬) and Metal Gasket(⑱)with Screwdriver(②③).


Step 16

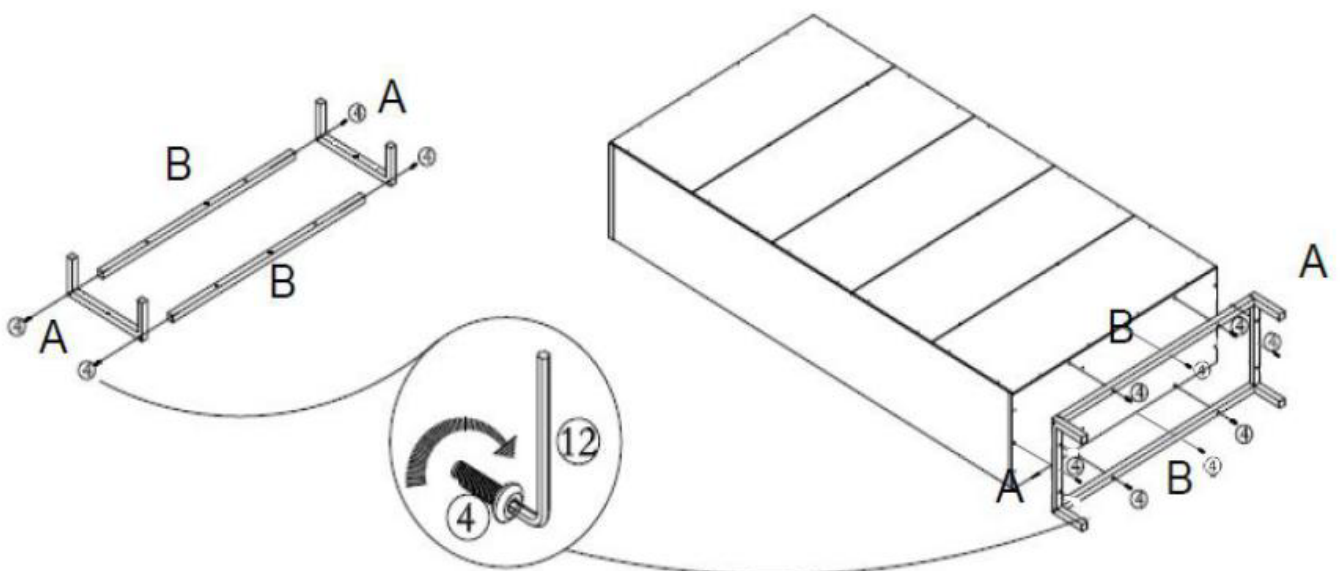

16.1) Attach Side Frame(A) to Transversal Tube(B) using Bolt(④) with Allen Wrench (⑫).

16.2) Attach Transversal Tube(B) to Bottom Panel(V) using Bolt(④) with AllenWrench (⑫).

Step 17

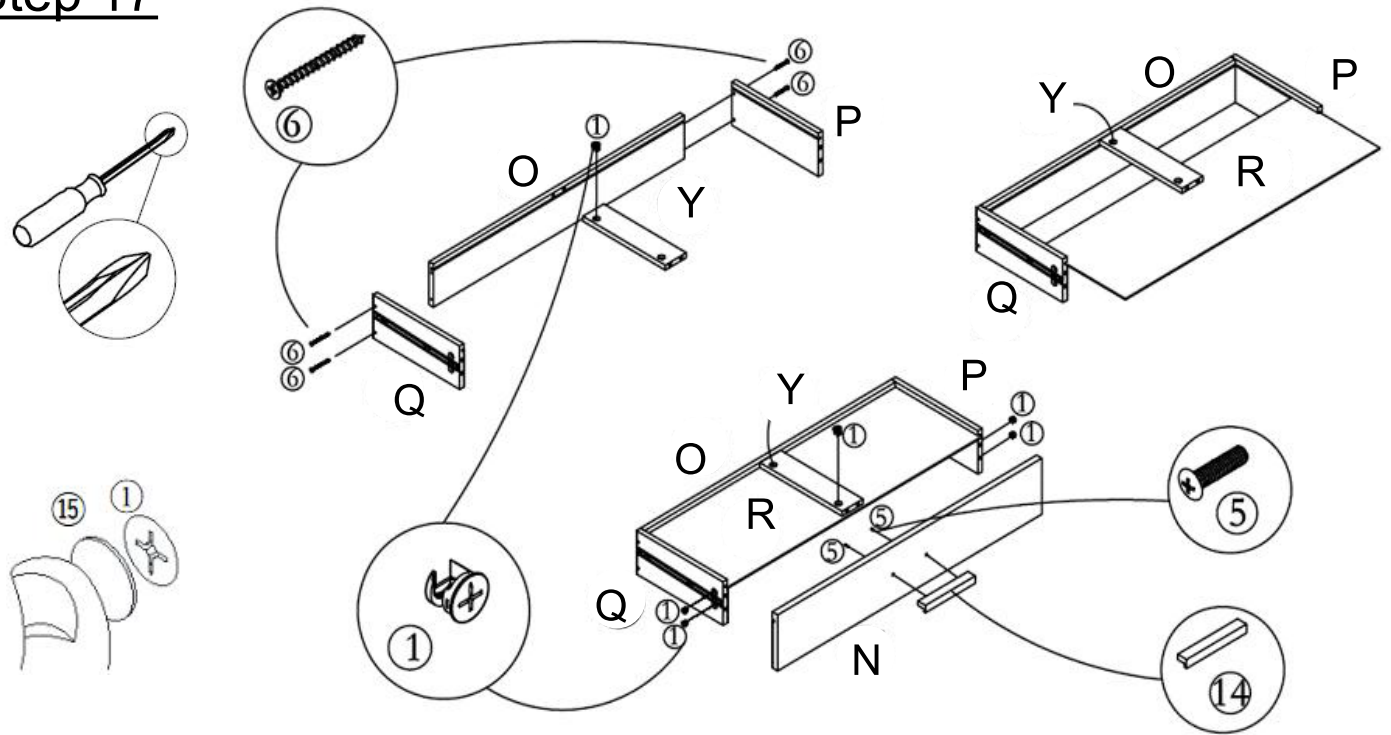

17.1) Attach Left Panel of Drawer(P) and Right Panel of Drawer(Q) to Back Panel of Drawer(O) using Screw(6) with Screwdriver(23) as shown.

17.2) Insert Cam Bolt on Back Panel of Drawer(O) into the mounting positions on Reinforcement Panel of Drawer(Y), Insert Cam Lock(1) into the mounting positions of Reinforcement Panel of Drawer(Y). Lock by turning Cam Lock(1) with Screwdriver (23). Use Holes Cover(15) to cover the mounting positions of Cam Lock(1).


17.3) Insert Bottom of Drawer(R) into the grooves between Left Panel of Drawer(P) and Right Panel of Drawer(Q).

17.4) Insert Cam Bolt on Front Panel of Drawer(N) into the mounting positions on Reinforcement Panel of Drawer(Y), Left Panel of Drawer(P) and Right Panel of Drawer(Q). Insert Cam Lock(1) into the mounting positions of Reinforcement Panel of Drawer(Y), Left Panel of Drawer(P) and Right Panel of Drawer(Q) as shown. Lock by turning Cam Lock(1) with Screwdriver(23).

17.5) Attach Handle(14) to Front Panel of Drawer(N) using Bolt(5) with Screwdriver(23).

17.6) Use Holes Cover(15) to cover the mounting positions of Cam Lock(1).

Step 18

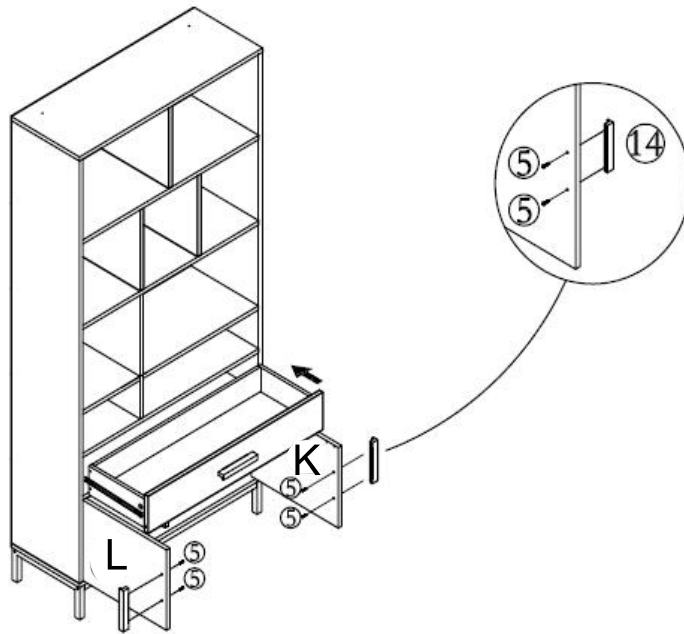

18.1) Attach Handle(14) to Right Door(K) and Left Door(L) using Bolt(5) with Screwdriver(23) as shown.


18.2) Put the Drawer Member on the Drawer to Cabinet Member on the Bookcase, then carefully push Drawer into the Bookcase.



WARNING


Serious or fatal crushing injuries can occur from tipping furniture. To help prevent tip-over: ALWAYS secure this furniture to the wall using Cabinet Restraint Device.

See product instructions for more ways to help prevent furniture tip-over.

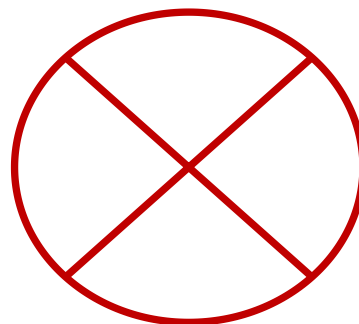

Usage For Cabinet Restraint Device:

Step 19

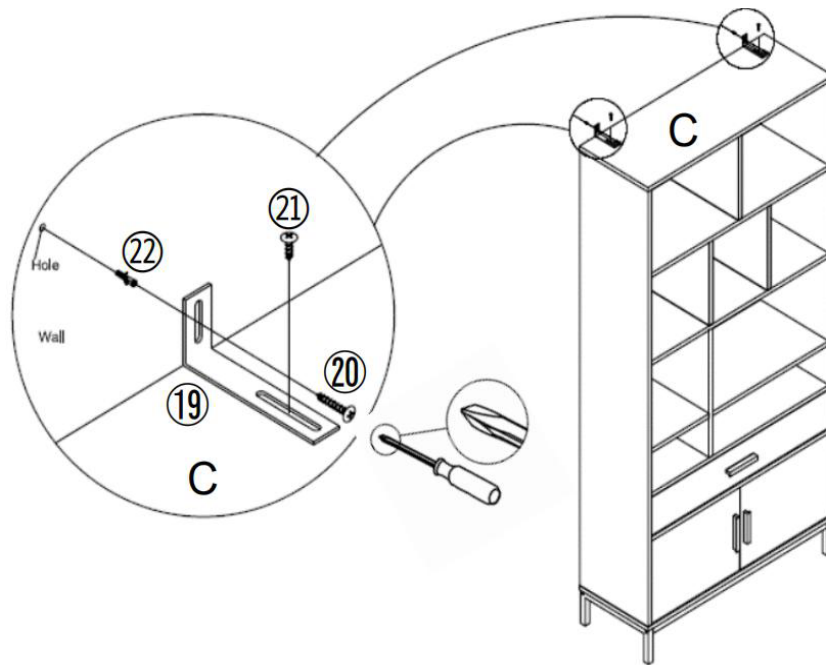

19.1) Use Power Drill(24) Drill two mounting positions on wall at same height, insert Plastic Dowel(22) into the mounting position with a Hammer(25)(Not provided).

19.2) Attach L-shape Metal Sheet(19) to plastic Dowel(22) using Screw(20) with Screwdriver(23).

Note: The Metal sheet need to be secured to solid, load bearing surface. Please use a Stud Finder(not supplied) if needed to locate the Wall Frame.

19.3) Attach L-shape Metal Sheet(19) to Top Panel(A) using Screw(21) with Screwdriver(23).

Your Bookcase is ready for use.

This Bookcase can only be used on a flat, level surface.

Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.