

Assembly Instructions

ASHFORD ROUND BUTTERFLY TABLE

1859-xx-RT/RB

HARDWARE PART:










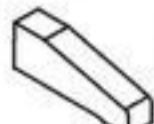



| | | | | | | | |
|--|---|---|---|---|---|---|---|
|  |  |  |  |  |  |  |  |
| Hex Nut 12 pcs | Lock Washer (Large) 12 pcs | Flat Washer (Large) 12 pcs | Wrench 1 pc | JCBC Bolt 10 pcs | Lock Washer (Small) 10 pcs | Flat Washer (Small) 10 pcs | Allen Key 1 pc |


TABLE PARTS:

| | | | | |
|--|---|---|---|---|
|  |  |  |  |  |
| Table Top 1pc | Pedestal Leg 4pcs | Pedestal stand 1pc | Side Panel 2pcs | Mounting plate 1pc |

NOTE: THE UNIT SHOULD BE ASSEMBLED BY 2 OR MORE PEOPLE.

STEP 1

Turn the pedestal upside down. Attach legs by inserting hanger bolts through pre-drilled holes on pedestal. Put a **Flat Washers (Large)**, **Lock Washers (Large)** and **Hex Nut** onto the hanger bolts then tighten with the provided **Wrench**.

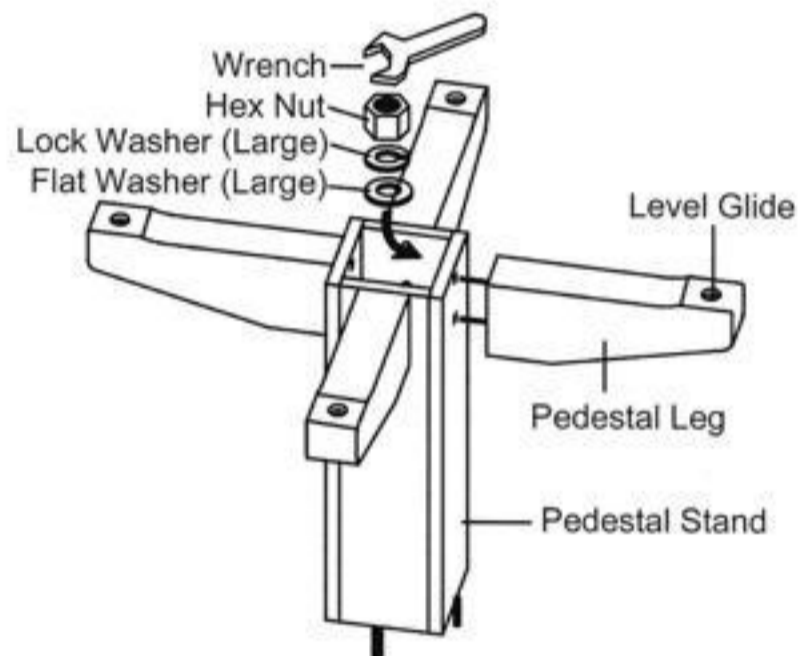

STEP 2

Position the table top upside down on a smooth, protective surface such as carpet. **Remove and discard the temporary Wood Strip**. Install the side panel and secure with **Flat Washers (Small)**, **Lock Washers (Small)** and **JCBC Bolt**. Attach Mounting Plate as shown. Secure with **Flat Washers (Small)**, **Lock Washers (Small)** and **JCBC Bolt**, then tighten all **JCBC Bolts** with **Allen Key** provided.

