


ASSEMBLY INSTRUCTIONS

SKU:SF-36BSC-36I-GRY

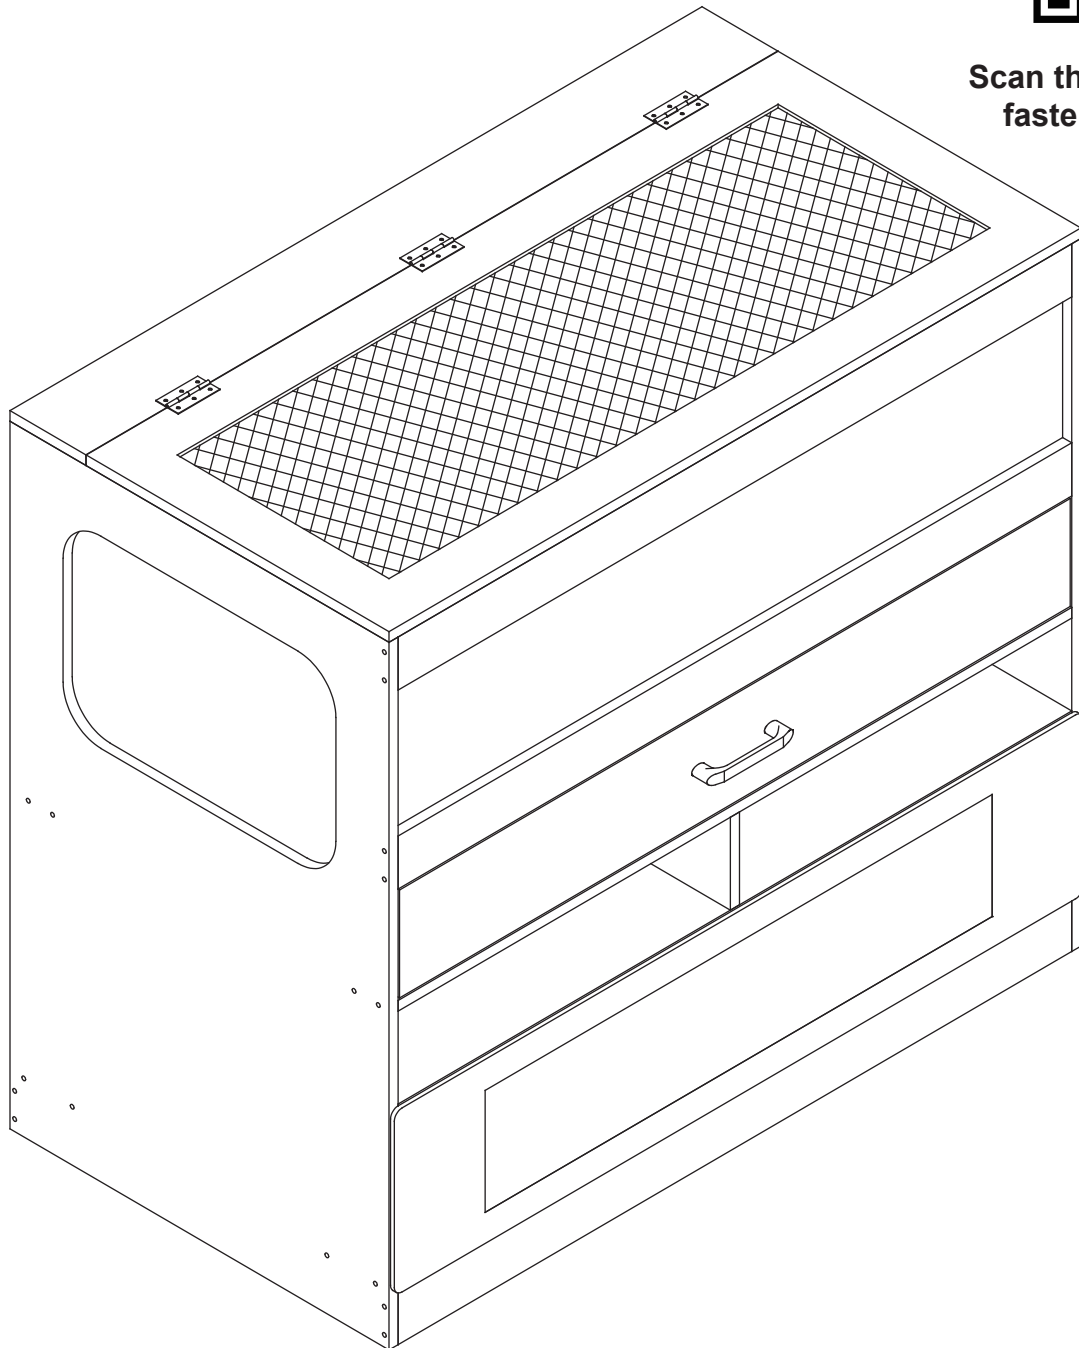

Scan the QR code for
faster installation




Attention: The Fireplace and Cabinet come in TWO PACKAGES
Please don't be confused if only one package was received.


 hellovitesse@gmail.com

 +1(503) 928-7812

Parts list

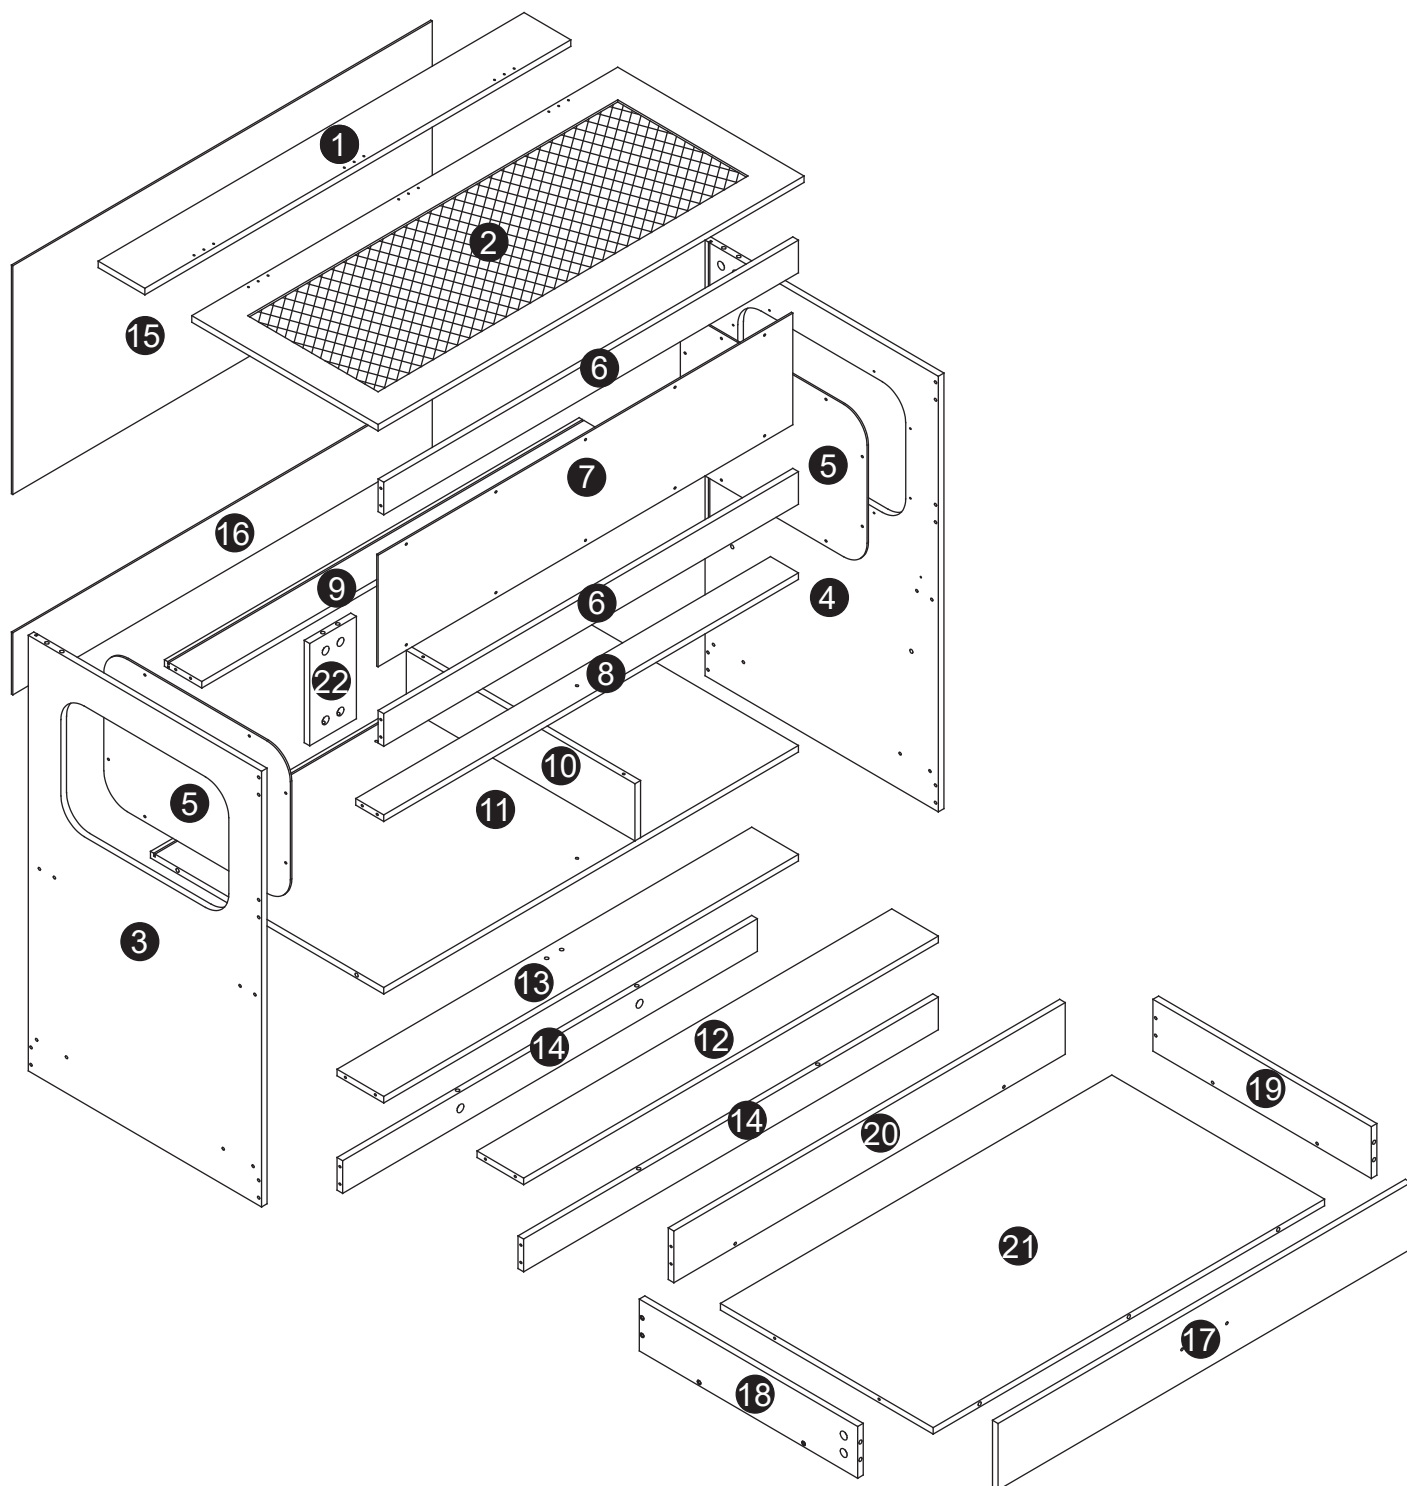


Ax23




Bx23



Cx46



Dx2




Ex1




Fx52




Gx8



Hx1

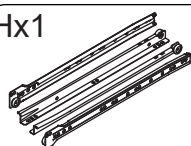



Ix3



Installation steps



STEP 1

When installing, note the hole orientation of Panel 21. Install as shown in the image.

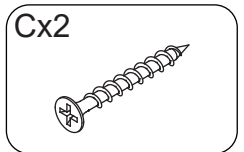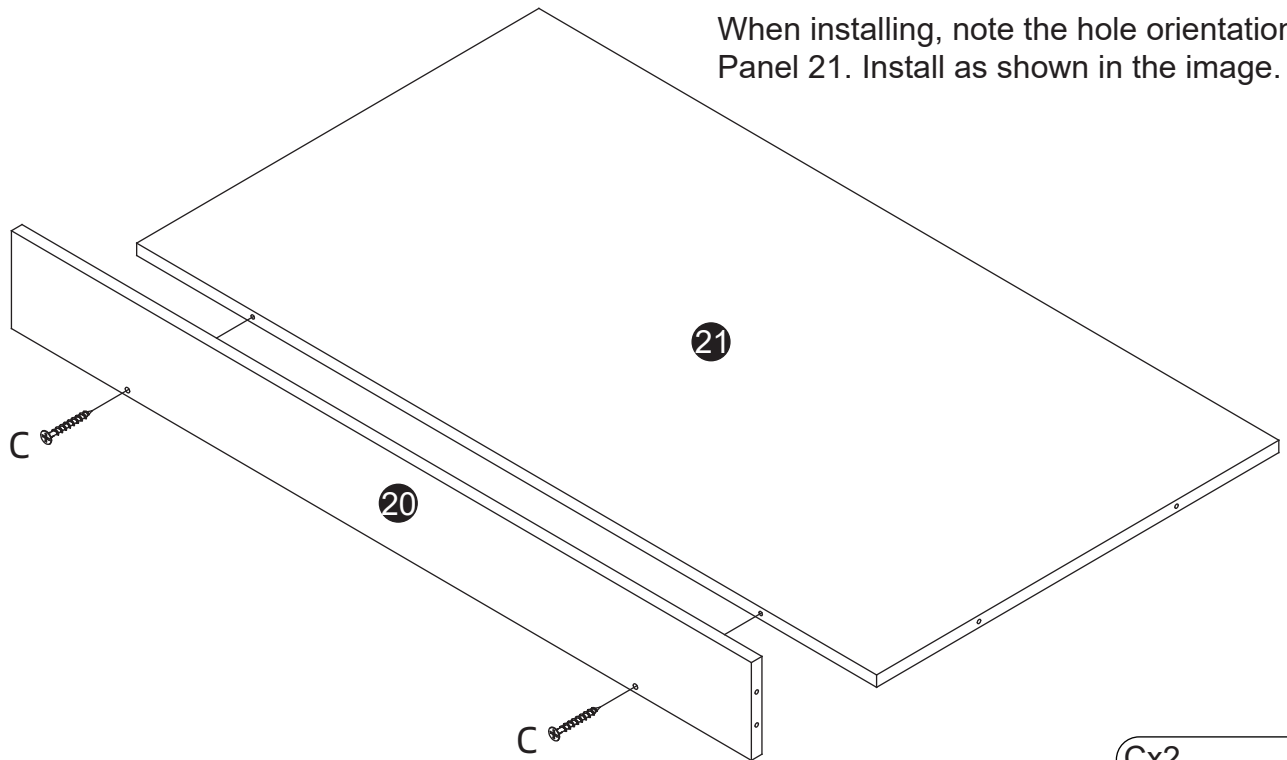


STEP 2

The arrow on Panel 18 indicates the hole that must face outward.

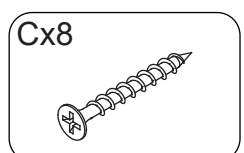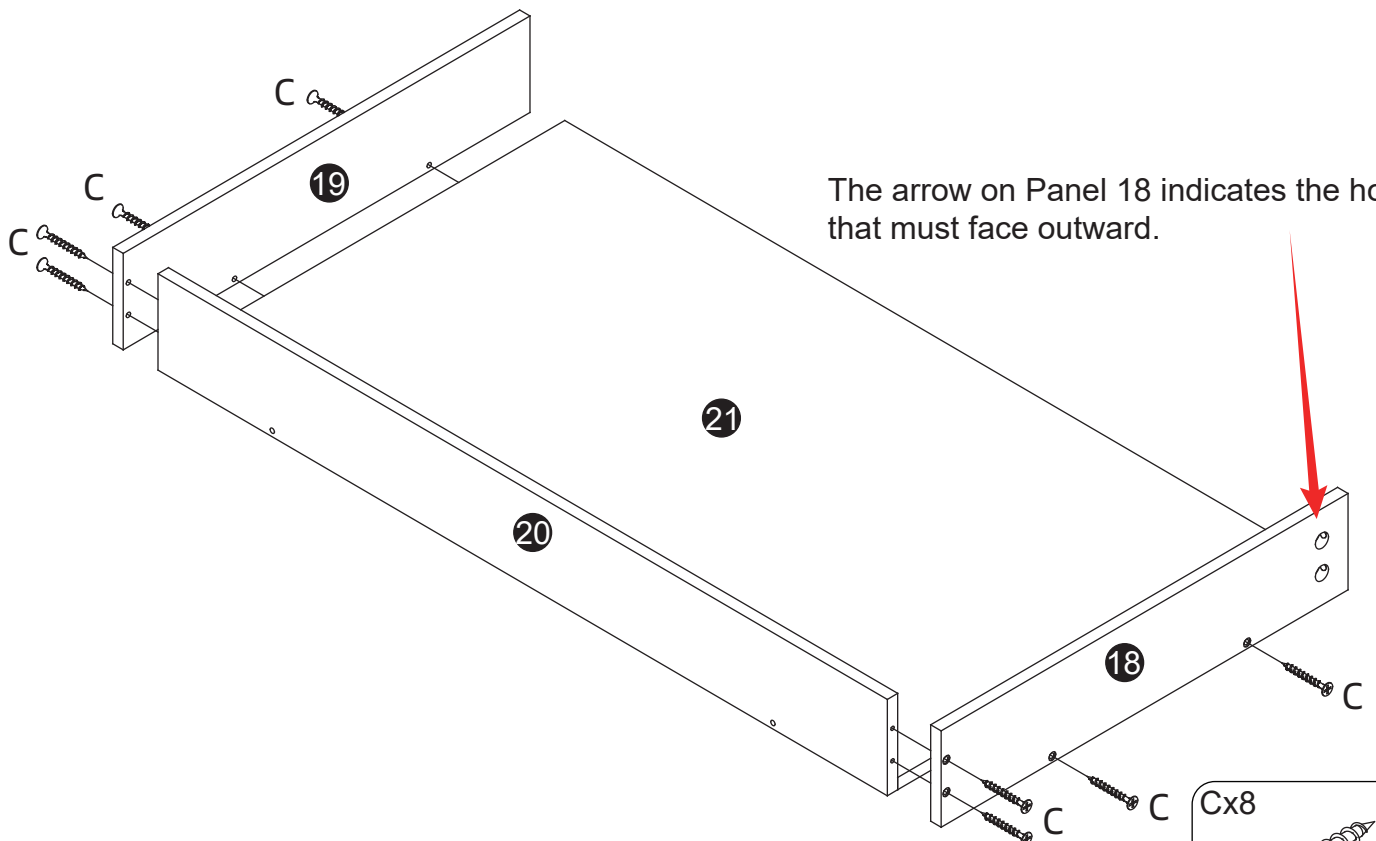


Installation steps

STEP 3

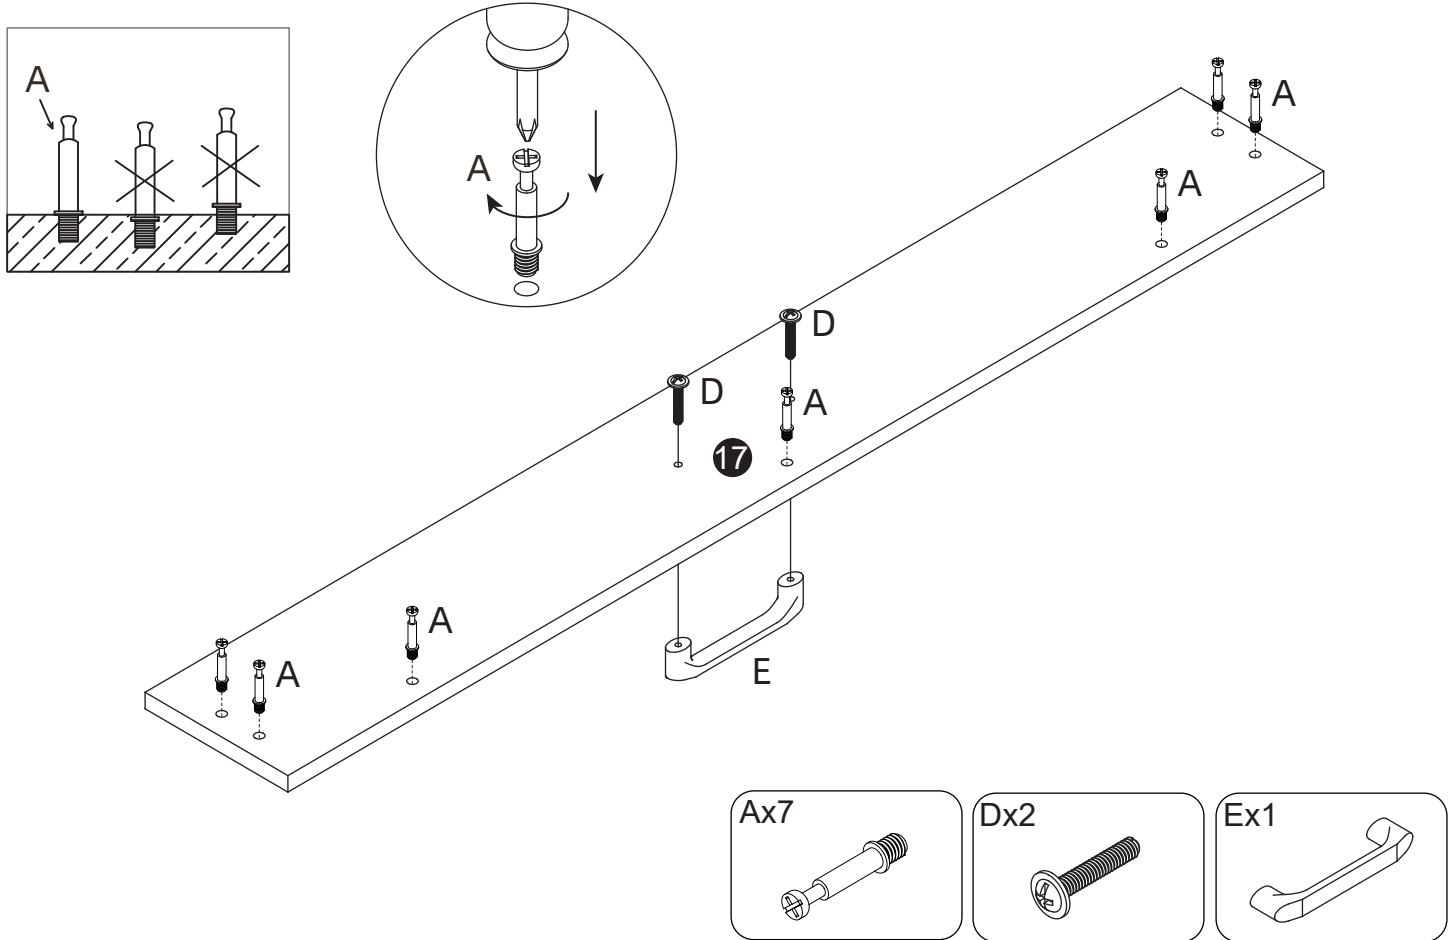


STEP 4

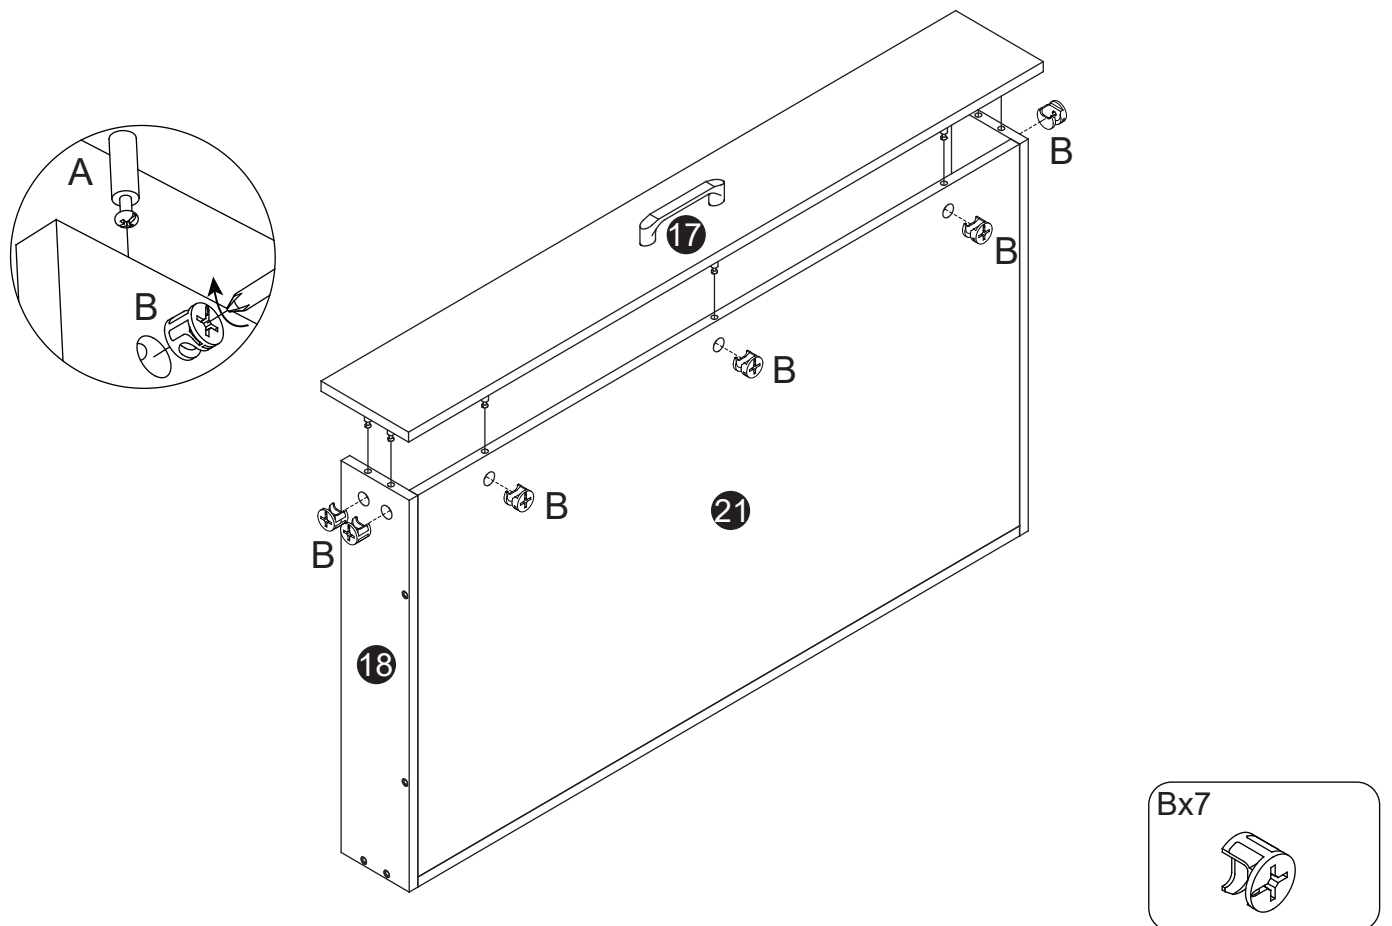


Installation steps


STEP 5

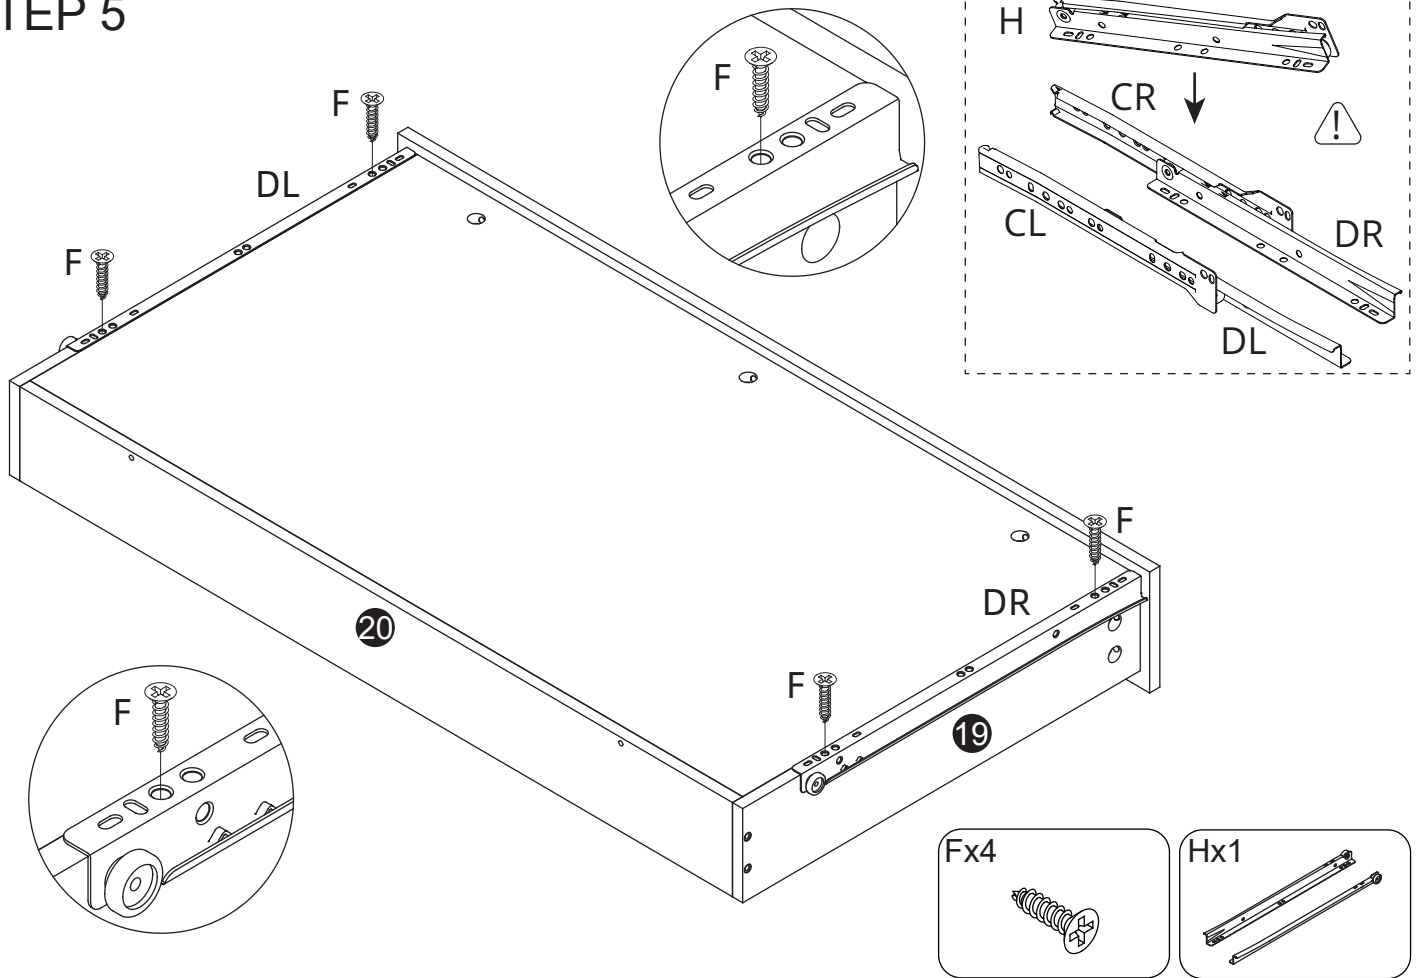


STEP 6

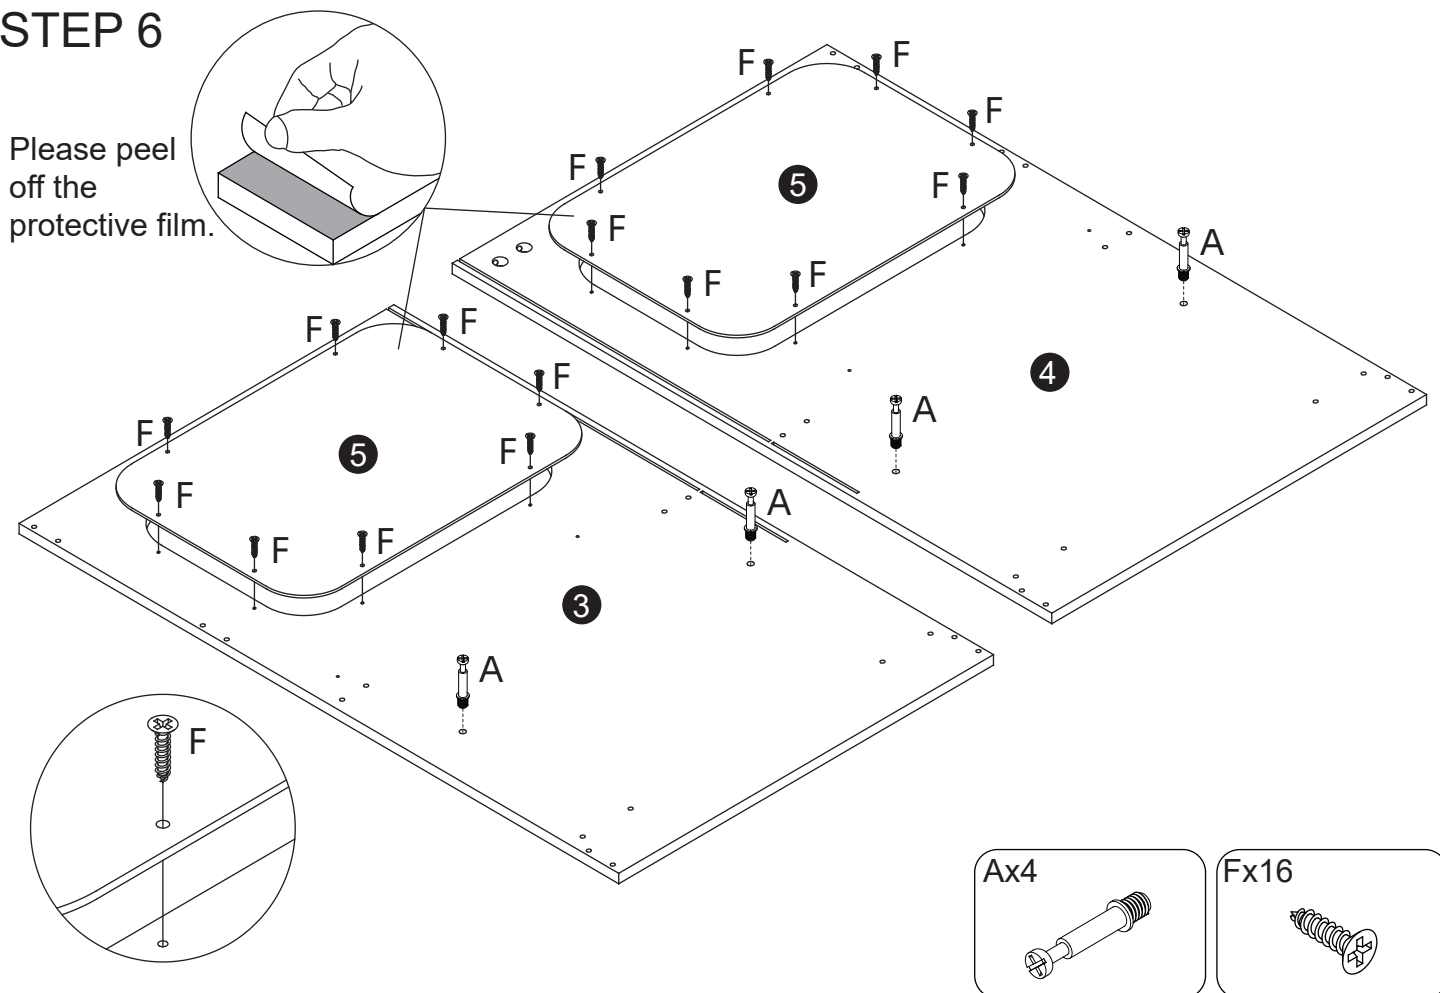


STEP 7

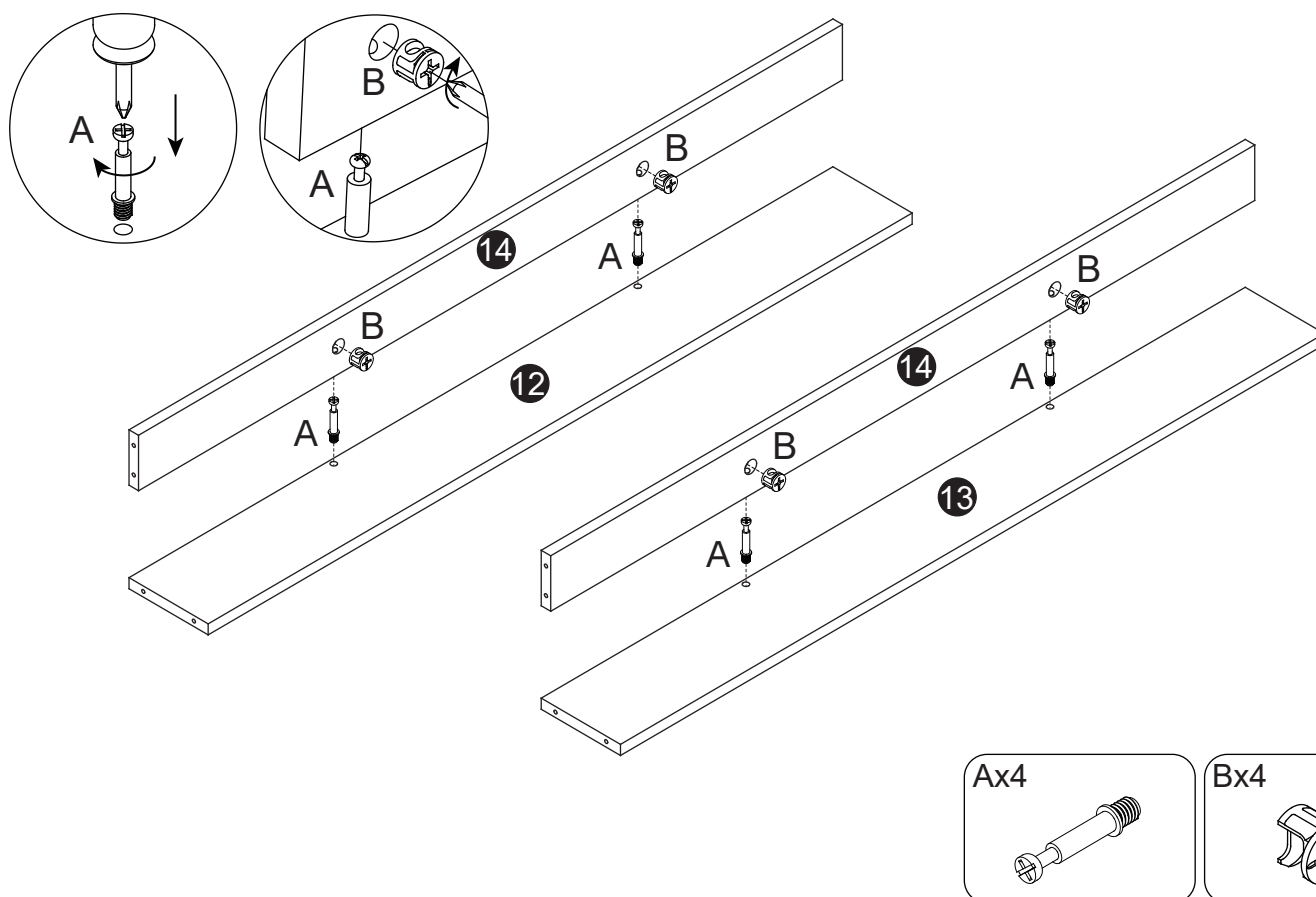


STEP 9

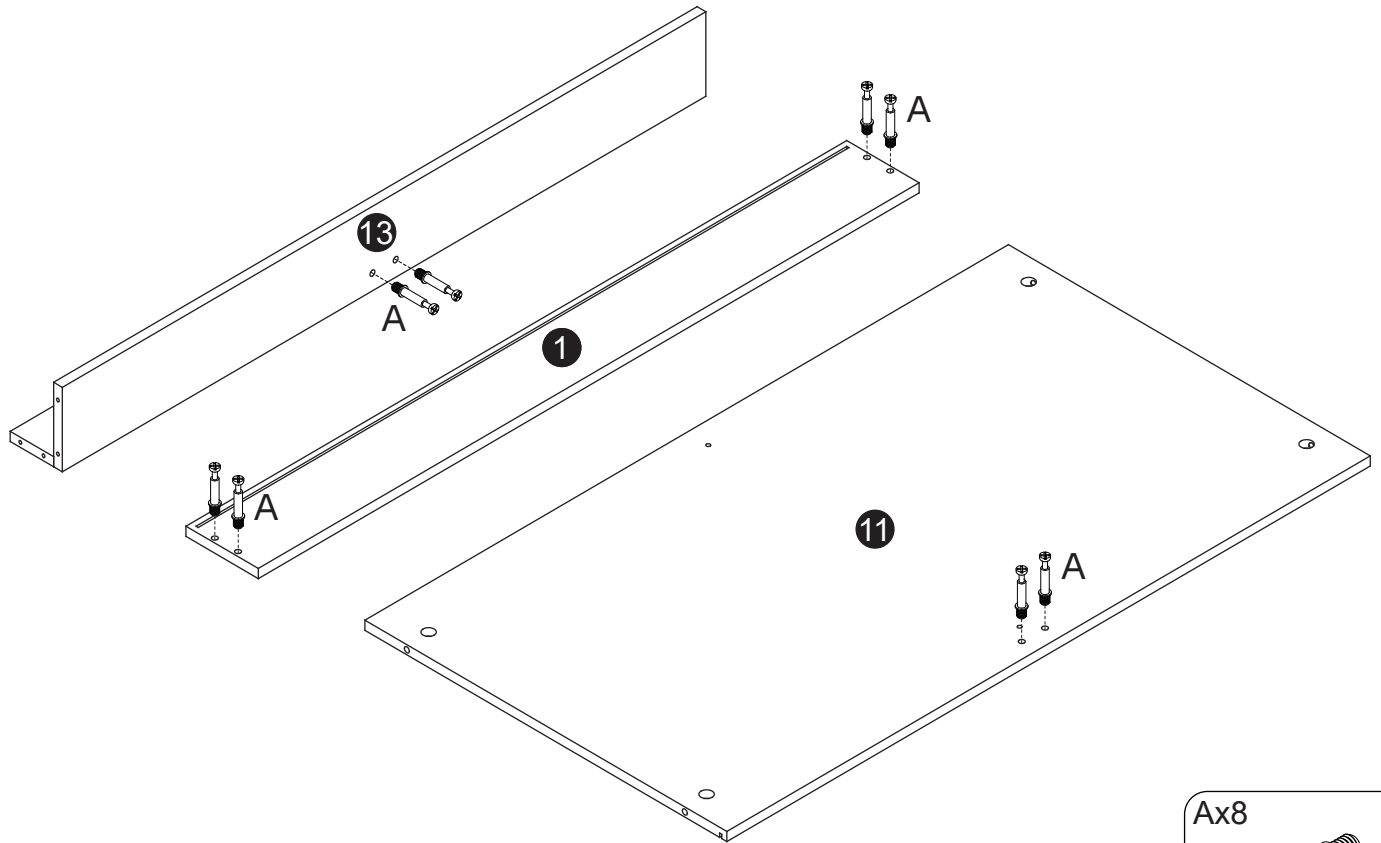


Ax8



STEP 10

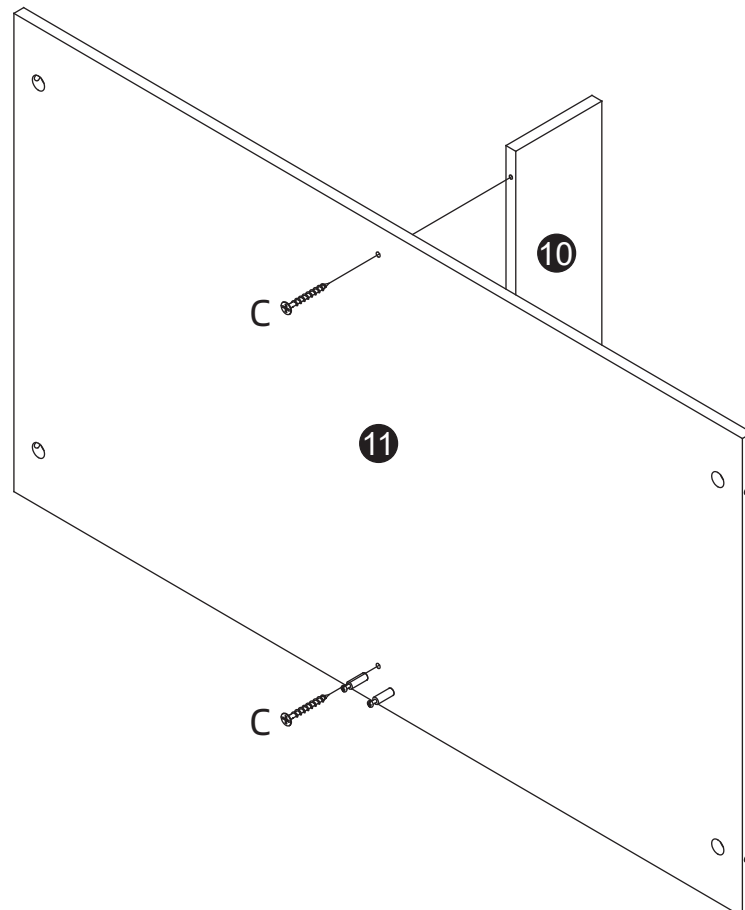


Cx2



Installation steps


STEP 11

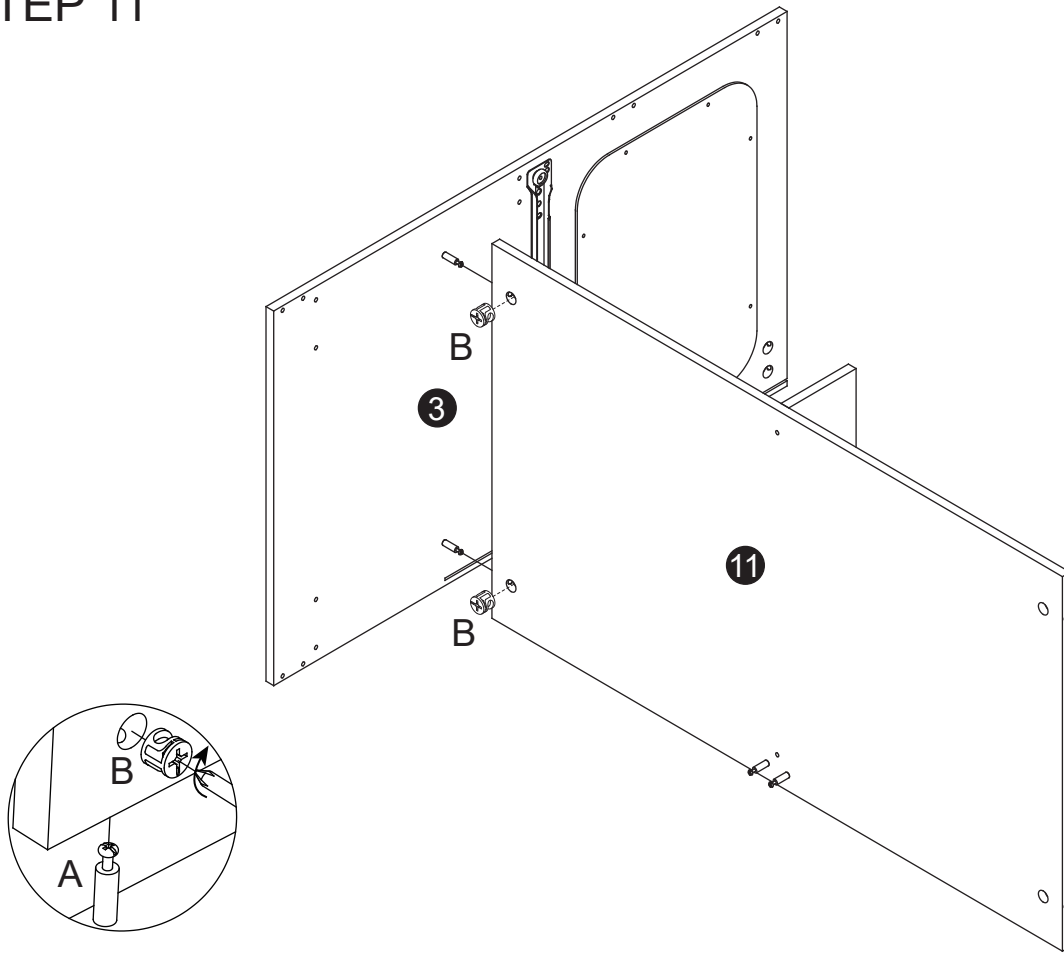

Bx2



STEP 12

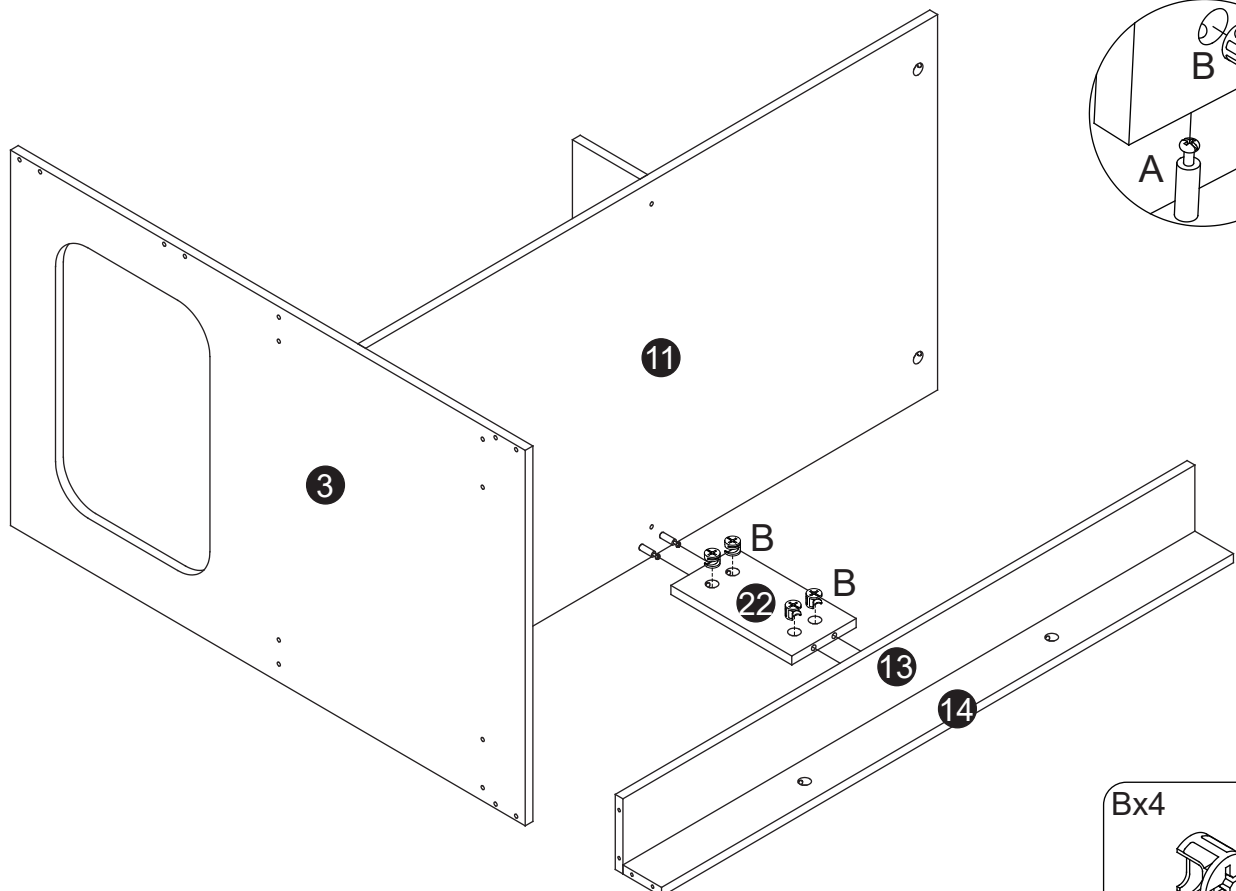


Bx4




Installation steps

STEP 13

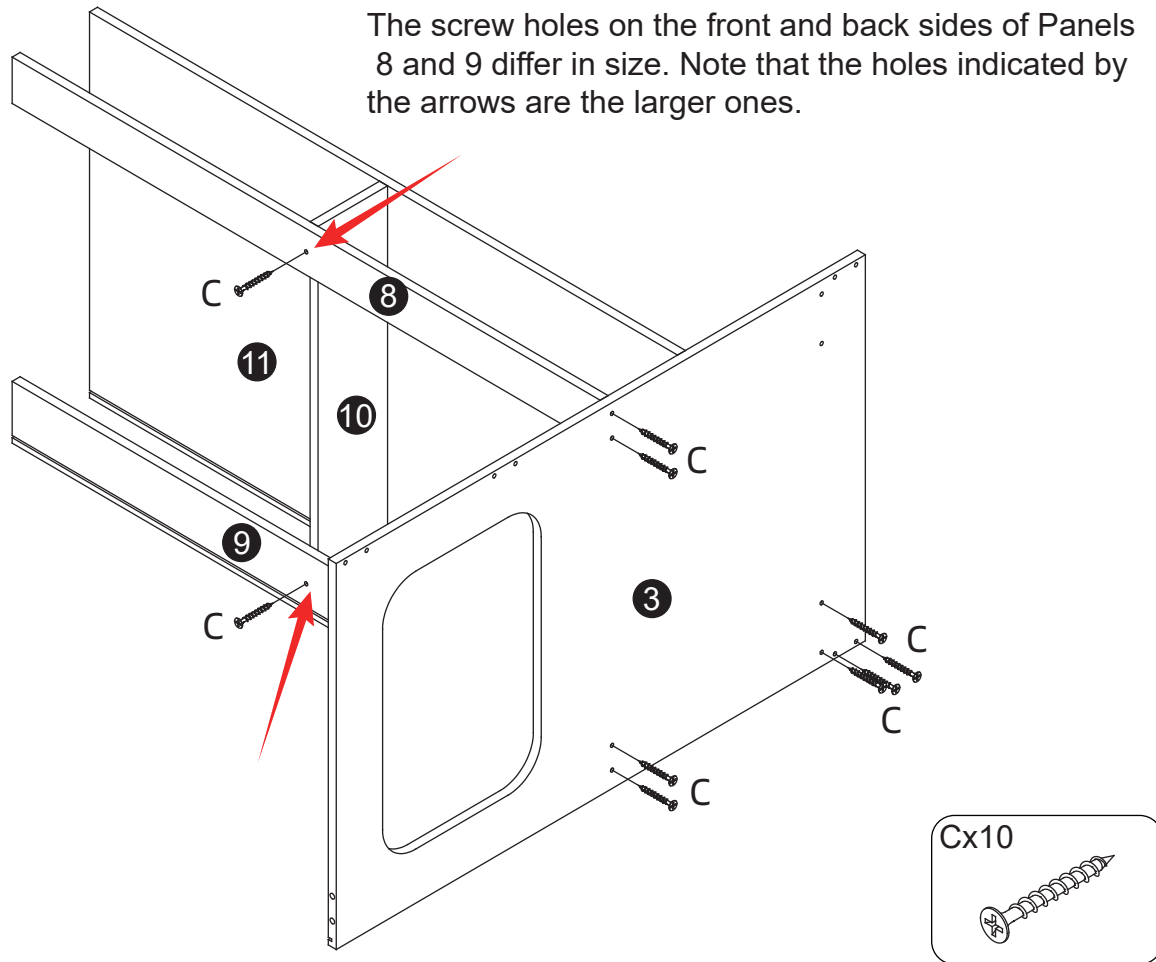


STEP 14

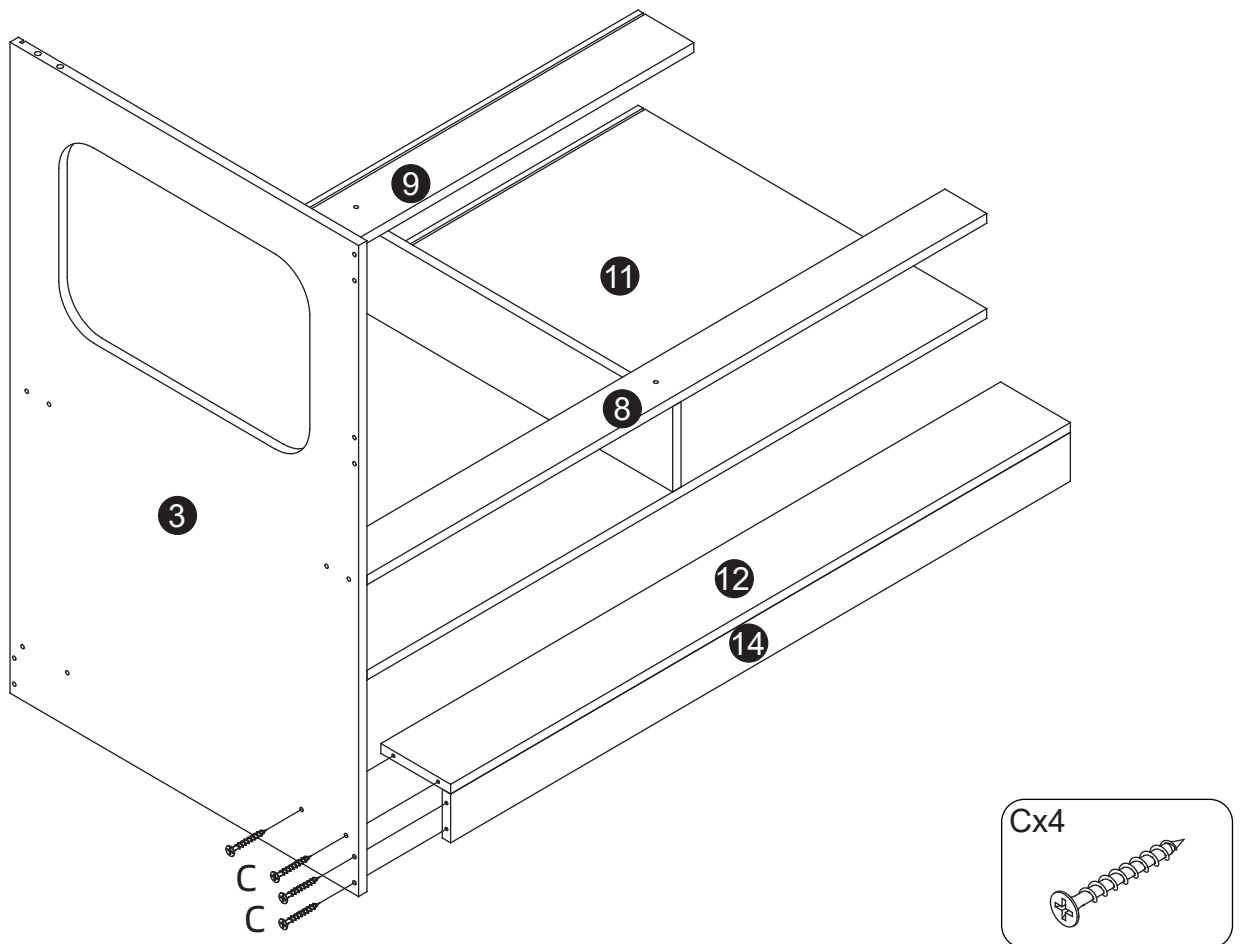


Installation steps

STEP 15

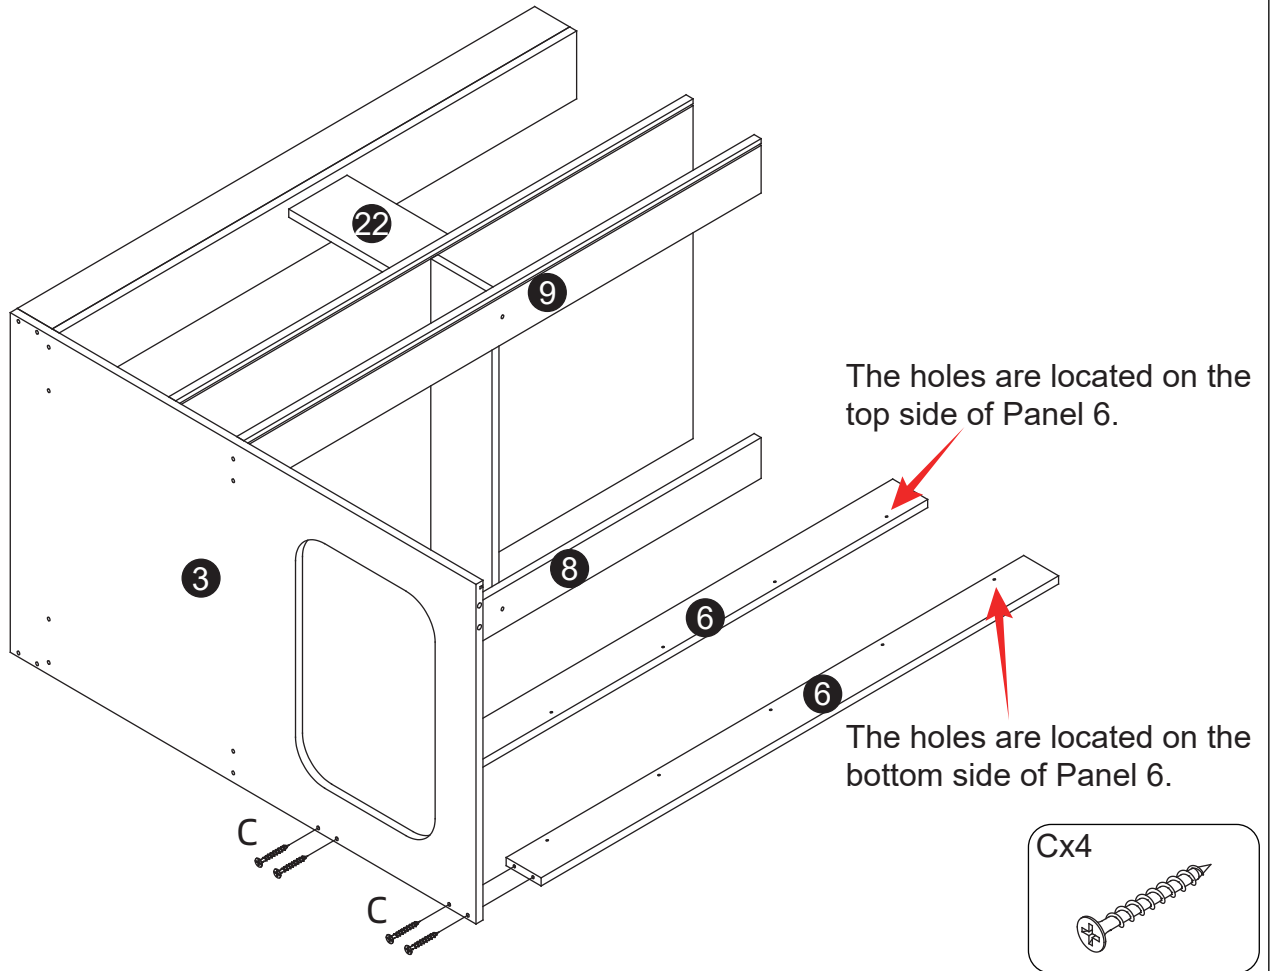


STEP 16

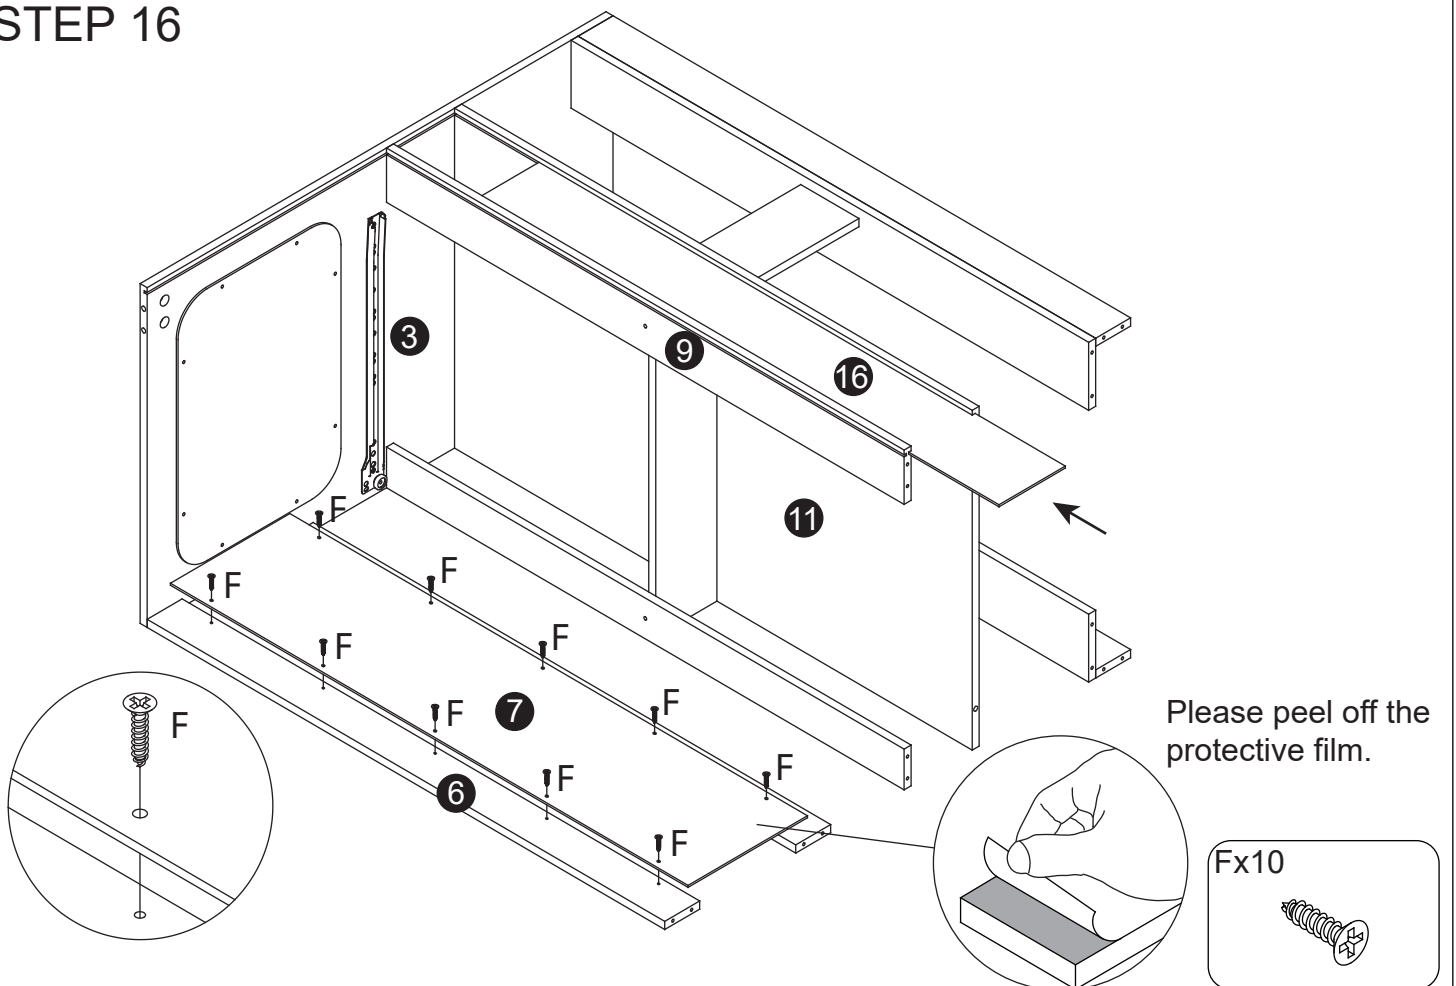


Installation steps

STEP 17


Two-person installation required.

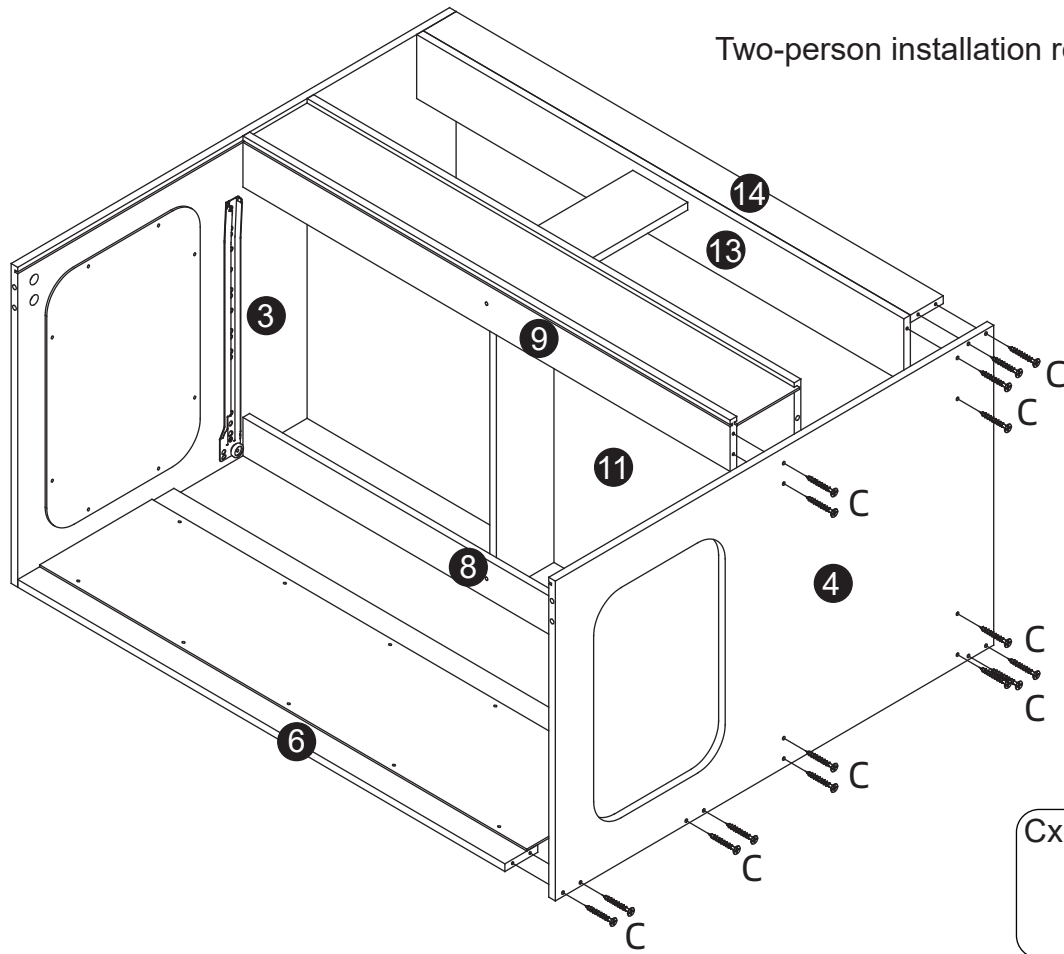

STEP 18


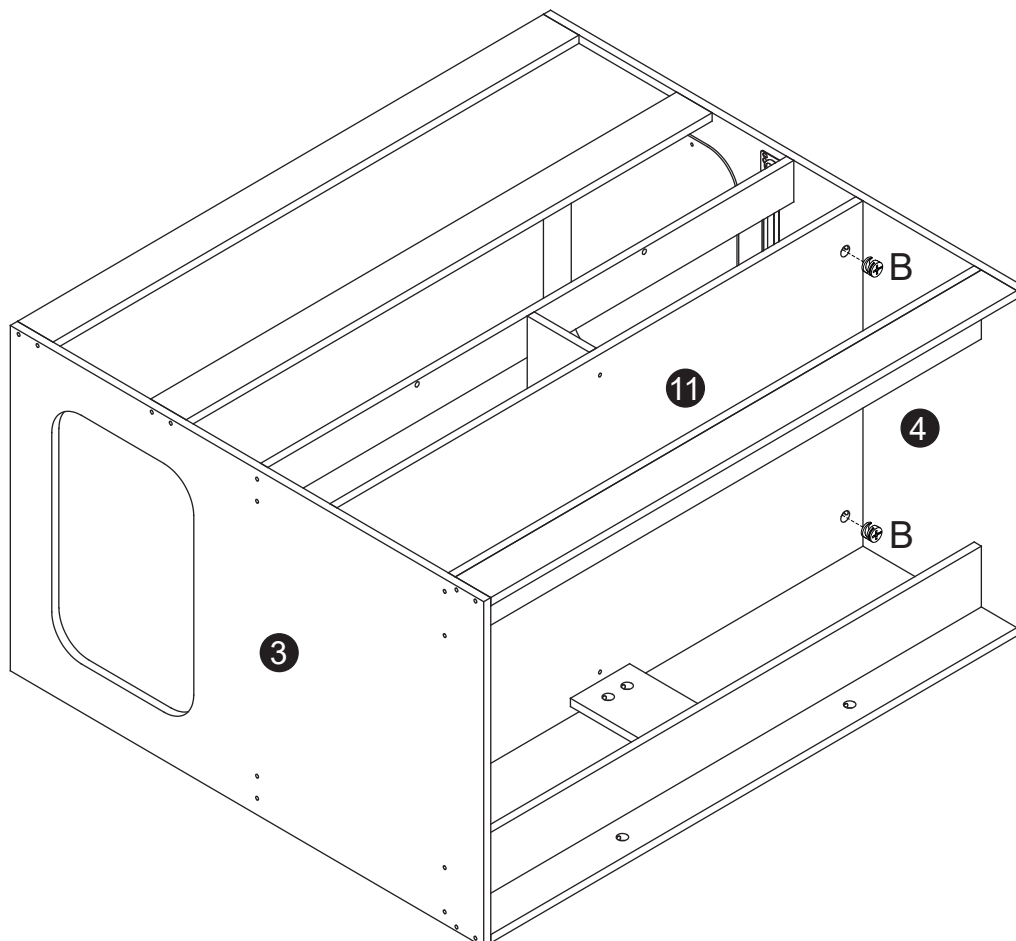


STEP 19

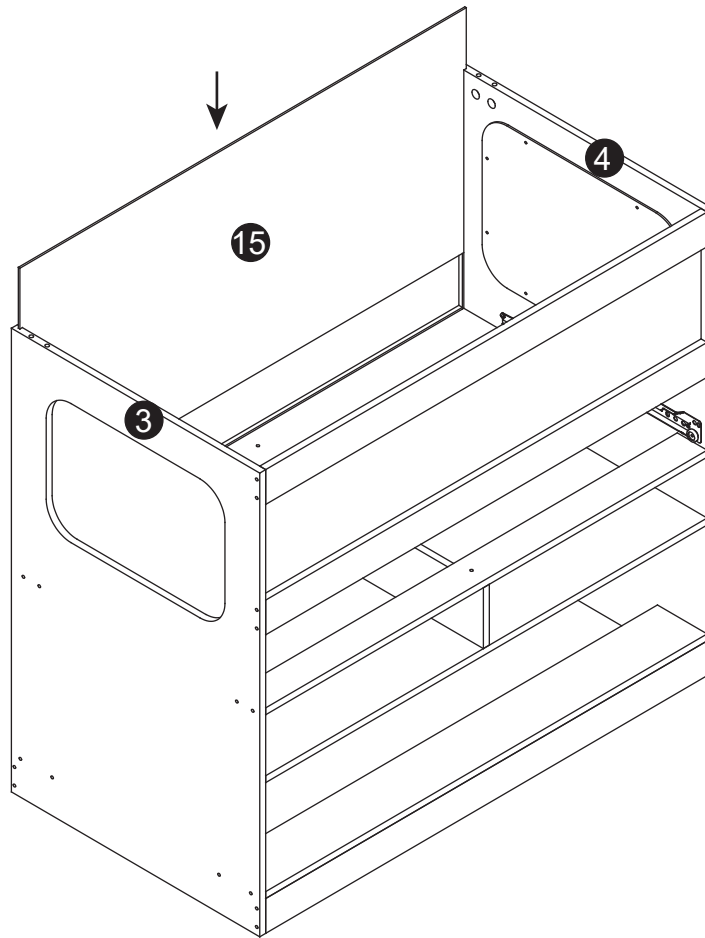

STEP 20

Pay attention to the hole positions here.


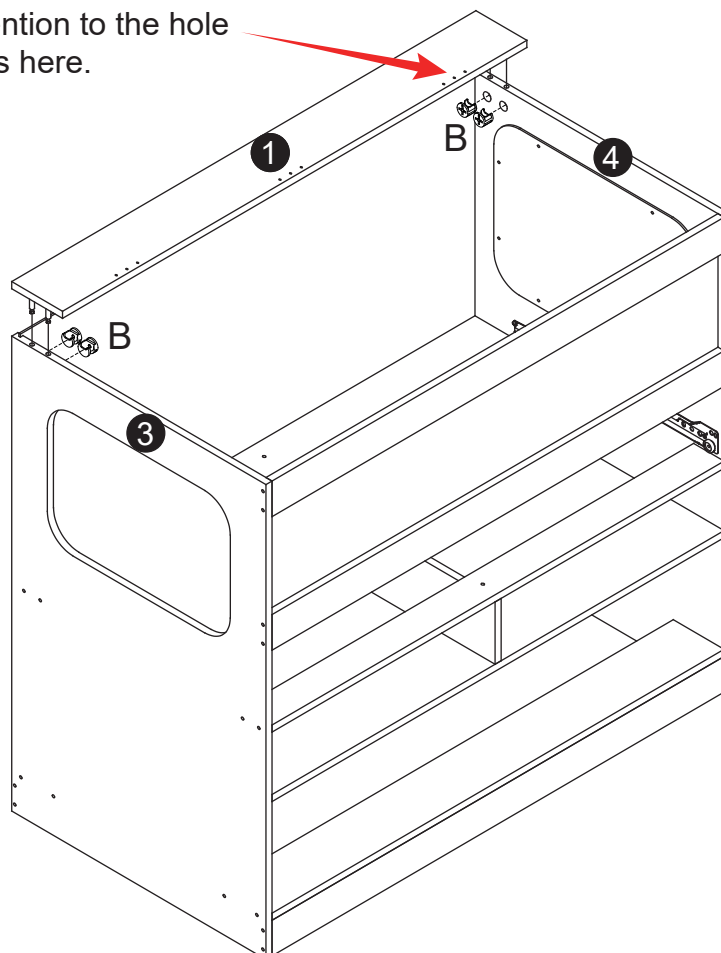
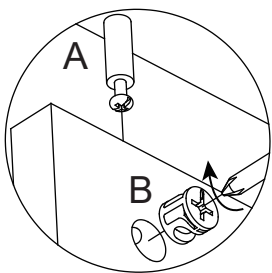


Bx4







Installation steps

STEP 21

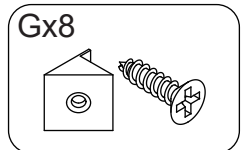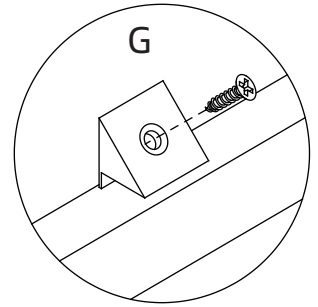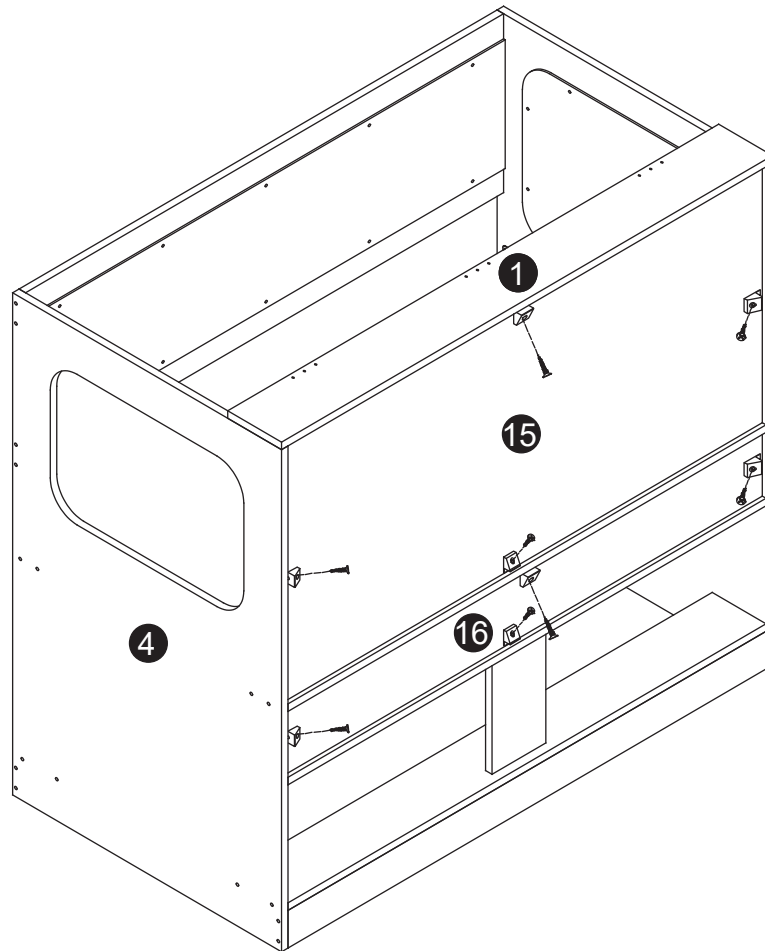



STEP 22

The central protrusion on Part I should face upward.

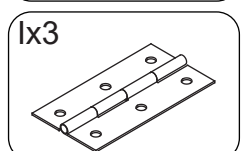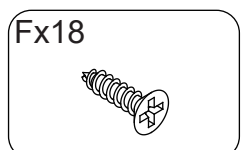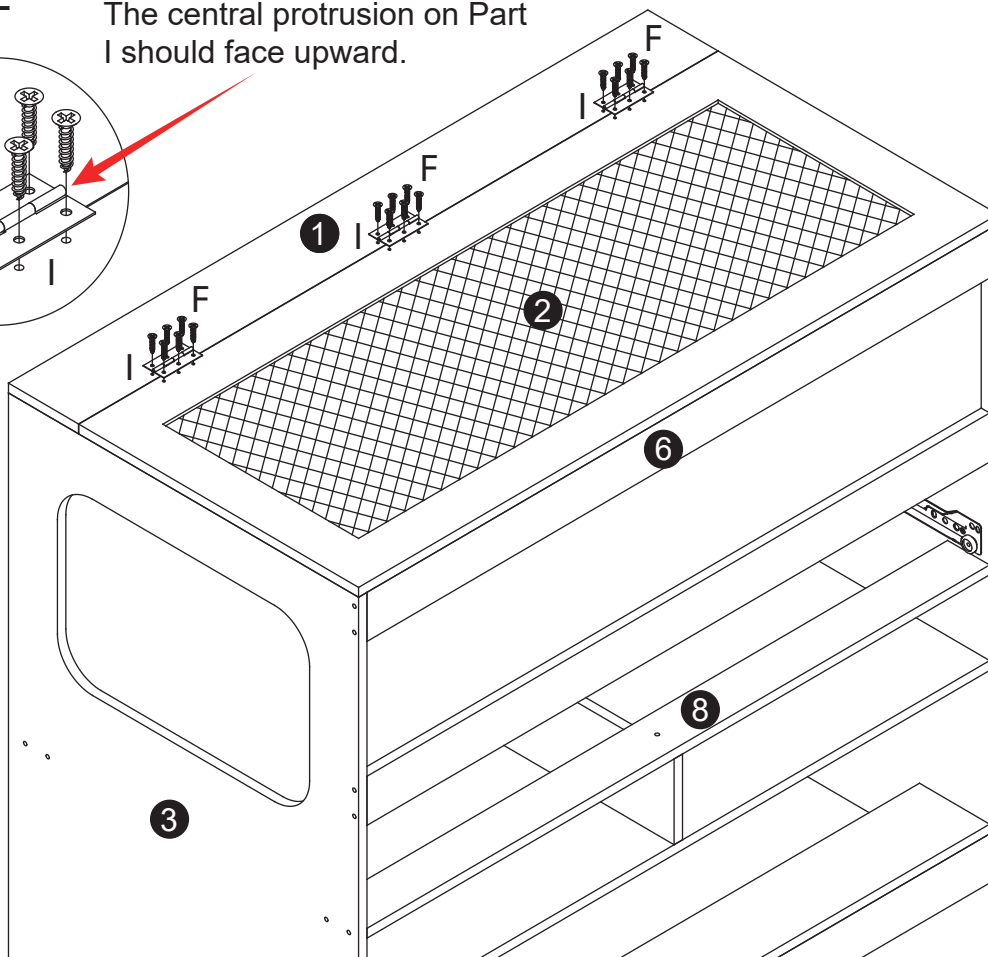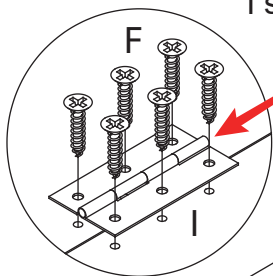


Installation steps


STEP 23

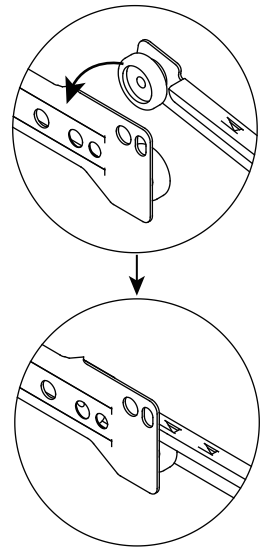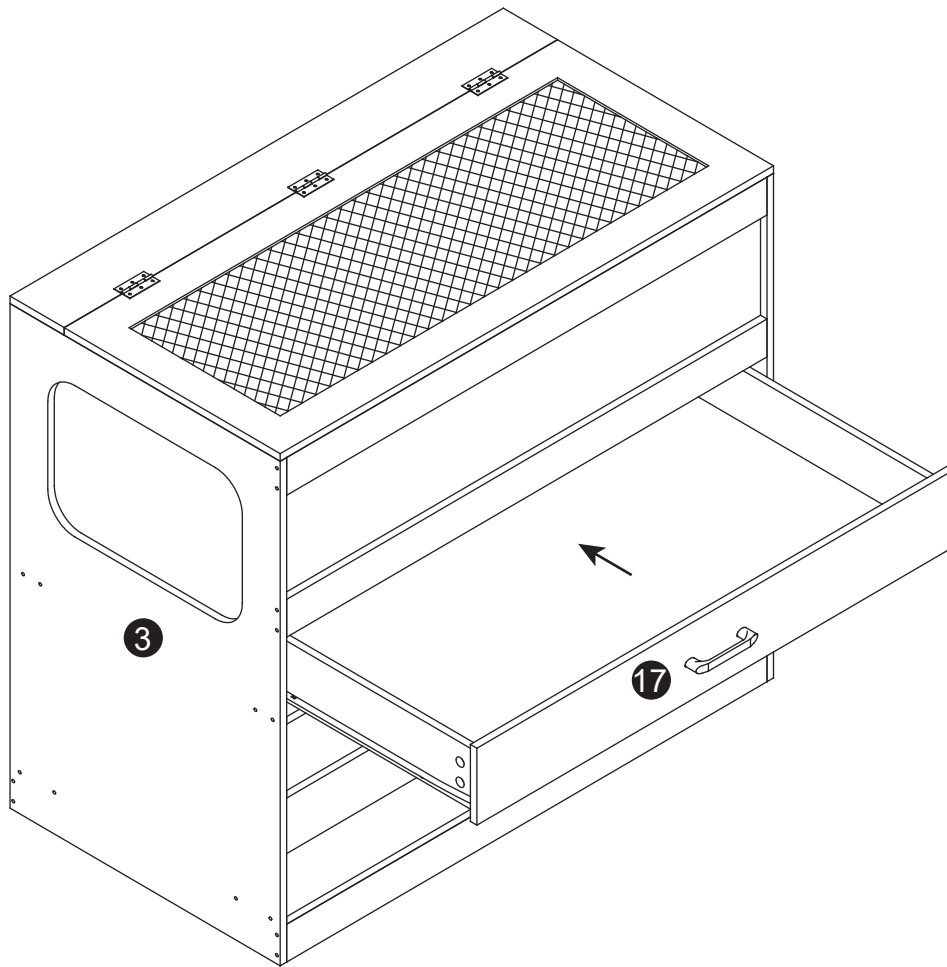

STEP 24

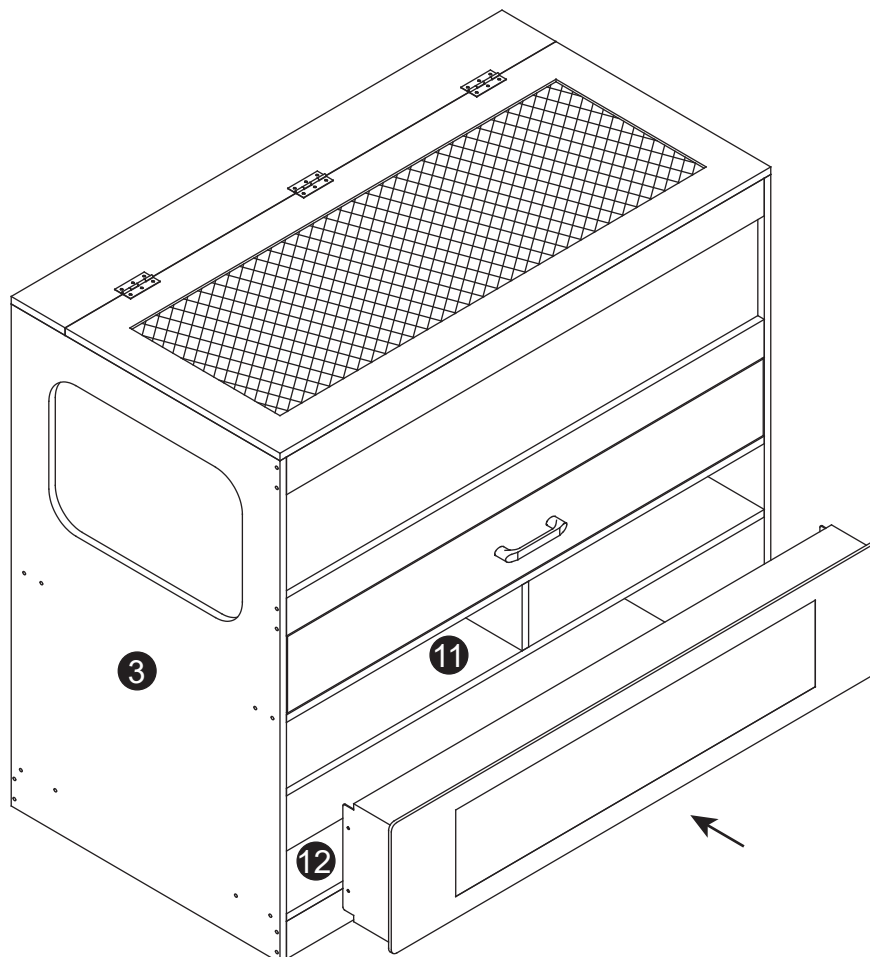

STEP 25

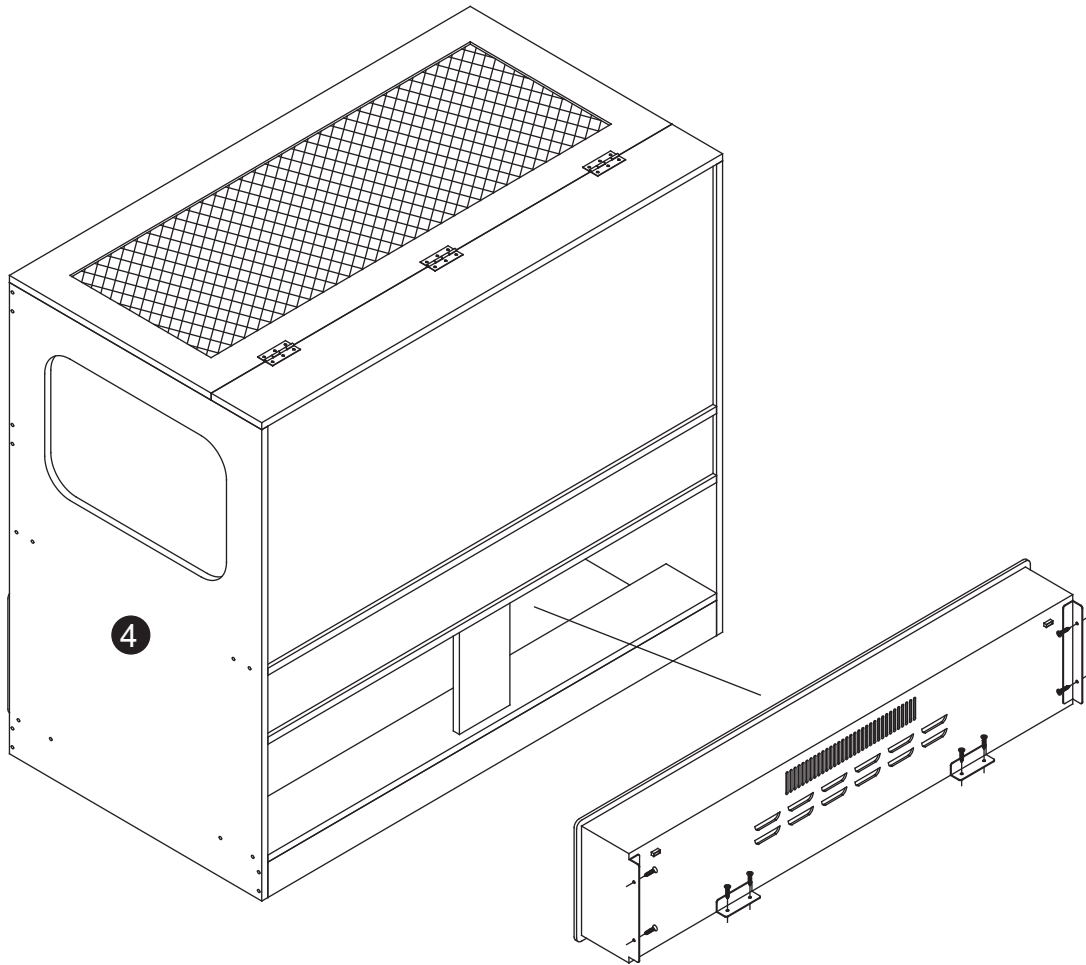

STEP 26

