



by Stevens Industries, Inc.
704 West Main St.
Teutopolis, IL 62467
P: 800.350.3270
P: 217-857-7100
F: 217-857-7101
www.totmate.com

TM2313R TM2317R

2-Level Wall Cabinet



TM2313R
HARDWARE BAG# 0563-3308

3-Level Wall Cabinet



TM2317R
HARDWARE BAG# 0563-3309

ATTENTION

Please unpack and assemble in an area away from children's activities. Remove all tools and excess materials from work area after assembly of unit is complete. Dispose of pallet and packaging materials in an environmentally friendly manner. If any parts are missing or damaged, please call Stevens for immediate parts replacement (1-800-350-3270). When ordering parts, give the Model Number and Color of the unit.

PARTS for TM2317R


ITEM	QTY	DESCRIPTION
1	2	End U
2	1	Top
3	1	Bottom
4	2	Shelf Adjustable
5	1	Door L
6	1	Door R
7	1	Back
8	2	Stringer
9	1	Lock Deadbolt NI w/Bezel SIAM
10	1	Lock Core NI SIAM #001
11	1	Lock Catch - Strike Plate Lock
12	4	Screw Tapp PhFI Zinc #7 X .875
13	2	Screw Tapp PhTr Zinc #8 X .62
14	4	Bumper Press-In 8 x 2.5mm Head
15	1	Catch Plate Door, Black
16	2	Screw Tapp PhFI Zinc #8 X .68
17	4	Hinge Blum F/O 120 S/C Dowel
18	4	Hinge Mtg Plate Blum 0mm
19	2	Pull 128mm Advtg Bntwr MtNi
20	4	Screw Mach PhTr Zinc 8-32x1.00
21	8	Clip Shlf Clr Twin Pin 3/4-1"
22	12	Screw Conn HxDc Ni 7mmx 50mm

HARDWARE / TOOLS INCLUDED

(Phillips screwdriver required but not included.)




Hex Wrench



Confirmat Bolt
(Screw Conn HxDc Ni 7mmx50mm)



Catch Plate
(Catch Plate Door)



Deadbolt
Lock Body
(Lock Deadbolt NI w/Bezel SIAM)



Door Catch Plate Screw
(Screw Tapp PhFI #8 x .68)



Hinge
(Hinge Blum F/O 120 S/C Dowel)



Lock Screw
(Screw Tapp PhFI Zinc #7 x .875)



Hinge Mounting Plate
(Hinge Mtg Plate Blum 0mm Dowel)



Lock Core
(Lock Core NI SIAM #001)



Lock Catch
(Strike Plate Lock)



Lock Catch Screw
(Screw PhTr Zinc #8 x .62)



Pull Screw
(Screw Mach PhTr Zinc 8-32x1.00)



Shelf Clip
(Clip Shelf-Clr Twin Pin 3/4-1")



Door Pull
(Pull 128mm Advtg Bntwr MtNi)



CAUTION – CHOKING HAZARD

Adult assembly required due to presence of small parts and sharp edges.


Illustrations and part numbers are for TM2317R.
Basic assembly instructions are the same for models shown. 2-Person assembly recommended.

NOTE:

Refer to exploded drawing for orientation of holes to parts.

- STEP 1:** Identify **Ends (1)**, **Top (2)** and **Bottom (3)** and set aside for assembly. Note that routed groove along back edges will face interior of unit. These are for installation of **Back (7)**.
- STEP 2:** With front edge of one end resting on floor, insert dowels on **Top (2)** into holes on **End (1)**, making sure grooves are oriented correctly. Press firmly into place.
- STEP 3:** Secure **Top (2)** to **End (1)** with two **Confirmat Bolts (22)** using **Hex Wrench**.
- STEP 4:** Insert dowels on **Bottom (3)** into holes on **End (1)** from **Step 3**, grooves are oriented correctly. Press firmly into place.
- STEP 5:** Secure **Bottom (3)** to **End (1)** with two **Confirmat Bolts (22)**.
- STEP 6:** Carefully position assembly with **End (1)** flat on floor, and dowels on **Top (2)** and **Bottom (3)** facing up.
- STEP 7:** Insert **Back (7)** into grooves on **End (1)**, **Top (2)** and **Bottom (3)**. Seat firmly in place.
- STEP 8:** Insert dowels on **Stringers (8)** into holes on **End (1)** near back edge, making sure holes in **Stringers** align with thru-holes in **End**.
- STEP 9:** Position other End on top of assembly, so holes in End align with dowels in **Top (2)**, **Bottom (3)** and **Stringers (8)**, AND that **Back (7)** fits into groove on **End**. Press firmly in place.

CONTINUED ON
OTHER SIDE...

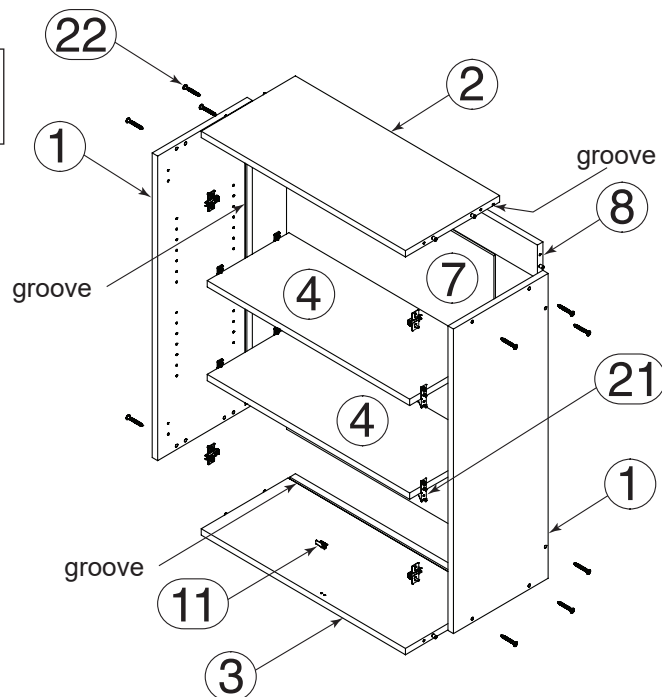



by Stevens Industries, Inc.
704 West Main St.
Teutopolis, IL 62467
P: 800.350.3270
P: 217-857-7100
F: 217-857-7101
www.totmate.com

TM2313R TM2317R

2-Level Wall Cabinet



TM2313R
HARDWARE BAG# 0563-3308

3-Level Wall Cabinet



TM2317R
HARDWARE BAG# 0563-3309

PARTS for TM2317R


ITEM	QTY	DESCRIPTION
1	2	End U
2	1	Top
3	1	Bottom
4	2	Shelf Adjustable
5	1	Door L
6	1	Door R
7	1	Back
8	2	Stringer
9	1	Lock Deadbolt NI w/Bezel SIAM
10	1	Lock Core NI SIAM #001
11	1	Lock Catch - Strike Plate Lock
12	4	Screw Tapp PhFI Zinc #7 X .875
13	2	Screw Tapp PhTr Zinc #8 X .62
14	4	Bumper Press-In 8 x 2.5mm Head
15	1	Catch Plate Door, Black
16	2	Screw Tapp PhFI Zinc #8 X .68
17	4	Hinge Blum F/O 120 S/C Dowel
18	4	Hinge Mtg Plate Blum 0mm
19	2	Pull 128mm Advtg Bntwr MtNi
20	4	Screw Mach PhTr Zinc 8-32x1.00
21	8	Clip Shlf Clr Twin Pin 3/4-1"
22	12	Screw Conn HxDc Ni 7mmx 50mm

HARDWARE / TOOLS INCLUDED

(Phillips screwdriver required but not included.)




Hex Wrench



Confirmat Bolt
(Screw Conn HxDc Ni 7mmx50mm)



Catch Plate
(Catch Plate Door)



Deadbolt



Door Catch Plate Screw
(Screw Tapp PhFI #8 x .68)



Lock Body
(Lock Deadbolt NI w/Bezel SIAM)



Hinge
(Hinge Blum F/O 120 S/C Dowel)



Lock Screw
(Screw Tapp PhFI Zinc #7 x .875)



Hinge Mounting Plate
(Hinge Mtg Plate Blum 0mm Dowel)



Lock Core
(Lock Core NI SIAM #001)



Lock Catch
(Strike Plate Lock)



Lock Catch Screw
(Screw PhTr Zinc #8 x .62)



Pull Screw
(Screw Mach PhTr Zinc 8-32x1.00)



Shelf Clip
(Clip Shelf-Clr Twin Pin 3/4-1")



Door Pull
(Pull 128mm Advtg Bntwr MtNi)

...CONTINUED FROM OTHER SIDE

STEP 13: Identify Left Door (5) and Right Door (6) & remaining hardware.

STEP 14: Position unit with back flat on floor.

STEP 15: Attach **Hinge Plates (18)** to inside of **Ends (1)**, making sure front edge of each **Hinge Plate** is facing front edge of unit (**Ref. Detail A**)

STEP 16: Insert four **Door Bumpers (14)** into small holes on corners of **Doors (5 & 6)**, two per door.

STEP 17: Using a soft rubber mallet, insert **Hinges (17)** into routed cutouts on **Doors (5 & 6)**, striking over screw heads.

IMPORTANT: Take care not to remove Hinge once it is started; otherwise, pre-drilled holes may become damaged.

STEP 18: Mount **Pulls (19)** to **Doors (5 & 6)** with two **Pull Screws (20)** each door.

STEP 19: Mount **Lock Body (9)** to inside of **Right Door (6)** with four **Lock Screws (12)**, making sure deadbolt is facing bottom edge of door.

STEP 20: Mount **Doors (5 & 6)** to **Hinge Plates (18)** from **Step 15**, starting with top **Hinge (17)**, by pressing hinge in from front to back. Pop back edge of hinge in, while holding lower hinge close to matching **Hinge Plate**. Repeat for lower **Hinges (17)**.

STEP 21: Mount **Door Catch (15)** to inside of **Left Door (5)** with two **Door Catch Screws (16)**.

STEP 22: Mount **Lock Catch (11)** to **Bottom (3)** with two **Lock Catch Screws (13)**.

STEP 23: Insert **Shelf Clips (21)** into aligning holes on each **End (1)**.

STEP 24: Insert **Adjustable Shelves (4)** into **Shelf Clips (21)** by positioning Shelf diagonally and resting one side on set of Shelf Clips, then lowering on other side into place.

Insert **Lock Core (10)** through front of **Right Door (6)** and into **Lock Body (9)**.

STEP 25: Carefully stand unit upright.

Ensure all joints, bolts and screws are tight.

STEP 26: This completes the assembly.

