


Product Instructions for:

Parsons Bar Stool with Nail Heads

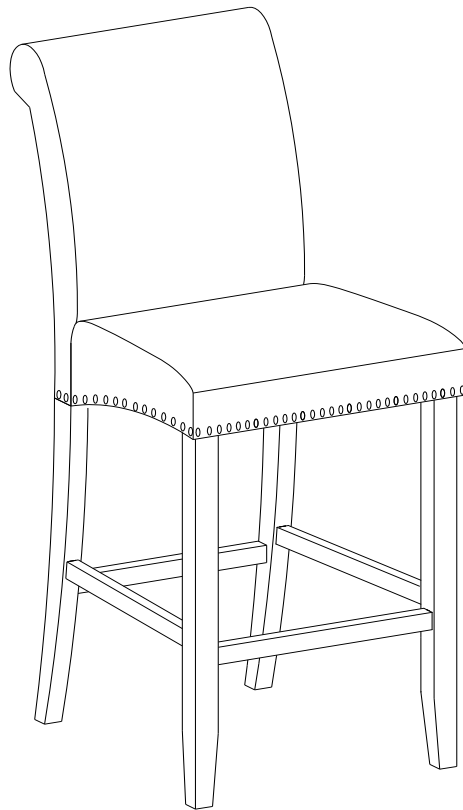

NOTE: Before you get started, remember to loosely attach all bolts. Once product is fully assembled, set product upright. Press down evenly on all sides until product sits level then fully tighten all bolts.


For assistance with assembly or questions contact:
Wayfair Customer Service, 877-WAYFAIR (877-929-3247) | www.wayfair.com

Parsons Bar Stool with Nail Heads


Before beginning assembly, separate all parts and carefully study the parts diagrams below. Review all parts and hardware before disposing of any packaging. You may receive extra hardware with your unit. Call Customer Service for missing hardware.

Parts List


A:Back (1)

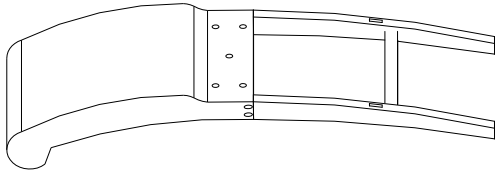


B: Seat (1)

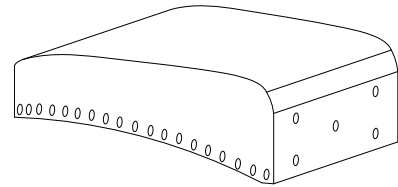


C:Front Rail (1)

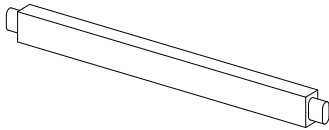


D: Left Side Rail (1)

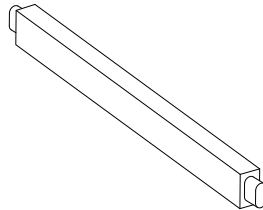


E: Right Side Rail (1)

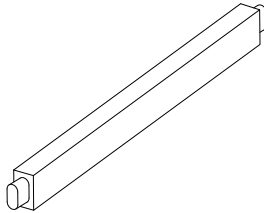

F:Left Leg (1)

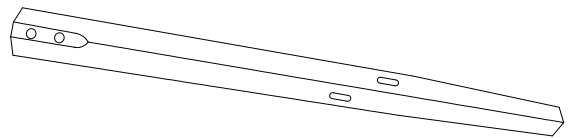


G:Right Leg (1)

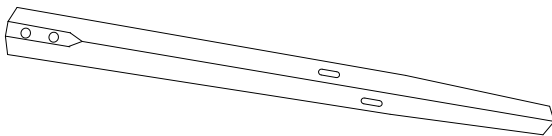


For assistance with assembly or questions contact:
Wayfair Customer Service, 877-WAYFAIR (877-929-3247) | www.wayfair.com


1: Short Bolt $\varnothing$ 5/16*1-3/4"L (5)

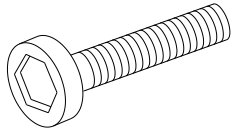


2: Long Bolt $\varnothing$ 5/16*2-1/8"L (4)

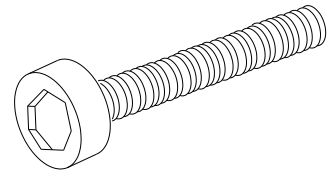


3: Screw M4*1-9/16"L (6)

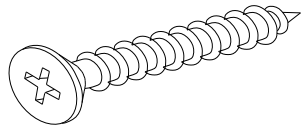

4: Flat Washer (9)



5: Spring Washer (9)



6: Allen Wrench (1)



Parsons Bar Stool with Nail Heads

Assembly Instructions

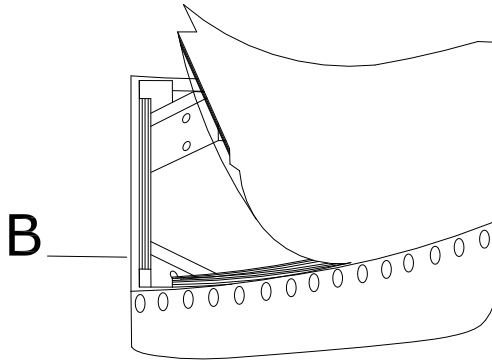


Figure 1

Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.

Step 1

Lift the Velcro strip from the bottom of the Seat (B).

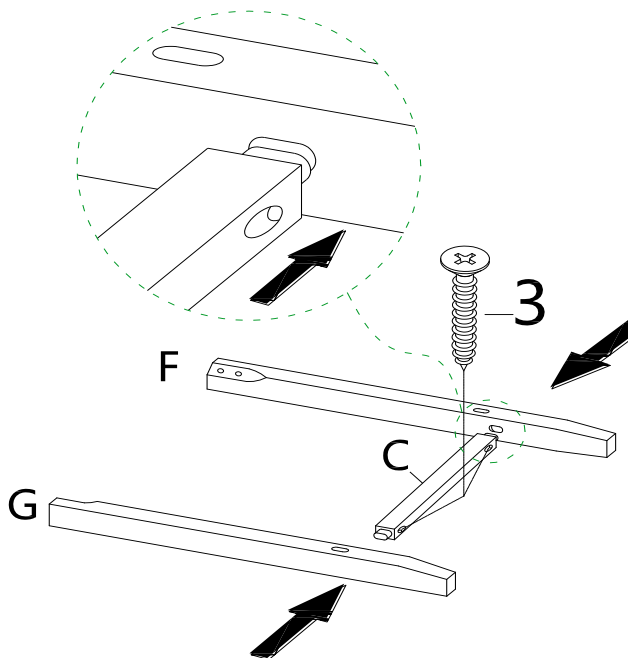


Figure 2

Step 2

Insert the Front Rail (C) into Pre-drilled holes on the Left Leg (F) and Right Leg (G) as shown on Figure 2.

Connect Front Rail (C) to Left Leg (F) and Right Leg (G) with Screws (3) .

Tighten Screws (3) with Phillips screwdriver (not included)

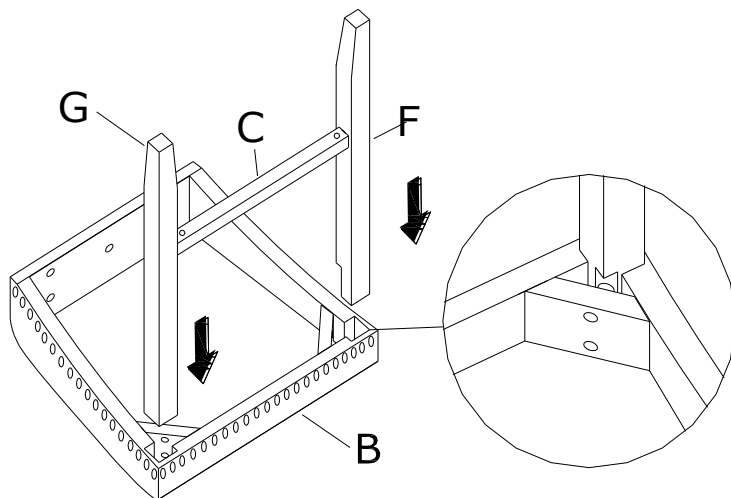


Figure 3

Step 3

Insert the Right Leg (G) and Left Leg (F) into the Seat (B) as shown on Figure 3.

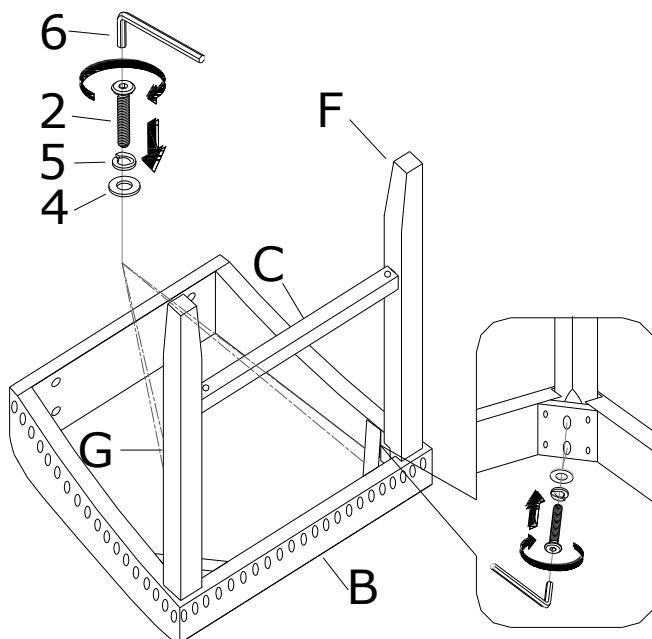


Figure 4

Step 4

Connect Right Leg (G) and Left Leg (F) to Seat (B) with Long Bolt (2) and Flat Washer (4) and Spring Washer (5).

Tighten Bolt with Allen Wrench (6) as shown on Figure 4.

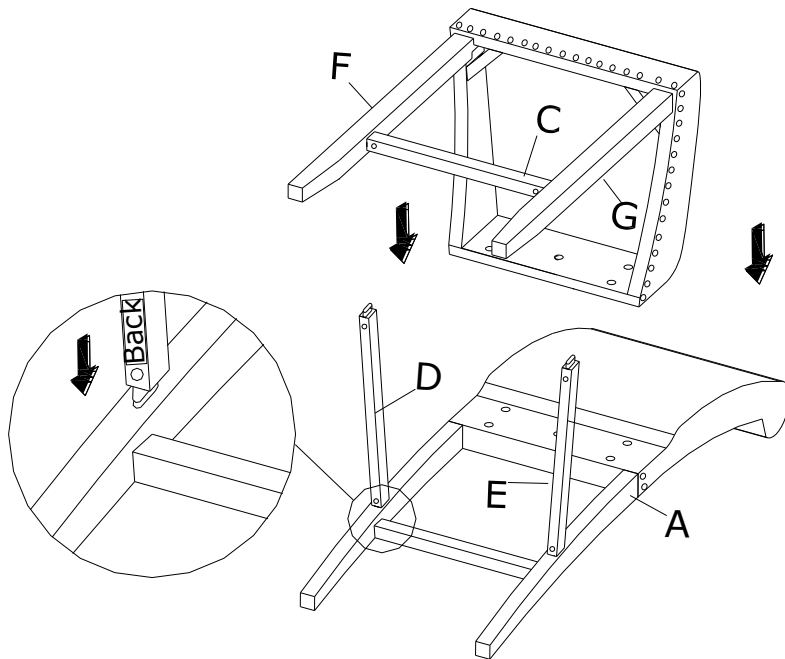


Figure 5

Step 5

Insert the Left Side Rail (D) and Right Side Rail (E) into pre-drilled holes on Back (A) and pre-assembly unit on figure 4 as shown on Figure 5.

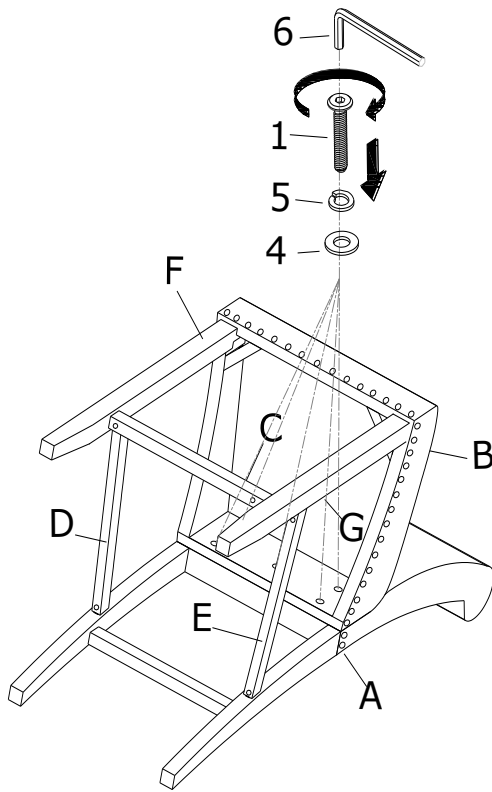


Figure 6

Step 6

Connect Seat (B) to Back (A) with Short Bolts (1) and Spring Washer (5) and Flat Washer (4).

Tighten Bolt with Allen Wrench (6) as shown on Figure 6.

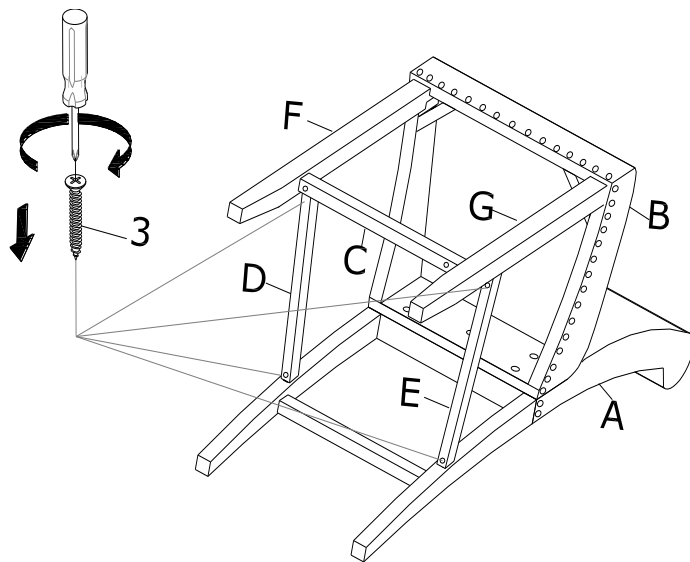


Figure 7

Step 7

Connect Left Side Rail (D) & Right Side Rail (E) to the Right Leg (G) & Left Leg (F) and Back (A) with Screws (3)

Tighten Screws (3) with Phillips screwdriver.

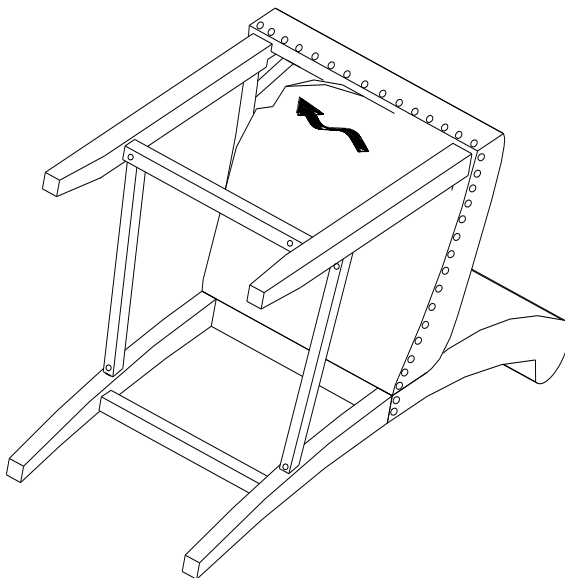


Figure 8

Step 8

Close the Velcro strip from the bottom of the Seat

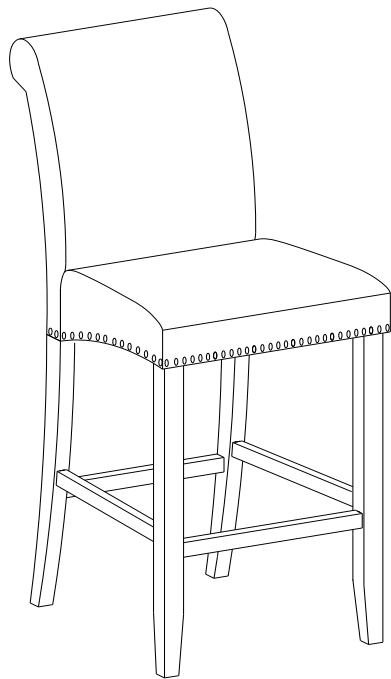


Figure 9

Step 9

Recheck all Bolts are securely tightened

Turn over the Parsons Bar Stool.

Now your Parsons Bar Stool is ready to use!