






# SAC226-03 BONNET TUFTED ACCENT ARMCHAIR


## Assembly Instructions

### Parts


NO.	Picture	Description	Size	QTY
A		Seat	29.9"x31.3"x28.2"	1
B		Front Leg	10"x2.56"x2.56"	2
C		Back Leg	10"x2.1"x2.1"	2

### Hardware

NO.	Picture	Description	Size	QTY
D		Allen Key		1
E		Bolt	6*30mm/ 0.24*1.18"	16
F		Flat Washer	6*18mm/ 0.24*0.71"	16

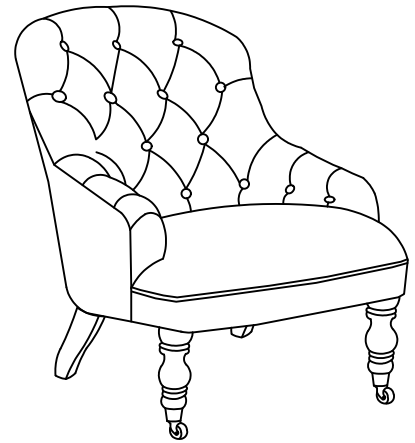

### STEP: 1

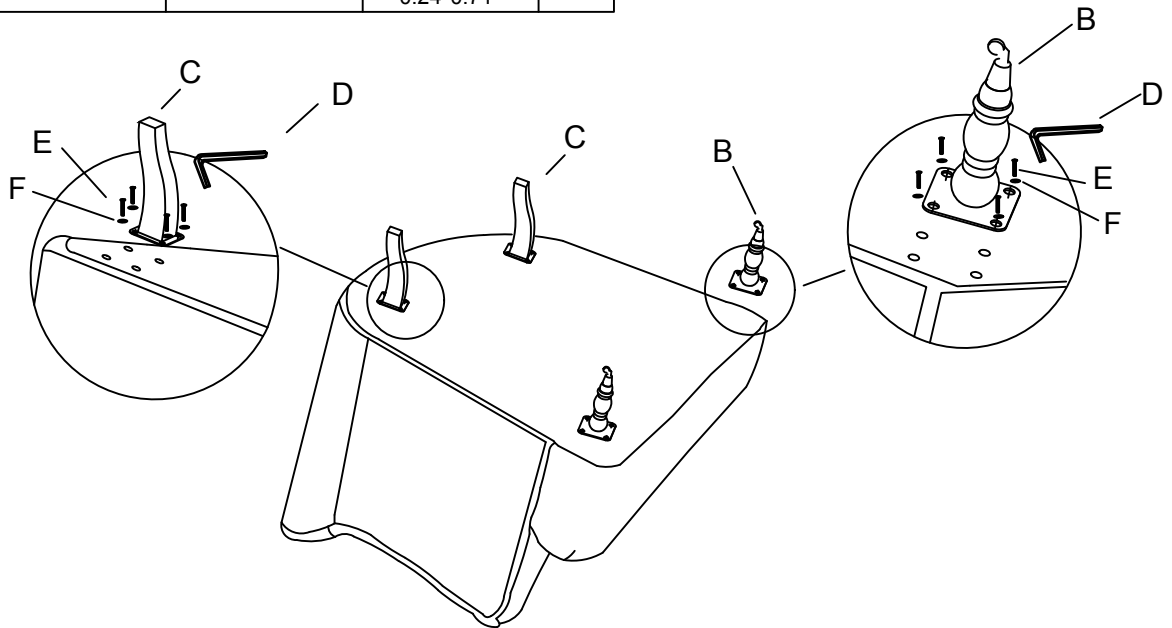

\*Do not tighten screws until all screws are aligned then fully tighten.

Overall Size: 29.9"W x 31.3"D x 38.2"H