


RW20488 ASSEMBLY INSTRUCTIONS

PARTS

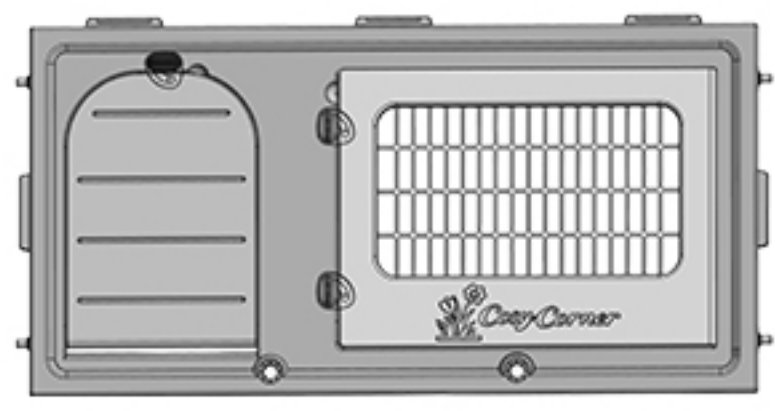


Front Panel




Back Panel




Left Panel

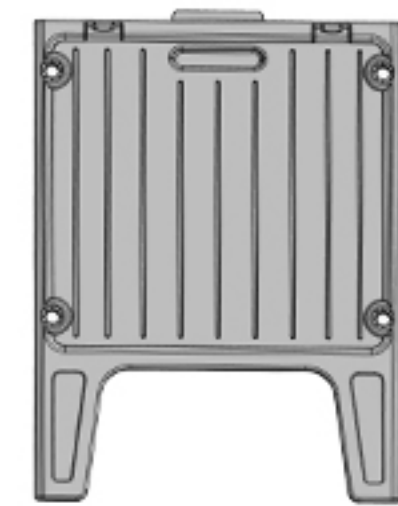


Right Panel

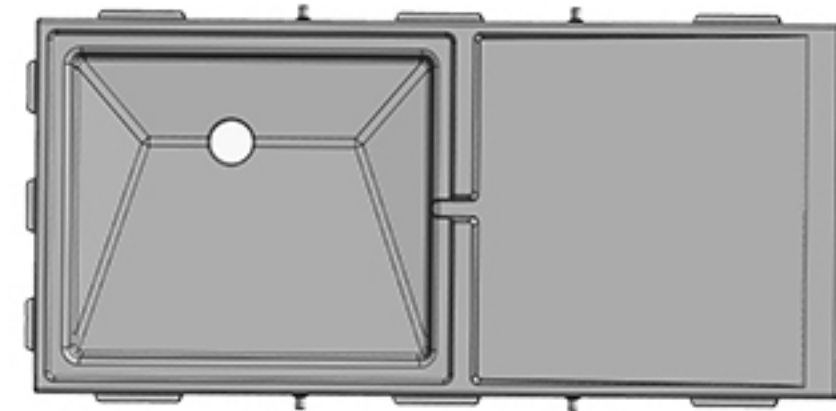

Floor

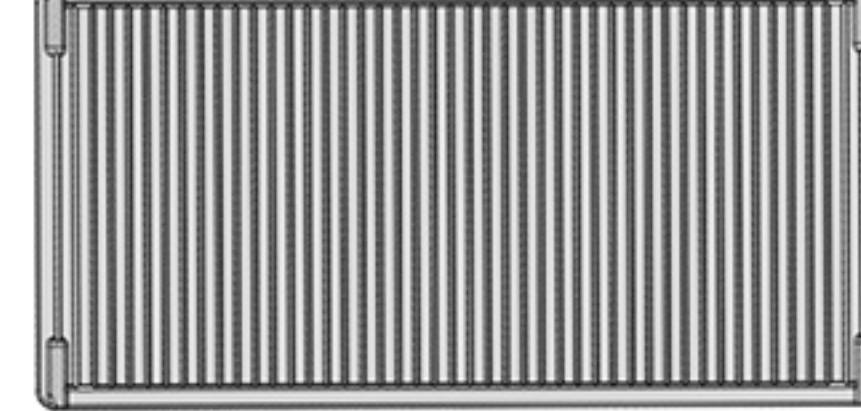

Roof

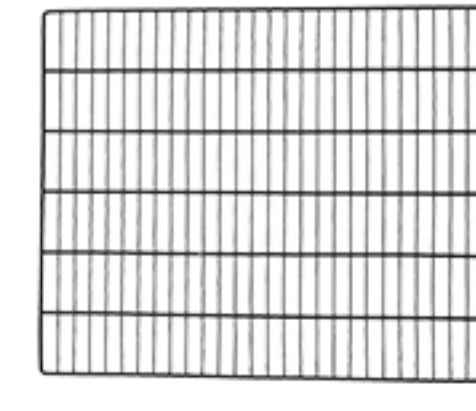

Grate x 1



Plug x 1



Screw x 1




Screw x 12

INSTRUCTIONS


1

Fix the floor to back panel.

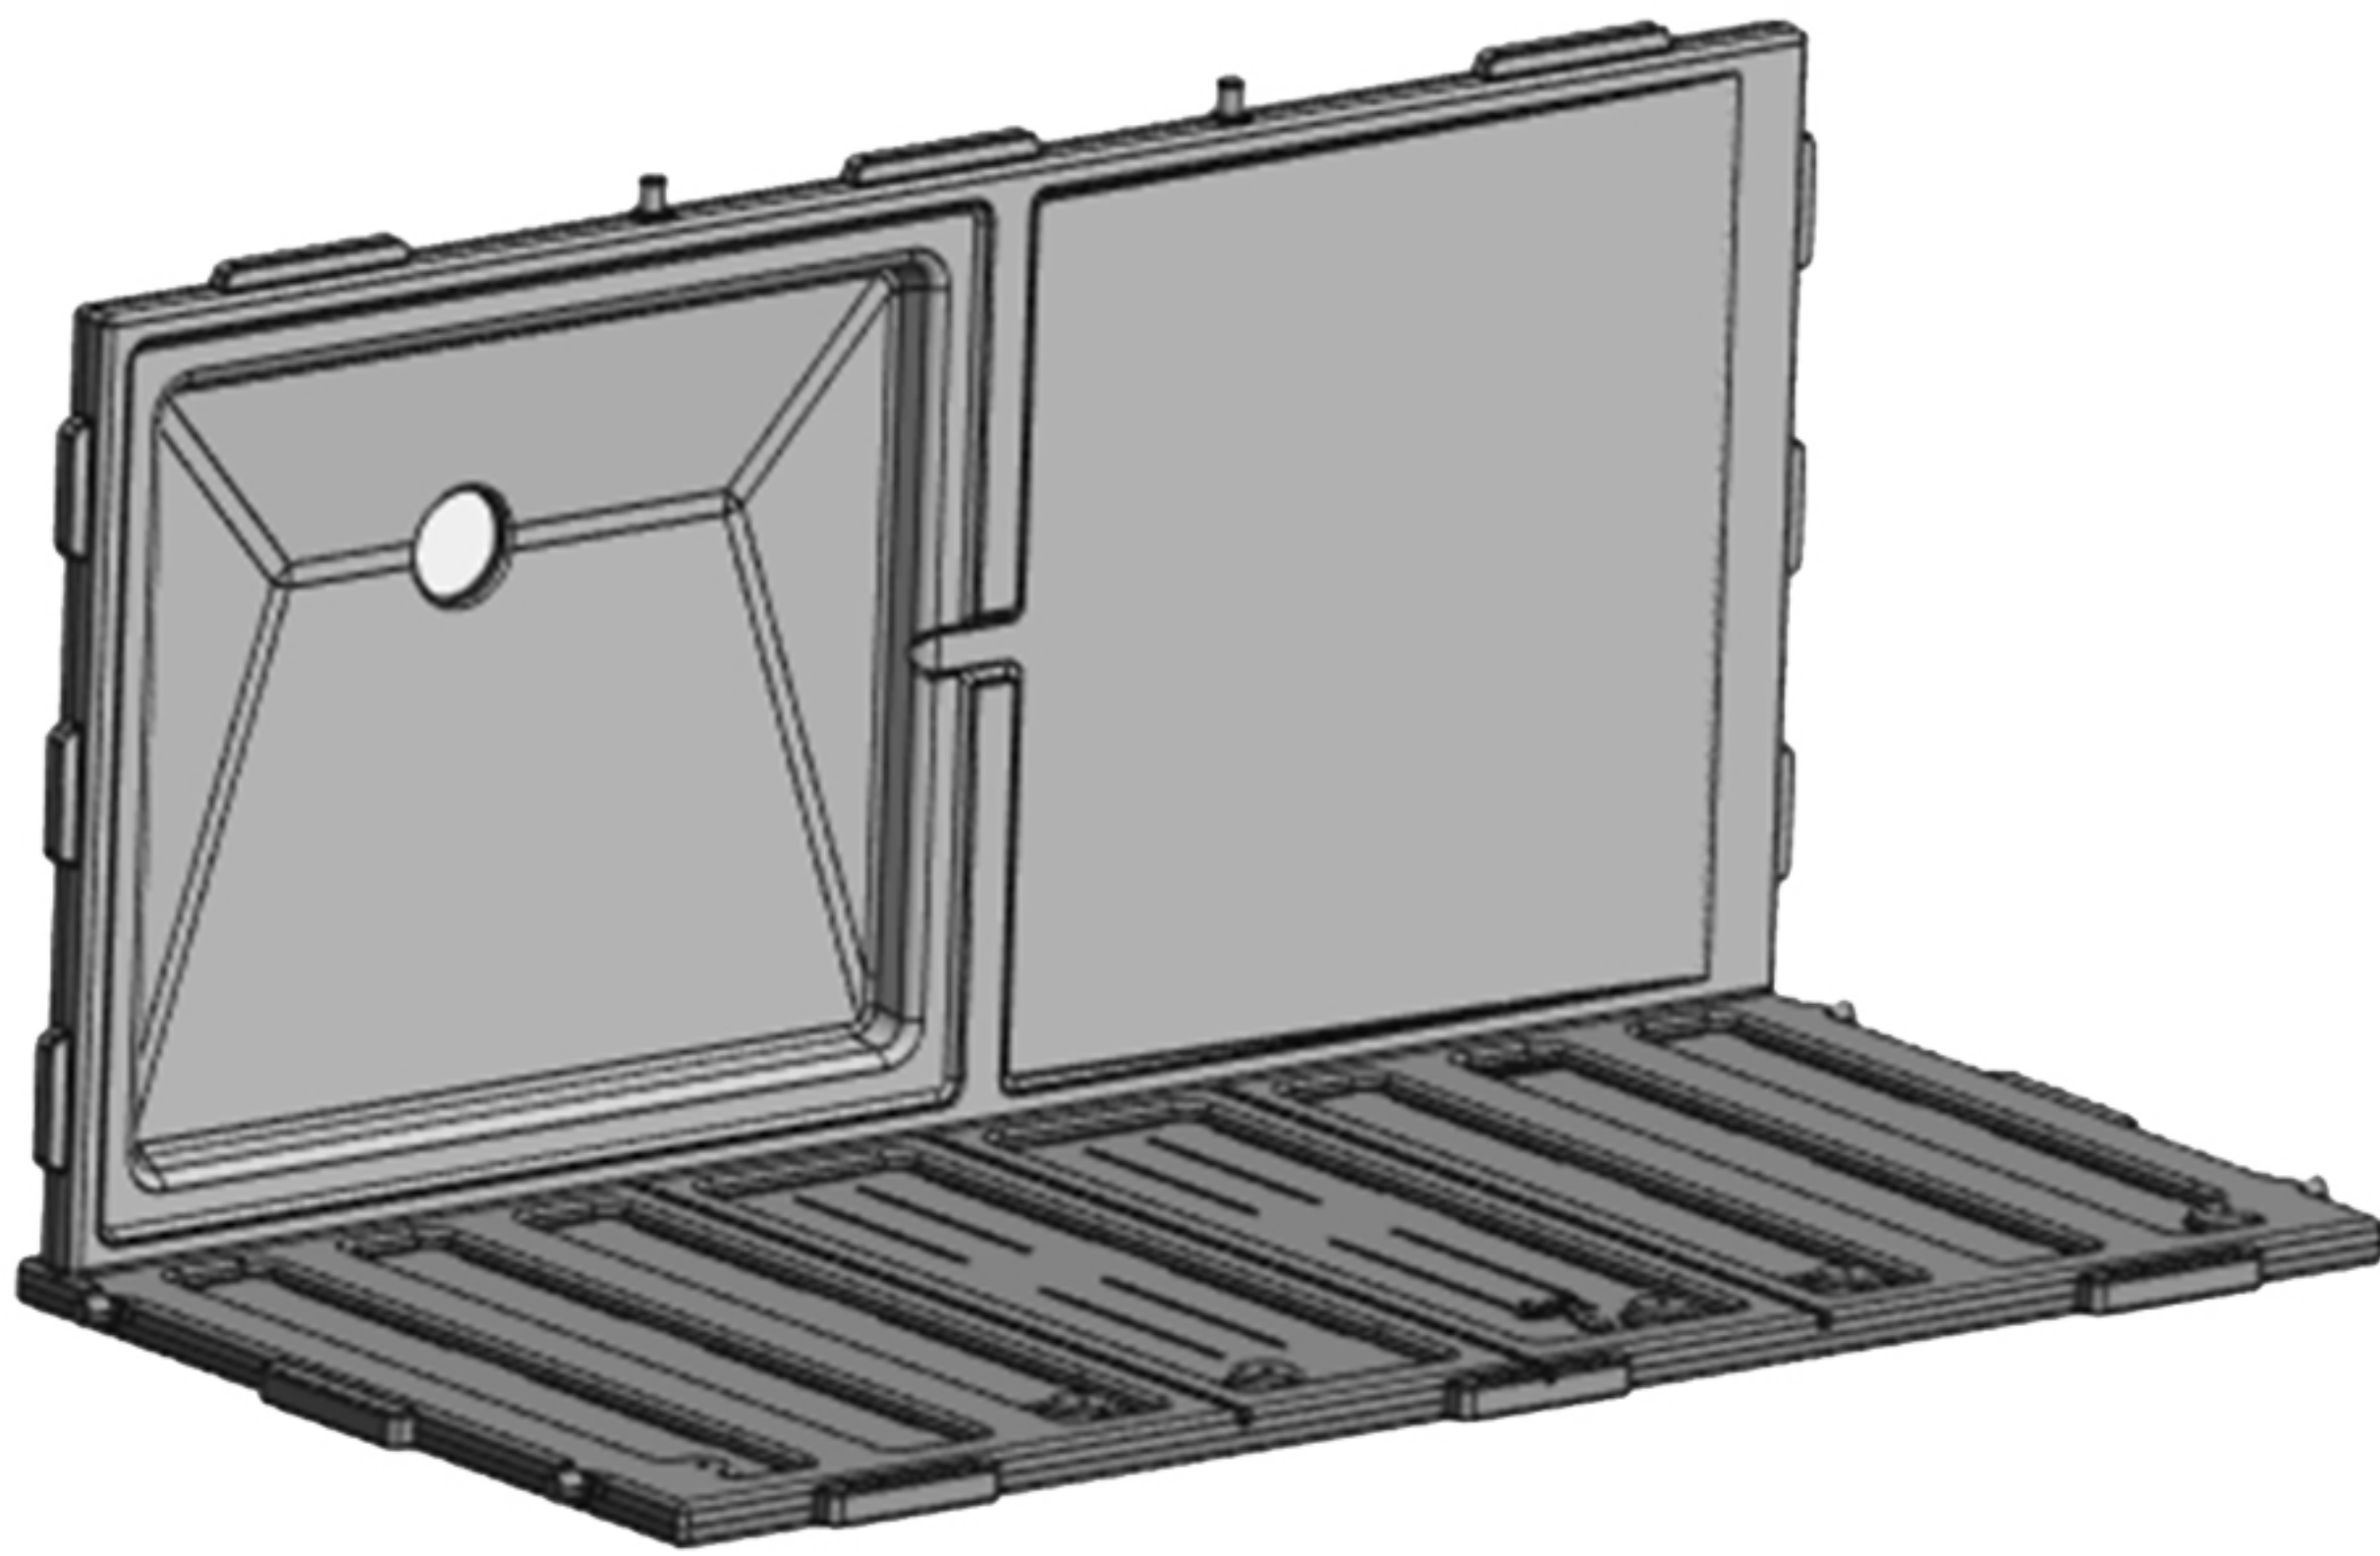


2

Fix left panel and right panel.

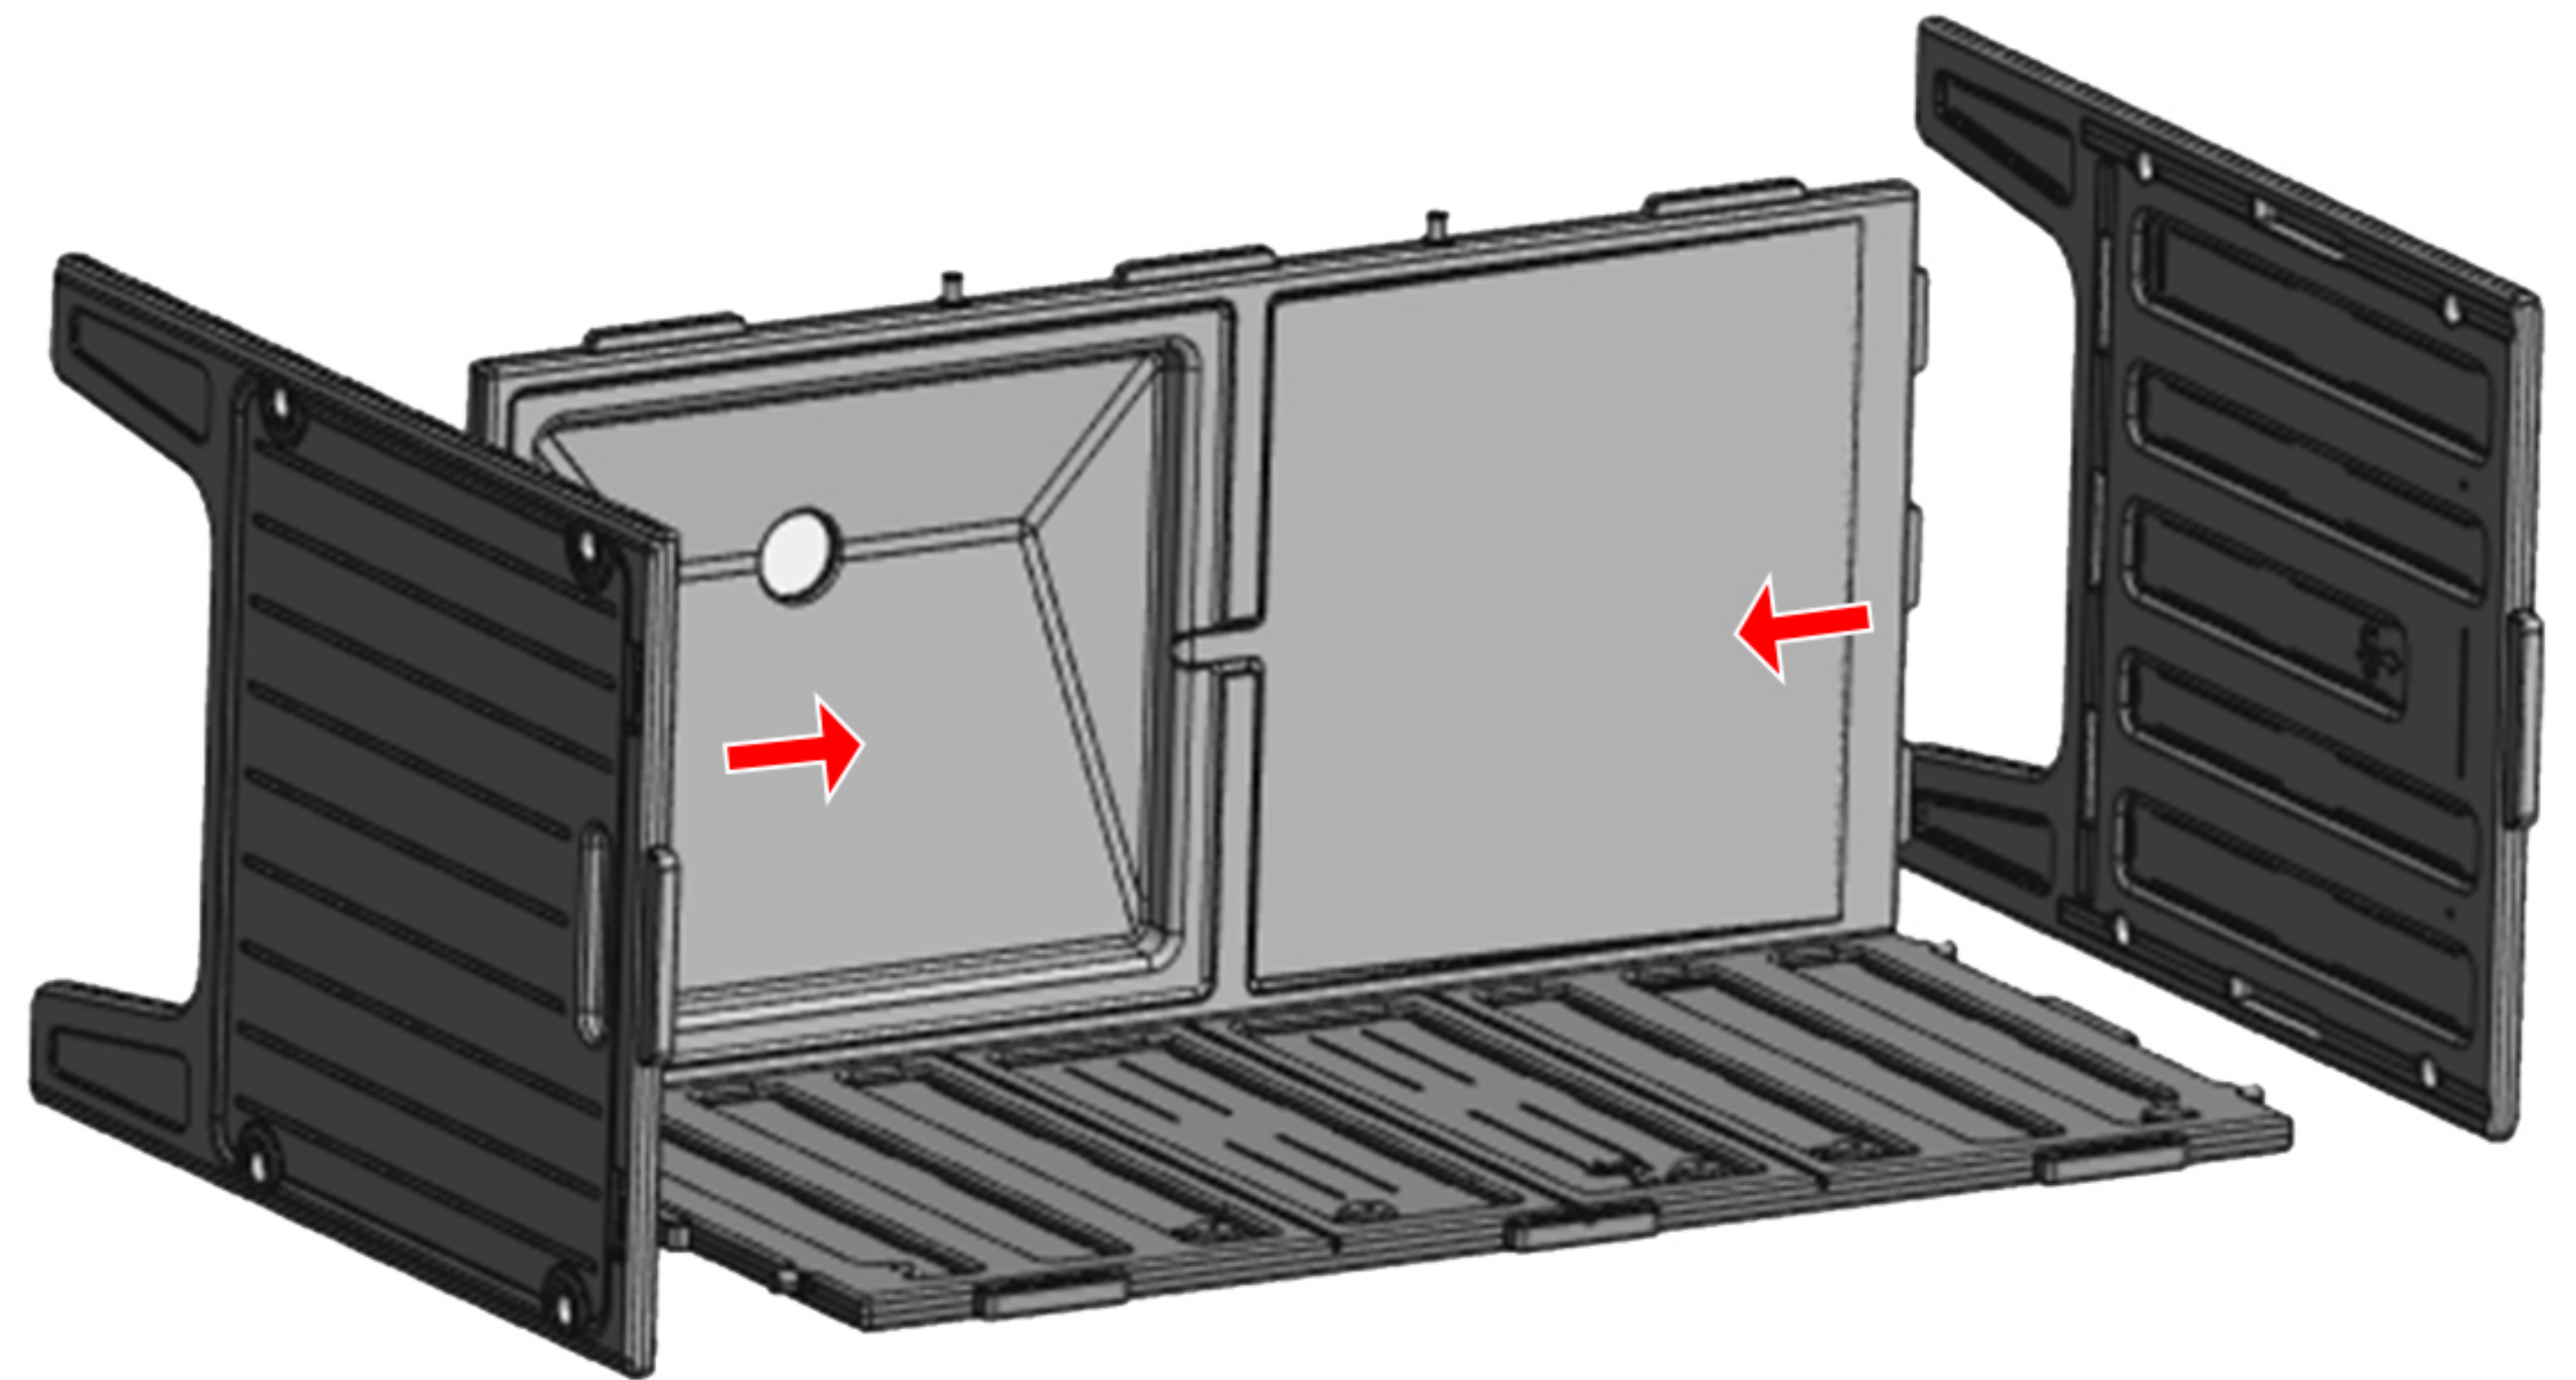

3

Fix the front panel.

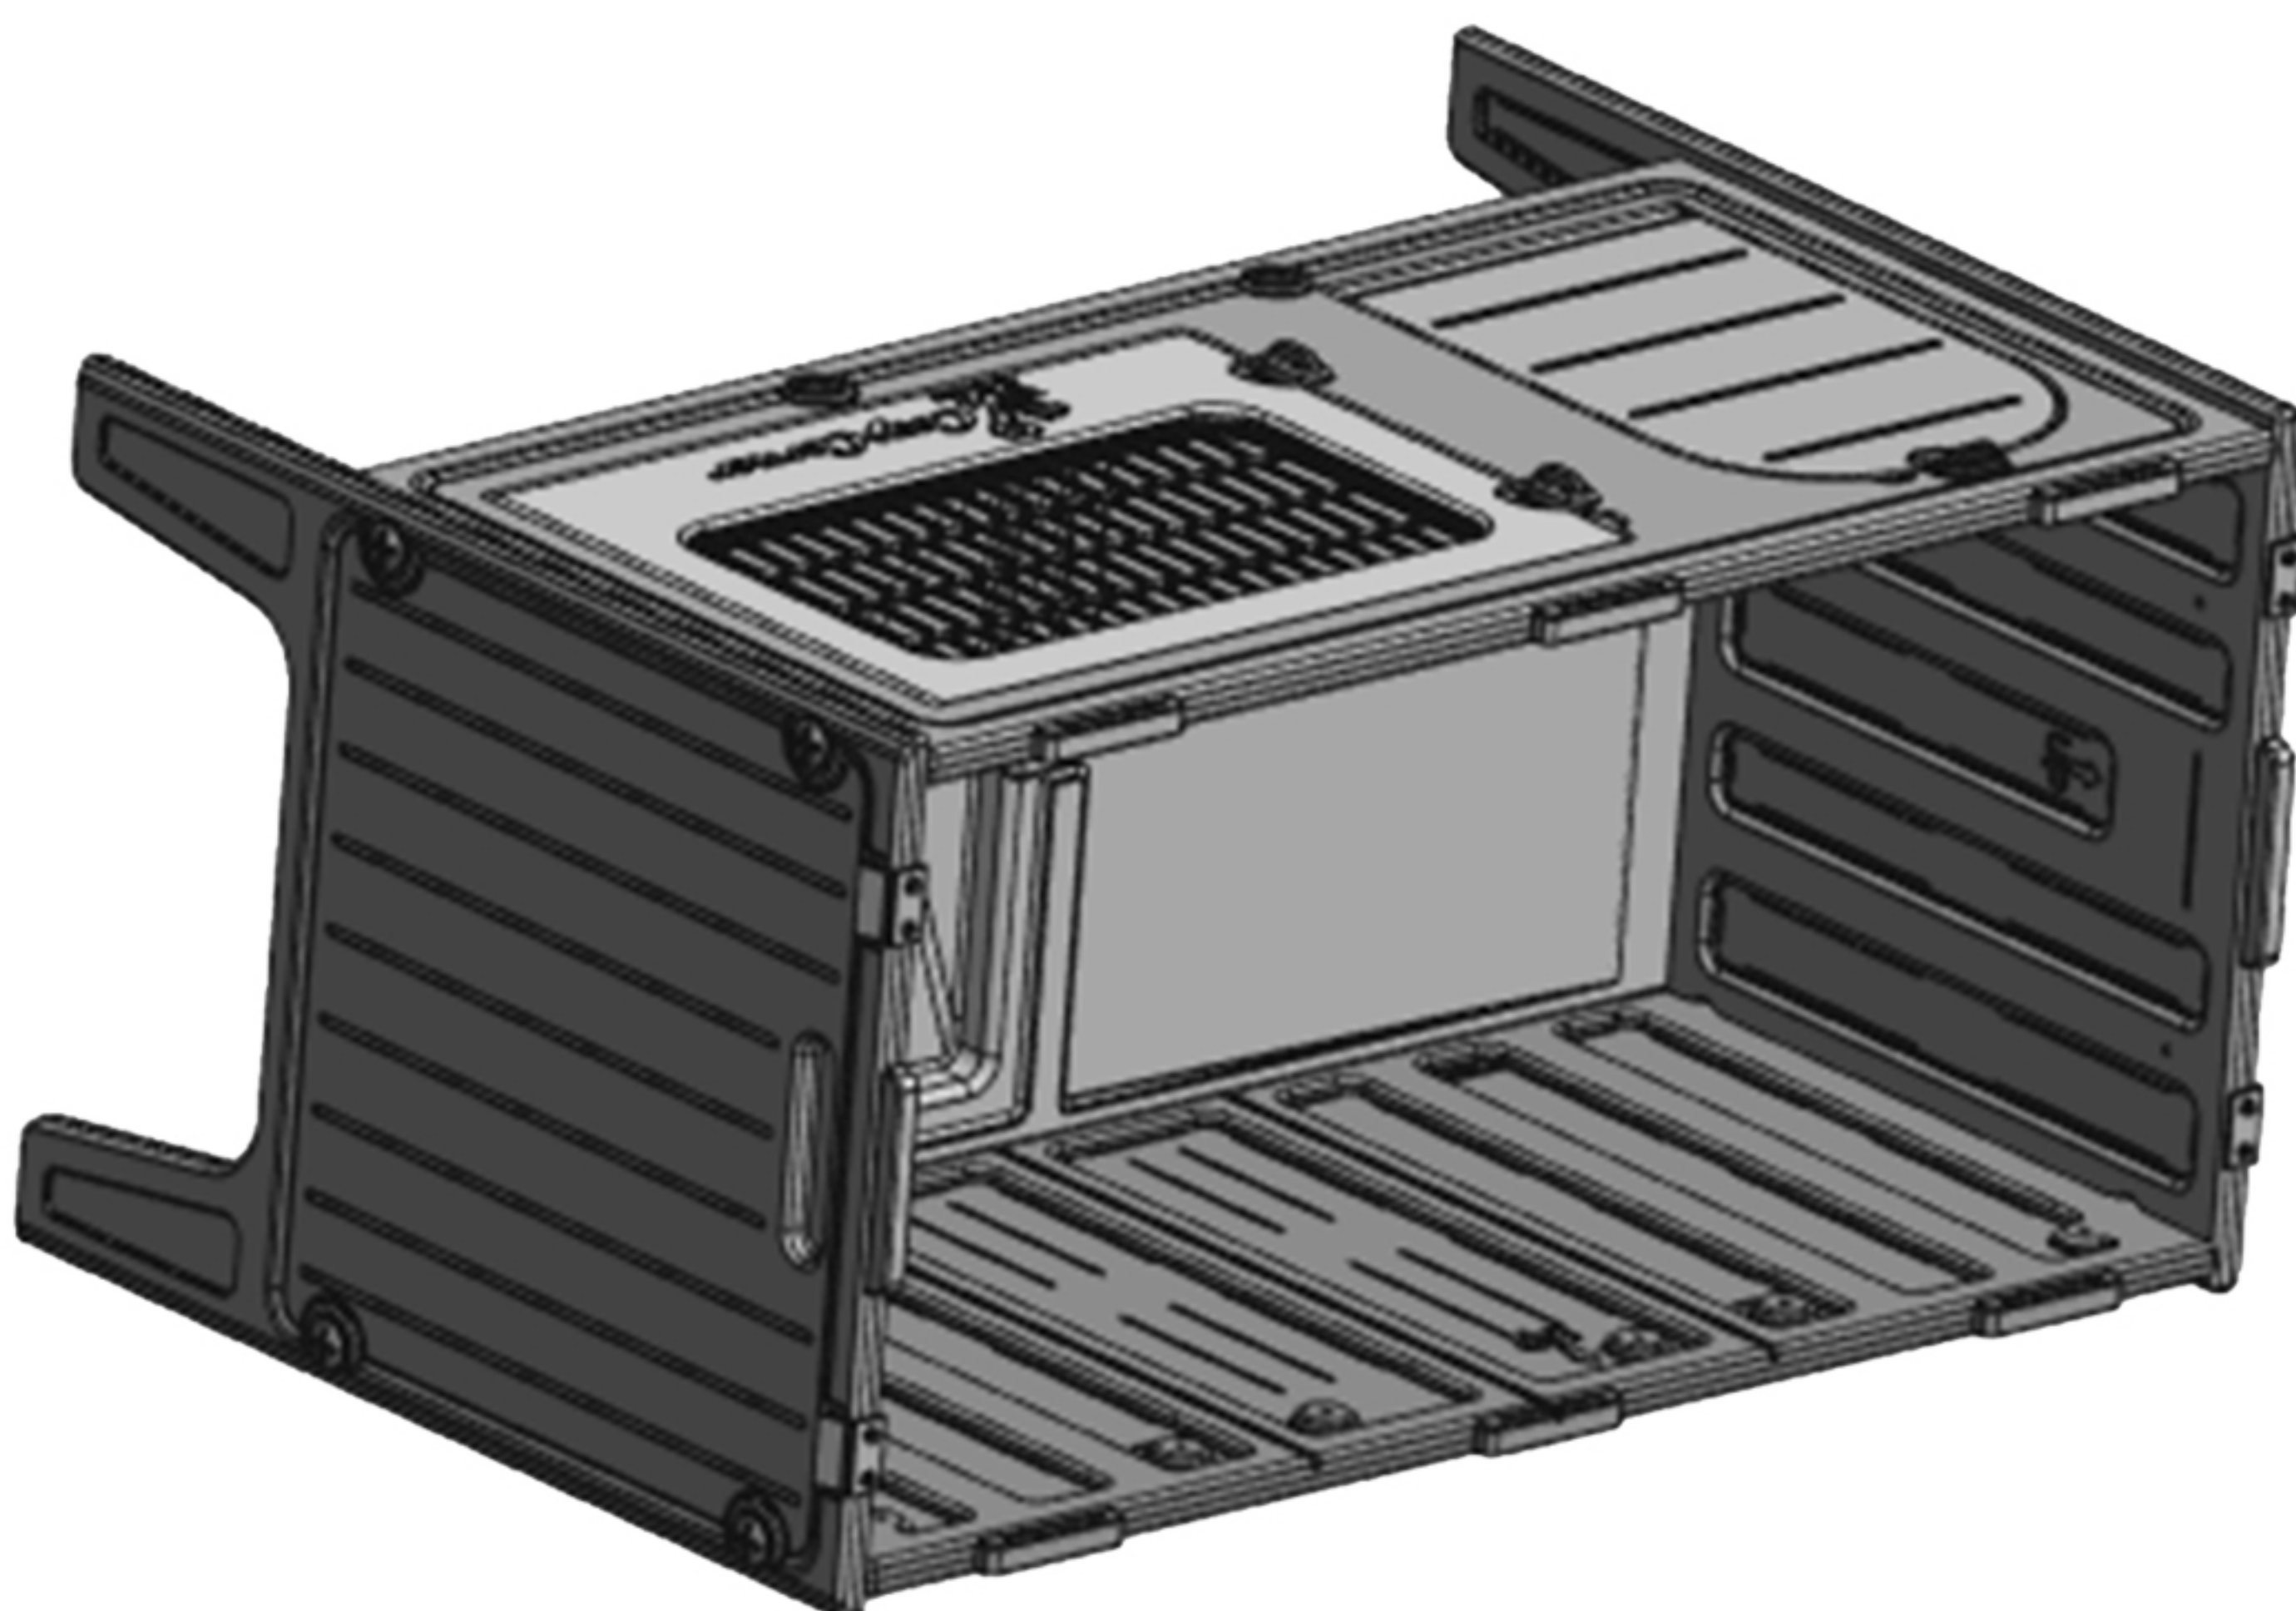

4

Fix the roof, and fasten all screws. Perfect Finish.

