




A=2pcs

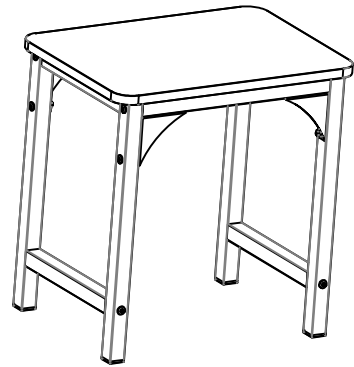


B=1pcs

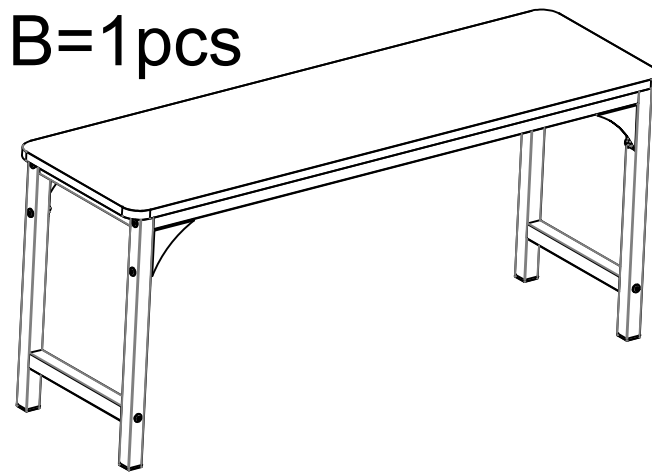


① x2

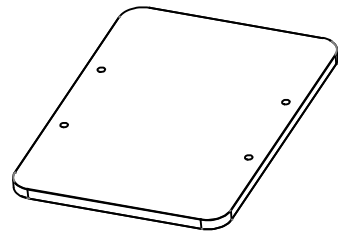


② x1

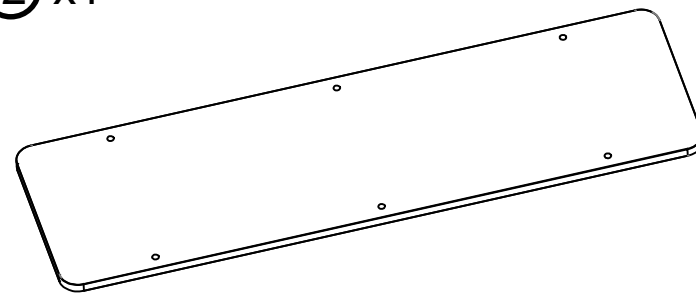


③ x6

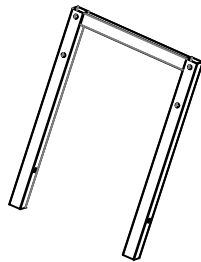


④ x6

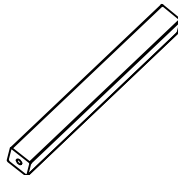


⑤ x4

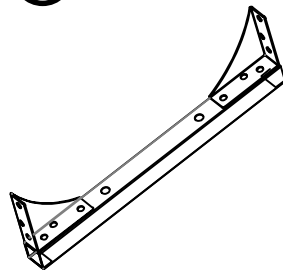

⑥ x2

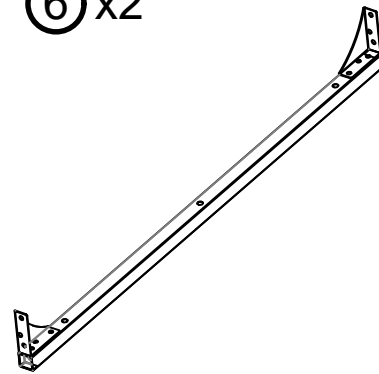

Ⓒ x24




M6 X 45

Ⓓ x26




M6 X 35

Ⓔ x12



M6


Step a

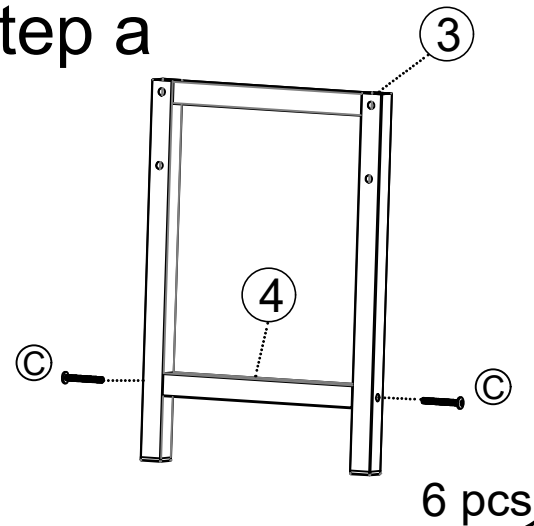

6 pcs


A-1.

Please use D (the shorter) screws to fix the metal frames to the wood pieces.  
The screws will break through the wood pieces if wrong screws are used!!!

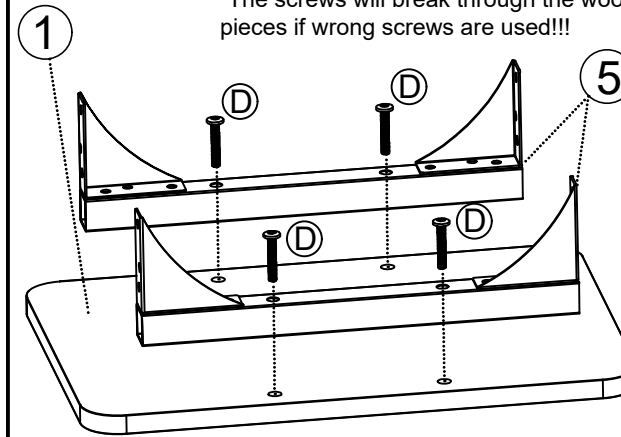


A -2.

Step a

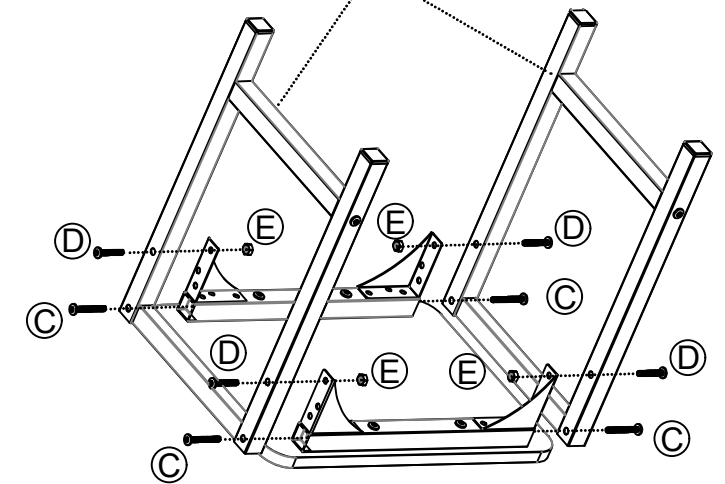

B-1.

Please use D (the shorter) screws to fix the metal frames to the wood pieces.  
The screws will break through the wood pieces if wrong screws are used!!!

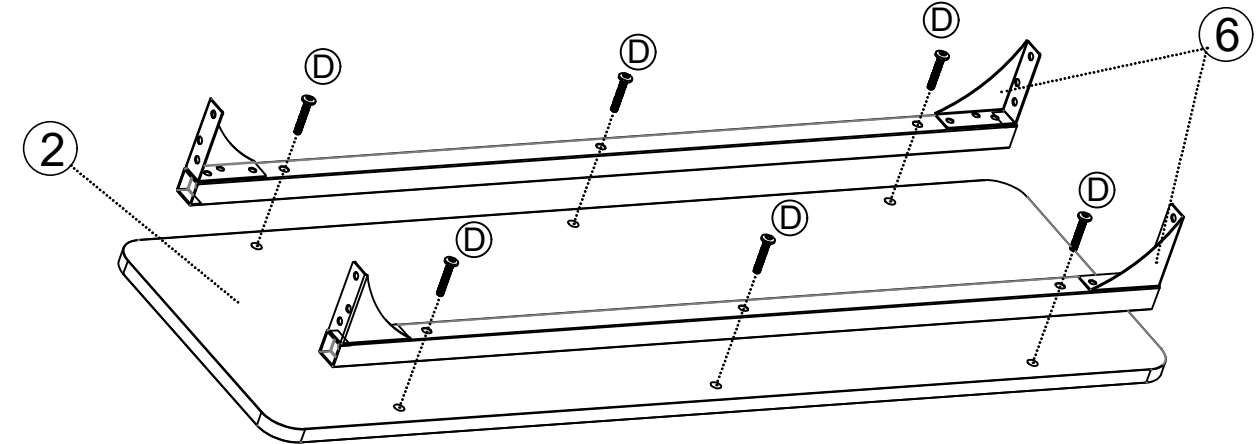

B-2.

Step a

