
INSTALLATION MANUAL

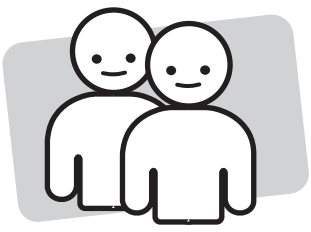

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.





Before You Start

- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away fr om babies and children as they potentially pose a serious choking hazard.

Assembly Instructions


We have designed our furniture with you,the customer in mind.Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

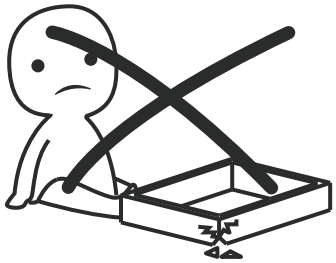


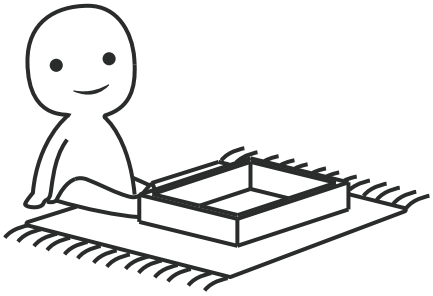

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembledon a soft layer-could be a rug.

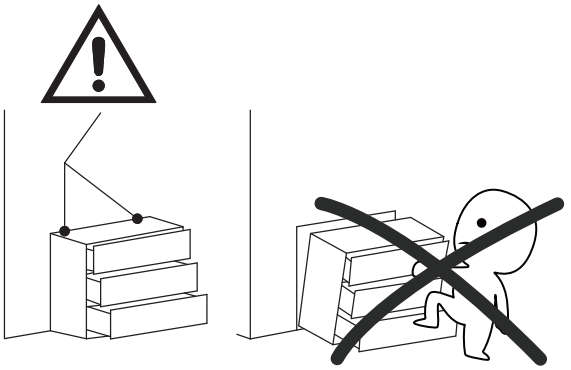

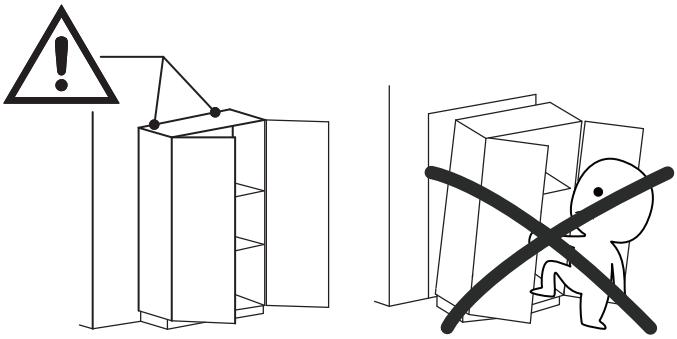

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

Completed Assembly

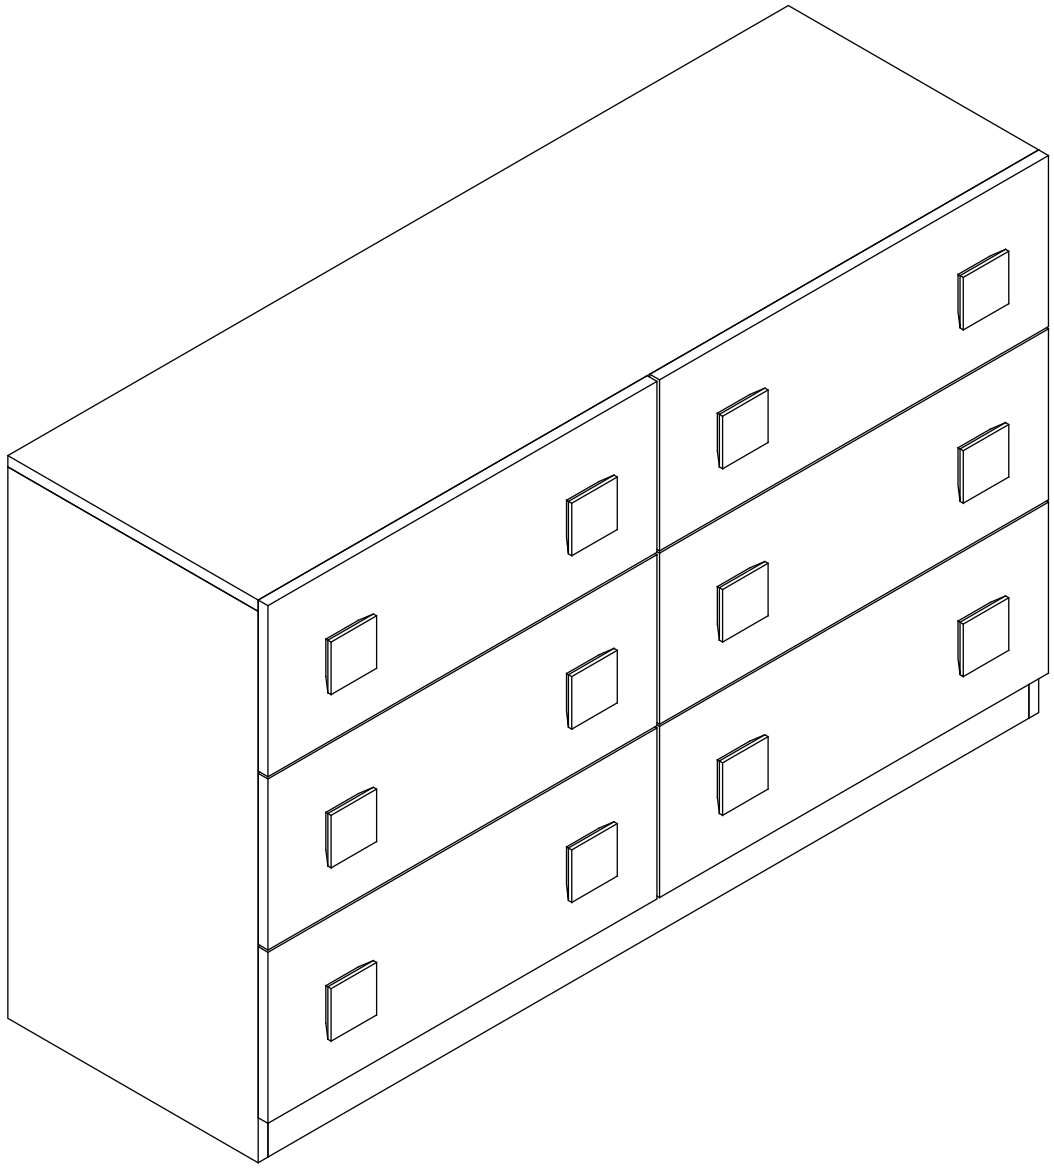


Parts Description

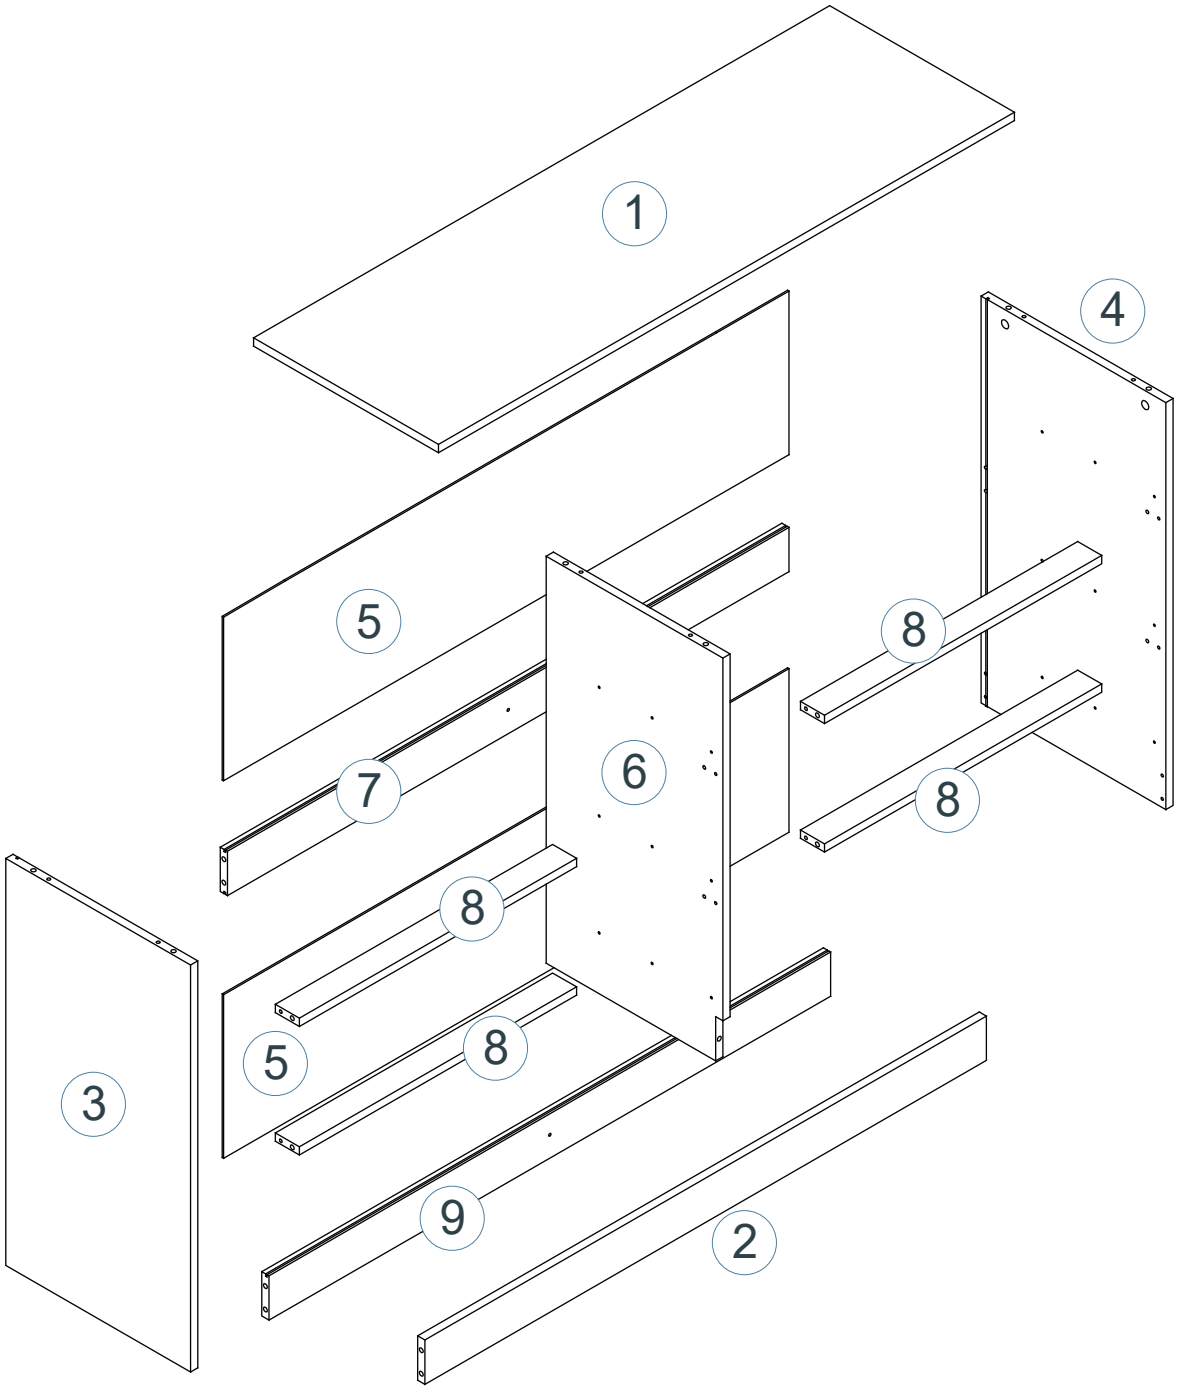


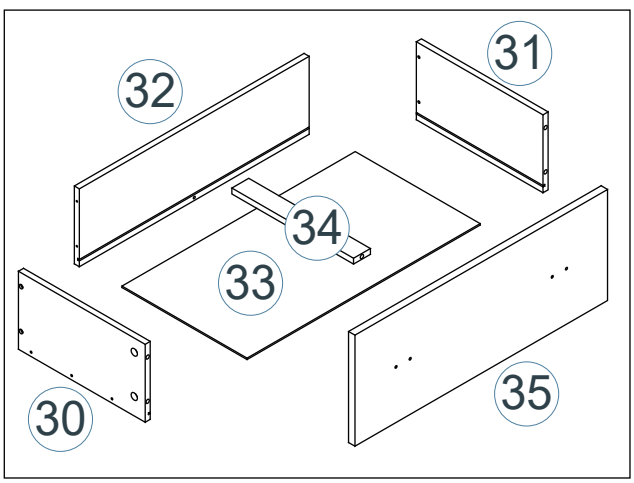


x3

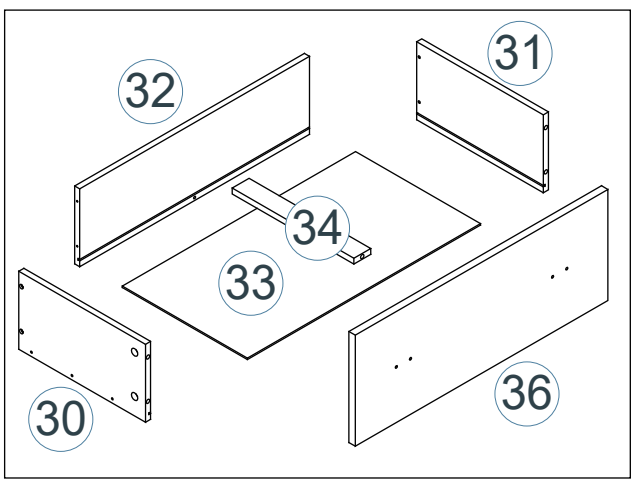


x3

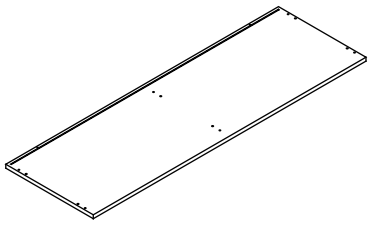


1

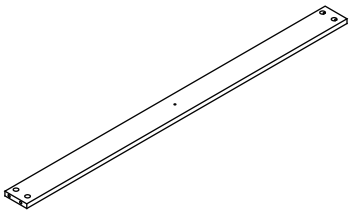


2

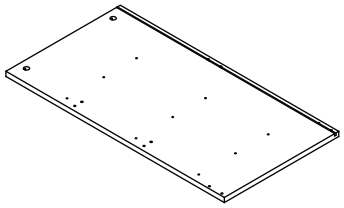


3

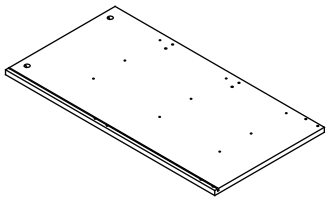


4

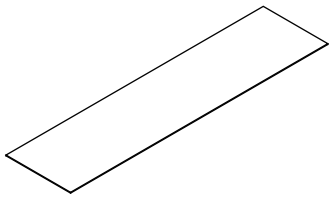


5 x2

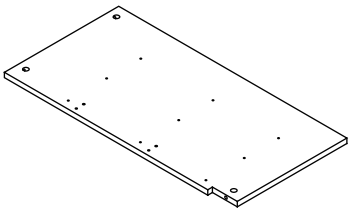


6

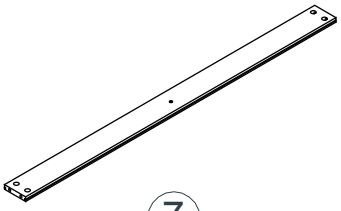


7

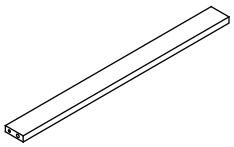


8 x4

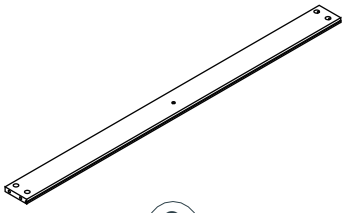


9

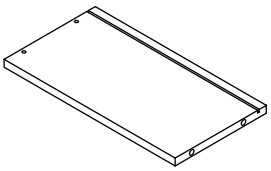


30 x6

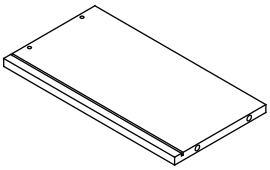


31 x6

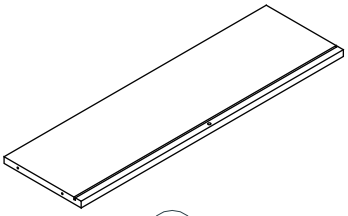


32 x6

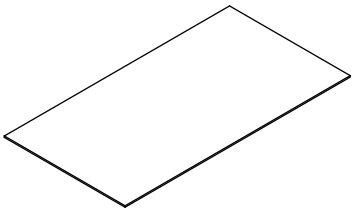


33 x6

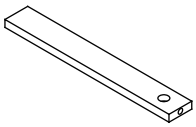














34 x6





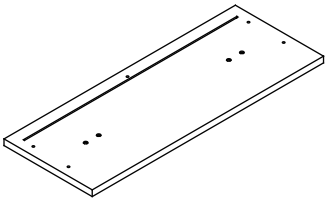


35 x3

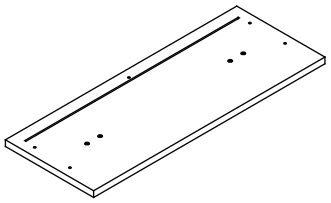

36 x3

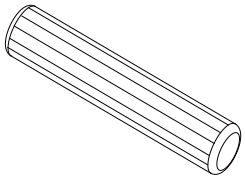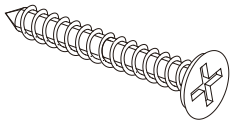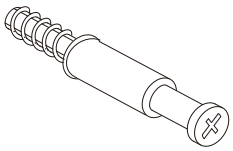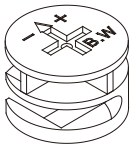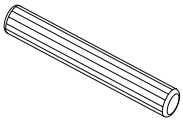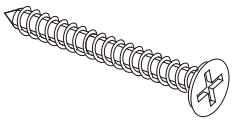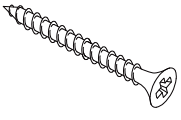A  6 X 30mm Dowel 10pcs	B  4 x 30mm Screw 54pcs	C  Bolt 57pcs
D  Locking Nut 57pcs	E  3 x 12mm Screw 72pcs	F  Plastic Glide 6pcs
G  Wedge 8pcs	H  3 x 16mm Screw 8pcs	I  Handle 12pcs
J  6 x 50mm Long Dowel 2pcs	K  4 x 35mm Long Screw 2pcs	V  safety strap 2pcs
W  4 x 14mm Screw 2pcs	X  Wall Anchor 2pcs	Y  Wall Screw 2pcs

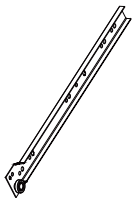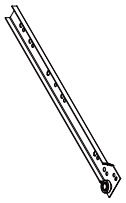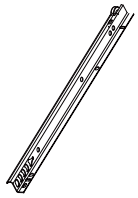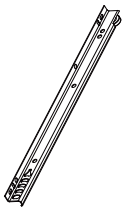Z  Washer 4pcs	CL  300mm Slide Rail 6pcs	CR  300mm Slide Rail 6pcs
DL  300mm Slide Rail 6pcs	DR  300mm Slide Rail 6pcs	



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock




CAM BOLT




CAM LOCK


Cam Bolt


Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

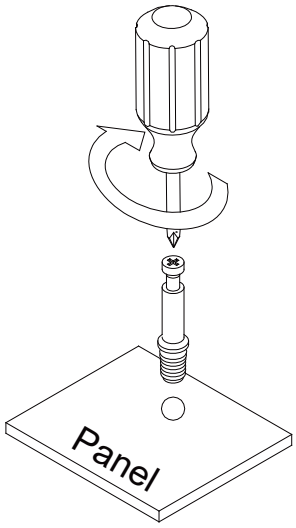

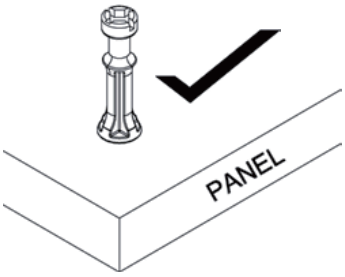


Shoulder is flushed (on the same level) with the panel.

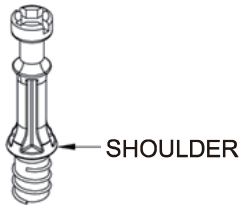


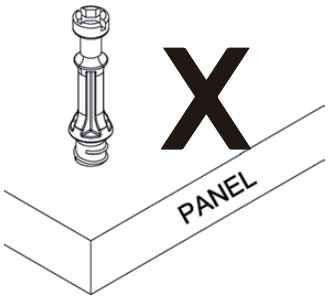

Shoulder is above the panel.

CAM-LOCK
Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock.

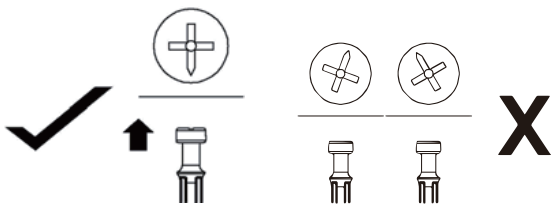


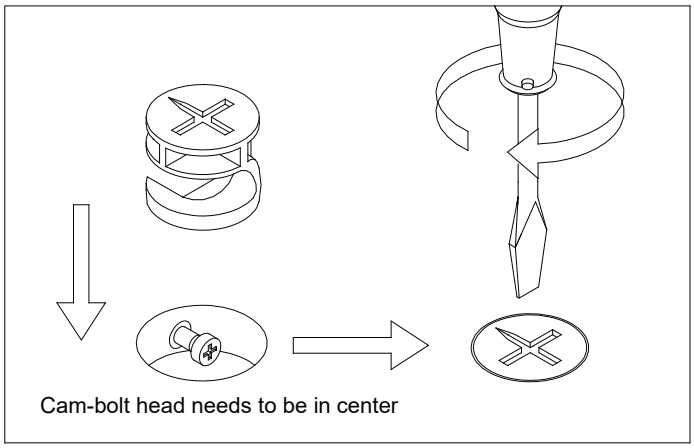

Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

Step 1

Hardware Needed		
E		X18
CL		X3
CR		X3

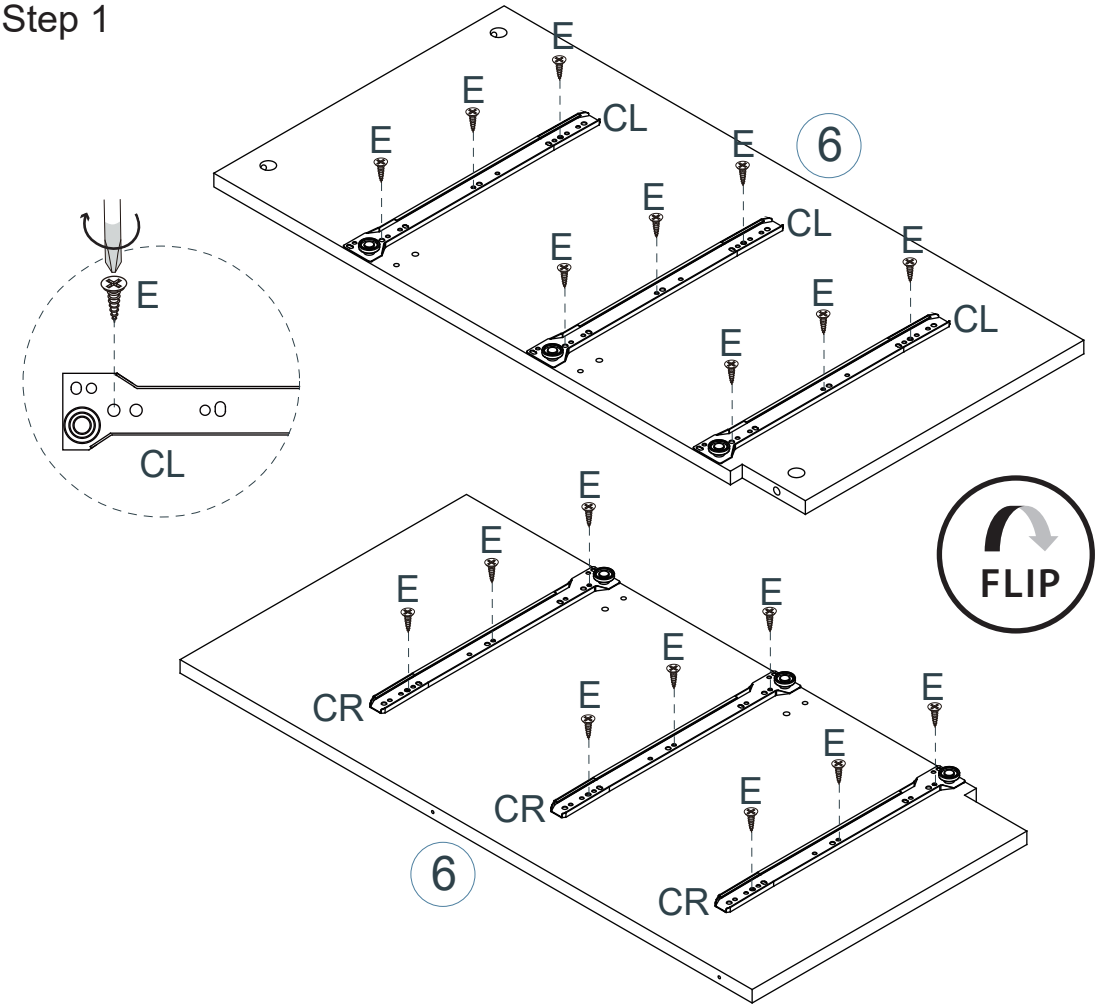


Step 2

Hardware Needed		
C		X4


Step 3

Hardware Needed		
C		X1

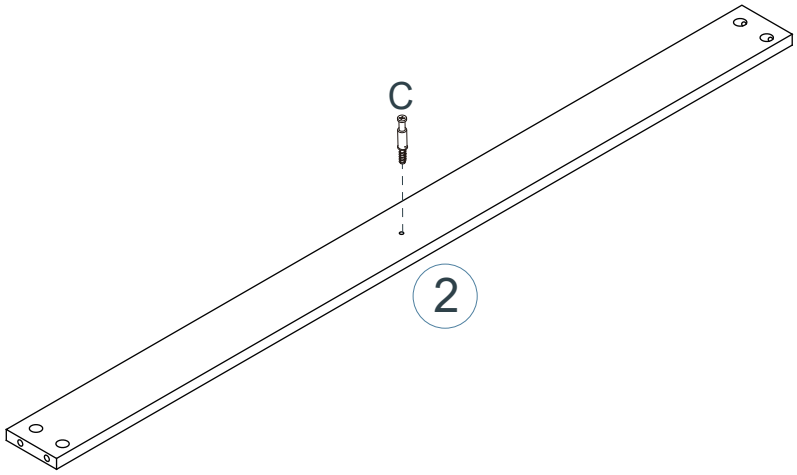


Step 4

Hardware Needed		
D		X1

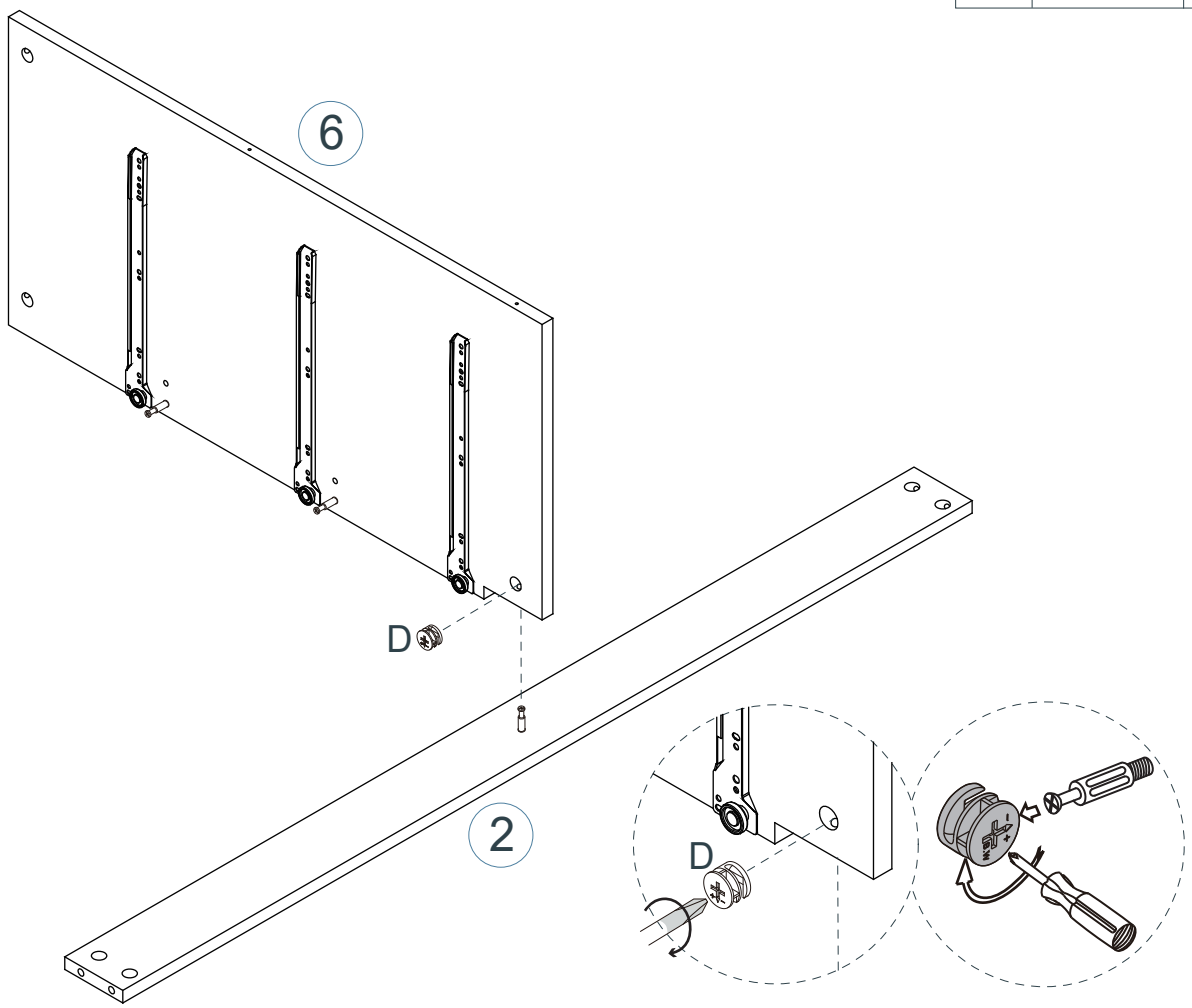


Step 5

Hardware Needed		
J		X2
D		X4

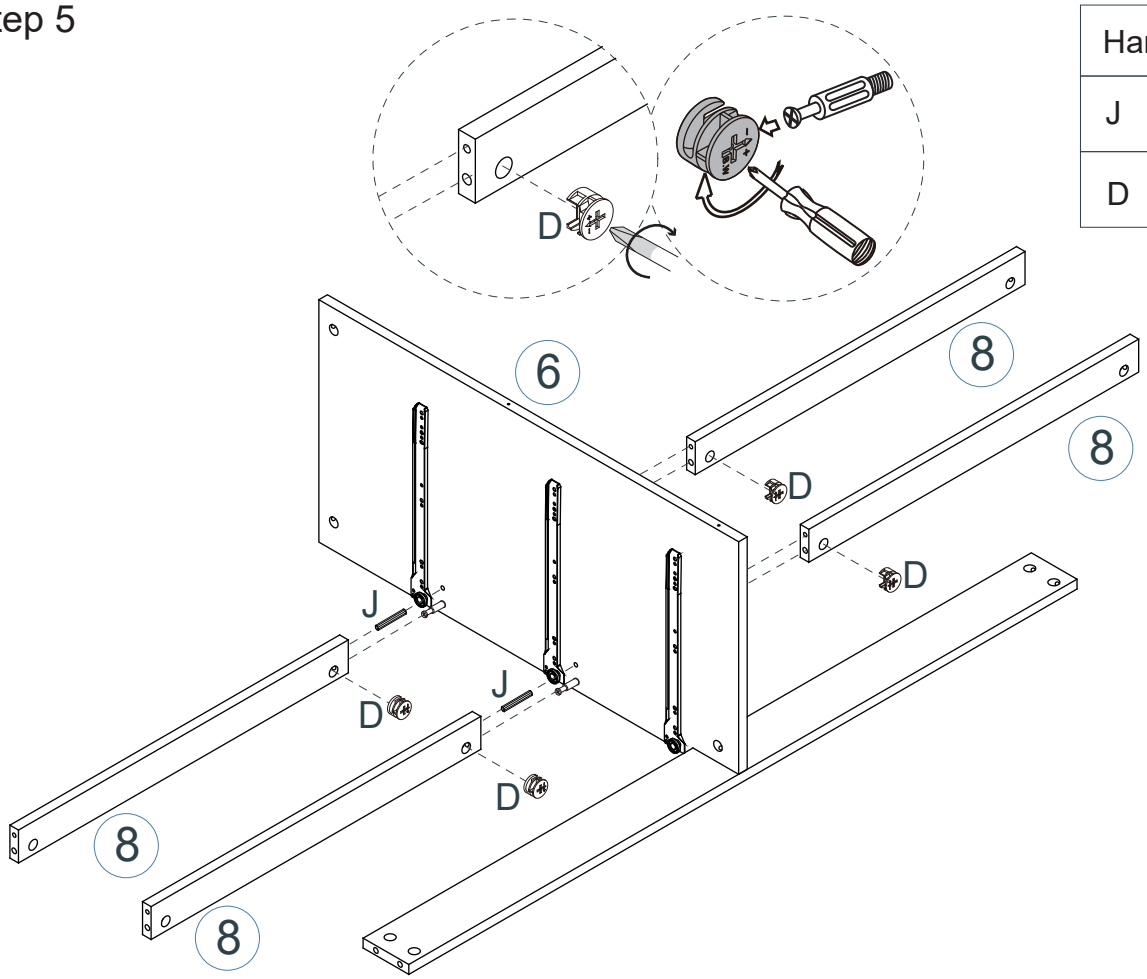


Step 6

Hardware Needed		
E		X18
CL		X3
CR		X3

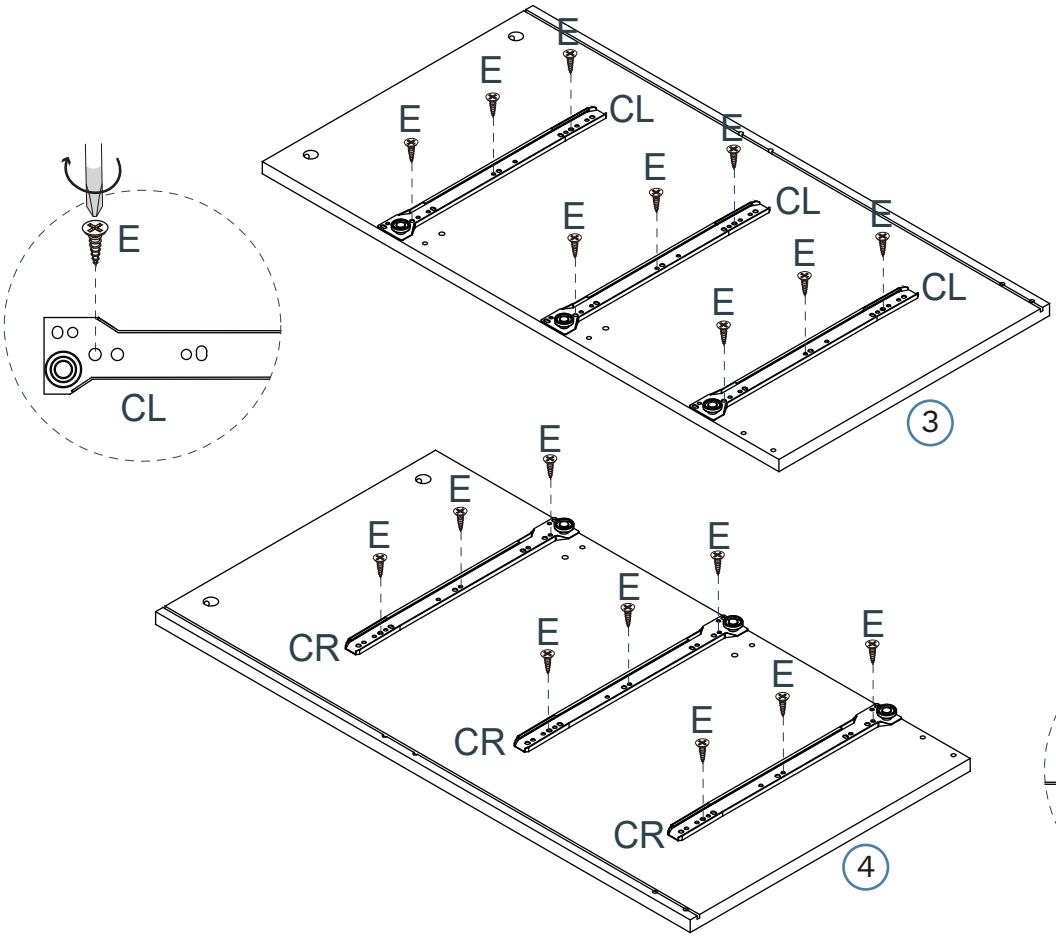

Step 7

Hardware Needed		
C		X16

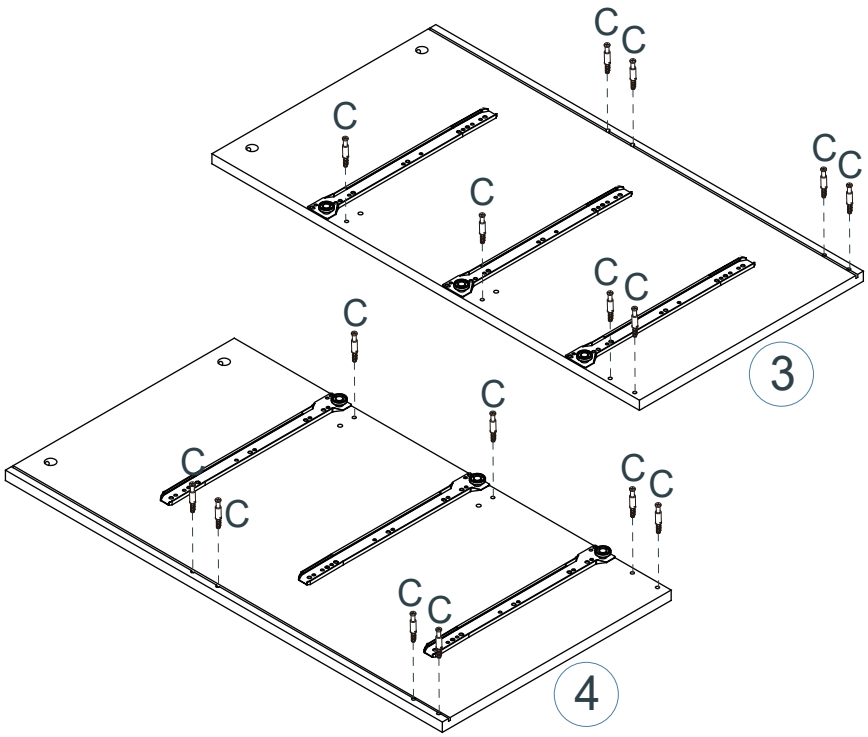

Step 8


Hardware Needed		
A		X2
D		X4

Step 9


Hardware Needed		
D		X4

Step 10

Hardware Needed		
K		X2

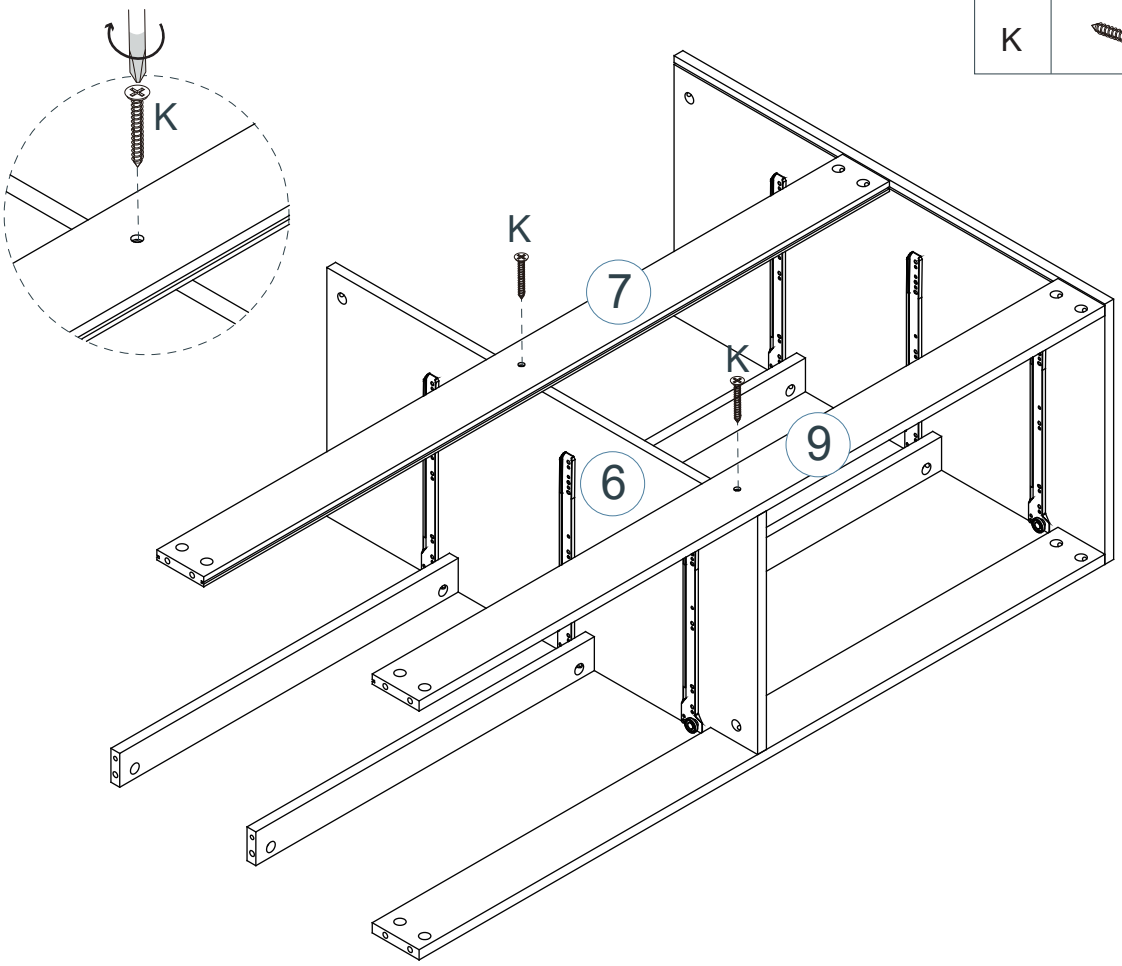



Step 11

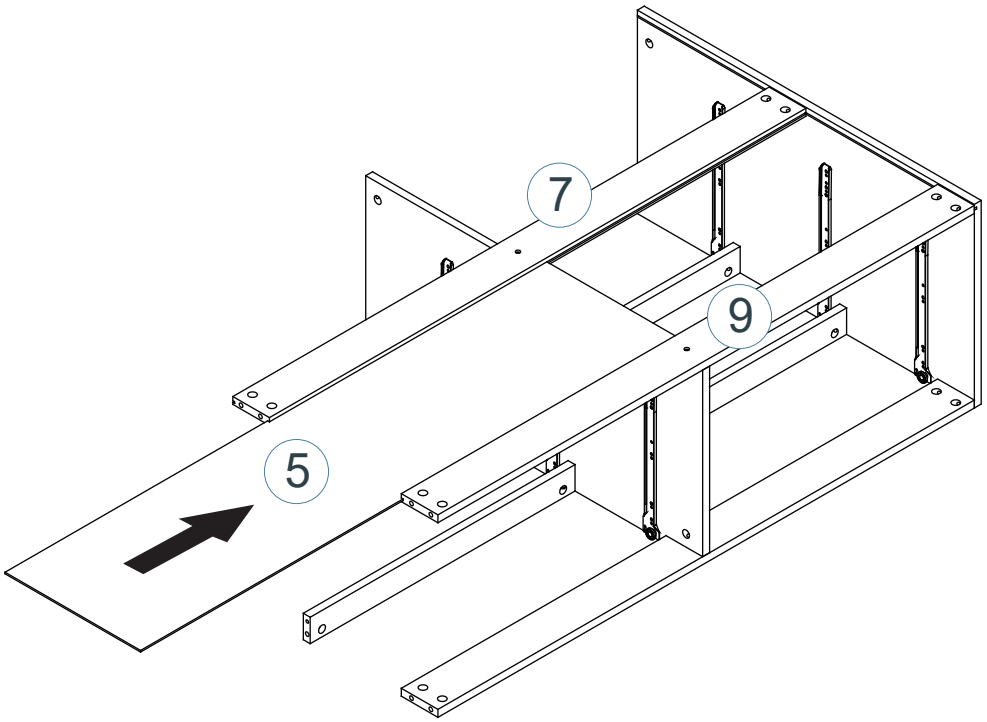

Step 12

Hardware Needed		
A		X2
D		X8

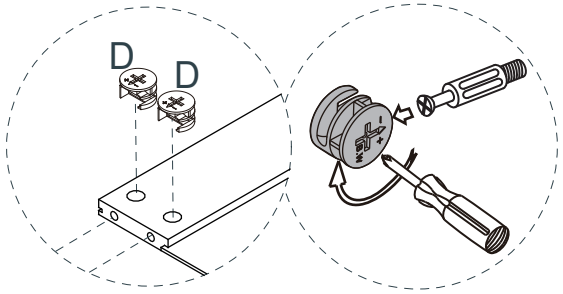


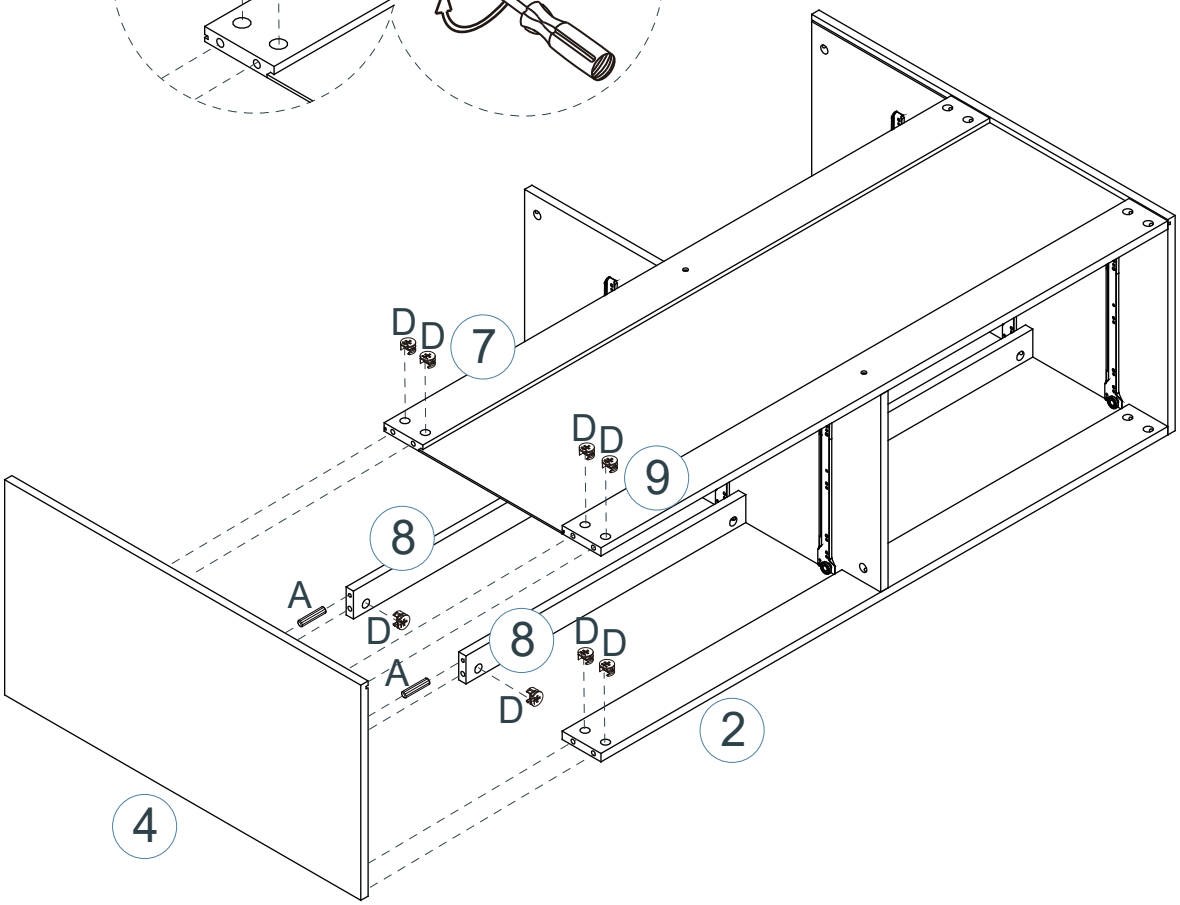

Step 13


Hardware Needed		
F		X6

Step 14

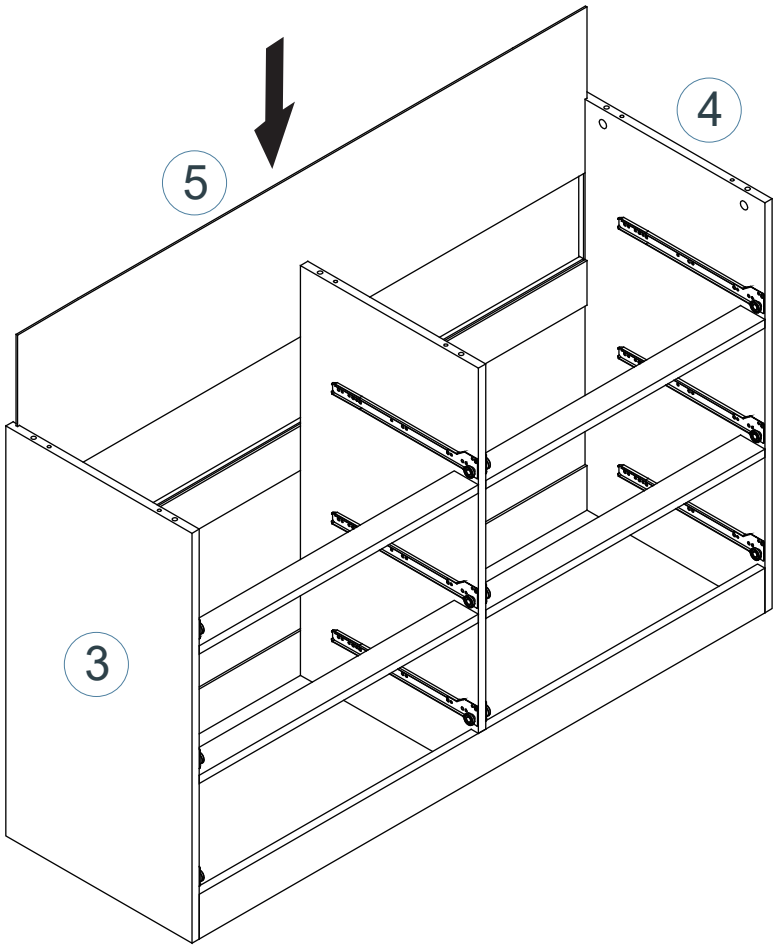


Step 15


Hardware Needed		
C		X6

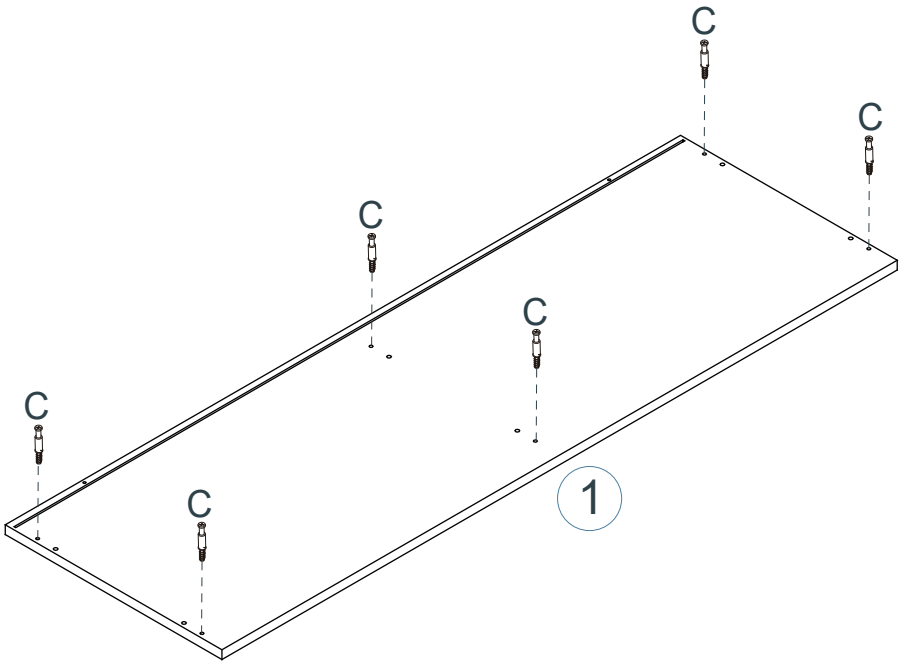

Step 16


Hardware Needed		
A		X6
D		X6

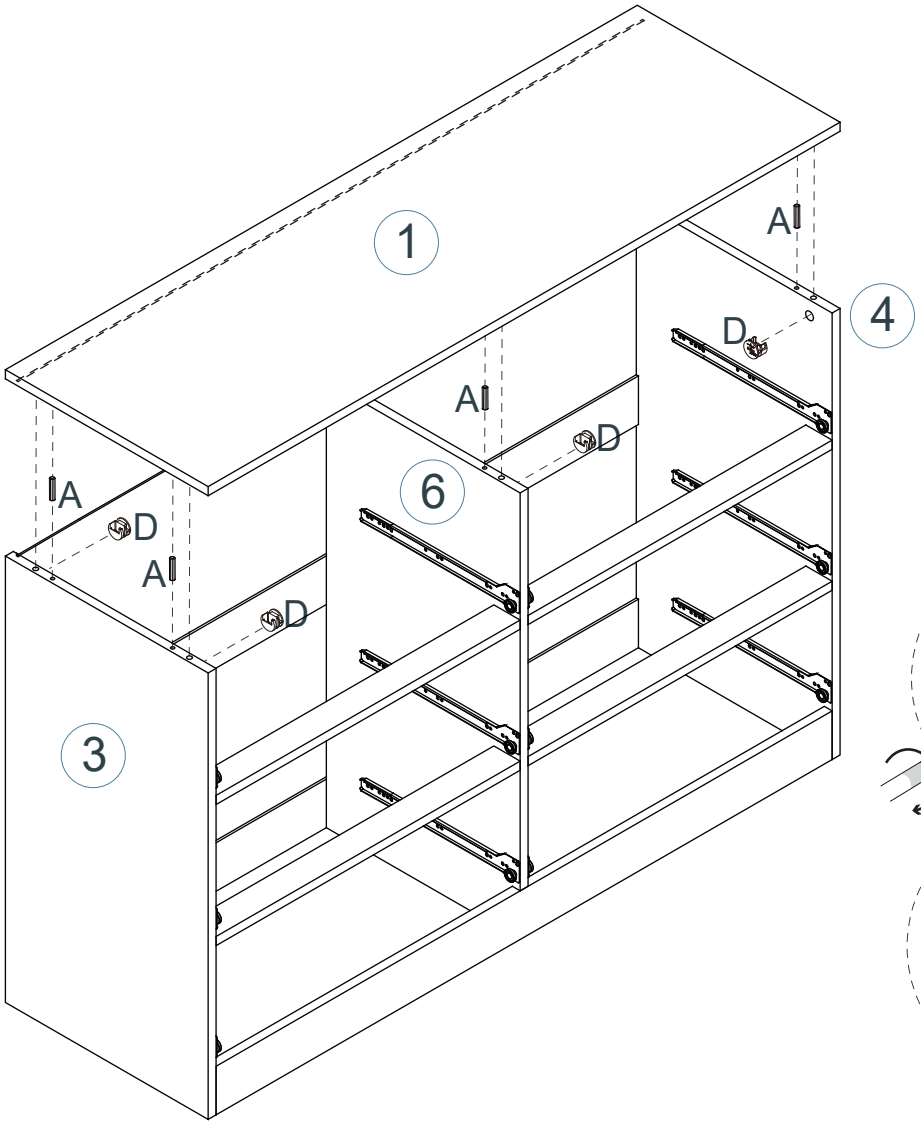

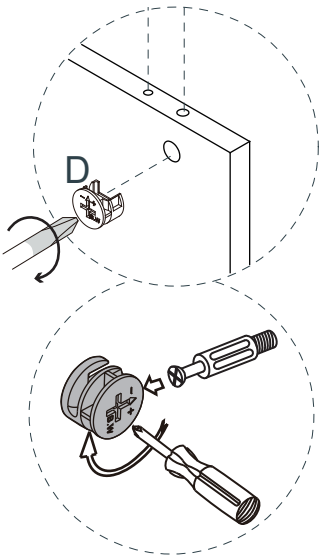

Step 17

Hardware Needed		
C		X30

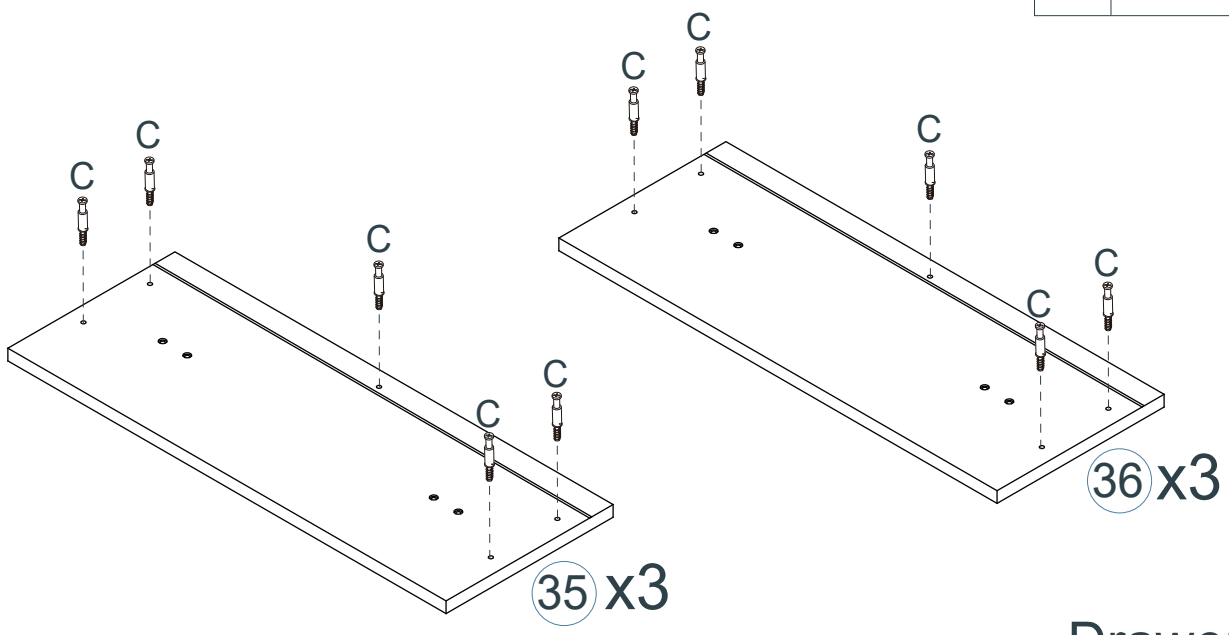


Drawer x6

Step 18

Hardware Needed		
D		X30

Drawer x6


Step 19

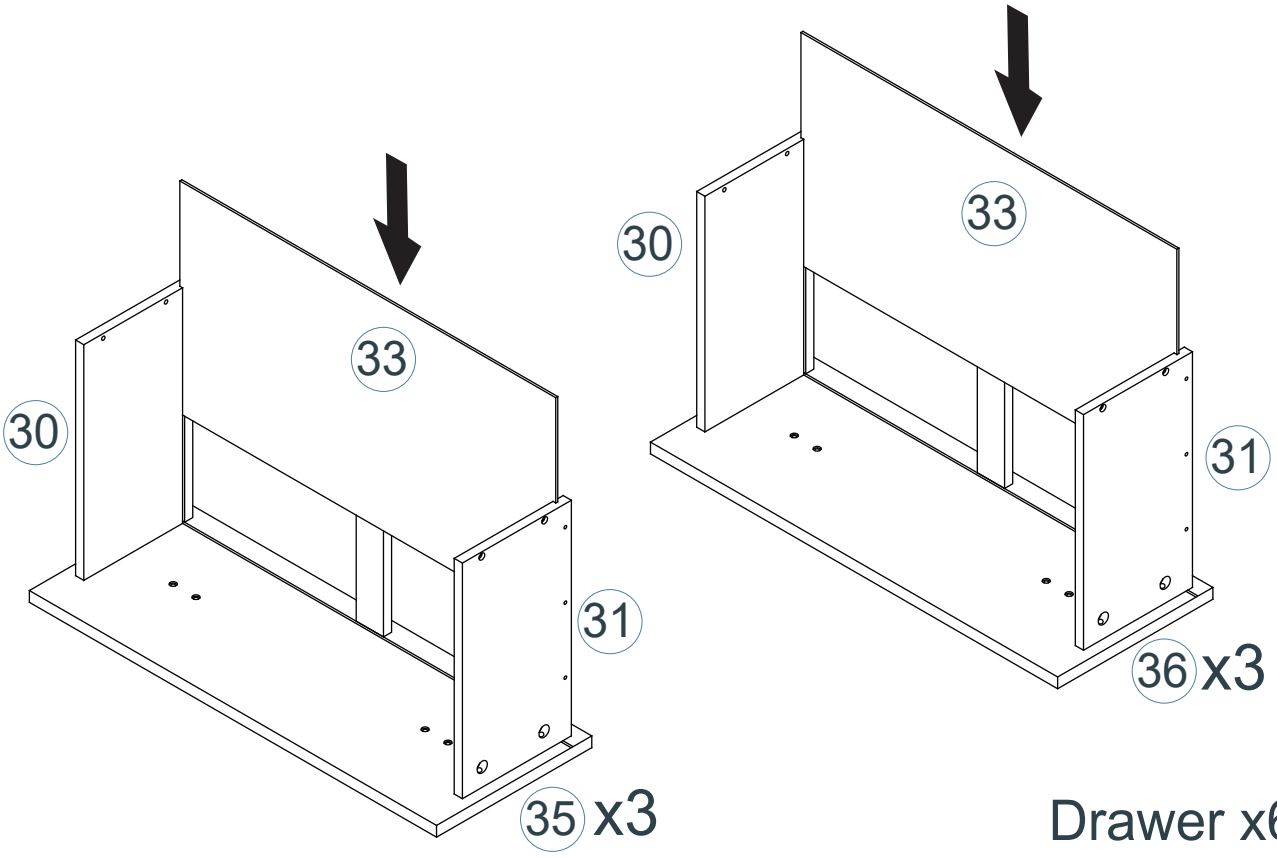

Drawer x6

Step 20


Hardware Needed		
B		X30

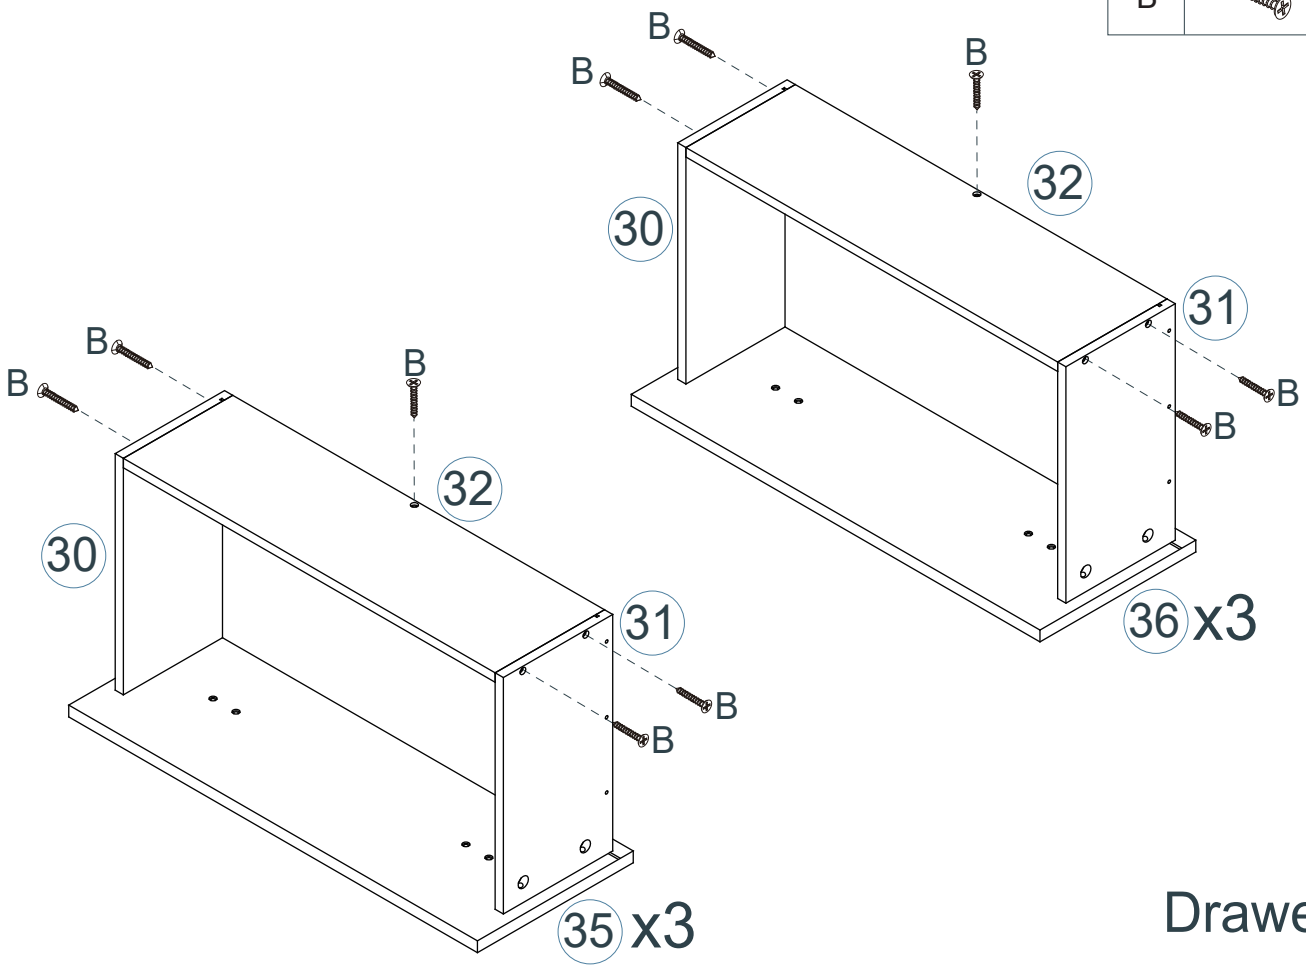


Drawer x6

Step 21

Hardware Needed		
E		X36
DL		X6
DR		X6

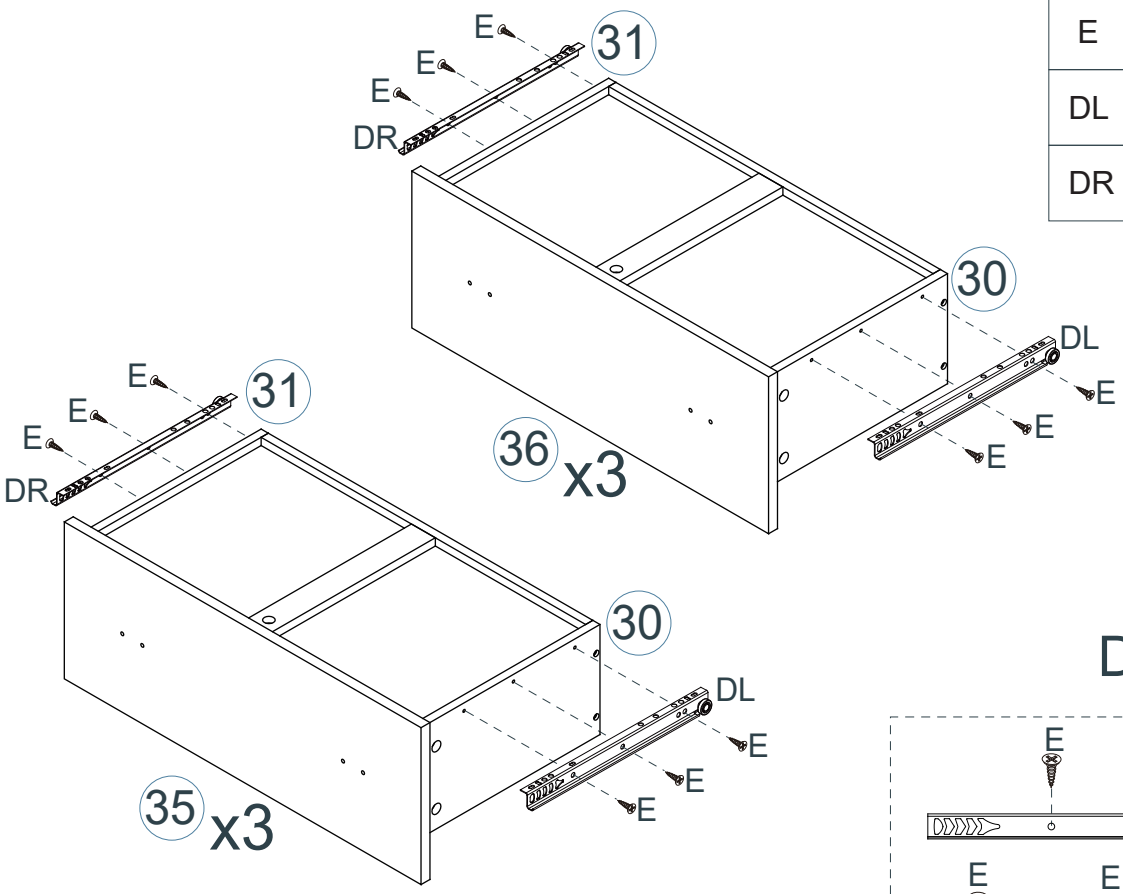


Drawer x6

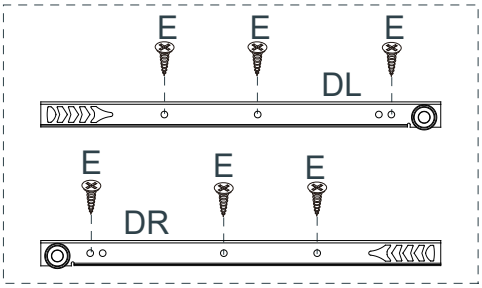


Step 22

Hardware Needed		
I		X12
B		X24

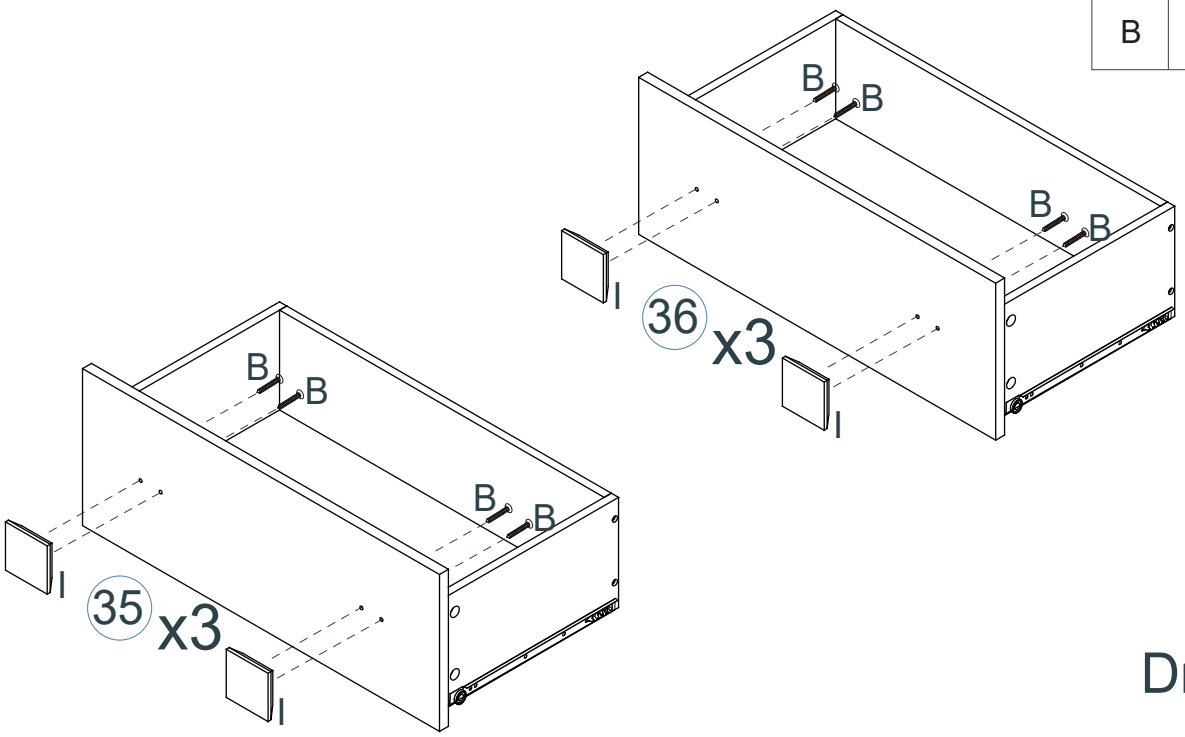


Drawer x6


Step 23

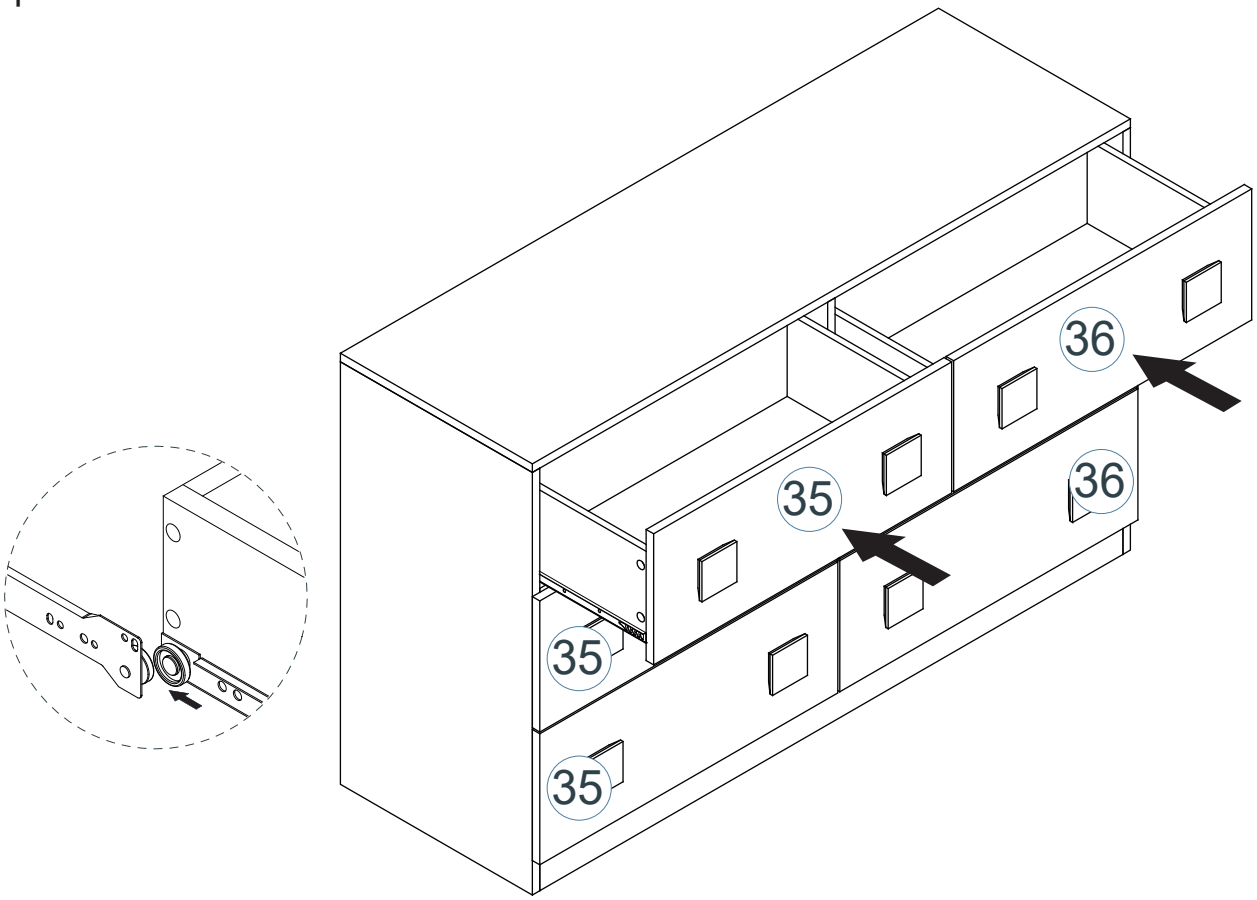

Step 24

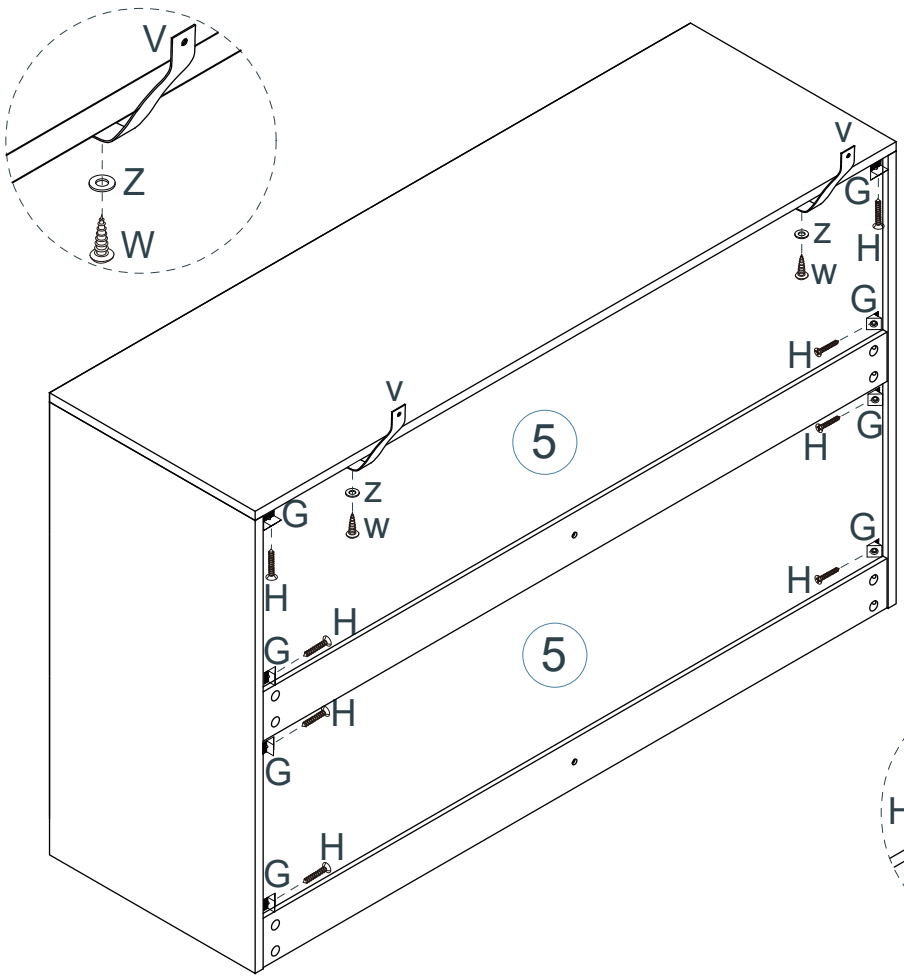

Hardware Needed		
G		X8
H		X8
V		X2
W		X2
Z		X2

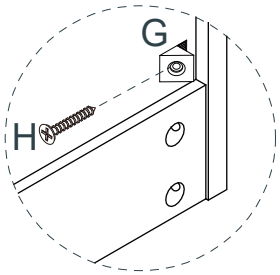



Step 25

1. Mark the drilling positions on the wall, drill holes, and insert the wall anchors (X).

2. Pass the screws (Y) through the safety straps (V) and washer (Z) and fasten the cabinet securely to the wall to prevent tipping.

Hardware Needed		
X		X2
Y		X2
Z		X2

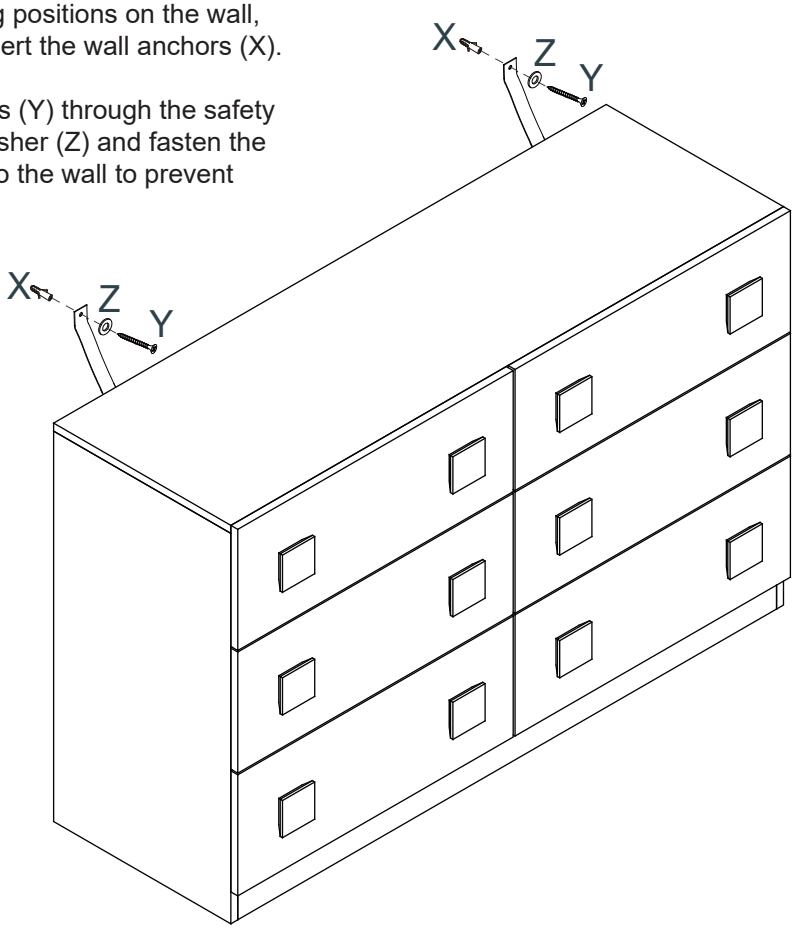

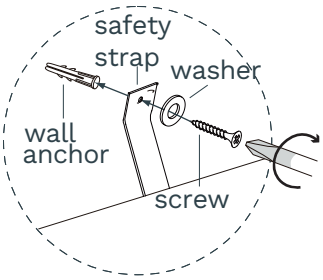

Step 26

