


**CHIC
HOUSE**

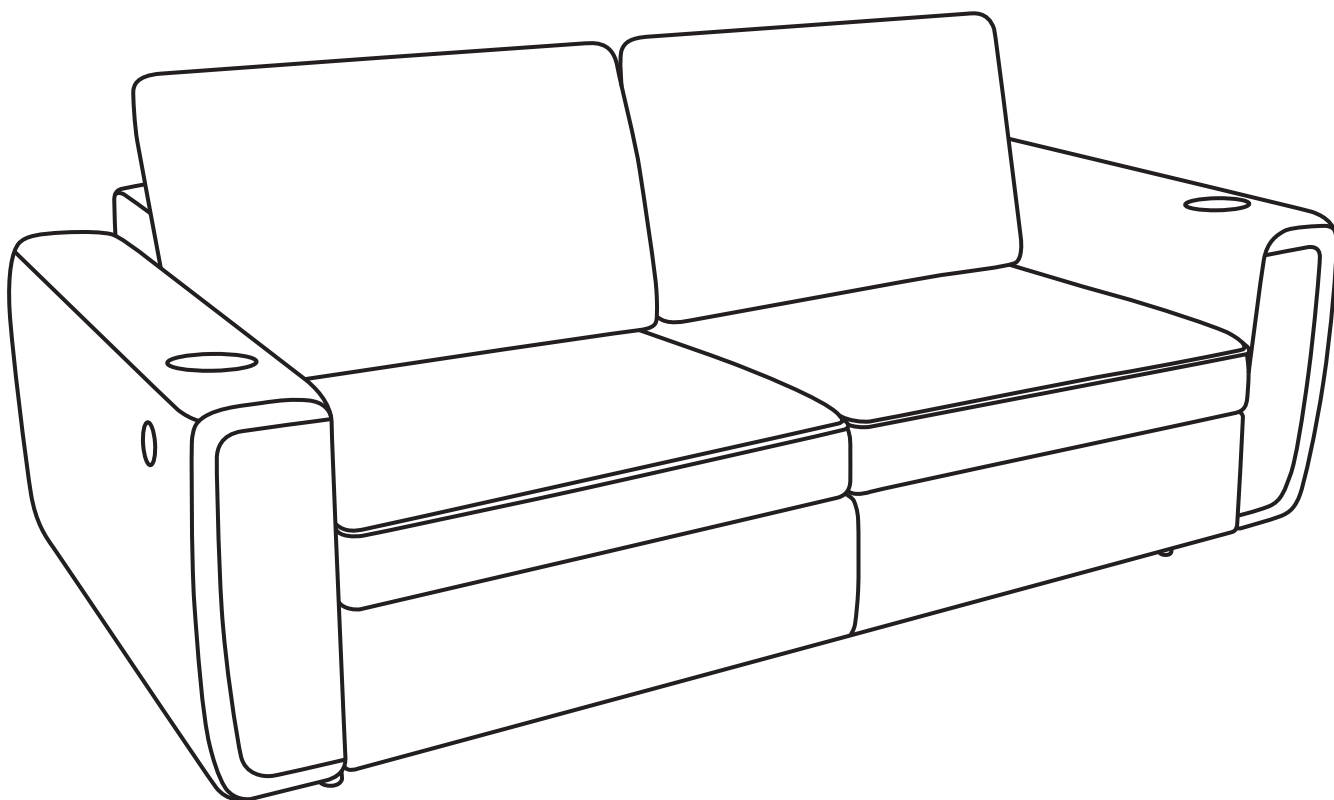






Lumi

Sofa Bed

Assembly Instructions - Please keep for future reference
Important - Please read these instructions before assembly
Customer Support - support@chichouse.cn

Components

Please check if all the pieces listed below are received.

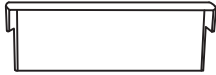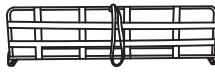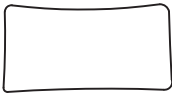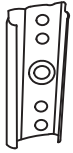
Package Accessories				
A  Left Armrest x1	B  Right Armrest x1	C  Backrest x1	D  Backrest Metal Frame x1	E  Metal Bed Frame x1
F  Soft Front Baffle x1	G  Seat Cushion x2	H  Back Cushion x2	I  Lumbar Pillow x2	J  6x50mm Screw x2
K  M5x55x105mm Allen Wrench x1	L  8x25mm Frame Connector Bolt x4	M  6x20mm Insert Screw Rod x20	N  18mm Gasket x4	O  Large Frame Locking Pin x8
P  Sofa Foot x4	Q  M4 T-shaped Wrench x1	R  16mm Gasket x2	S  Small Backrest Locking Pin x2	T  Tie x1
U  Plug x1				

Delivery Reminder: Multi-Package Shipment

This product comes in 3 separate packages, which may arrive at different times due to logistics.

If some parts haven't arrived yet, please be patient – they're still on the way.


Thank you for your understanding!

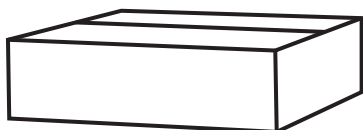

Assembly Instructions


CAUTION : Inappropriate installation of screws will cause damages to the product !

Step 1

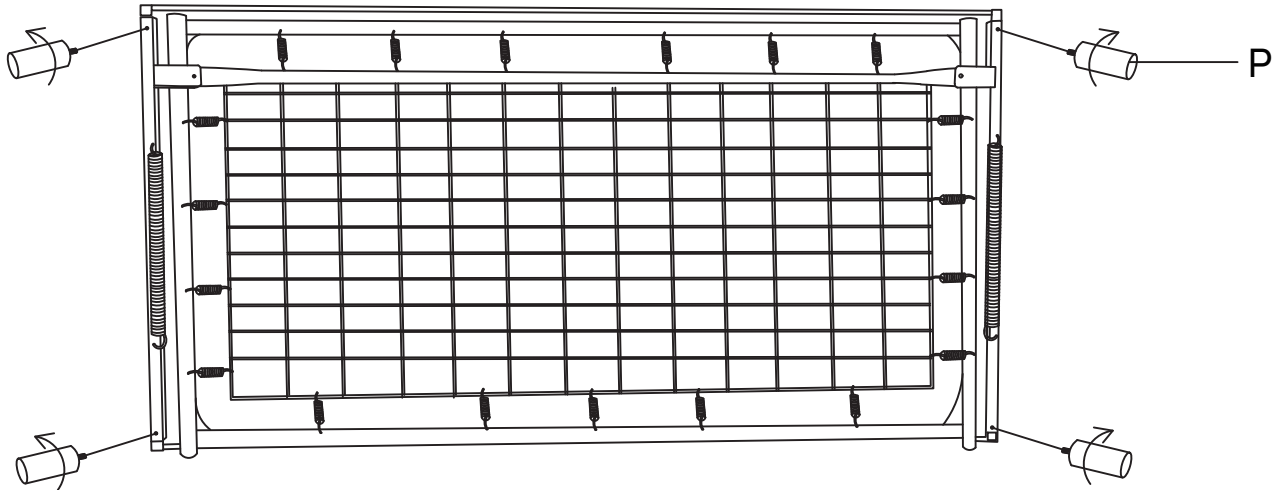

Remove the protective pads from the bolts, and install the sofa feet (P) onto the metal bed frame (E).

Step 2

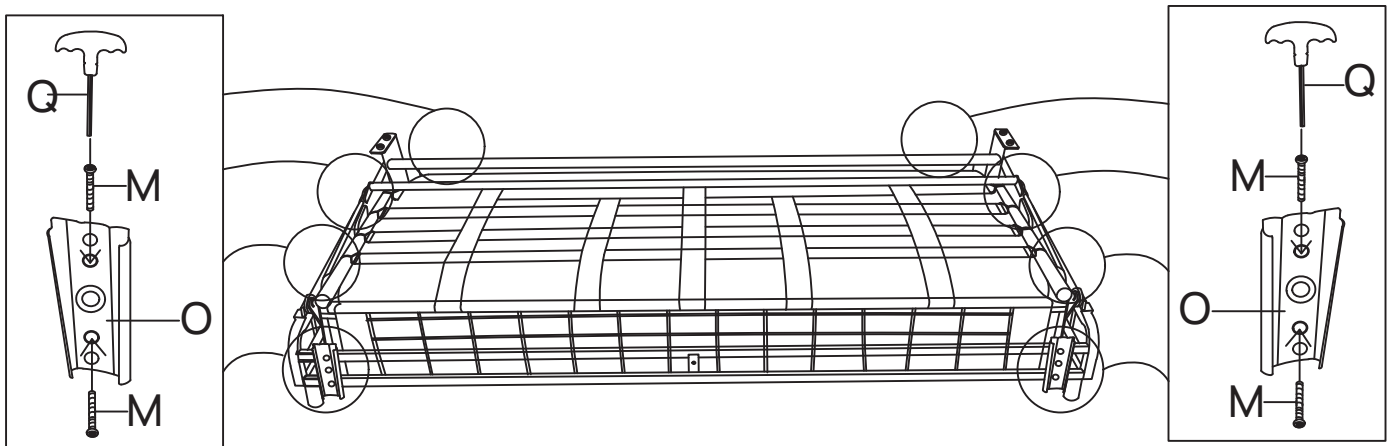


 *The locking pin goes wide end up, narrow end down.


Install eight Frame Locking Pins (O) around the perimeter of the Metal Bed Frame (E) with two on each side.

Then use the T-shaped Wrench (Q) to secure all eight Screw Rods (M) in place. Tighten the Locking pins to ensure proper installation.

Step 3



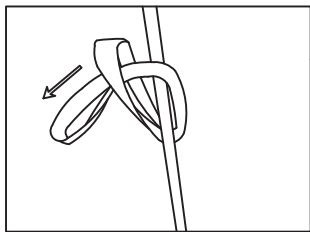


Thread the tie through the pole and then pull it tight.

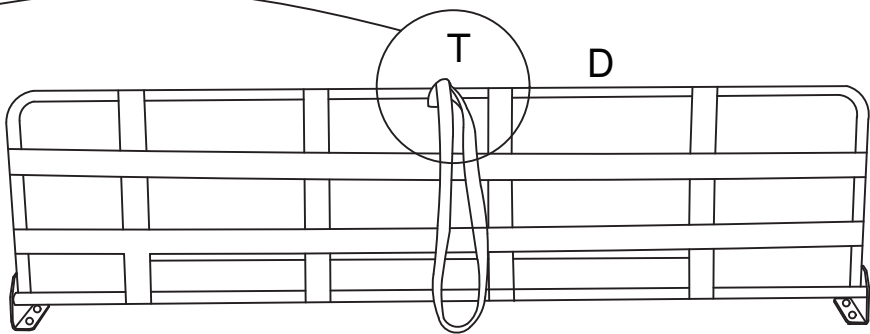


Secure the backrest tie(T).

Step 4

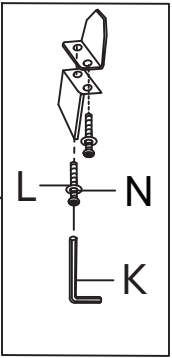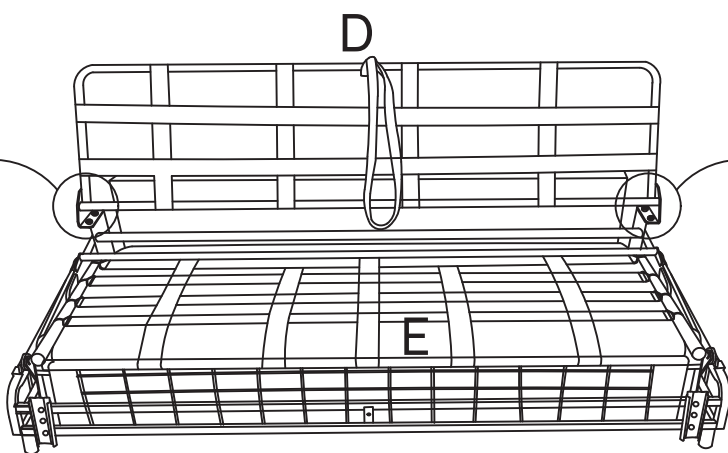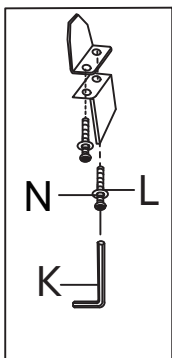

Attach the backrest hardware to the bed frame.

Step 5

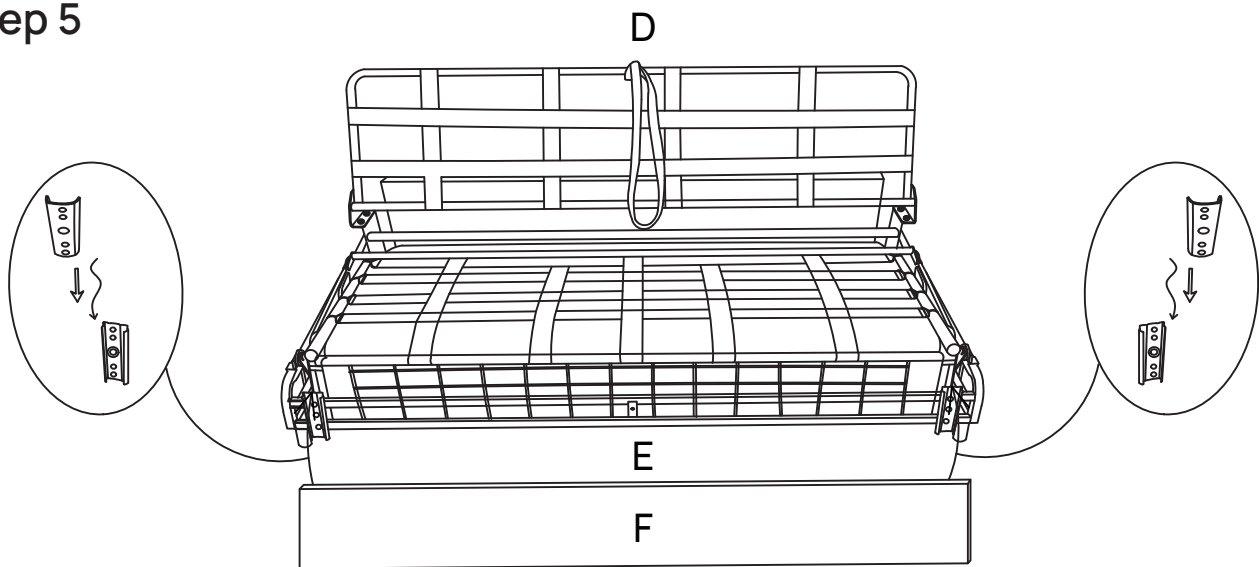


Install the soft front baffle (F) at the front of the metal bed frame.

Insert the pins on the Soft Front Baffle (F)


downward into the corresponding pins on the Metal Bed Frame (E), then press down to secure.

Step 6

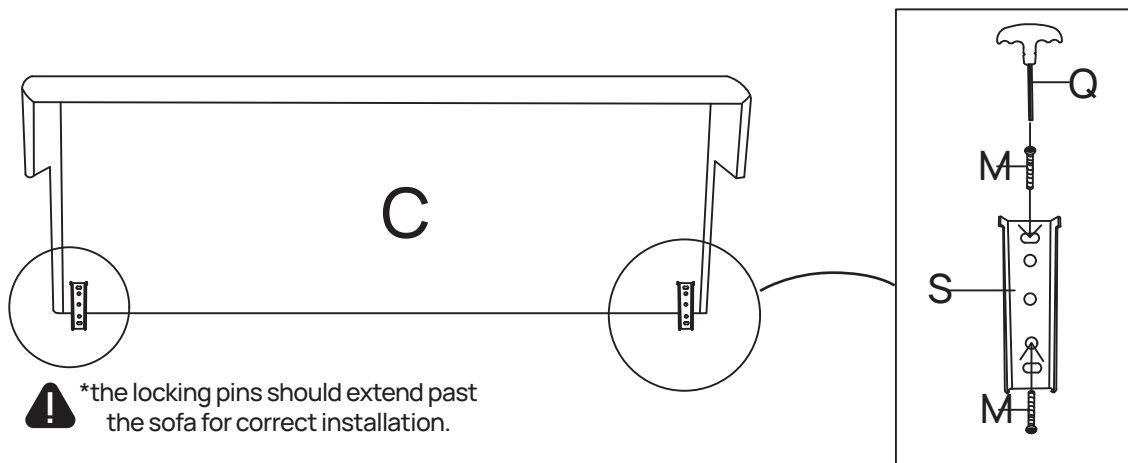


Install two small backrest locking pins (S) on the backrest (C), then use the T-shaped wrench (Q) to secure all four screw rods (M) in place.

Step 7

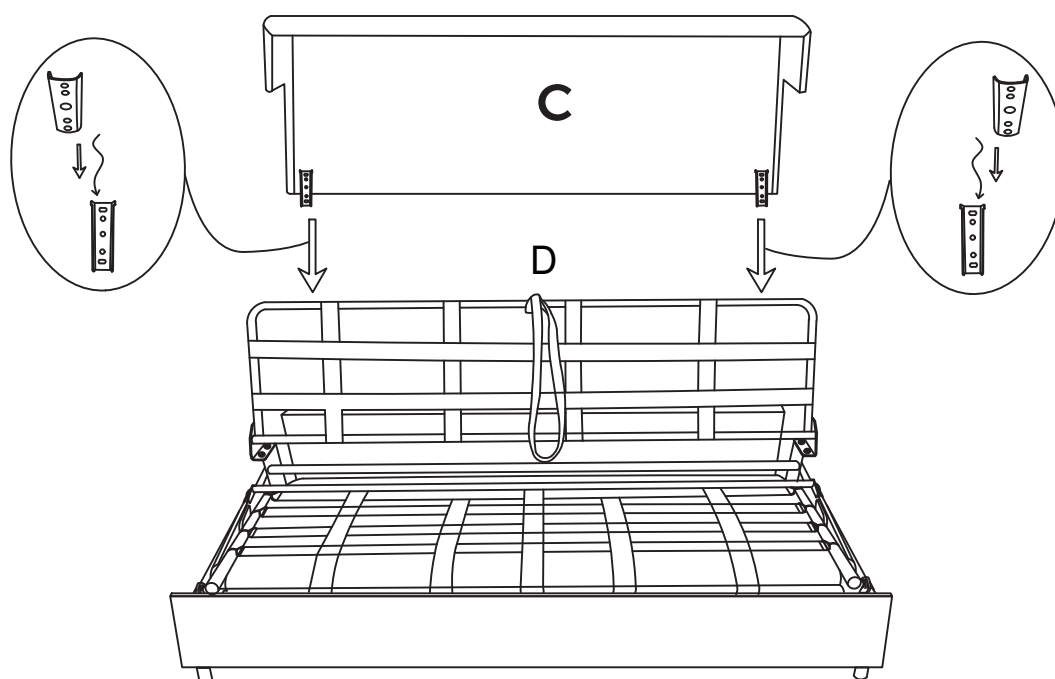


Slide the Backrest (C) into the Backrest Metal Frame (D).

Step 8

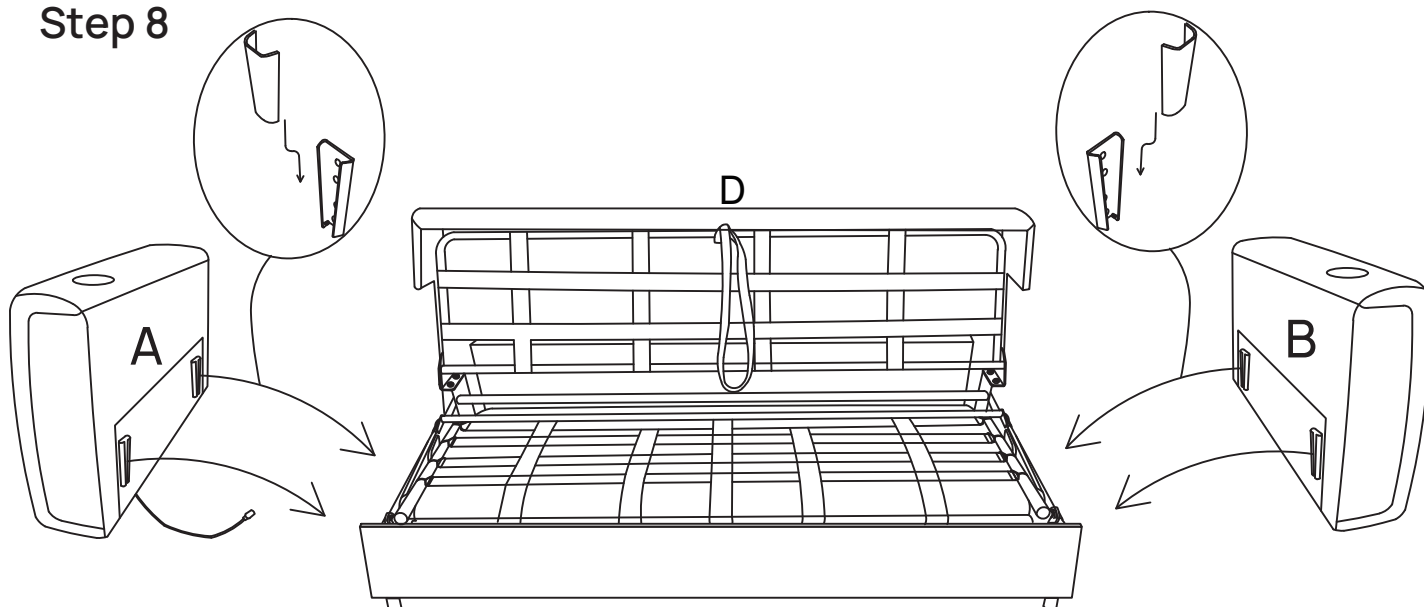


Attach the left (A) and right (B) armrests into their respective slots on the frame.

Step 9

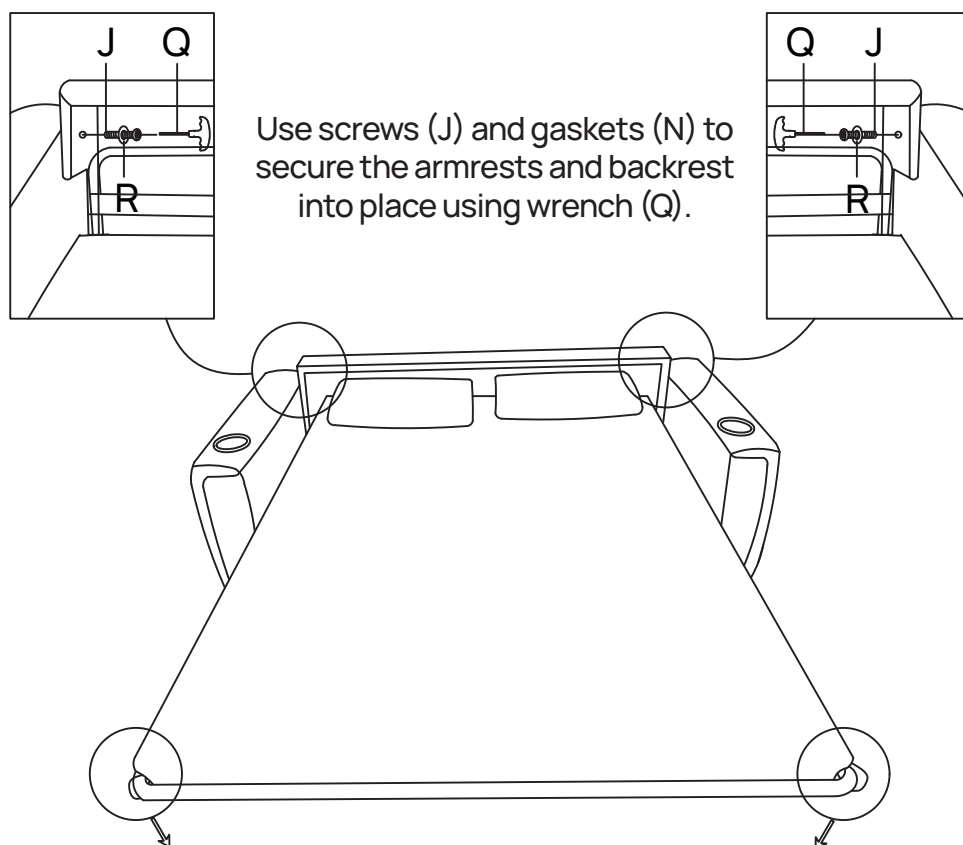

Secure the mattress by wrapping the ropes around all four corners several times to prevent shifting

Step 10

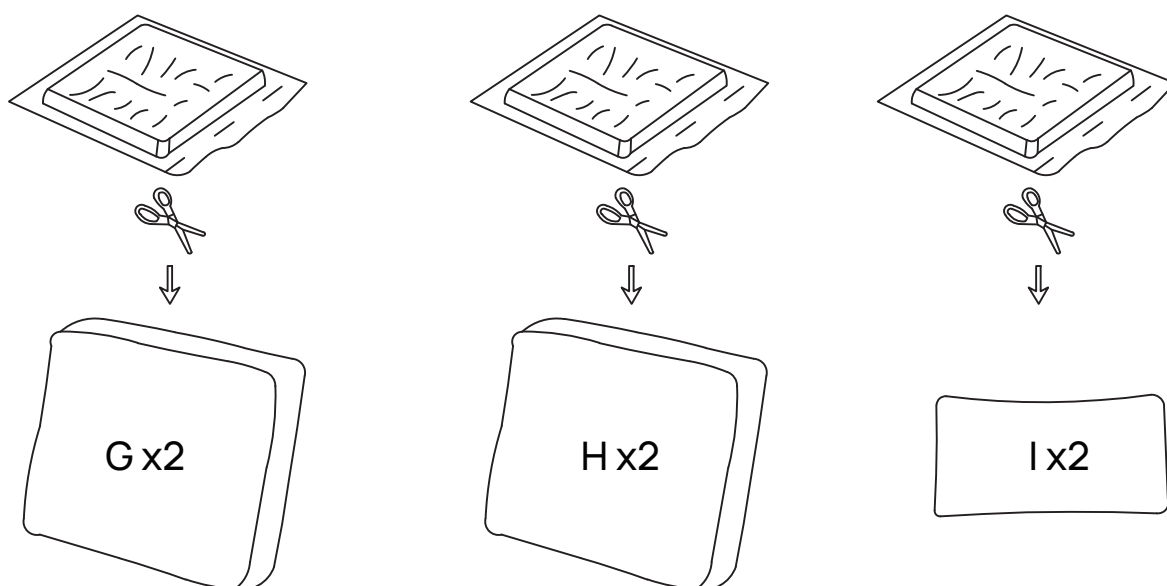


Cut open the vacuum-packaged seat cushions (G), back cushions (H), and lumbar pillows (I).



*Please note: The vacuum-compressed cushions typically require 24 to 72 hours to fully expand. You may gently pat them or place them in a well-ventilated area to help speed up the recovery process


Step 11

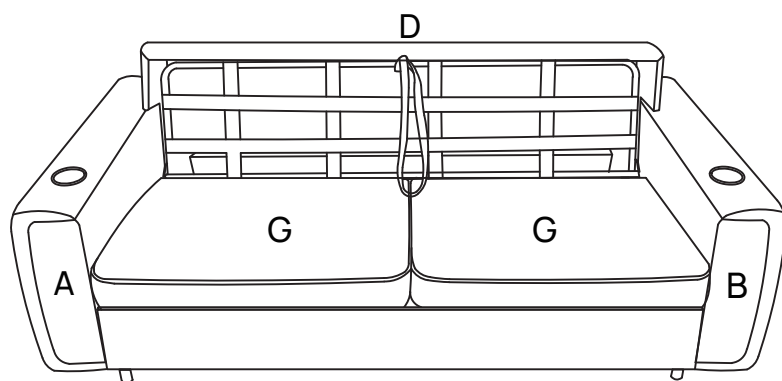

Tear off the protective strip covering the Velcro on the back side of each cushion. Wrap the Velcro around the rear metal rod of the bed frame and firmly press it onto the bottom of the cushion to secure it in place.

Position the seat cushions (G) upright in front of the Backrest Metal Frame (D).


Step 12

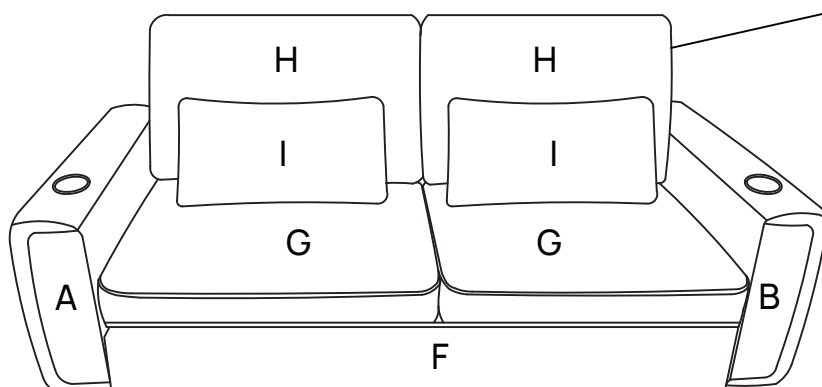

Hang the back cushions (H) onto the metal back frame (D) and zip from behind.


Place the lumbar pillows (I). Assembly is complete.

Step 13

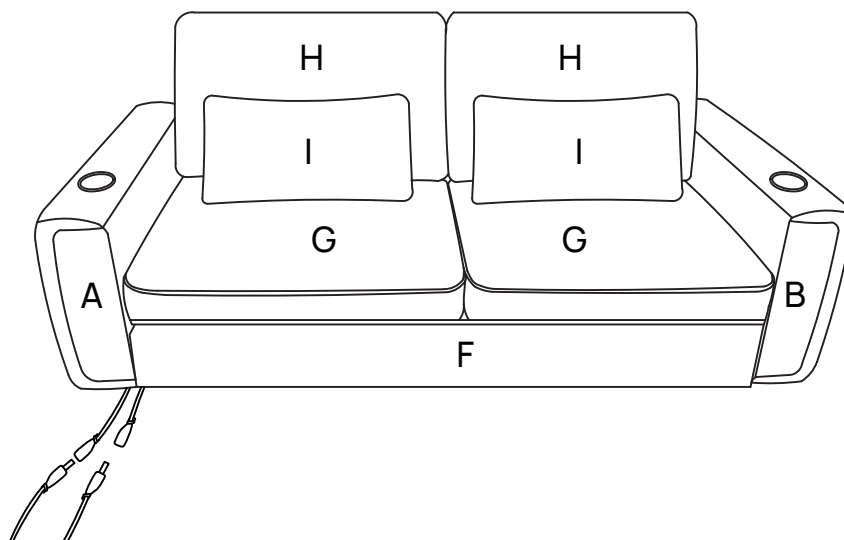

Connect the cable with the power plug (U) to the Y-shaped cable. Then, plug the ends of the Y-shaped cable into the cables on the sofa. You can now use the armrest charging function and control the LED strip.

Convert the Sofa into a Bed

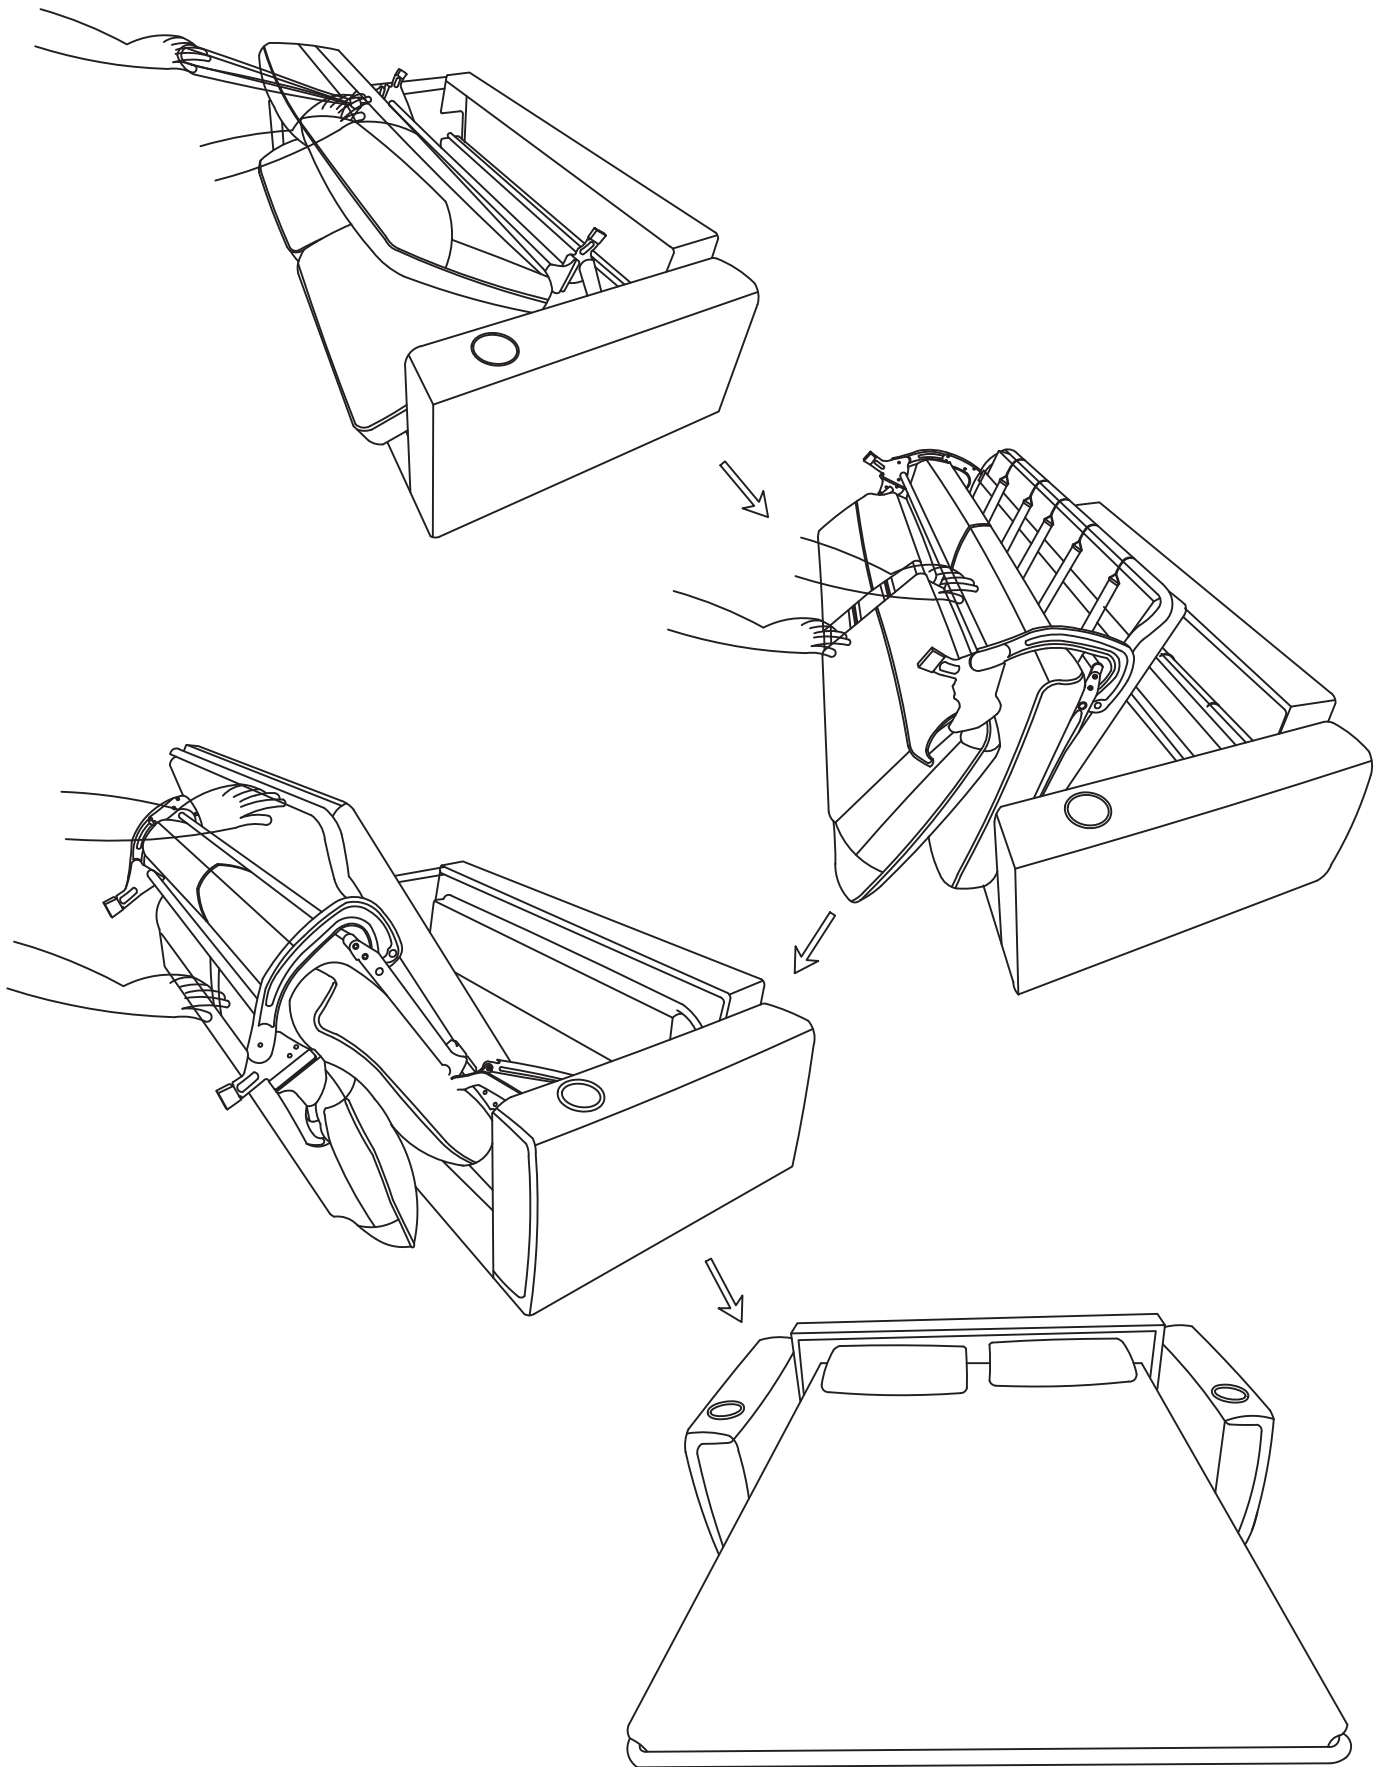

Just remove the lumbar pillows
and one pull the strap until the bed frame is fully extended