


ASSEMBLY INSTRUCTIONS

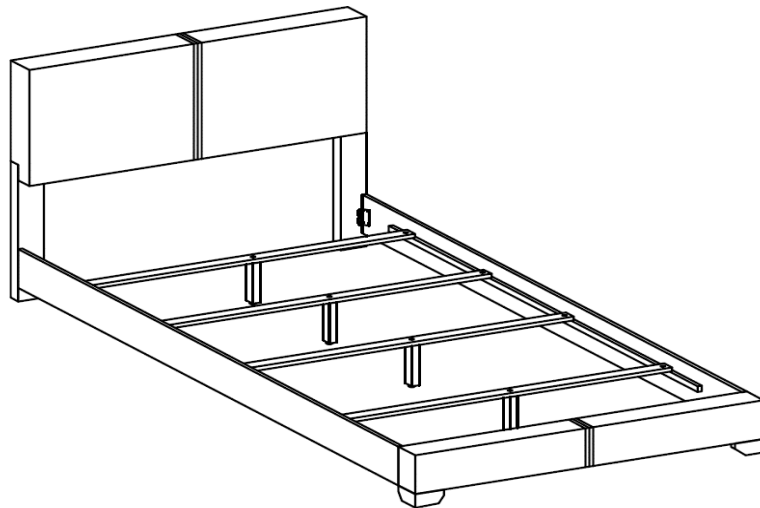

Fine Furniture for every stage of life

Twin Bed

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME

20 MINUTES





PARTS IDENTIFICATION




B1 (BOX 1)

A	HEADBOARD PANEL		1PC
B	LEFT HEADBOARD LEG		1PC

C	RIGHT HEADBOARD LEG		1PC
---	---------------------	---	-----




B2 (BOX 2)

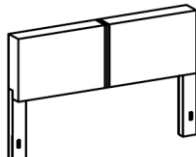D	BED SLAT		4PCS
E	BED SLAT SUPPORT WITH LEVELER		4PCS
F	BED RAIL		2PCS
G	LEFT FOOTBOARD LEG		1PC





H	RIGHT FOOTBOARD LEG		1PC
I	FOOTBOARD PANEL		1PC
HB	300260T (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 300260T (B1)

1	BOLT (JCBC M6 x 50mm - RBW)		6PCS	3	ALLEN WRENCH (M4 x 60mm - BLK)		1PC
2	LOCK WASHER (20mm - RBW)		6PCS				

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 300260T (B2)


4	FLAT HEAD SCREW (CSK M4 X 32mm - RBW)		8PCS	6	SMALL ALLEN WRENCH (M4 x 100mm - BLK)		1PC
5	BOLT (JCBC M6 X 40mm - RBW)		6PCS	7	BIG ALLEN WRENCH (M5 x 70mm - BLK)		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


STEP 1

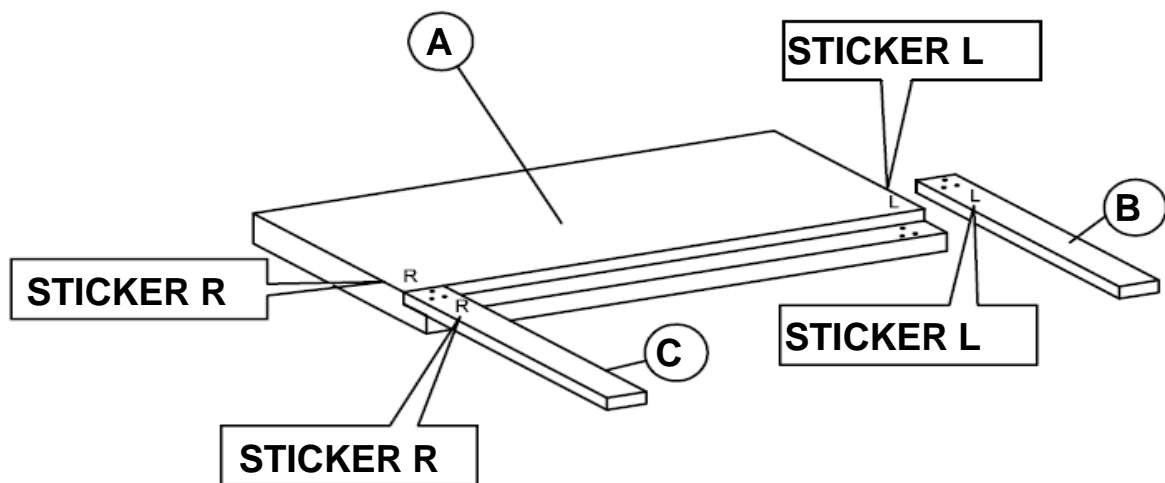

****BACK VIEW**

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS

STEP 2

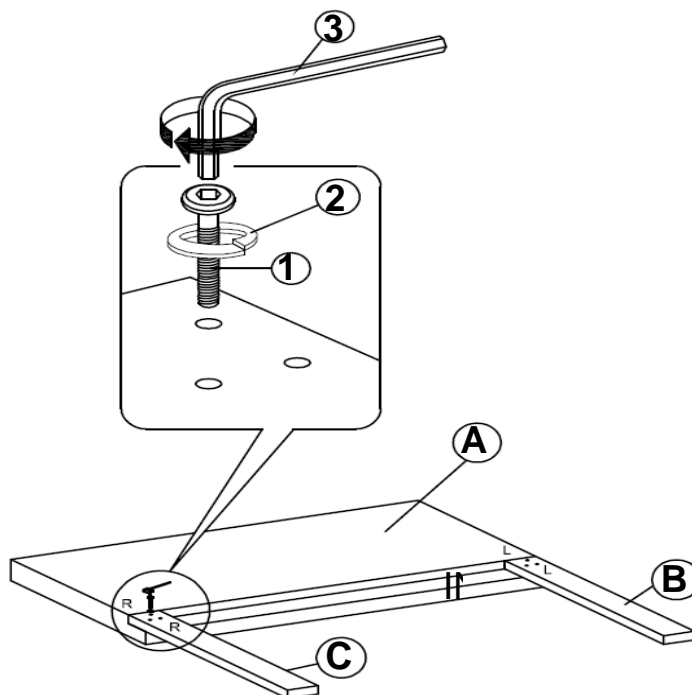


****BACK VIEW**


IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS

ASSEMBLY INSTRUCTIONS


STEP 3

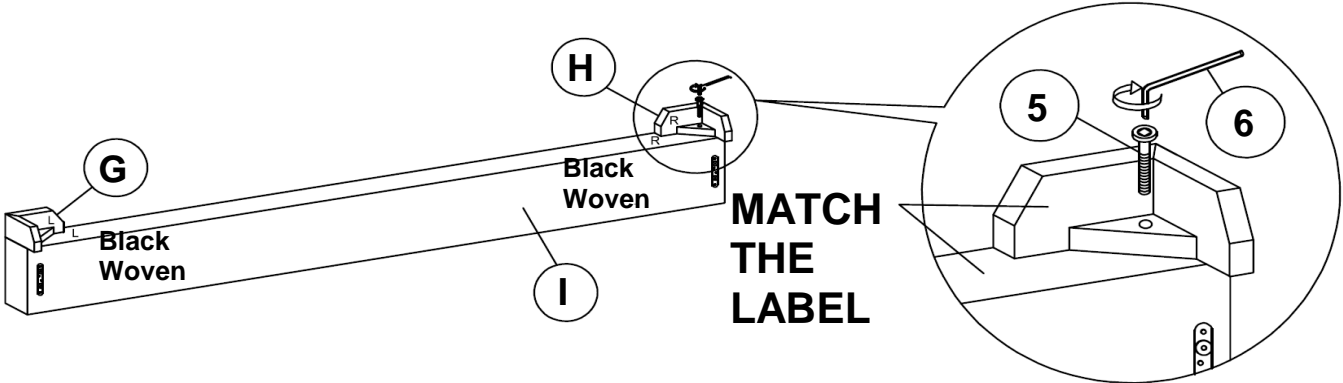

STEP 4

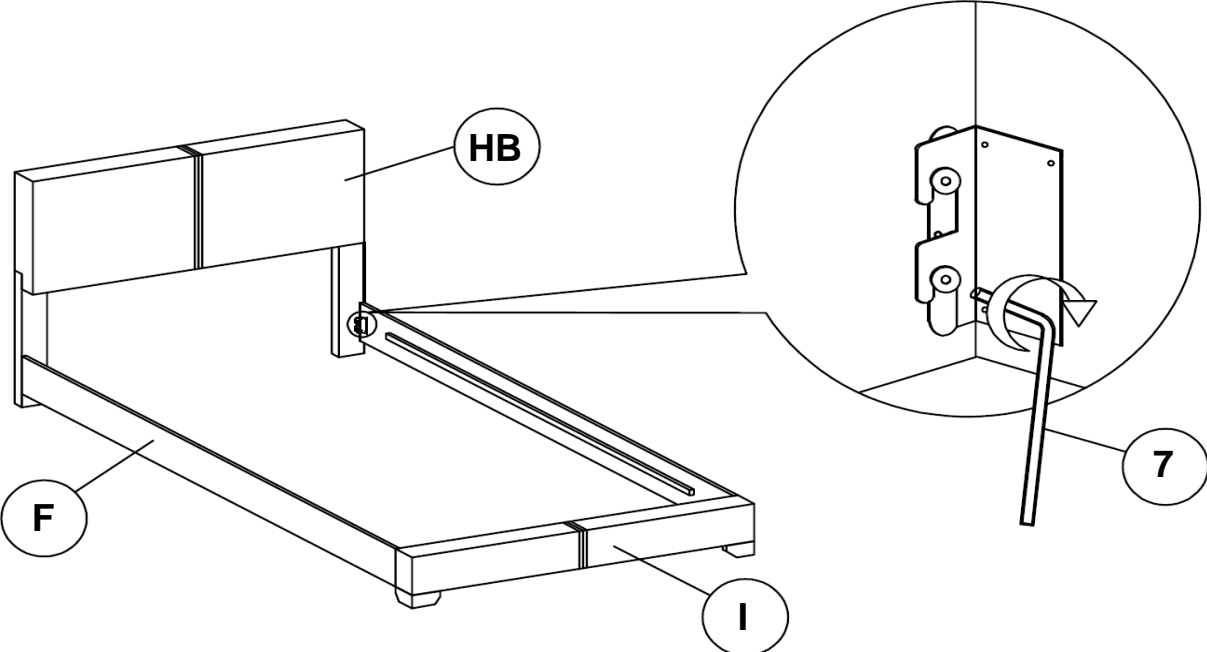


STEP 5

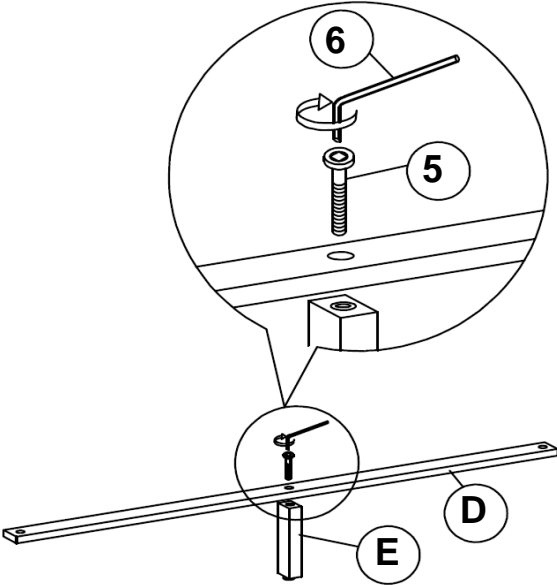


ASSEMBLY INSTRUCTIONS


STEP 6

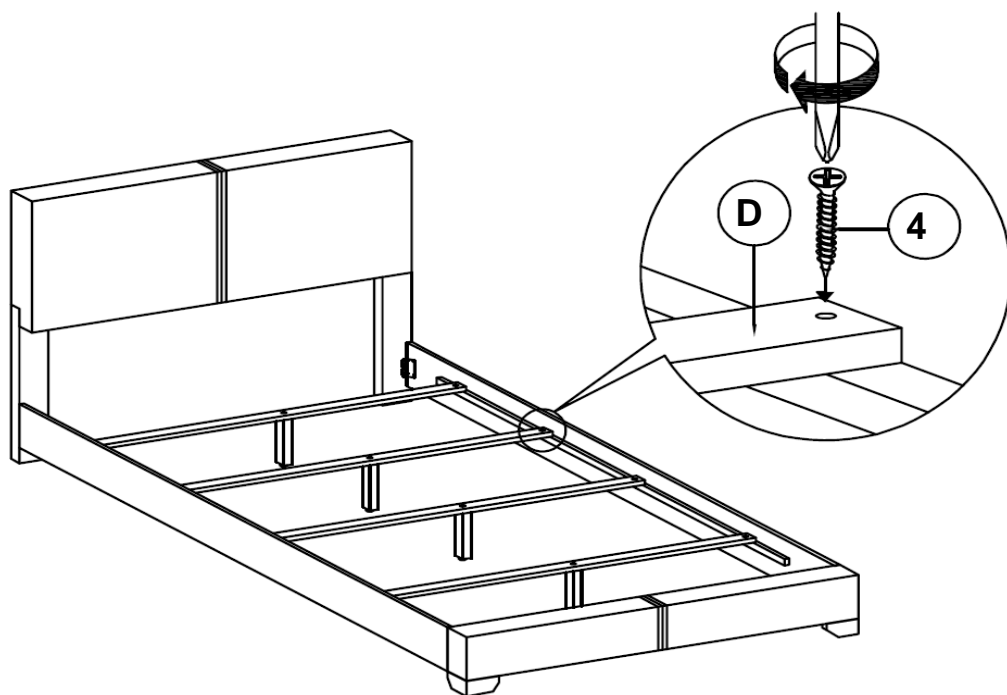

STEP 7 COMPLETE

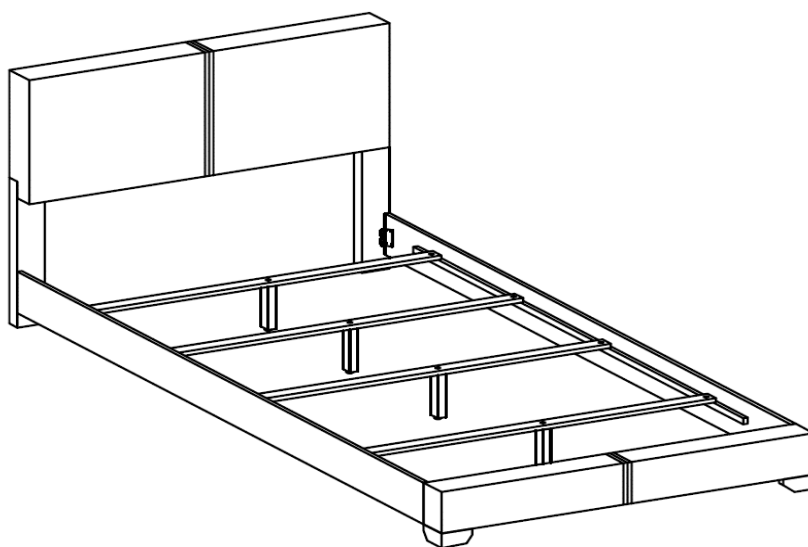

Inner Size: 39.25"W X 76.00"D

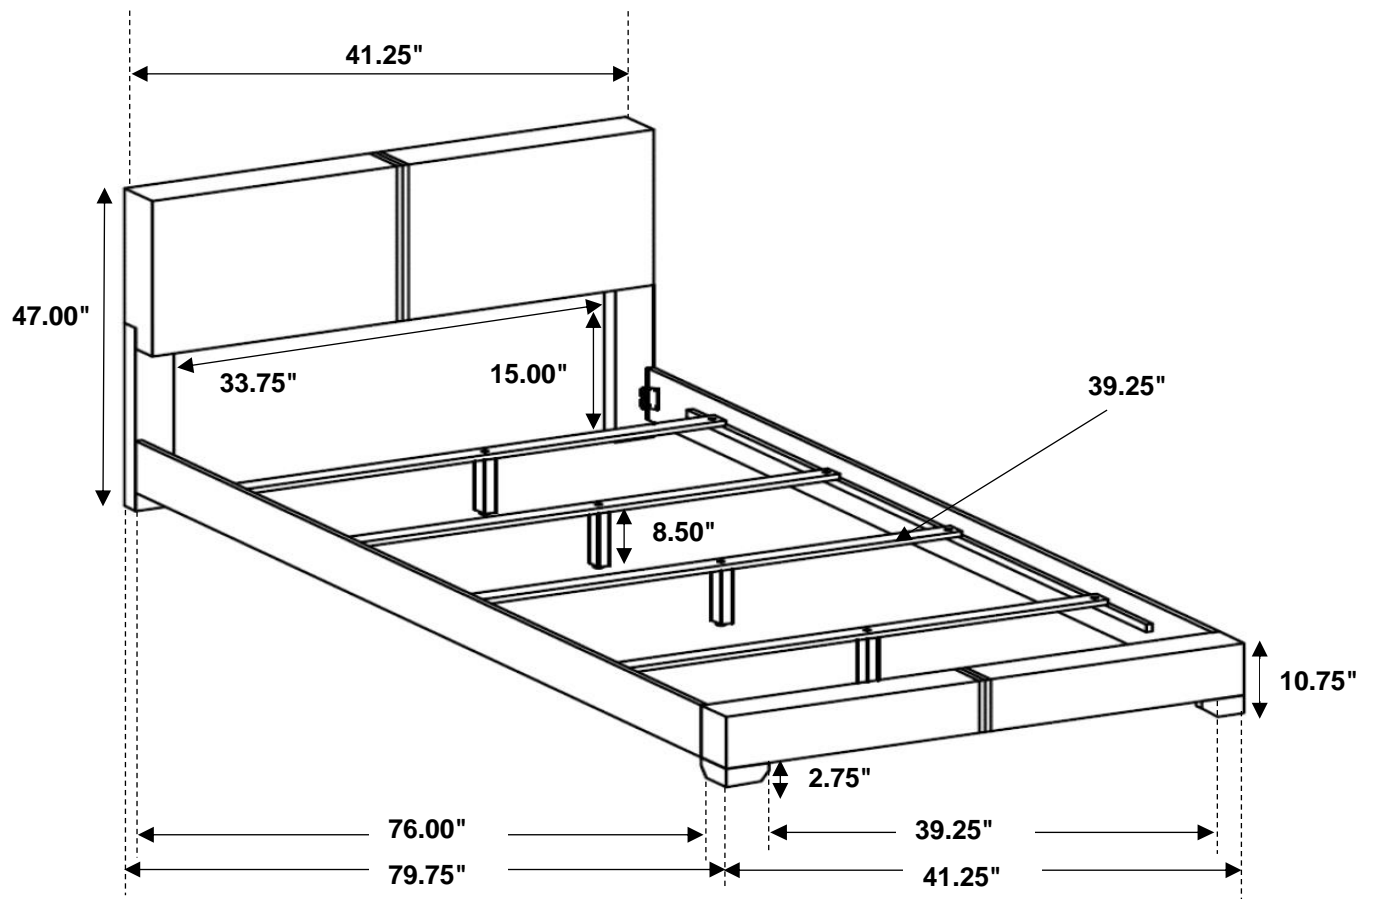

Note: Dimension tolerance $\pm 5\%$