



MODEL : F9624Q / F9625Q

Assembly Instruction


Step 1 : Unzip the black non-woven fabric on the back of headboard and take out all the parts out.

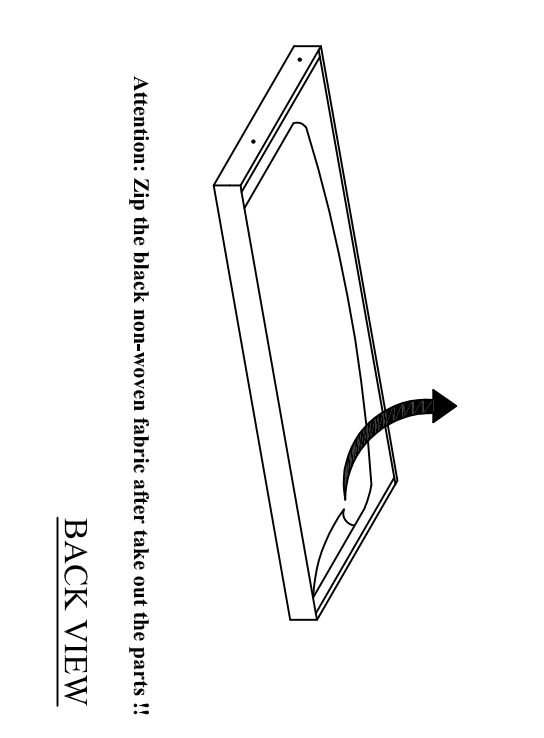


Step 2 : Attach the side wing (D) to the headboard (A). Fix the footboard with legs as shown.

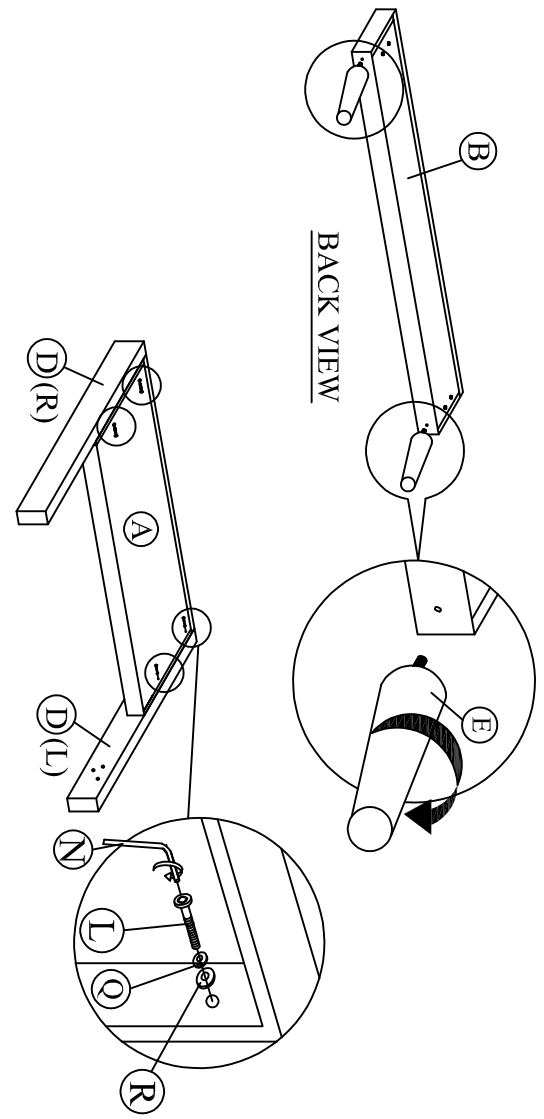


Step 3 : Attach the JCBB Bolt (J) to the headboard bracket and footboard bracket.

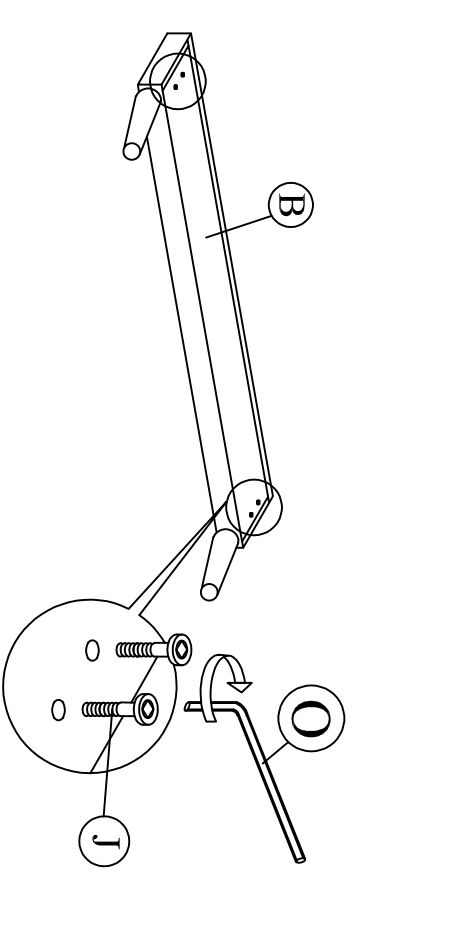


Step 4 : Attach the side rail leg (F) to the side rail (C).

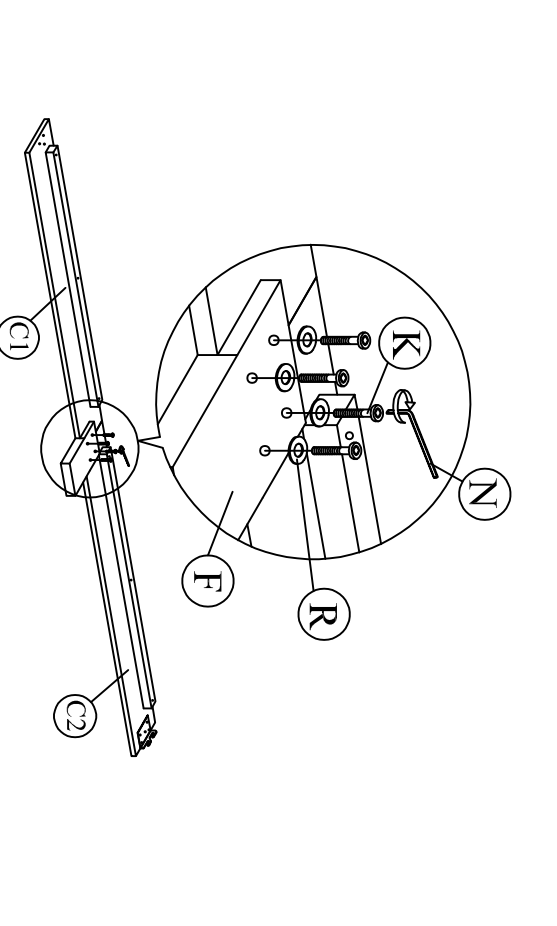

Step 5 : Attach side wing (D) to side rail (C). Attach side rail (C) to footboard (B) by pushing the bracket down to fit it.

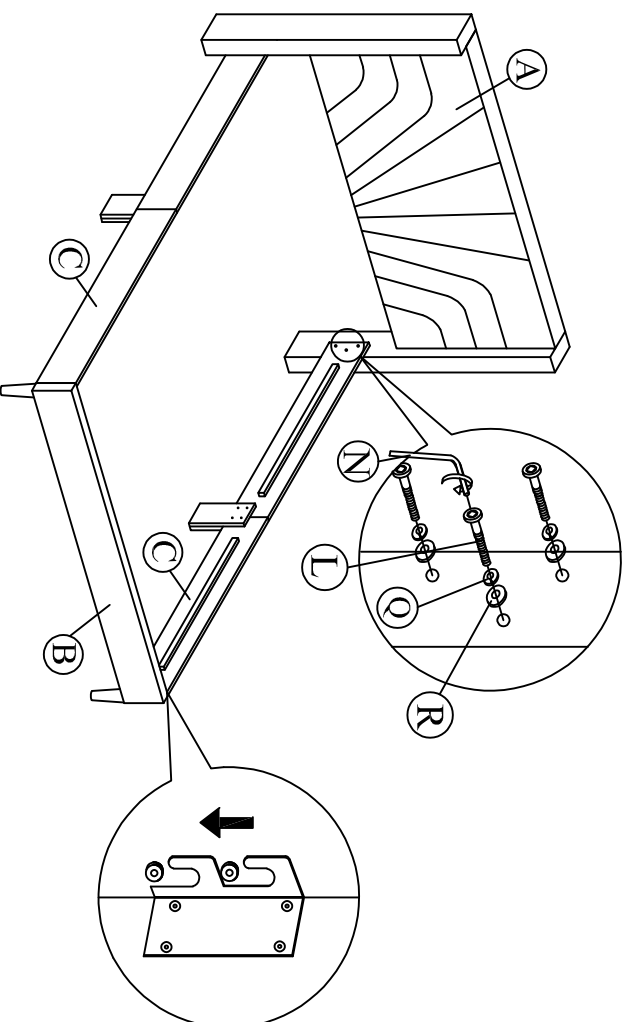

Step 6 : Attach the support legs (I) to the slats (H).

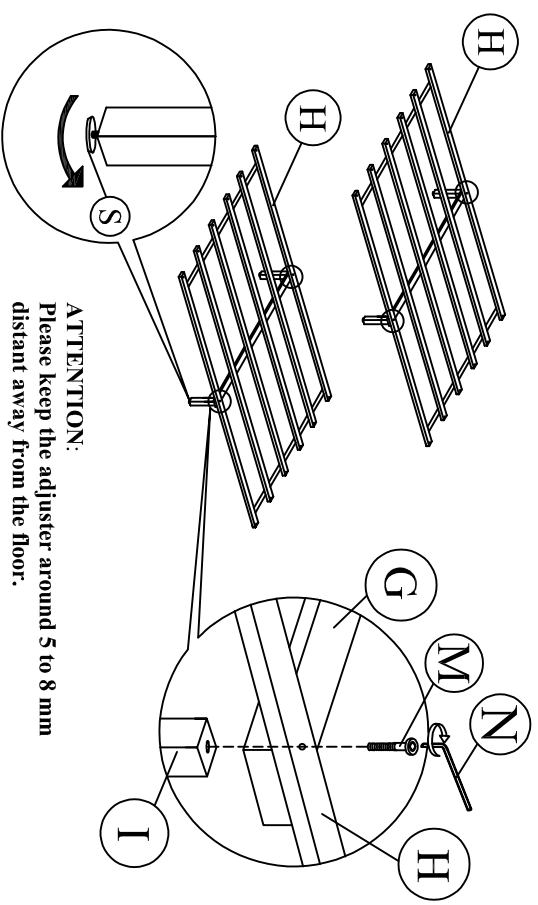

ATTENTION:
Please keep the adjuster around 5 to 8 mm
distant away from the floor.

Step 7 : Tighten the 4 Corner with Allen Key (O). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

