Warranty

Our office chair come with a 1- year warranty from the date of purchase.
In any circumstance that the product arrives damaged or missing parts.
We are more than happy to provide you with replacement part.

Warm Tips

Please read the instructions carefully before assembly and
make sure you have the parts & hardware as identified on the list.

It is highly recommended to assemble the chair on a
soft clean surface to avoid scratches.

Modern Home Office Chair

Model: 7240/7240A




Parts List


❶Backrest




❷ Seat Cushion



❸ Armrest




❹ Gaslift



❺ Base Legs




❻ Base




❼ Castors



❽Mechanism




❾ Connect Bar




❿ Footrest Bar




⓫ Footresr Bar




⓬ Headrest





⓭ Lumbar Cushion




⓮ Footrest Plate




Hardware Kit

Ⓐ1 Small Bolts(M6*10mm)		10
Ⓐ2 Small Bolts(M6*20mm)		4
Ⓐ3 Small Bolts(M6*25mm)		6
Ⓐ4 Big Bolts(M8*20mm)		4
Ⓐ5 Big Bolts(M8*25mm)		4
Ⓐ6 Big Bolts(M8*30mm)		4
Ⓐ7 Big Bolts(M5*10mm)		1
Ⓑ Caps		4
Ⓒ Allen Key		1


Step 13:

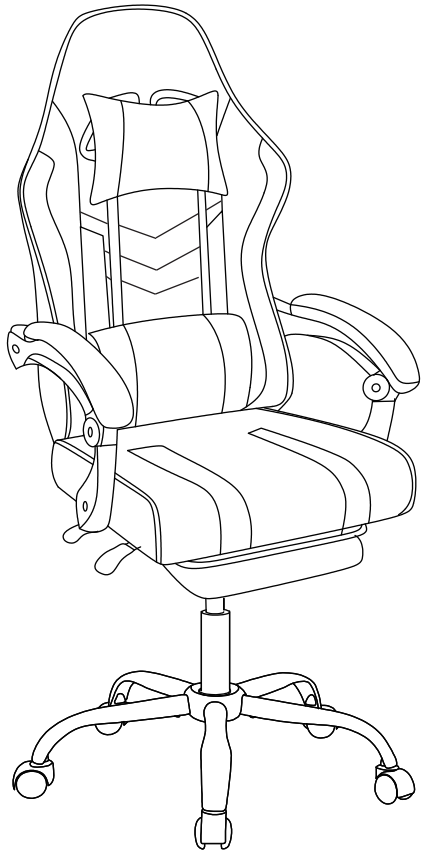


Step 12:

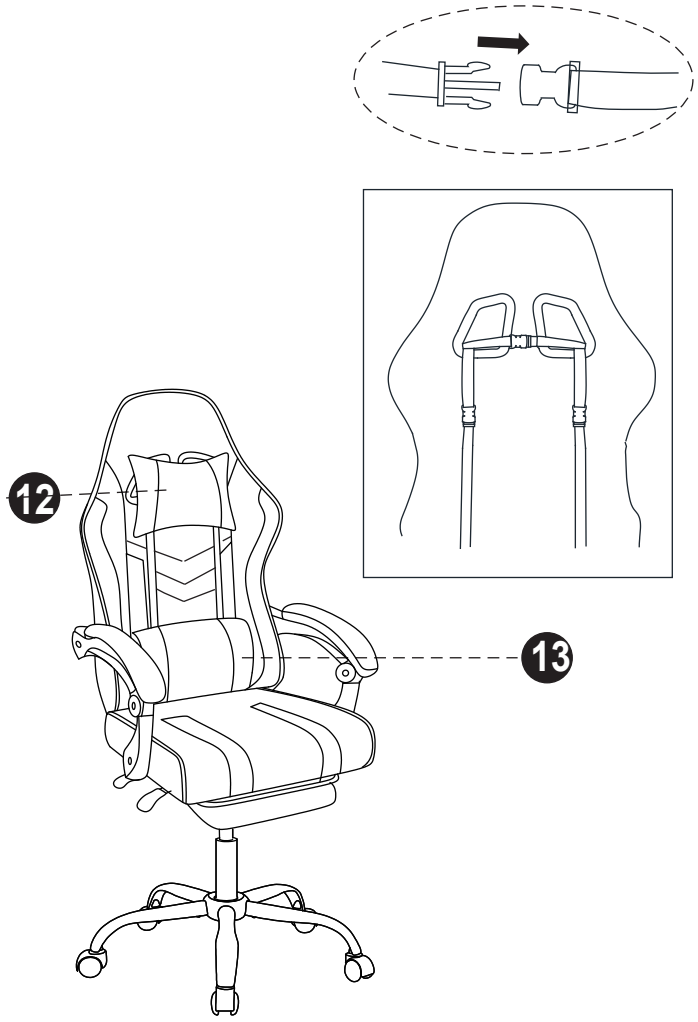


Step 1:

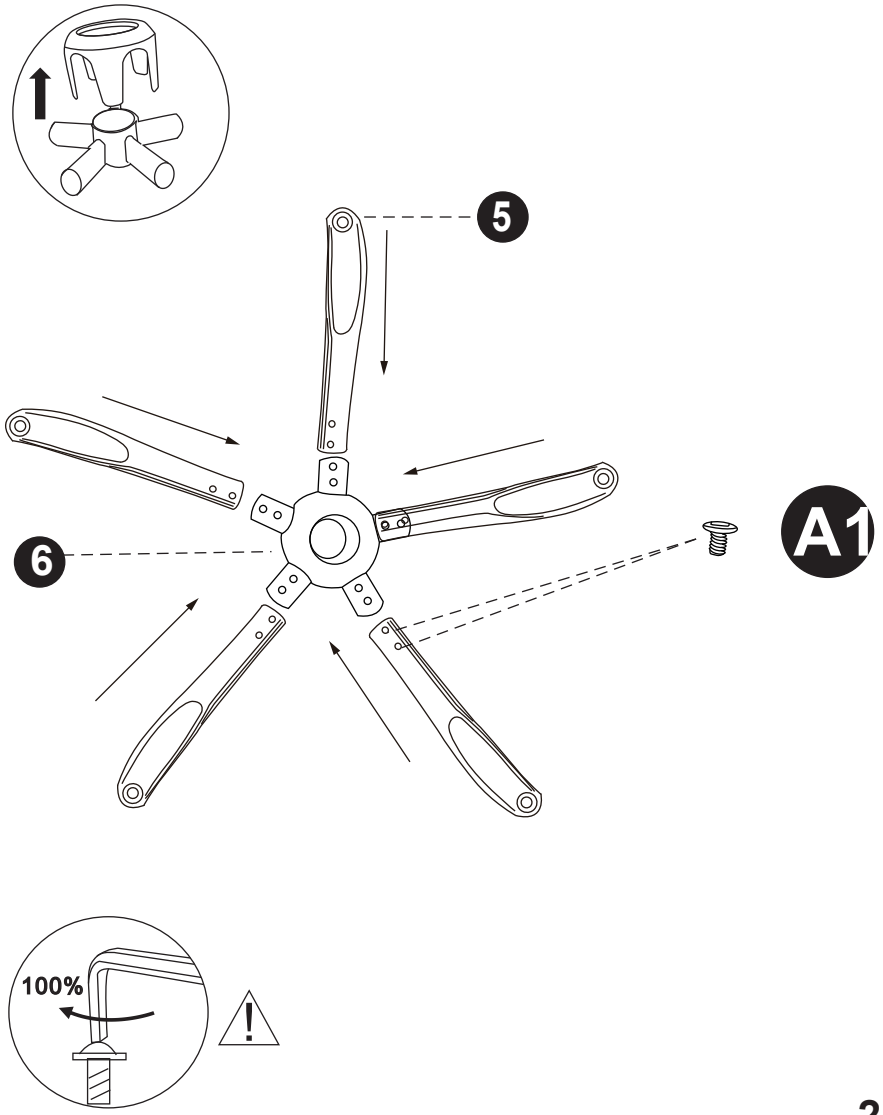


Step 2:

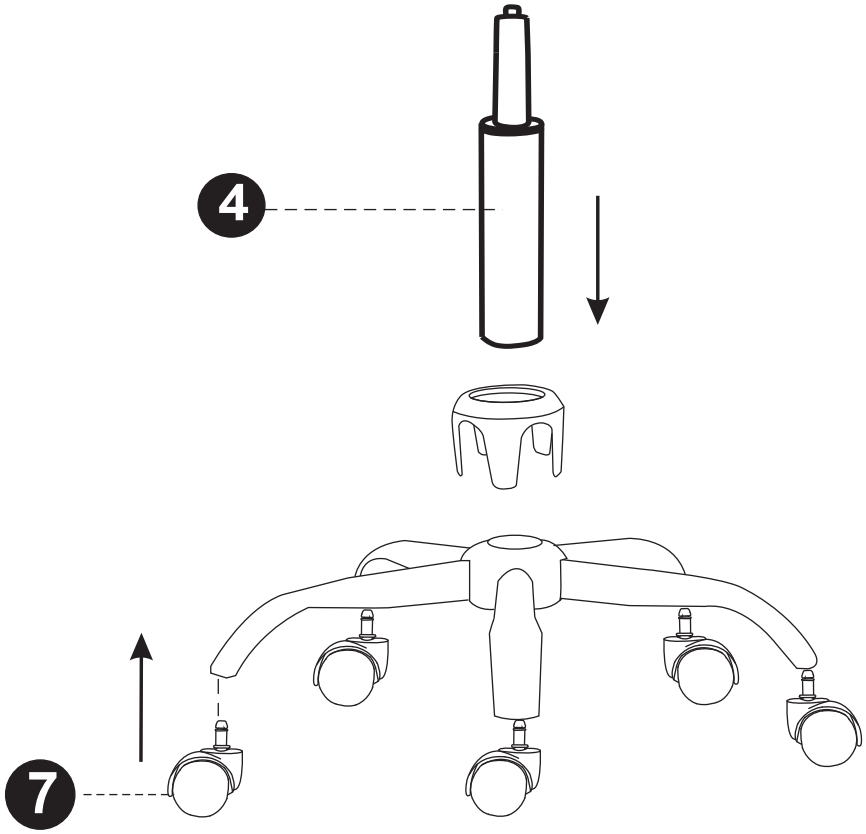



Step11:

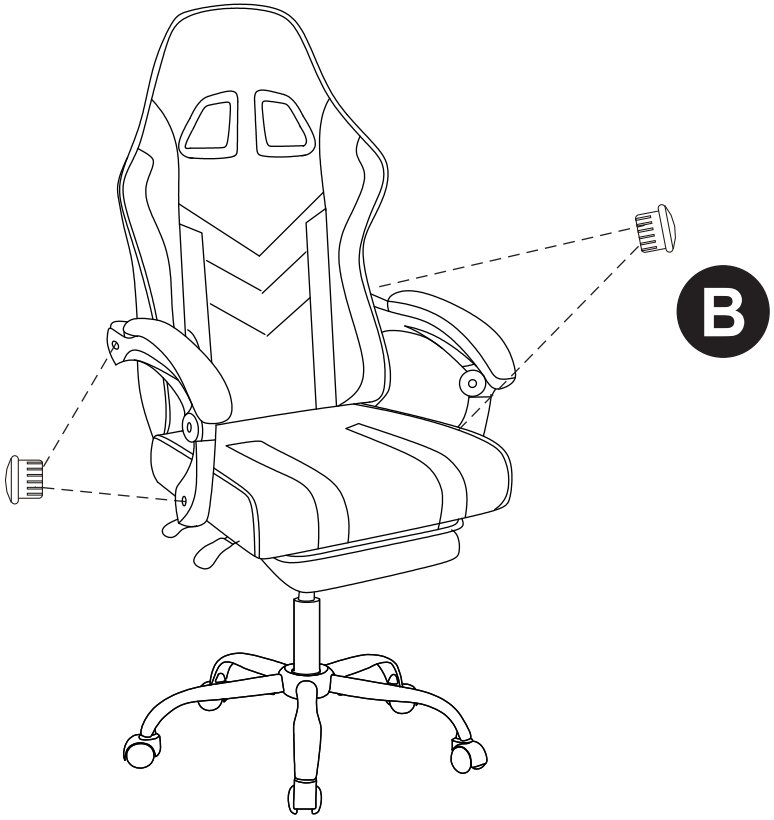

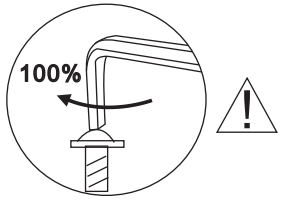



Step 10:

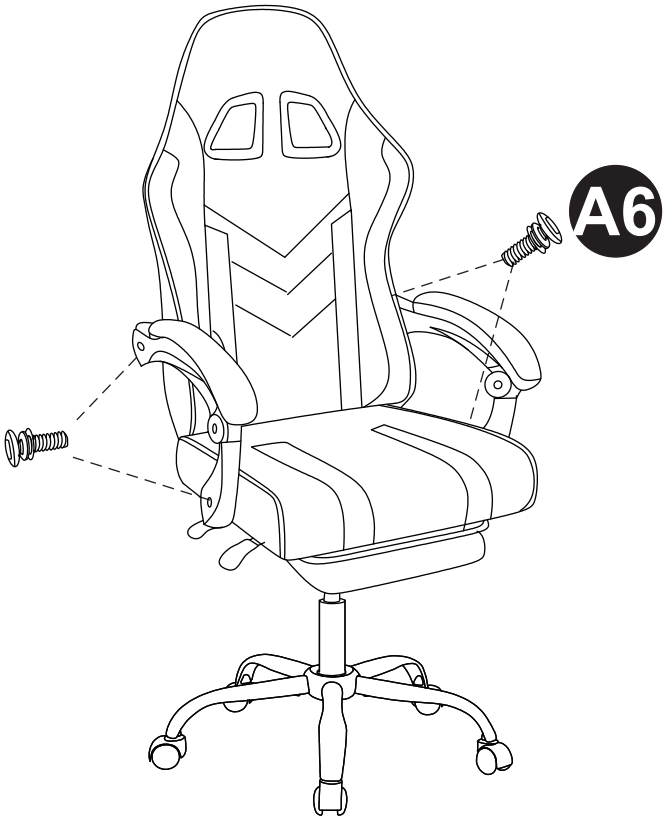

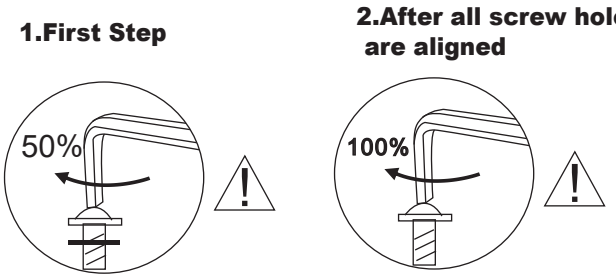



Step 3:

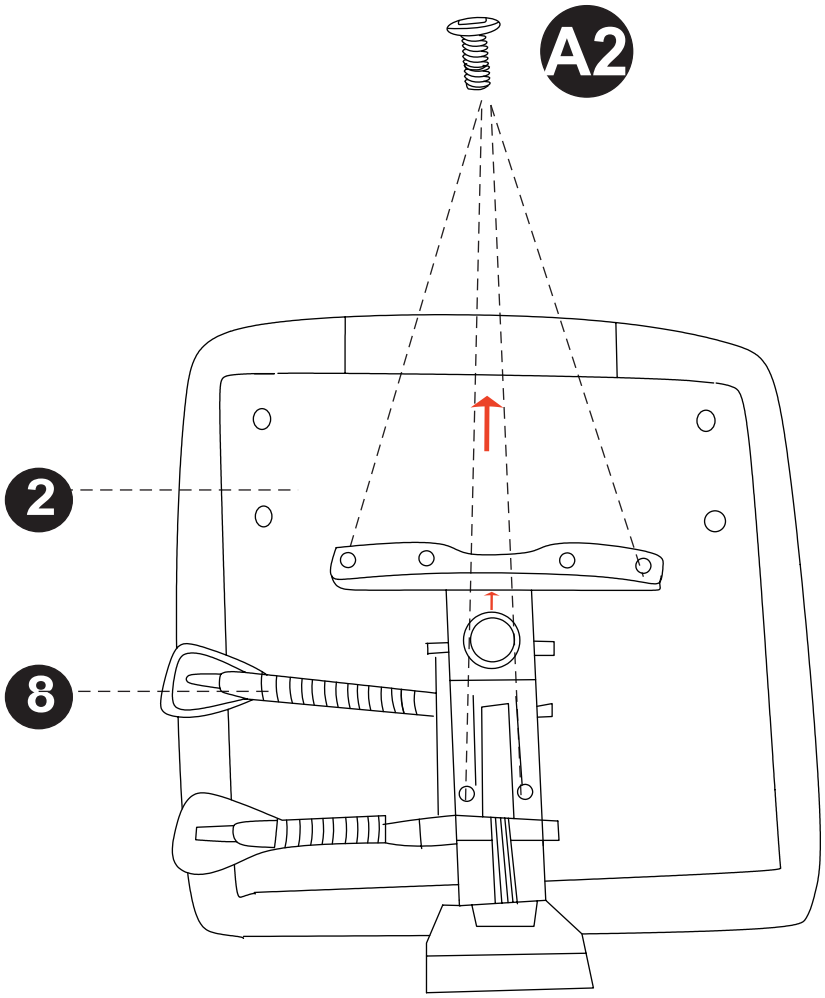

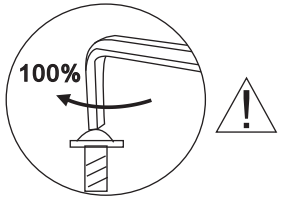



Step 4:

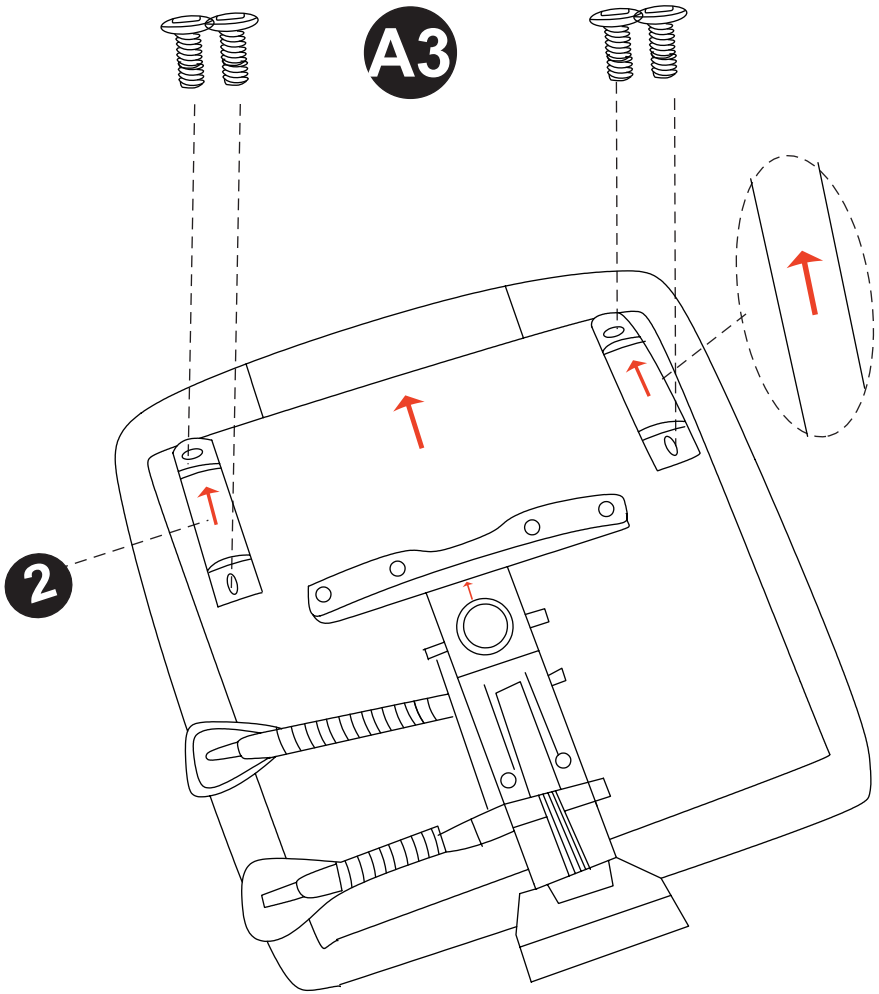

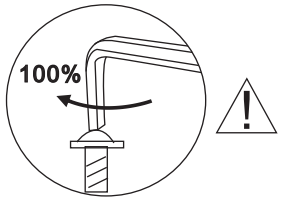



Step 9 :

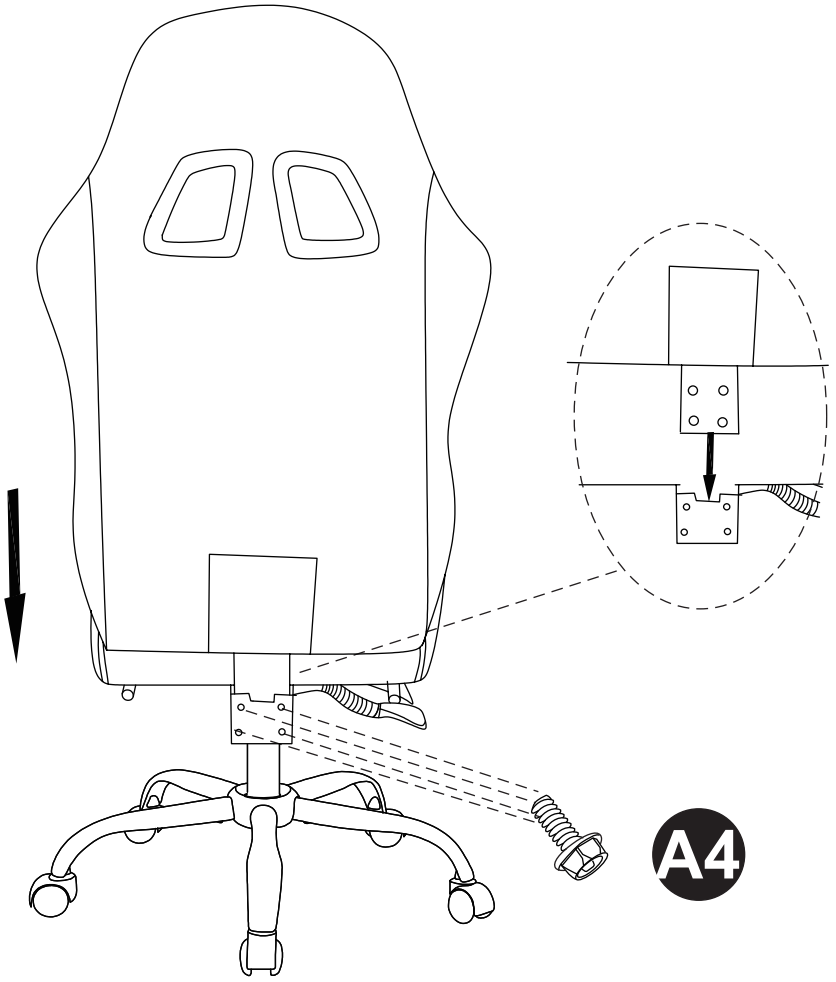

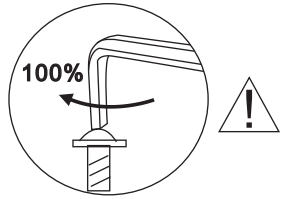



Step 8:

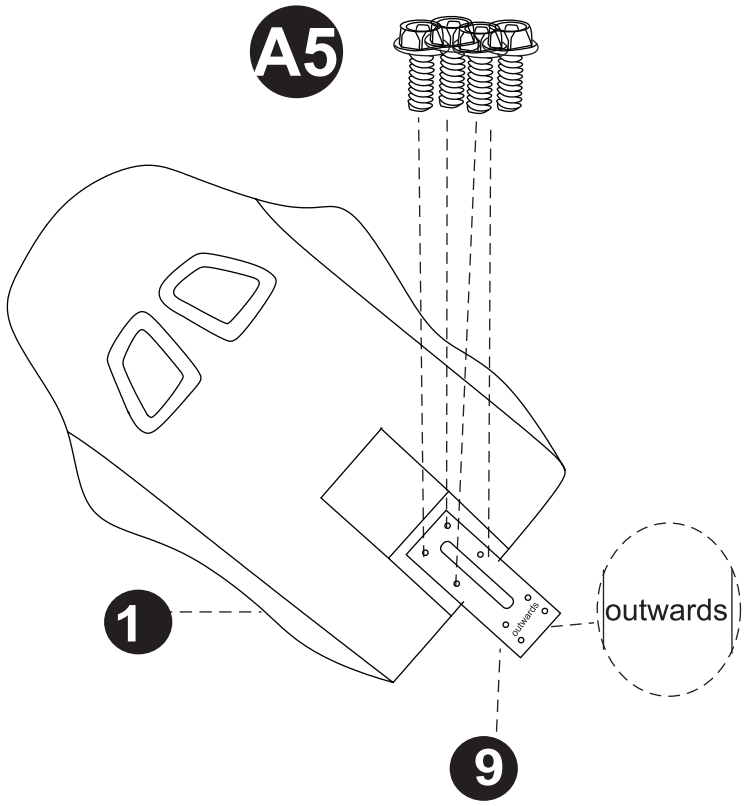

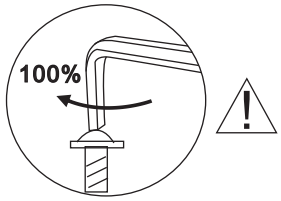



Step 5:

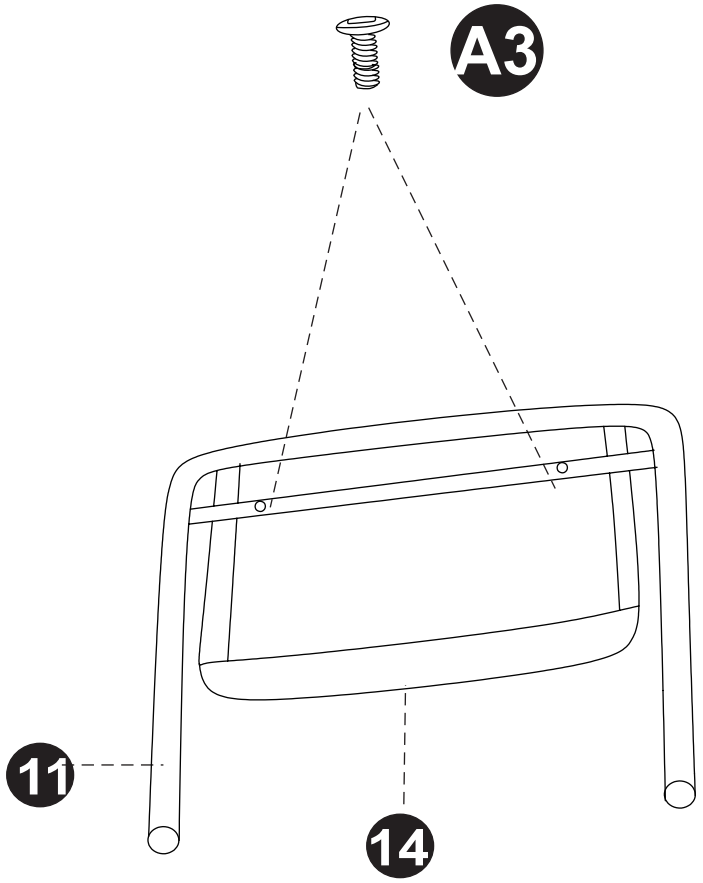


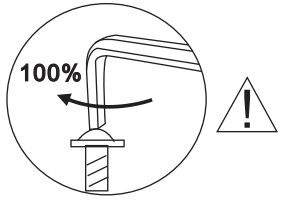

Step 6:

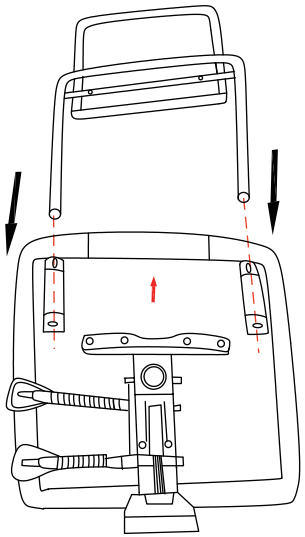

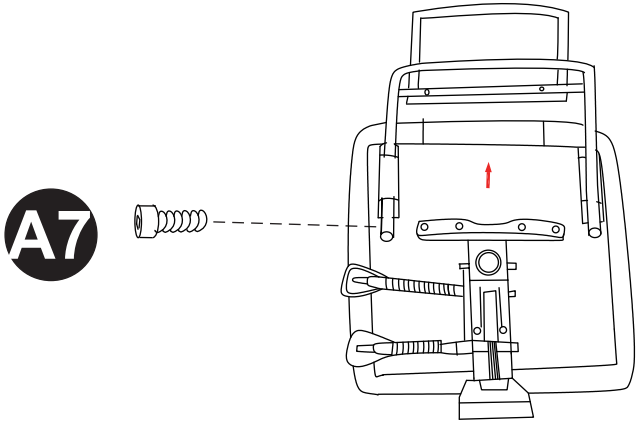

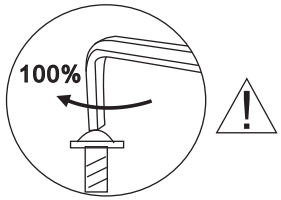

Step 7:

