



#	Description / La description / Descripción	x
A1	Top Panel	1
A2、 3	Middle Panels	1
A3	Bottom Panel	1
B1	Top Rail	2
B2	Middle Rail	2
B3	Bottom Rail	2
C1	Panel Joiners	3
D1	Wood Screws	20

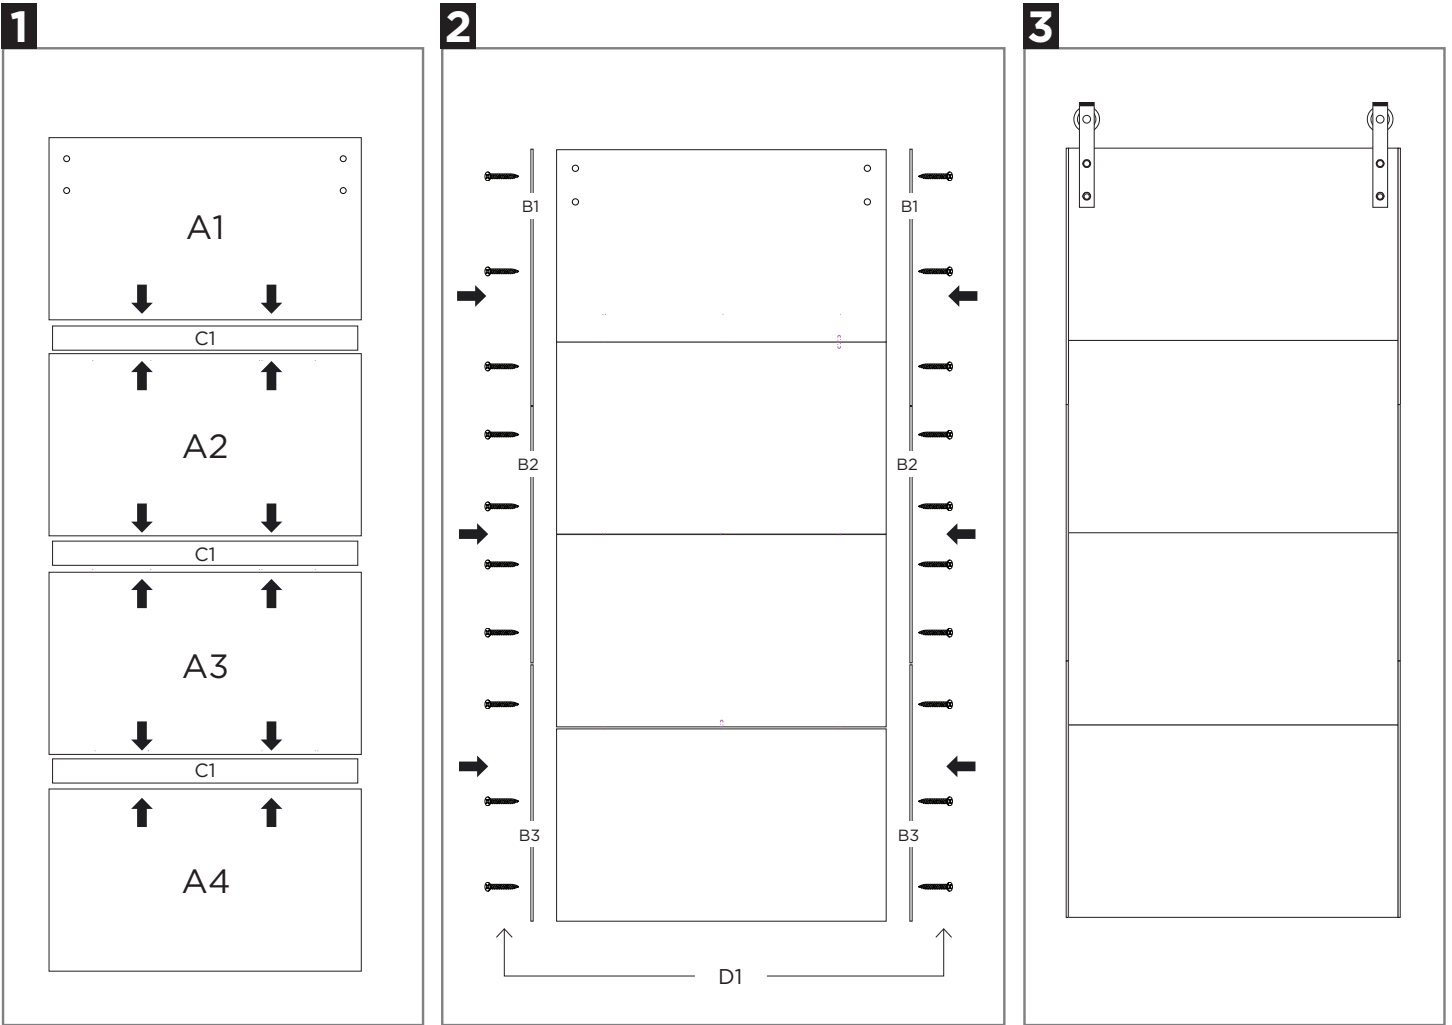

Do not overtighten

## Installation (continued)

### 3 Attaching the handle




**NOTE:** These instructions will focus on a right opening door with handle (K) on the left side of door. For left opening door flip around the door so “A” sticker (A) is on the right side of the door and install handle (K) on the opposite side of the “A” sticker (A).

- ☐ Measure up from the bottom of the door to the bottom hole of the handle (K) 43 inch (1092 mm). Handle position should be 2 inches from the edge of the door. Mark both handle (K) hole locations with a pencil.
- ☐ Drill a 1 inch deep pilot hole using the 5/32 inch drill bit. (Do not drill through door).
- ☐ Using a #2 Phillips screwdriver, tighten screws (BB) and secure the handle (K) in place.



**NOTE:** Due to the construction of a hollow core door, the handle (K) can only go in one place. Look for the (A) sticker (A) for location of the handle (K).

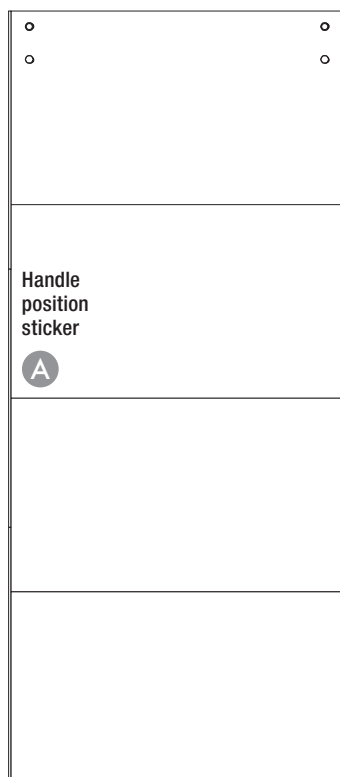

2 inches from  
edge of door  
Mark holes

43 inch  
(1092 mm)

