




Parts List


A x 6	B x 20	C x 6	D x 1	E x 4	F x 8	E x 2
						
M6	M6	M6	M6			

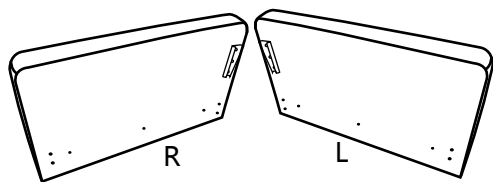


① Left and right armrests




② Front and back seat frame panels

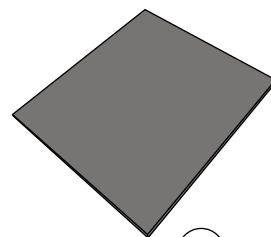


③ Board

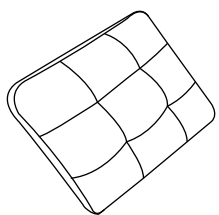


④ Cushion bag

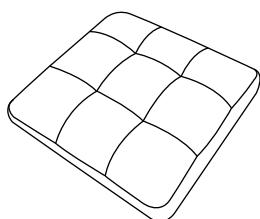


⑤ Cushion bag

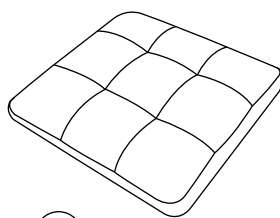


⑥ Padded

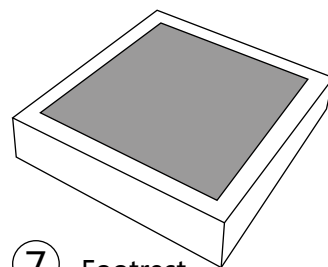

⑦ Footrest

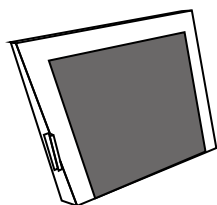

⑧ Backrest frame






⑨ Strip wood square *2




⑩ Velcro *6

Installation method


Step 1: As shown in the figure, the metal pins and the bar wooden square are fixed to the corresponding position of the handrail with a screw.

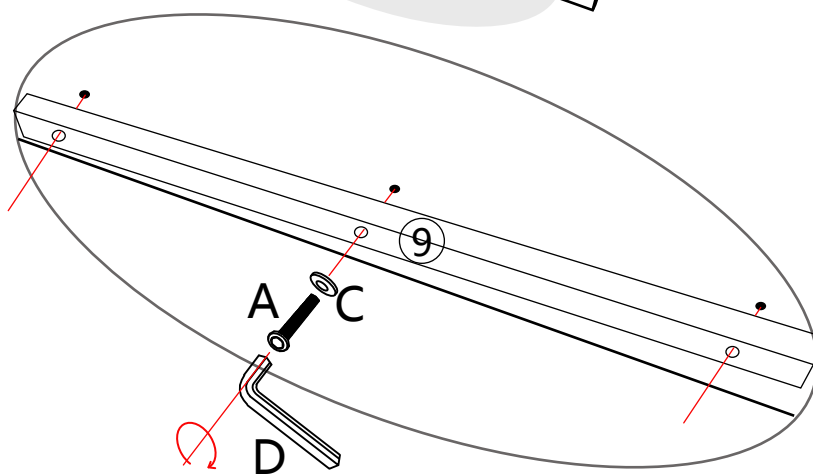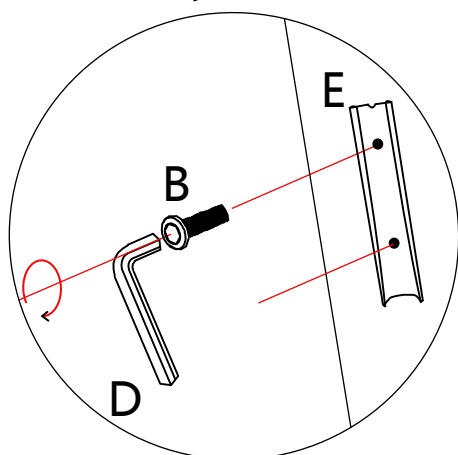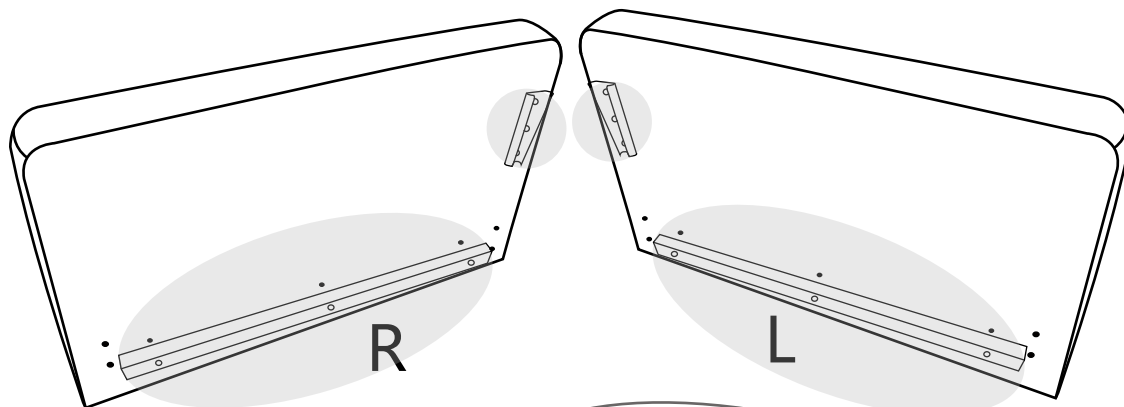


Step 2: The left and right handrails and the front and rear panels are assembled as shown, the connection is used to connect the piece and screw, and use a wrench to lock it fixed

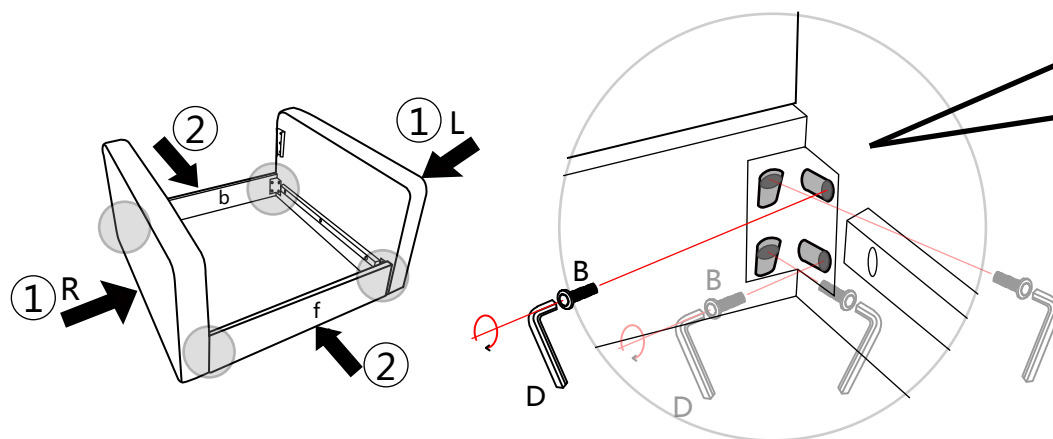


! Note : The direction of the holes on both sides of the connection iron is divided into "horizontal" and "vertical" holes, and the "horizontal" holes should be aligned with the handrail during installation, and the "vertical" holes should be aligned with the front or rear panel holes. **All four connecting iron pieces should follow this rule.**

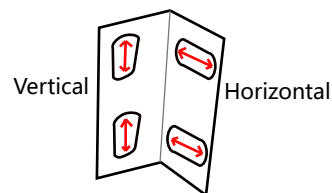

Step 3: After the seat frame is assembled, put it down, align the 4 feet with the corresponding holes, and rotate clockwise to tighten. Then put the plate flat from top to bottom on the bar wooden square. Then the backrest will be locked down in the way shown in the picture, aligned with the pin position, Then stick two Velcro on the board.

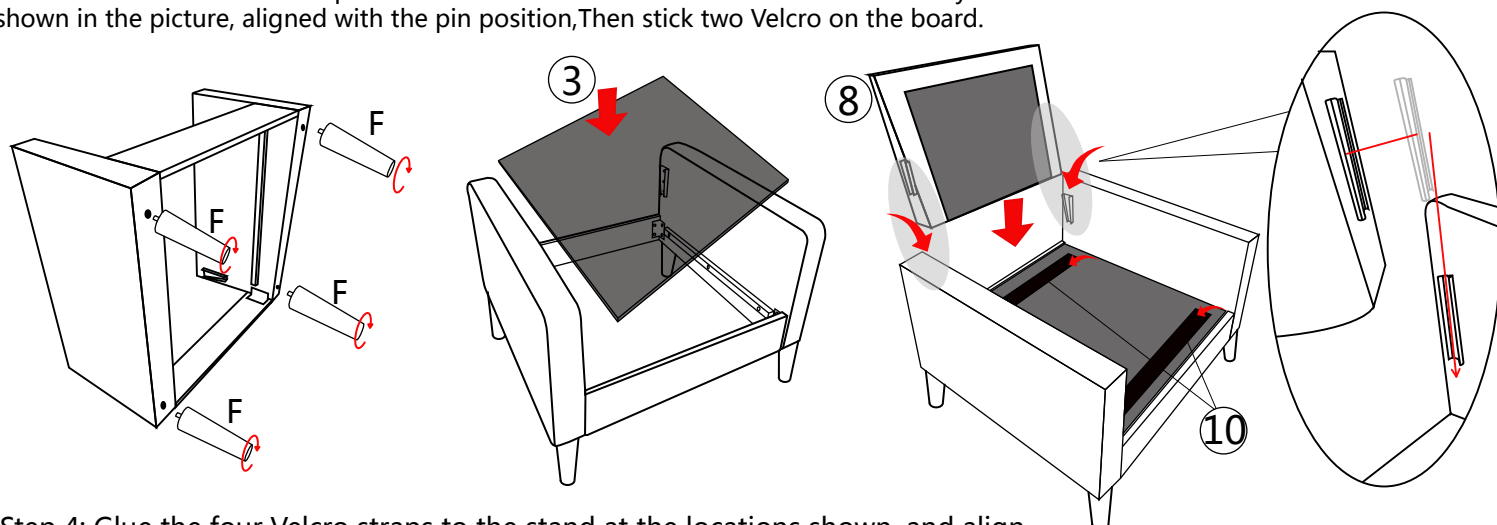

Step 4: Glue the four Velcro straps to the stand at the locations shown, and align the four feet with the four holes at the bottom, rotating clockwise to tighten. Finally, place the leaning bag and cushion bag and foot bag flat in the corresponding positions respectively.

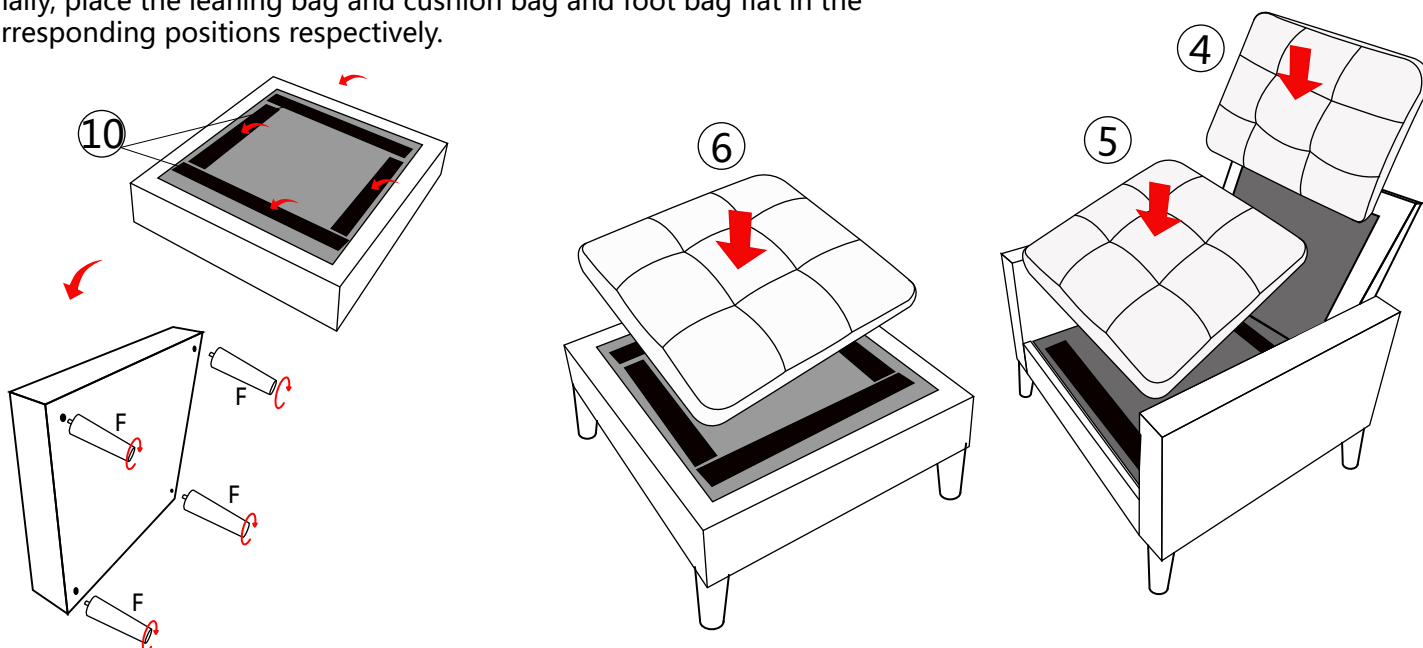

* Note: The soft pack/upholstery is vacuum packed, open the packing tape and tap it gently with your hand a few times to let it unfold evenly, it will return to its full state after about 24 hours.

